



REAR WIPER MOTOR

COMPONENTS

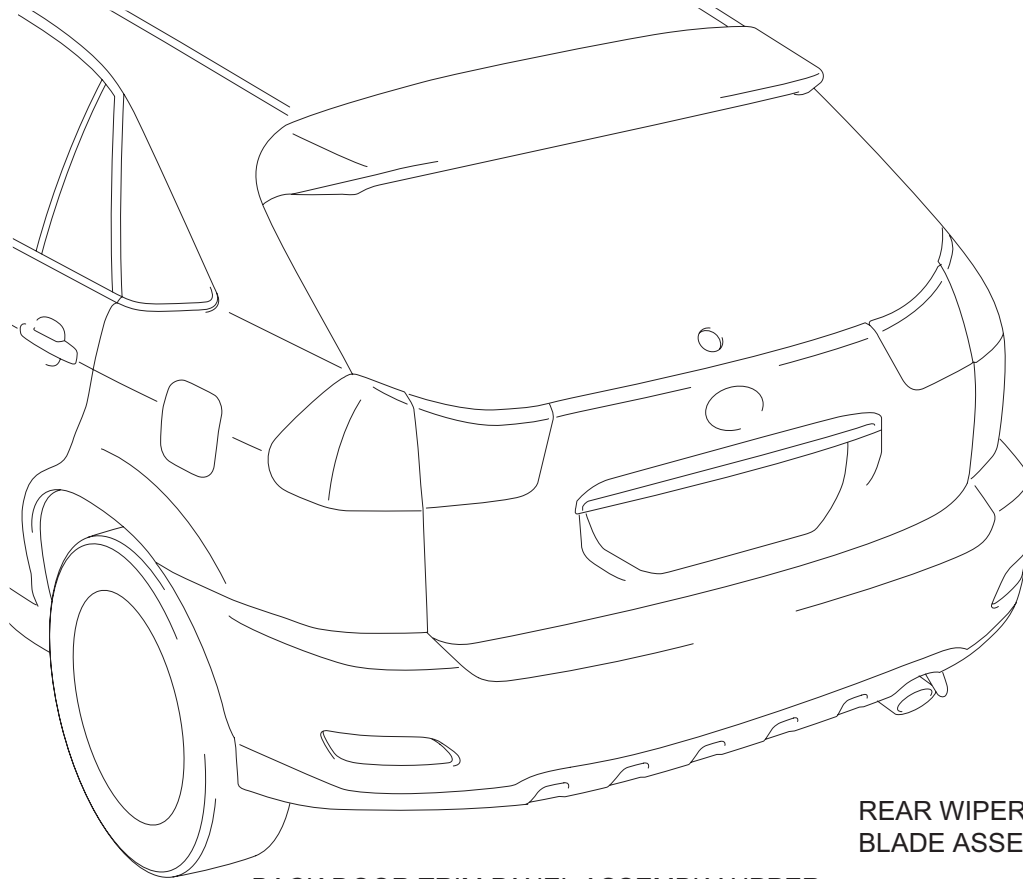

BACK DOOR TRIM PANEL ASSEMBLY UPPER



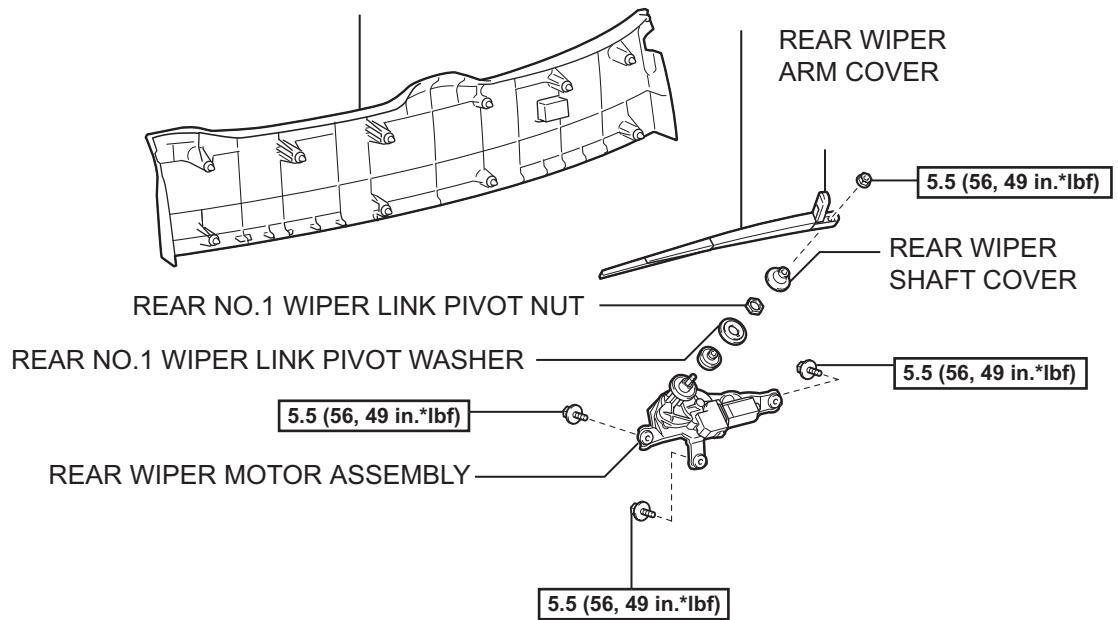


N*m (kgf*cm, ft.*lbf) : Specified torque

WW

REMOVAL

1. **REMOVE REAR WIPER ARM COVER**
 - (a) Remove rear wiper arm cover.
2. **REMOVE REAR WIPER ARM AND BLADE ASSEMBLY**
 - (a) Remove the nut, rear wiper arm and blade assembly.
3. **REMOVE REAR WIPER SHAFT COVER**
 - (a) Remove the rear wiper shaft cover.

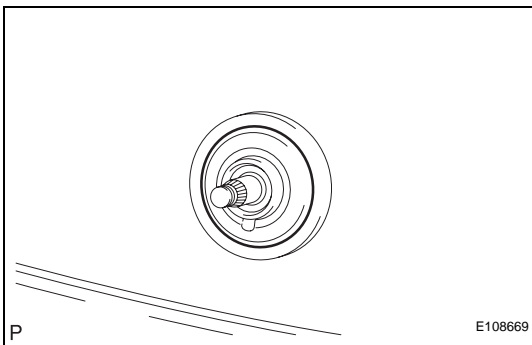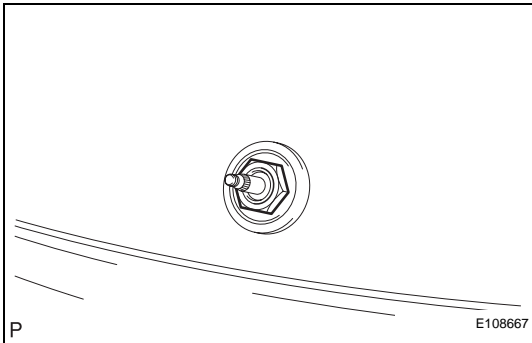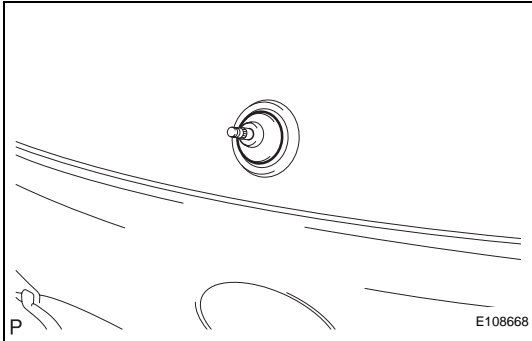

4. **REMOVE REAR NO.1 WIPER LINK PIVOT NUT**
 - (a) Using the socket wrench 27 mm (1.06 in.), remove the rear No. 1 wiper link pivot nut.

5. **REMOVE REAR NO.1 WIPER LINK PIVOT WASHER**
 - (a) Remove the rear No. 1 wiper link pivot washer.
6. **REMOVE BACK DOOR TRIM PANEL ASSEMBLY UPPER (See page ED-124)**
7. **REMOVE REAR WIPER MOTOR ASSEMBLY**
 - (a) Disconnect the connector.

- (b) Remove the 3 bolts and the rear wiper motor assembly.

