



REAR WIPER RUBBER

COMPONENTS

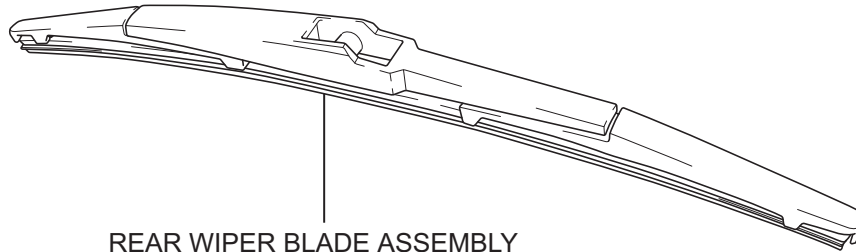

REAR WIPER BLADE ASSEMBLY

REAR WIPER RUBBER

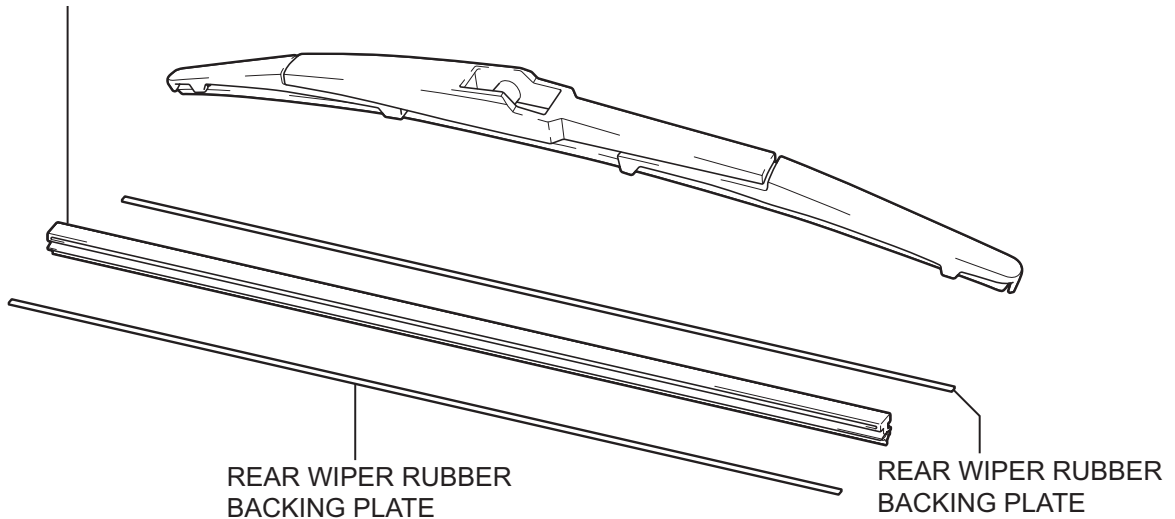


REAR WIPER RUBBER
BACKING PLATE

REAR WIPER RUBBER
BACKING PLATE

P

E110466E01

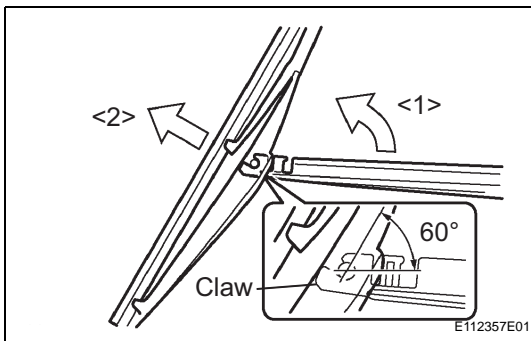

E112357E01

REMOVAL

1. REMOVE REAR WIPER BLADE ASSEMBLY

- (a) Raise the rear wiper blade to the position as shown in the illustration where the meshing of the claw disengages with a clicking sound.

NOTICE:

Be careful not to break the claw.

WW

- (b) Pull the rear wiper blade straight away from the wiper arm toward the left side of the vehicle.

NOTICE:

Do not bend the rear wiper arm with the rear wiper blade removed, as the arm tip could damage the windshield surface.

2. REMOVE REAR WIPER RUBBER


- (a) Pull the end of the wiper rubber protruding from the blade stopper as shown in the illustration.

NOTICE:

Do not pull out the wiper rubber forcibly. Otherwise, the backing plates will be deformed or blade claw will be damaged.

HINT:

Pushing the rubber from the ends towards the middle will allow it to be removed more easily.

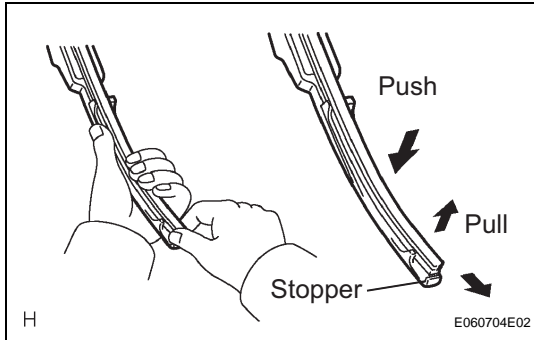


INSTALLATION

1. INSTALL REAR WIPER RUBBER

- (a) Install the rear wiper rubber to the 2 rear wiper rubber backing plates.


NOTICE:

Install the backing plates in the correct direction.

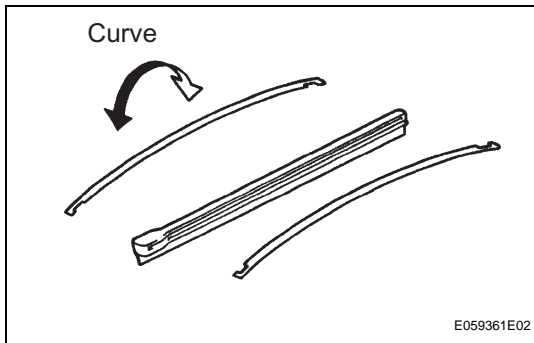

2. INSTALL REAR WIPER BLADE ASSEMBLY

- (a) Insert the rear wiper rubber from the claw position of the middle of the rear wiper blade to the end.

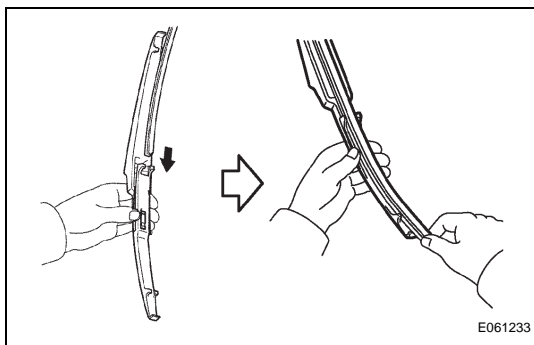

- (b) After passing the rear wiper rubber through the rear end side claw, allow it to stick out from the rear end stopper and slide it through the front tip side claw.

