

REAR WASHER MOTOR

ON-VEHICLE INSPECTION

1. INSPECT REAR WASHER MOTOR

(a) Operation Check

- (1) Fill the washer jar with the washer fluid.
- (2) Connect the positive battery (+) lead to terminal 1 of the washer motor and pump assembly, and the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.

