


WASHER NOZZLE

ON-VEHICLE INSPECTION

1. INSPECT WASHER NOZZLE SUB-ASSEMBLY

- (a) With the engine running, check the position that the washer fluid hits the windshield.

Front:

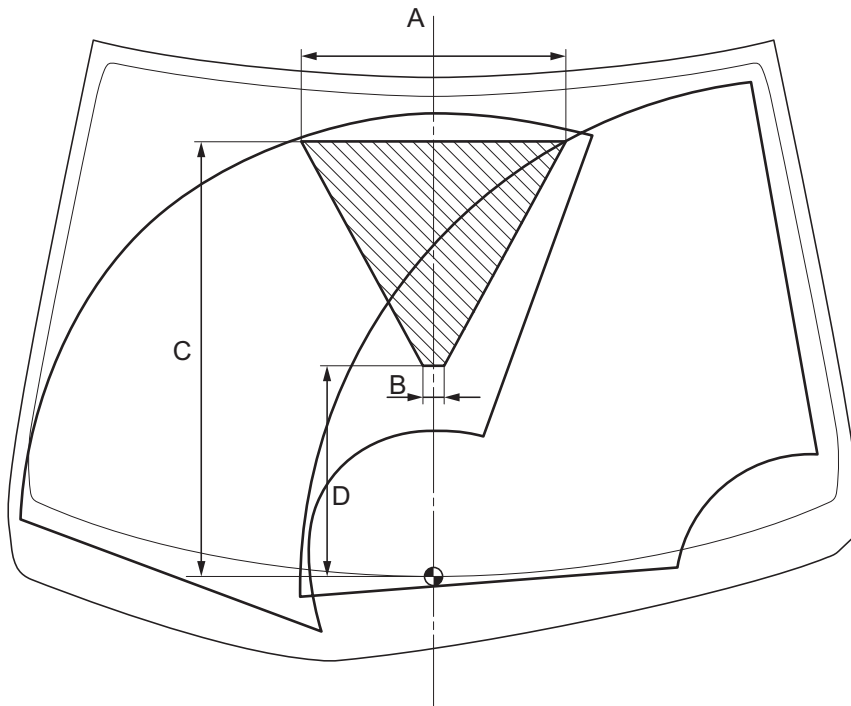

A:453 mm (17.83 in.)

B:36 mm (1.42 in.)

C:747 mm (29.41 in.)

D:360 mm (14.17 in.)

P

E112358E01


Standard:

Washer fluid hits the windshield in the areas shown in the illustration.


WW

- (b) With the engine running, check the position that the washer fluid hits the back door glass.

Rear:

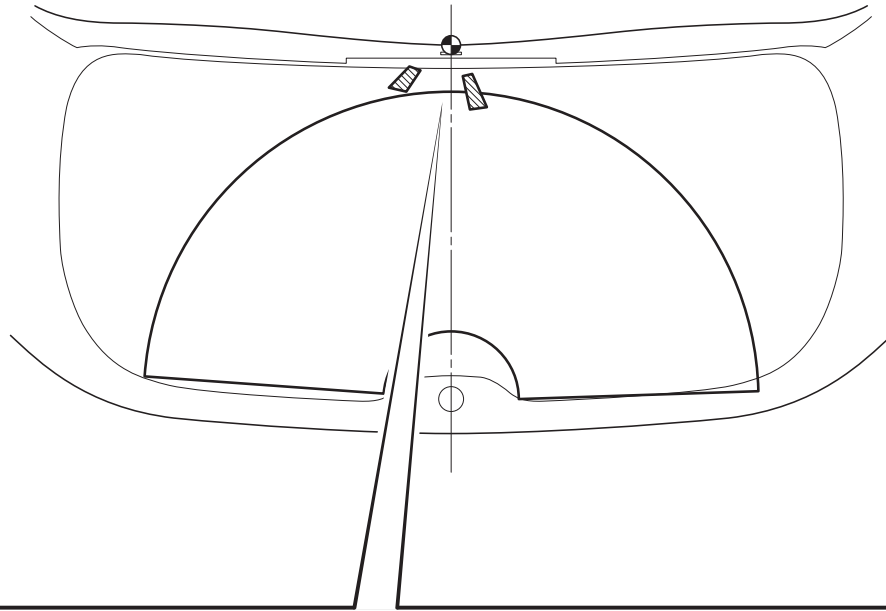

A:58 mm (2.28 in.)	E:35 mm (1.38 in.)	I:11 mm (0.43 in.)	M:65 mm (2.56 in.)
B:31 mm (1.22 in.)	F:30 mm (1.18 in.)	J:9.7 mm (0.38 in.)	N:28 mm (1.10 in.)
C:42 mm (1.65 in.)	G:1.2 mm (0.05 in.)	K:59 mm (2.32 in.)	O:89 mm (3.50 in.)
D:17 mm (0.67 in.)	H:2.3 mm (0.09 in.)	L:61 mm (2.40 in.)	P:52 mm (2.05 in.)

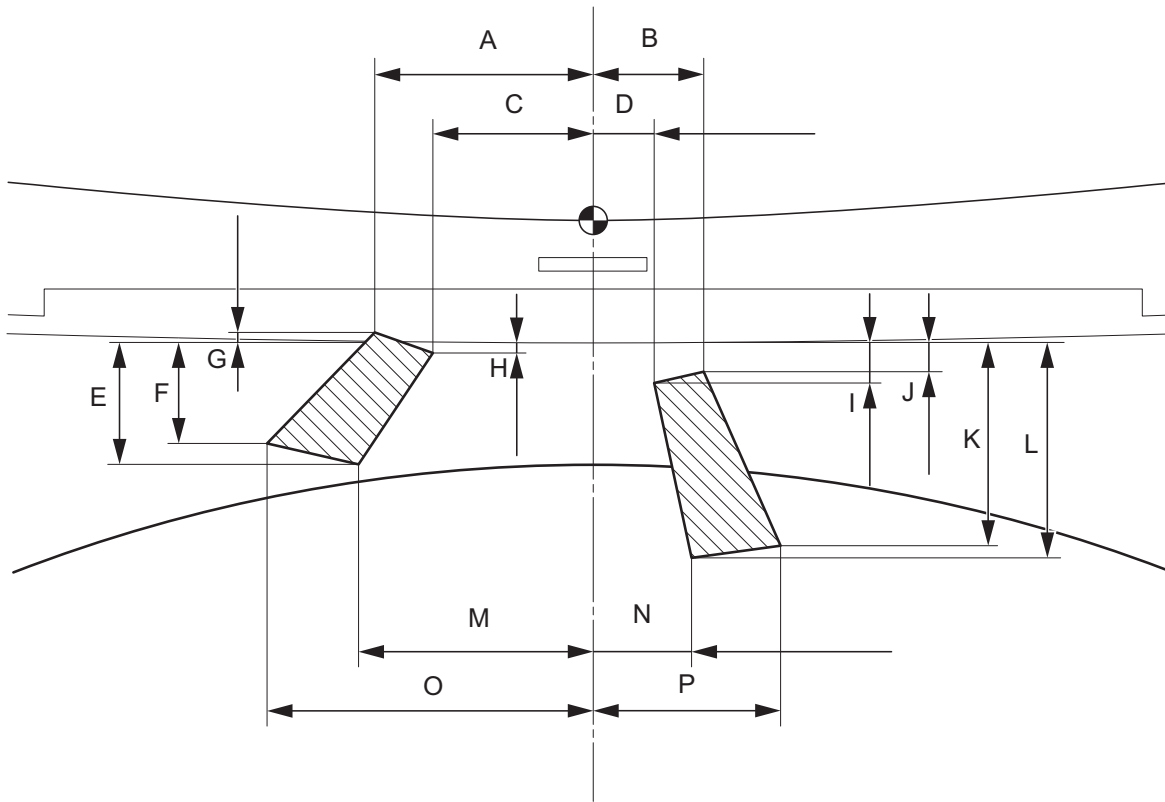

Standard:

Washer fluid hits the back door glass in the areas shown in the illustration.