


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
(See page [RS-1](#))
2. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page [IR-6](#))
3. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH**
(See page [IP-13](#))
4. **REMOVE NO.2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY** (See page [IP-13](#))
5. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-13](#))
6. **REMOVE WIPER ECU**
 - (a) Disconnect the connector.
 - (b) Remove the screw and the wiper ECU.

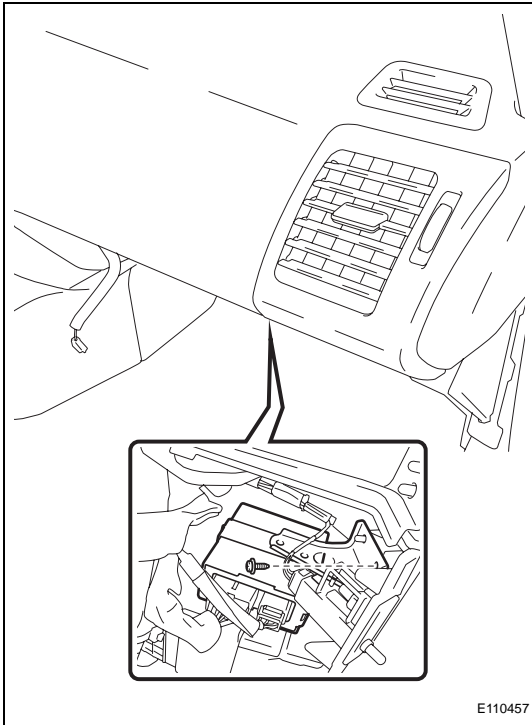

INSTALLATION

1. INSTALL WIPER ECU
2. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY
(See page [IP-27](#))
3. INSTALL NO.2 INSTRUMENT PANEL UNDER COVER
SUB-ASSEMBLY (See page [IP-28](#))
4. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See
page [IP-28](#))
5. INSTALL FRONT DOOR SCUFF PLATE RH
6. CONNECT CABLE TO BATTERY NEGATIVE
TERMINAL
7. PERFORM INITIALIZATION