



HEADLIGHT CLEANER SWITCH

ON-VEHICLE INSPECTION

1. INSPECT HEADLIGHT CLEANER SWITCH ASSEMBLY

- (a) Measure the resistance according to the value(s) in the table below.

Resistance

Tester connection	Condition	Specified condition
3 (B) - 4 (L)	OFF	10 kΩ or higher
3 (B) - 4 (L)	ON	Below 1 Ω
1 (ILL-) - 2 (ILL+)	Illumination circuit	Below 1 Ω

- (b) Inspect illumination operation.
 - (1) Connect the positive (+) lead from the battery to the terminal 2 and negative (-) lead to the terminal 2, then check that the illumination comes on.