



HEADLIGHT CLEANER MOTOR

INSPECTION

1. INSPECT HEADLIGHT CLEANER MOTOR AND PUMP ASSEMBLY

- (a) Operation Check
 - (1) Fill the washer jar with the washer fluid.
 - (2) Connect the positive battery (+) lead to terminal 1 of the headlight cleaner motor and pump assembly, and the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.