
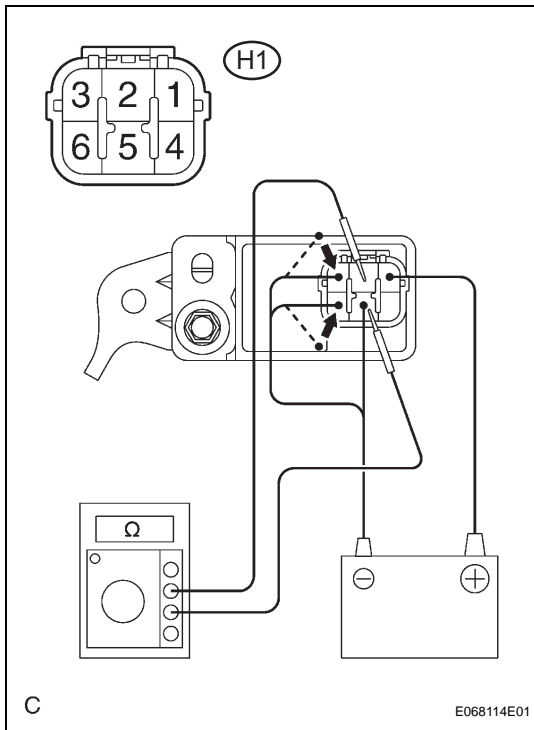


HEADLIGHT CLEANER CONTROL RELAY

ON-VEHICLE INSPECTION

1. INSPECT HEADLIGHT CLEANER CONTROL RELAY

- (a) Inspect headlight cleaner control relay operation.
 - (1) Check that no continuity exists between the terminal 2 and the terminal 5.
 - (2) Connect the positive (+) lead of the battery to the terminal 1, and the negative (-) lead of the battery to the terminal 5.
 - (3) Connect the negative (-) lead of the battery to the terminal 3 and the terminal 4, and check that continuity exists between the terminal 2 and the terminal 5 for 0.8 to 0.9 seconds, then no continuity exists.
 - (4) Disconnect the positive (+) lead of the battery from the terminal 1, and connect the positive (+) lead of the battery to the terminal 1 again.
 - (5) Connect the negative (-) lead of the battery to the terminal 3 and the terminal 6, and check that continuity exists between the terminal 2 and the terminal 5 for 0.8 to 0.9 seconds, then no continuity exists.

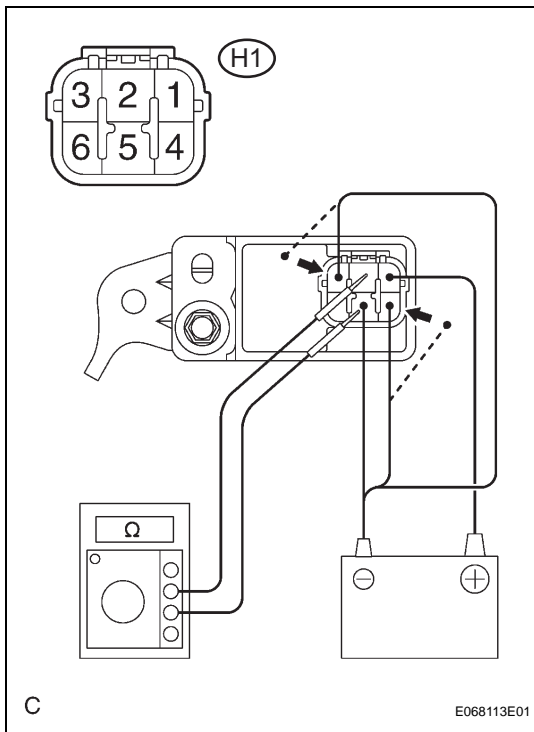

WW