



RAIN SENSOR

COMPONENTS

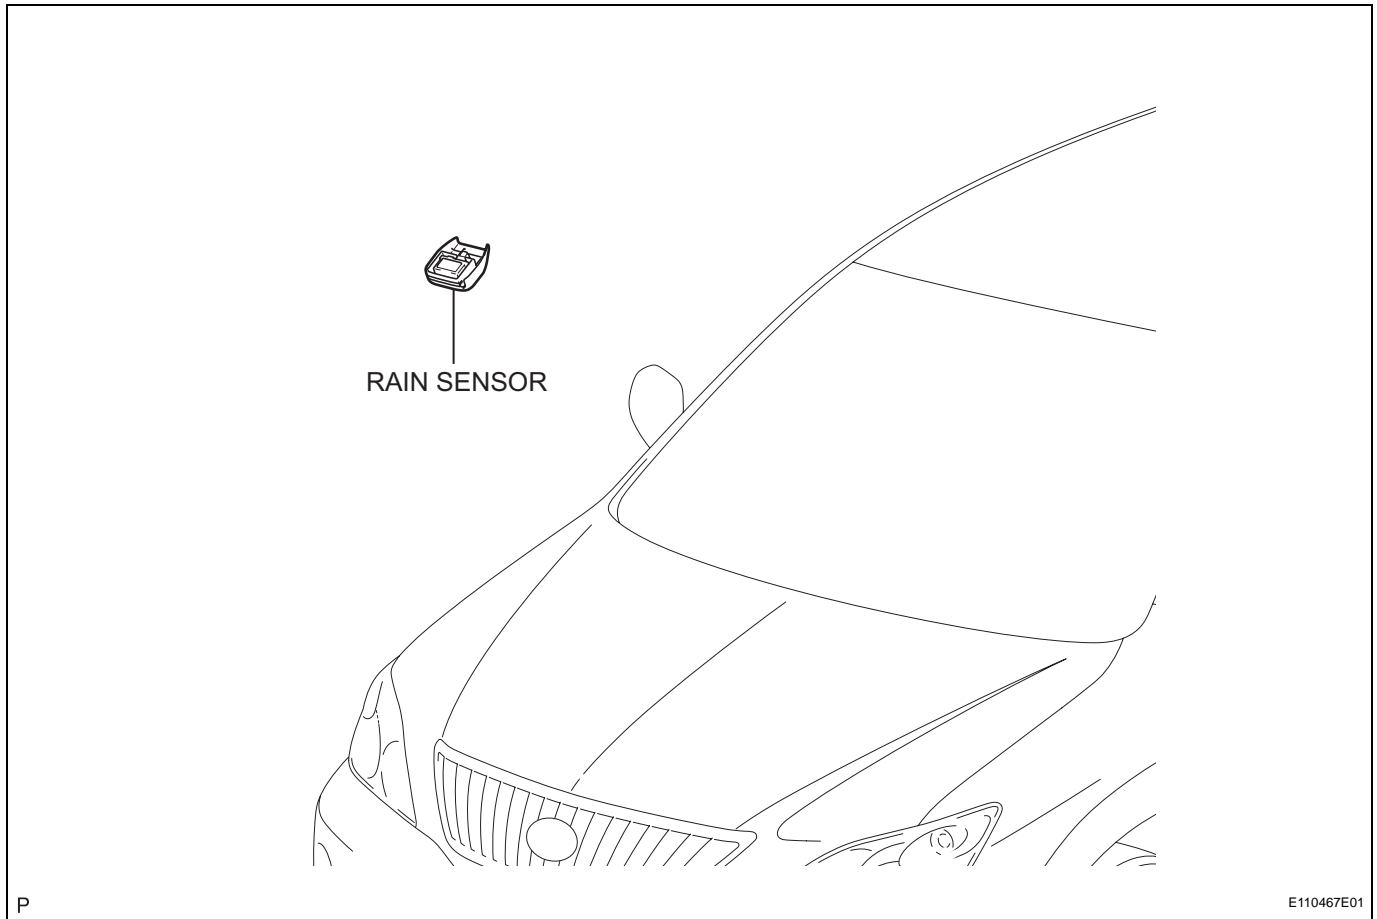

WW

Connector Front View:

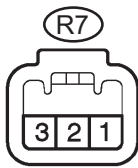

E068147E02


ON-VEHICLE INSPECTION

1. INSPECT RAIN SENSOR

- (a) Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester connection	Condition	Specified voltage
1 - 3	Ignition switch is ON	10 to 14 V
2 - 3	Ignition switch is ON	Signal waveform

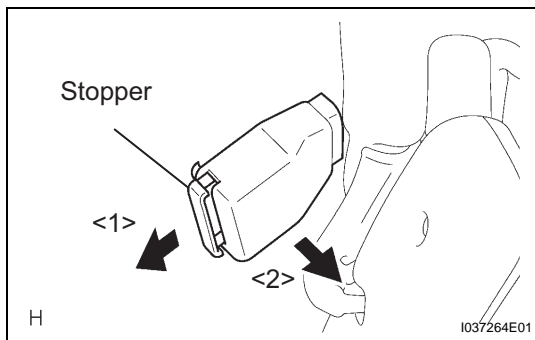

REMOVAL

1. REMOVE RAIN SENSOR

- (a) Release the stopper by pulling it down, and remove the rain sensor.
- (b) Disconnect the connector.

INSTALLATION

1. INSTALL RAIN SENSOR

- (a) Connect the connector.
- (b) Install the rain sensor.

NOTICE:

- **If there is any residue left from the silicon sheet on the windshield, remove it.**
- **Clean the dirt on the glass with a cloth etc.**
- **When installing a new rain sensor, peel the release paper off from the silicon sheet first.**
- **Be careful not to leave any air bubbles in the rain sensor when installing it.**