
SYSTEM WIRING DIAGRAMS

2.0L, A/C Circuit (1 of 2)

1995 Mazda 626

cdr@wp.pl

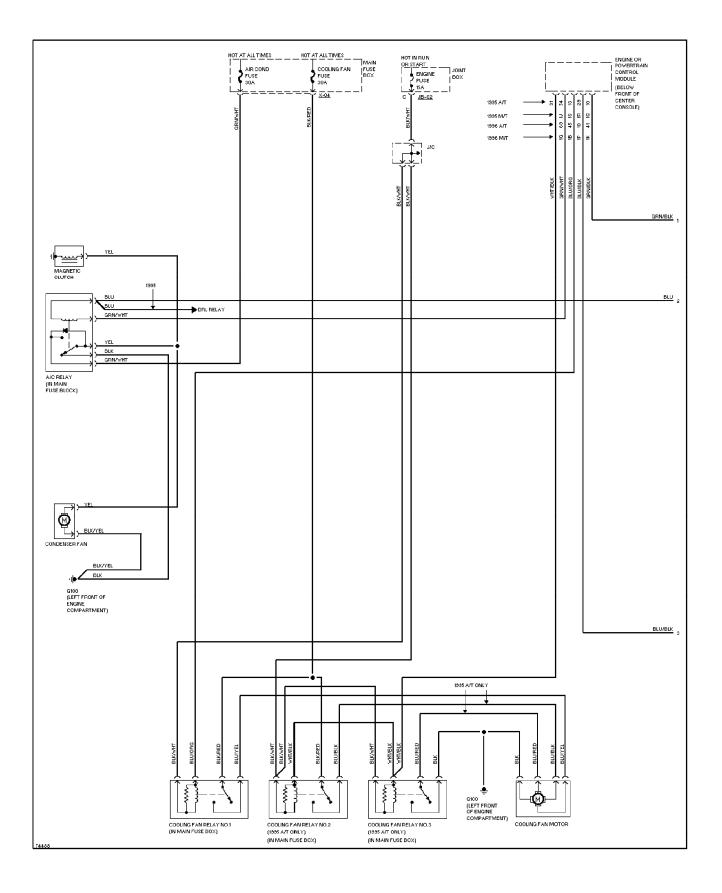


SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, M/T (1 of 2) 1995 Mazda 626

HOT IN START OR ON MAIN FUSE BLOCK (LEFT SIDE OF ENGINE COMPT) HOT AT ALL TIMES ROOM FUSE 2 15A JOINT BOX (LEFT KICK PANEL) HOT AT ALL TIMES FUSE 10 STOP FUSE 1 20A FUEL INJECTORS EGI INJ FUSIBLE LINK 30A PCM POWER RELAY #4 #1 #2 #3 _ J**Y**<u>JB-03</u> <u>JB-01</u> JB-02 ___ **m** °Ì BLURED BLK/WHT WHIT/GRN HT/RED VHT/RED WHT/RED WHT/RED BLUWHT BLU/RED REDVYEL YEL/RED RED/WHT VHT/GPN BLK/WHT SLK/V BLK/WH 1 WHT/GRM BLK/WH ENGINE CONTROL MODULE (BELOV CENTER CONSOLE) J/C X-21 (MAIN FUSE | BOX) | Ê BLK/WHT 1 BLK/WHT WHT/GRN 2 BLU/RED RED/BLK 18 10 BLK/BLU STARTING SYSTEM WHT (1D BLU 3 BLU 15 LT GRN/RED 1G CANADA QNEY LT GRN LT GRN DRL CONTROL MODULE GRN (PIND) UC-01 (BEHIND LEFT HEADLIGHT) GRN/WHT 11 RED/WHT 1K ÍL. VIO + CENTRAL PROCESSING UNIT (PIN 25) G106 (BEHIND 154 GRN/RED INSTRUMENT CLUSTER SYSTEM (PIN 1H, SPEEDOMETER) LEFT HEADLIGHT) IN BRN \square WHT/GRN <u>, 10</u> 1P BLU/YEL ПП GRN/BU RED/BLK 5 10 1B BLU/BLK 🕈 FAN SWITCH BLU/ORG 18 COOLING FAN RELAY COIL π WHT 10 + HEADLIGHTS SYSTEM GRN/YEL GRN/YEL 6 вік 2B BLK 20 BRN/RED • • - • • • G112 (LEFT SIDE YEL/BLU 7 2D YEL/BLU ORG SE. 2F YEL/RED (LEFT FRONT FENDER) ĺ₽<u>↓</u> 20 YEL/WHT 2H _______ G100 (LEFT FRONT FENDER) 21 RED 8 RED 2K GRN/BLU GRN/BLU э a BLU/RED BLU/RED 10 2M PNK/GRN PNK/GRN 11 SAN YEL YEL 12 20 BLK/BLU BLK/BLU 13 2P RED/BLK 14 <u>ععر</u>ً RED/BLX 2R VIO/RED VIO/RED 15 WHT/BLU 16 WHT/BLU BLU/WHT 17 2T BLU/VHT RED/WHT 2V BLU/VHT GRY/RED 18 GRY/REE 2W WHT/BLK 19 2X WHT/BLK BLU/RED (ay 97 RED/YEL RED/BLK 20 BLK/RED 21 IGNITION SWITCH . ACC • START госк DATA LINK CONNECTOR (NEAR MAIN FUSE BLOCK) BLK/WHT DISTRIBUTOR COM BLK/ RED BLK/ RED INSTRUMENT CLUSTER SYSTEM (PIN 1G, TACHOMETER) BLK/WHT ~~~<u>+</u>____ UC X-22 (RIGHT SIDE OF CENTER CONSOLE) <u>г</u> -Ŀ телин YEL/RED BLK/ RED BRN ORG BUUYE YEL POWER STEERING PRESSURE SWITCH (RIGHT FRONT OF ENGINE COMDADTMENT CLOSED THROTTLE POSITION SWITCH (CENTER REAR OF ENGINE RED/BLK Ŷ BLK/RED ł BLK COMPARTMENT) G112 (LEFT SIDE OF ENGINE) COMPARTMENT)


SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, M/T (2 of 2) 1995 Mazda 626

MAIN FUSE BLOCK (LEFT SIDE OF ENGINE COMPT) HOT IN START OR ON WIPER USE 13 2004 154 JOINT BOX I(LEFT KICK PANEL) FUEL PUMP RELAY FUEL TANK UNIT <u>JB-03</u> BLK/YEL BLU LT GRN 'HT/YEL RED/BLK BLK/YEL Ē BLU 2G <u>c-01</u> INSTRUMENT CLUSTER MALFUNCTION INDICATOR (CHECK ENGINE) G300 (BELOW LEFT FRONT SEAT) BLK/WHT PURGE PURGE SOLENOID VALVE (FIGHT REAR OF ENGINE COMPARTMENT) 3 BLK/WHT BLK/WHT 2 ™Teon BLU EGR SOLENOID VALVE-VENT (RIGHT REAR OF ENGINE COMPARTMENT) 3 BLU 3 LT GRN IDLE AIR CONTROL SOLENOID VALVE (LEFT REAR OF ENGINE COMPARTMENT) RED/BLK 3 603 PRC SOLENOID VALVE (RIGHT REAR OF ENGINE COMPARTMENT) BLU/WH 3 RED/BLK EGR SOLENOID VALVE-VACUUM (RIGHT REAR OF ENGINE COMPARTMENT) WHIT/BLU 3 GRN/YE RED/BL NEUTRAL SWITCH (ON SIDE OF TRANSMISSION) YEL/BLU 7 مبر GRN/YEL G112 I = BLK (LEFT SIDE OF ENGINE) • RED GRN/BLU CLUTCH PEDAL SWITCH (ON CLUTCH PEDAL SUPPORT) 9 BLU/RED 10 PNK/GRN BLK 11 . YEL 12 BLK/BLU 13 J/C-01 (BEHIND LEFT HEADLIGHT) RED/BLK 14 VIO/RED 15 WHT/BLU 16 _ BLU/WHT 17 GRY/RED 18 WHIT/BLK 19 (PIN J) RED/BLK 20 BLK/RED 21 ć BUK/RED BLK/BLU YEL/BLU BLU/RED PNK/GRM YEL/BLU YEL/BLU RED/BLK BN/BLI ED ş ş Ţ ş Ę الهمررا percel MASS AIR FLOW SENSOR (LEFT REAR OF ENGINE COMPT) HEATED OXYGEN SENSOR (LOWER RIGHT SIDE THROTTLE POSITION SENSOR (CENTER REAR OF ENGINE) INTAKE AIR TEMPERATURE SENSOR ENGINE COOLANT TEMPERATURE SENSOR EGR VALVE BLK/RED POSITION SENSOR (CENTER REAR OF ENGINE COMPT) OF ENGINE, ON EXHAUST PIPE) (LEFT SIDE OF ENGINE) G112 (LEFT SIDE OF ENGINE) (LEFT SIDE OF ENGINE)


SYSTEM WIRING DIAGRAMS 2.0L, A/C Circuit (2 of 2) 1995 Mazda 626

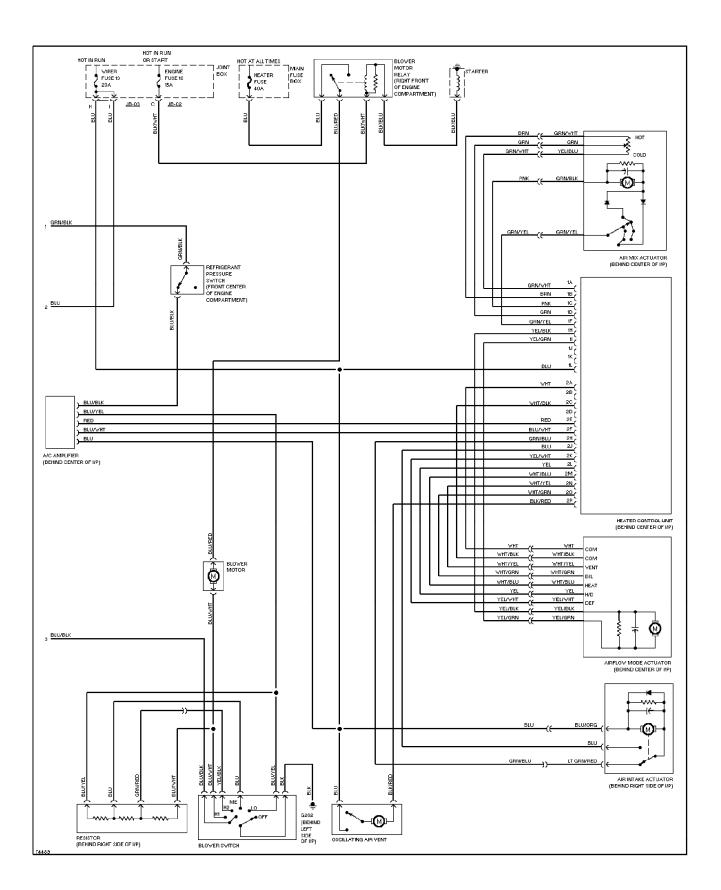


SYSTEM WIRING DIAGRAMS Heater Circuit 1995 Mazda 626

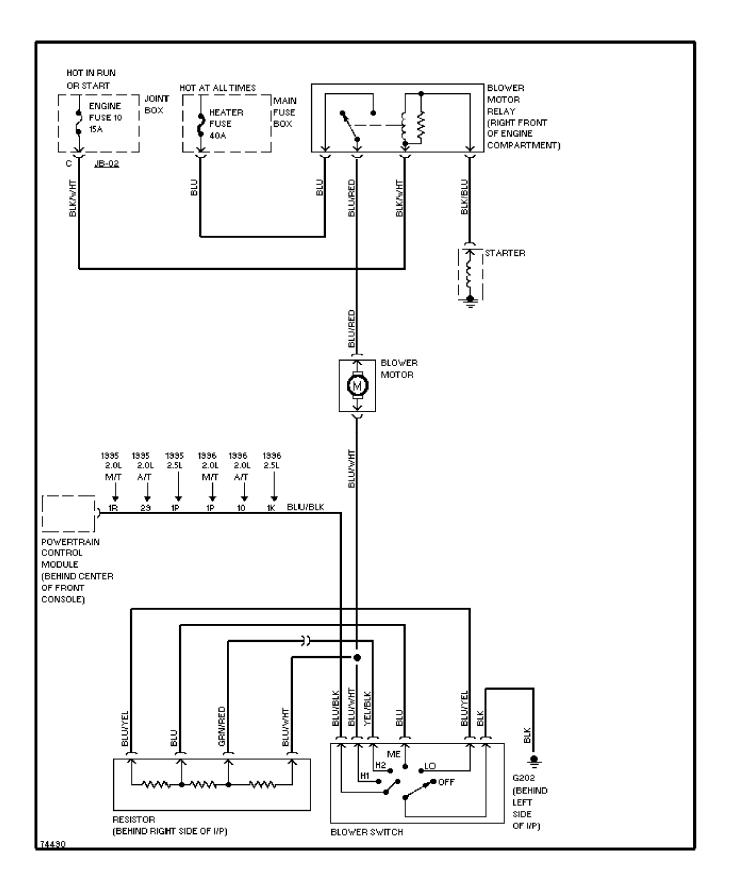


SYSTEM WIRING DIAGRAMS 2.5L, A/C Circuit (1 of 2) 1995 Mazda 626

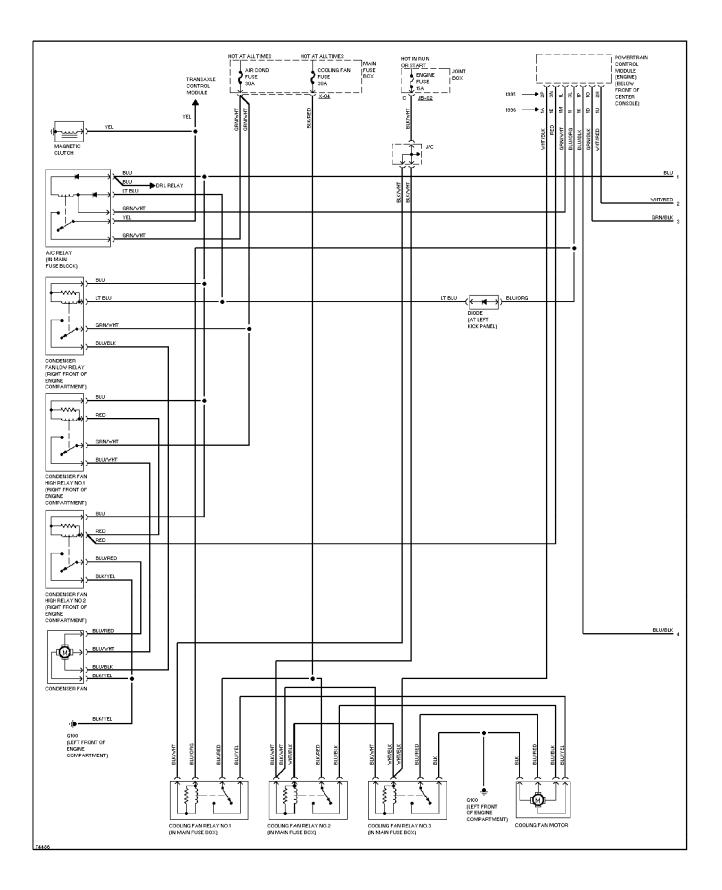


SYSTEM WIRING DIAGRAMS 2.5L, A/C Circuit (2 of 2) 1995 Mazda 626

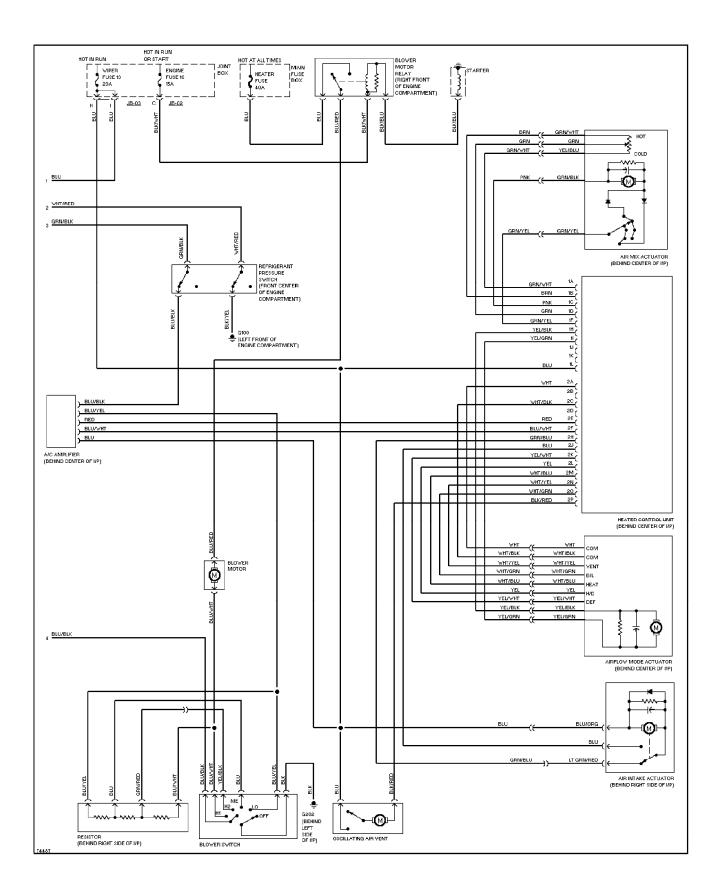


SYSTEM WIRING DIAGRAMS Heater Circuit 1995 Mazda 626

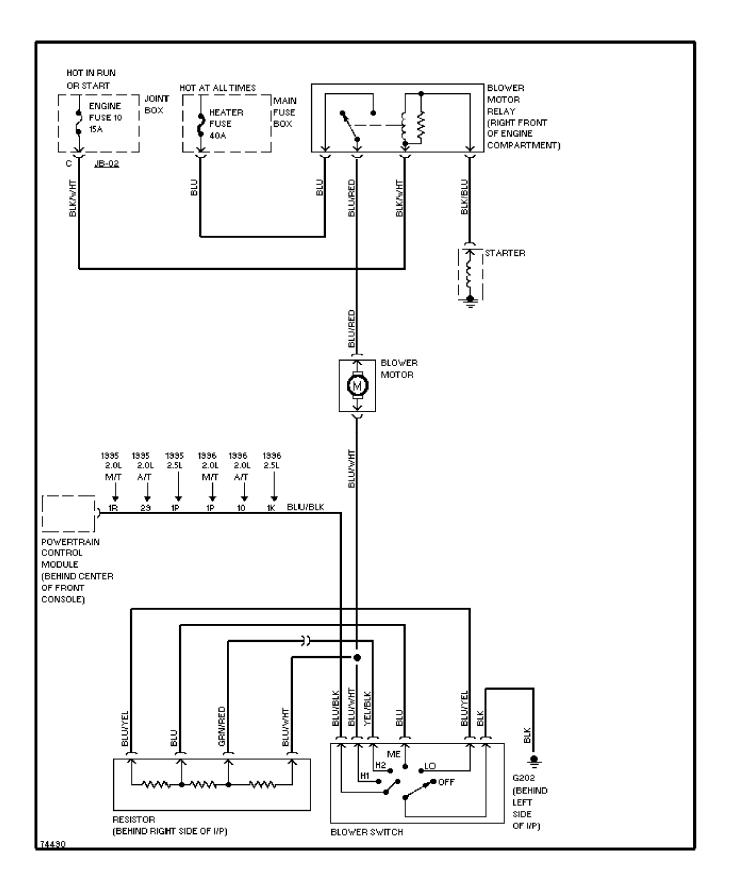


SYSTEM WIRING DIAGRAMS Anti-lock Brake Circuits 1995 Mazda 626

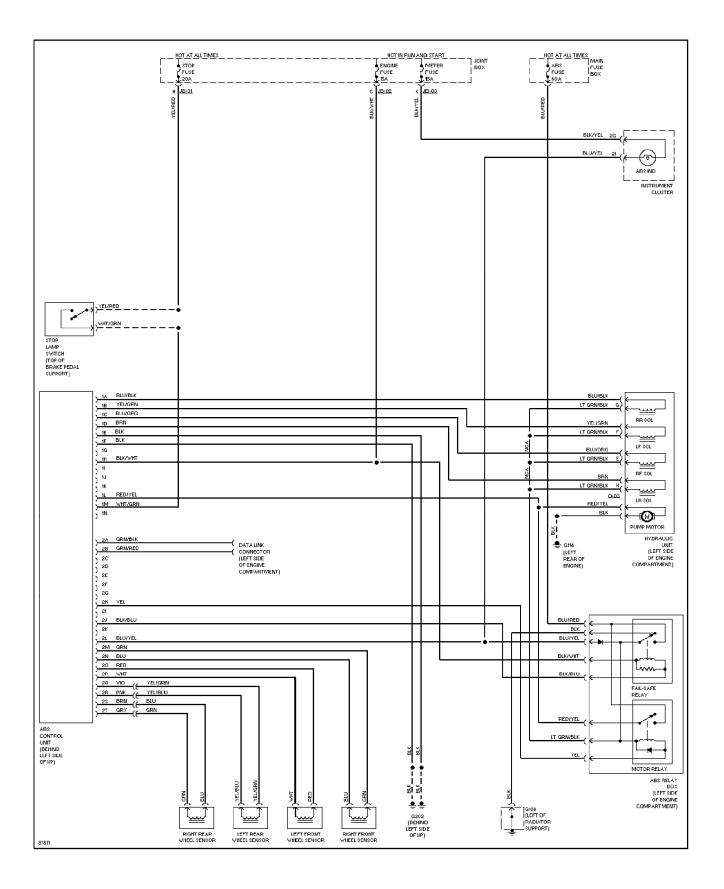


SYSTEM WIRING DIAGRAMS Anti-theft Circuit 1995 Mazda 626

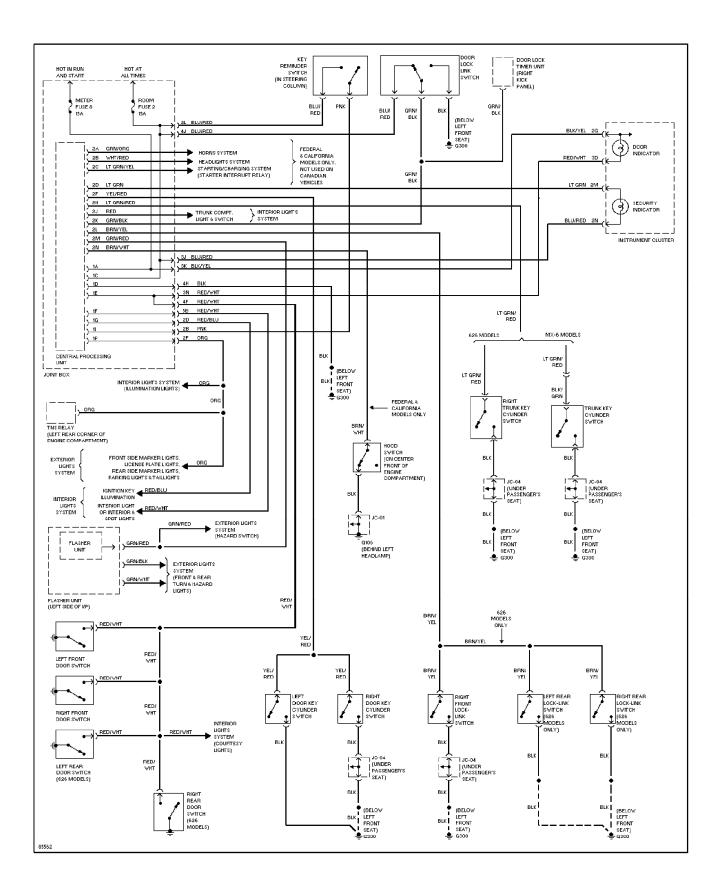

SYSTEM WIRING DIAGRAMS Body Computer Circuits 1995 Mazda 626

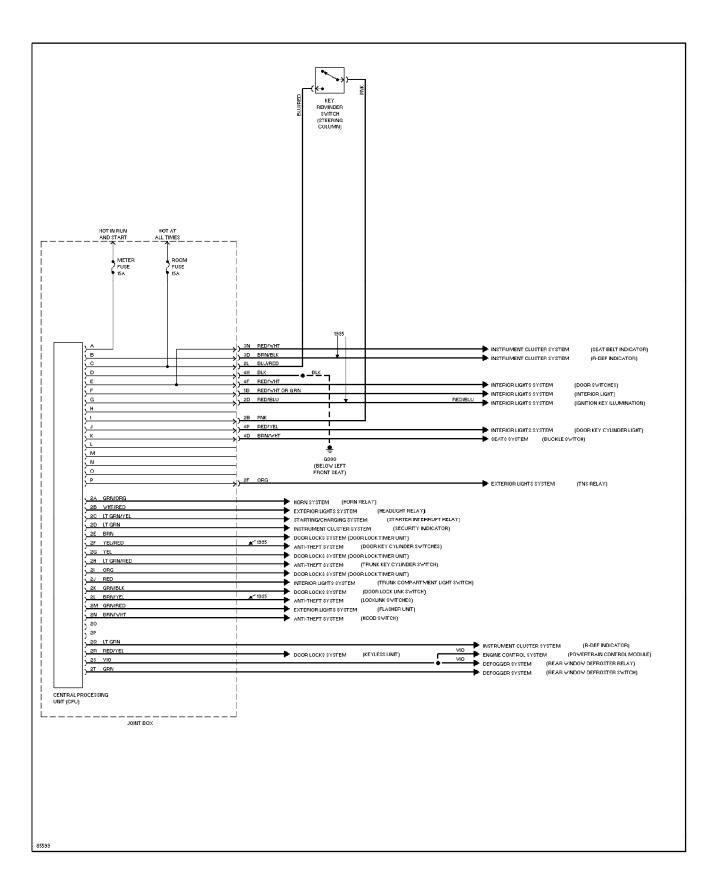


SYSTEM WIRING DIAGRAMS 2.0L, Computer Data Lines, A/T 1995 Mazda 626

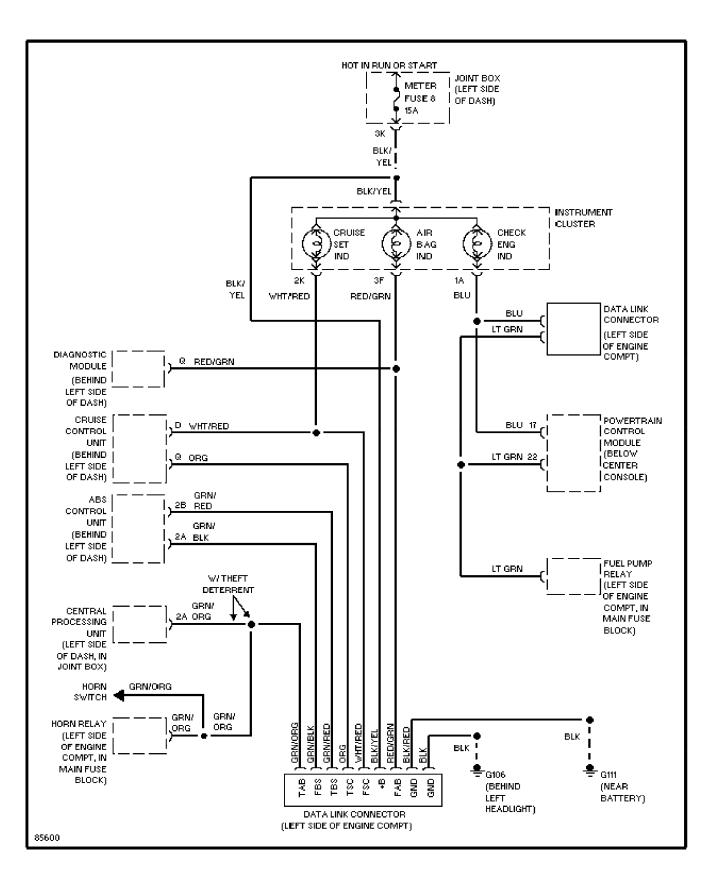


SYSTEM WIRING DIAGRAMS 2.0L, Computer Data Lines, M/T 1995 Mazda 626

HOT IN RUN OR START JOINT BOX METER (LEFT SIDE FUSE 8 OF DASH) 15A зк BLK/ YEL BLK/YEL 2G INSTRUMENT CLUSTER CRUISE CHECK AIR. é ۴ ENG പപ SET BAG IND IND. IND BLK/ 2K ЗF 1A YEL WHT/RED RED/GRN BLU POWERTRAIN 1E BLU CONTROL 1F) LT GRN/RED MODULE (BELOW 1D wнт CENTER CONSOLE) DIAGNOSTIC 1H 1F RED/GRN LT GRN MODULE 1K RED/WHT (BEHIND LEFT SIDE OF DASH) FUEL PUMP CRUISE D WHT/RED LT GRN RELAY CONTROL LEFT SIDE UNIT OF ENGINE (BEHIND Q ORG COMPT, IN LEFT SIDE MAIN FUSE OF DASH) BLOCK) ABS CENTRAL 2B **GRN/RED** GRN/ORG 2A CONTROL PROCESSING UNIT UNIT (WITHEFT (BEHIND **GRN/BLK** 2A DETERRENT) LEFT SIDE OF DASH) (LEFT SIDE ÒF DASH, IN JOINT BOX) DISTRIBUTOR GRN/ORG HORN. YEL (LEFT FRONT SWITCH TOP OF GRN/ GRN/ HORN RELAY ENGINE) ORG ORG (LEFT SIDE OF ENGINE COMPT, IN BLK/RED MAIN FUSE LT GRM/RE GRN/RED WHT/RED RED/GRN REDVWHT GRAVORG L BLOCK) GRN/BLK BLK/RED BLK/YEL BLK LT GRN 1 ORG BLK 번》 핃 Ъ I G106 💁 G111 (BEHIND (NEXT TO TBS FSC F TEN MEN FEN FΒS ę ang Ng 180 EAB F 2 EγE ₫ LEFT BATTERY) HEADLIGHT) DATA LINK CONNECTOR (LEFT SIDE OF ENGINE COMPT) 85601


SYSTEM WIRING DIAGRAMS 2.5L, Data Link Connector Circuit 1995 Mazda 626

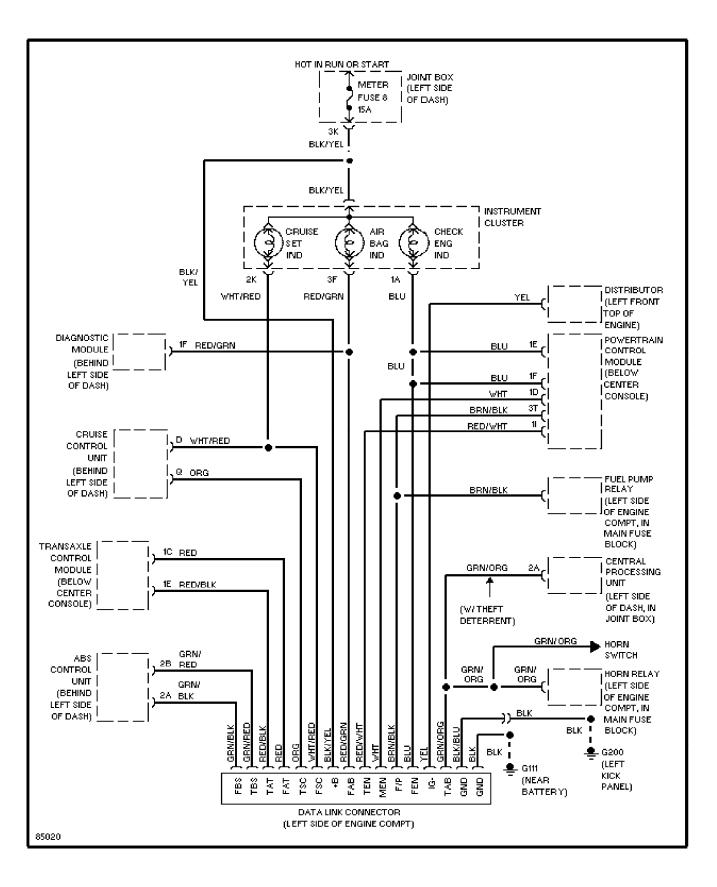


SYSTEM WIRING DIAGRAMS 2.0L, Cooling Fan Circuit 1995 Mazda 626

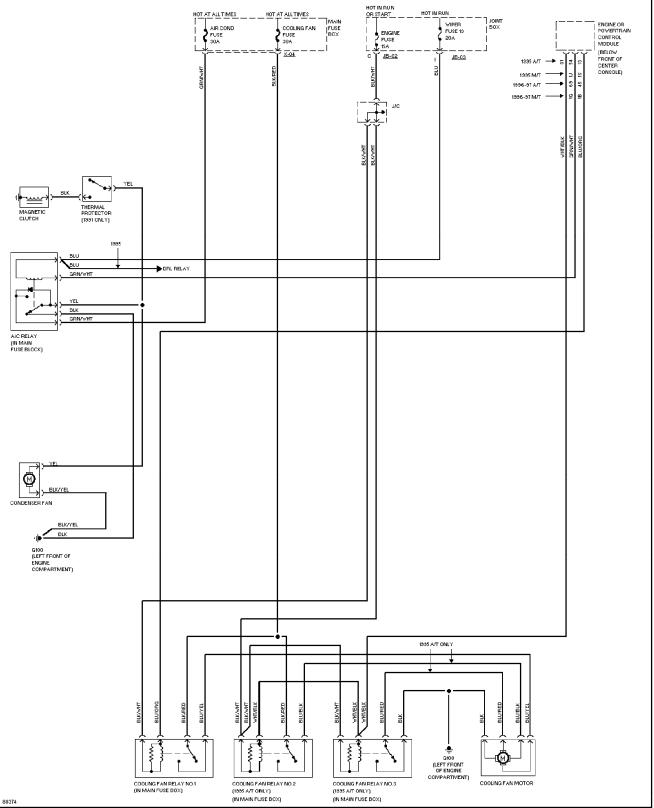


SYSTEM WIRING DIAGRAMS 2.5L, Cooling Fan Circuit 1995 Mazda 626

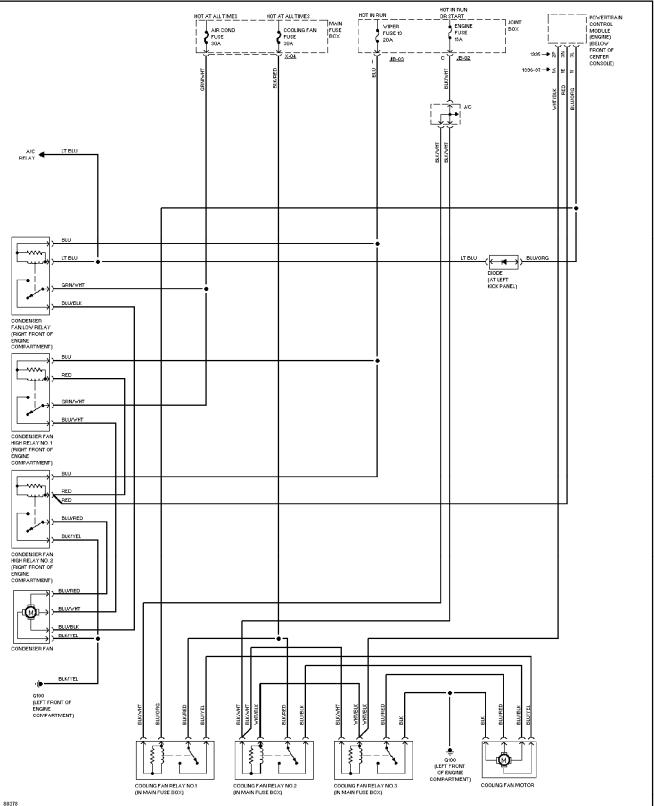


SYSTEM WIRING DIAGRAMS Cruise Control Circuit 1995 Mazda 626

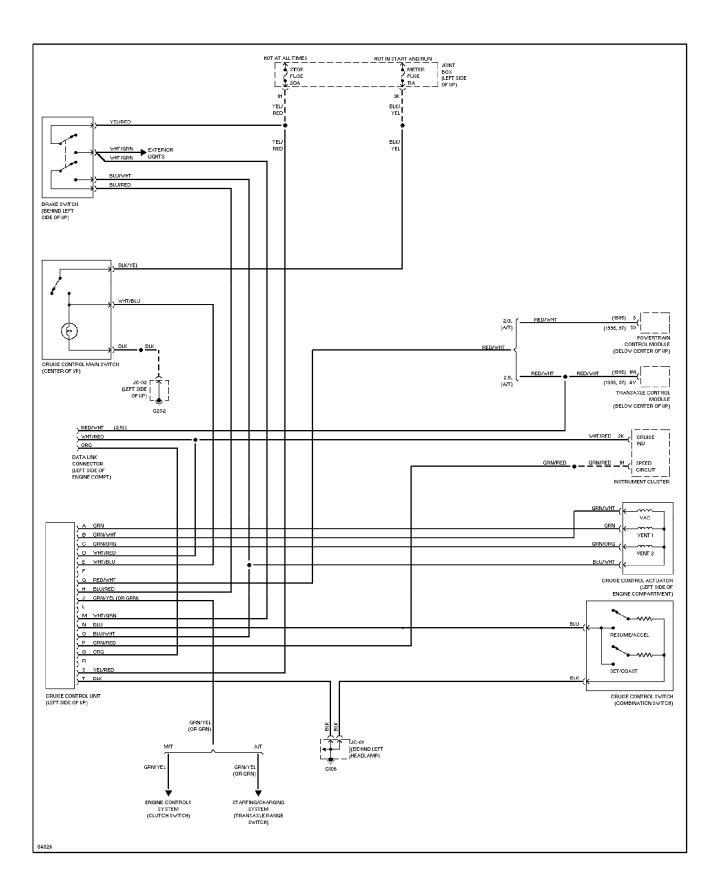


SYSTEM WIRING DIAGRAMS Defogger Circuit 1995 Mazda 626

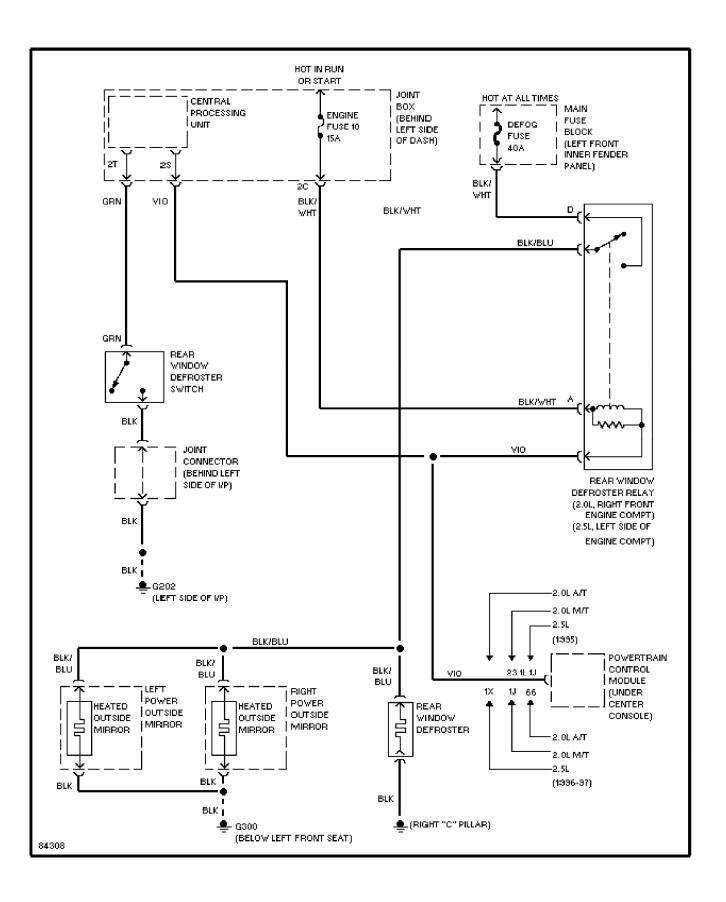


SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, A/T (1 of 2) 1995 Mazda 626

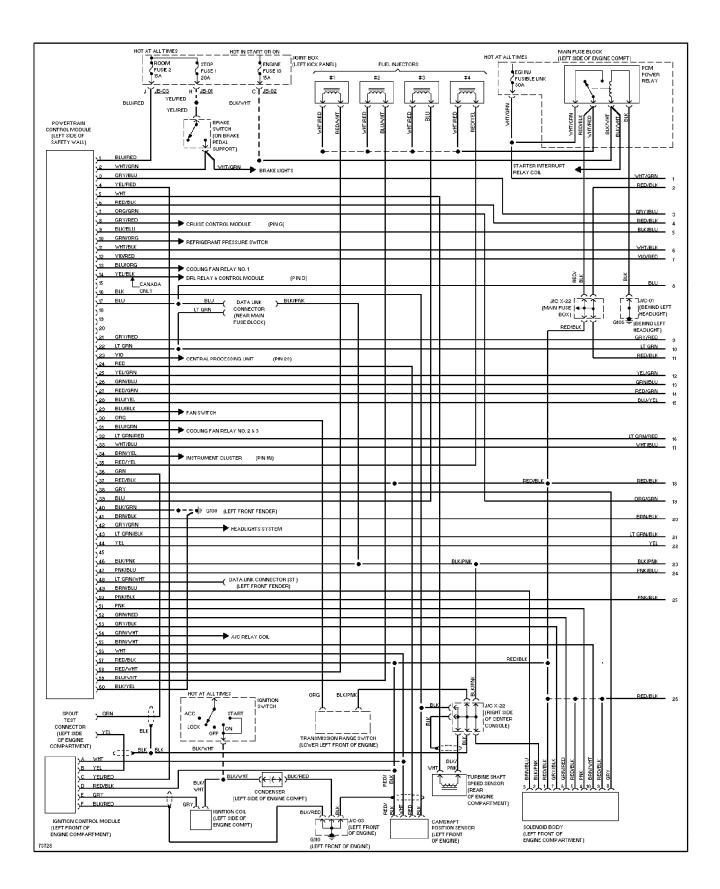


SYSTEM WIRING DIAGRAMS 2.0L, Engine Performance Circuits, A/T (2 of 2) 1995 Mazda 626

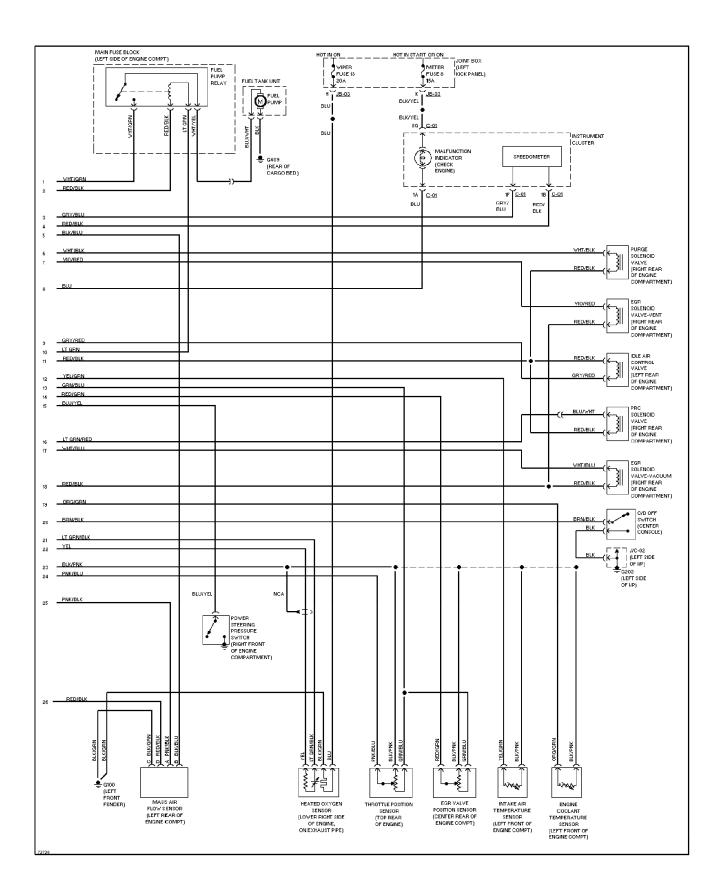


SYSTEM WIRING DIAGRAMS Power Seat Circuits 1995 Mazda 626

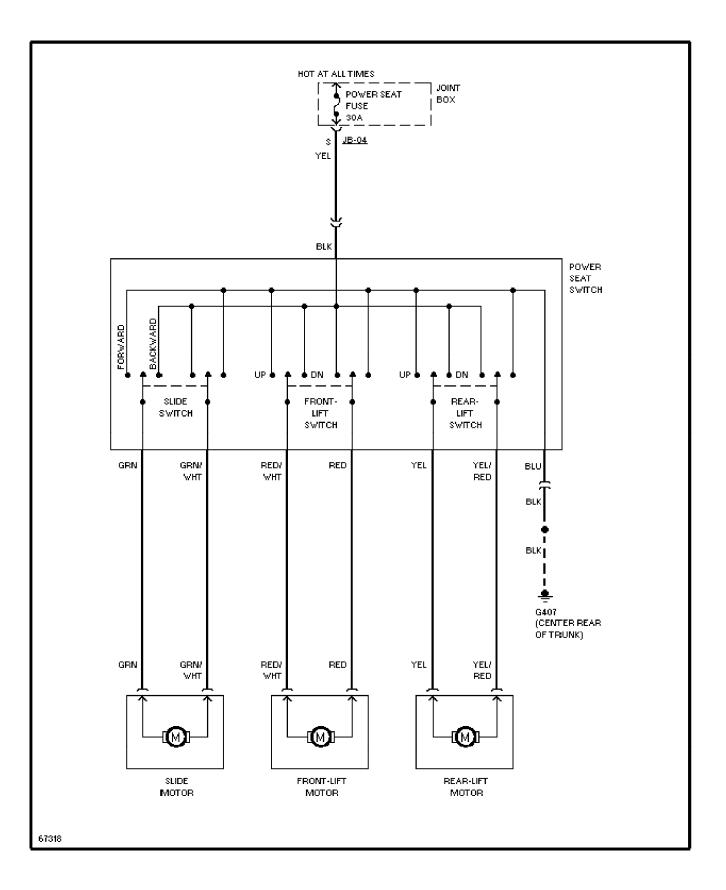


SYSTEM WIRING DIAGRAMS **Power Top/Sunroof Circuits** 1995 Mazda 626

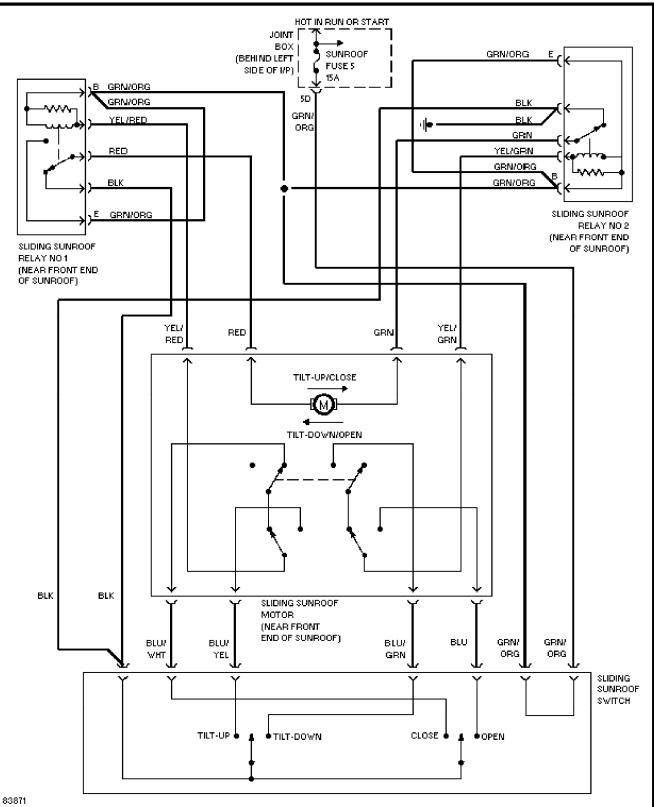


SYSTEM WIRING DIAGRAMS 2.5L, Engine Performance Circuits (1 of 2) 1995 Mazda 626

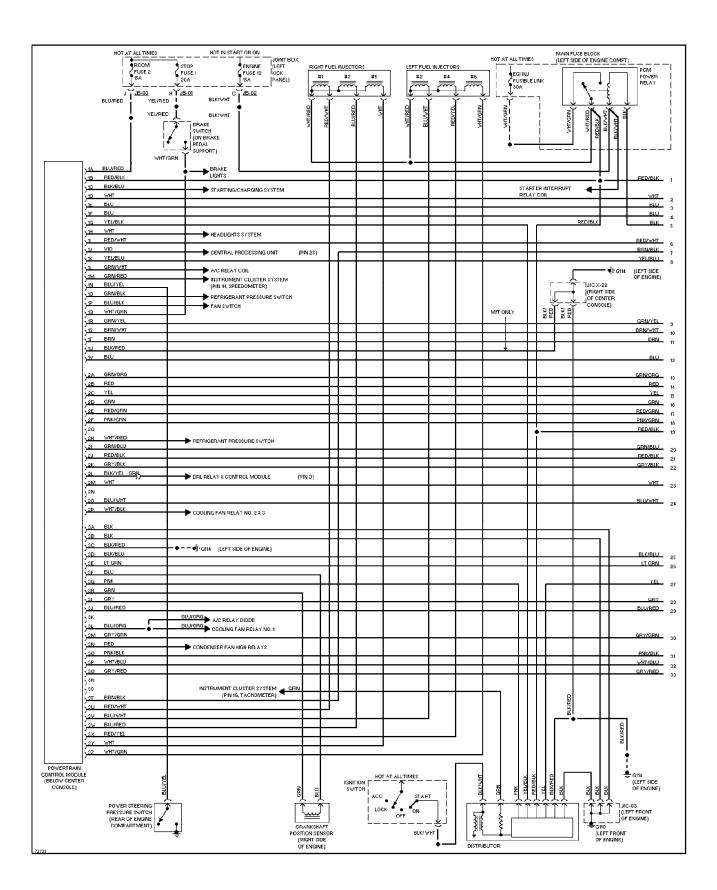


SYSTEM WIRING DIAGRAMS 2.5L, Engine Performance Circuits (2 of 2) 1995 Mazda 626

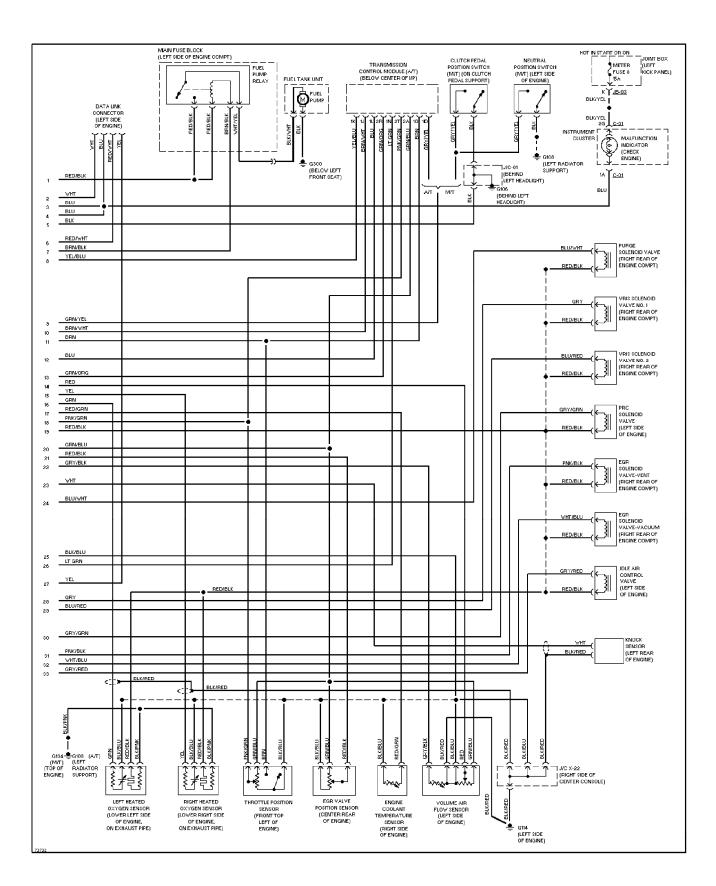


SYSTEM WIRING DIAGRAMS Back-up Lamps Circuit 1995 Mazda 626

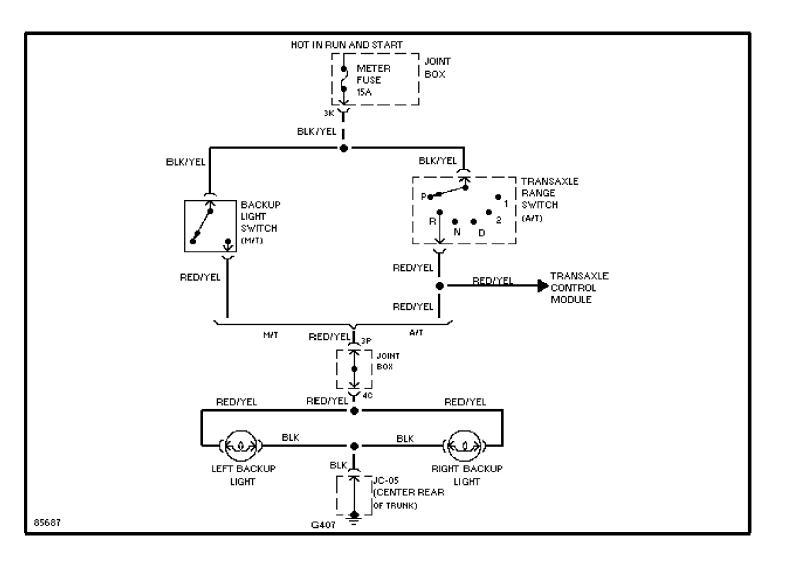


SYSTEM WIRING DIAGRAMS Exterior Lamps Circuit 1995 Mazda 626

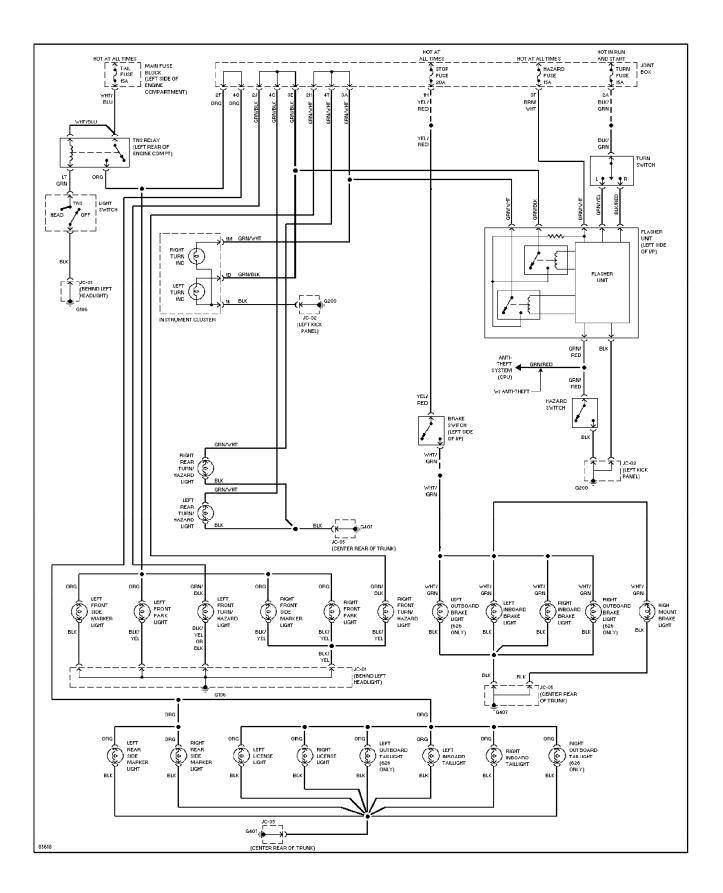


SYSTEM WIRING DIAGRAMS Ground Distribution Circuit 1995 Mazda 626

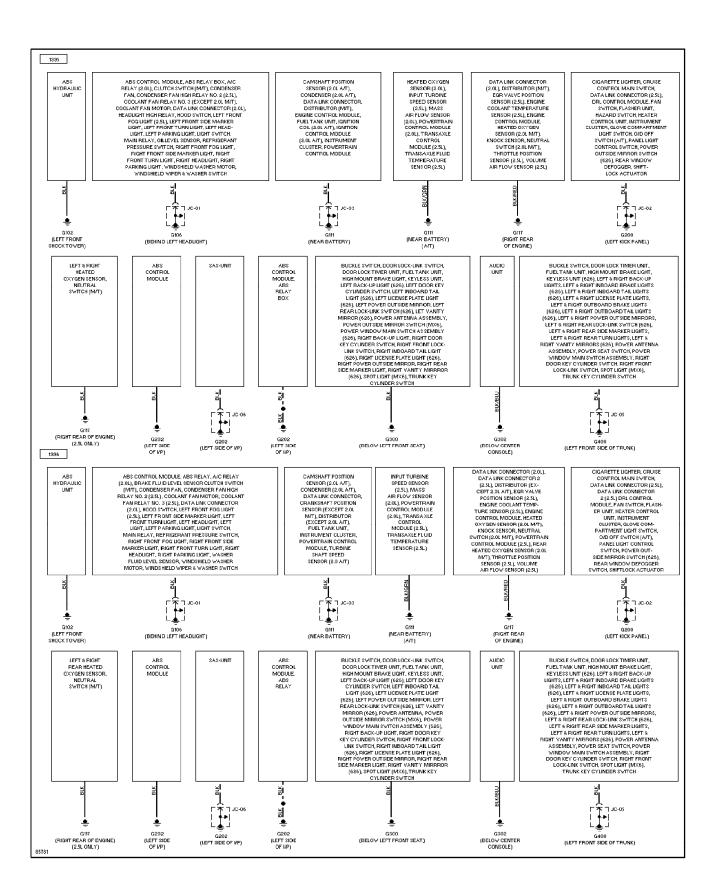


SYSTEM WIRING DIAGRAMS Headlight Circuit, W/ DRL 1995 Mazda 626

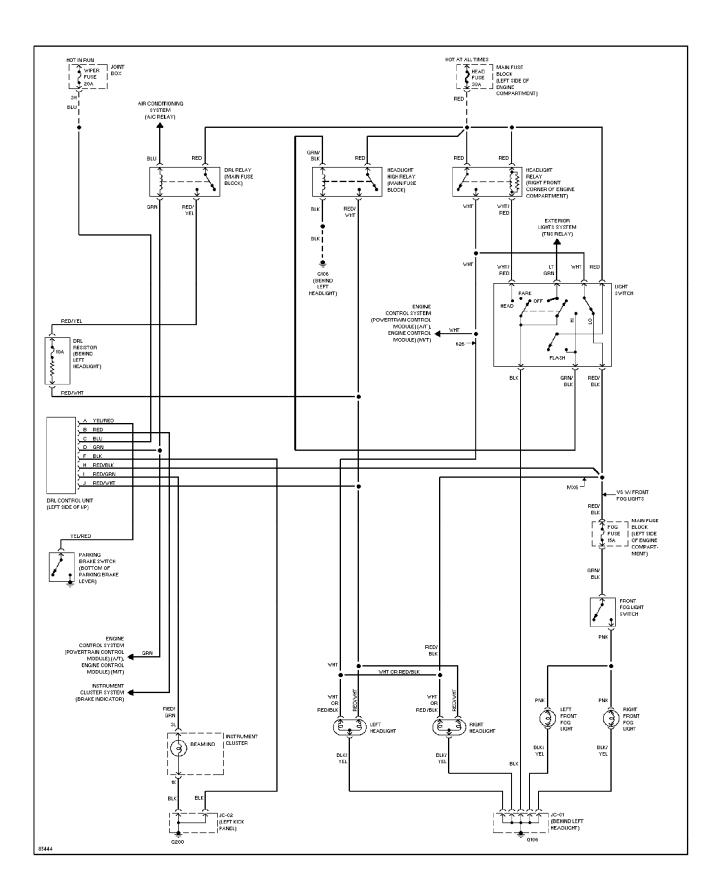


SYSTEM WIRING DIAGRAMS Headlight Circuit, W/O DRL 1995 Mazda 626

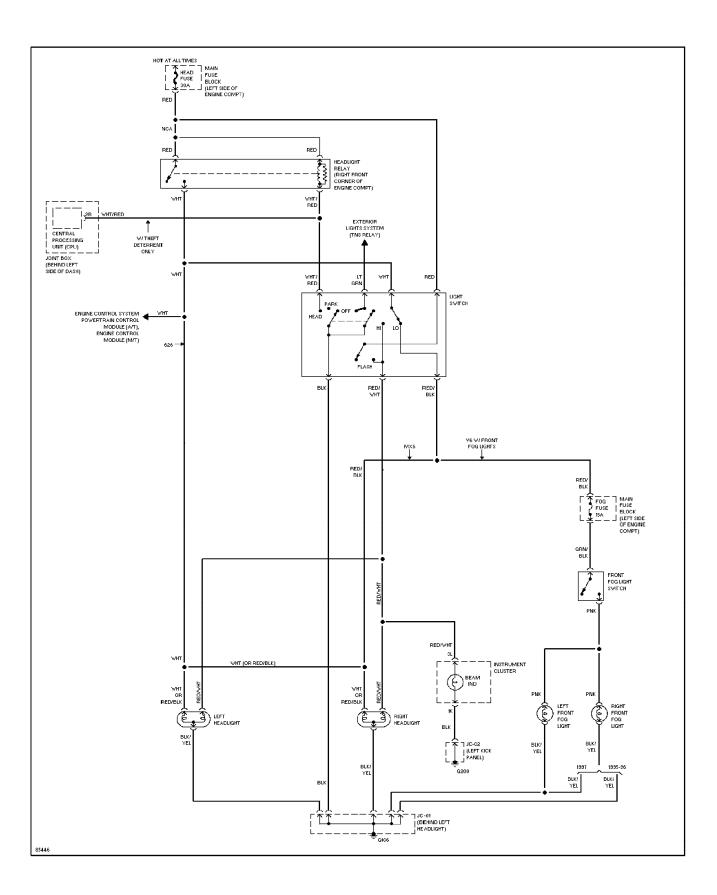


SYSTEM WIRING DIAGRAMS Horn Circuit 1995 Mazda 626

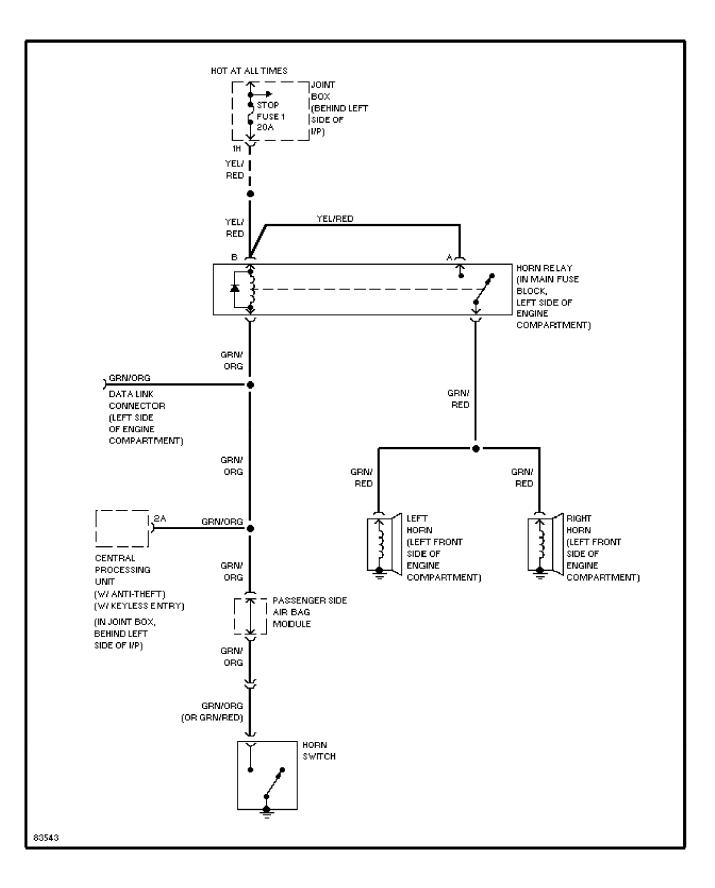


SYSTEM WIRING DIAGRAMS Instrument Cluster Circuit (1 of 2) 1995 Mazda 626

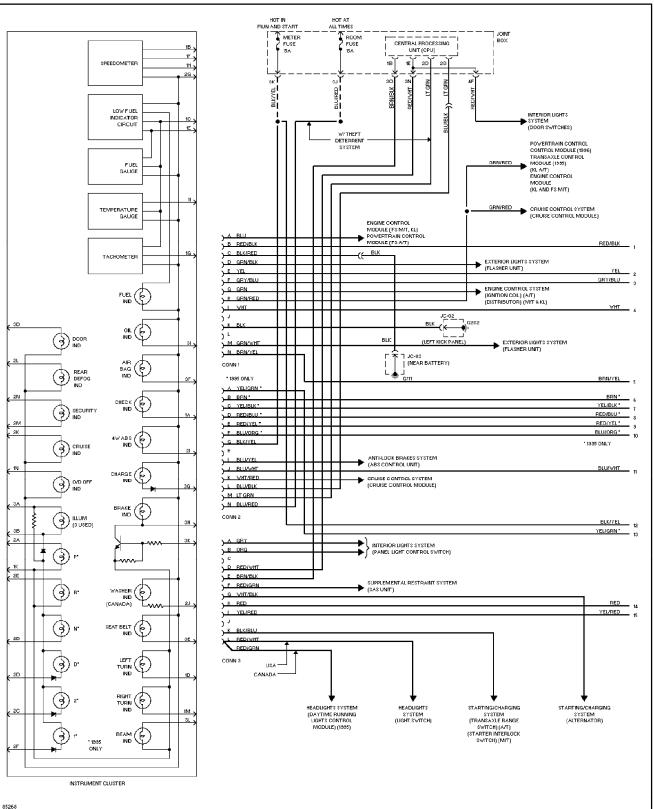


SYSTEM WIRING DIAGRAMS Instrument Cluster Circuit (2 of 2) 1995 Mazda 626

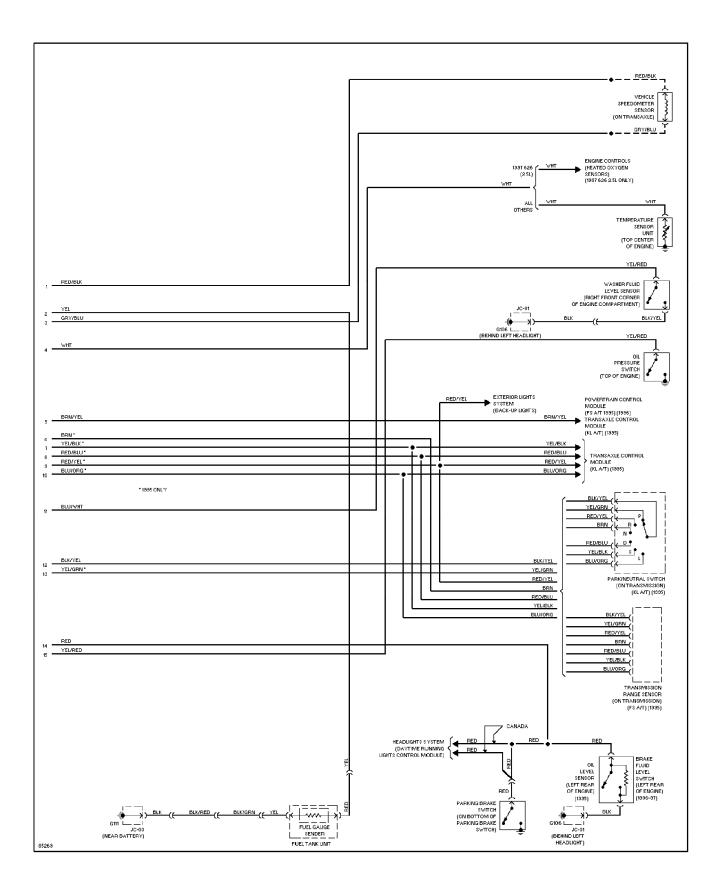


SYSTEM WIRING DIAGRAMS Courtesy Lamp Circuit 1995 Mazda 626

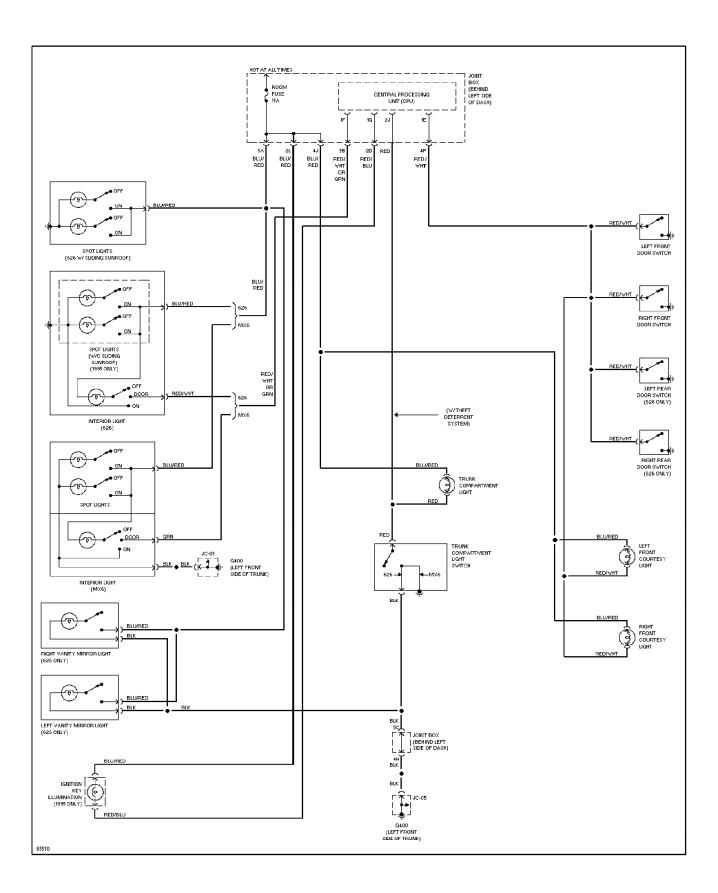

SYSTEM WIRING DIAGRAMS Instrument Illumination Circuit 1995 Mazda 626

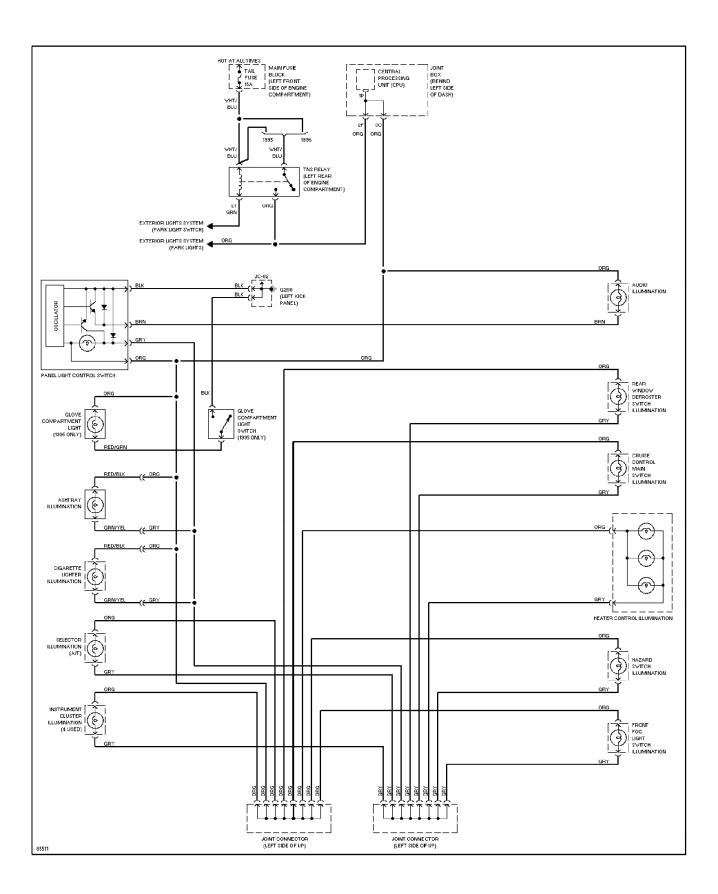


SYSTEM WIRING DIAGRAMS **Power Antenna Circuit** 1995 Mazda 626

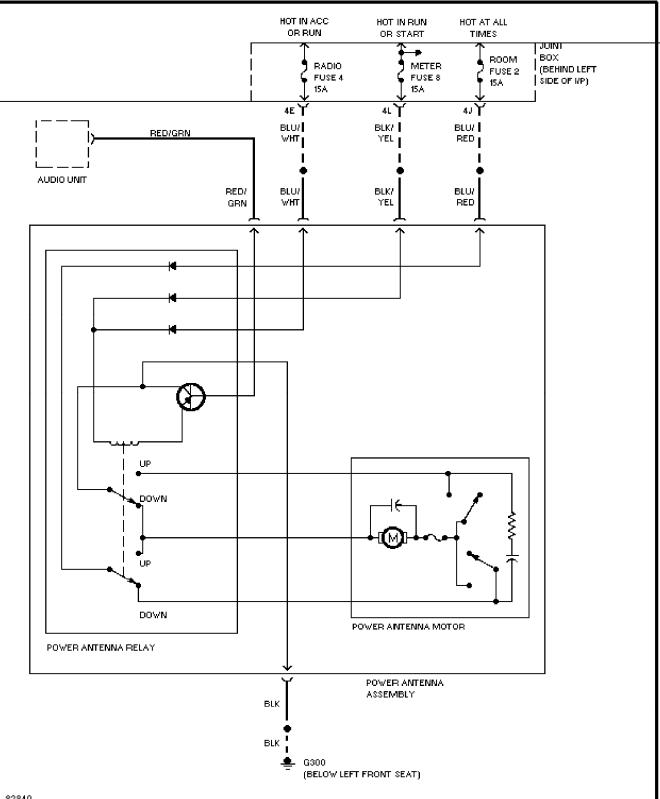


83840


SYSTEM WIRING DIAGRAMS Power Distribution Circuit 1995 Mazda 626

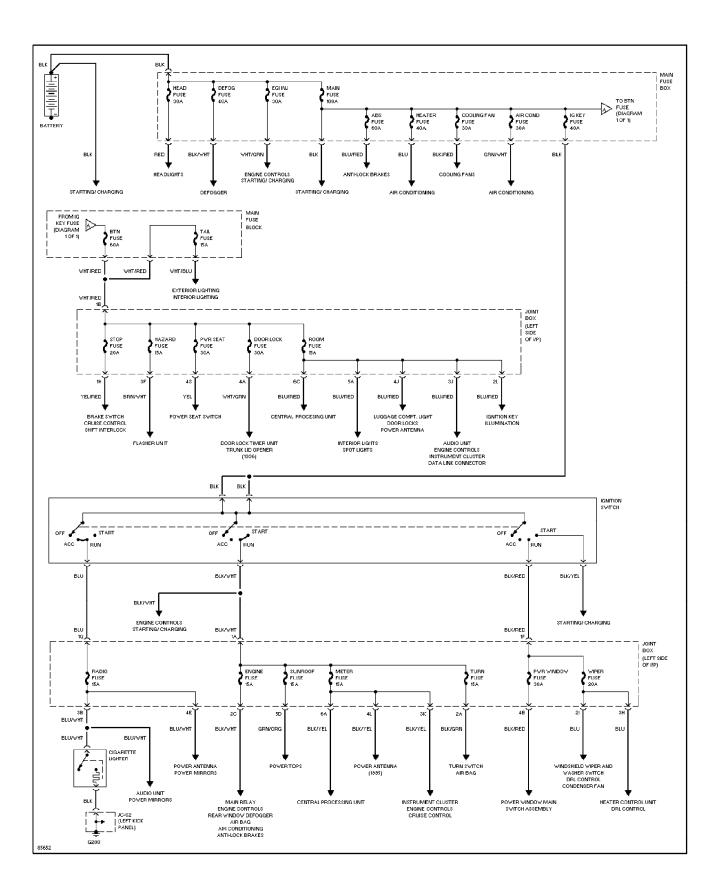


SYSTEM WIRING DIAGRAMS Door Lock Circuit 1995 Mazda 626

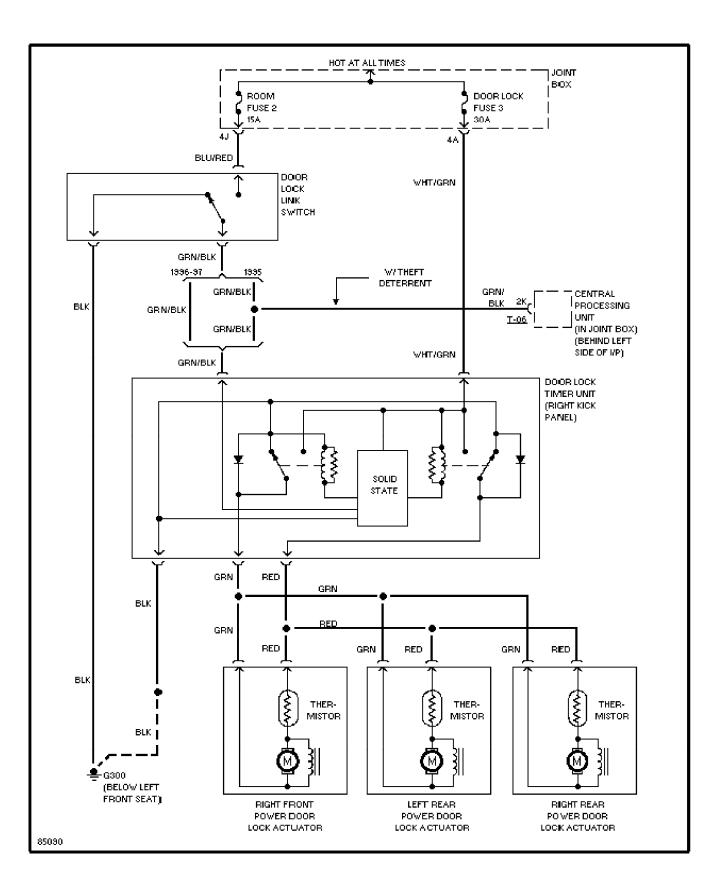


SYSTEM WIRING DIAGRAMS Keyless Entry Circuit 1995 Mazda 626

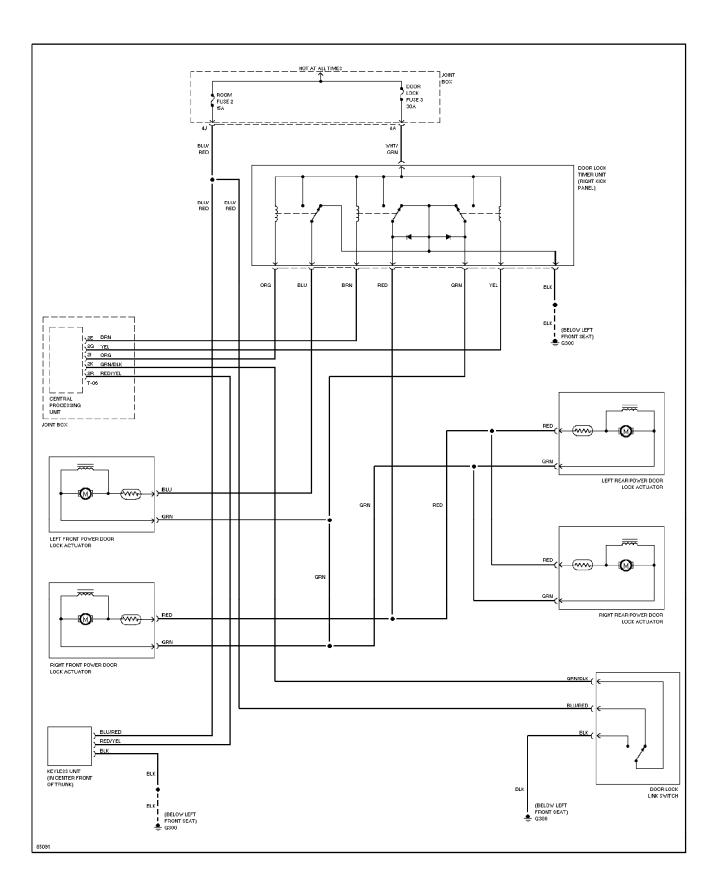


SYSTEM WIRING DIAGRAMS Power Mirror Circuit 1995 Mazda 626

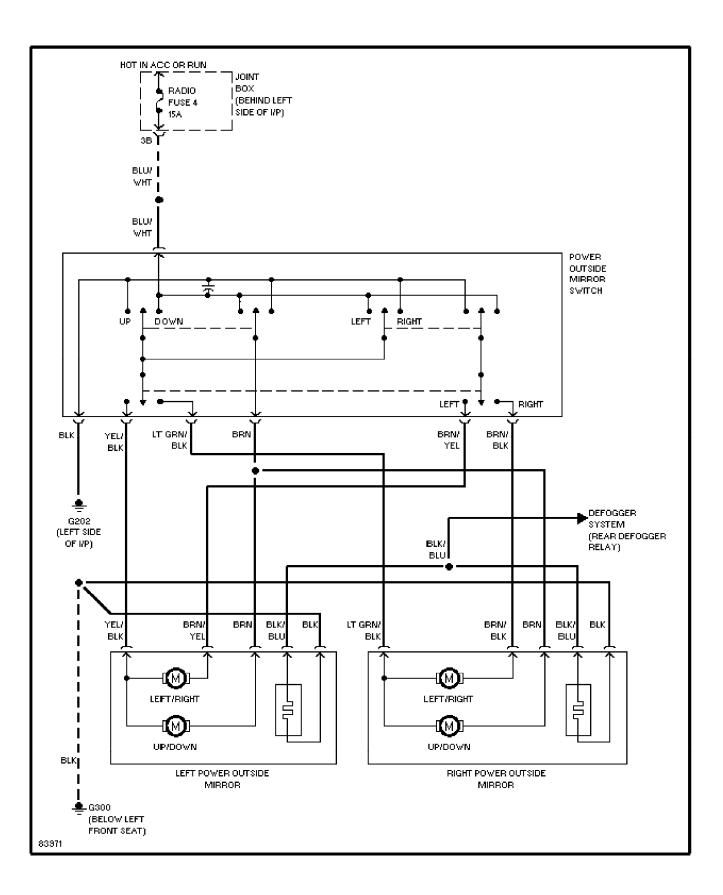


SYSTEM WIRING DIAGRAMS Warning System Circuits 1995 Mazda 626

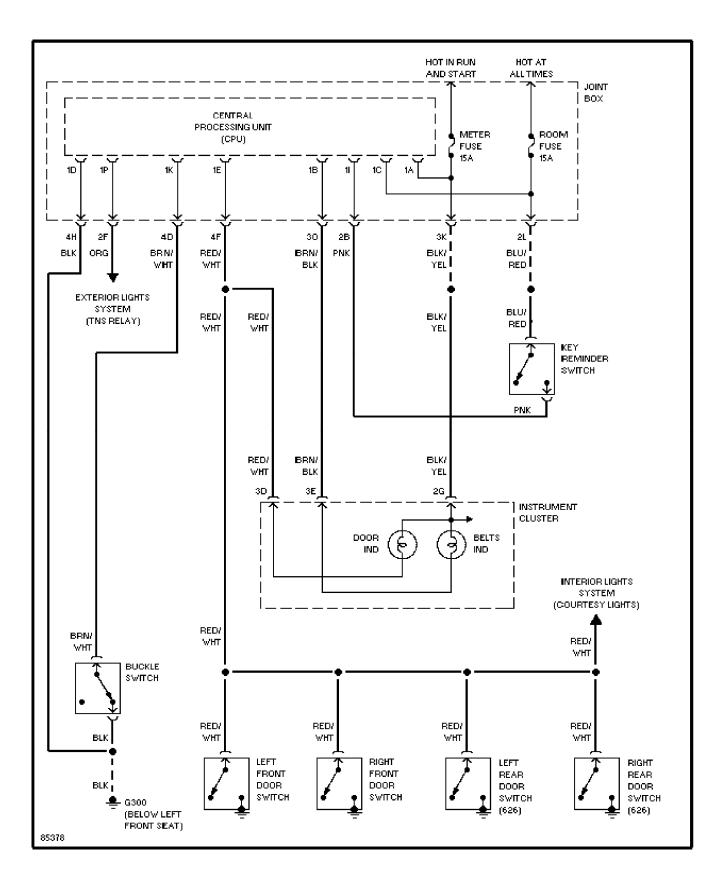


SYSTEM WIRING DIAGRAMS Wiper/Washer Circuit 1995 Mazda 626

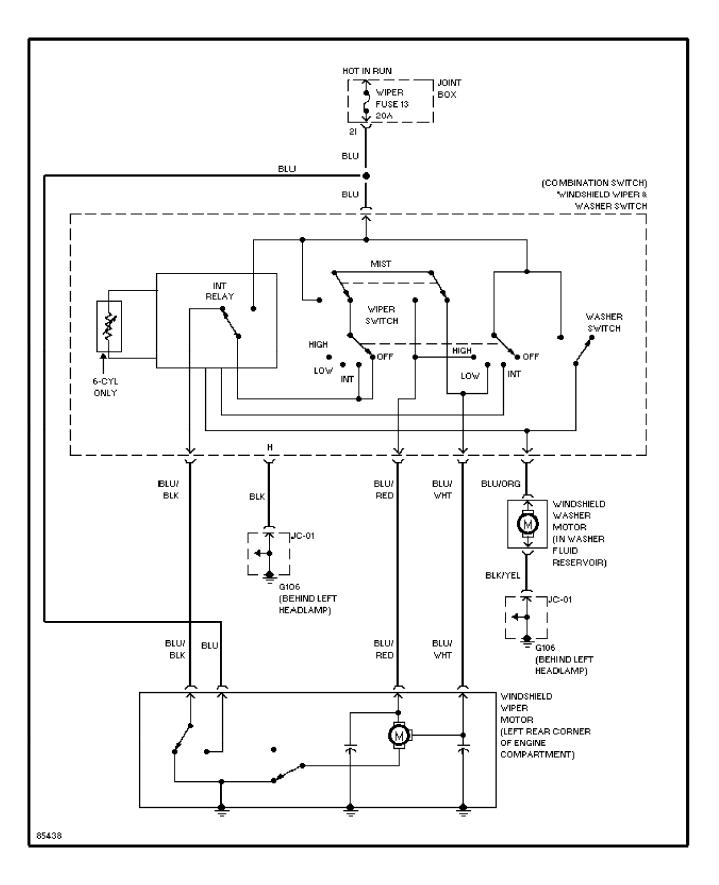


SYSTEM WIRING DIAGRAMS Power Window Circuit 1995 Mazda 626

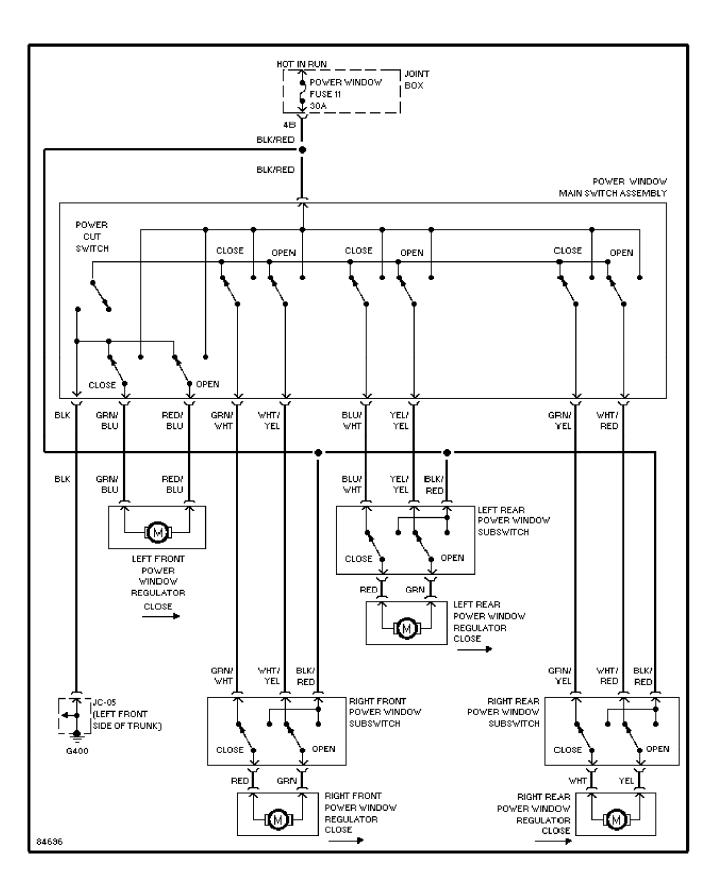


SYSTEM WIRING DIAGRAMS Radio Circuits 1995 Mazda 626

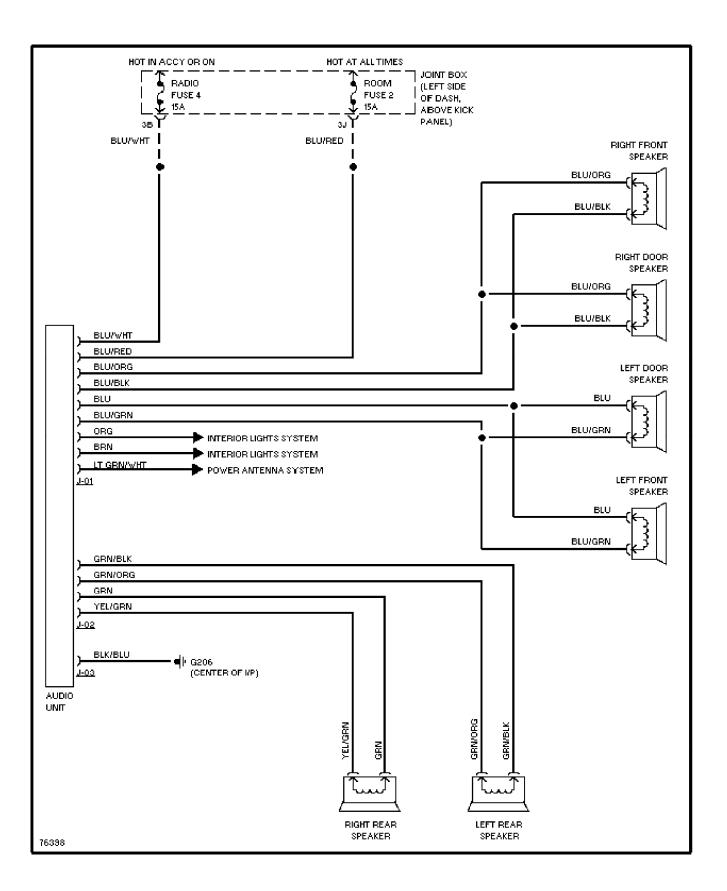


SYSTEM WIRING DIAGRAMS Shift Interlock Circuit 1995 Mazda 626

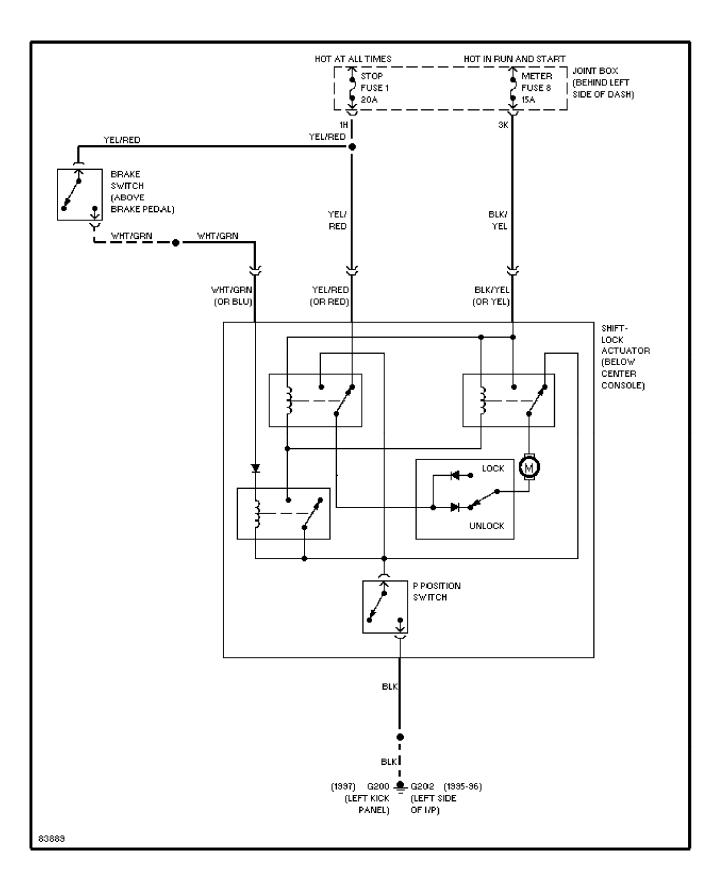

SYSTEM WIRING DIAGRAMS 2.0L, Starting Circuit, A/T 1995 Mazda 626

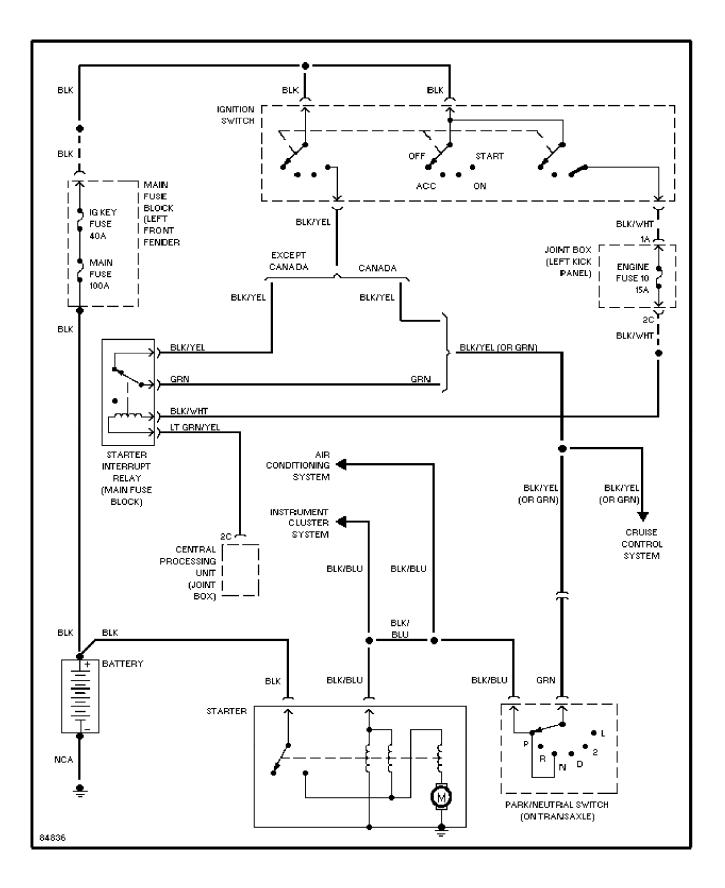


SYSTEM WIRING DIAGRAMS 2.0L, Starting Circuit, M/T

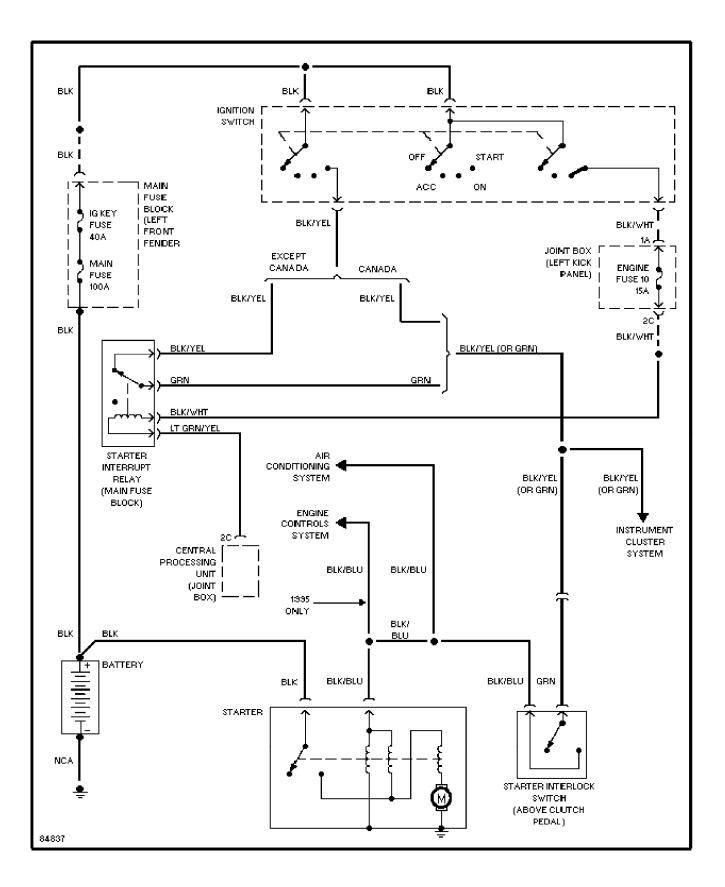


1995 Mazda 626


SYSTEM WIRING DIAGRAMS 2.0L, Starting/Charging Circuit, A/T 1995 Mazda 626

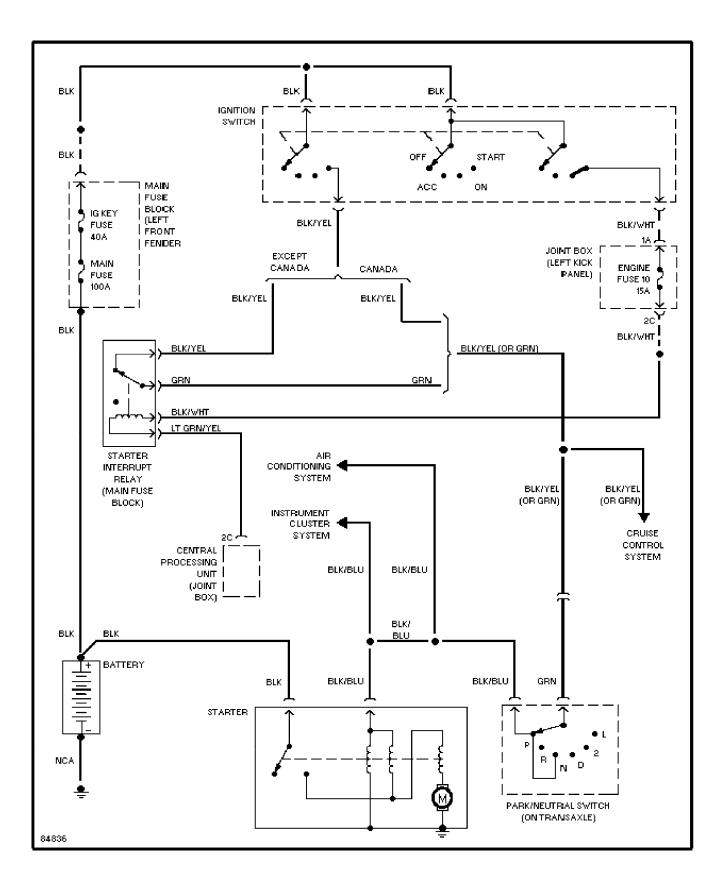


SYSTEM WIRING DIAGRAMS 2.0L, Starting/Charging Circuit, M/T 1995 Mazda 626

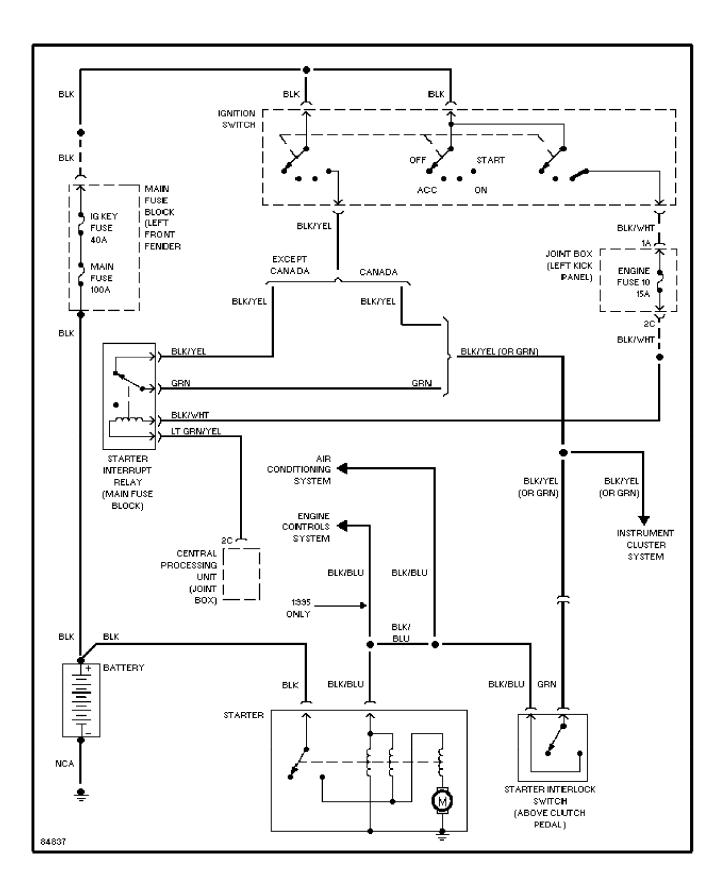


SYSTEM WIRING DIAGRAMS Charging Circuit 1995 Mazda 626

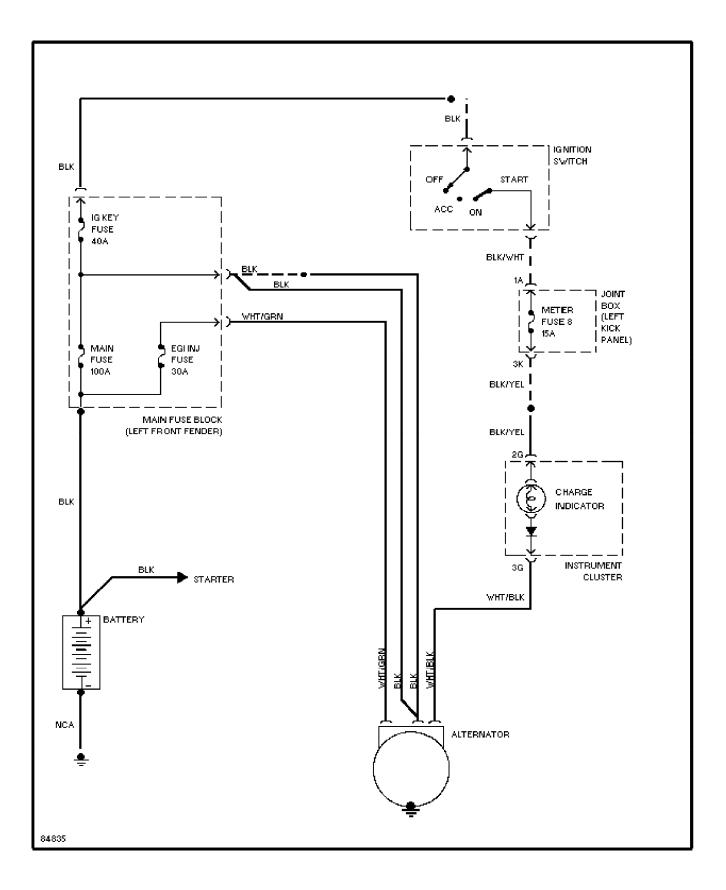

SYSTEM WIRING DIAGRAMS 2.5L, Starting Circuit, A/T 1995 Mazda 626

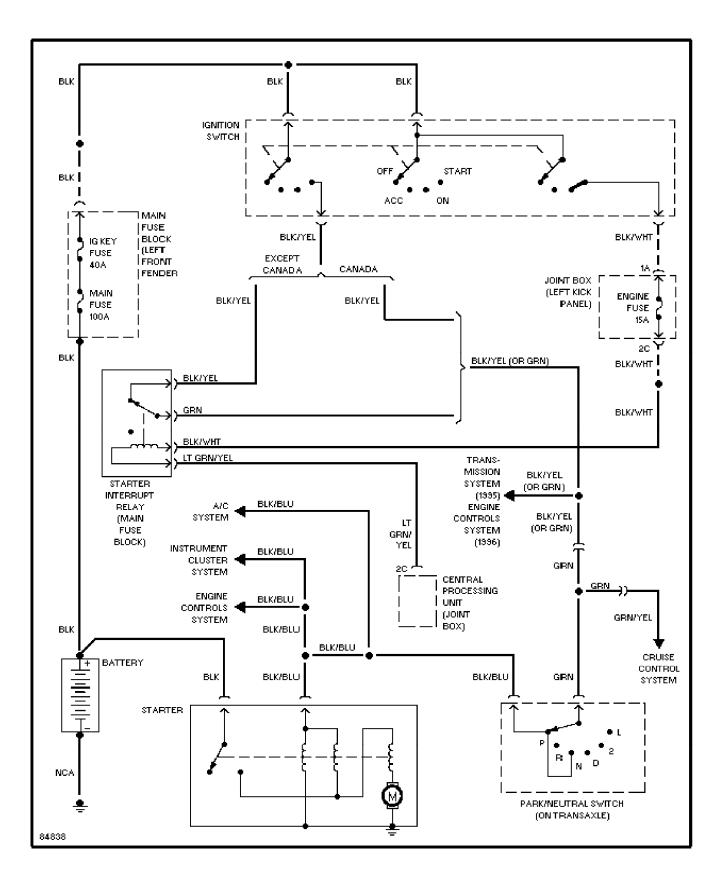


SYSTEM WIRING DIAGRAMS 2.5L, Starting Circuit, M/T 1995 Mazda 626

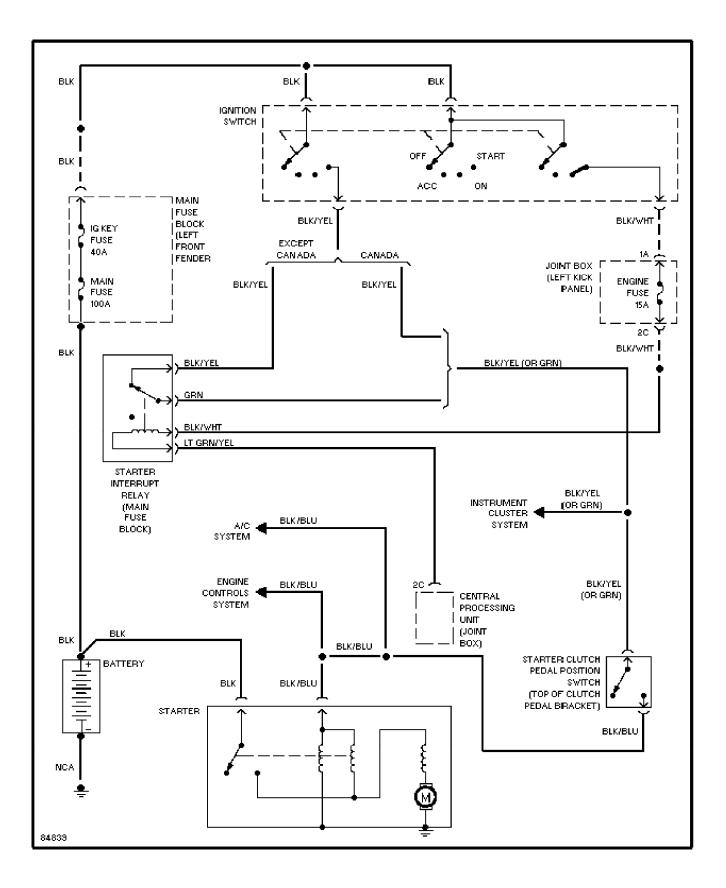


SYSTEM WIRING DIAGRAMS 2.5L, Starting/Charging Circuit, A/T 1995 Mazda 626


--

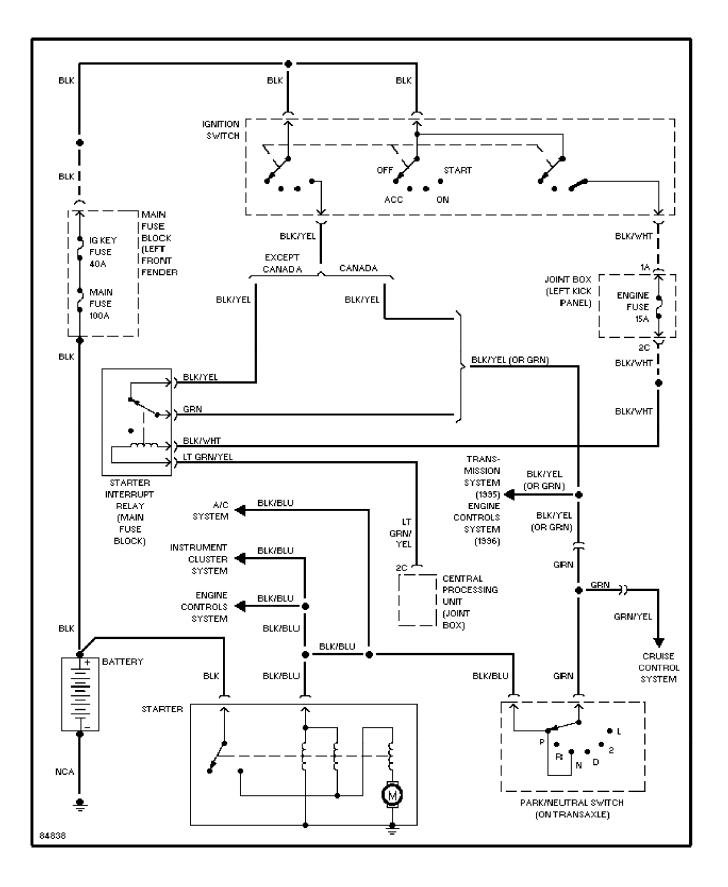


SYSTEM WIRING DIAGRAMS 2.5L, Starting/Charging Circuit, M/T 1995 Mazda 626

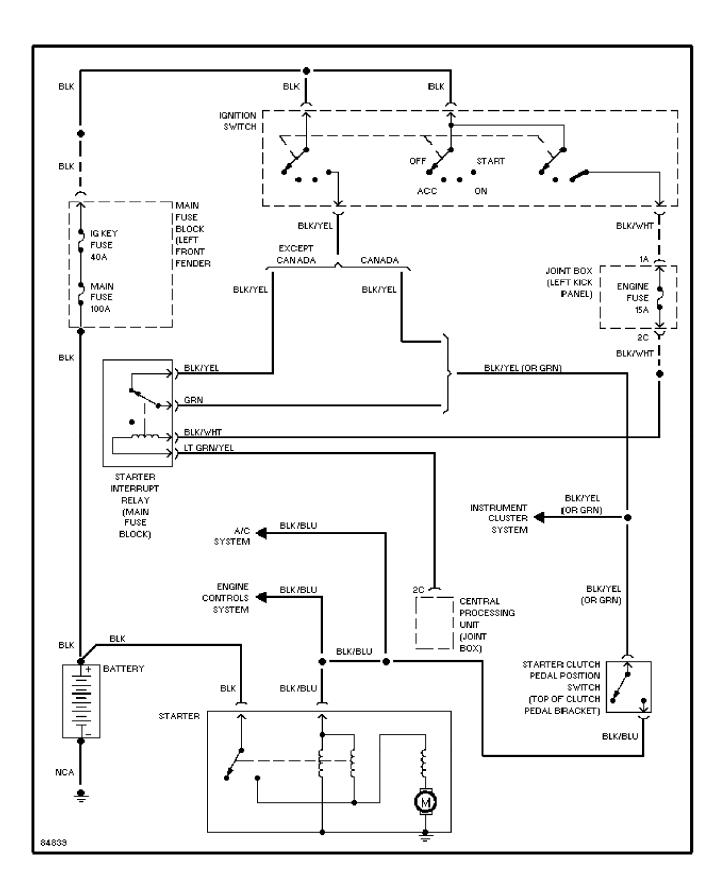


SYSTEM WIRING DIAGRAMS Charging Circuit 1995 Mazda 626

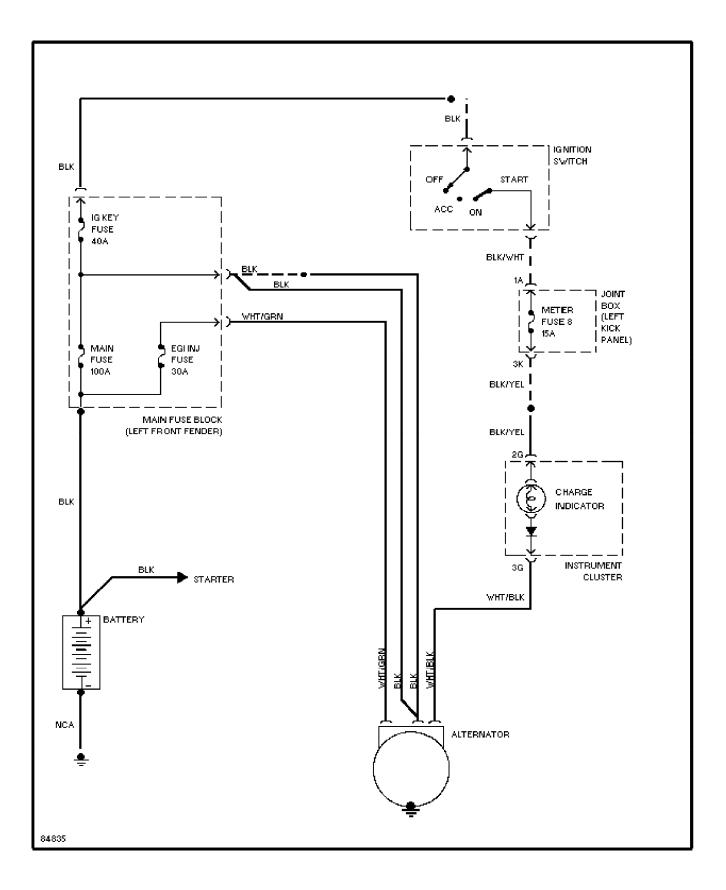

SYSTEM WIRING DIAGRAMS Supplemental Restraint Circuit 1995 Mazda 626

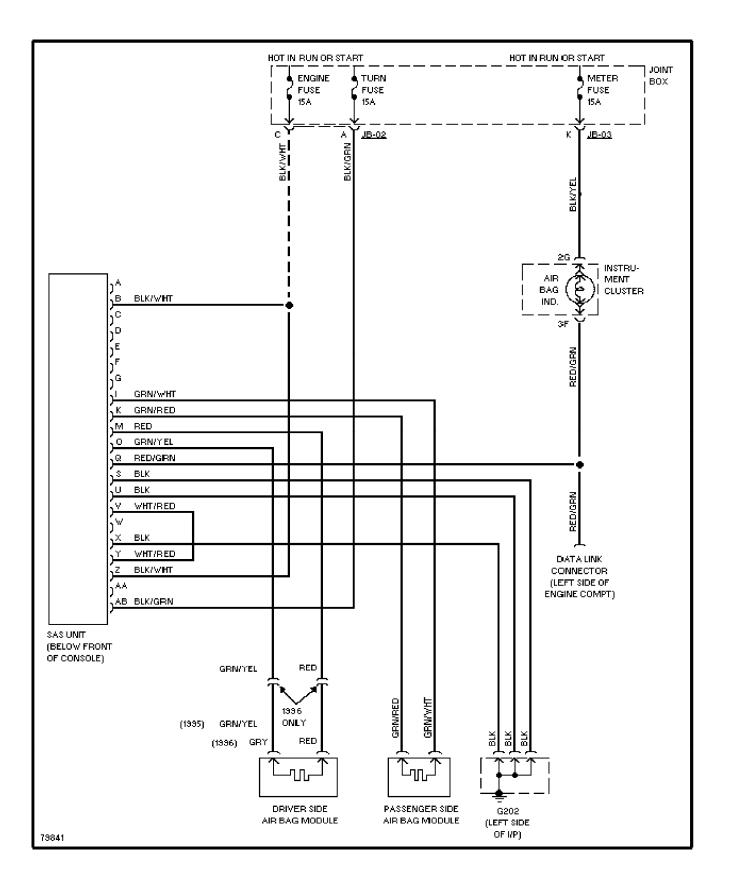

SYSTEM WIRING DIAGRAMS 2.0L, Transmission Circuit 1995 Mazda 626

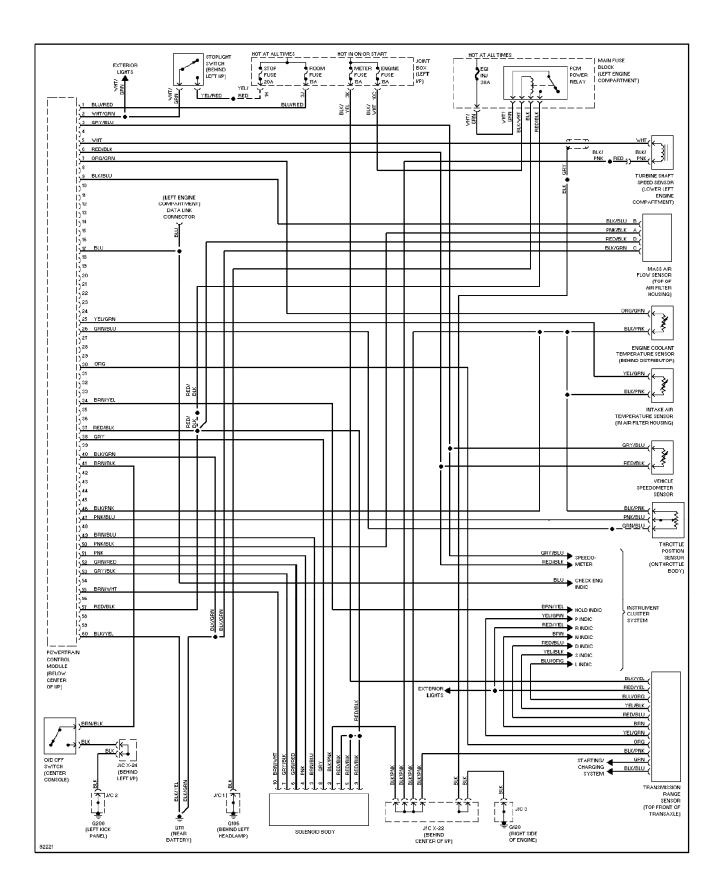

SYSTEM WIRING DIAGRAMS 2.5L, Transmission Circuit 1995 Mazda 626

