2007 MAZDA CX-9

#### **2007 MAZDA**

CX-9

# **BUZZERS, RELAYS & TIMERS**

#### **BUZZERS, RELAYS & TIMERS LOCATION**

| Component                   | Location                         |
|-----------------------------|----------------------------------|
| A/C Relay                   | In main fuse block.              |
| BACK-UP LIGHT Relay         | In main fuse block.              |
| COOLING FAN Relay No. 1     | In main fuse block.              |
| COOLING FAN Relay No. 2     | In main fuse block.              |
| FAN Relay                   | In main fuse block.              |
| FRONT BLOWER Relay          | In main fuse block.              |
| FRONT FOG LIGHT Relay (2)   | In main fuse block.              |
| FUEL PUMP Relay             | In main fuse block.              |
| H/L HI Relay                | In main fuse block.              |
| H/L LOW Relay               | In main fuse block.              |
| HORN Relay                  | In main fuse block.              |
| Keyless Beeper              | Left rear of engine compartment. |
| MAIN Relay No.1             | In main fuse block.              |
| MAIN Relay No.2             | In main fuse block.              |
| PLG Buzzer                  | Right side of tailgate.          |
| REAR BLOWER Relay           | In main fuse block.              |
| REAR WINDOW DEFROSTER Relay | In main fuse block.              |
| SEAT WARMER LH Relay        | In main fuse block.              |
| SEAT WARMER RH Relay        | In main fuse block.              |
| STARTER Relay               | In main fuse block.              |
| TNS Relay                   | In main fuse block.              |

## **CIRCUIT PROTECTION DEVICES**

#### CIRCUIT PROTECTION DEVICES LOCATION

| Component        | Location  |
|------------------|---|
| Fuse Block       | Behind right side of dash. See Fig. 14.                 |
| Fuse & Relay Box | Center front of engine compartment. See <b>Fig. 8</b> . |
| Main Fuse Block  | Left rear of engine compartment. See <b>Fig. 4</b> .    |

## **CONTROL UNITS**

#### **CONTROL UNITS LOCATION**

2007 MAZDA CX-9

| Component                         | Location  |
|-----------------------------------|---|
| Auto Light-Off Control Module     | Behind left side of dash. See Fig. 27.                      |
| Auto Light/Wiper Control Module   | Behind left side of dash. See Fig. 27.                      |
| AWD Control Module                | Behind left end of dash. See Fig. 37.                       |
| BCM                               | Behind left kick panel. See Fig. 40.                        |
| Car-Navigation Unit               | Right rear of luggage compartment. See Fig. 51.             |
| DSC/RSC HU/CM                     | Left rear corner of engine compartment. See <b>Fig. 5</b> . |
| Fan Control Module No. 1          | Behind left cooling fan assembly.                           |
| Fan Control Module No. 2          | Behind right cooling fan assembly.                          |
| Hands-Free Telephone Unit         | Behind right side of dash. See Fig. 16.                     |
| Keyless Control Module            | Behind left side of dash. See Fig. 28.                      |
| Keyless Receiver                  | Behind left side of dash. See Fig. 25.                      |
| PCM                               | Left rear corner of engine compartment. See <b>Fig. 7</b> . |
| PLG Control Module                | Left side of luggage compartment. See <b>Fig. 64</b> .      |
| Position Memory Control Module    | Under driver's seat. See Fig. 44.                           |
| PVC Valve Heater Control          | Center rear of engine compartment.                          |
| RES Unit                          | Center of roof. See Fig. 53.                                |
| SAS Control Module                | Under front of center console. See Fig. 20.                 |
| Seat Weight Sensor Control Module | Under front passenger's seat. See <b>Fig. 46</b> .          |
| TCM                               | Left front of engine compartment. See <u>Fig. 2</u> .       |

# **MOTORS**

#### **MOTORS LOCATION**

| Component                                | Location                           |
|--|------------------------------------|
| Air Intake Actuator                      | Behind right side of dash.         |
| Closer Motor                             | Lower center of liftgate.          |
| Cooling Fan Motor No. 1                  | Left front of engine compartment.  |
| Cooling Fan Motor No. 2                  | Right front of engine compartment. |
| Door Lock Actuator (Left/Right Front)    | At rear of respective front door.  |
| Door Lock Actuator (Left/Right Rear)     | At rear of respective rear door.   |
| Driver Side Front Air Mix Actuator       | Left side of HVAC unit.            |
| Front Airflow Mode Actuator              | Top left side of HVAC unit.        |
| Front Blower Motor                       | Under right side of dash.          |
| Fuel Pump Unit                           | Under rear seat, on fuel tank.     |
| Headlight Leveling Actuator (Left/Right) | In respective headlight assembly.  |
| Liftgate Latch & Lock Actuator           | Lower center of liftgate.          |
| Passenger Side Front Air Mix Actuator    | Right side of HVAC unit.           |
| PLG Drive Unit                           | Left side of luggage compartment.  |
| Power Window Motor (Left/Right Front)    | In respective front door.          |
| Power Window Motor (Left/Right Rear)     | In respective rear door.           |

2007 MAZDA CX-9

| Rear Airflow Mode Actuator | Under rear of center console.    |
|----------------------------|----------------------------------|
| Rear Air Mix Actuator      | Under rear of center console.    |
| Rear Blower Motor          | Under center console.            |
| Rear Washer Motor          | In washer fluid reservoir.       |
| Rear Wiper Motor           | Center of liftgate.              |
| Recliner Motor             | In driver's seat back.           |
| Slider Motor               | Under driver's seat.             |
| Starter                    | Rear of engine.                  |
| Sun Roof Motor             | Center front of roof.            |
| Tilt Motor (Front)         | Under driver's seat.             |
| Tilt Motor (Rear)          | Under driver's seat.             |
| Windshield Washer Motor    | In washer fluid reservoir.       |
| Windshield Wiper Motor     | Left rear of engine compartment. |

## **SENDING UNITS & SENSORS**

#### SENDING UNITS & SENSORS LOCATION

| Component                                   | Location   |
|---|--|
| ABS Wheel-Speed Sensor (Left/Right Front)   | At respective front wheelwell.                             |
| ABS Wheel-Speed Sensor (Left/Right Rear)    | At respective rear wheelwell.                              |
| Accelerator Pedal Position Sensor           | Top of accelerator pedal assembly.                         |
| Ambient Temperature Sensor                  | Center front of engine compartment.                        |
| Brake Fluid Level Sensor                    | Left rear of engine compartment, in brake fluid reservoir. |
| Cabin Temperature Sensor                    | Under left side of dash.                                   |
| Camshaft Position Sensor (Left)             | Rear of left cylinder bank.                                |
| Camshaft Position Sensor (Right)            | Rear of right cylinder bank.                               |
| CHT Sensor                                  | Top right front of engine.                                 |
| Combined Sensor                             | At right "C" pillar.                                       |
| Crankshaft Position Sensor                  | Left rear of engine.                                       |
| Crash Zone Sensor                           | Center front of engine compartment.                        |
| Driver-Side Side Air Bag Sensor No. 1       | Near base of left "B" pillar.                              |
| Driver-Side Side Air Bag Sensor No. 2       | Near base of left "C" pillar.                              |
| Fuel Gauge Sender Sub Unit                  | Under rear seat, on fuel tank.                             |
| Fuel Tank Pressure Sensor                   | Under rear seat, on fuel tank.                             |
| HO2S (Left Front)                           | Left side of engine.                                       |
| HO2S (Left Rear)                            | Left rear of engine.                                       |
| HO2S (Right Front)                          | Right side of engine.                                      |
| HO2S (Right Rear)                           | Right side of engine.                                      |
| Knock Sensor                                | On right cylinder bank.                                    |
| Mass Air Flow/Intake Air Temperature Sensor | Rear of engine.  |

2007 MAZDA CX-9

| Passenger-Side Side Air Bag Sensor No.1  | Near base of right "B" pillar.                   |
|--|--|
| Passenger-Side Side Air Bag Sensor No. 2 | Near base of right "C" pillar.                   |
| PLG Touch Sensor (Left/Right)            | At respective side of tailgate.                  |
| Rain Sensor                              | Forward of interior rearview mirror.             |
| Rear Evaporator Temperature Sensor       | Under center console.                            |
| Seat Recline Position Sensor             | In driver's seat back.                           |
| Seat Slide Position Sensor               | Under driver's seat.                             |
| Seat Track Position Sensor               | Under driver's seat.                             |
| Seat Weight Sensor (Left/Right)          | Under respective side of front passenger's seat. |
| Solar Radiation Sensor                   | Top left side of dash.                           |
| Steering Angle Sensor                    | In steering column.                              |
| Tilt Position Sensor (Front)             | Under driver's seat.                             |
| Tilt Position Sensor (Rear)              | Under driver's seat.                             |
| Washer Fluid-Level Sensor                | In washer fluid reservoir.                       |

## **SOLENOIDS & SOLENOID VALVES**

#### SOLENOIDS & SOLENOID VALVES LOCATION

| Component                    | Location  |
|------------------------------|---|
| AWD Solenoid                 | Near rear differential.                           |
| Canister Vent Solenoid Valve | Under left side of vehicle, forward of fuel tank. |
| Fuel Injectors No. 1, 2, & 3 | On right cylinder bank.                           |
| Fuel Injectors No. 4, 5 & 6  | On left cylinder bank.                            |
| Magnetic Clutch              | Left front of engine.                             |
| Oil Control Valve (Left)     | Front of left cylinder bank.                      |
| Oil Control Valve (Right)    | Front of right cylinder bank.                     |
| Purge Solenoid Valve         | Rear of engine compartment.                       |
| Steering Lock Unit           | In steering column.                               |

#### **SWITCHES**

#### **SWITCHES LOCATION**

| Component                                | Location  |
|--|---|
| Brake Switch No. 1                       | On brake pedal assembly.                          |
| Brake Switch No. 2                       | On brake pedal assembly.                          |
| Buckle Switch (Driver/Passenger Side)    | Integral to respective seat belt buckle assembly. |
| Door Lock-Link Switch (Left/Right Front) | In respective front door.                         |
| Door Lock-Link Switch (Left/Right Rear)  | In respective rear door.                          |
| Door Switch (Left/Right Front)           | At respective "B" pillar.                         |
| Door Switch (Left/Right Rear)            | At respective "C" pillar.                         |
| Hood Latch Switch                        | Center front of engine compartment.               |

2007 MAZDA CX-9

| Horn Switch                    | In steering wheel.                        |
|--------------------------------|---|
| Key Reminder Switch            | In steering column.                       |
| Oil Pressure Switch            | Lower left front of engine.               |
| Parking Brake Switch           | Top of parking brake assembly.            |
| Power Steering Pressure Switch | Right front side of engine.               |
| Refrigerant Pressure Switch    | Right front corner of engine compartment. |

# **MISCELLANEOUS**

## MISCELLANEOUS LOCATION

| Component                                    | Location  |
|--|---|
| Audio Amplifier                              | Right side of luggage compartment.                  |
| Audiopilot Microphone                        | Behind left side of dash.                           |
| Capacitor (2)                                | Right rear of roof.                                 |
| Check Connector                              | Behind right side of dash. See <b>Fig. 15</b> .     |
| Clock Spring                                 | In steering column.                                 |
| Coil   | Behind left side of dash.                           |
| Data Link Connector-2                        | Under lower left side of dash. See <u>Fig. 30</u> . |
| Diode  | Under right side of dash.                           |
| Driver-Side Air Bag Module No. 1             | In steering wheel.                                  |
| Driver-Side Air Bag Module No. 2             | In steering wheel.                                  |
| Driver-Side Curtain Air Bag Module           | Top of left "D" pillar.                             |
| Driver-Side Pre-Tensioner Seat Belt          | Base of left "B" pillar.                            |
| Driver-Side Side Air Bag Module              | Left side of driver's seat back.                    |
| Front Power MOS FET                          | Near front blower motor.                            |
| Generator                                    | Left front of engine.                               |
| Horn (High)                                  | Left front of engine compartment.                   |
| Horn (Low)                                   | Right front of engine compartment.                  |
| Ignition Coils No. 1, 2 & 3                  | Top of right cylinder bank.                         |
| Ignition Coils No. 4, 5 & 6                  | Top of left cylinder bank.                          |
| Inverter                                     | Left side of luggage compartment.                   |
| Joint Connector (C-36)                       | Behind left end of dash. See <u>Fig. 36</u> .       |
| Joint Connector (C-37)                       | Behind left center of dash. See <u>Fig. 24</u> .    |
| Joint Connector (C-38)                       | Behind center of dash. See <u>Fig. 19</u> .         |
| Keyless Antenna (Exterior, Left/Right Front) | In respective front door.                           |
| Keyless Antenna (Exterior, Rear)             | Behind center of rear bumper.                       |
| Keyless Antenna (Interior, Front Center)     | Under middle of dash.                               |
| Keyless Antenna (Interior, Rear)             | Center front of luggage compartment.                |
| Keyless Antenna (Interior, Right Front)      | Under right side of dash.                           |
| Microphone                                   | Front center of roof.                               |
| Noise Filter                                 | Lower center of liftgate.                           |

2007 MAZDA CX-9

| Passenger-Side Air Bag Module No.1     | Behind right side of dash.                 |
|--|--|
| Passenger-Side Air Bag Module No.2     | Behind right side of dash.                 |
| Passenger-Side Curtain Air Bag Module  | Top of right "C" pillar.                   |
| Passenger-Side Pre-Tensioner Seat Belt | Base of right "B" pillar.                  |
| Passenger-Side Side Air Bag Module     | Right side of front passenger's seat back. |
| Power MOS FET                          | Under center console.                      |
| PVC Valve Heater Fitting               | Center rear of engine compartment.         |
| Rear Mount Camera                      | Left side of liftgate.                     |
| Throttle Body                          | Top rear of engine.                        |

# **CONNECTORS**

#### **CONNECTORS LOCATION**

| Component                 | Location  |
|---------------------------|---|
| C-03 (12 Pin)             | Left side of engine compartment. See <b>Fig. 6</b> .      |
| C-05 (14 Pin)             | Behind right kick panel. See <b>Fig. 13</b> .             |
| C-06 (Blue, 40 Pin)       | Behind left side of dash. See Fig. 29.                    |
| C-07 (14 Pin)             | Under front of center console. See Fig. 22.               |
| C-08 (16 Pin)             | Under left center of center console. See <b>Fig. 23</b> . |
| C-09 (14 Pin)             | Behind left kick panel. See <b>Fig. 39</b> .              |
| C-10 (16 Pin)             | Behind left kick panel. See <b>Fig. 38</b> .              |
| C-11 (56 Pin)             | Under front of center console. See <b>Fig. 21</b> .       |
| C-12 (34 Pin)             | Behind left kick panel. See Fig. 47.                      |
| C-13 (34 Pin)             | Behind right kick panel. See Fig. 34.                     |
| C-14 (14 Pin)             | At left "B" pillar. See Fig. 54.                          |
| C-15 (14 Pin)             | At right "B" pillar. See <b>Fig. 48</b> .                 |
| C-16 (Blue, 40 Pin)       | Behind left kick panel. See Fig. 41.                      |
| C-17 (16 Pin)             | Behind left kick panel. See Fig. 32.                      |
| C-18 (16 Pin)             | Behind left kick panel. See Fig. 31.                      |
| C-19 (14 Pin)             | Under driver's seat. See <u>Fig. 42</u> .                 |
| C-20 (14 Pin)             | Under front passenger's seat. See <b>Fig. 45</b> .        |
| C-21 (Blue, 40 Pin)       | At left "D" pillar. See <b>Fig. 63</b> .                  |
| C-23 (Light Gray, 24 Pin) | Right rear corner of vehicle. See <u>Fig. 52</u> .        |
| C-24 (24 Pin)             | Top of right "D" pillar. See <b>Fig. 56</b> .             |
| C-25 (Blue, 39 Pin)       | Behind right kick panel. See <b>Fig. 12</b> .             |
| C-26 (14 Pin)             | Center rear of roof. See <b>Fig. 58</b> .                 |
| C-27 (16 Pin)             | Center rear of roof. See <b>Fig. 60</b> .                 |
| C-28 (6 Pin)              | At left "D" pillar. See <u>Fig. 57</u> .                  |
| C-32 (14 Pin)             | In left rear door. See <u>Fig. 55</u> .                   |
| C-33 (14 Pin)             | In right rear door. See <b>Fig. 49</b> .                  |
| C-34 (16 Pin)             | Top front of engine. See <b>Fig. 9</b> .                  |

# 2007 Mazda CX-9 Grand Touring 2007 MAZDA CX-9

| C-35 (70 Pin)        | Right side of engine compartment. See Fig. 10. |
|----------------------|--|
| C-39 (Yellow, 4 Pin) | Behind right side of dash. See Fig. 17.        |
| C-40 (6 Pin)         | Under driver's seat. See <b>Fig. 43</b> .      |

#### **GROUNDS**

#### **GROUNDS LOCATION**

| Component             | Location   |
|-----------------------|--|
| G01 (Joint Connector) | Behind right kick panel. See <b>Fig. 35</b> .        |
| G3                    | Left side of engine compartment. See <u>Fig. 3</u> . |
| G5                    | Behind right headlight assembly. See Fig. 11.        |
| G7                    | Behind left headlight assembly. See <b>Fig. 1</b> .  |
| G9                    | Behind right center of dash. See Fig. 18.            |
| G10 (Joint Connector) | Behind left side of dash. See Fig. 26.               |
| G11 (Joint Connector) | Behind left side of dash. See <u>Fig. 33</u> .       |
| G12 (Joint Connector) | At right "C" pillar. See Fig. 50.                    |
| G13 (Joint Connector) | At left "C" pillar. See <u>Fig. 61</u> .             |
| G14                   | At left "D" pillar. See <u>Fig. 62</u> .             |
| G15                   | Center rear of roof. See <u>Fig. 59</u> .            |

## **COMPONENT LOCATION GRAPHICS**

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

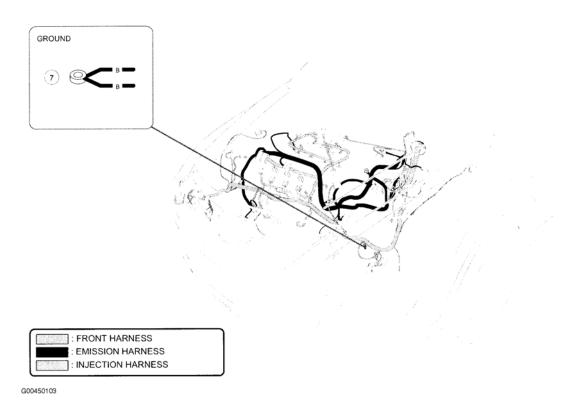


Fig. 1: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

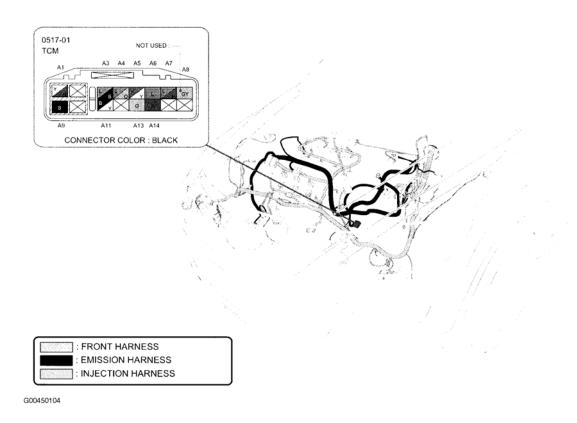


Fig. 2: Engine Compartment
Courtesy of MAZDA MOTORS CORP.


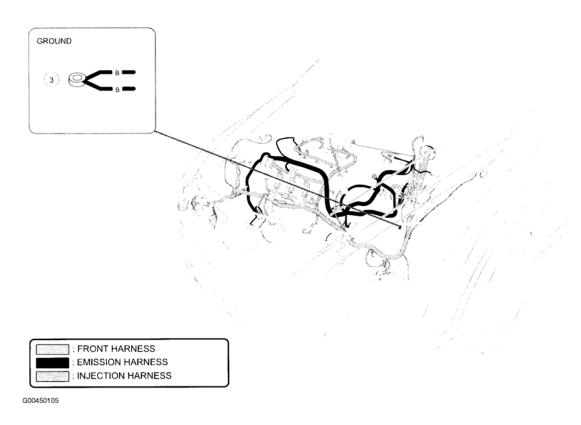


Fig. 3: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

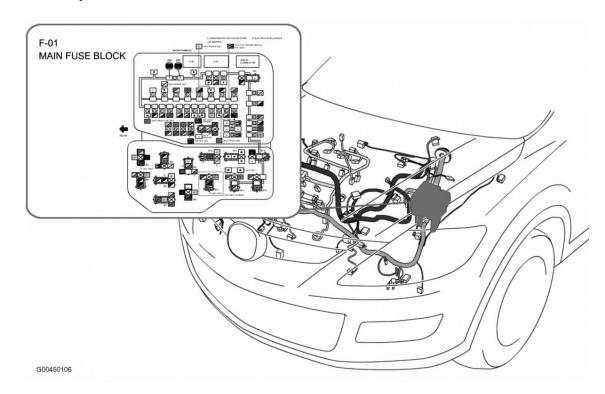

2007 MAZDA CX-9

Fig. 4: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

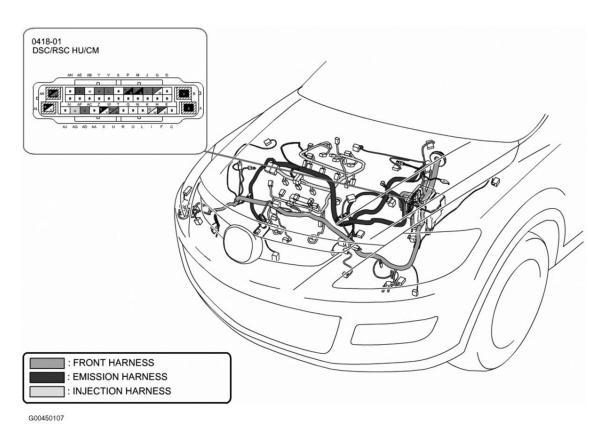


Fig. 5: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

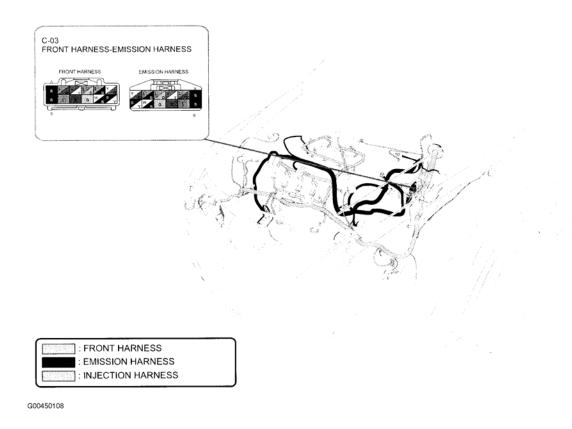


Fig. 6: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

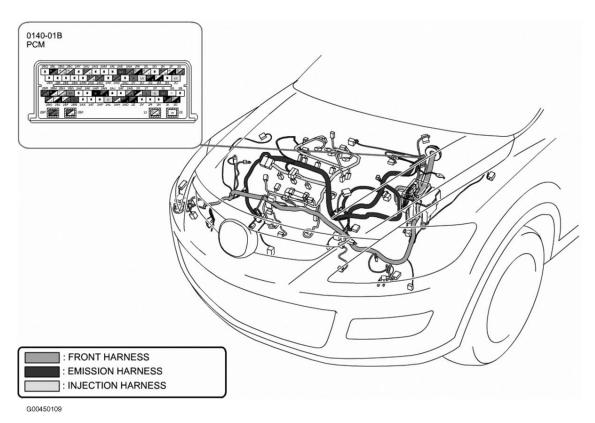


Fig. 7: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

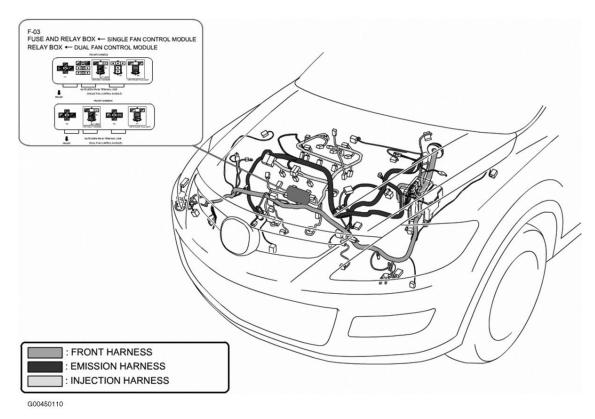


Fig. 8: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

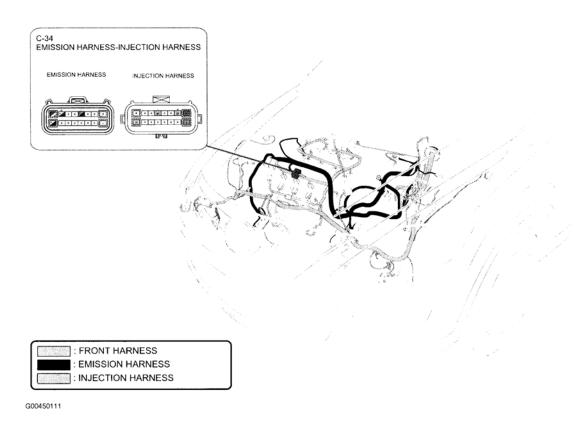


Fig. 9: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

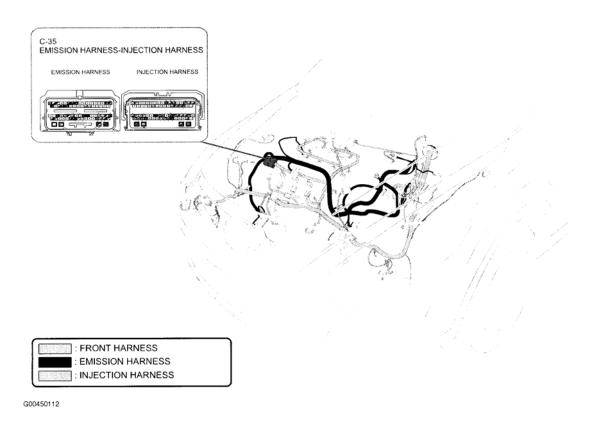


Fig. 10: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

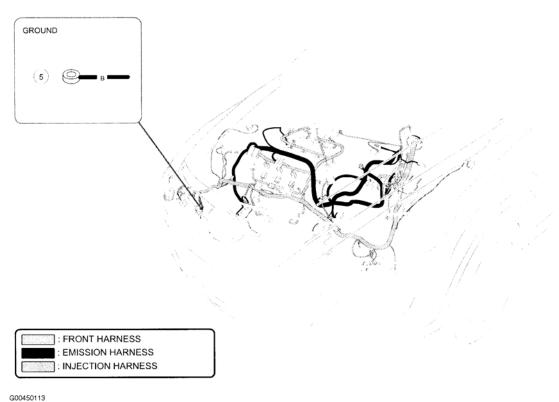


Fig. 11: Engine Compartment
Courtesy of MAZDA MOTORS CORP.

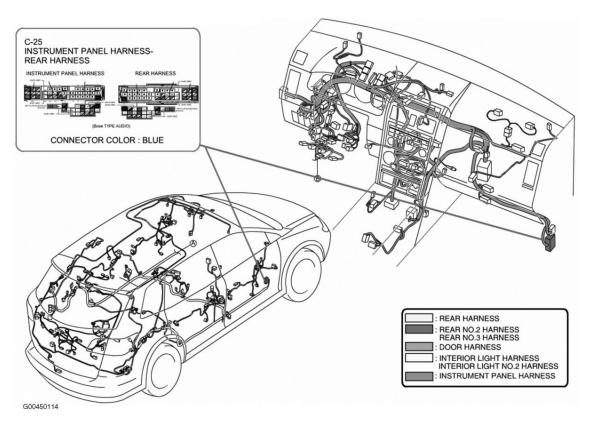


Fig. 12: Right Kick Panel Courtesy of MAZDA MOTORS CORP.

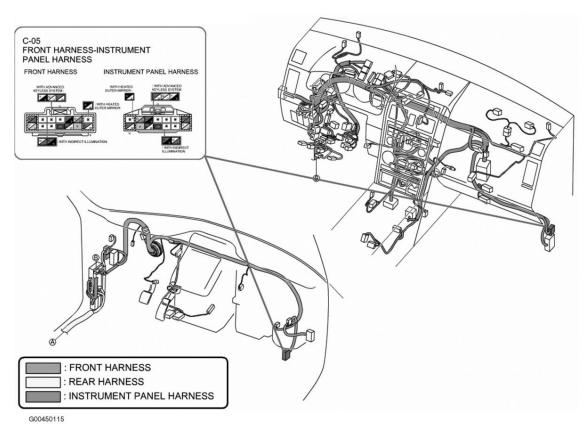


Fig. 13: Right Kick Panel Courtesy of MAZDA MOTORS CORP.

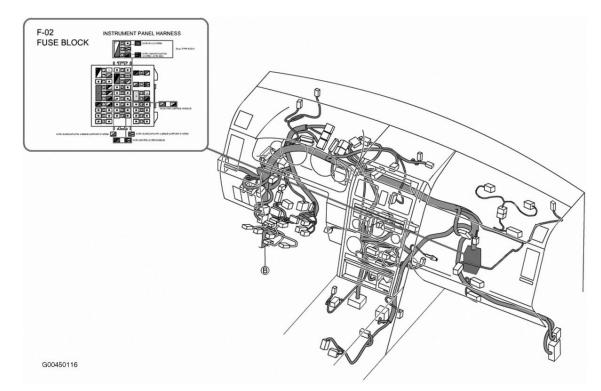


Fig. 14: Dash Courtesy of MAZDA MOTORS CORP.

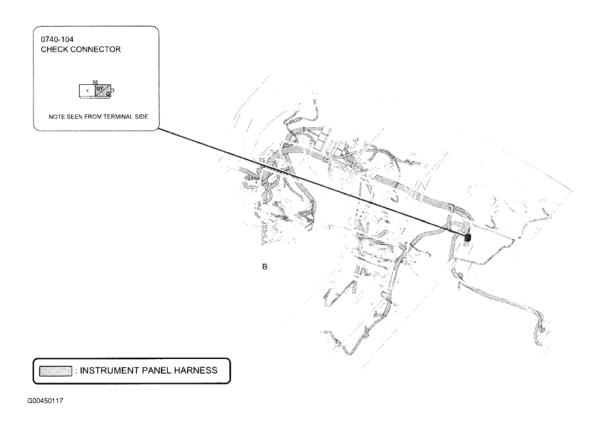


Fig. 15: Dash Courtesy of MAZDA MOTORS CORP.

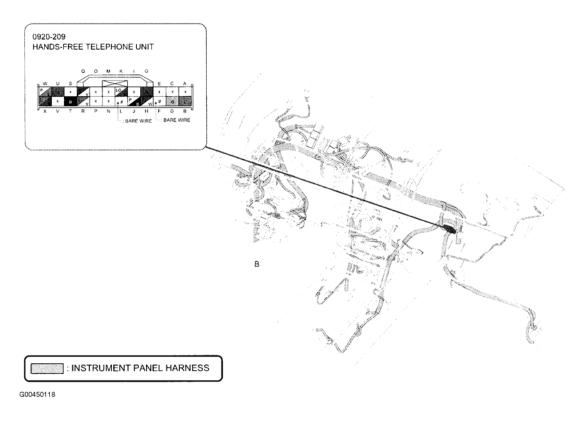


Fig. 16: Dash Courtesy of MAZDA MOTORS CORP.

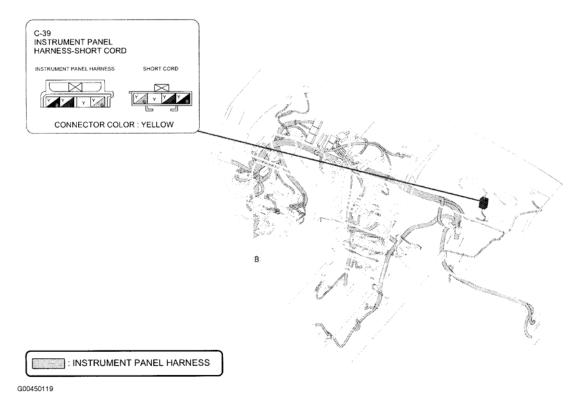


Fig. 17: Dash Courtesy of MAZDA MOTORS CORP.

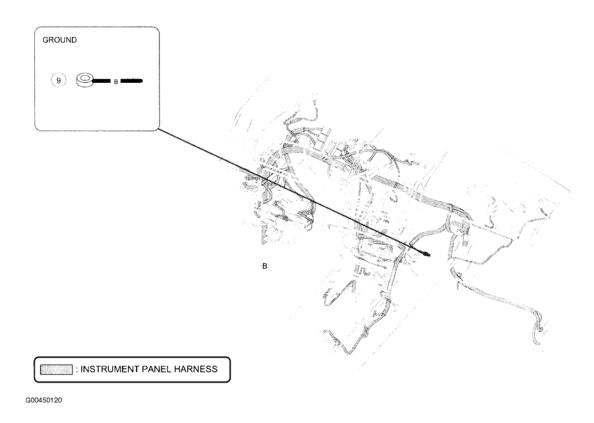


Fig. 18: Dash Courtesy of MAZDA MOTORS CORP.

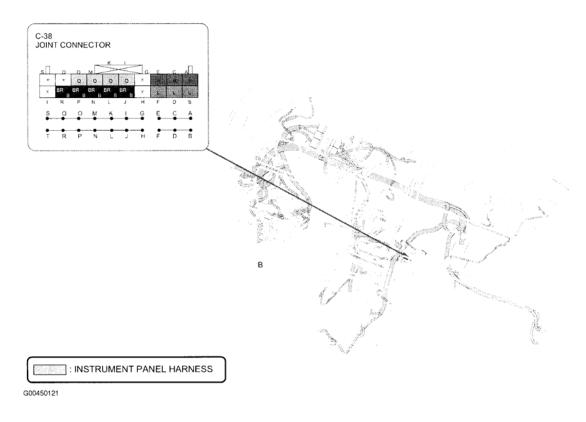


Fig. 19: Dash Courtesy of MAZDA MOTORS CORP.

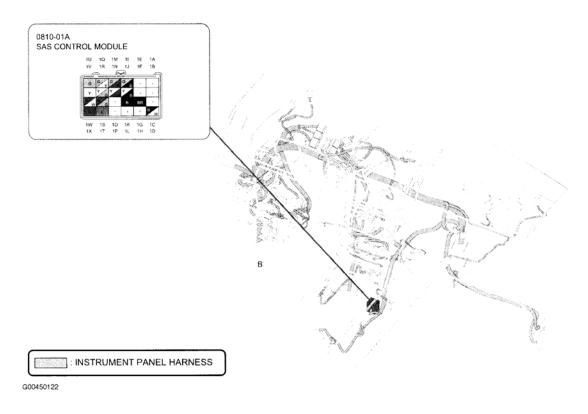


Fig. 20: Center Console Courtesy of MAZDA MOTORS CORP.


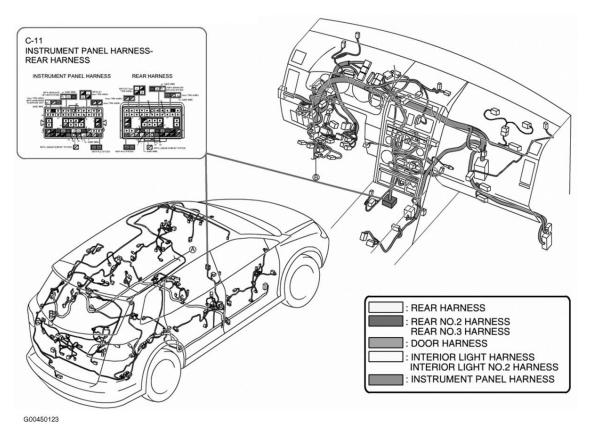


Fig. 21: Center Console Courtesy of MAZDA MOTORS CORP.

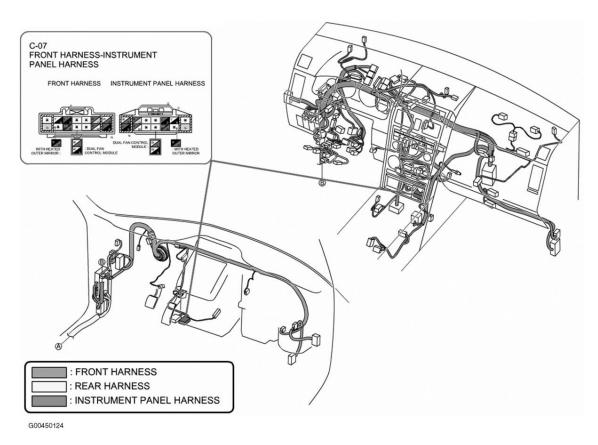

<u>Fig. 22: Center Console</u> Courtesy of MAZDA MOTORS CORP.


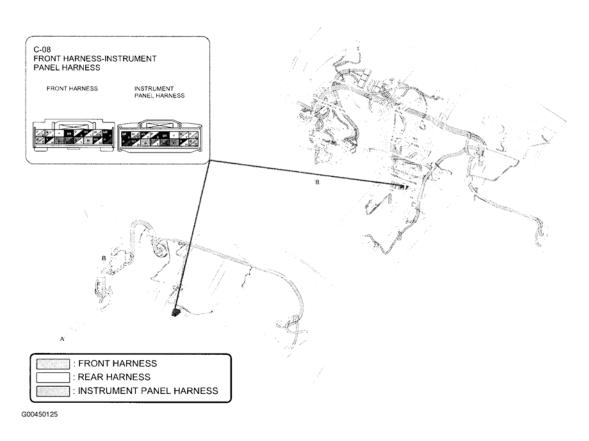


Fig. 23: Center Console Courtesy of MAZDA MOTORS CORP.

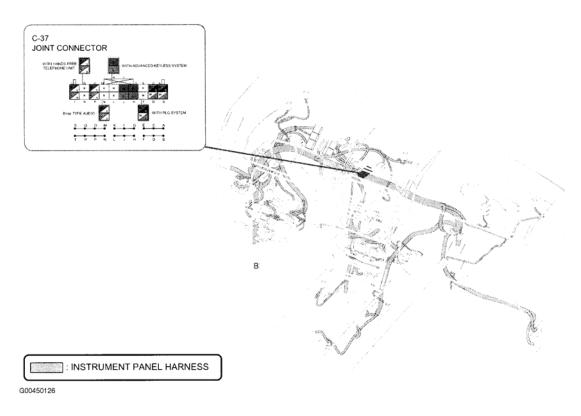

<u>Fig. 24: Dash</u> Courtesy of MAZDA MOTORS CORP.

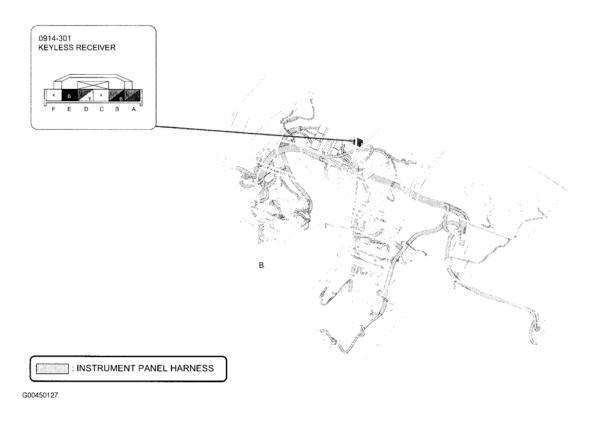


Fig. 25: Dash Courtesy of MAZDA MOTORS CORP.

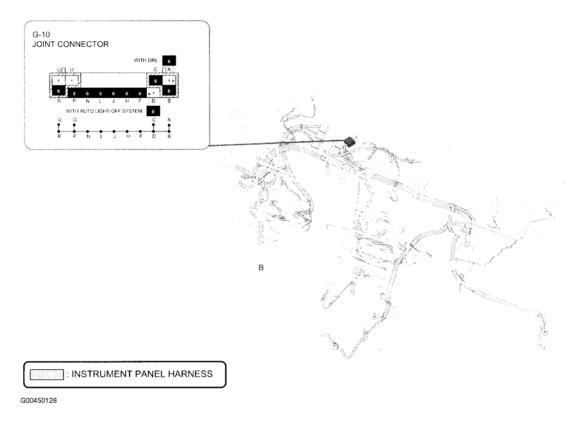


Fig. 26: Dash
Courtesy of MAZDA MOTORS CORP.

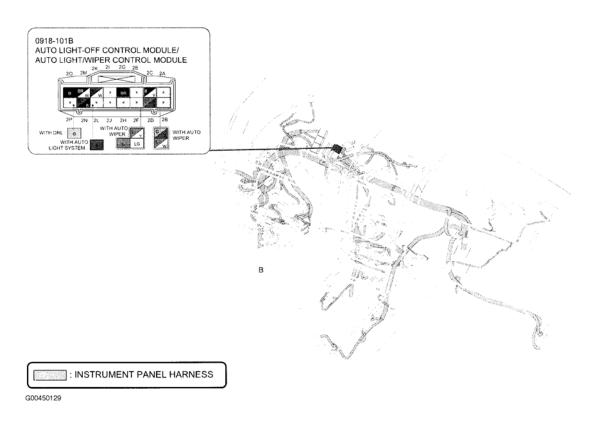


Fig. 27: Dash Courtesy of MAZDA MOTORS CORP.



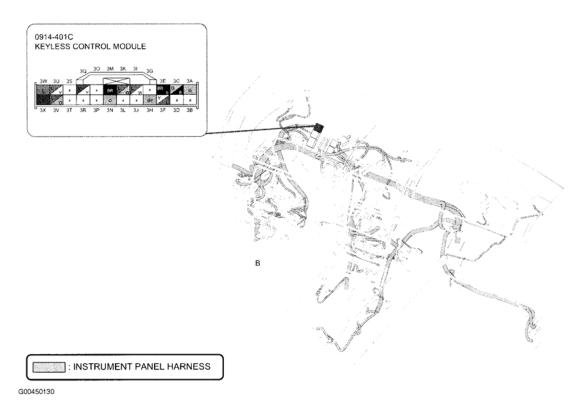


Fig. 28: Dash Courtesy of MAZDA MOTORS CORP.

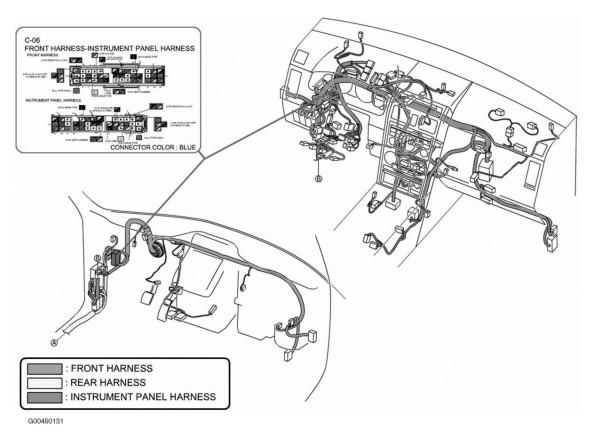

<u>Fig. 29: Dash</u> Courtesy of MAZDA MOTORS CORP.

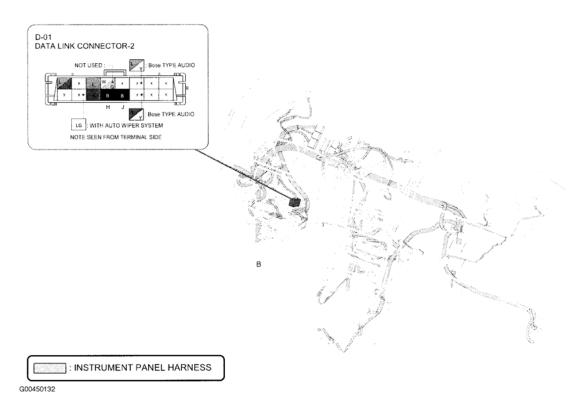

<u>Fig. 30: Dash</u> Courtesy of MAZDA MOTORS CORP.

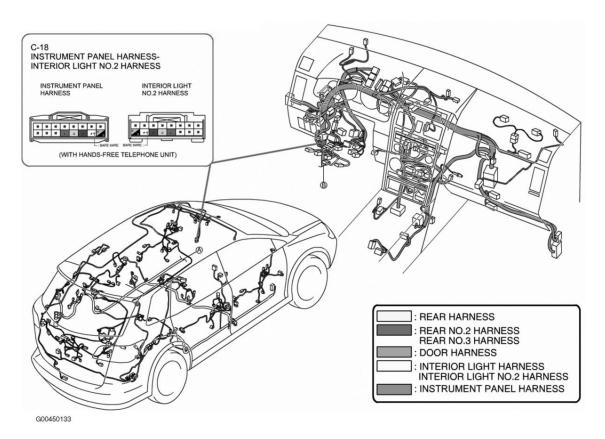


Fig. 31: Left Kick Panel Courtesy of MAZDA MOTORS CORP.

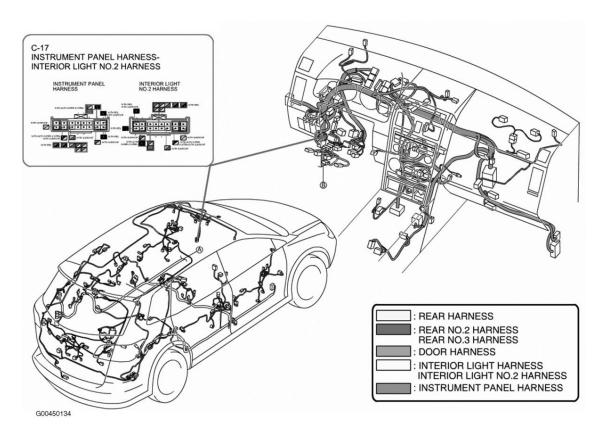


Fig. 32: Left Kick Panel Courtesy of MAZDA MOTORS CORP.

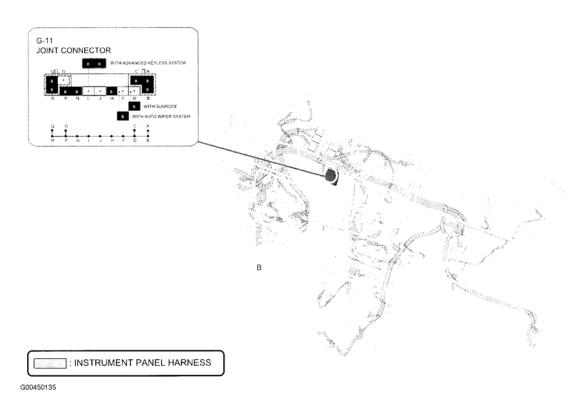


Fig. 33: Dash Courtesy of MAZDA MOTORS CORP.


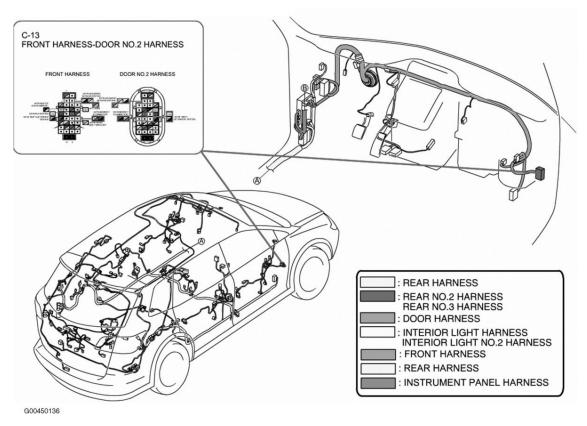


Fig. 34: Right Kick Panel Courtesy of MAZDA MOTORS CORP.

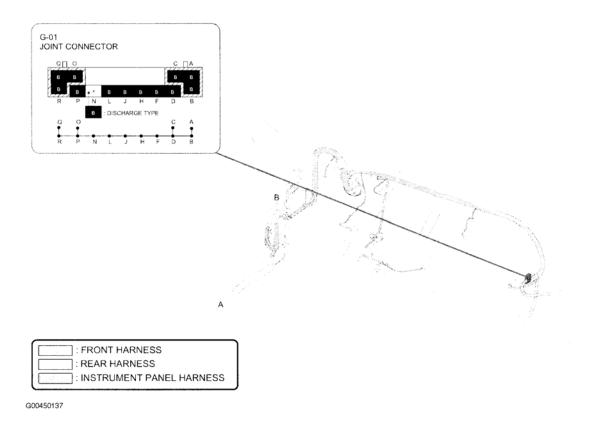

<u>Fig. 35: Right Kick Panel</u> Courtesy of MAZDA MOTORS CORP.

2007 MAZDA CX-9



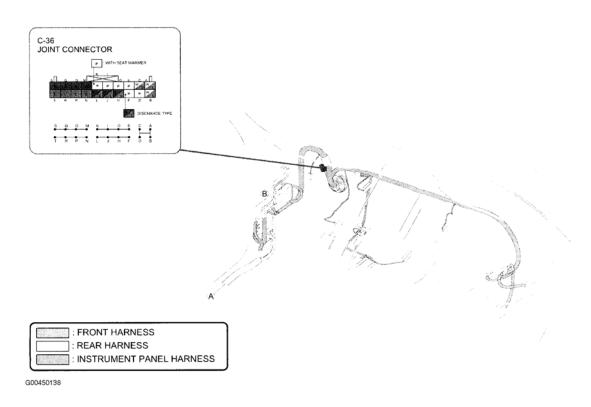


Fig. 36: Dash Courtesy of MAZDA MOTORS CORP.

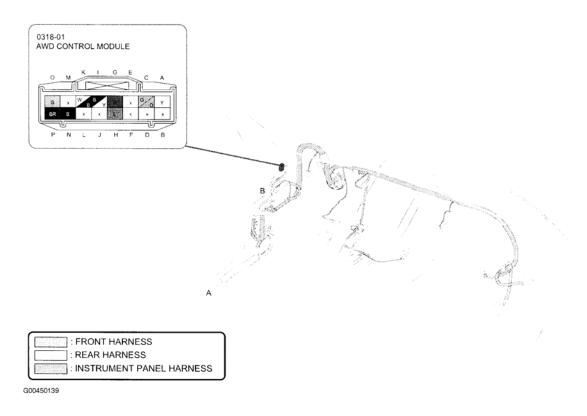

<u>Fig. 37: Dash</u> Courtesy of MAZDA MOTORS CORP.

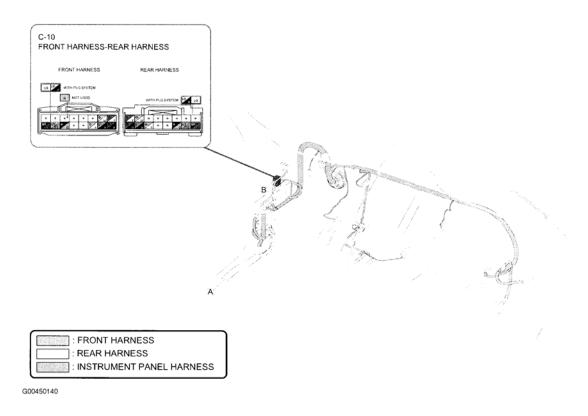

<u>Fig. 38: Left Kick Panel</u> Courtesy of MAZDA MOTORS CORP.

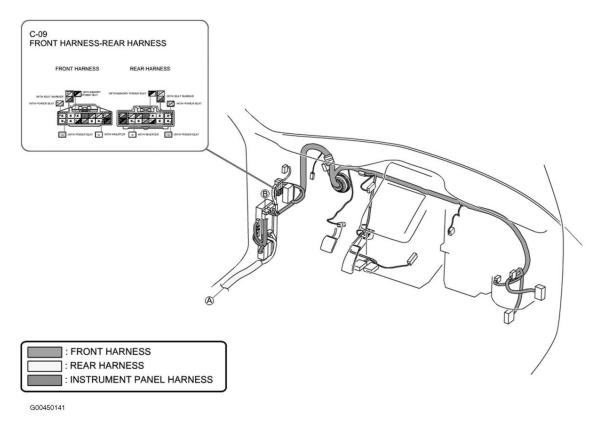


Fig. 39: Left Kick Panel Courtesy of MAZDA MOTORS CORP.

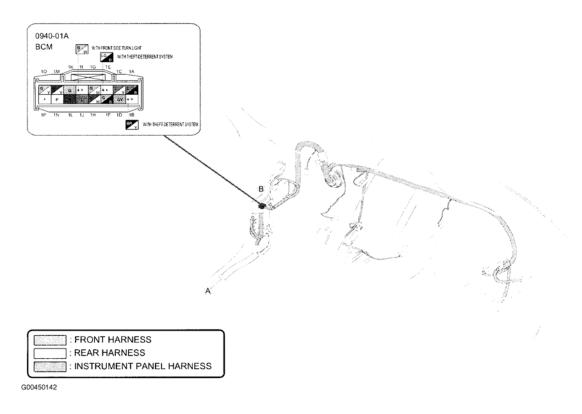


Fig. 40: Left Kick Panel Courtesy of MAZDA MOTORS CORP.

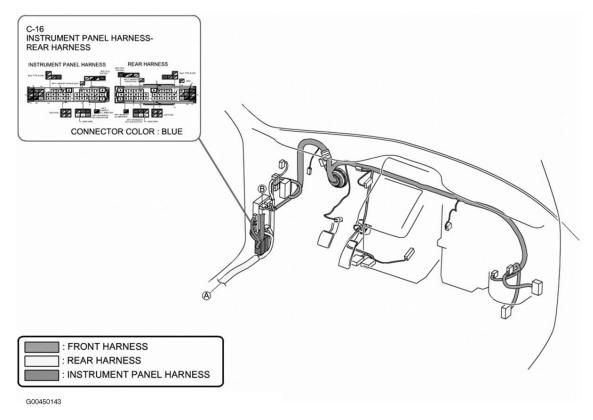


Fig. 41: Left Kick Panel Courtesy of MAZDA MOTORS CORP.



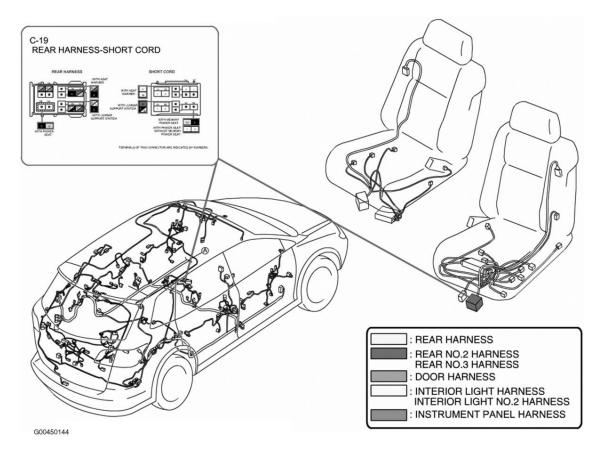


Fig. 42: Under Driver's Seat Courtesy of MAZDA MOTORS CORP.

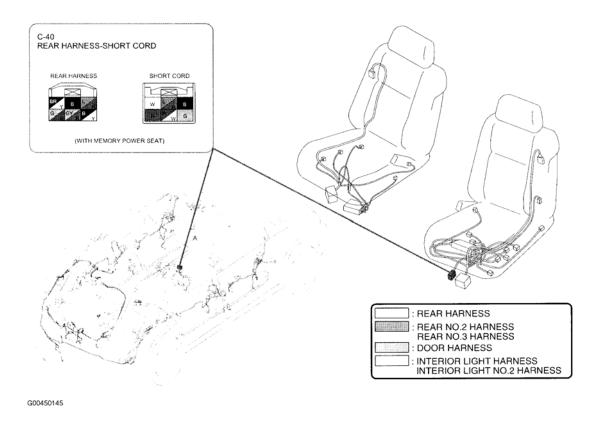

<u>Fig. 43: Under Driver's Seat</u> Courtesy of MAZDA MOTORS CORP.

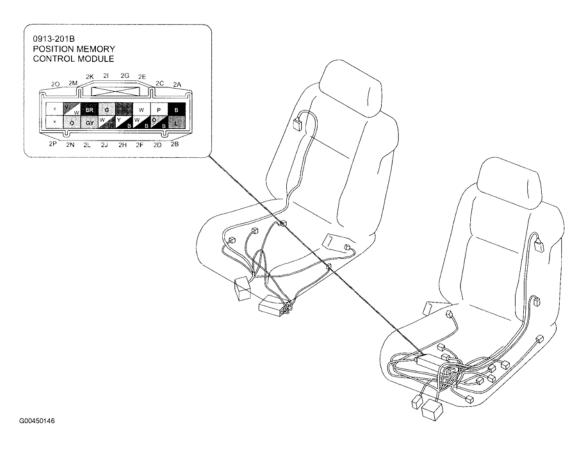

<u>Fig. 44: Driver's Seat</u> Courtesy of MAZDA MOTORS CORP.


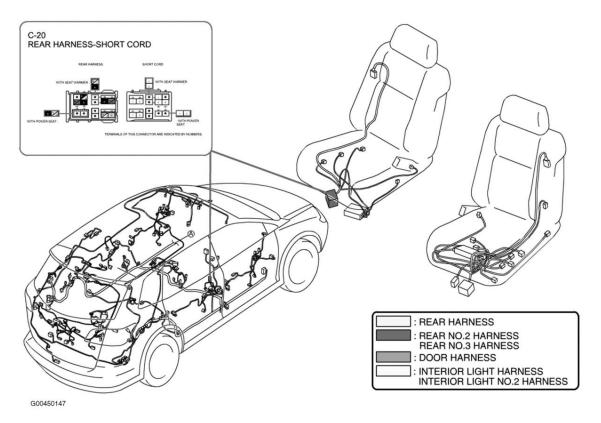


Fig. 45: Under Front Passenger's Seat Courtesy of MAZDA MOTORS CORP.

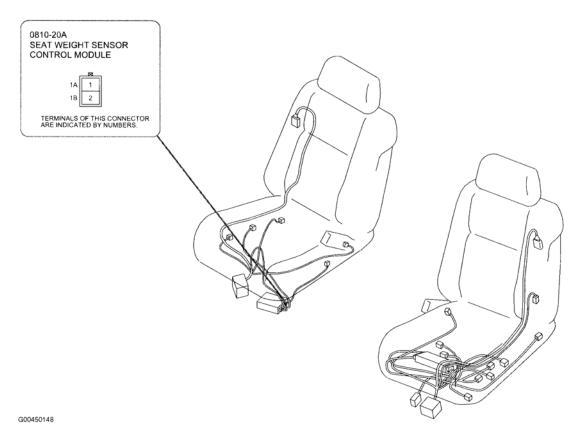

<u>Fig. 46: Front Passenger's Seat</u> Courtesy of MAZDA MOTORS CORP.

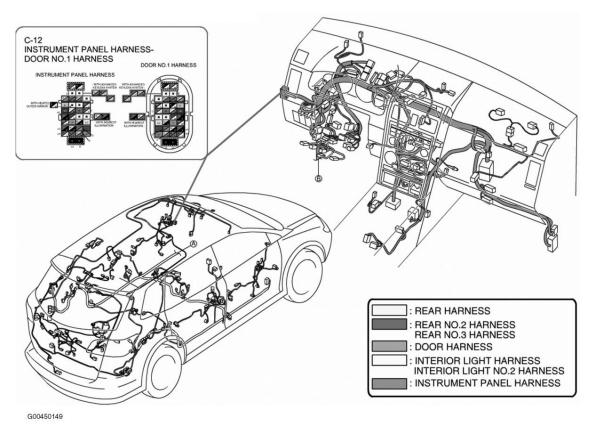


Fig. 47: Left Kick Panel Courtesy of MAZDA MOTORS CORP.

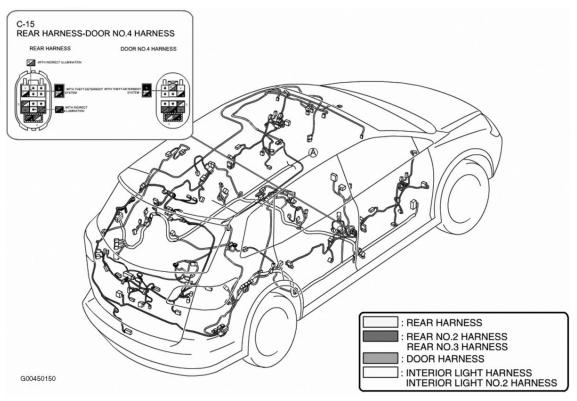


Fig. 48: Right Side Of Vehicle Courtesy of MAZDA MOTORS CORP.

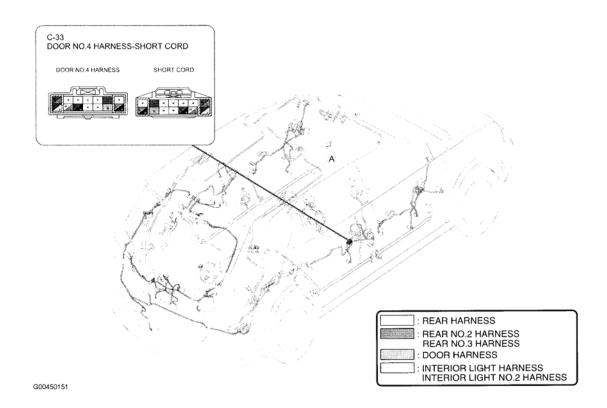


Fig. 49: Right Rear Door
Courtesy of MAZDA MOTORS CORP.

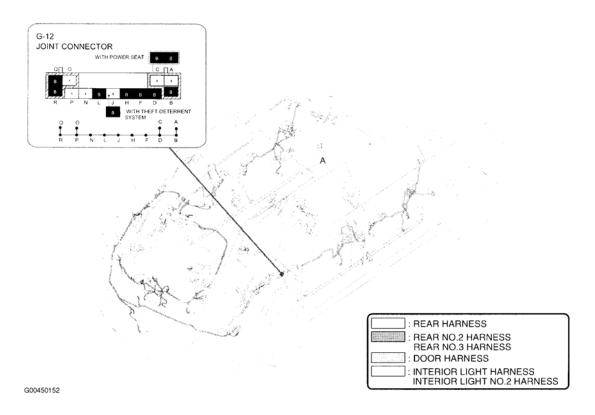


Fig. 50: Right Side Of Vehicle Courtesy of MAZDA MOTORS CORP.

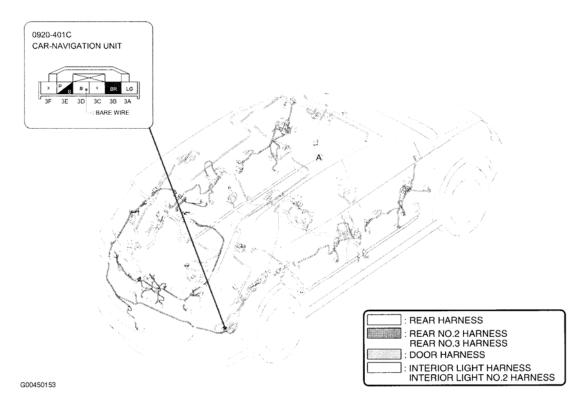


Fig. 51: Right Rear Of Vehicle Courtesy of MAZDA MOTORS CORP.

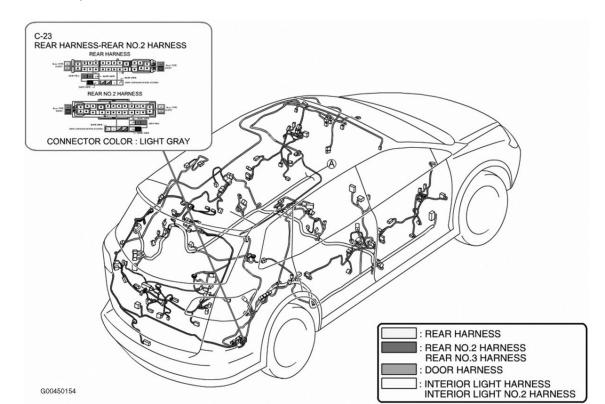


Fig. 52: Right Rear Of Vehicle Courtesy of MAZDA MOTORS CORP.


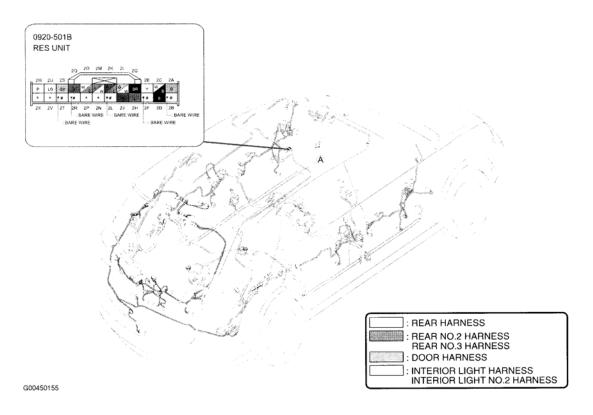


Fig. 53: Roof Courtesy of MAZDA MOTORS CORP.

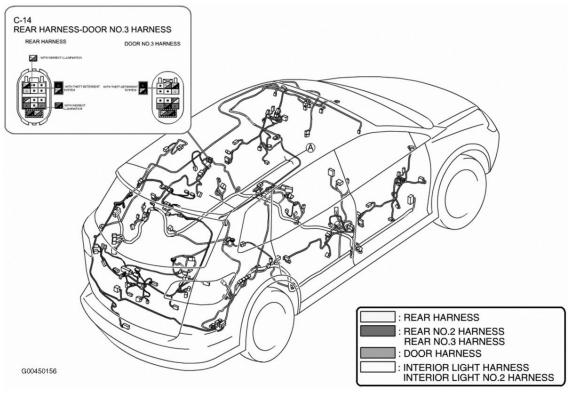

<u>Fig. 54: Left Side Of Vehicle</u> Courtesy of MAZDA MOTORS CORP.

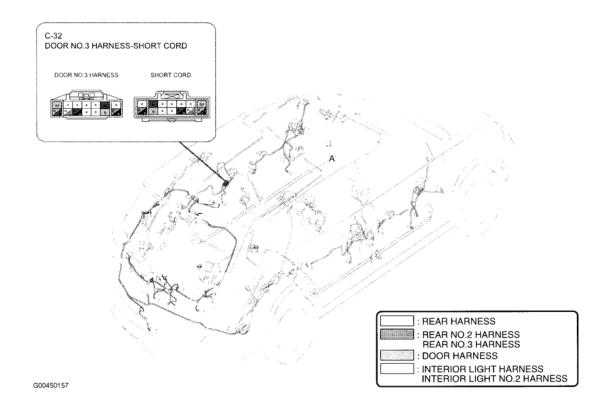


Fig. 55: Left Rear Door
Courtesy of MAZDA MOTORS CORP.

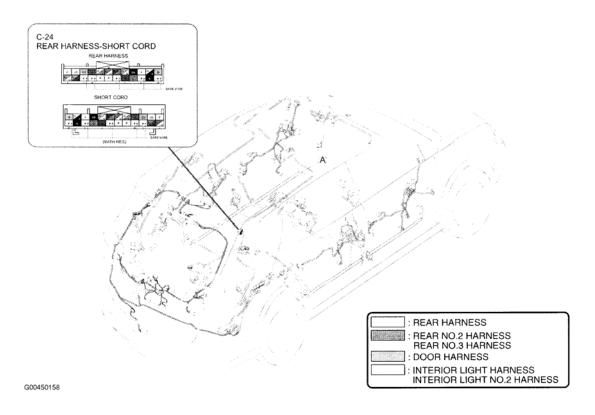


Fig. 56: Right Side Of Vehicle Courtesy of MAZDA MOTORS CORP.


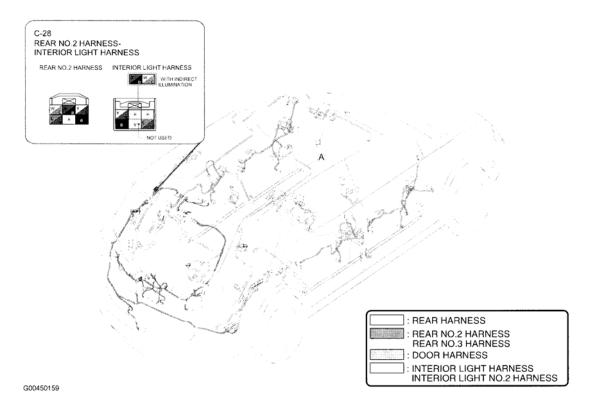


Fig. 57: Left Side Of Vehicle Courtesy of MAZDA MOTORS CORP.

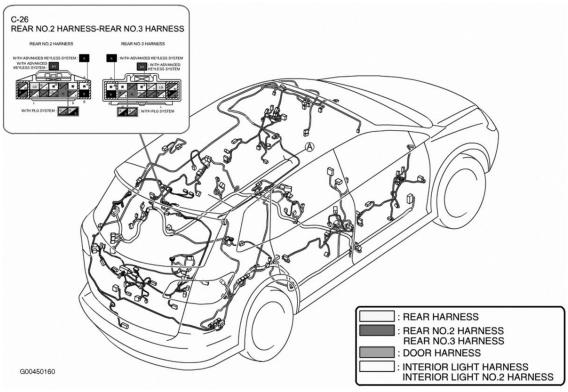

<u>Fig. 58: Roof</u> Courtesy of MAZDA MOTORS CORP.



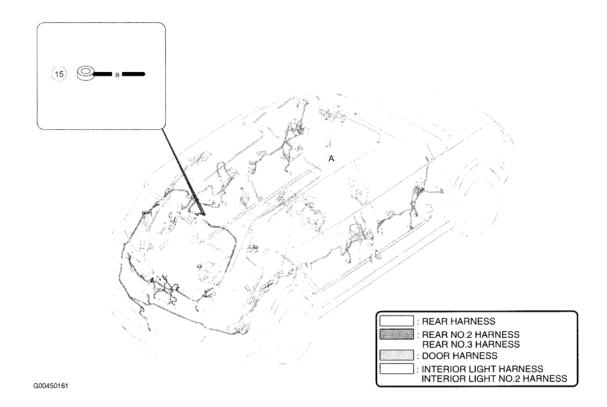


Fig. 59: Roof Courtesy of MAZDA MOTORS CORP.

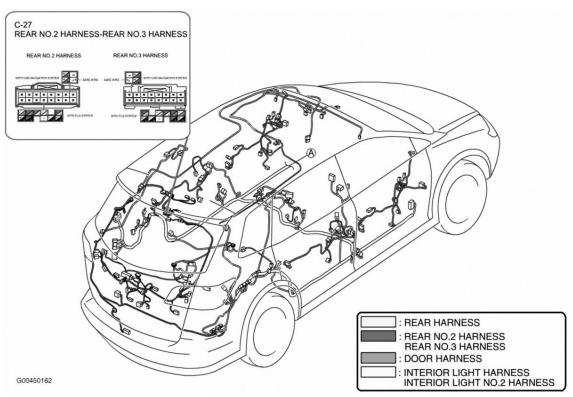

<u>Fig. 60: Roof</u> Courtesy of MAZDA MOTORS CORP.

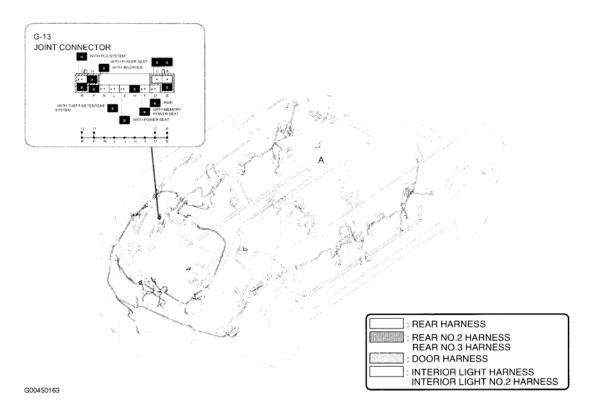

<u>Fig. 61: Left Side Of Vehicle</u> Courtesy of MAZDA MOTORS CORP.

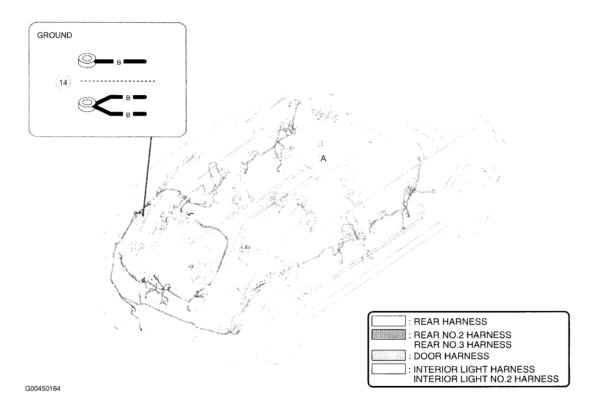


Fig. 62: Left Side Of Vehicle Courtesy of MAZDA MOTORS CORP.


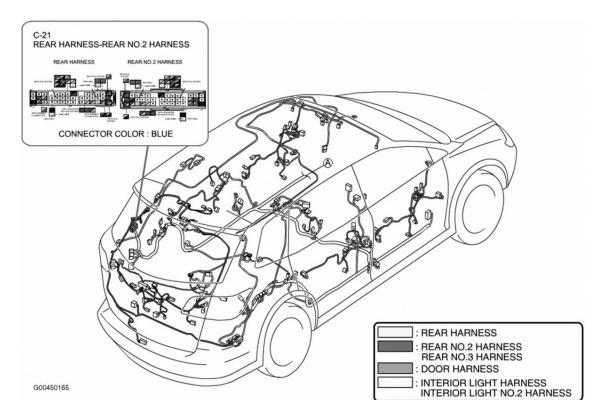


Fig. 63: Left Side Of Vehicle Courtesy of MAZDA MOTORS CORP.

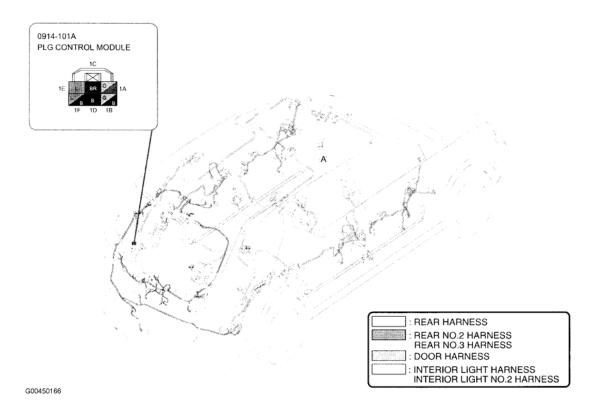

<u>Fig. 64: Left Rear Of Vehicle</u> Courtesy of MAZDA MOTORS CORP.