

GROUP 34
REAR SUSPENSION

GENERAL

OUTLINE OF CHANGES

- The specifications of the coil spring have been revised.
- Due to the change on the stabilizer link, the service procedures have been revised.

COIL SPRING

Items	Sedan	Hatchback
Wire dia. x O.D. x free length mm	13 x 86 x 400	10 x 86 x 414


SERVICE SPECIFICATIONS

Items	Standard value
Protruding length of stabilizer bar mounting bolt mm	3 – 5

STABILIZER BAR

REMOVAL AND INSTALLATION

Post-Installation Operation
Wheel Alignment Check

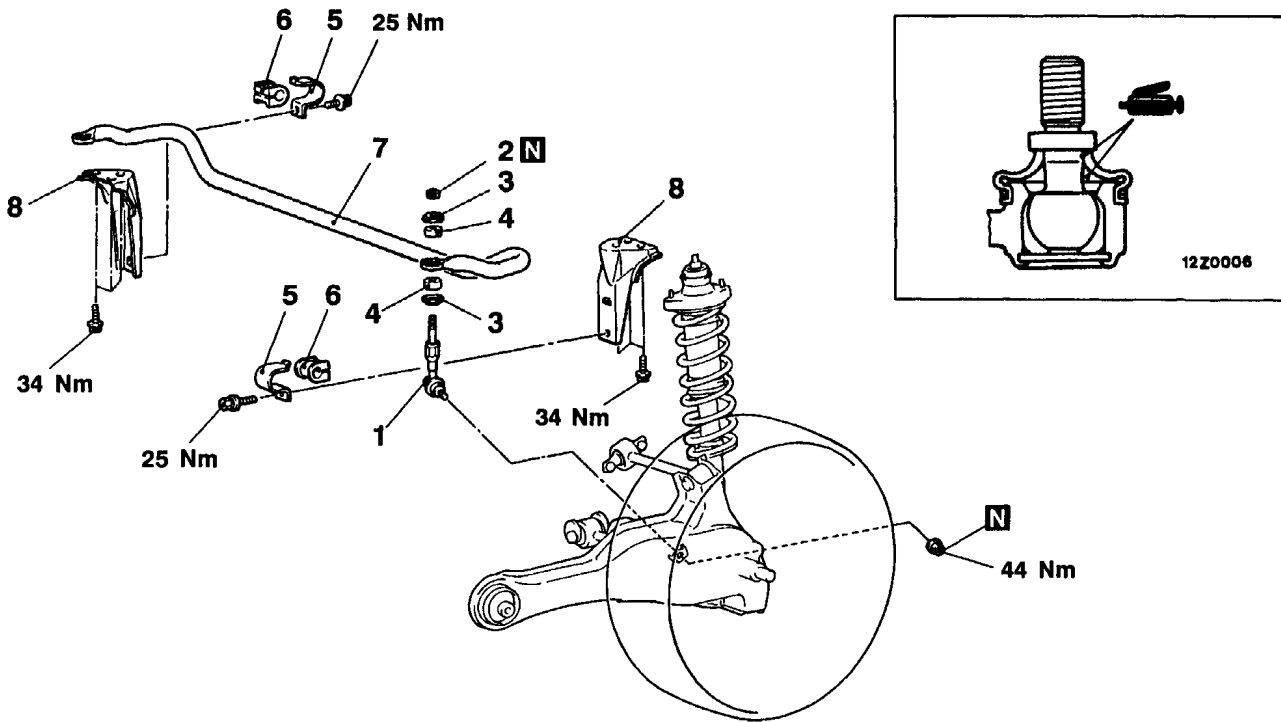


A12U0024

Removal steps

- 1. Stabilizer link
- 2. Self-locking nut
- 3. Joint cup
- 4. Stabilizer rubber


- 5. Fixture
- 6. Bushing
- 7. Stabilizer bar
- 8. Stabilizer bracket

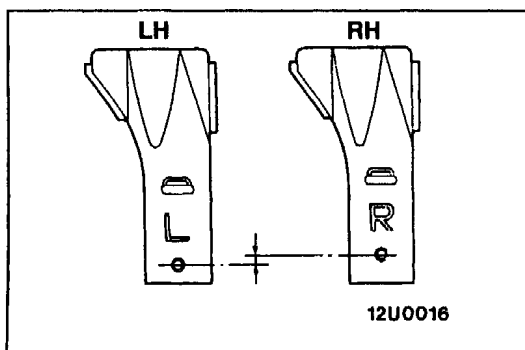

INSTALLATION SERVICE POINTS


▶A◀ STABILIZER BRACKET INSTALLATION

Because the left and right installation positions of the fixtures are different, be careful not to make a mistake when installing the stabilizer bracket.

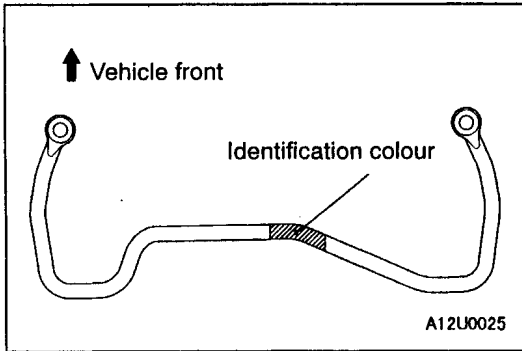

►B◄ STABILIZER BAR INSTALLATION

Install the stabilizer bar so that its identification colour is positioned in the right of the vehicle.

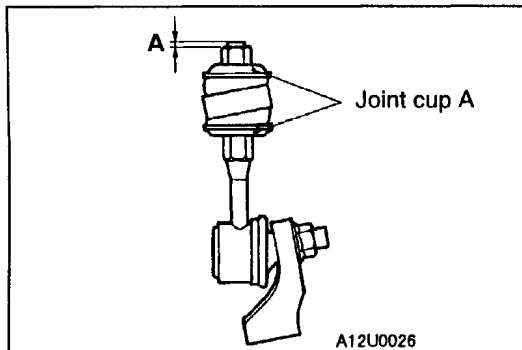

►C◄ SELF-LOCKING NUT INSTALLATION

Check that the joint cup faces as shown, and then tighten the self-locking nut so that the shown dimension (A) is at the standard value.

Standard value (A): 3 – 5 mm

INSPECTION

The inspection procedures are the same as before.