

CARISMA

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This publication is a supplement to the Electrical Wiring Manual Pub. No. PHDE9501-A and contains only additions and changes to the original issue. It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL	
PYGE95E1	
PYGE95E1-A (Supplement)	
WORKSHOP MANUAL	
CHASSIS GROUP	
PWDE9502	
PWDE9502-A (Supplement)	
PWDE9502-B (Supplement)	
ELECTRICAL WIRING	
PHDE9501	
PHDE9501-A (Supplement)	
BODY REPAIR MANUAL	
PBGE95E1	
PBGE95E1-A (Supplement)	
ENGINE GROUP	
PWEE□□□□	
(Looseleaf edition)	
PARTS CATALOGUE	
N606C006D□	

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We however, reserve the right to make changes at any time without prior notice or obligation.

 **MITSUBISHI MOTOR SALES**
Europe B.V.

GROUP INDEX

OUTLINE OF CHANGES	■
HOW TO READ THE WIRING DIAGRAMS	1
WIRING HARNESS CONFIGURATION DIAGRAMS ...	2
SINGLE PART INSTALLATION POSITION	3
CIRCUIT DIAGRAM	4

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.

OUTLINE OF CHANGES

CONTENTS

WIRING HARNESS CONFIGURATION DIAGRAMS	2	CIRCUIT DIAGRAM	3
SINGLE PART INSTALLATION POSITION ...	3	TABLE OF CIRCUIT DIAGRAMS	6



WIRING HARNESS CONFIGURATION DIAGRAMS

Wiring harness configuration diagrams				Description of changes
Connector symbol	Name	Reference page		
A	ENGINE COMPARTMENT	MPI-SOHC <L.H. drive vehicles>	2-2	<ul style="list-style-type: none"> • A vehicle speed sensor connector (A-112) has been added to correspond to the adoption of an electronic speedometer. • An outside thermo sensor connector (A-113) has been added to correspond to the adoption of an outside thermo display. • The following connectors have been eliminated to correspond to the abolition of the theft-alarm system. <ul style="list-style-type: none"> • Theft-alarm horn relay (A-60X) • Hood switch (A-84) • Theft-alarm horn (A-87) • The installation positions for the following connectors have been changed. <ul style="list-style-type: none"> • Purge control solenoid valve (A-14) <Petro> • EGR solenoid valve (A-15) <Petro> • The connector colours for the following connectors have been changed. <ul style="list-style-type: none"> • Ignition coil A, B (A-05, 06) <Petro> • EGR solenoid valve (A-15) <Petro> • Lever position sensor (A-94) <Diesel> • The number of pins in the following connectors have been changed. <ul style="list-style-type: none"> • Air flow sensor (A-20) <Petro> • ABS-ECU (A-48)
		MPI-SOHC <R.H. drive vehicles>	2-6	
		Diesel <L.H. drive vehicles>	2-10	
		Diesel <R.H. drive vehicles>	2-14	
B	DASH PANEL	L.H. drive vehicles	2-18	<ul style="list-style-type: none"> • The following connectors have been added to correspond to changes in the A/T control system. <ul style="list-style-type: none"> • Engine-A/T-ECU (B-101, 102, 103, 104) • Diagnosis connector (B-105) • A front fog lamp relay (B-71X) has been added to correspond to changes in the front fog lamp circuit. • The number of pins in the control wiring harness and body wiring harness combination connector (B-16) has been changed. • The ELC-4A/T-ECU connectors (B-31, B-32, B-34) have been eliminated to correspond to changes in the A/T control system. • The rear fog lamp switch connector (B-47) and front fog lamp switch connector (B-48) have been combined into a front fog lamp switch or rear fog lamp switch connector (B-47). • The keyless entry receiver-ECU connector (B-98) has been abolished to correspond to the abolition of a theft-alarm system.
		R.H. drive vehicles	2-22	
D	FLOOR AND ROOF	L.H. drive vehicles	2-26	<ul style="list-style-type: none"> • The following connectors have been added to correspond to the adoption of side air bags. <ul style="list-style-type: none"> • Side air bag module (D-29, 32) • Side impact sensor (D-30, 31) • The SRS-ECU connector (D-23) has been abolished and a new SRS-ECU connector (D-33) has been added to correspond to the adoption of side air bags. • The number of pins on the TCL-ECU connector (D-21) has been changed from 22 pins to 26 pins, and the number of pins on the TCL-ECU connector (D-22) has been changed from 12 pins to 16 pins, to correspond to changes in the TCL-ECU. <From 1998 models> • A door lock switch connector (D-34) has been added to correspond to the changes in the central door locking system.
		R.H. drive vehicles	2-28	
E	DOOR	L.H. drive vehicles	–	<ul style="list-style-type: none"> • The connector colours of the front power window regulator assembly connectors (E-05, E-13) and the rear power window regulator assembly connectors (E-08, E-16) have been changed from black to brown.
		R.H. drive vehicles	–	

SINGLE PART INSTALLATION POSITION

Location of changes	Reference page	Description of changes
RELAY	3-2	<ul style="list-style-type: none"> The mounting position of the front fog lamp relay has been changed to correspond to changes in the front fog lamp circuit.
ECU	3-2	<ul style="list-style-type: none"> The mounting position of the engine-A/T-ECU has been changed to correspond to changes in the A/T control system.
SENSOR	3-3	<ul style="list-style-type: none"> A side impact sensor mounting position has been added to correspond to the adoption of side air bags. A vehicle speed sensor mounting position has been added to correspond to the adoption of an electronic speedometer. An outside thermo sensor mounting position has been added to correspond to the adoption of an outside thermo display.
SOLENOID VALVE	3-3	<ul style="list-style-type: none"> Mounting positions have been added to correspond to changes in the purge control solenoid valve and EGR solenoid valve mounting positions.
INSPECTION CONNECTOR	3-4	<ul style="list-style-type: none"> A diagnosis connector (12-pin) mounting position has been added to correspond to changes in the A/T control system.

CIRCUIT DIAGRAM

Circuit diagrams			Description of changes
Maintitle	Subtitle	Reference page	
CENTRALIZED JUNCTION	–	4-3	<ul style="list-style-type: none"> Fusible links, dedicated fuses and multi-purpose fuses have been changed to correspond to changes in the electrical circuits of the various systems. The centralized relay has been changed to correspond to the abolition of the theft-alarm system and to changes in the front fog lamp circuit.
POWER DISTRIBUTION SYSTEM	Vehicles without daytime running lamp	4-8	<ul style="list-style-type: none"> The system names for the destinations of fusible links, fuses and junctions have been changed to correspond to changes in the electrical circuits of the various systems. The diameter of the negative (–) battery cable has been changed in vehicles with diesel engine. The diameter of the power supply-side wire for dedicated fuse (17) has been changed. The green colour of the wire which connects fusible link (9) and the glow relay box has been changed. <Vehicles with diesel engine> The diameter of the wire which connects the battery and the starter has been changed. <Vehicles with diesel engine>
	Vehicles with daytime running lamp	4-14	
IGNITION SYSTEM	MPI-SOHC	–	<ul style="list-style-type: none"> The input signals have been changed to correspond to the adoption of a vehicle speed sensor. The engine-ECU has been changed to an engine-A/T-ECU and new circuits have been provided to correspond to changes in the A/T control system.
	MPI-SOHC <A/T>	4-20	
CHARGING SYSTEM	Diesel-powered vehicles	4-21	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the control wiring harness and body wiring harness combination connector (B-16).
GLOW SYSTEM	–	4-22	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the power supply circuit and the combination meter. A vehicle speed sensor circuit has been added. The diameter of the wire connecting the engine-ECU and the top dead center and engine speed sensor has been changed. The control wiring harness and body wiring harness combination connector (B-16) has been changed.

OUTLINE OF CHANGES – Circuit Diagram

Circuit diagrams			Description of changes
Maintitle	Subtitle	Reference page	
MPI SYSTEM	MPI-SOHC-M/T <Vehicles without TCL>	4-26	<ul style="list-style-type: none"> The circuit has been divided into a circuit for M/T and a circuit for A/T to correspond to changes in the A/T control system. The circuit has been changed to correspond to changes in the control wiring harness and body wiring harness combination connector (B-16). A vehicle speed sensor circuit has been added.
	MPI-SOHC-A/T <Vehicles without TCL>	4-34	
	MPI-SOHC-M/T <Vehicles with TCL>	4-42	
	MPI-SOHC-A/T <Vehicles with TCL>	4-50	
COOLING SYSTEM	Petrol-powered vehicles	4-59	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the A/T control system.
ELC 4-SPEED AUTOMATIC TRANSMISSION	–	4-60	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the A/T control system. A vehicle speed sensor circuit has been added. The circuit has been changed to correspond to changes in the combination meter.
HEADLAMP	Vehicles without daytime running lamp	4-71	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the combination meter.
	Vehicles with daytime running lamp	4-72	
FRONT FOG LAMP	Vehicles without daytime running lamp	4-76	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the front fog lamp switch.
	Vehicles with daytime running lamp	4-78	
REAR FOG LAMP	Vehicles without daytime running lamp	4-80	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the rear fog lamp switch.
	Vehicles with daytime running lamp	4-83	
ROOM LAMP, MAP LAMP AND LUGGAGE COMPARTMENT LAMP	Hatchback	4-86	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the combination meter.
	Sedan	4-88	
TURN-SIGNAL LAMP AND HAZARD WARNING LAMP	–	4-90	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the combination meter and to the abolition of the theft-alarm system.
BACK-UP LAMP	–	4-94	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the control wiring harness and body wiring harness combination connector (B-16).
METER AND GAUGE	Petrol-powered vehicles	4-96	<ul style="list-style-type: none"> The circuit has been changed to correspond to the adoption of an electronic speedometer and to changes in the combination meter.
	Diesel-powered vehicles	4-98	
ODOMETER AND TRIP METER	–	4-100	<ul style="list-style-type: none"> A circuit has been added to correspond to the adoption of an electronic odometer and trip meter.
OIL PRESSURE WARNING LAMP	–	4-102	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the combination meter.
FUEL WARNING LAMP	–	4-102	
BRAKE WARNING LAMP	–	4-103	
OVERHEATING WARNING LAMP	Diesel-powered vehicles	4-103	

Circuit diagrams			Description of changes
Maintitle	Subtitle	Reference page	
CENTRAL DOOR LOCKING SYSTEM	Vehicles without keyless entry system <Hatchback>	4-104	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the power supply circuit and the adoption of the door lock switch connector (D-34). The green colour of the wire which connects the door lock-ECU and the wiring harness has been changed.
	Vehicles without keyless entry system <Sedan>	4-107	
	Vehicles with keyless entry system <Hatchback>	4-110	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the power supply circuit and the keyless entry receiver-ECU. The circuit has been changed to correspond to the abolition of the theft-alarm system. The circuit has been changed to correspond to the adoption of the door lock switch connector (D-34).
	Vehicles with keyless entry system <Sedan>	4-114	
MANUAL AIR CONDITIONER	Petrol-powered vehicles	4-118	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the engine-ECU <A/T> and the control wiring harness and body wiring harness combination connector (B-16).
FULL-AUTO AIR CONDITIONER AND AIR PURIFIER	Petrol-powered vehicles	4-123	
WINDSHIELD WIPER AND WASHER	–	4-130	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the control wiring harness and body wiring harness combination connector (B-16).
DEFOGGER AND DOOR MIRROR HEATER	Vehicles without defogger timer	4-132	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the power supply circuit. The diameter of the wire which connects the J/B and the defogger switch has been changed. A circuit has been added to correspond to the addition of a defogger timer.
	Vehicles with defogger timer	4-134	
ANTI-LOCK BRAKING SYSTEM	–	4-136	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the ABS-ECU.
TRACTION CONTROL SYSTEM	M/T	4-140	<ul style="list-style-type: none"> The circuit has been divided into a circuit for M/T and a circuit for A/T to correspond to changes in the A/T control system. The circuit has been changed to correspond to changes in the ABS-ECU.
	A/T	4-146	
AUTO-CRUISE CONTROL SYSTEM	–	4-152	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the A/T control system and the combination meter. A vehicle speed sensor circuit has been added.
SUPPLEMENTAL RESTRAINT SYSTEM	Vehicles without side air bag	4-160	<ul style="list-style-type: none"> A circuit has been added to correspond to the adoption of side air bags. The circuit has been changed to correspond to changes in the SRS-ECU and the combination meter. The diameters and colours of the wires which connect the SRS-ECU to the air bag module, side impact sensor and seat belt pretensioner have been changed.
	Vehicles with side air bag <Up to 1997 models>	4-162	
	Vehicles with side air bag <From 1998 models>	4-165	
IMMOBILIZER SYSTEM	Petrol-powered vehicles	4-168	<ul style="list-style-type: none"> The circuit has been changed to correspond to changes in the A/T control system. <A/T> The circuit has been changed to correspond to changes in the control wiring harness and body wiring harness combination connector (B-16).
	Diesel-powered vehicles	4-170	

TABLE OF CIRCUIT DIAGRAMS

This table of circuit diagrams indicates those circuits in which changes and/or additions, etc. have been made; the circuits are here listed in the sequence in which they are presented in the wiring diagrams. Please use this table for reference when following maintenance or repair procedures.

NOTE

- (1) A (Added) : This circuit has been newly added in this manual.
 (2) R (Revised) : This circuit has been changed, and is included in this manual.
 (3) D (Deleted) : This circuit has been deleted in this manual.
 (4) I (Included) : This circuit is included in this manual.
 (5) N (Not Included) : This circuit is not included in this manual.
 (6) P (Previous manual) : This circuit is not included in this manual, because it has not been changed. Refer to this previous manuals.

Main circuit	Circuit classification	Pub. No. PHDE9501 '96 model (Basic)	Pub. No. PHDE9501-A (Supplement)	Pub. No. PHDE9501-B (Supplement)
JUNCTION BLOCK (J/B)	–	I	P	P
JOINT CONNECTOR (J/C)	–	I	P	P
CENTRALIZED JUNCTION	–	I	R	R
POWER DISTRIBUTION SYSTEM	Vehicles without daytime running lamp	I	R	R
	Vehicles with daytime running lamp	I	R	R
STARTING SYSTEM	Petrol-powered vehicles	I	P	P
	Diesel-powered vehicles	N	A	P
IGNITION SYSTEM	MPI-SOHC	I	R	P
	MPI-SOHC-A/T	N	N	A
	MPI-DOHC	I	R	D
CHARGING SYSTEM	Petrol-powered vehicles	I	P	P
	Diesel-powered vehicles	N	A	R
GLOW SYSTEM	–	N	A	R
MPI SYSTEM	MPI-SOHC <Vehicles without TCL>	I	R	D
	MPI-SOHC-M/T <Vehicles without TCL>	N	N	A
	MPI-SOHC-A/T <Vehicles without TCL>	N	N	A
	MPI-SOHC <Vehicles with TCL>	I	R	D
	MPI-SOHC-M/T <Vehicles with TCL>	N	N	A
	MPI-SOHC-A/T <Vehicles with TCL>	N	N	A
	MPI-DOHC	I	R	D
COOLING SYSTEM	Petrol-powered vehicles	I	P	R
	Diesel-powered vehicles	N	A	P
ELC 4-SPEED AUTOMATIC TRANSMISSION	–	I	R	R
HEADLAMP	Vehicles without daytime running lamp	I	R	R
	Vehicles with daytime running lamp	I	R	R
HEADLAMP LEVELING SYSTEM	–	I	P	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classification	Pub. No. PHDE9501 '96 model (Basic)	Pub. No. PHDE9501-A (Supplement)	Pub. No. PHDE9501-B (Supplement)
TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER	Vehicles without daytime running lamp	I	R	P
	Vehicles with daytime running lamp	I	R	P
FRONT FOG LAMP	Vehicles without daytime running lamp	I	R	R
	Vehicles with daytime running lamp	I	R	R
REAR FOG LAMP	Vehicles without daytime running lamp <Hatchback>	I	P	D
	Vehicles without daytime running lamp <Sedan>	N	A	D
	Vehicles without daytime running lamp	N	N	A
	Vehicles with daytime running lamp <Hatchback>	I	P	D
	Vehicles with daytime running lamp <Sedan>	N	A	D
	Vehicles with daytime running lamp	N	N	A
ROOM LAMP, MAP LAMP AND LUGGAGE COMPARTMENT LAMP	Hatchback	I	P	R
	Sedan	N	A	R
TURN-SIGNAL LAMP AND HAZARD WARNING LAMP	Hatchback	I	P	D
	Sedan	N	A	D
	-	N	N	A
STOP LAMP	Hatchback	I	P	P
	Sedan	N	A	P
BACK-UP LAMP	-	I	R	R
HORN	Vehicles without SRS	I	P	P
	Vehicles with SRS	I	P	P
METER AND GAUGE	Petrol-powered vehicles	I	R	R
	Diesel-powered vehicles	N	A	R
ODOMETER AND TRIP METER	-	N	N	A
OIL PRESSURE WARNING LAMP	Petrol-powered vehicles	I	P	D
	Diesel-powered vehicles	N	A	D
	-	N	N	A
FUEL WARNING LAMP	Petrol-powered vehicles	I	P	D
	Diesel-powered vehicles	N	A	D
	-	N	N	A
BRAKE WARNING LAMP	Petrol-powered vehicles	I	P	D
	Diesel-powered vehicles	N	A	D
	-	N	N	A
OVERHEATING WARNING LAMP	Diesel-powered vehicles	N	A	R

Main circuit	Circuit classification	Pub. No. PHDE9501 '96 model (Basic)	Pub. No. PHDE9501-A (Supplement)	Pub. No. PHDE9501-B (Supplement)
CENTRAL DOOR LOCKING SYSTEM	Vehicles without theft-alarm system <Hatchback>	I	P	D
	Vehicles without theft-alarm system <Sedan>	N	A	D
	Vehicles with theft-alarm system <Hatchback>	I	R	D
	Vehicles with theft-alarm system <Sedan>	N	A	D
	Vehicles without keyless entry system <Hatchback>	N	N	A
	Vehicles without keyless entry system <Sedan>	N	N	A
	Vehicles with keyless entry system <Hatchback>	N	N	A
	Vehicles with keyless entry system <Sedan>	N	N	A
POWER WINDOWS	–	I	P	P
HEATER	–	I	P	P
MANUAL AIR CONDITIONER	Petrol-powered vehicles	I	P	R
	Diesel-powered vehicles	N	A	P
FULL-AUTO AIR CONDITIONER AND AIR PURIFIER	Petrol-powered vehicles	I	P	R
	Diesel-powered vehicles	N	A	P
WINDSHIELD WIPER AND WASHER	–	I	P	R
REAR WIPER AND WASHER	Vehicles without intermittent wiper	I	P	P
	Vehicles with intermittent wiper	I	P	P
HEADLAMP WASHER	–	I	R	P
DEFOGGER AND DOOR MIRROR HEATER	L.H. drive vehicles <Hatchback>	I	P	D
	L.H. drive vehicles <Sedan>	N	A	D
	R.H. drive vehicles <Hatchback>	I	P	D
	R.H. drive vehicles <Sedan>	N	A	D
	Vehicles without defogger timer	N	N	A
	Vehicles with defogger timer	N	N	A
REMOTE CONTROLLED MIRROR	–	I	P	P
CLOCK	L.H. drive vehicles	I	P	P
	R.H. drive vehicles	I	P	P
CIGARETTE LIGHTER	–	I	P	P
RADIO AND TAPE PLAYER (VEHICLE HARNESS WITHOUT RADIO AND TAPE PLAYER COMPONENT)	–	I	R	P
RADIO AND TAPE PLAYER	–	I	R	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classification	Pub. No. PHDE9501 '96 model (Basic)	Pub. No. PHDE9501-A (Supplement)	Pub. No. PHDE9501-B (Supplement)
SUNROOF	–	I	P	P
HEATED SEAT	–	I	P	P
ANTI-LOCK BRAKING SYSTEM (ABS)	–	I	P	R
TRACTION CONTROL SYSTEM (TCL)	–	I	R	D
	M/T	N	N	A
	A/T	N	N	A
AUTO-CRUISE CONTROL SYSTEM	–	I	P	R
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	–	I	P	D
	Vehicles without side air bag	N	N	A
	Vehicles with side air bag <Up to 1997 models>	N	N	A
	Vehicles with side air bag <From 1998 models>	N	N	A
THEFT-ALARM SYSTEM	Hatchback	I	R	D
	Sedan	N	A	D
IMMOBILIZER SYSTEM	Petrol-powered vehicles	I	P	R
	Diesel-powered vehicles	N	A	R
RHEOSTAT	–	I	P	P
FUEL LINE HEATER	–	N	A	P

HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS 1-2



MODELS**<HATCHBACK>**

Model code		Engine model	Transmission model	Fuel supply system
DA1A	LNDEL6/R6	4G92-SOHC (1, 597 ml)	F5MR1 (2WD-5M/T)	MPI
	LRDEL6/R6		F4A41 (2WD-4A/T)	
	LNJEL6/R6		F5MR1 (2WD-5M/T)	
	LRJEL6/R6		F4A41 (2WD-4A/T)	
	LNDVL6/R6		F5MR1 (2WD-5M/T)	
	LRDVL6/R6		F4A41 (2WD-4A/T)	
	LNJVL6/R6		F5MR1 (2WD-5M/T)	
	LRJVL6/R6		F4A41 (2WD-4A/T)	
DA2A	LNJEL6/R6	4G93-SOHC (1, 834 ml)	F5MR2 (2WD-5M/T)	MPI
	LRJEL6/R6		F4A42 (2WD-4A/T)	
	LNPEL6/R6		F5MR2 (2WD-5M/T)	
	LRPEL6/R6		F4A42 (2WD-4A/T)	
DA4A	LNDFL6/R6	F8QT (1, 870 ml)	F5MR3 (2WD-5M/T)	Fuel injection pump
	LNJFL6/R6			
	LNPFL6/R6			

<SEDAN>

Model code		Engine model	Transmission model	Fuel supply system
DA1A	SNDEL6/R6	4G92-SOHC (1, 597 mℓ)	F5MR1 (2WD-5M/T)	MPI
	SRDEL6/R6		F4A41 (2WD-4A/T)	
	SNJEL6/R6		F5MR1 (2WD-5M/T)	
	SRJEL6/R6		F4A41 (2WD-4A/T)	
	SNDVL6/R6		F5MR1 (2WD-5M/T)	
	SRDVL6/R6		F4A41 (2WD-4A/T)	
	SNJVL6/R6		F5MR1 (2WD-5M/T)	
	SRJVL6/R6		F4A41 (2WD-4A/T)	
	SNJVL6B		F5MR1 (2WD-5M/T)	
	SRJVL6B		F4A41 (2WD-4A/T)	
DA2A	SNJEL6/R6	4G93-SOHC (1, 834 mℓ)	F5MR2 (2WD-5M/T)	
	SRJEL6/R6		F4A42 (2WD-4A/T)	
	SNPEL6/R6		F5MR2 (2WD-5M/T)	
	SRPEL6/R6		F4A42 (2WD-4A/T)	
DA4A	SNDFL6/R6	F8QT (1, 870 mℓ)	F5MR3 (2WD-5M/T)	Fuel injection pump
	SNJFL6/R6			
	SNPFL6/R6			

WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS

ENGINE COMPARTMENT

MPI-SOHC <L.H. drive vehicles>	2-2
MPI-SOHC <R.H. drive vehicles>	2-6
Diesel <L.H. drive vehicles>	2-10
Diesel <R.H. drive vehicles>	2-14

DASH PANEL



L.H. drive vehicles	2-18
R.H. drive vehicles	2-22

FLOOR AND ROOF


L.H. drive vehicles	2-26
R.H. drive vehicles	2-28

ENGINE COMPARTMENT

MPI-SOHC <L.H. drive vehicles>

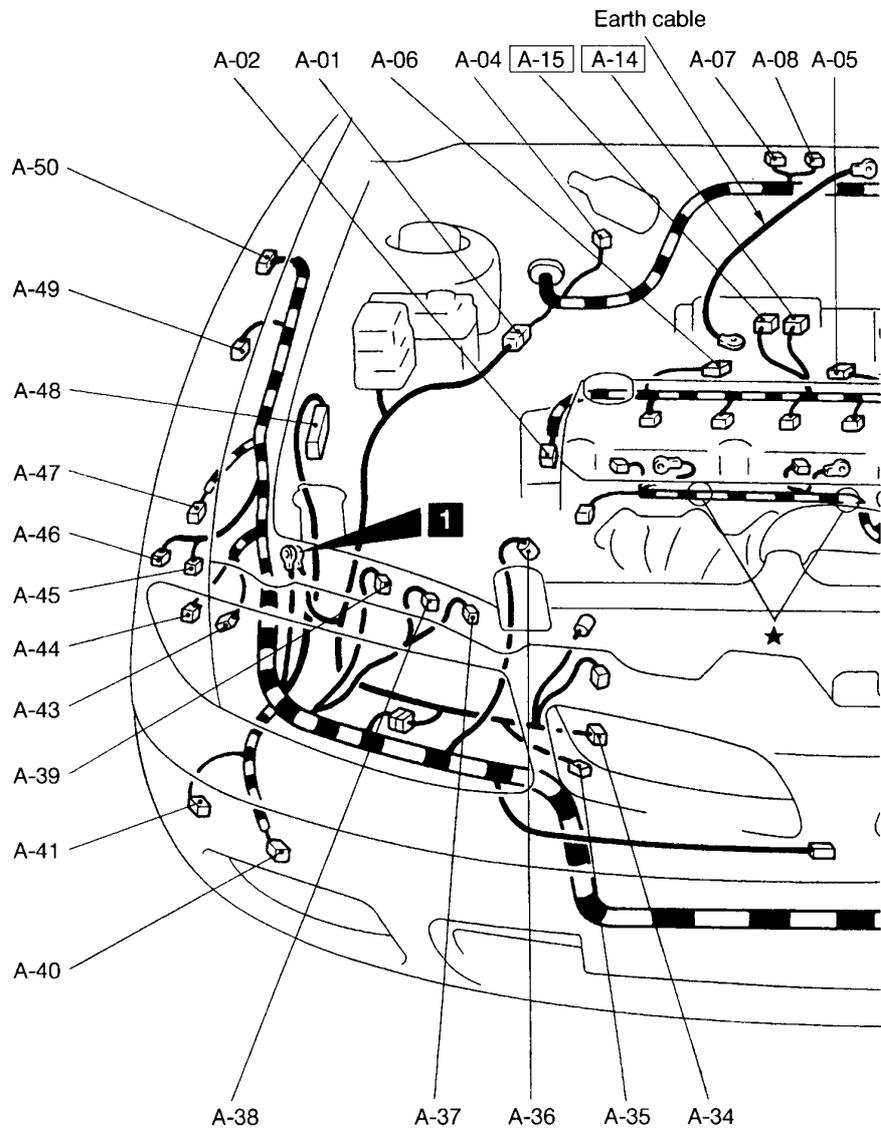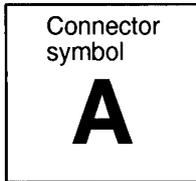

A-01 (4-B)	Control wiring harness and A/C wiring harness combination	<u>A-15</u> (2-BR)	EGR solenoid valve
A-02 (3-B)	Crank angle sensor	A-16 (12)	DRL-ECU
A-03 (3-B)	Camshaft position sensor	A-17 (4)	DRL relay 1
A-04 (5-B)	Windshield wiper motor	A-18 (4)	DRL relay 2
A-05 (3-GR)	Ignition coil B	A-19 (2-B)	Side turn signal lamp (LH)
A-06 (3-GR)	Ignition coil A	A-20 (7-B)	Air flow sensor
A-07 (2-B)	Vacuum solenoid valve <TCL>	A-21 (2-B)	Front speed sensor (LH) <ABS>
A-08 (2-B)	Ventilation solenoid valve <TCL>	A-22 (6-B)	Front wiring harness and control wiring harness combination
A-09 (1-B)	Fuel pump check connector	A-23 (4-B)	Control wiring harness and battery cable assembly combination
A-11 (1-L)	Engine speed detection connector	A-24 (2-B)	Front turn signal lamp (LH)
A-12 (4-B)	Accelerator pedal position sensor <TCL>	A-25 (2-B)	Horn (LH)
A-13 (2-B)	Brake fluid level sensor	A-27 (2)	Front fog lamp (LH)
<u>A-14</u> (2-B)	Purge control solenoid valve		

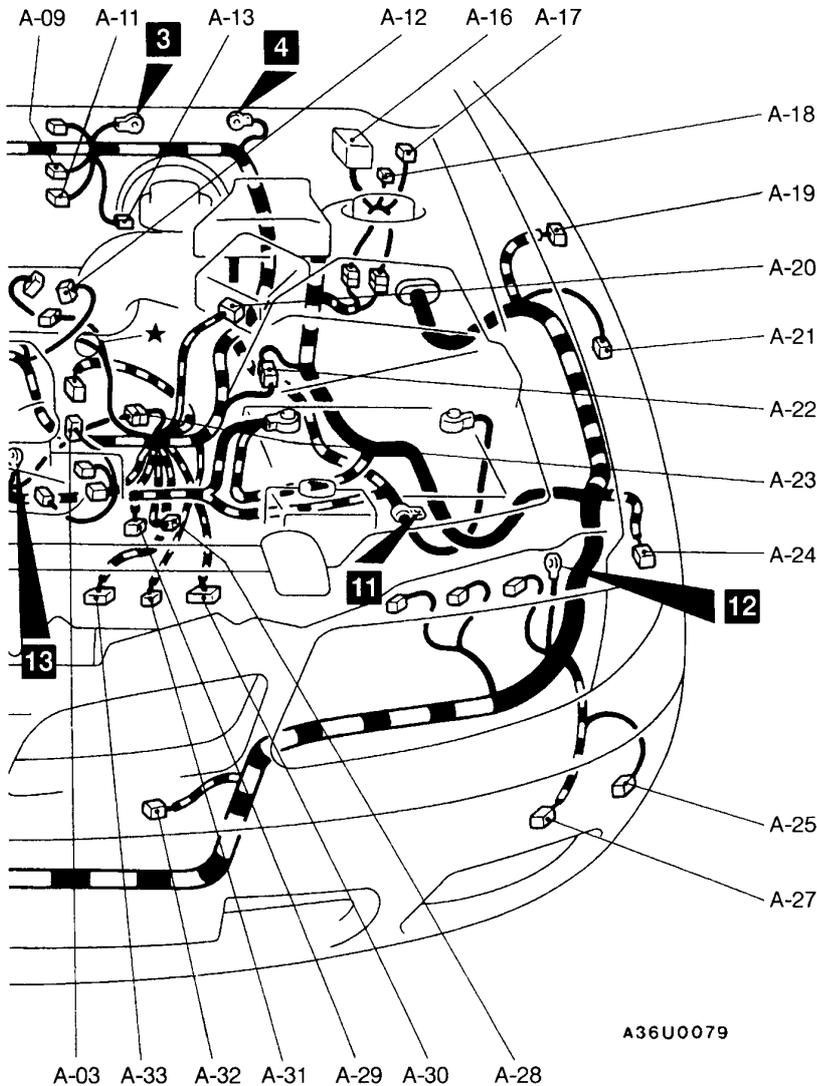



A36U0079

- A-28 (3-GR) Input shaft speed sensor <A/T>
- A-29 (3-B) Output shaft speed sensor <A/T>
- A-30 (10-GR) ELC-4A/T control solenoid valve
- A-31 (2-G) Back-up lamp switch <M/T>
- A-32 (2-B) Radiator fan motor
- A-33 (10-B) Inhibitor switch <A/T>
- A-34 (4) Condenser fan motor
- A-35 (2) Outside thermo sensor <Full-auto A/C> or no connection <Manual A/C>
- A-36 (1) Power steering oil pressure switch
- A-37 (2-B) Position lamp (RH)
- A-38 (3-B) Headlamp (RH)
- A-39 (3-B) Headlamp leveling unit (RH)
- A-40 (2) Front fog lamp (RH)


- A-41 (2-B) Horn (RH)
- A-43 (2-BR) Washer fluid level sensor
- A-44 (2) Headlamp washer motor
- A-45 (2) Rear washer motor
- A-46 (2) Windshield washer motor
- A-47 (2-B) Front turn signal lamp (RH)
- A-48 (31) ABS-ECU
- A-49 (2-B) Front speed sensor (RH) <ABS>
- A-50 (2-B) Side turn signal lamp (RH)

Remark
Connector numbers enclosed by a frame are the connectors whose installation location are changed.

MPI-SOHC <L.H. drive vehicles>

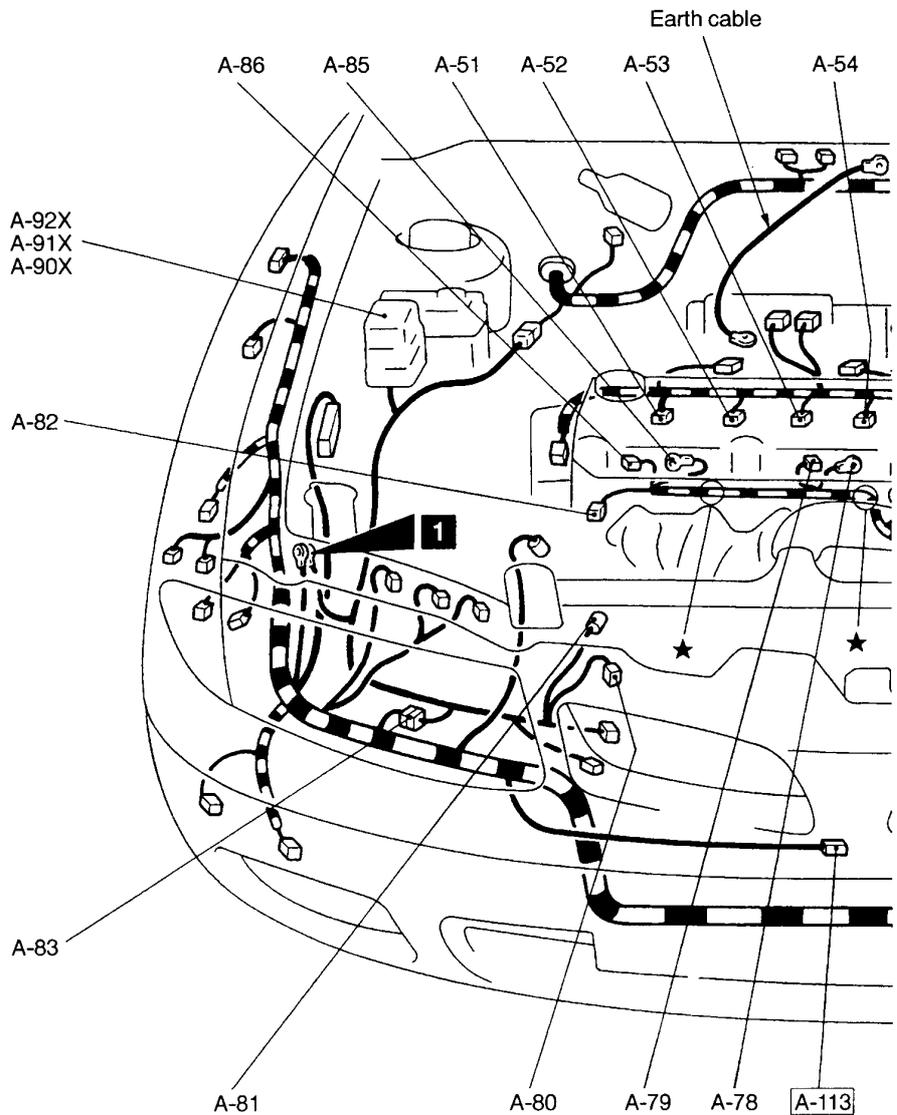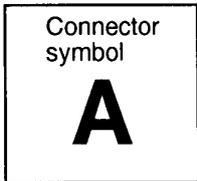

- | | | | |
|-------------|------------------------------|------------|---|
| A-51 (2-GR) | Injector No. 1 | A-64X (5) | Headlamp relay |
| A-52 (2-GR) | Injector No. 2 | A-65X (5) | Headlamp washer relay |
| A-53 (2-GR) | Injector No. 3 | A-67X (5) | Horn relay <SRS> |
| A-54 (2-GR) | Injector No. 4 | A-68 (6-B) | Front wiring harness and DRL wiring harness combination |
| A-55 (4-B) | Auto-cruise control actuator | A-69 (6-B) | Front wiring harness and DRL wiring harness combination |
| A-56 (4-B) | Throttle position sensor | A-70 (3-B) | Headlamp leveling unit (LH) |
| A-57 (6-B) | Idle speed control servo | A-71 (3-B) | Headlamp (LH) |
| A-61X (5) | Tail lamp relay <DRL> | A-72 (2-B) | Position lamp (LH) |
| A-62X (4) | Alternator relay | | |
| A-63X (5) | Radiator fan relay | | |

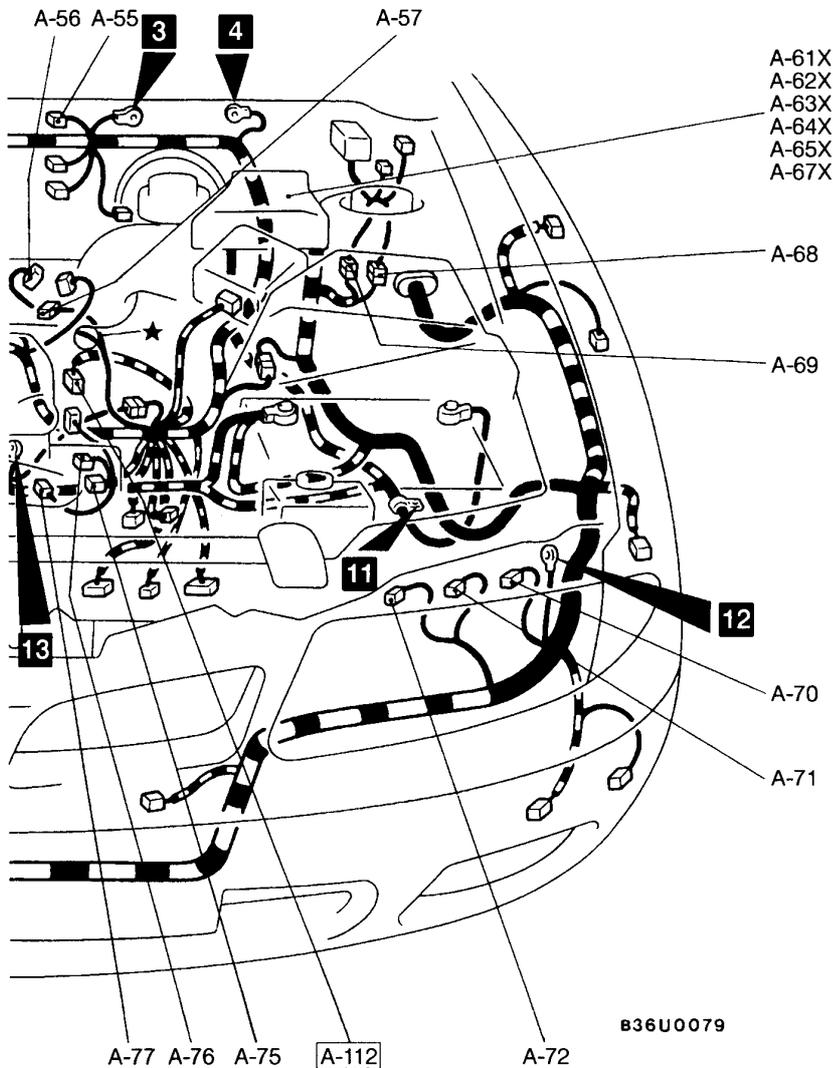



- A-75 (1-B) Engine coolant temperature gauge unit
- A-76 (2-B) Engine coolant temperature sensor
- A-77 (2-GR) Detonation sensor
- A-78 (1) Starter
- A-79 (1-B) Starter
- A-80 (2) Dual pressure switch
- A-81 (1) A/C refrigerant temperature switch and magnetic clutch
- A-82 (1-B) Oil pressure switch
- A-83 (8-B) Front wiring harness and A/C wiring harness combination

- A-85 (1) Alternator
- A-86 (2) Alternator
- A-90X (5) Condenser fan relay (LO)
- A-91X (5) Condenser fan relay (HI)
- A-92X (5) A/C compressor relay
- A-112** (3-B) Vehicle speed sensor
- A-113** (2-BR) Outside thermo sensor

Remark
Connector numbers enclosed by a frame are newly added connectors.


ENGINE COMPARTMENT

MPI-SOHC <R.H. drive vehicles>

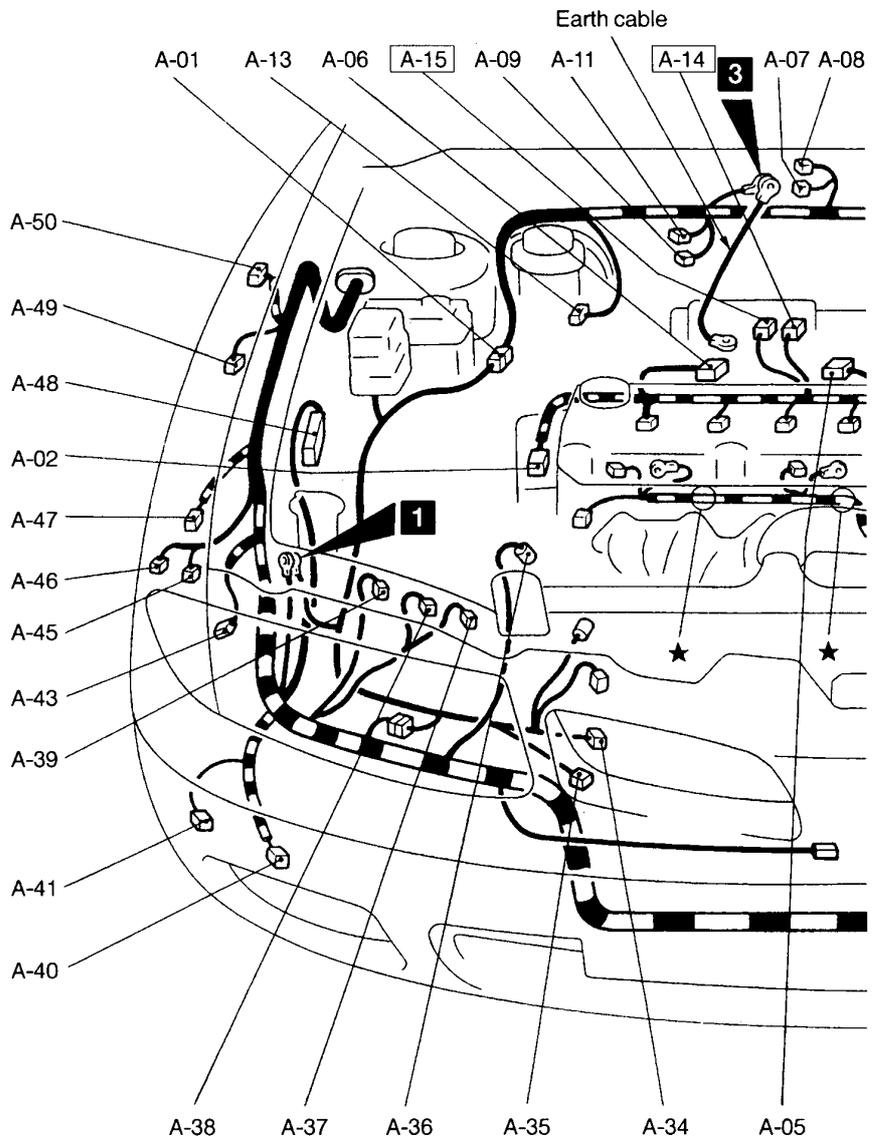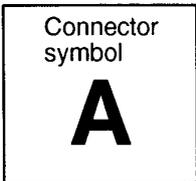

- A-01 (4-B) Control wiring harness and A/C wiring harness combination
- A-02 (3-B) Crank angle sensor
- A-03 (3-B) Camshaft position sensor
- A-04 (5-B) Windshield wiper motor
- A-05 (3-GR) Ignition coil B
- A-06 (3-GR) Ignition coil A
- A-07 (2-B) Vacuum solenoid valve <TCL>
- A-08 (2-B) Ventilation solenoid valve <TCL>
- A-09 (1-B) Fuel pump check connector
- A-11 (1-L) Engine speed detection connector
- A-12 (4-B) Accelerator pedal position sensor <TCL>
- A-13 (2-B) Brake fluid level sensor

- A-14** (2-B) Purge control solenoid valve
- A-15** (2-BR) EGR solenoid valve
- A-16 (12) DRL-ECU
- A-19 (2-B) Side turn signal lamp (LH)
- A-20 (7-B) Air flow sensor
- A-21 (2-B) Front speed sensor (LH) <ABS>
- A-22 (6-B) Front wiring harness and control wiring harness combination
- A-23 (4-B) Control wiring harness and battery cable assembly combination
- A-24 (2-B) Front turn signal lamp (LH)
- A-25 (2-B) Horn (LH)
- A-27 (2) Front fog lamp (LH)


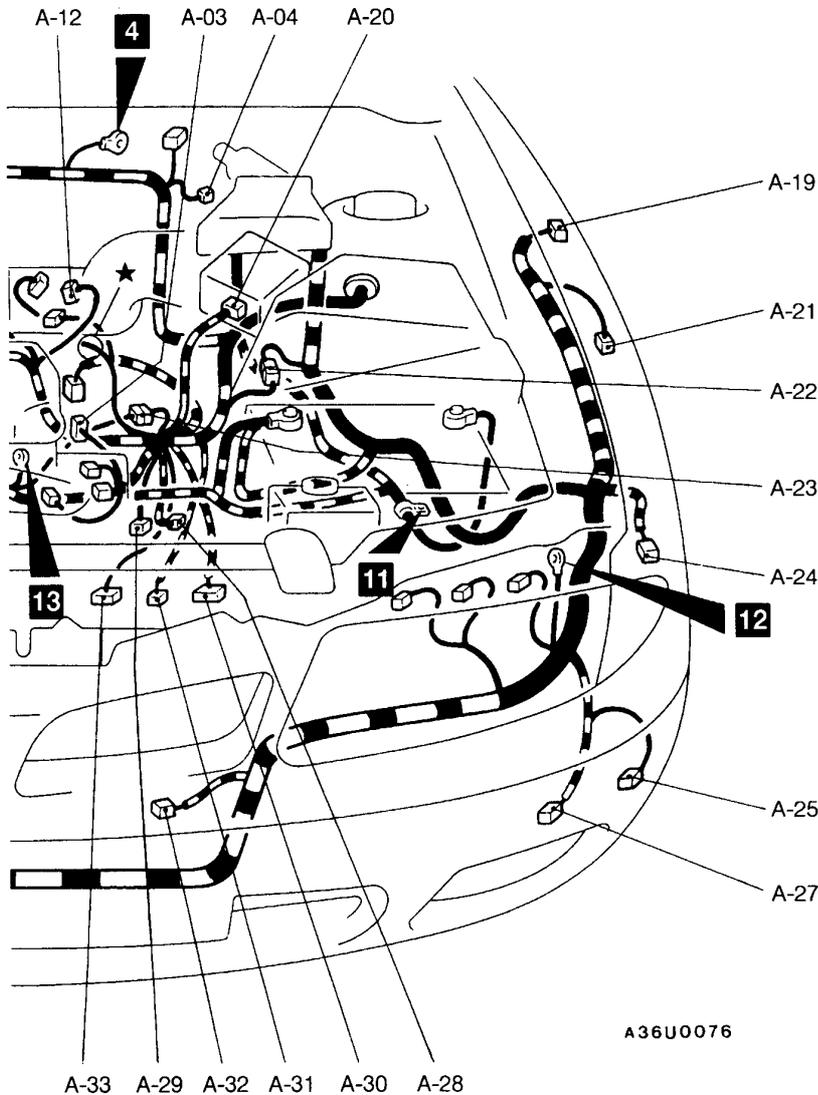


- A-28 (3-GR) Input shaft speed sensor <A/T>
- A-29 (3-B) Output shaft speed sensor <A/T>
- A-30 (10-GR) ELC-4A/T control solenoid valve
- A-31 (2-G) Back-up lamp switch <M/T>
- A-32 (2-B) Radiator fan motor
- A-33 (10-B) Inhibitor switch <A/T>
- A-34 (4) Condenser fan motor
- A-35 (2) Outside thermo sensor <Full-auto A/C> or no connection <Manual A/C>
- A-36 (1) Power steering oil pressure switch
- A-37 (2-B) Position lamp (RH)
- A-38 (3-B) Headlamp (RH)
- A-39 (3-B) Headlamp leveling unit (RH)
- A-40 (2) Front fog lamp (RH)


- A-41 (2-B) Horn (RH)
- A-43 (2-BR) Washer fluid level sensor
- A-45 (2) Rear washer motor
- A-46 (2) Windshield washer motor
- A-47 (2-B) Front turn signal lamp (RH)
- A-48 (31) ABS-ECU
- A-49 (2-B) Front speed sensor (RH) <ABS>
- A-50 (2-B) Side turn signal lamp (RH)

Remark
 Connector numbers enclosed by a frame are the connectors whose installation location are changed.

MPI-SOHC <R.H. drive vehicles>

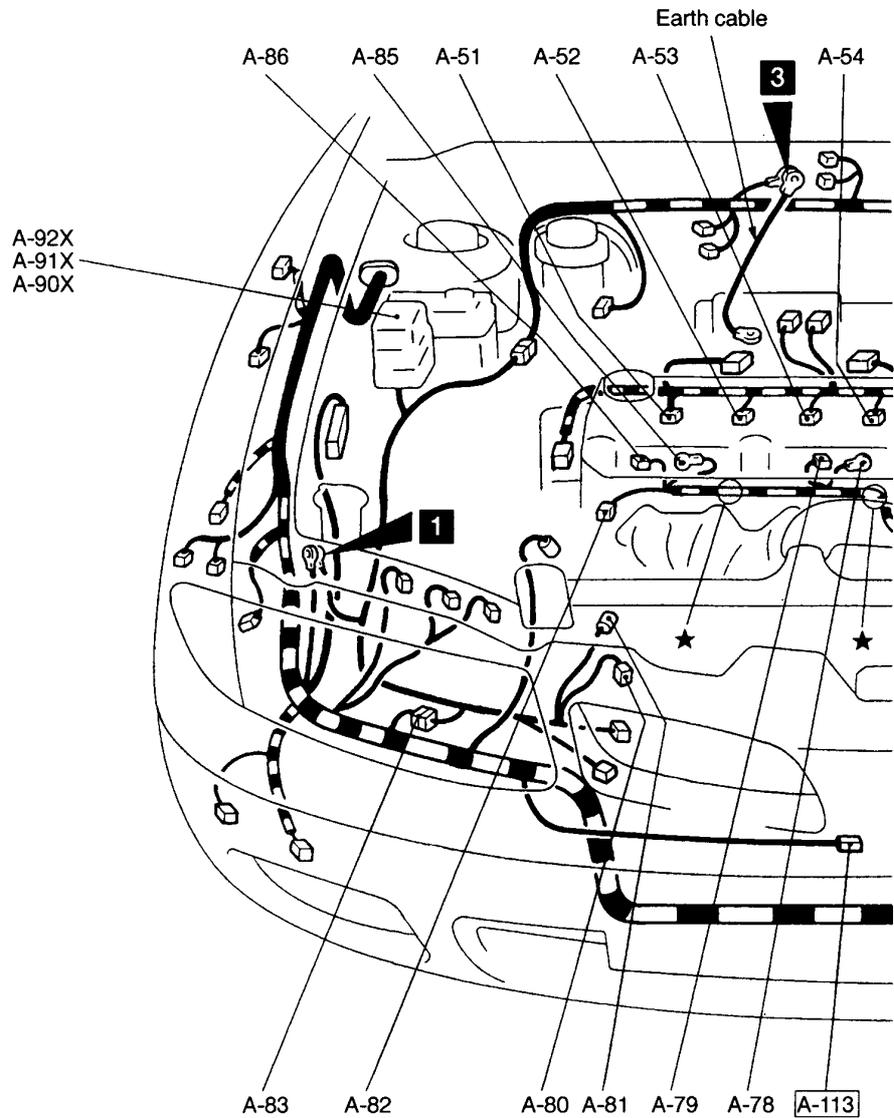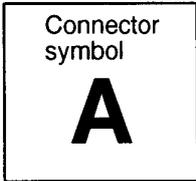

- | | | | |
|-------------|------------------------------|-------------|---------------------------------------|
| A-51 (2-GR) | Injector No. 1 | A-64X (5) | Headlamp relay |
| A-52 (2-GR) | Injector No. 2 | A-67X (5) | Horn relay <SRS> |
| A-53 (2-GR) | Injector No. 3 | A-70 (3-B) | Headlamp leveling unit (LH) |
| A-54 (2-GR) | Injector No. 4 | A-71 (3-B) | Headlamp (LH) |
| A-55 (4-B) | Auto-cruise control actuator | A-72 (2-B) | Position lamp (LH) |
| A-56 (4-B) | Throttle position sensor | A-75 (1-B) | Engine coolant temperature gauge unit |
| A-57 (6-B) | Idle speed control servo | A-76 (2-B) | Engine coolant temperature sensor |
| A-62X (4) | Alternator relay | A-77 (2-GR) | Detonation sensor |
| A-63X (5) | Radiator fan relay | | |

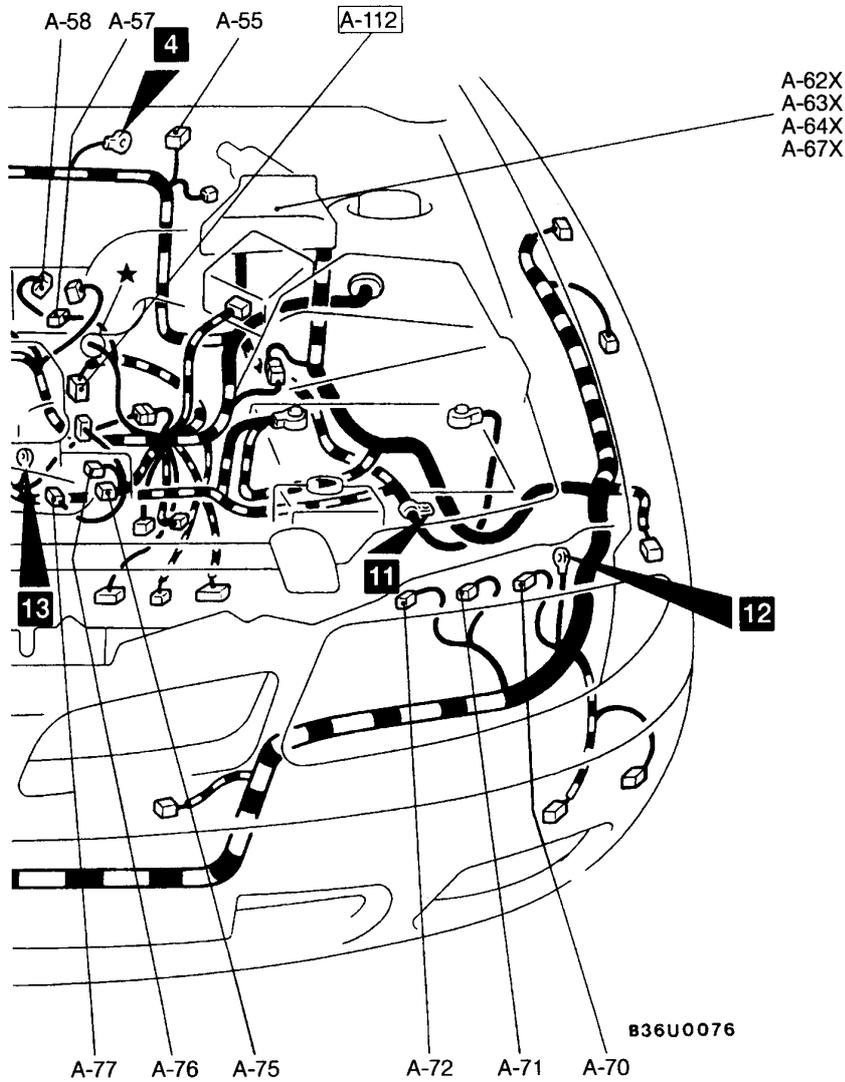



- A-78 (1) Starter
- A-79 (1-B) Starter
- A-80 (2) Dual pressure switch
- A-81 (1) A/C refrigerant temperature switch and magnetic clutch
- A-82 (1-B) Oil pressure switch
- A-83 (8-B) Front wiring harness and A/C wiring harness combination
- A-85 (1) Alternator
- A-86 (2) Alternator

- A-90X (5) Condenser fan relay (LO)
- A-91X (5) Condenser fan relay (HI)
- A-92X (5) A/C compressor relay
- A-112 (3-B) Vehicle speed sensor
- A-113 (2-BR) Outside thermo sensor

Remark
 Connector numbers enclosed by a frame are newly added connectors.


ENGINE COMPARTMENT

Diesel <L.H. drive vehicles>

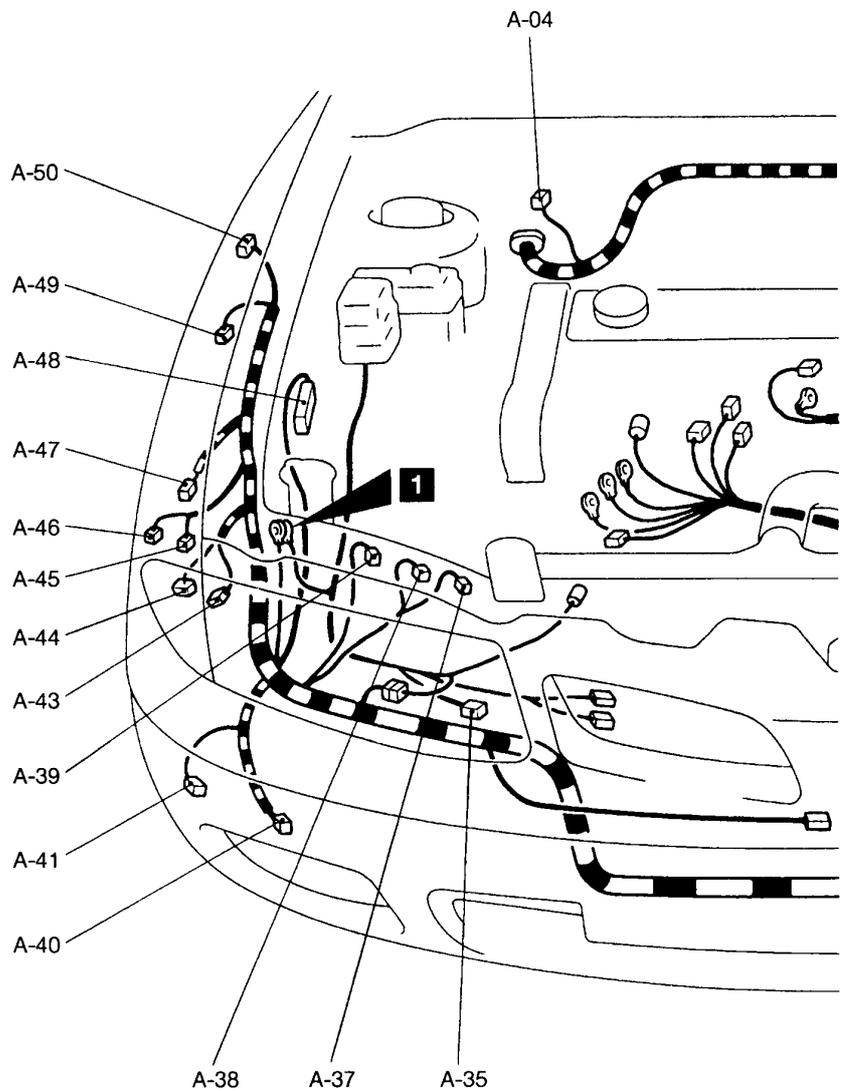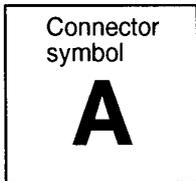



- A-04 (5-B) Windshield wiper motor
- A-13 (2-B) Brake fluid level sensor
- A-16 (12) DRL-ECU
- A-17 (4) DRL relay 1
- A-18 (4) DRL relay 2
- A-19 (2-B) Side turn signal lamp (LH)
- A-21 (2-B) Front speed sensor (LH) <ABS>
- A-22 (6-B) Front wiring harness and control wiring harness combination
- A-23 (2-B) Control wiring harness and battery cable assembly combination

- A-24 (2-B) Front turn signal lamp (LH)
- A-25 (2-B) Horn (LH)
- A-27 (2) Front fog lamp (LH)
- A-31 (2-G) Back-up lamp switch
- A-32 (4-B) Radiator fan motor
- A-35 (2) Outside thermo sensor <Full-auto A/C> or no connection <Manual A/C>
- A-37 (2-B) Position lamp (RH)
- A-38 (3-B) Headlamp (RH)
- A-39 (3-B) Headlamp leveling unit (RH)
- A-40 (2) Front fog lamp (RH)

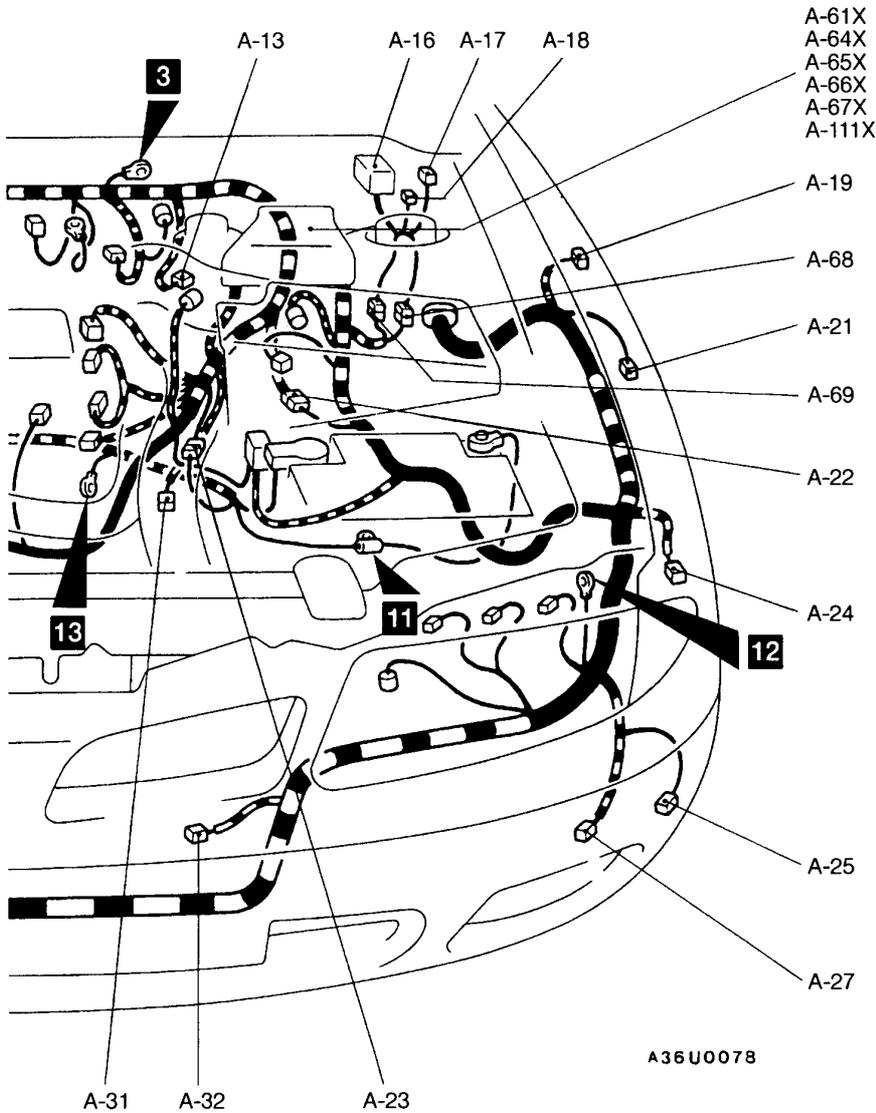


- | | | | |
|-------------|-------------------------------|-------------|---|
| A-41 (2-B) | Horn (RH) | A-64X (5) | Headlamp relay |
| A-43 (2-BR) | Washer fluid level sensor | A-65X (5) | Headlamp washer relay |
| A-44 (2) | Headlamp washer motor | A-66X (5) | Fuel line heater relay |
| A-45 (2) | Rear washer motor | A-67X (5) | Horn relay <SRS> |
| A-46 (2) | Windshield washer motor | A-68 (10-B) | Front wiring harness and DRL wiring harness combination |
| A-47 (2-B) | Front turn signal lamp (RH) | A-69 (10-B) | Front wiring harness and DRL wiring harness combination |
| A-48 (31) | ABS-ECU | A-111X (5) | Radiator fan relay (LO) |
| A-49 (2-B) | Front speed sensor (RH) <ABS> | | |
| A-50 (2-B) | Side turn signal lamp (RH) | | |
| A-61X (5) | Tail lamp relay <DRL> | | |

Diesel <L.H. drive vehicles>

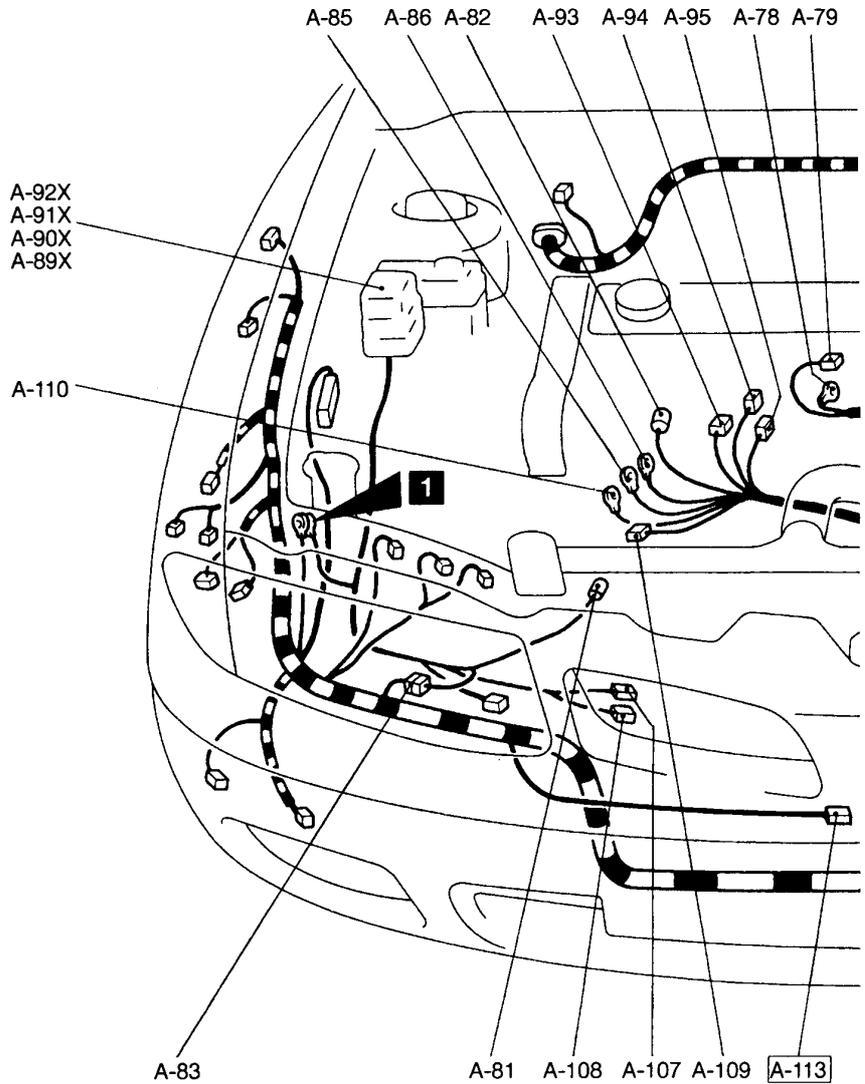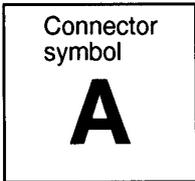

- | | | | |
|-------------|---|------------|-------------------------------|
| A-70 (3-B) | Headlamp leveling unit (LH) | A-85 (1) | Alternator |
| A-71 (3-B) | Headlamp (LH) | A-86 (2) | Alternator |
| A-72 (2-B) | Position lamp (LH) | A-89X (5) | Radiator fan relay (HI) |
| A-78 (1) | Starter | A-90X (5) | Condenser fan relay (LO) |
| A-79 (1) | Starter | A-91X (5) | Condenser fan relay (HI) |
| A-80 (2-BR) | Dual pressure switch | A-92X (5) | A/C compressor relay |
| A-81 (1) | A/C refrigerant temperature switch and magnetic clutch | A-93 (3-B) | Immobilizer |
| A-82 (1) | Oil pressure switch | A-94 (3-G) | Lever position sensor |
| A-83 (10-B) | Front wiring harness and A/C wiring harness combination | A-95 (2-B) | Timing control solenoid valve |
| | | A-96 (3-B) | Glow relay box |
| | | A-97 (1) | Glow relay box |

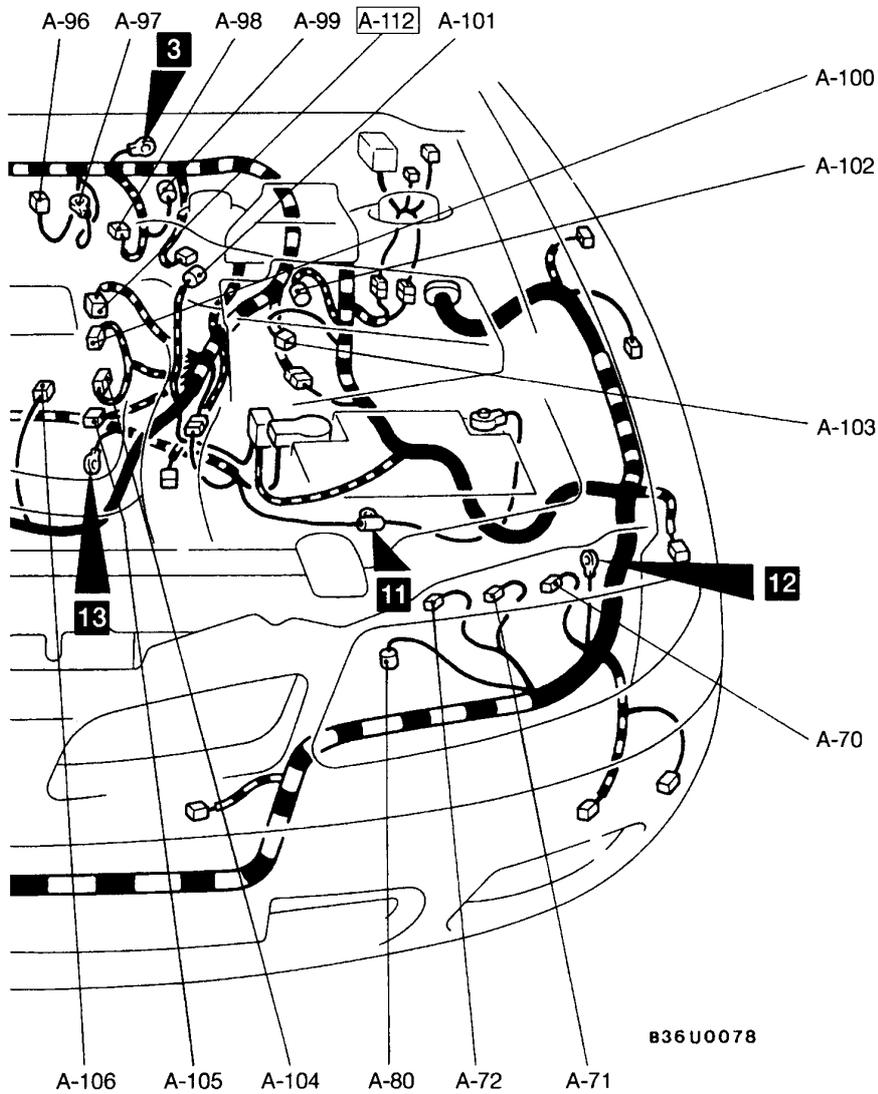

B36U0078



- A-98 (2-B) EGR solenoid valve
- A-99 (2-GR) Fast idle on/off solenoid valve
- A-100 (2-W) Engine coolant temperature sensor
- A-101 (2-B) Air temperature sensor
- A-102 (2-GR) Fuel line heater thermo switch
- A-103 (2-B) Fuel line heater
- A-104 (4-G) Engine coolant temperature gauge unit
- A-105 (2) Top dead center and engine speed sensor
- A-106 (2-B) Needle lift sensor

- A-107 (2) Condenser fan motor
- A-108 (2) Condenser fan motor
- A-109 (1) Alternator
- A-110 (1) Alternator
- A-112 (3-B) Vehicle speed sensor
- A-113 (2-BR) Outside thermo sensor


Remark
 Connector numbers enclosed by a frame are newly added connectors.

ENGINE COMPARTMENT

Diesel <R.H. drive vehicles>

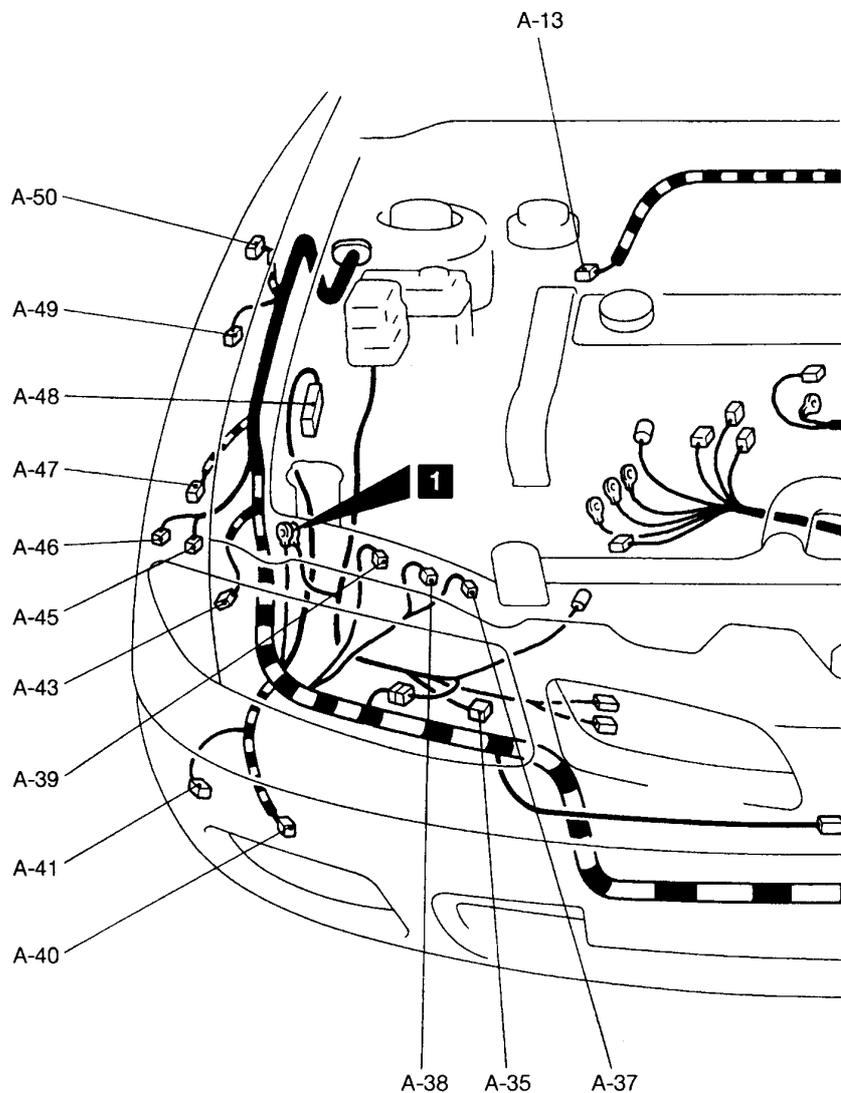
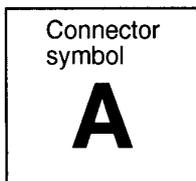


A-04 (5-B)	Windshield wiper motor	A-27 (2)	Front fog lamp (LH)
A-13 (2-B)	Brake fluid level sensor	A-31 (2-G)	Back-up lamp switch
A-19 (2-B)	Side turn signal lamp (LH)	A-32 (4-B)	Radiator fan motor
A-21 (2-B)	Front speed sensor (LH) <ABS>	A-35 (2)	Outside thermo sensor <Full-auto A/C> or no connection <Manual A/C>
A-22 (6-B)	Front wiring harness and control wiring harness combination	A-37 (2-B)	Position lamp (RH)
A-23 (2-B)	Control wiring harness and battery cable assembly combination	A-38 (3-B)	Headlamp (RH)
A-24 (2-B)	Front turn signal lamp (LH)	A-39 (3-B)	Headlamp leveling unit (RH)
A-25 (2-B)	Horn (LH)	A-40 (2)	Front fog lamp (RH)

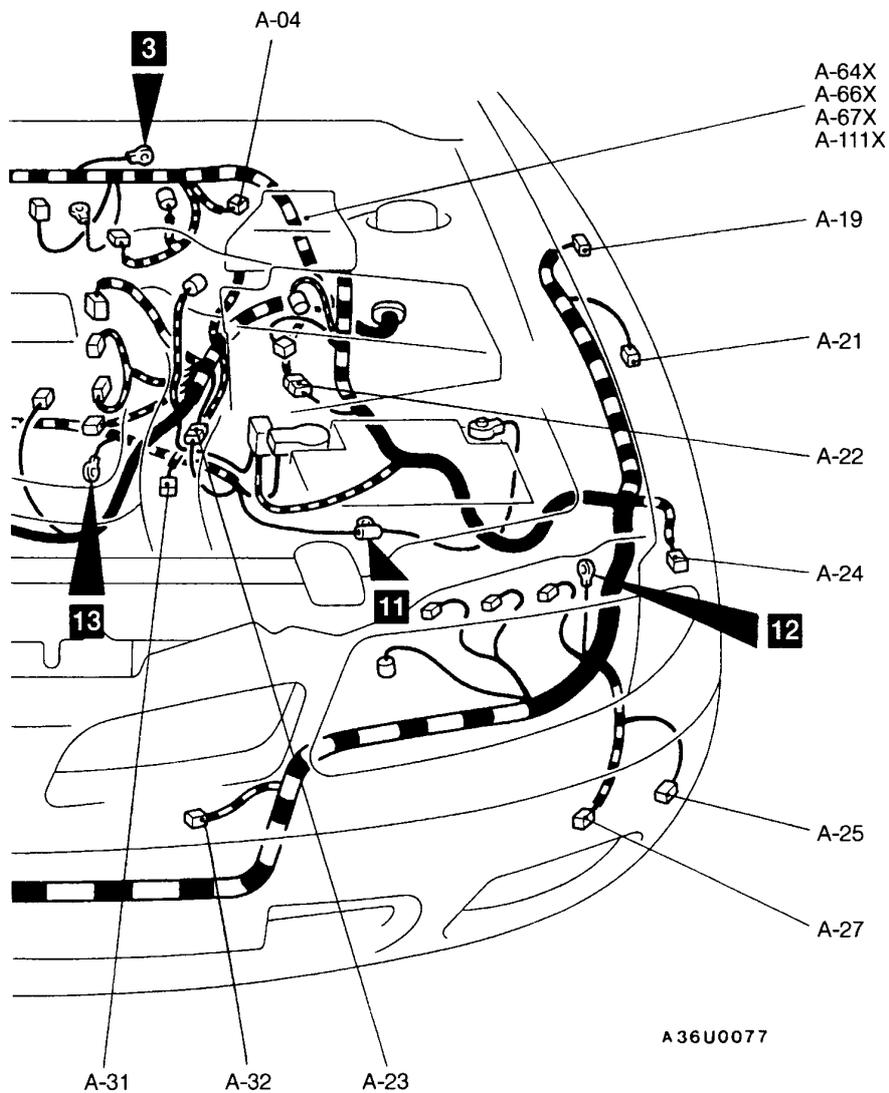


A-41 (2-B)	Horn (RH)	A-49 (2-B)	Front speed sensor (RH) <ABS>
A-43 (2-BR)	Washer fluid level sensor	A-50 (2-B)	Side turn signal lamp (RH)
A-45 (2)	Rear washer motor	A-64X (5)	Headlamp relay
A-46 (2)	Windshield washer motor	A-66X (5)	Fuel line heater relay
A-47 (2)	Front turn signal lamp (RH)	A-67X (5)	Horn relay <SRS>
A-48 (31)	ABS-ECU	A-111X (5)	Radiator fan relay (LO)

Diesel <R.H. drive vehicles>

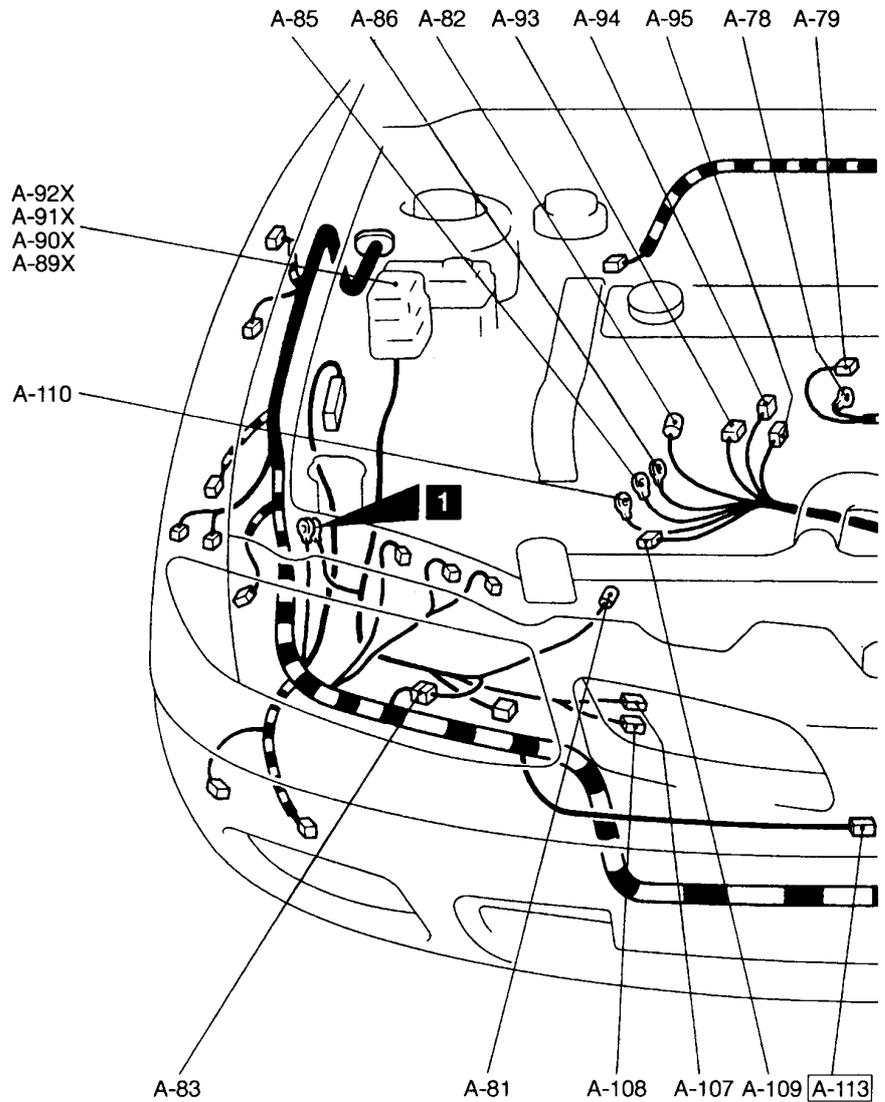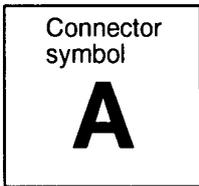

- A-70 (3-B) Headlamp leveling unit (LH)
- A-71 (3-B) Headlamp (LH)
- A-72 (2-B) Position lamp (LH)
- A-78 (1) Starter
- A-79 (1) Starter
- A-80 (2-BR) Dual pressure switch
- A-81 (1) A/C refrigerant temperature switch and magnetic clutch
- A-82 (1) Oil pressure switch
- A-83 (10-B) Front wiring harness and A/C wiring harness combination

- A-85 (1) Alternator
- A-86 (2) Alternator
- A-89X (5) Radiator fan relay (HI)
- A-90X (5) Condenser fan relay (LO)
- A-91X (5) Condenser fan relay (HI)
- A-92X (5) A/C compressor relay
- A-93 (3-B) Immobilizer
- A-94 (3-G) Lever position sensor
- A-95 (2-B) Timing control solenoid valve
- A-96 (3-B) Glow relay box
- A-97 (1) Glow relay box

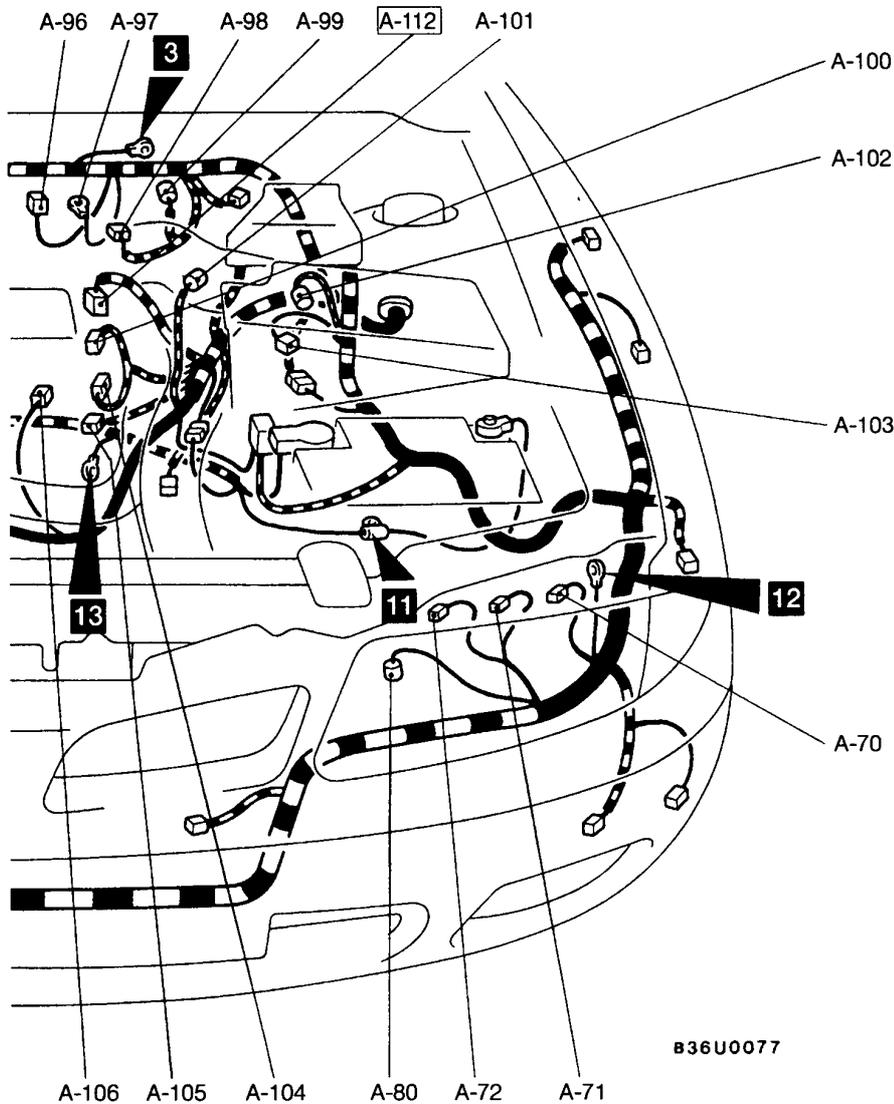

B36U0077



- A-98 (2-B) EGR solenoid valve
- A-99 (2-GR) Fast idle on/off solenoid valve
- A-100 (2-W) Engine coolant temperature sensor
- A-101 (2-B) Air temperature sensor
- A-102 (2-GR) Fuel line heater thermo switch
- A-103 (2-B) Fuel line heater
- A-104 (4-G) Engine coolant temperature gauge unit
- A-105 (2) Top dead center and engine speed sensor
- A-106 (2-B) Needle lift sensor

- A-107 (2) Condenser fan motor
- A-108 (2) Condenser fan motor
- A-109 (1) Alternator
- A-110 (1) Alternator
- A-112 (3-B) Vehicle speed sensor
- A-113 (2-BR) Outside thermo sensor


Remark
 Connector numbers enclosed by a frame are newly added connectors.

DASH PANEL

L.H. drive vehicles

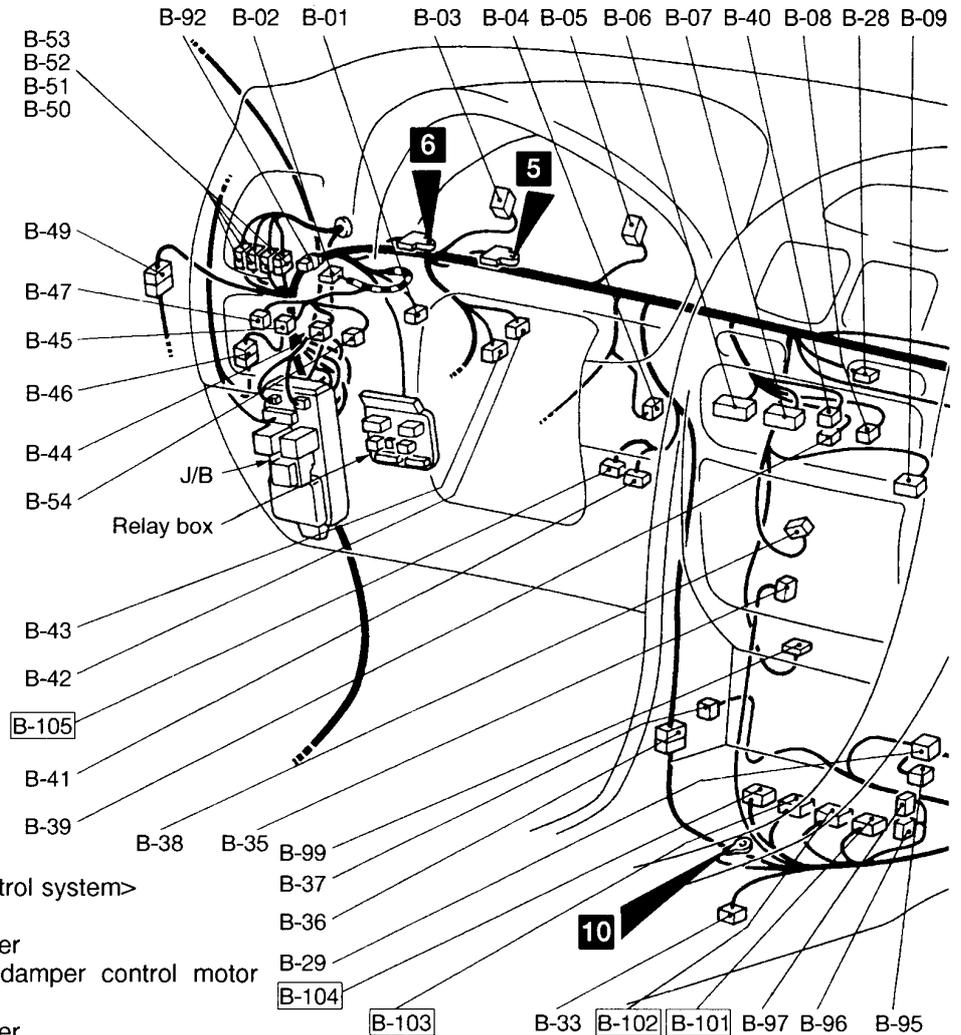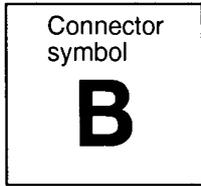

- | | | | | | |
|-------------|---|-------|-------|-------------|--|
| B-01 (2) | Clutch switch
<Auto-cruise control system> | B-99 | | B-18 (20) | Front door wiring harness (passenger's side) and body wiring harness combination |
| B-02 (16-B) | Immobilizer-ECU | B-37 | | B-19 (26-Y) | Engine-ECU <Petrol-M/T> |
| B-03 (25) | Combination meter | B-36 | | B-20 (16-Y) | Engine-ECU <Petrol-M/T> |
| B-04 (6) | Mode selection damper control motor
<Full-auto A/C> | B-29 | | B-21 (12-Y) | Engine-ECU <Petrol-M/T> |
| B-05 (25) | Combination meter | B-104 | | B-22 (22-Y) | Engine-ECU <Petrol-M/T> |
| B-06 (16-B) | A/C control panel and ECU assembly
<Full-auto A/C> | B-103 | | B-23 (4) | Blower high speed relay <Full-auto A/C> |
| B-07 (20-B) | A/C control panel and ECU assembly
<Full-auto A/C> | B-33 | B-102 | B-24 (2) | Blower motor |
| B-08 (2) | Blower control illumination lamp
<Heater and manual A/C> | B-101 | B-97 | B-25 (12) | Automatic compressor ECU
<Manual A/C> |
| B-09 (14) | Radio and tape player | B-96 | B-95 | B-26 (4) | Resistor <Heater or manual A/C> |
| B-10 (2) | Photosensor <Full-auto A/C> | | | B-27 (4) | Power transistor <Full-auto A/C> |
| B-11 (2) | Heater water temperature sensor
<Full-auto A/C> | | | B-28 (2-B) | Air thermo sensor <A/C> |
| B-12 (2-R) | Air bag module (squib) (passenger's side) | | | B-29 (4) | A/T relay |
| B-13 (4) | Air purifier <Full-auto A/C> | | | B-33 (4) | Oxygen sensor |
| B-14 (6) | Outside/inside air selection damper motor
<Full-auto A/C> | | | B-35 (18) | Auto-cruise ECU |
| B-15 (4) | Control wiring harness and body wiring harness combination <Petrol> | | | B-36 (14) | Control wiring harness and body wiring harness combination <A/T> |
| B-16 (20) | Control wiring harness and body wiring harness combination | | | B-37 (2-B) | Kickdown switch <A/T> |
| B-17 (22) | Control wiring harness and body wiring harness combination
<TCL or auto-cruise control system> | | | B-38 (6) | Air mixing damper control motor
<Full-auto A/C> |


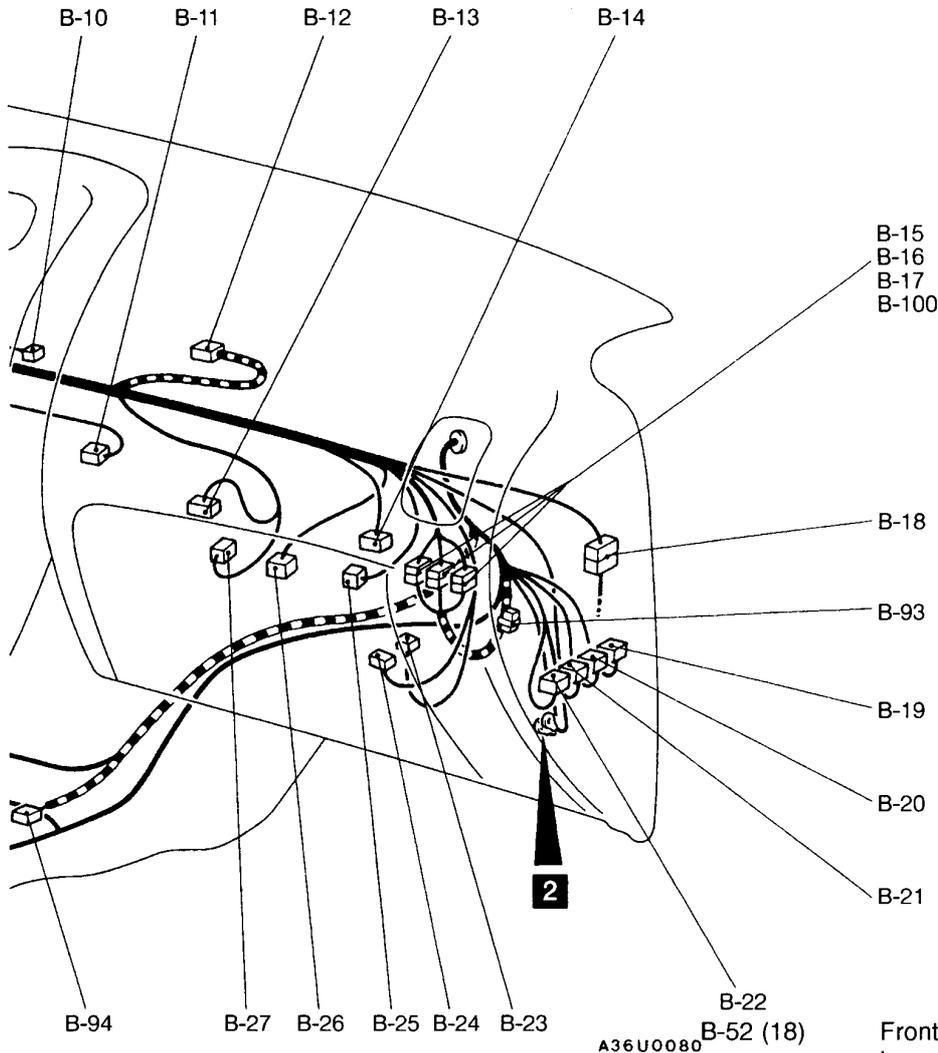


- B-39 (6) A/C switch <Manual A/C>
- B-40 (8) Blower switch <Heater or manual A/C>
- B-41 (16-B) Diagnosis connector
- B-42 (3-B) Stop lamp switch <Vehicles without auto-cruise control system> or no connection <Vehicles with auto-cruise control system>
- B-43 (4-BR) Stop lamp switch <Vehicles with auto-cruise control system>
- B-44 (12) Remote controlled mirror switch
- B-45 (6) Headlamp leveling switch
- B-46 (10) Instrument panel wiring harness and body wiring harness combination
- B-47 (10) Front fog lamp switch or rear fog lamp switch
- B-49 (32-B) Front door wiring harness (driver's side) and body wiring harness combination
- B-50 (22-GR) Front wiring harness and body wiring harness combination
- B-51 (1) Front wiring harness and body wiring harness combination


- B-15
- B-16
- B-17
- B-100
- B-18
- B-93
- B-19
- B-20
- B-21
- B-22
- A36U0080 B-52 (18)
- B-53 (10-B)
- B-54 (3) Rheostat or jumper connector
- B-92 (2) Diode <Keyless entry system>
- B-93 (2) Diode <Diesel>
- B-94 (4) Ignition relay <Diesel>
- B-95 (25) Engine-ECU <Diesel>
- B-96 (4) Engine control relay <Petrol>
- B-97 (4) Fuel pump relay <Petrol>
- B-99 (22-DG) Keyless entry receiver ECU
- B-100 (2) Control wiring harness and body wiring harness combination <Diesel>
- B-101 (30) Engine-A/T-ECU <Petrol-A/T>
- B-102 (28) Engine-A/T-ECU <Petrol-A/T>
- B-103 (26) Engine-A/T-ECU <Petrol-A/T>
- B-104 (35) Engine-A/T-ECU <Petrol-A/T>
- B-105 (12) Diagnosis connector <A/T>

Remark
 Connector numbers enclosed by a frame are newly added connectors.

L.H. drive vehicles

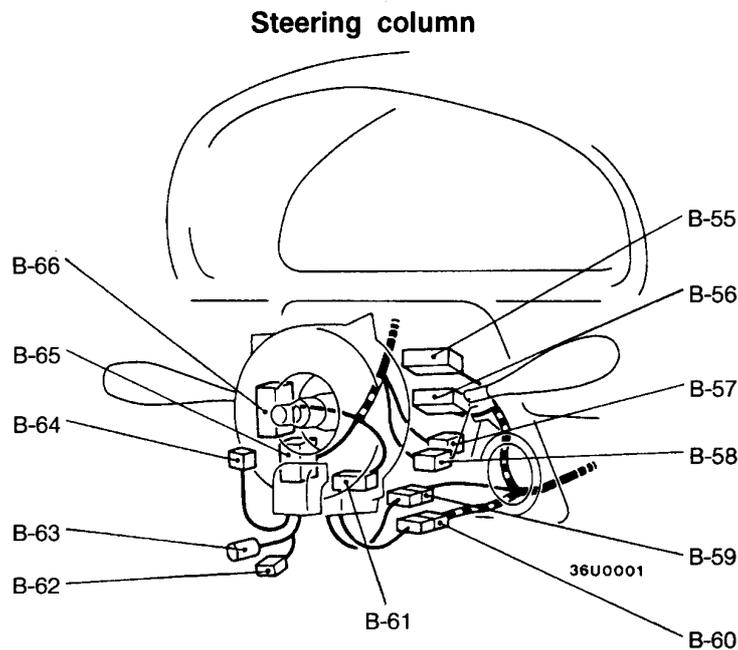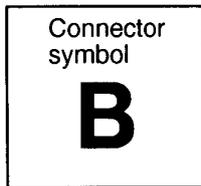

Relay box in passenger compartment

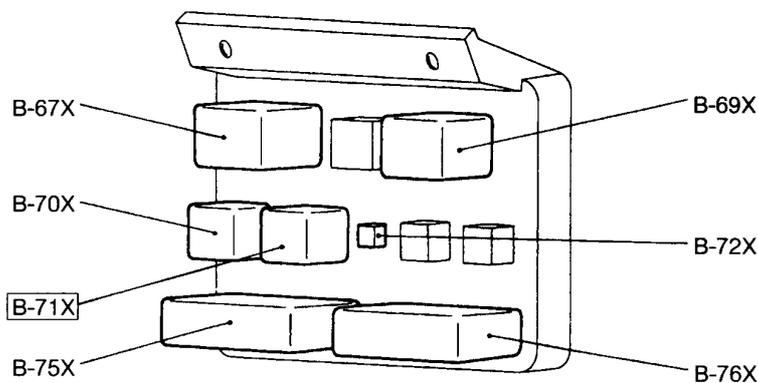


36U0083

00006861

B-55 (12)	Column switch	B-67X (9)	Door lock ECU
B-56 (7)	Slip ring <Auto-cruise control system (without SRS)>	B-69X (7)	<Vehicles without keyless entry system> Rear intermittent wiper relay
B-57 (2)	Ignition key ring antenna	B-70X (5)	Rear fog lamp relay
B-58 (6)	Ignition switch	B-71X (5)	Front fog lamp relay
B-59 (3)	Clock spring <SRS>	B-72X (3)	Diode
B-60 (2-R)	Clock spring <SRS>	B-75X (33)	J/C (1)
B-61 (5)	Steering wheel sensor <TCL>	B-76X (33)	J/C (2)
B-62 (2)	Auto-cruise control switch <SRS>	B-77 (2)	J/B and roof wiring harness combination <Sunroof>
B-63 (1)	Horn switch <SRS>	B-78 (6)	J/B and roof wiring harness combination
B-64 (2)	Air bag module (squib) (driver's side)	B-79 (18)	J/B and instrument panel wiring harness combination
B-65 (10)	Column switch		
B-66 (6)	Column switch		


J/B

(Front view)

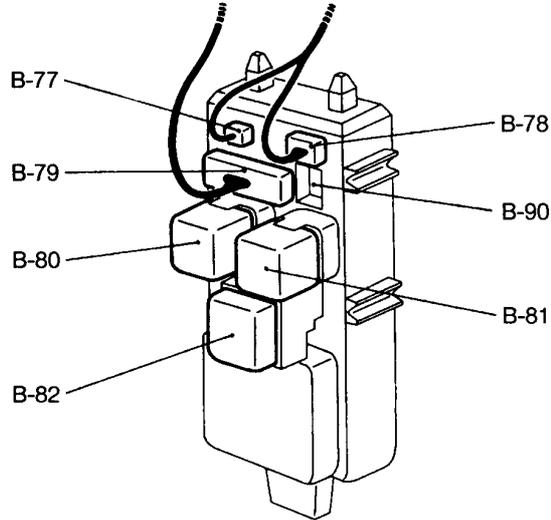

36U0007

(Rear view)

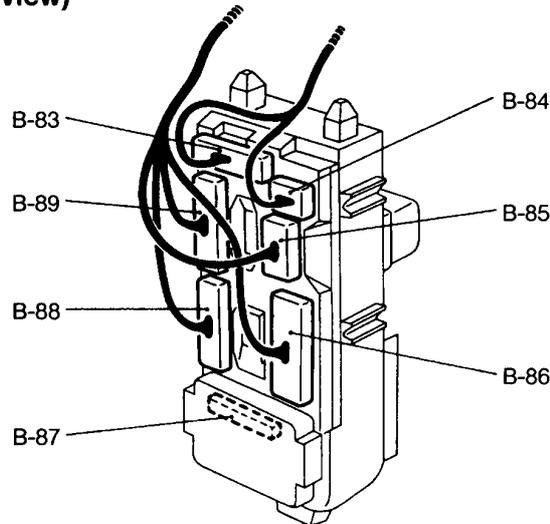



36U0009

00003491


B-80 (5)	Blower relay	B-87 (10)	Buzzer-ECU
B-81 (5)	Defogger relay	B-88 (22)	J/B and body wiring harness combination
B-82 (5)	Turn-signal and hazard warning flasher unit	B-89 (22)	J/B and body wiring harness combination
B-83 (20)	J/B and front wiring harness combination	B-90 (8)	No connection
B-84 (2)	J/B and front wiring harness combination		
B-85 (3)	J/B and body wiring harness combination	Remark	
B-86 (18)	J/B and body wiring harness combination	Connector numbers enclosed by a frame <input type="checkbox"/>	are newly added connectors.

DASH PANEL

R.H. drive vehicles

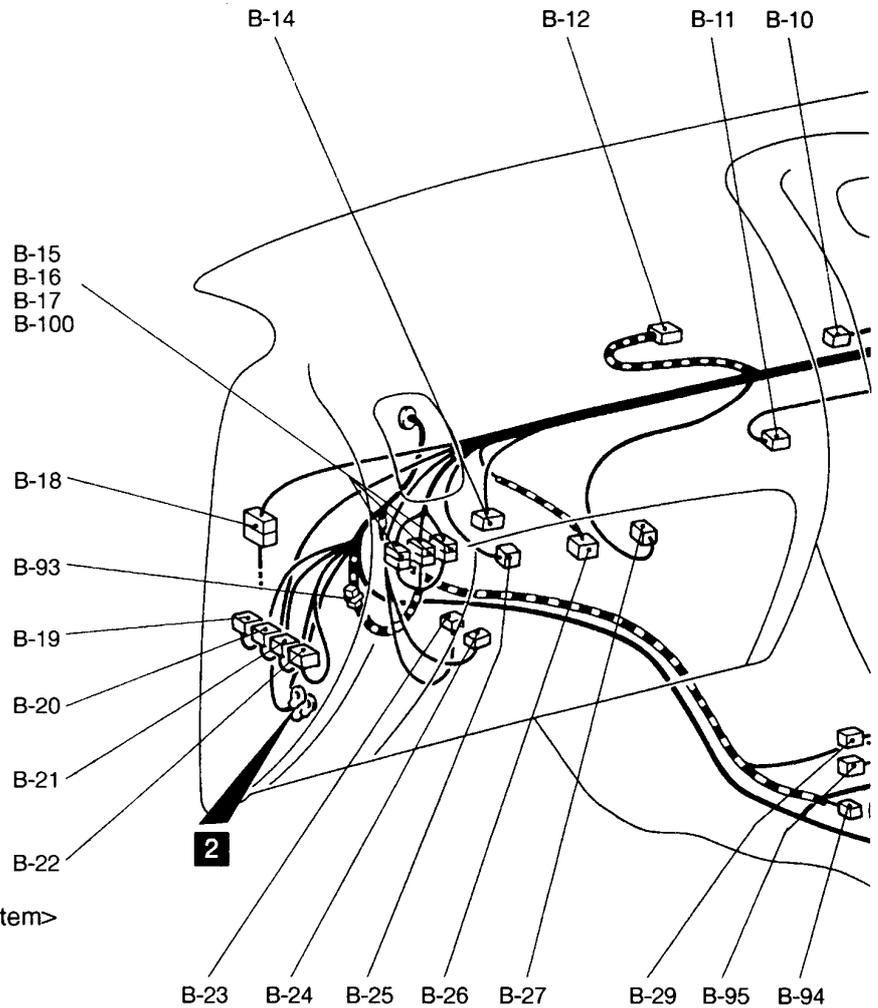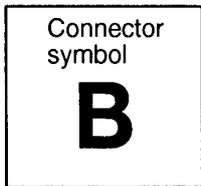


- | | | | |
|-------------|--|-------------|--|
| B-01 (2) | Clutch switch
<Auto-cruise control system> | B-18 (20) | Front door wiring harness (passenger's side) and body wiring harness combination |
| B-02 (16-B) | Immobilizer-ECU | B-19 (26-Y) | Engine-ECU <Petrol-M/T> |
| B-03 (25) | Combination meter | B-20 (16-Y) | Engine-ECU <Petrol-M/T> |
| B-04 (6) | Mode selection damper control motor <Full-auto A/C> | B-21 (12-Y) | Engine-ECU <Petrol-M/T> |
| B-05 (25) | Combination meter | B-22 (22-Y) | Engine-ECU <Petrol-M/T> |
| B-06 (16-B) | A/C control panel and ECU assembly <Full-auto A/C> | B-23 (4) | Blower high speed relay <Full-auto A/C> |
| B-07 (20-B) | A/C control panel and ECU assembly <Full-auto A/C> | B-24 (2) | Blower motor |
| B-08 (2) | Blower control illumination lamp <Heater and manual A/C> | B-25 (12) | Automatic compressor ECU <Manual A/C> |
| B-09 (14) | Radio and tape player | B-26 (4) | Resistor <Heater or manual A/C> |
| B-10 (2) | Photosensor <Full-auto A/C> | B-27 (4) | Power transistor <Full-auto A/C> |
| B-11 (2) | Heater water temperature sensor <Full-auto A/C> | B-28 (2-B) | Air thermo sensor <A/C> |
| B-12 (2-R) | Air bag module (squib) (passenger's side) | B-29 (4) | A/T relay |
| B-14 (6) | Outside/inside air selection damper motor <Full-auto A/C> | B-33 (4) | Oxygen sensor |
| B-15 (4) | Control wiring harness and body wiring harness combination <Petrol> | B-35 (18) | Auto-cruise ECU |
| B-16 (20) | Control wiring harness and body wiring harness combination | B-36 (14) | Control wiring harness and body wiring harness combination <A/T> |
| B-17 (22) | Control wiring harness and body wiring harness combination <TCL or auto-cruise control system> | B-37 (2-B) | Kickdown switch <A/T> |
| | | B-38 (6) | Air mixing damper control motor <Full-auto A/C> |
| | | B-39 (6) | A/C switch <Manual A/C> |

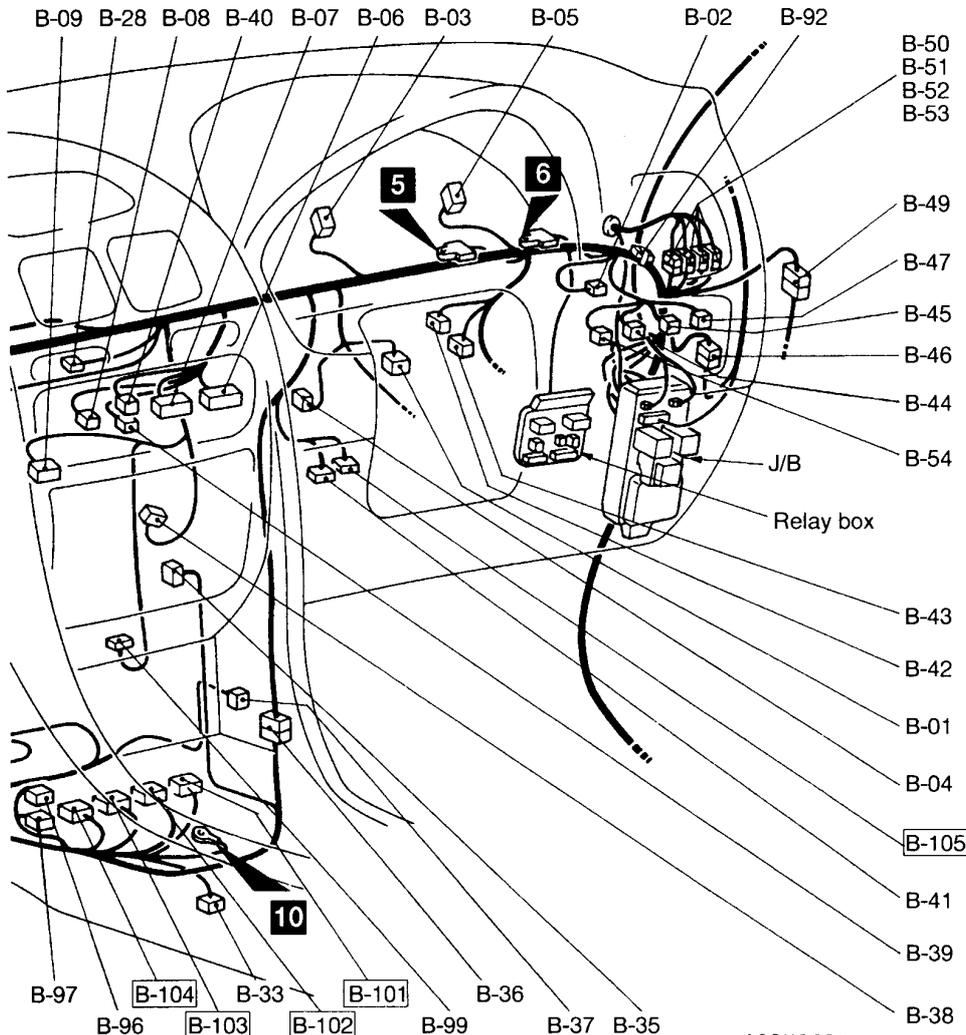


A36U0081

- | | | | |
|--------------|--|--|---|
| B-40 (8) | Blower switch <Heater or manual A/C> | B-53 (10-B) | Front wiring harness and body wiring harness combination |
| B-41 (16-B) | Diagnosis connector | B-54 (3) | Rheostat or jumper connector |
| B-42 (3-B) | Stop lamp switch <Vehicles without auto-cruise control system> or no connection <Vehicles with auto-cruise control system> | B-92 (2) | Diode <Keyless entry system> |
| B-43 (4-BR) | Stop lamp switch <Vehicles with auto-cruise control system> | B-93 (2) | Diode <Diesel> |
| B-44 (12) | Remote controlled mirror switch | B-94 (4) | Ignition relay <Diesel> |
| B-45 (6) | Headlamp leveling switch | B-95 (25) | Engine-ECU <Diesel> |
| B-46 (10) | Instrument panel wiring harness and body wiring harness combination | B-96 (4) | Engine control relay <Petrol> |
| B-47 (10) | Front fog lamp switch and rear fog lamp switch | B-97 (4) | Fuel pump relay <Petrol> |
| B-49 (32-B) | Front door wiring harness (driver's side) and body wiring harness combination | B-99 (22-DG) | Keyless entry receiver ECU |
| B-50 (22-GR) | Front wiring harness and body wiring harness combination | B-100 (2) | Control wiring harness and body wiring harness combination <Diesel> |
| B-51 (1) | Front wiring harness and body wiring harness combination | B-101 (30) | Engine-A/T-ECU <Petrol-A/T> |
| B-52 (18) | Front wiring harness and body wiring harness combination | B-102 (28) | Engine-A/T-ECU <Petrol-A/T> |
| | | B-103 (26) | Engine-A/T-ECU <Petrol-A/T> |
| | | B-104 (35) | Engine-A/T-ECU <Petrol-A/T> |
| | | B-105 (12) | Diagnosis connector <A/T> |
- Remark
Connector numbers enclosed by a frame are newly added connectors.


R.H. drive vehicles

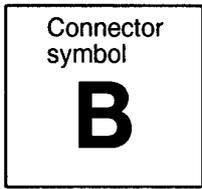

Steering column

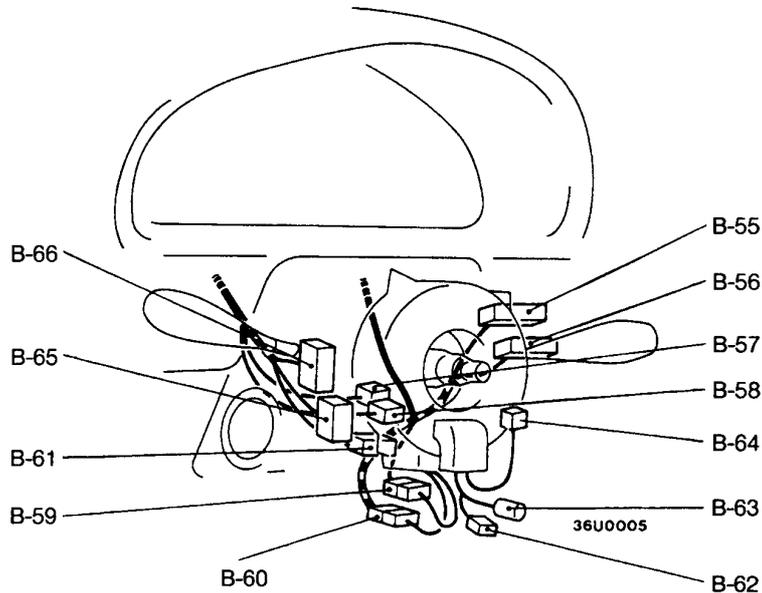



Relay box in passenger compartment

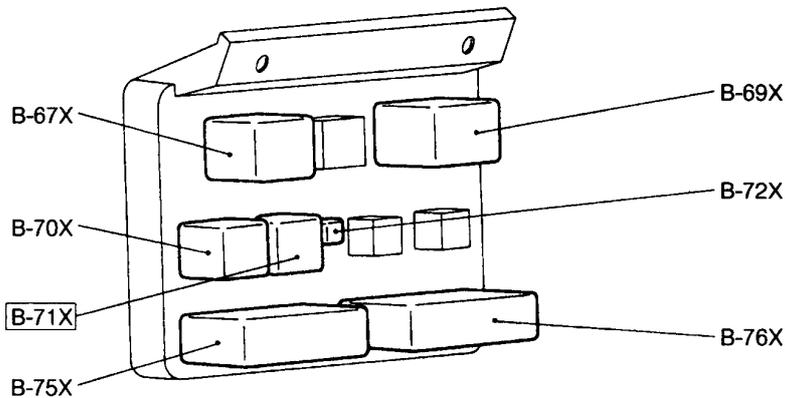

36U0082

00006862

- | | | | |
|------------|--|------------------|---|
| B-55 (12) | Column switch | B-67X (9) | Door lock ECU |
| B-56 (7) | Slip ring <Auto-cruise control system (without SRS)> | B-69X (7) | <Vehicles without keyless entry system> |
| B-57 (2) | Ignition key ring antenna | B-70X (5) | Rear intermittent wiper relay |
| B-58 (6) | Ignition switch | B-71X (5) | Rear fog lamp relay |
| B-59 (3) | Clock spring <SRS> | B-72X (3) | Front fog lamp relay |
| B-60 (2-R) | Clock spring <SRS> | B-75X (33) | Diode |
| B-61 (5) | Steering wheel sensor <TCL> | B-76X (33) | J/C (1) |
| B-62 (2) | Auto-cruise control switch <SRS> | B-77 (2) | J/C (2) |
| B-63 (1) | Horn switch <SRS> | B-78 (6) | J/B and roof wiring harness combination |
| B-64 (2) | Air bag module (squib) (driver's side) | B-79 (18) | <Sunroof> |
| B-65 (10) | Column switch | | J/B and roof wiring harness combination |
| B-66 (6) | Column switch | | J/B and instrument panel wiring harness combination |

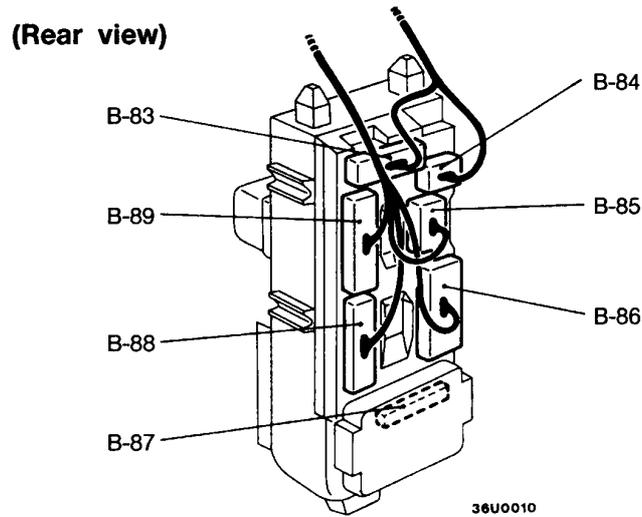
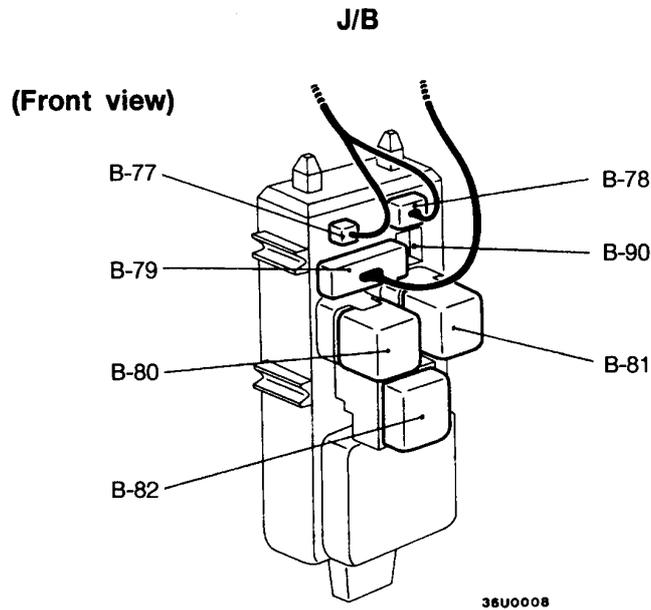


00003493


B-80 (5)	Blower relay	B-87 (10)	Buzzer-ECU
B-81 (5)	Defogger relay	B-88 (22)	J/B and body wiring harness combination
B-82 (5)	Turn-signal and hazard warning flasher unit	B-89 (22)	J/B and body wiring harness combination
B-83 (20)	J/B and front wiring harness combination	B-90 (8)	No connection
B-84 (2)	J/B and front wiring harness combination		
B-85 (3)	J/B and body wiring harness combination		
B-86 (18)	J/B and body wiring harness combination		
		Remark	
		Connector numbers enclosed by a frame are newly added connectors.	

FLOOR AND ROOF


L.H. drive vehicles

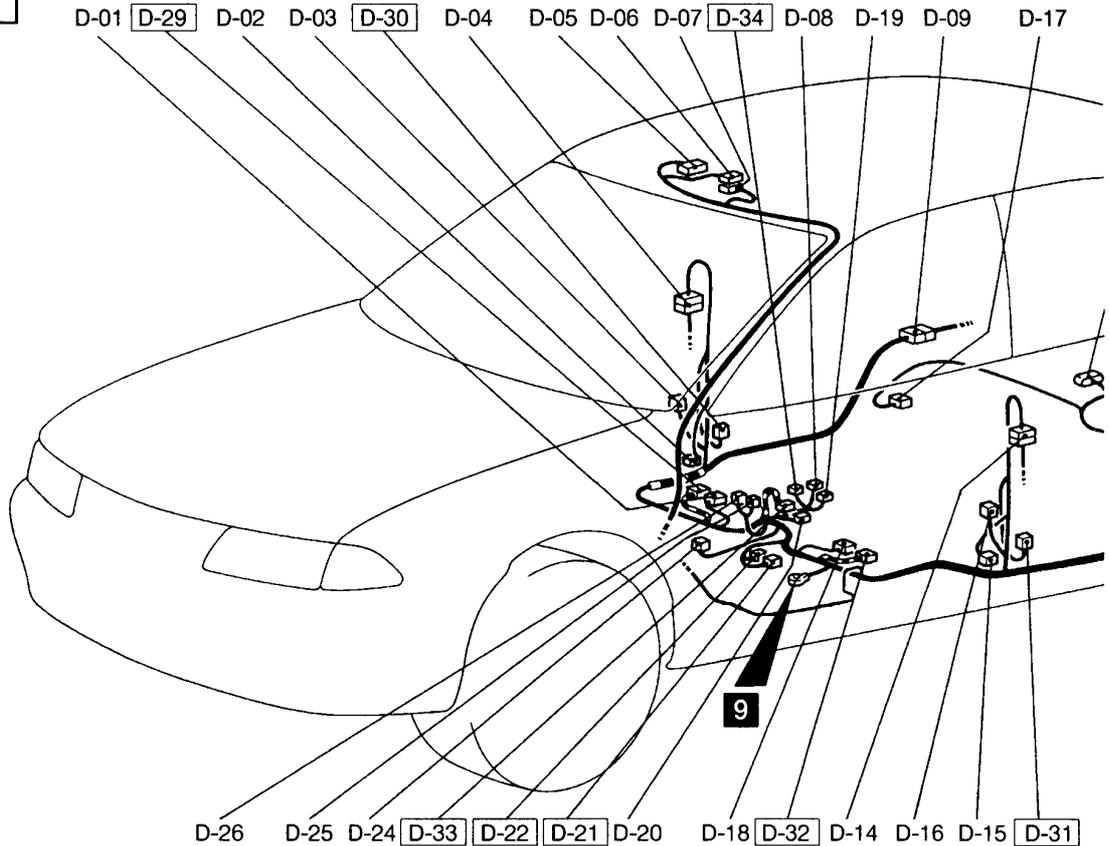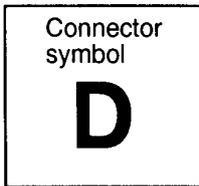

- | | | | |
|------------|---|------------|---|
| D-01 (3-B) | Heated seat (RH) | D-10 (5-B) | Fuel pump and gauge unit assembly |
| D-02 (1-B) | Front door switch (passenger's side) | D-11 (22) | Rear wiring harness and body wiring harness combination |
| D-03 (2-R) | Seat belt pretensioner (passenger's side) <SRS> | D-12 (2-B) | Rear speed sensor (LH) <ABS> |
| D-04 (8) | Rear door wiring harness (RH) and body wiring harness combination | D-13 (10) | Fuel pump wiring harness and body wiring harness combination |
| D-05 (10) | Sunroof ECU | D-14 (8) | Rear door wiring harness (LH) and body wiring harness combination |
| D-06 (2) | Sunroof motor | D-15 (2-R) | Seat belt pretensioner (driver's side) <SRS> |
| D-07 (8) | Room lamp and sunroof switch <with sunroof> | D-16 (2) | Front door switch (driver's side) |
| D-08 (6) | TCL switch | | |
| D-09 (6) | Rear wiring harness and body wiring harness combination | | |

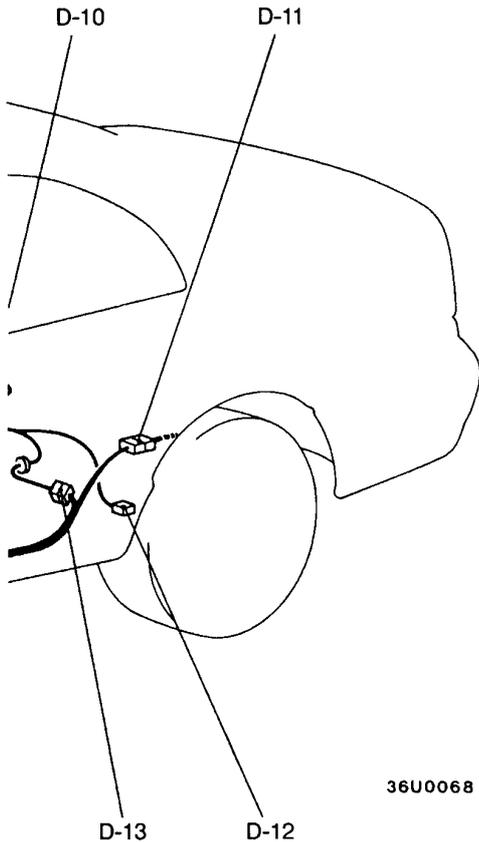

<Vehicles without sunroof>

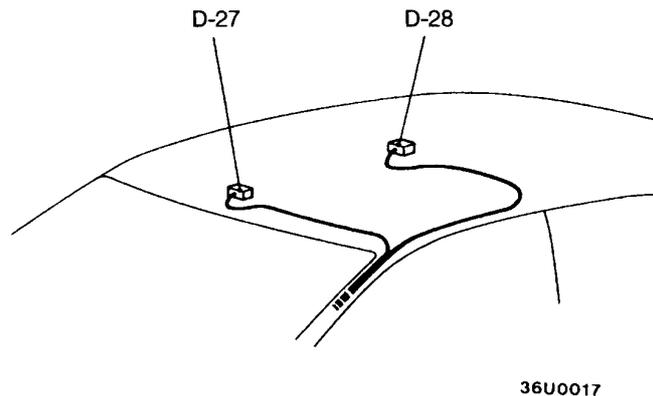

36U0017

00006176

- D-17 (2-B) Rear speed sensor (RH) <ABS>
- D-18 (3-B) Heated seat (LH)
- D-19 (6) Hold switch <A/T>
- D-20 (1-B) Parking brake switch
- D-21 (26-DG) TCL-ECU
- D-22 (16) TCL-ECU
- D-24 (2) Shift indicator illumination lamp <A/T>
- D-25 (6-B) Heated seat switch (LH)
- D-26 (6) Heated seat switch (RH)
- D-27 (1) Map lamp <without sunroof>
- D-28 (2) Room lamp <without sunroof>



- D-29 (2-R) Side air bag module (squib) (RH)
- D-30 (3-B) Side impact sensor (RH)
- D-31 (3-B) Side impact sensor (LH)
- D-32 (2-R) Side air bag module (squib) (LH)
- D-33 (36-O) SRS-ECU
- D-34 (6-L) Door lock switch

Remark


Connector numbers in are connector numbers which have been changed or added.

FLOOR AND ROOF

R.H. drive vehicles

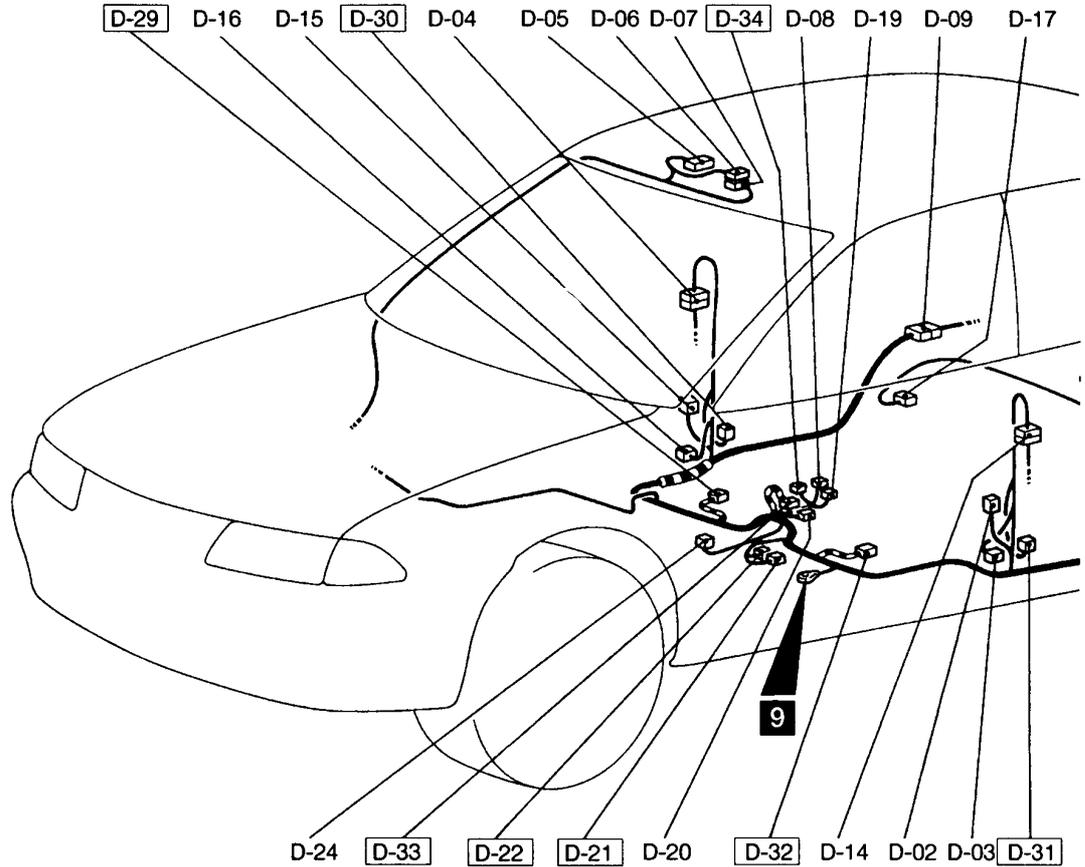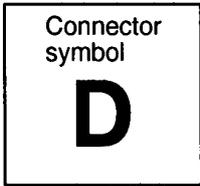


- | | | | |
|------------|---|------------|---|
| D-02 (1-B) | Front door switch (passenger's side) | D-09 (6) | Rear wiring harness and body wiring harness combination |
| D-03 (2-R) | Seat belt pretensioner (passenger's side) <SRS> | D-10 (5-B) | Fuel pump and gauge unit assembly |
| D-04 (8) | Rear door wiring harness (RH) and body wiring harness combination | D-11 (22) | Rear wiring harness and body wiring harness combination |
| D-05 (10) | Sunroof ECU | D-12 (2-B) | Rear speed sensor (LH) <ABS> |
| D-06 (2) | Sunroof motor | D-13 (10) | Fuel pump wiring harness and body wiring harness combination |
| D-07 (8) | Room lamp and sunroof switch <with sunroof> | D-14 (8) | Rear door wiring harness (LH) and body wiring harness combination |
| D-08 (6) | TCL switch | | |

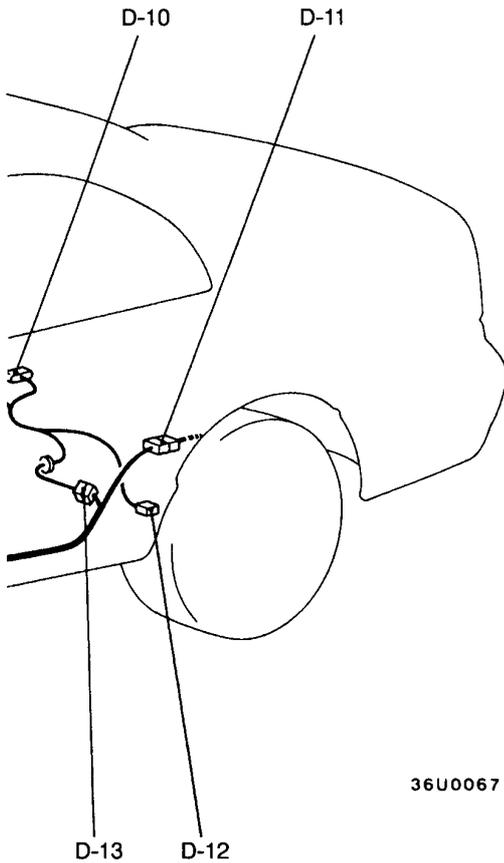

36U0067

<Vehicles without sunroof>

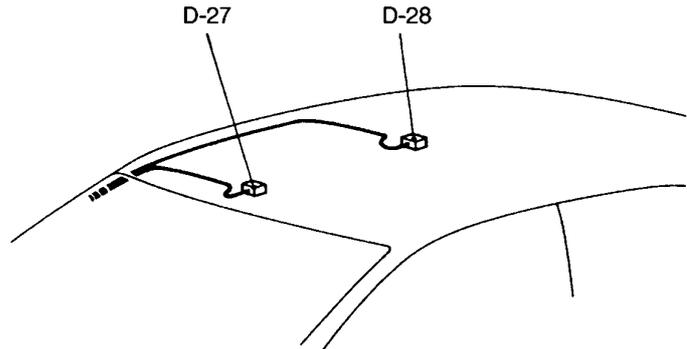

36U0016

00006177

- D-15 (2-R) Seat belt pretensioner (driver's side)
<SRS>
- D-16 (2) Front door switch (driver's side)
- D-17 (2-B) Rear speed sensor (RH) <ABS>
- D-19 (6) Hold switch <A/T>
- D-20 (1-B) Parking brake switch
- D-21 (26-DG) TCL-ECU
- D-22 (16) TCL-ECU
- D-24 (2) Shift indicator illumination lamp <A/T>
- D-27 (1) Map lamp <without sunroof>
- D-28 (2) Room lamp <without sunroof>

- D-29 (2-R) Side air bag module (squib) (RH)
- D-30 (3-B) Side impact sensor (RH)
- D-31 (3-B) Side impact sensor (LH)
- D-32 (2-R) Side air bag module (squib) (LH)
- D-33 (36-O) SRS-ECU
- D-34 (6-L) Door lock switch

Remark



Connector numbers in are connector numbers which have been changed or added.

SINGLE PART INSTALLATION POSITION



CONTENTS

RELAY	3-2	SOLENOID VALVE	3-4
ECU	3-2	INSPECTION CONNECTOR	3-4
SENSOR	3-3		

RELAY



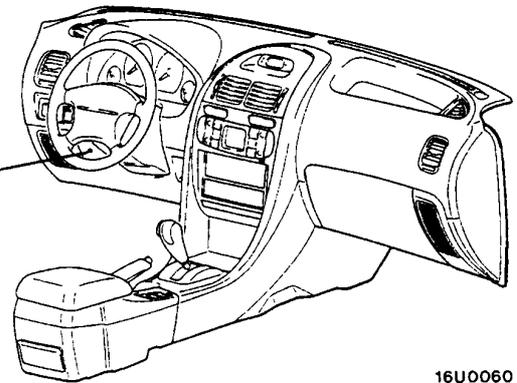
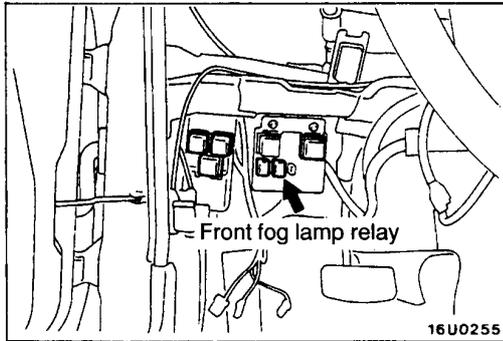


ECU

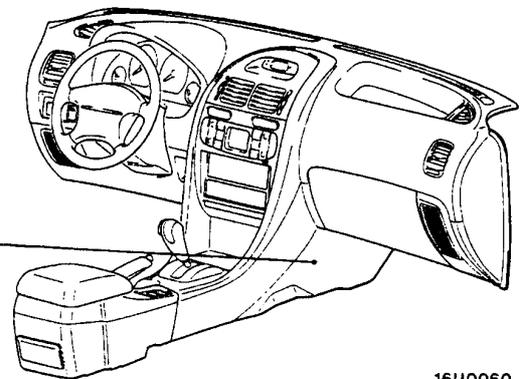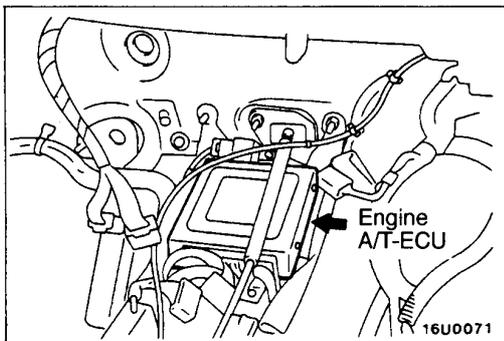


SENSOR


Name	Symbol	Name	Symbol
Outside thermo sensor <Odometer and trip meter>	B	Side impact sensor	C
		Vehicle speed sensor	A

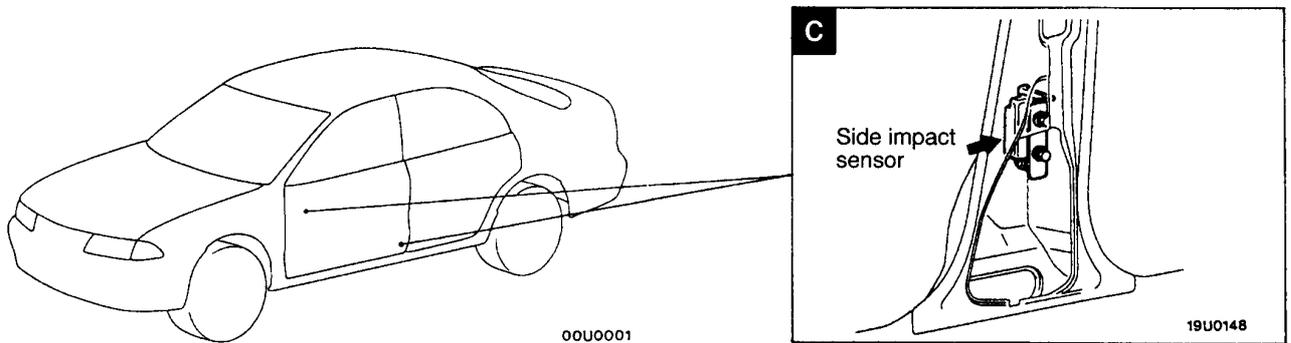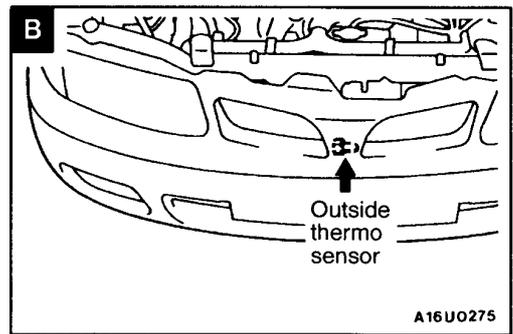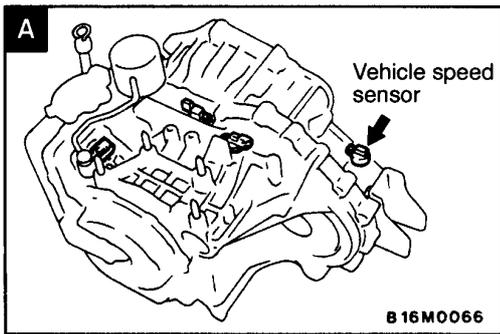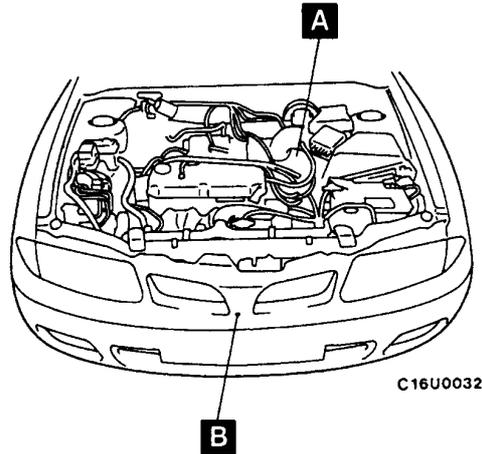

SOLENOID VALVE

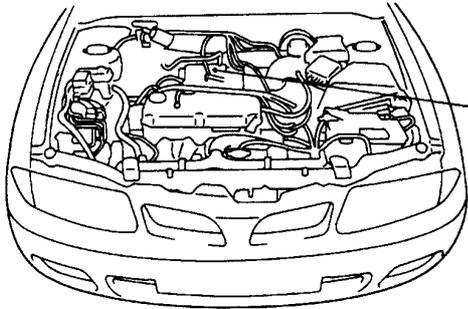


16U0032

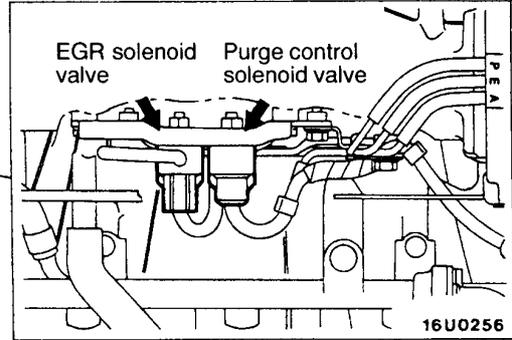


16U0256

00006865

INSPECTION CONNECTOR

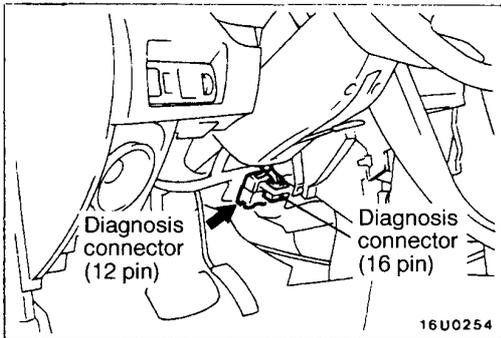

16U0254

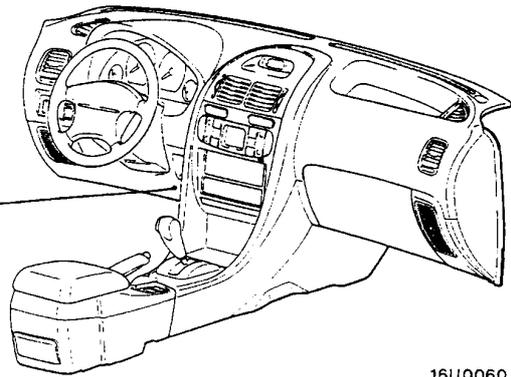

16U0060

00006866

CIRCUIT DIAGRAM

CONTENTS

CENTRALIZED JUNCTION	4-3	FRONT FOG LAMP	
POWER DISTRIBUTION SYSTEM		Vehicles without daytime running lamp	4-76
Vehicles without daytime running lamp	4-8	Vehicles with daytime running lamp	4-78
Vehicles with daytime running lamp	4-14	REAR FOG LAMP	
IGNITION SYSTEM		Vehicles without daytime running lamp	4-80
MPI-SOHC <A/T>	4-20	Vehicles with daytime running lamp	4-83
CHARGING SYSTEM		ROOM LAMP, MAP LAMP AND LUGGAGE COMPARTMENT LAMP	
Diesel-powered vehicles	4-21	Hatchback	4-86
GLOW SYSTEM	4-22	Sedan	4-88
MPI SYSTEM		TURN-SIGNAL LAMP AND HAZARD WARNING LAMP	4-90
MPI-SOHC-M/T <Vehicles without TCL>	4-26	BACK-UP LAMP	4-94
MPI-SOHC-A/T <Vehicles without TCL>	4-34	METER AND GAUGE	
MPI-SOHC-M/T <Vehicles with TCL>	4-42	Petrol-powered vehicles	4-96
MPI-SOHC-A/T <Vehicles with TCL>	4-50	Diesel-powered vehicles	4-98
COOLING SYSTEM		ODOMETER AND TRIP METER	4-100
Petrol-powered vehicles	4-59	OIL PRESSURE WARNING LAMP	4-102
ELC 4-SPEED AUTOMATIC TRANSMISSION	4-60	FUEL WARNING LAMP	4-102
HEADLAMP		BRAKE WARNING LAMP	4-103
Vehicles without daytime running lamp	4-71	OVERHEATING WARNING LAMP	
Vehicles with daytime running lamp	4-72	Diesel-powered vehicles	4-103

CENTRAL DOOR LOCKING SYSTEM

- Vehicles without keyless entry system
<Hatchback> 4-104
- Vehicles without keyless entry system
<Sedan> 4-107
- Vehicles with keyless entry system
<Hatchback> 4-110
- Vehicles with keyless entry system
<Sedan> 4-114

MANUAL AIR CONDITIONER

- Petrol-powered vehicles 4-118

FULL-AUTO AIR CONDITIONER AND AIR PURIFIER

- Petrol-powered vehicles 4-123

WINDSHIELD WIPER AND WASHER 4-130

DEFOGGER AND DOOR MIRROR HEATER

- Vehicles without defogger timer 4-132
- Vehicles with defogger timer 4-134

ANTI-LOCK BRAKING SYSTEM (ABS) 4-136

TRACTION CONTROL SYSTEM (TCL) <M/T> 4-140

TRACTION CONTROL SYSTEM (TCL) <A/T> 4-146

AUTO-CRUISE CONTROL SYSTEM 4-152

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

- Vehicles without side air bag 4-160
- Vehicles with side air bag
<Up to 1997 models> 4-162
- Vehicles with side air bag
<From 1998 models> 4-165

IMMOBILIZER SYSTEM

- Petrol-powered vehicles 4-168
- Diesel-powered vehicles 4-170



CENTRALIZED JUNCTION

FUSIBLE LINK

No.	Circuit	Housing colour	Rated capacity (A)
1	Fusible link No. (2) and dedicated fuse No. (2), (3), (4) circuit <When the engine is stopped> Fusible link No. (3), (4), (5), (6), (7), (8) and dedicated fuse No. (6), (7), (8) circuit <After start of the engine>	Blue	100A <Petro>
		White	120A <Diesel>
2	A/C and multi-purpose fuse No. (1), (2) circuit	Green	40A
3	Dedicated fuse No. (15) and ignition switch circuit	Green	40A
4	ABS circuit	Red	50A
5	Defogger and door mirror heater circuit	Green	40A
6	Charging system, headlamp, rear fog lamp, tail lamp and headlamp washer circuit	Green	40A
7	A/C and cooling system circuit	Pink	30A
8	Power windows	Pink	30A
9	Glow system	Black	80A

(Relay box in engine compartment)

(Connected directly to battery positive terminal)

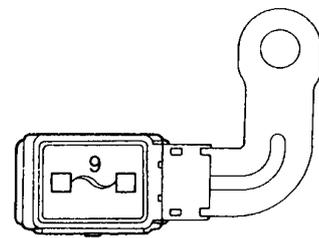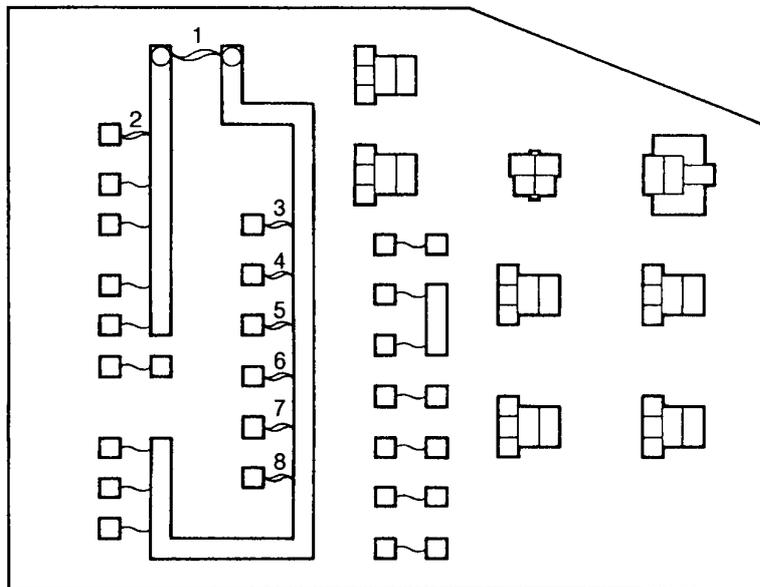


16U0156

16U0219

00006852


DEDICATED FUSE (Relay box in engine compartment)

Power supply circuit	No.	Rated capacity (A)	Housing colour	Circuit
–	1	–	–	–
Battery (Fusible link No. 1)/Alternator	2	25A	Transparent	Condenser fan circuit
	3	10A	Red	Door warning lamp, clock, luggage compartment lamp, motor antenna, radio, room lamp, odometer, trip meter, fog lamp circuit, ECU power supply and MUT-II power supply circuit
	4	20A	Yellow	Central door lock circuit
Ignition switch (ACC)	5	10A	Red	Auto-cruise control, motor antenna and radio circuit
Battery/Alternator (Fusible link No. 1)	6	20A	Yellow	Fuel line heater circuit
	7	10A	Red	Hazard warning circuit
	8	15A	Blue	Stop lamp, ABS, A/T, TCL and auto-cruise control circuit
Fusible link No. 6	9	15A	Blue	Front fog lamp circuit
Lighting switch (Fusible link No. 6) <Vehicles without daytime running lamp>/Tail lamp relay (Fusible link No. 6) <Vehicles with daytime running lamp>	10	10A	Red	Tail lamp circuit
	11	10A	Red	Illumination, rheostat, headlamp and tail lamp circuit
Headlamp relay (Fusible link No. 6)	12	10A	Red	High beam indicator lamp, headlamp, rear fog lamp and headlamp leveling circuit
Ignition switch (IG1)	13	20A	Yellow	Immobilizer circuit
	14	20A	Yellow	Alternator circuit
Fusible link No. 3	15	20A	Yellow	A/T, TCL, MPI, Glow and immobilizer circuit
–	16	–	–	–
Battery (Fusible link No. 1, 2)/Alternator (Fusible link No. 2)	17	10A	Red	A/C compressor circuit

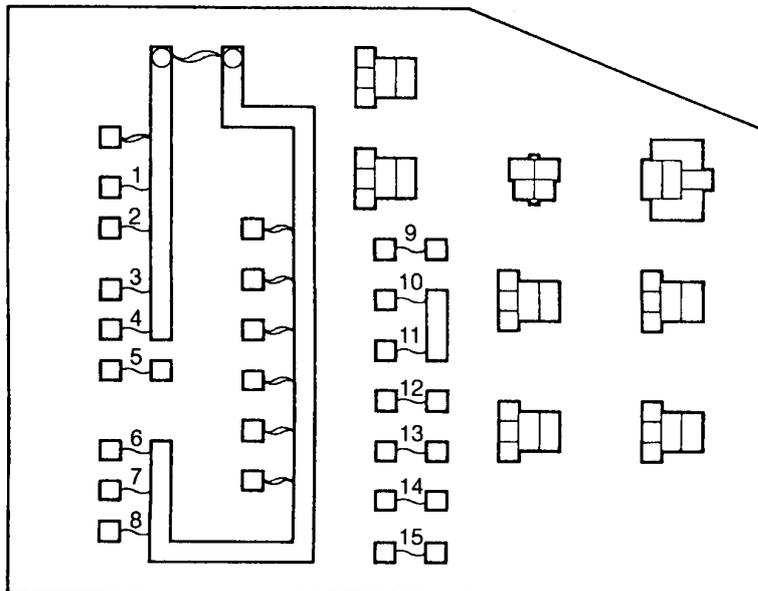

16U0219

<Vehicles with A/C>

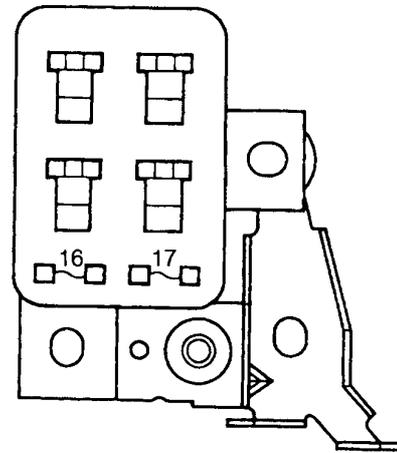


16U0139

00006850

MULTI-PURPOSE FUSE (In junction block)

Power supply circuit	No.	Rated capacity (A)	Housing colour	Load circuit	
Battery (Fusible link No. 1, 2)/Alternator (Fusible link No. 2)	1	25A	Transparent	Blower motor	
	2	20A	Yellow	Sunroof ECU	
Ignition switch	ACC	3	10A	Red	Horn and horn relay
	IG1	4	10A	Red	A/T shift indicator lamp, back-up lamp, engine-A/T-ECU, hold indicator lamp, SRS-ECU, vehicles speed sensor and alternator relay
	IG2	5	10A	Red	ABS-ECU, auto-cruise ECU, auto-cruise main switch, power window main switch and TCL-ECU
		6	20A	Yellow	Heated seat
IG1	7	10A	Red	Auto-cruise indicator lamp, combination meter, motor antenna, ABS indicator lamp, brake warning lamp, output shaft speed sensor, input shaft speed sensor, ignition relay, odometer, trip meter and buzzer-ECU	

Power supply circuit		No.	Rated capacity (A)	Housing colour	Load circuit
Battery (Fusible link No. 1, 2)/Alternator (Fusible link No. 2)		8	-	-	-
Ignition switch	ACC	9	15A	Blue	Cigarette lighter and clock
		10	10A	Red	Keyless entry receiver ECU and remote controlled mirror
	IG1	11	10A	Red	Immobilizer-ECU, turn signal and hazard warning flasher unit, turn signal lamp, SRS-ECU and steering wheel sensor
	IG2	12	15A	Blue	A/C control panel and ECU <Full-auto A/C>, A/C switch <Manual A/C>, air purifier, automatic compressor ECU <Manual A/C>, blower high speed relay <Full-auto A/C>, blower relay, defogger relay, DRL-ECU, DRL-relay 1, headlamp washer relay, sunroof ECU and fuel line heater relay
Battery (Fusible link No. 1, 2)/Alternator (Fusible link No. 2)		13	-	-	-
Ignition switch	ACC	14	20A	Yellow	Intermittent wiper relay, rear washer motor and wiper motor, windshield washer motor and wiper motor

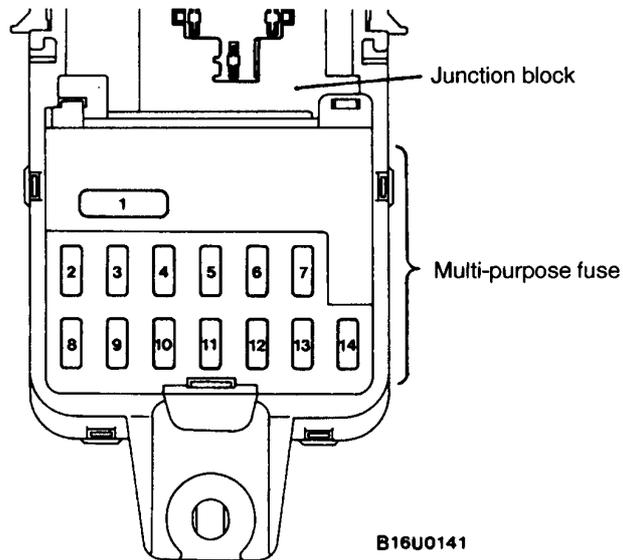


B16U0141

CENTRALIZED RELAY


Connector No.	Name	Connector No.	Name
A-60X	–	A-111X	Radiator fan relay (LO) <Diesel>
A-61X	Tail lamp relay <DRL>	B-67X	Door lock ECU <Vehicles without keyless entry system>
A-62X	Alternator relay <Petrol>		
A-63X	Radiator fan relay <Petrol>	B-68X	–
A-64X	Headlamp relay	B-69X	Rear intermittent wiper relay
A-65X	Headlamp washer relay	B-70X	Rear fog lamp relay
A-66X	Fuel line heater relay <Diesel>	B-71X	Front fog lamp relay
A-67X	Horn relay <Vehicles with SRS>	B-72X	Diode
A-89X	Radiator fan relay (HI) <Diesel>	B-73X	–
A-90X	Condenser fan relay (LO) <A/C>	B-74X	–
A-91X	Condenser fan relay (HI) <A/C>	B-75X	J/C (1)
A-92X	A/C compressor relay	B-76X	J/C (2)

(Relay box in engine compartment)

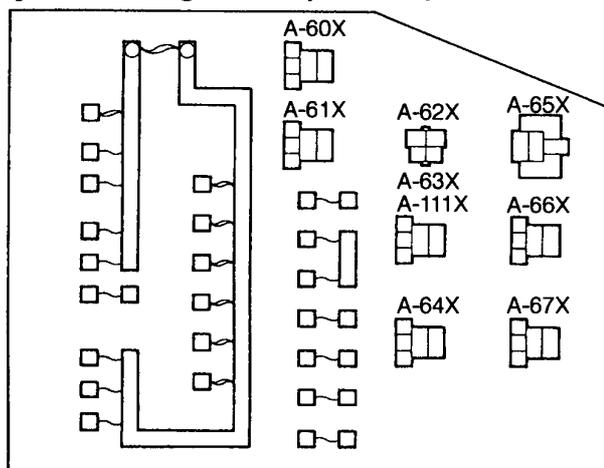


16U0219

Vehicles with A/C

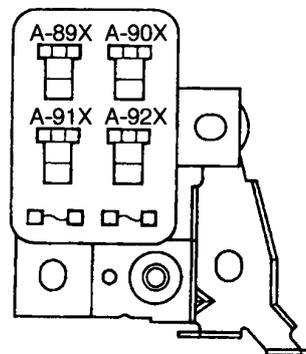

16U0139

(Relay box in driver compartment)

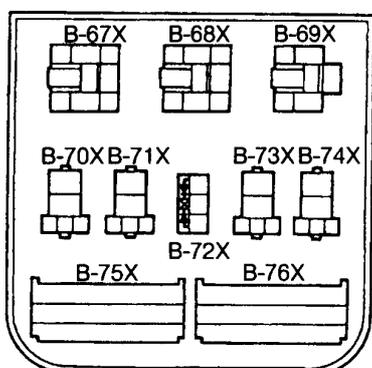



16U0143

00006851

POWER DISTRIBUTION SYSTEM


Vehicles without daytime running lamp

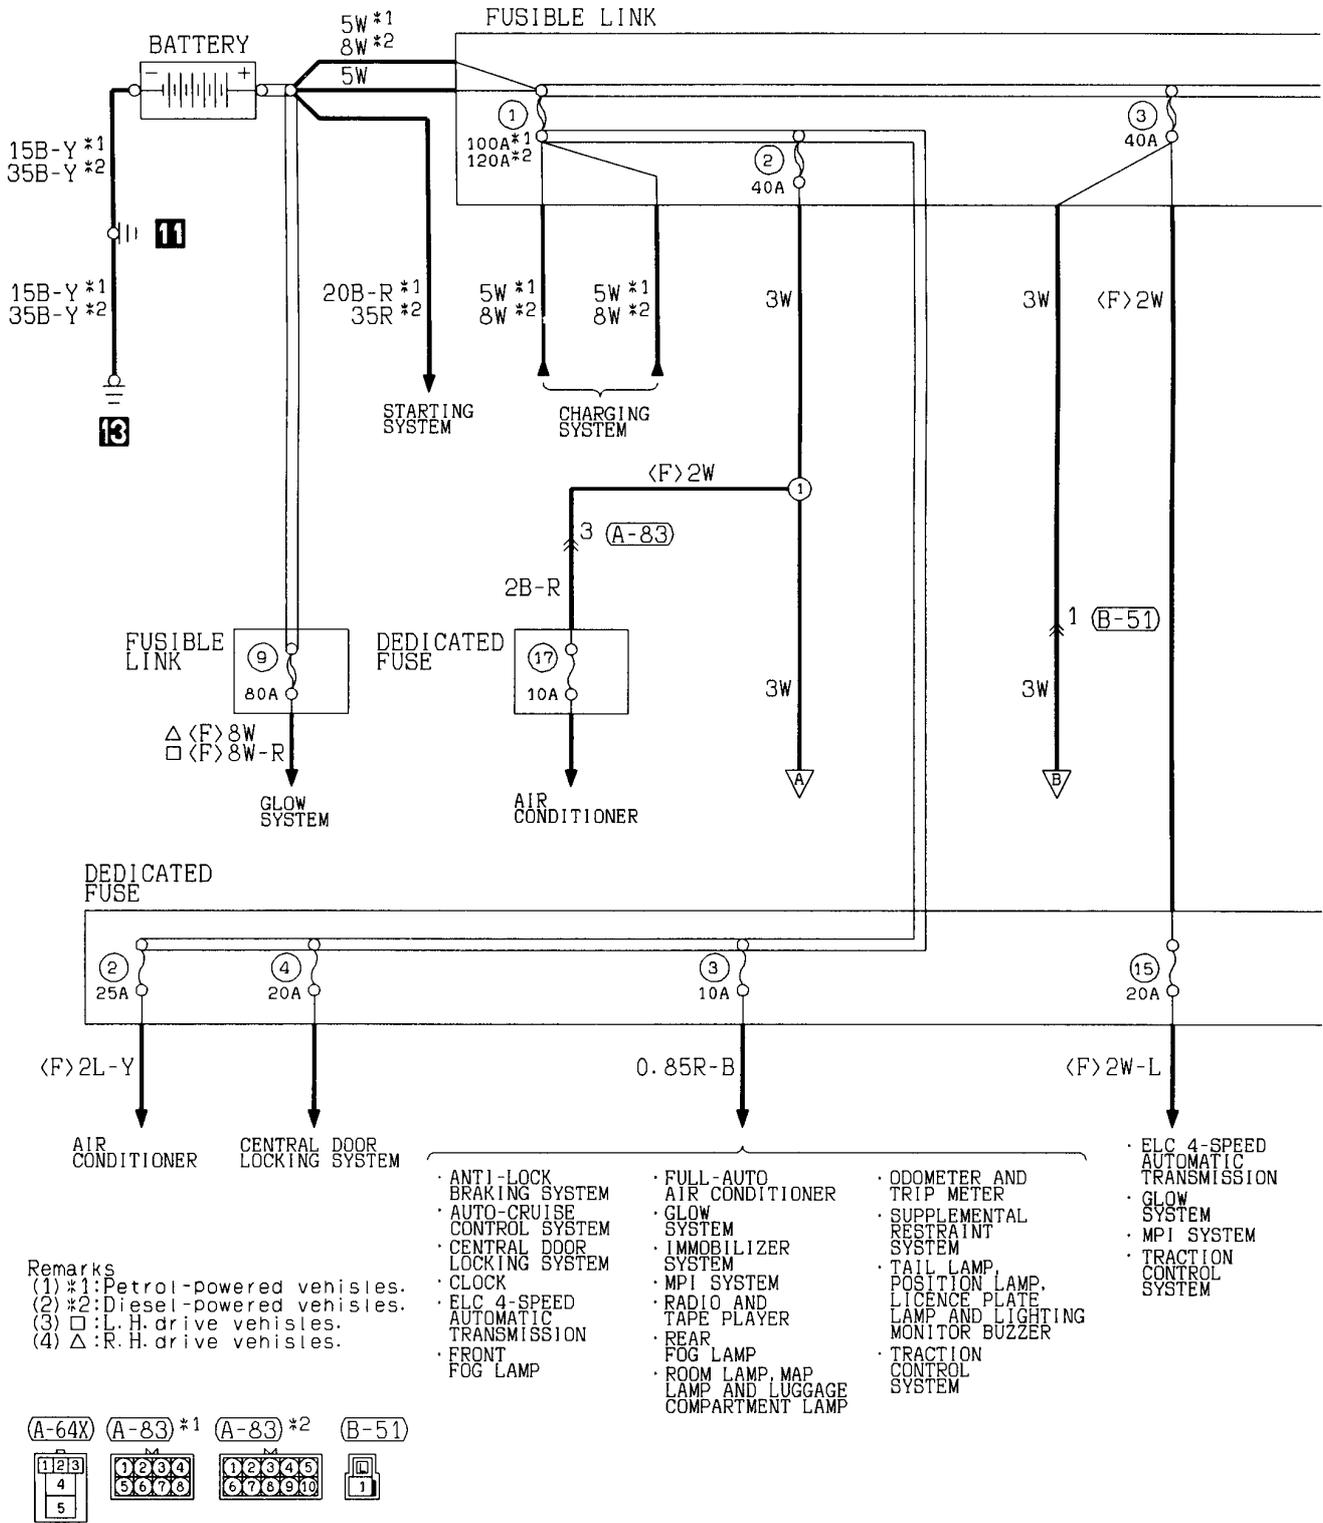

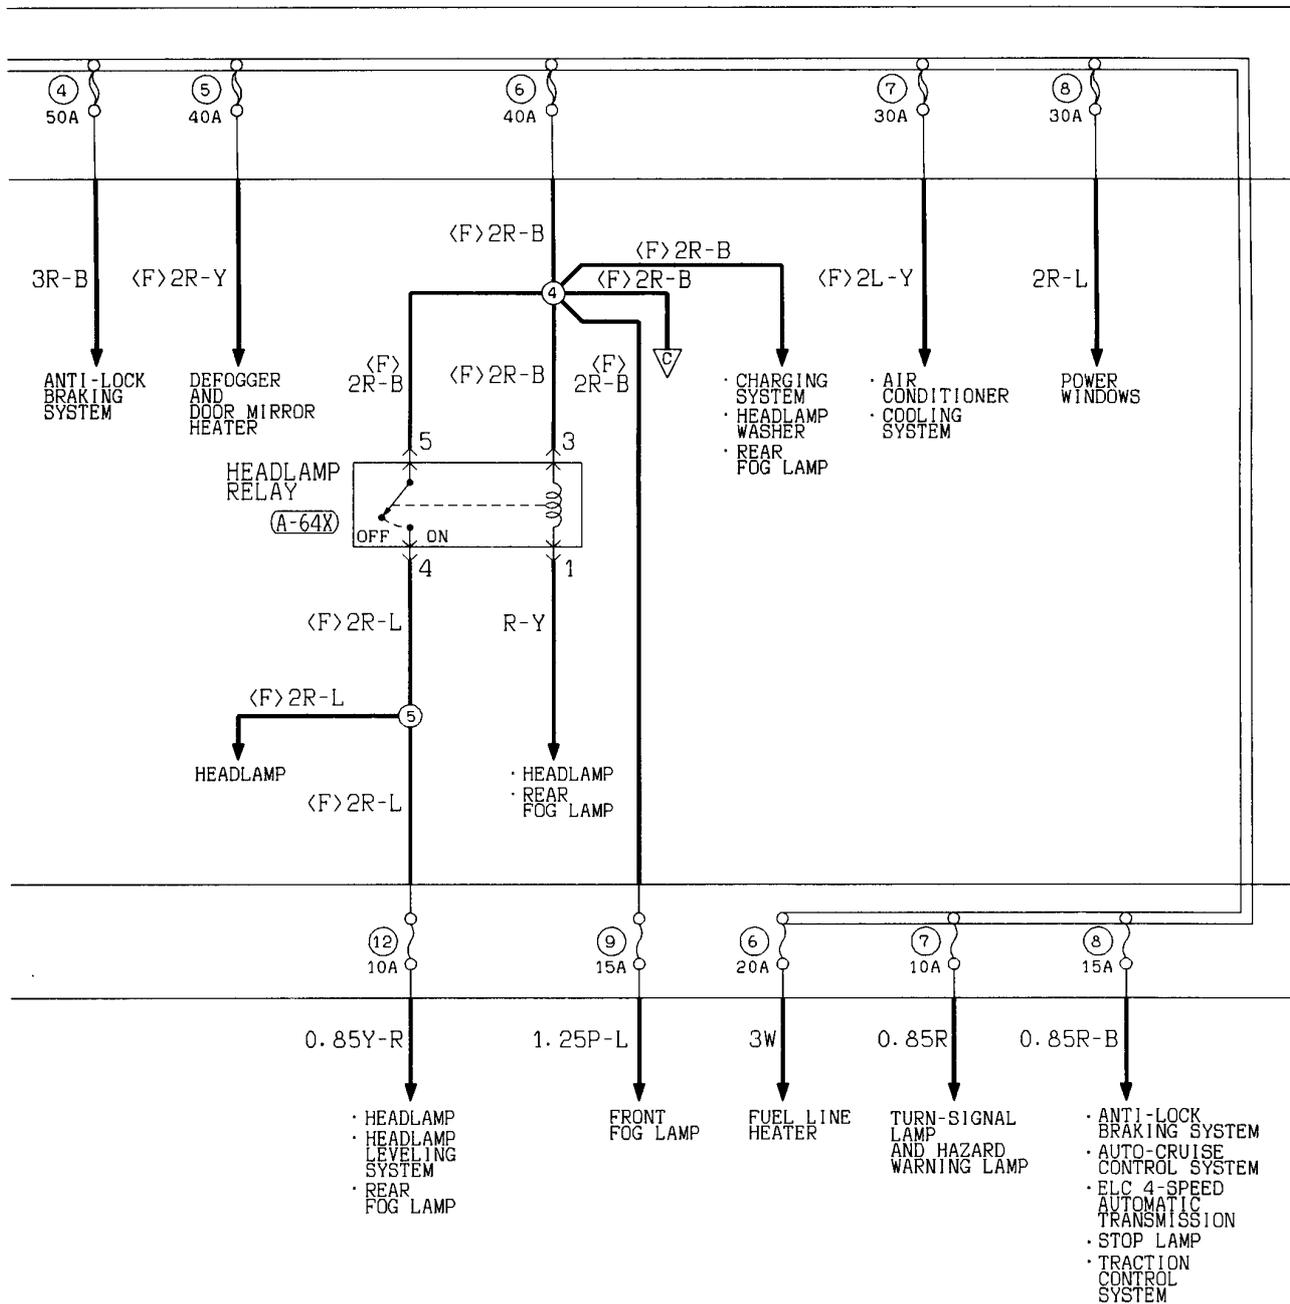

Wire colour code
 B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

**POWER DISTRIBUTION SYSTEM <Vehicles without daytime running lamp>
(CONTINUED)**

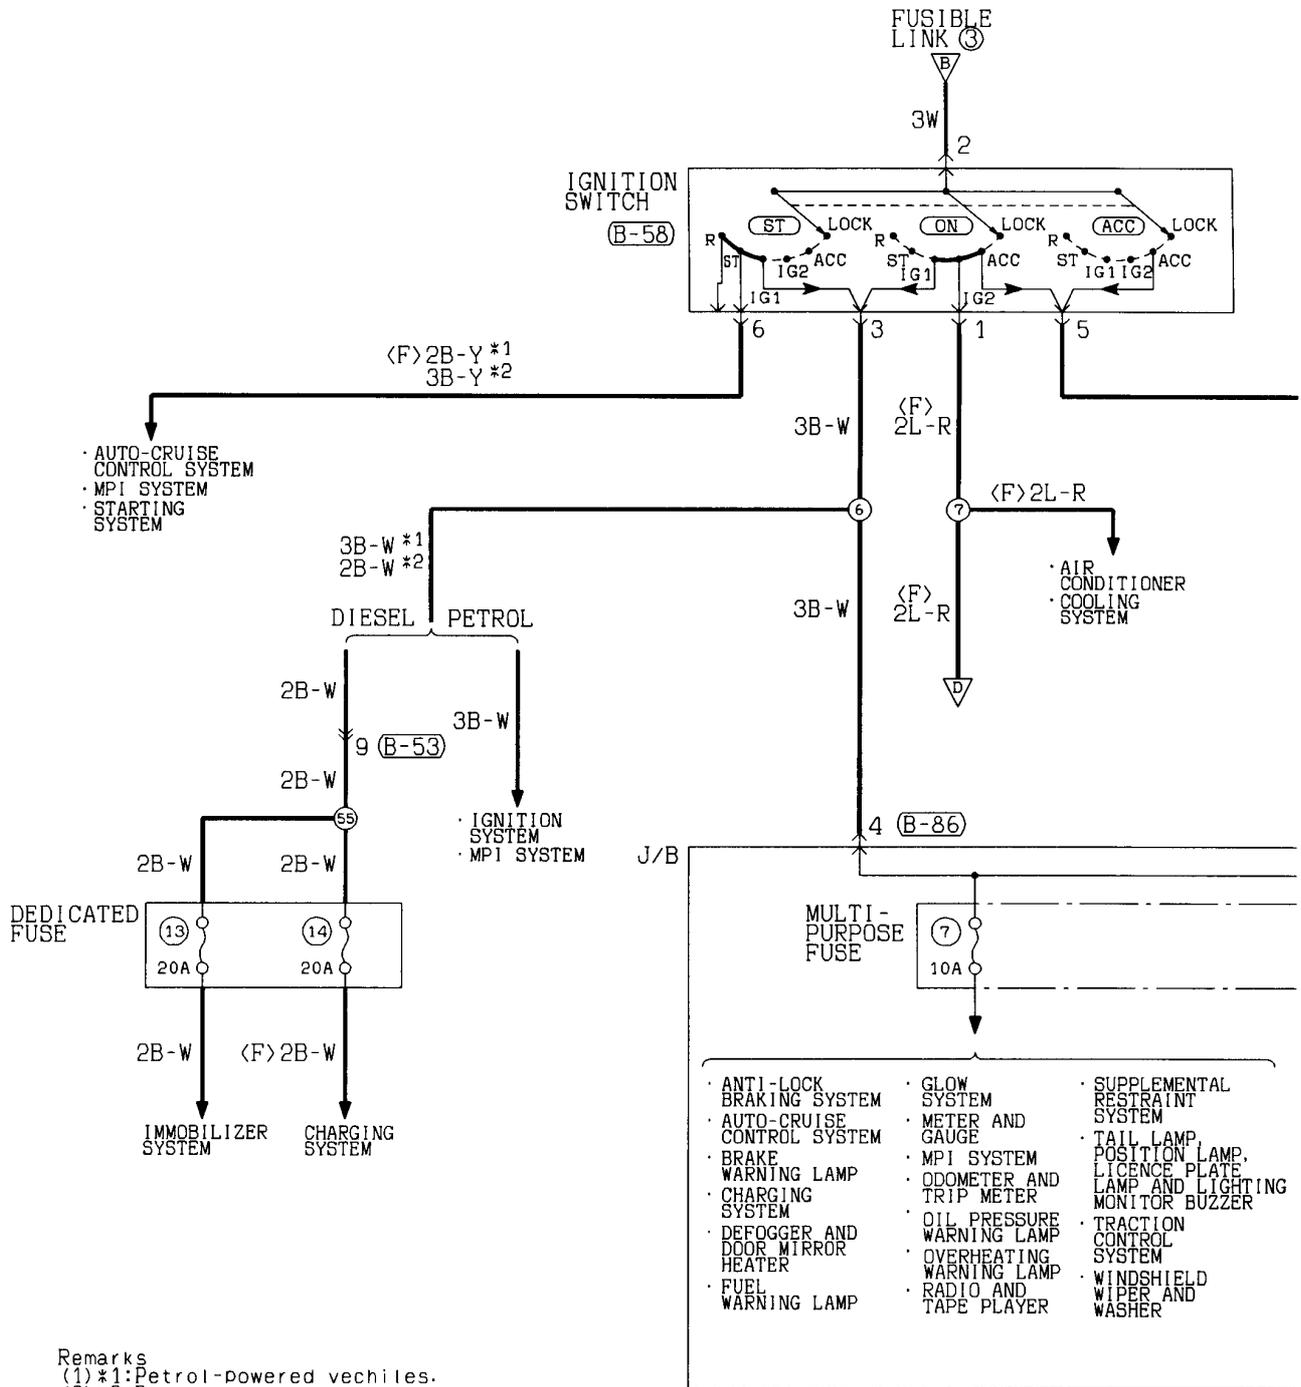

Remarks
 (1) *1: Petrol-powered vehicles.
 (2) *2: Diesel-powered vehicles.

(B-53)


(B-58)

(B-86)



1	2	3	4
5	6	7	8
9	10		


1	2	3
4	5	6

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

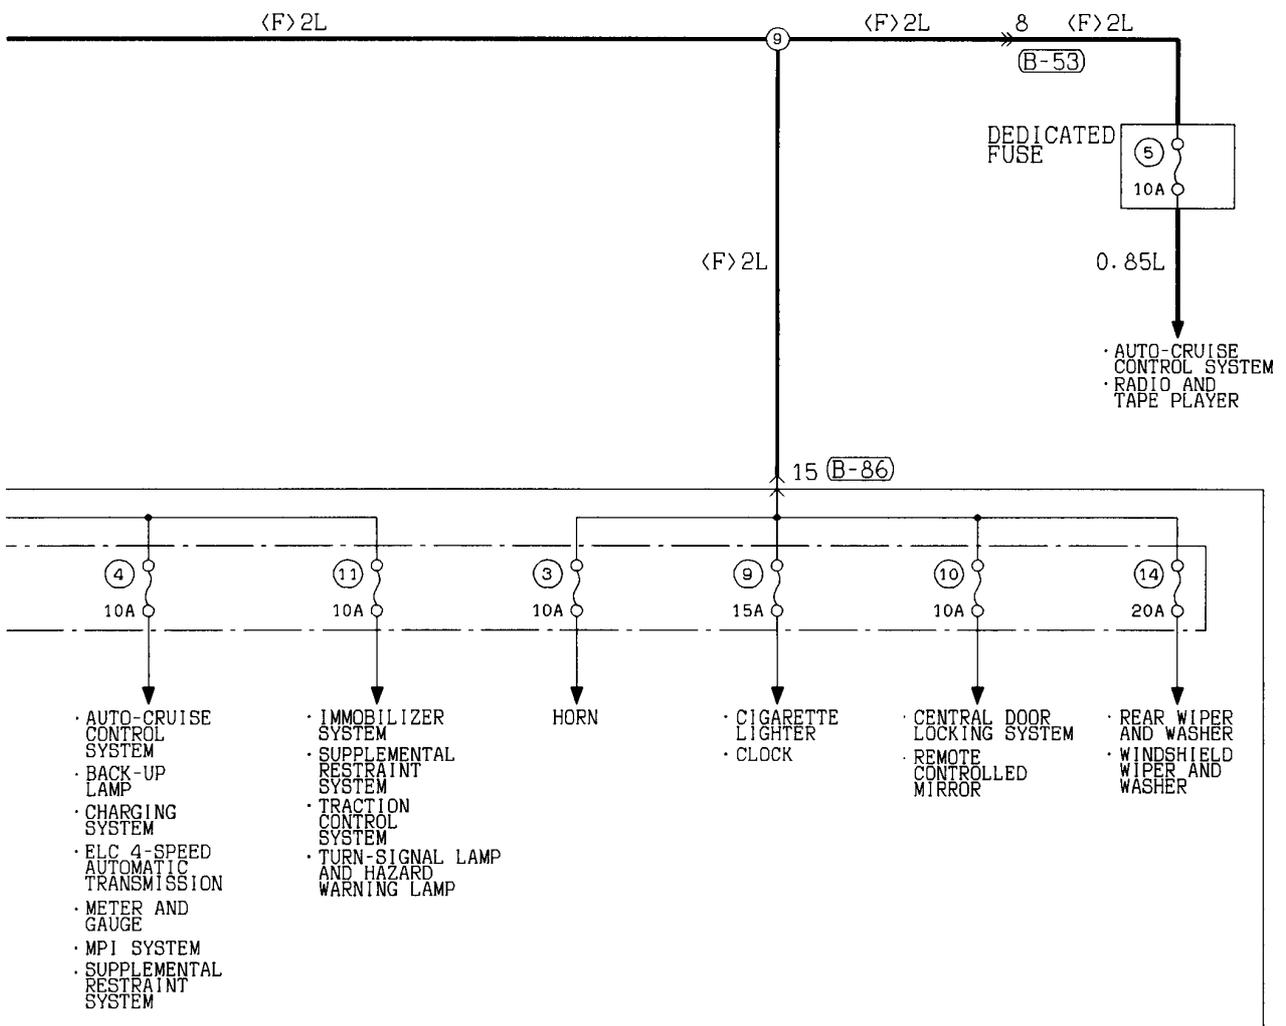


**POWER DISTRIBUTION SYSTEM <Vehicles without daytime running lamp>
(CONTINUED)**

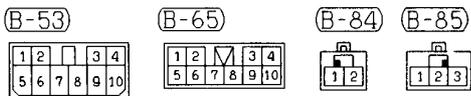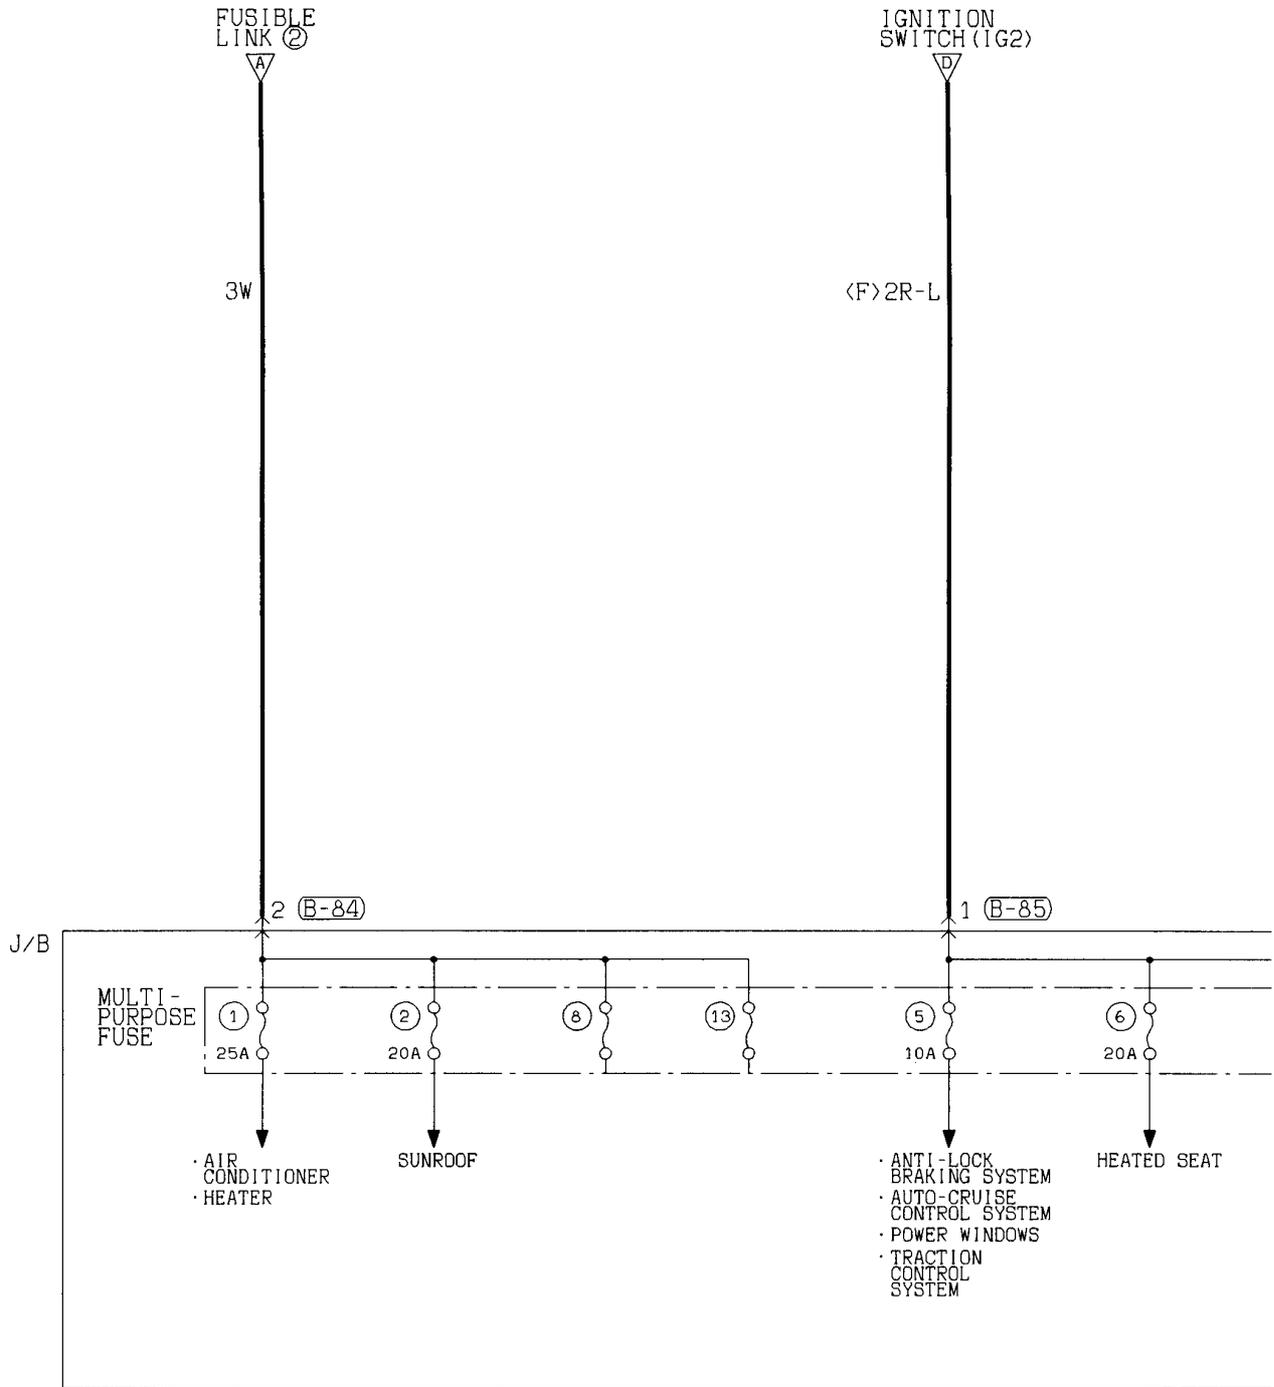

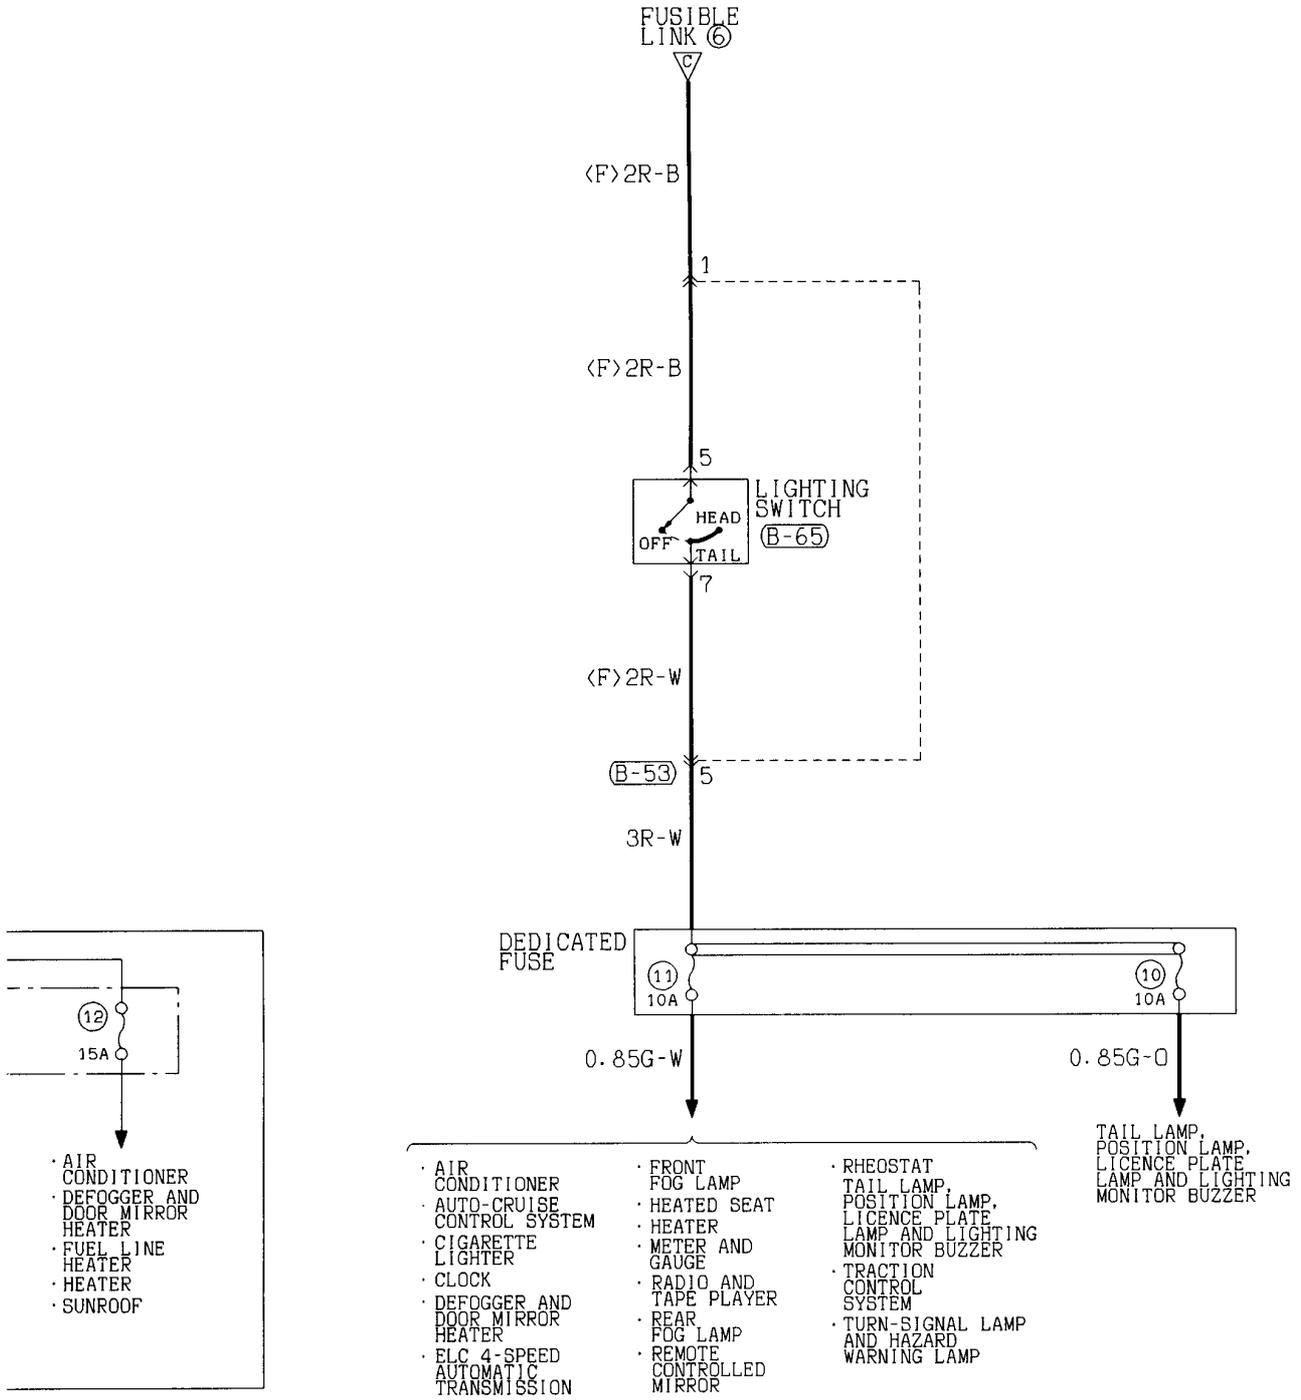


Wire colour code
 B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

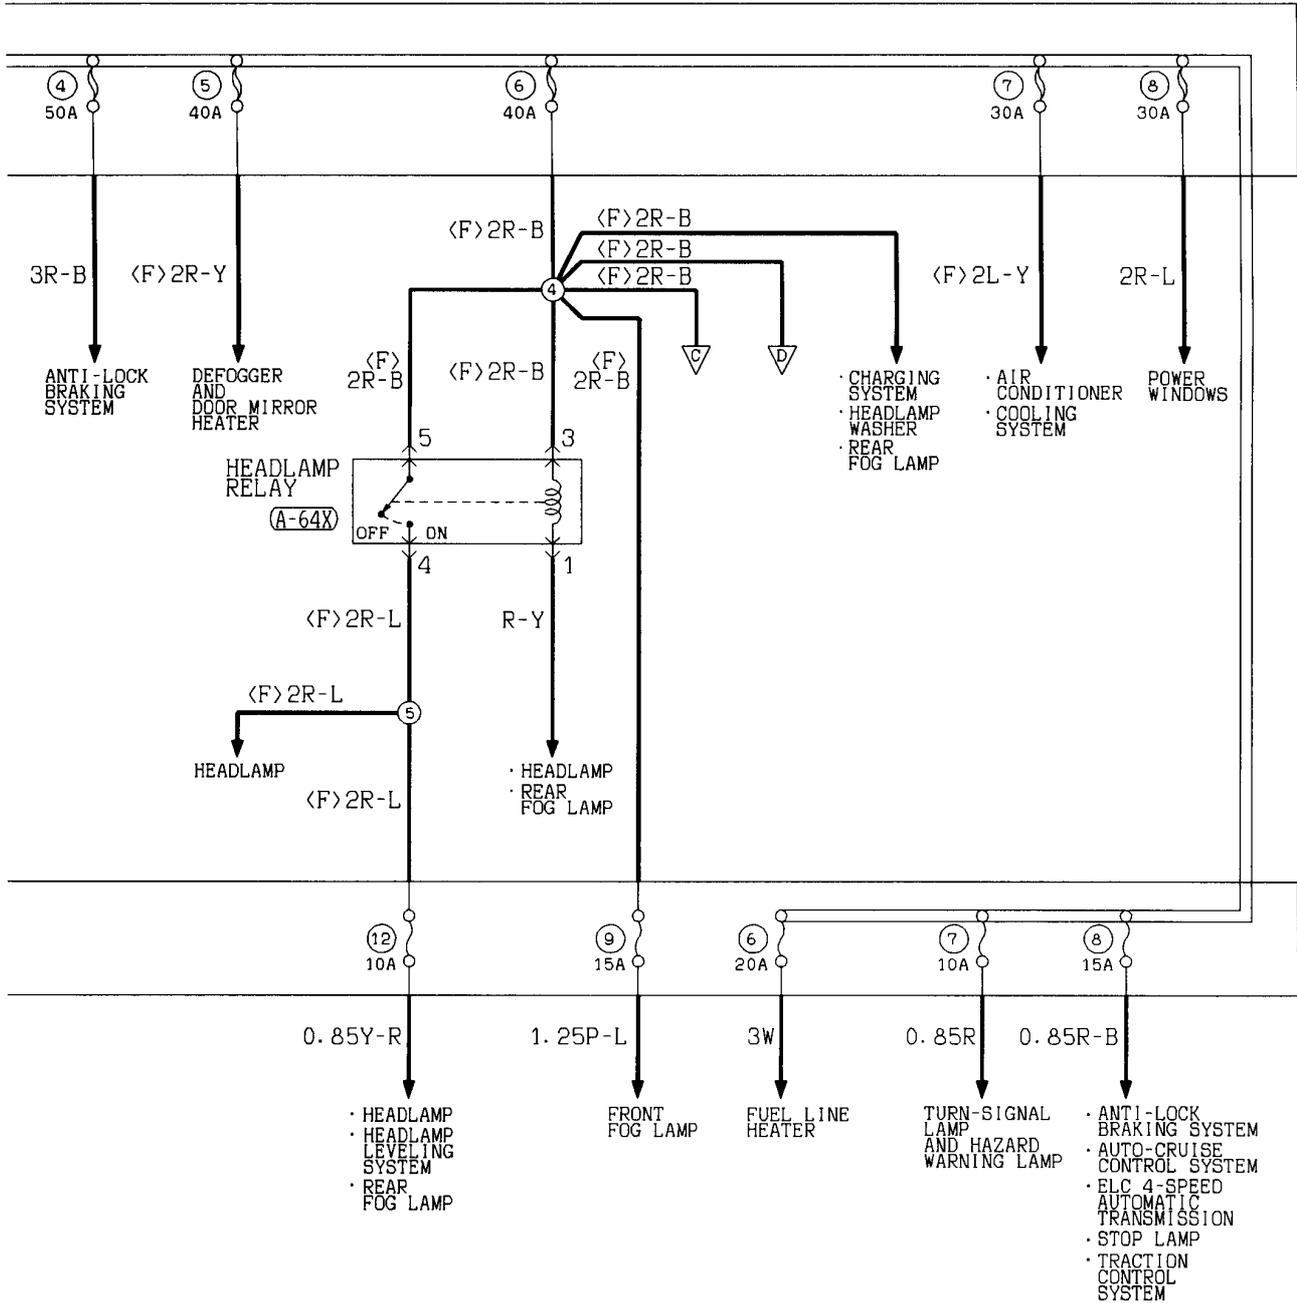

Wire colour code
 B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

**POWER DISTRIBUTION SYSTEM <Vehicles with daytime running lamp>
(CONTINUED)**

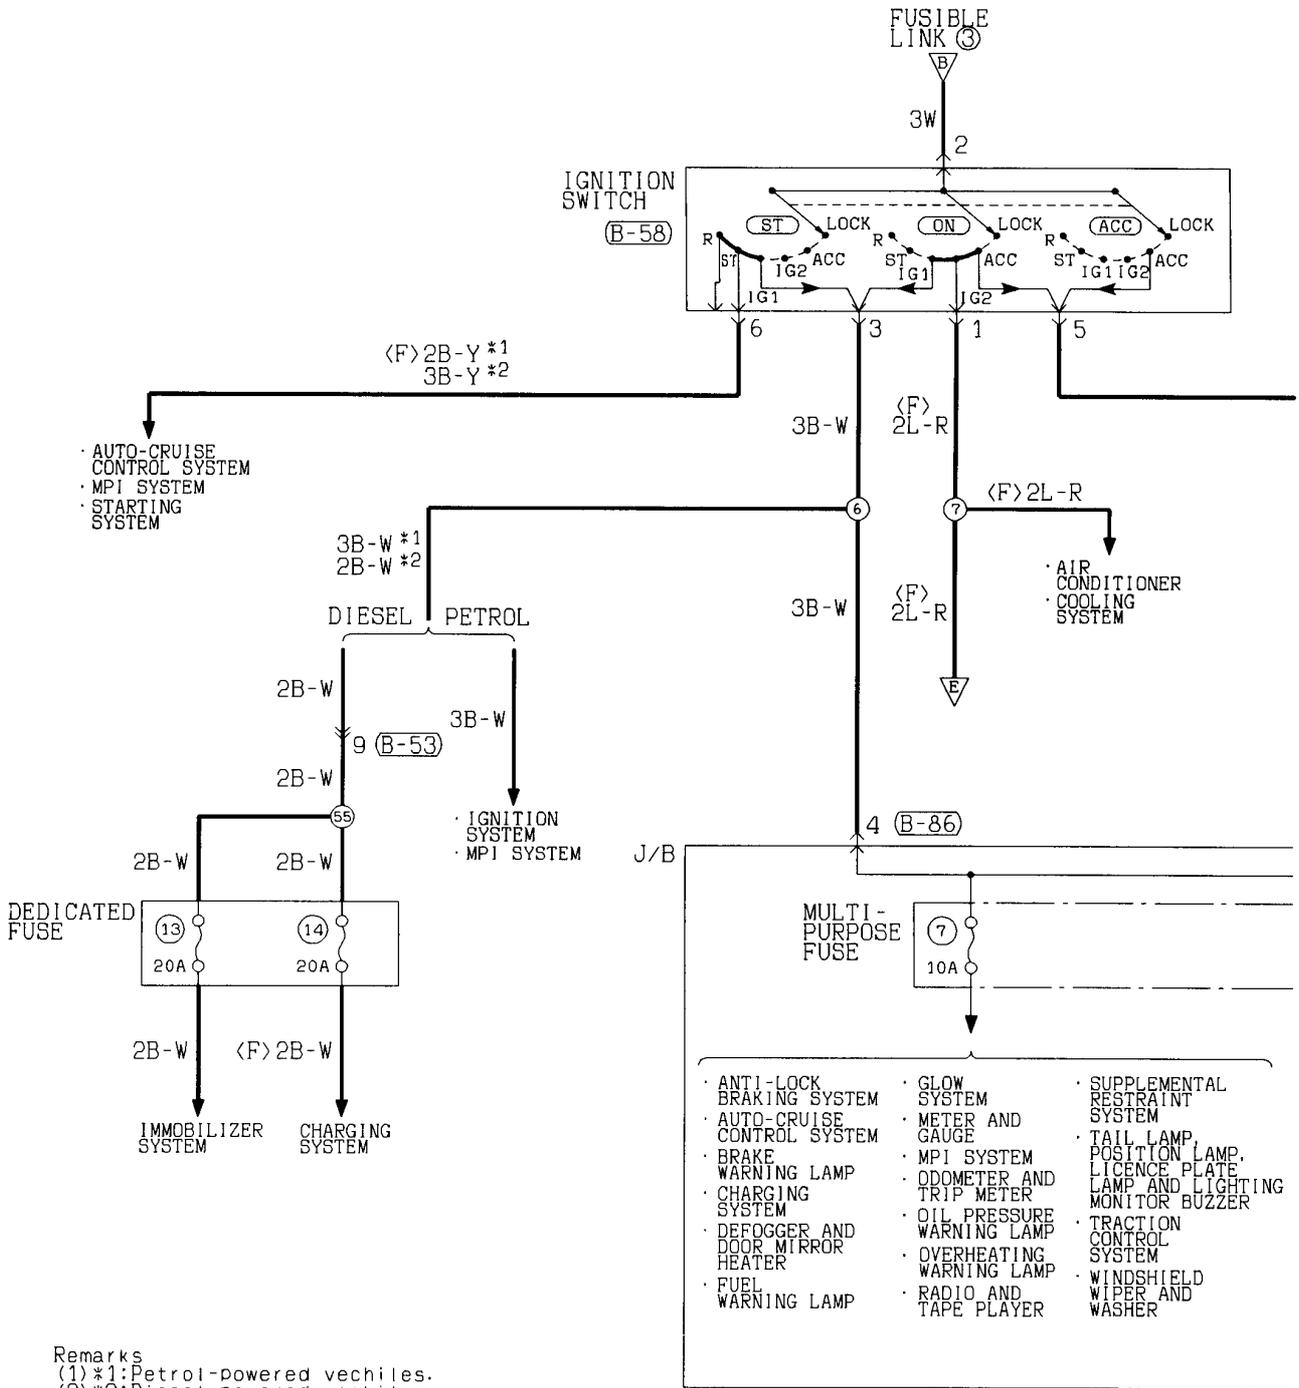

(B-53)


(B-58)

(B-86)



1	2	3	4
5	6	7	8
9	10		


1	2	3
4	5	6

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

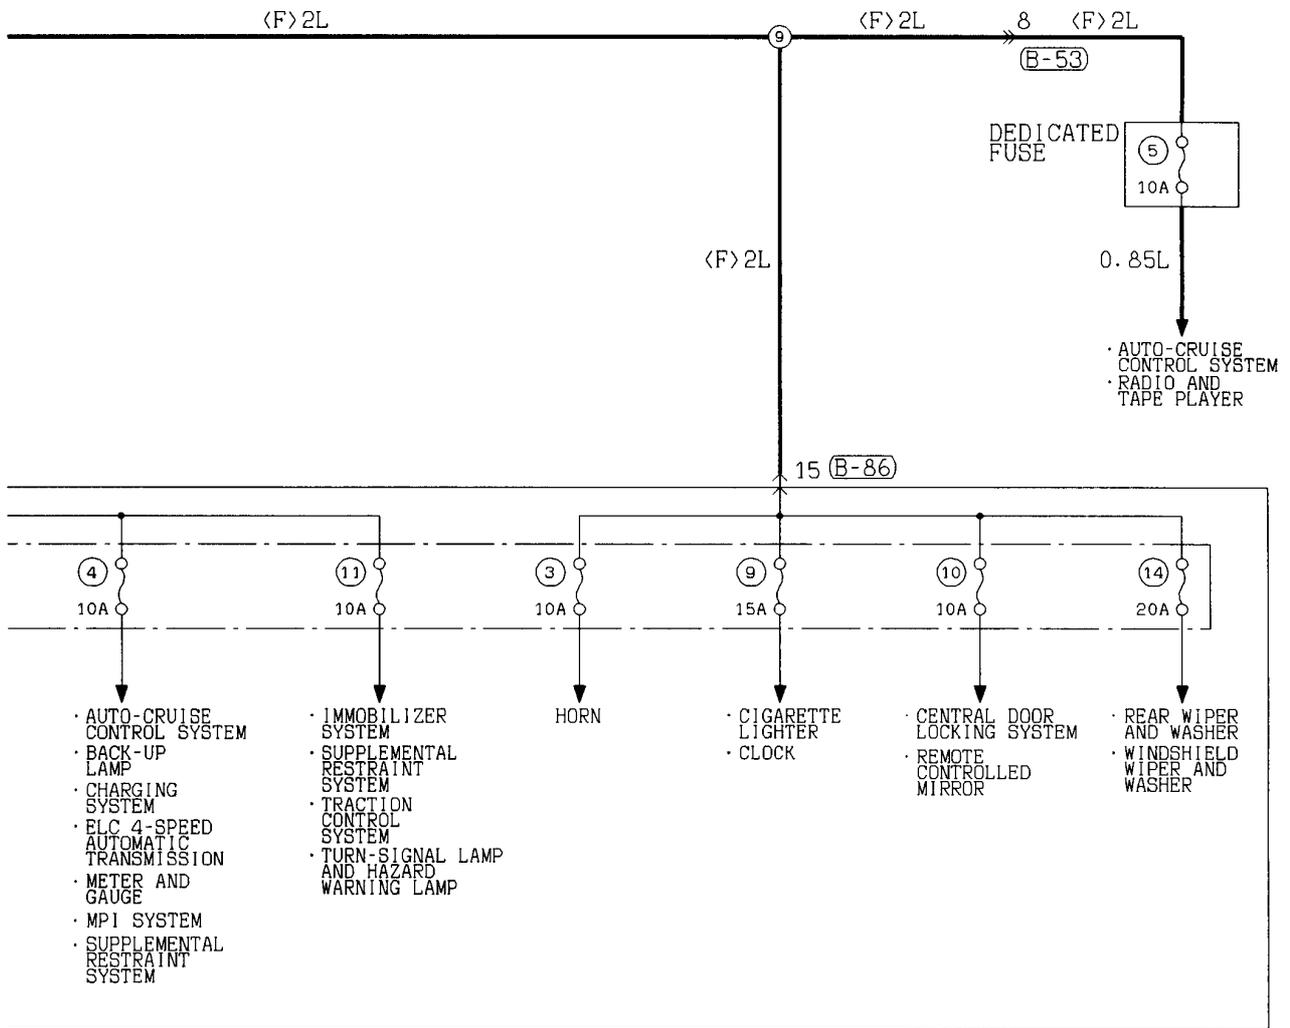

**POWER DISTRIBUTION SYSTEM <Vehicles with daytime running lamp>
(CONTINUED)**

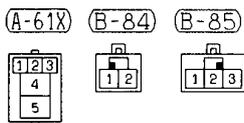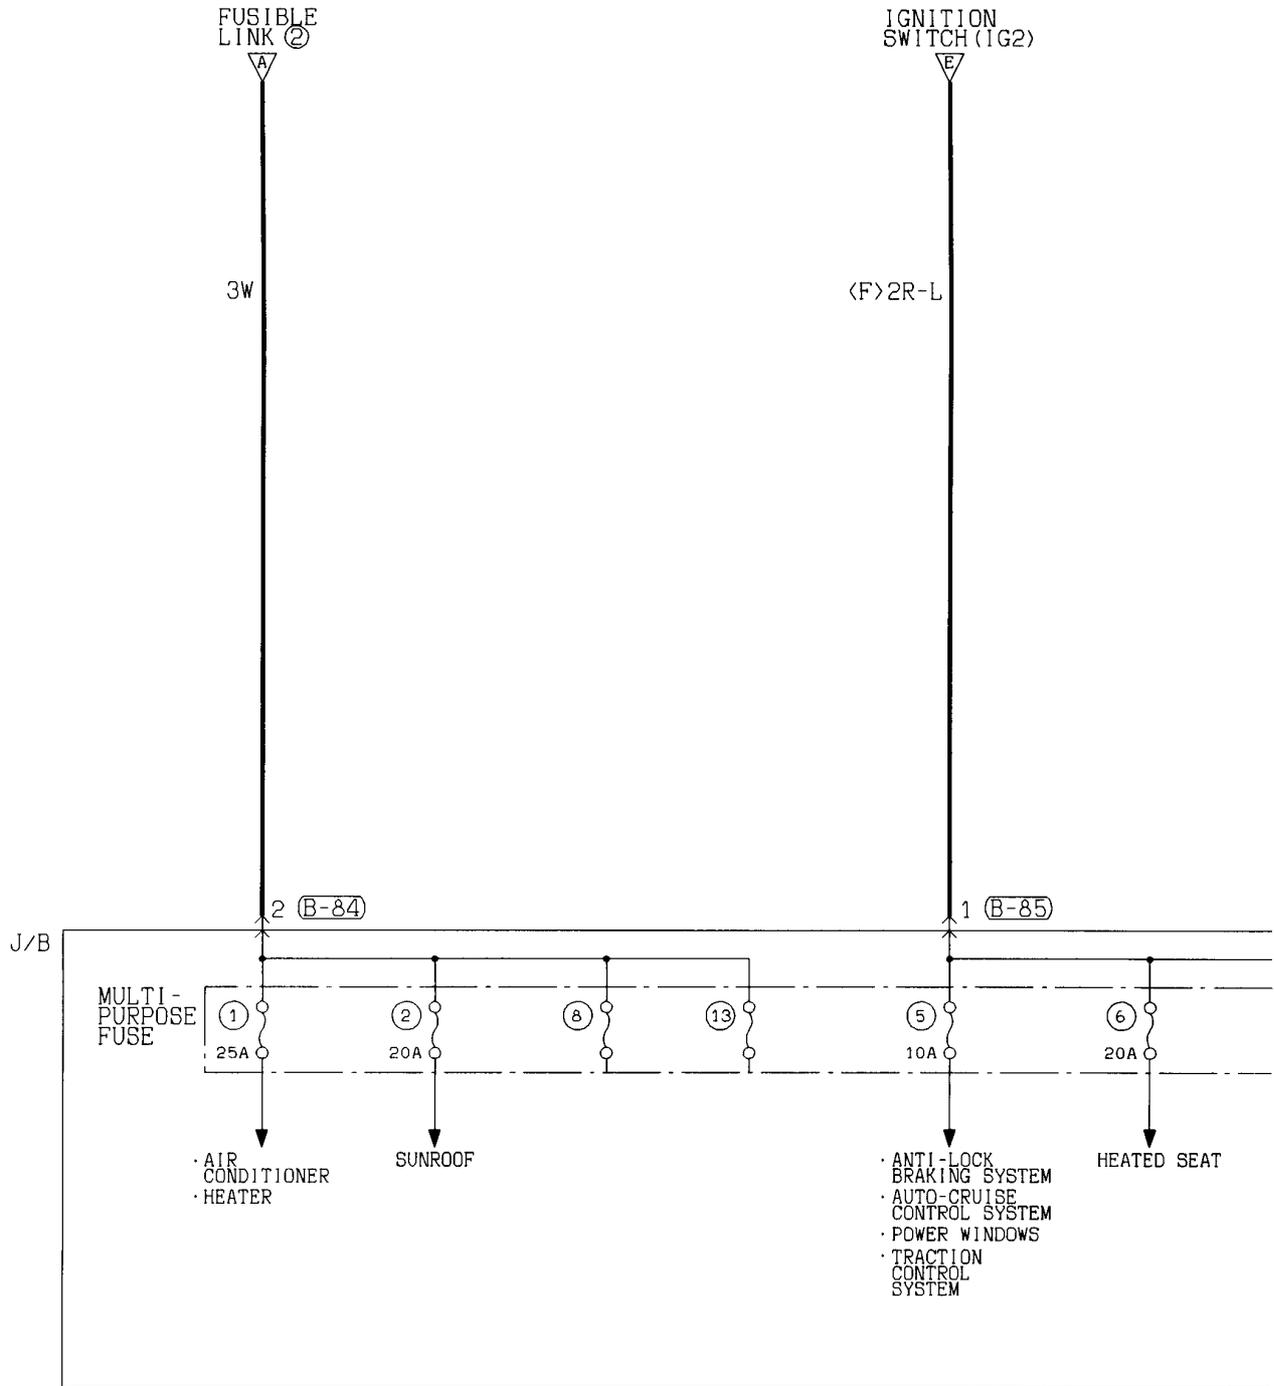


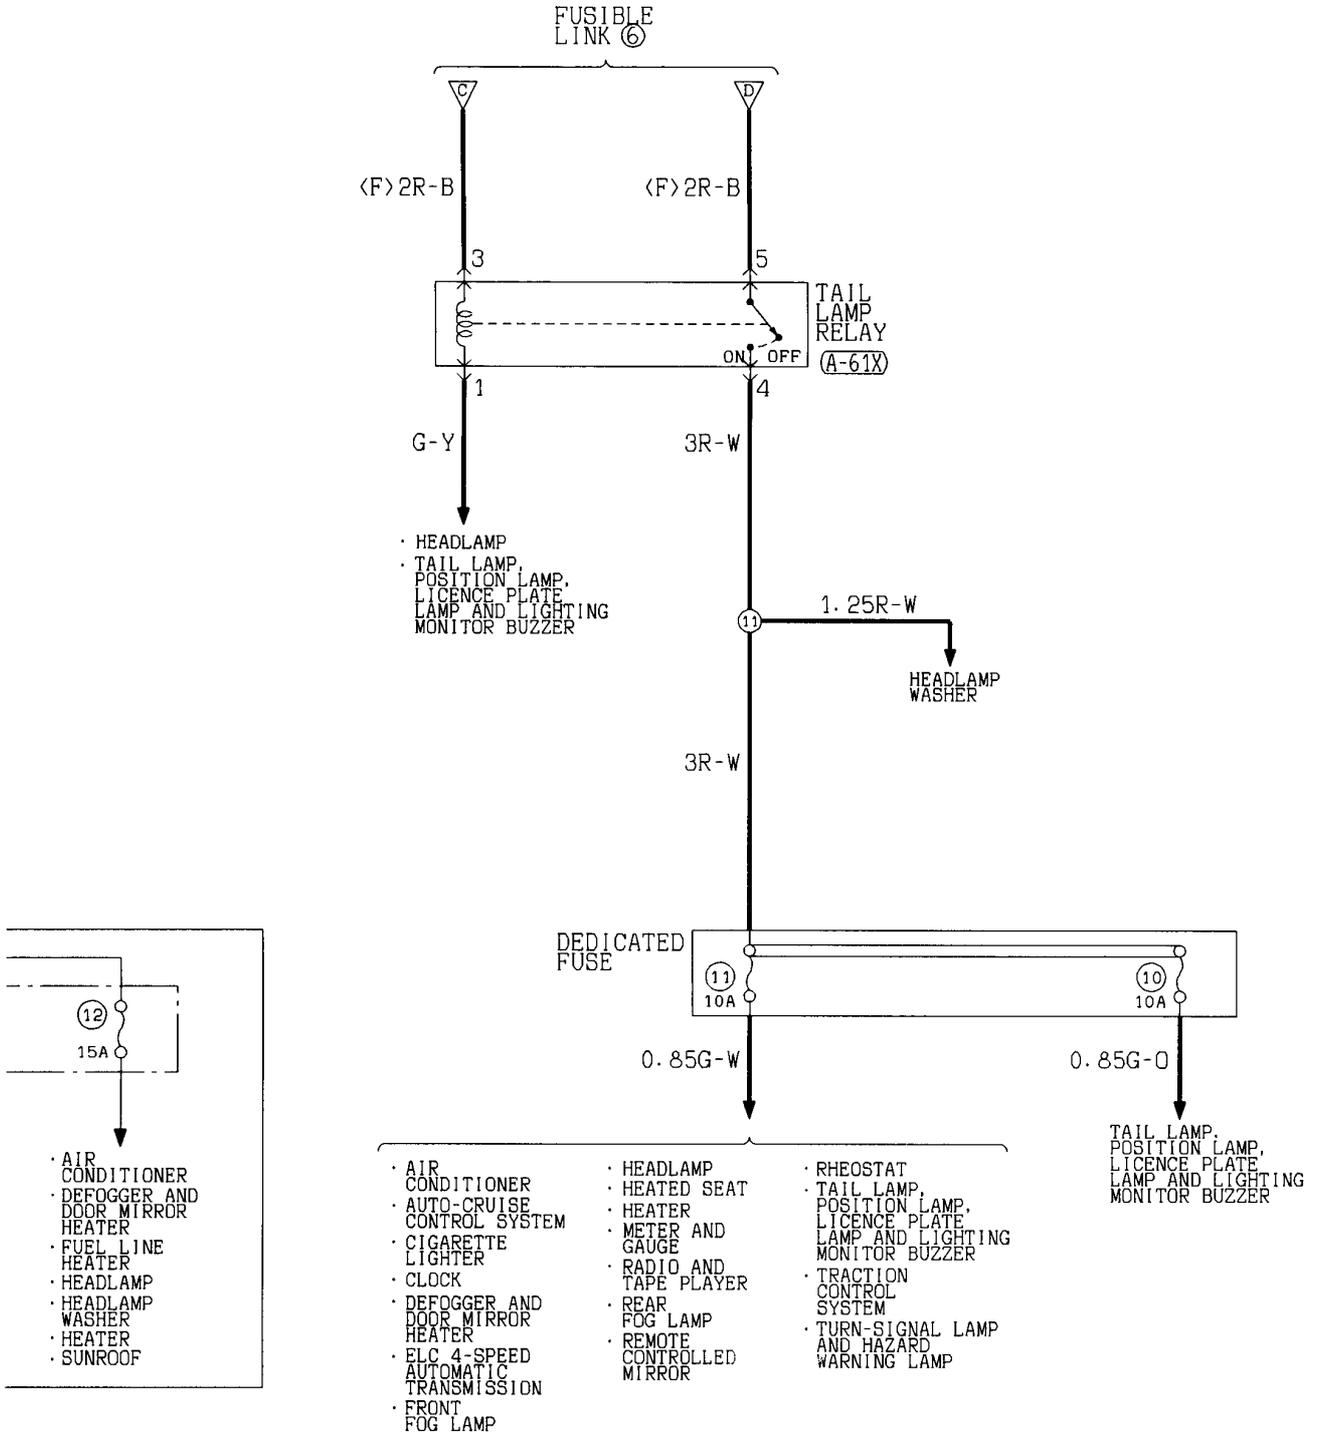

Wire colour code
 B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet


IGNITION SYSTEM

MPI-SOHC <A/T>

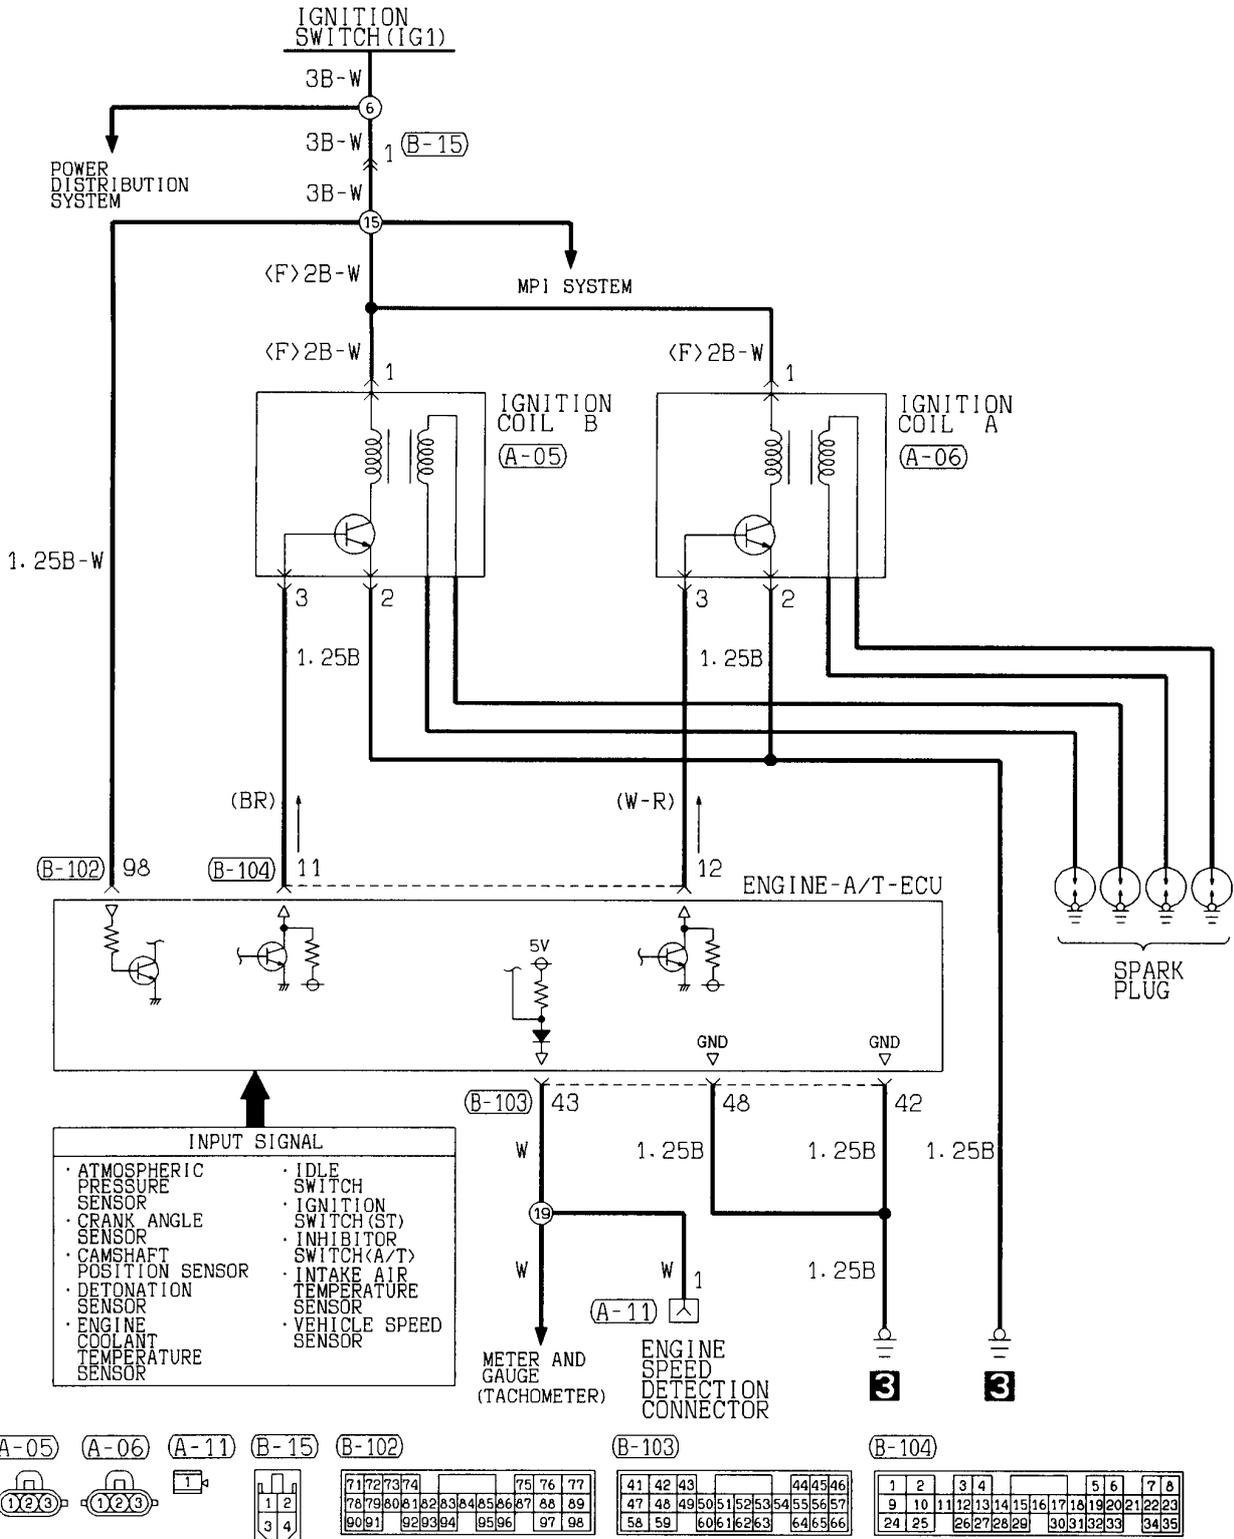


CHARGING SYSTEM

Diesel-powered vehicles

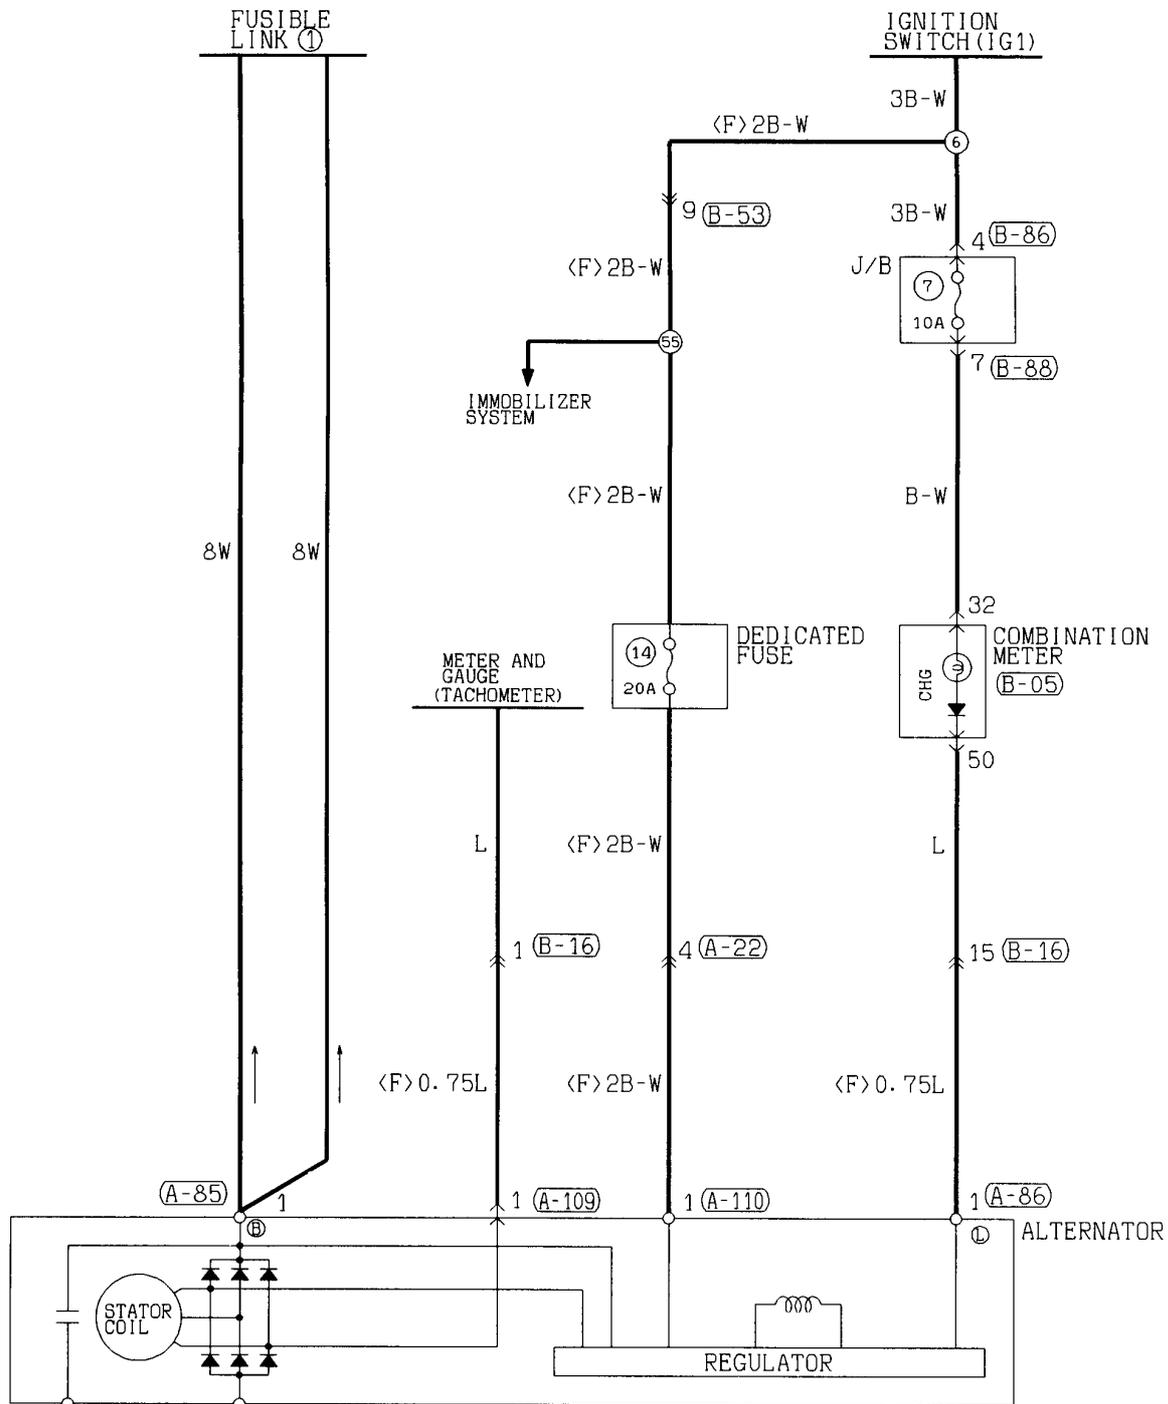



(A-22)	(A-85)	(A-86)	(A-109)	(A-110)	(B-05)	(B-16)	(B-53)	(B-86)
1 2 3 4 5 6	1	1	1	1	31 32 33 34 35 36 37 38 39 40 41 42 43	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	1 2 3 4 5 6 7 8 9 10	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
(B-88)								
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22								

GLOW SYSTEM

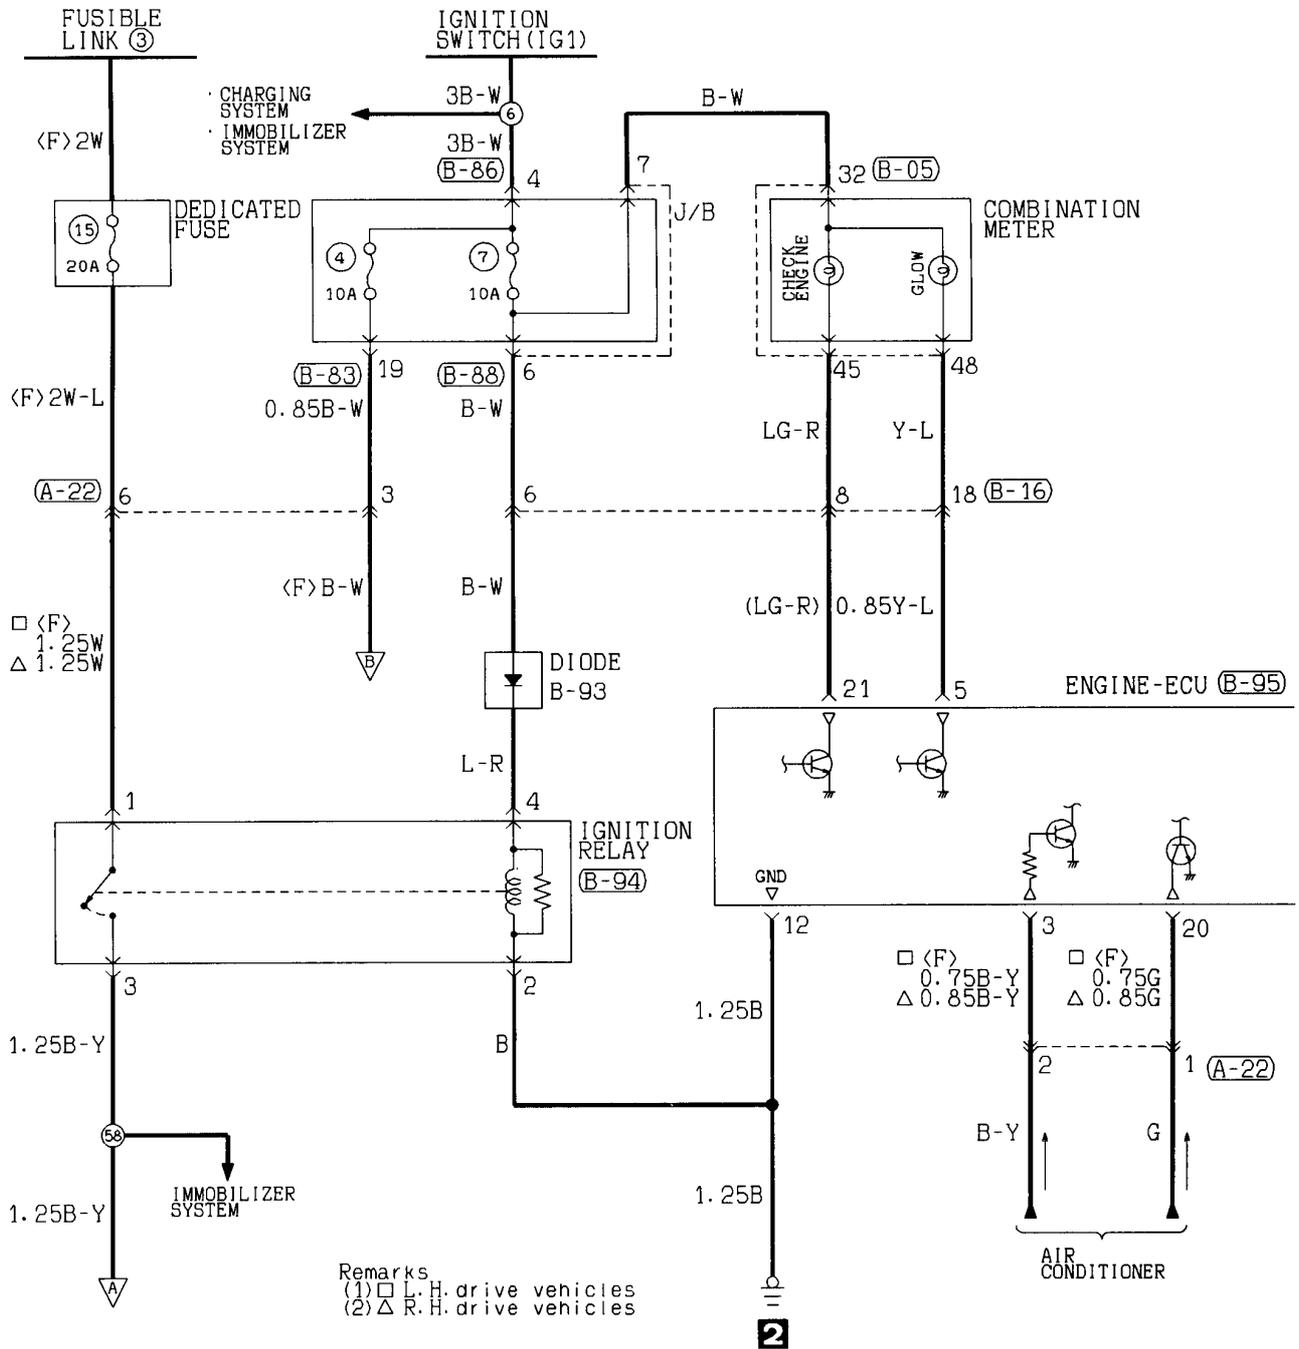


2

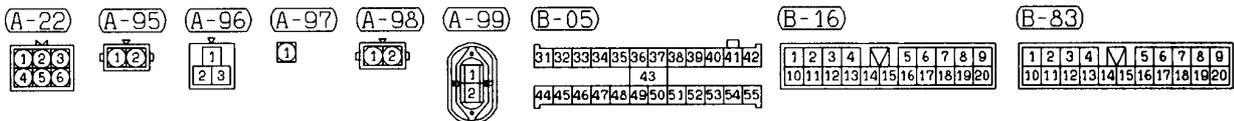


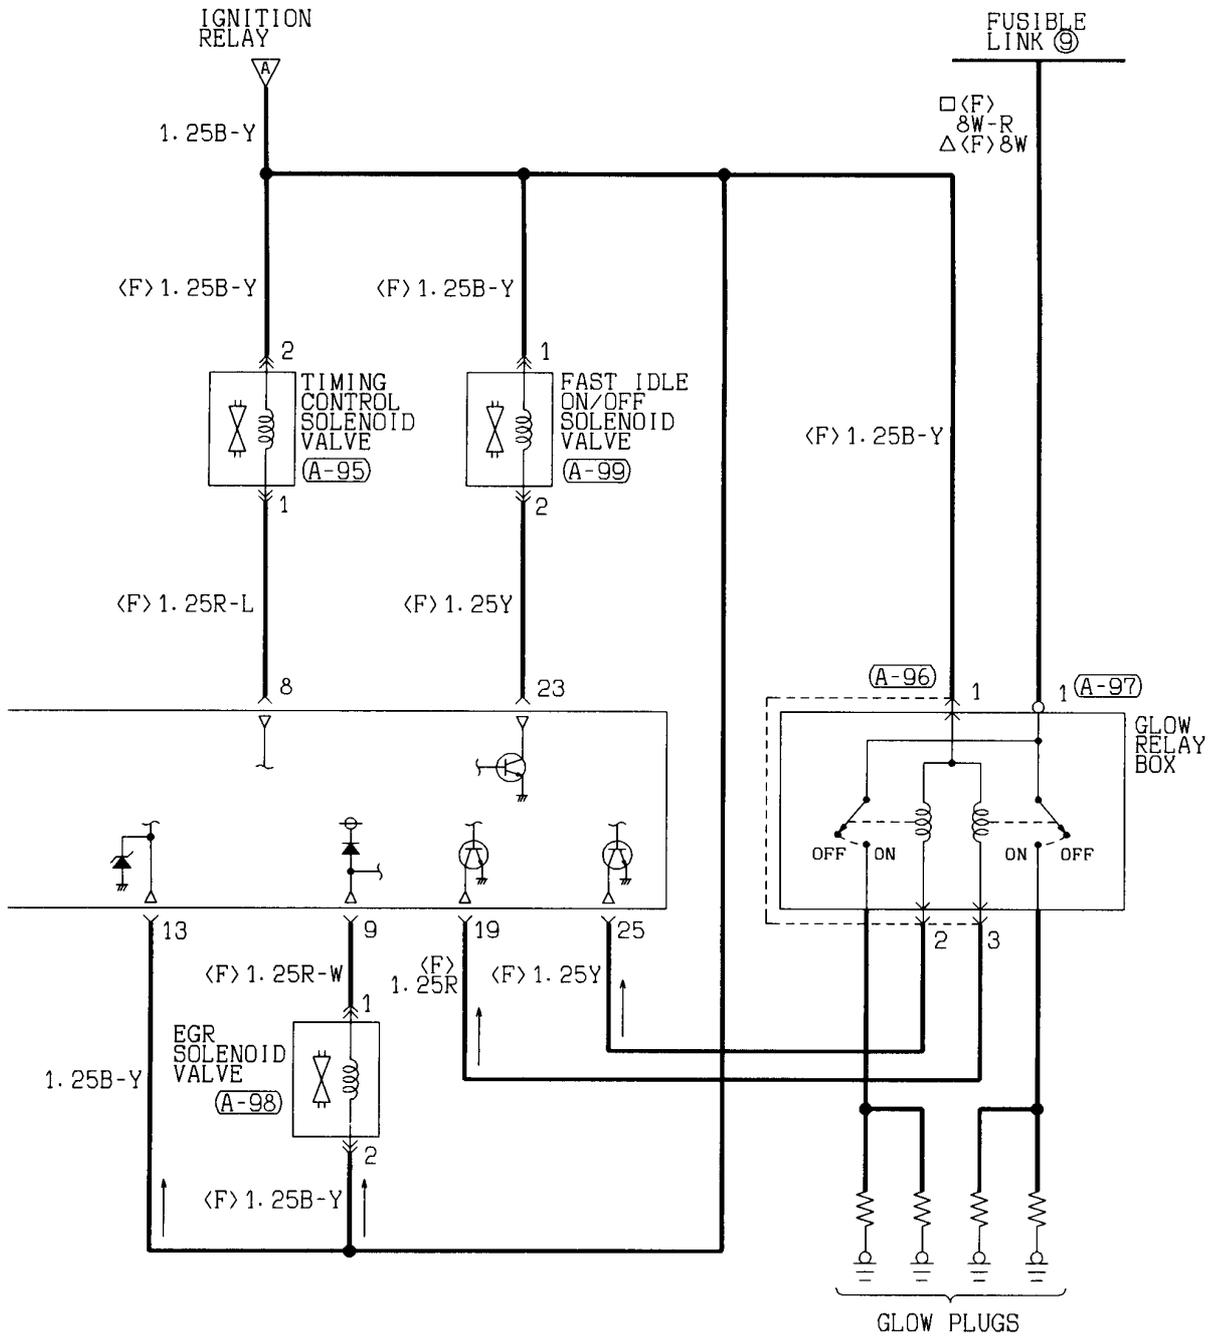

(B-86)

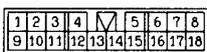


(B-88)

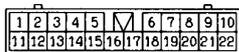



(B-94)




(B-95)

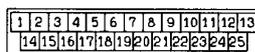

GLOW SYSTEM (CONTINUED)

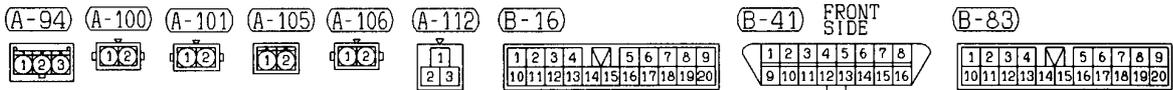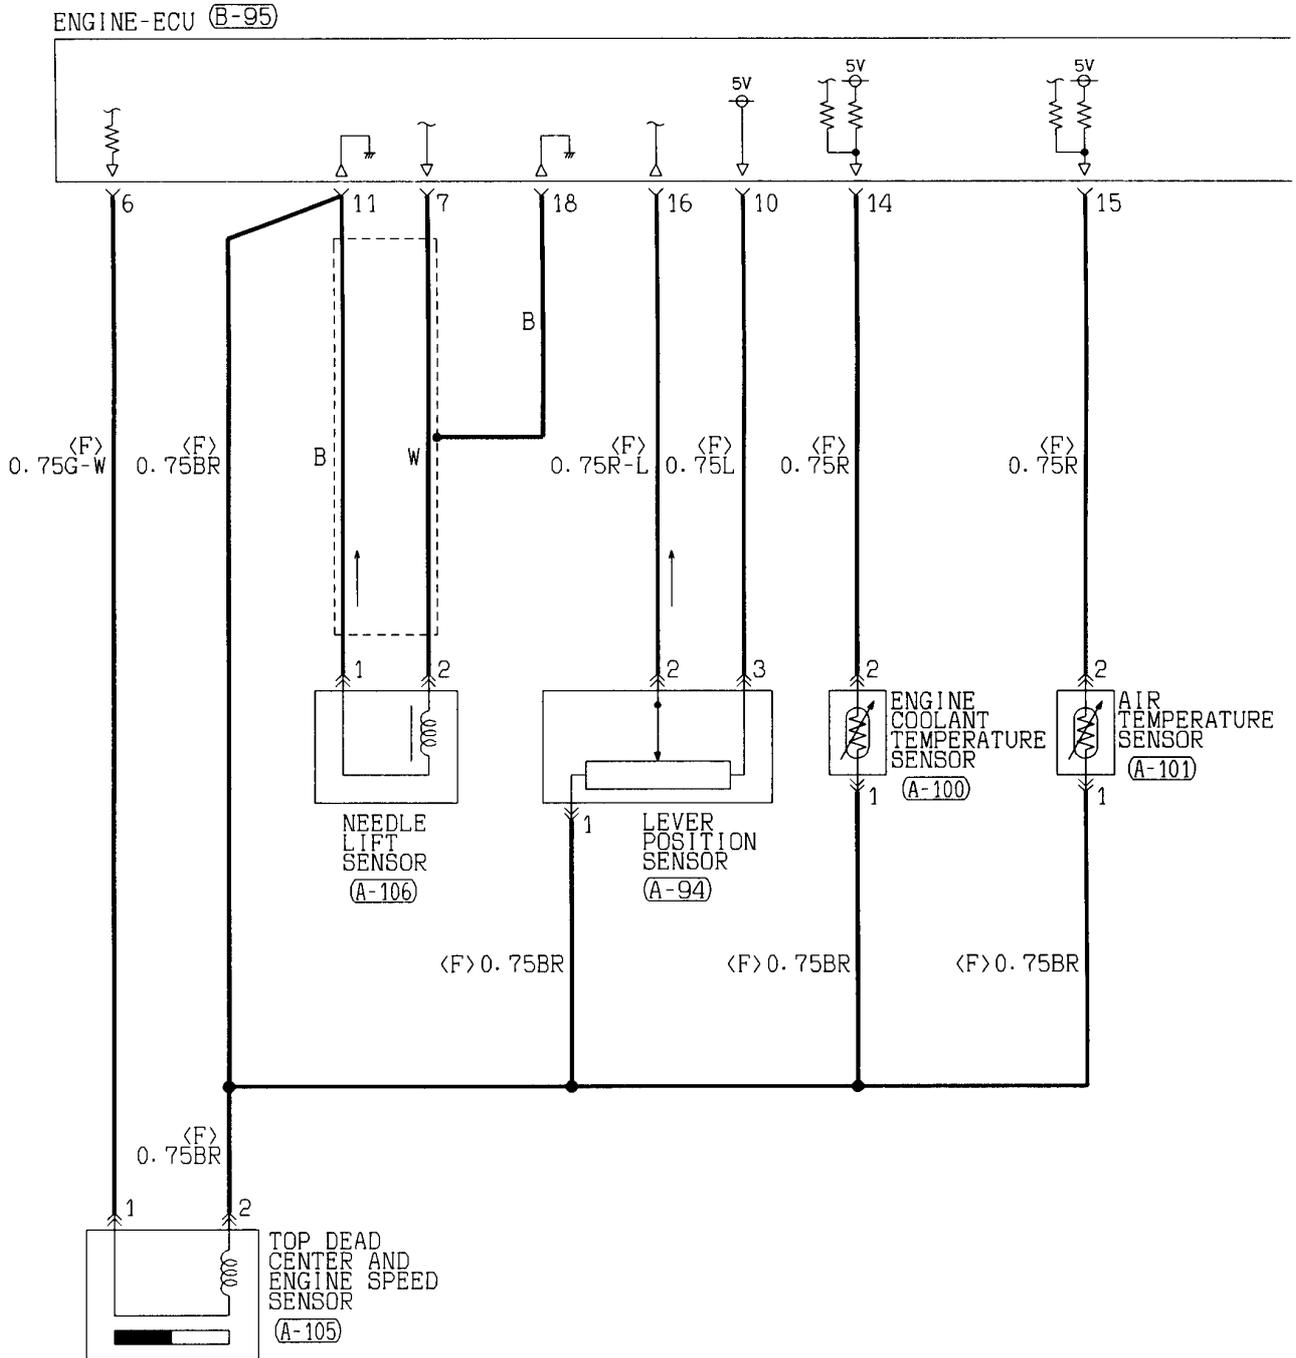

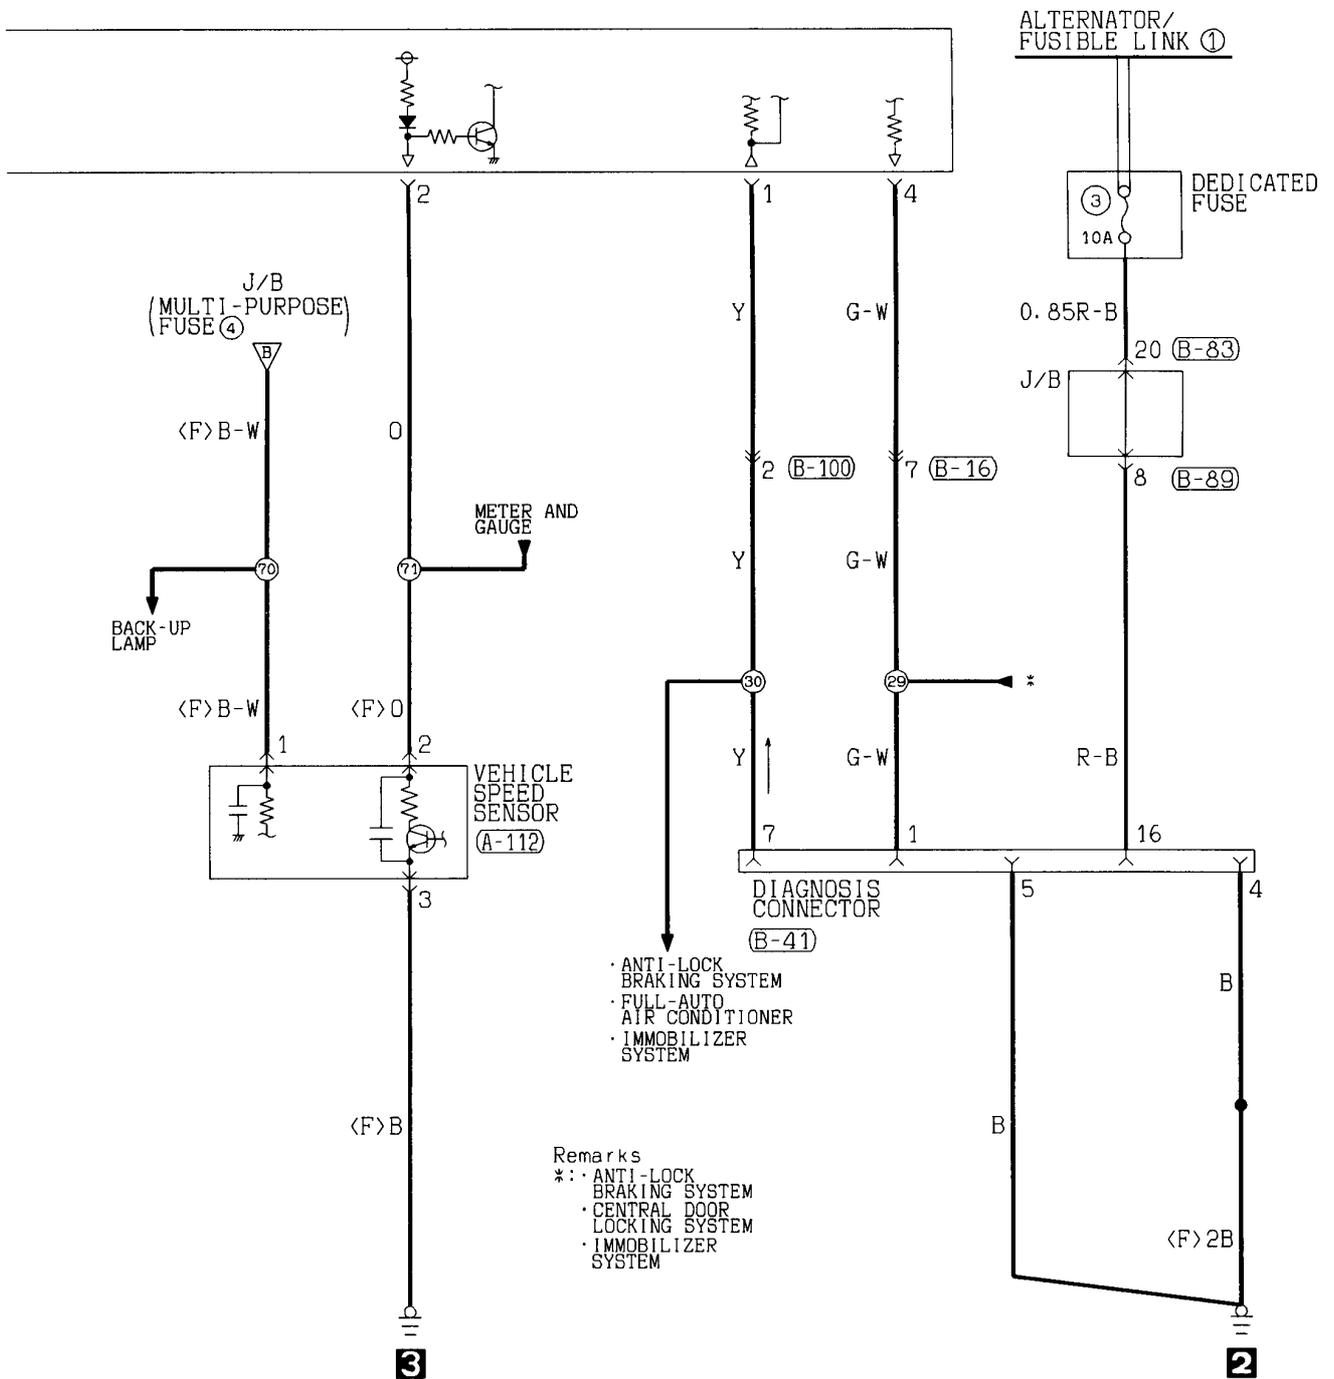



- ANTI-LOCK BRAKING SYSTEM
- FULL-AUTO AIR CONDITIONER
- IMMOBILIZER SYSTEM



Remarks
 *: ANTI-LOCK BRAKING SYSTEM
 · CENTRAL DOOR LOCKING SYSTEM
 · IMMOBILIZER SYSTEM

(B-89)	(B-95)	(B-100)																																																	
<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr> <tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	<table border="1"> <tr><td>1</td><td>2</td></tr> </table>	1	2
1	2	3	4	5	6	7	8	9	10																																										
11	12	13	14	15	16	17	18	19	20	21	22																																								
1	2	3	4	5	6	7	8	9	10	11	12	13																																							
14	15	16	17	18	19	20	21	22	23	24	25																																								
1	2																																																		



MPI SYSTEM


MPI-SOHC-M/T <Vehicles without TCL>

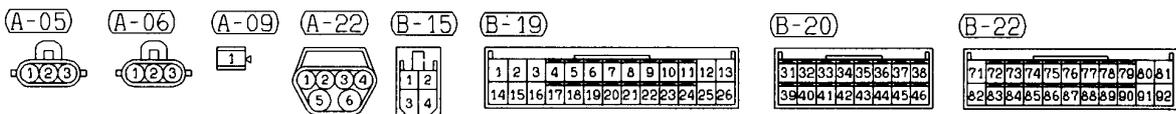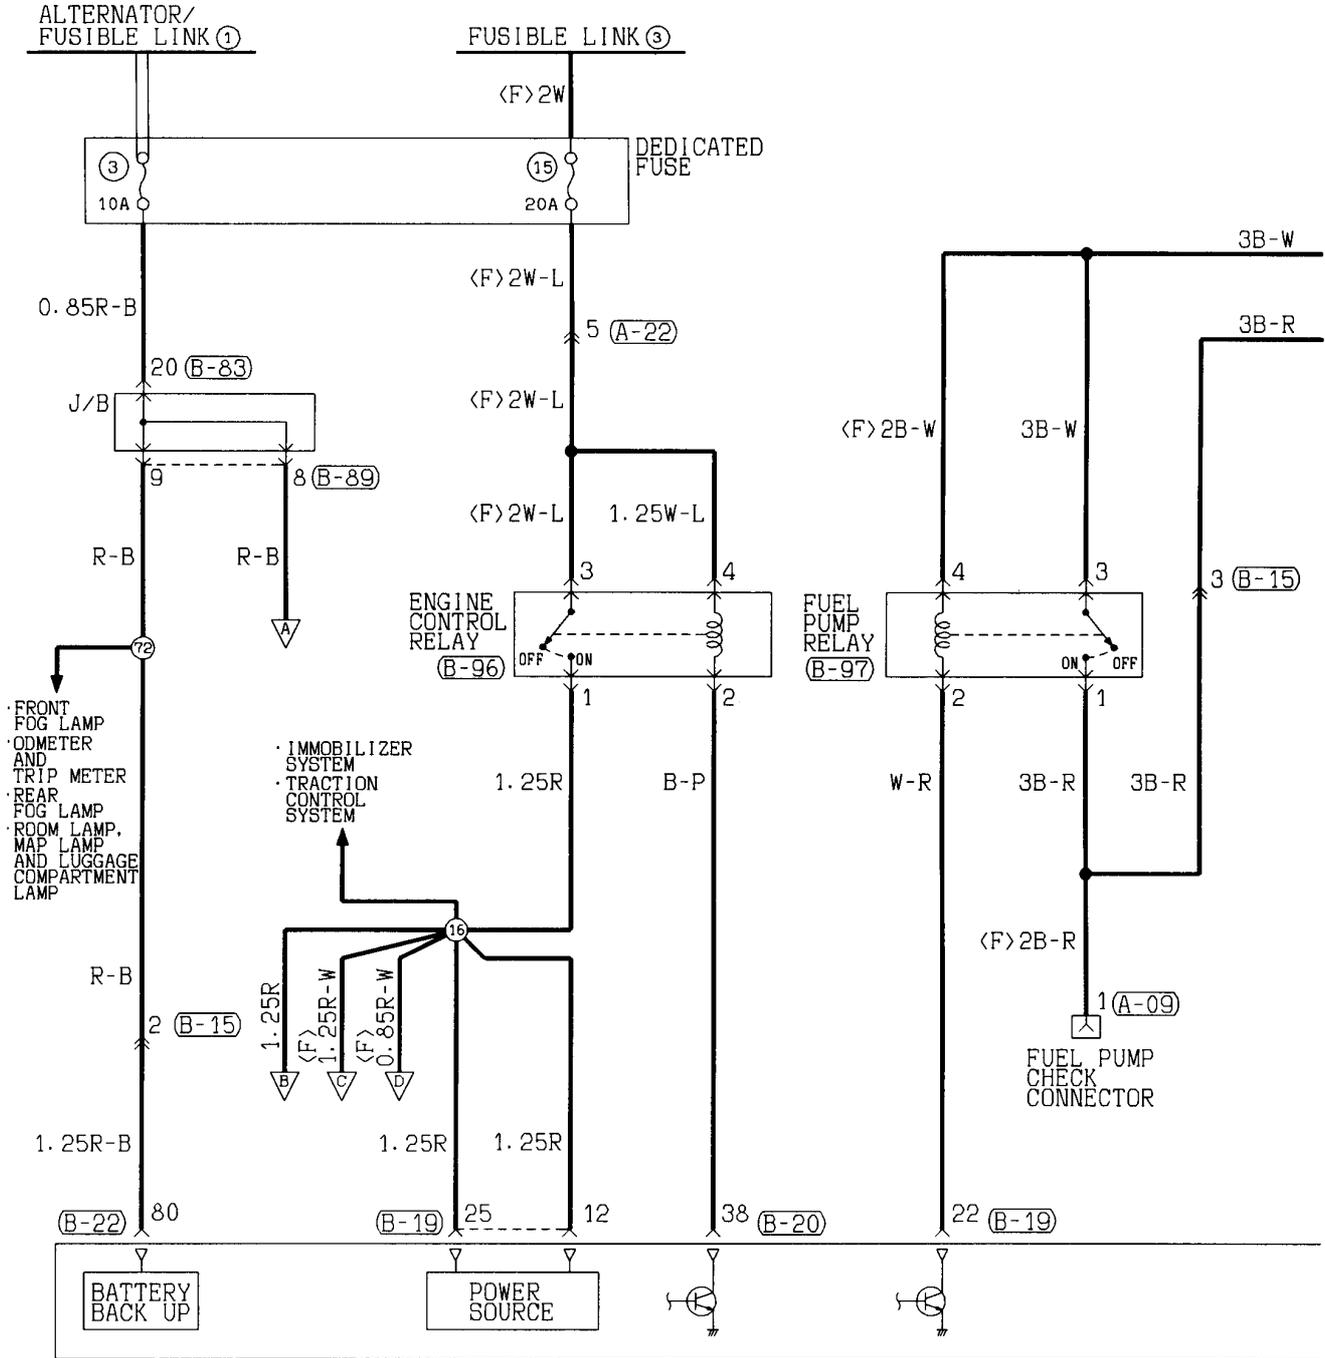

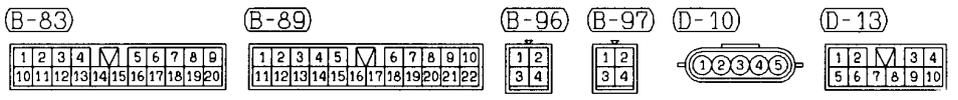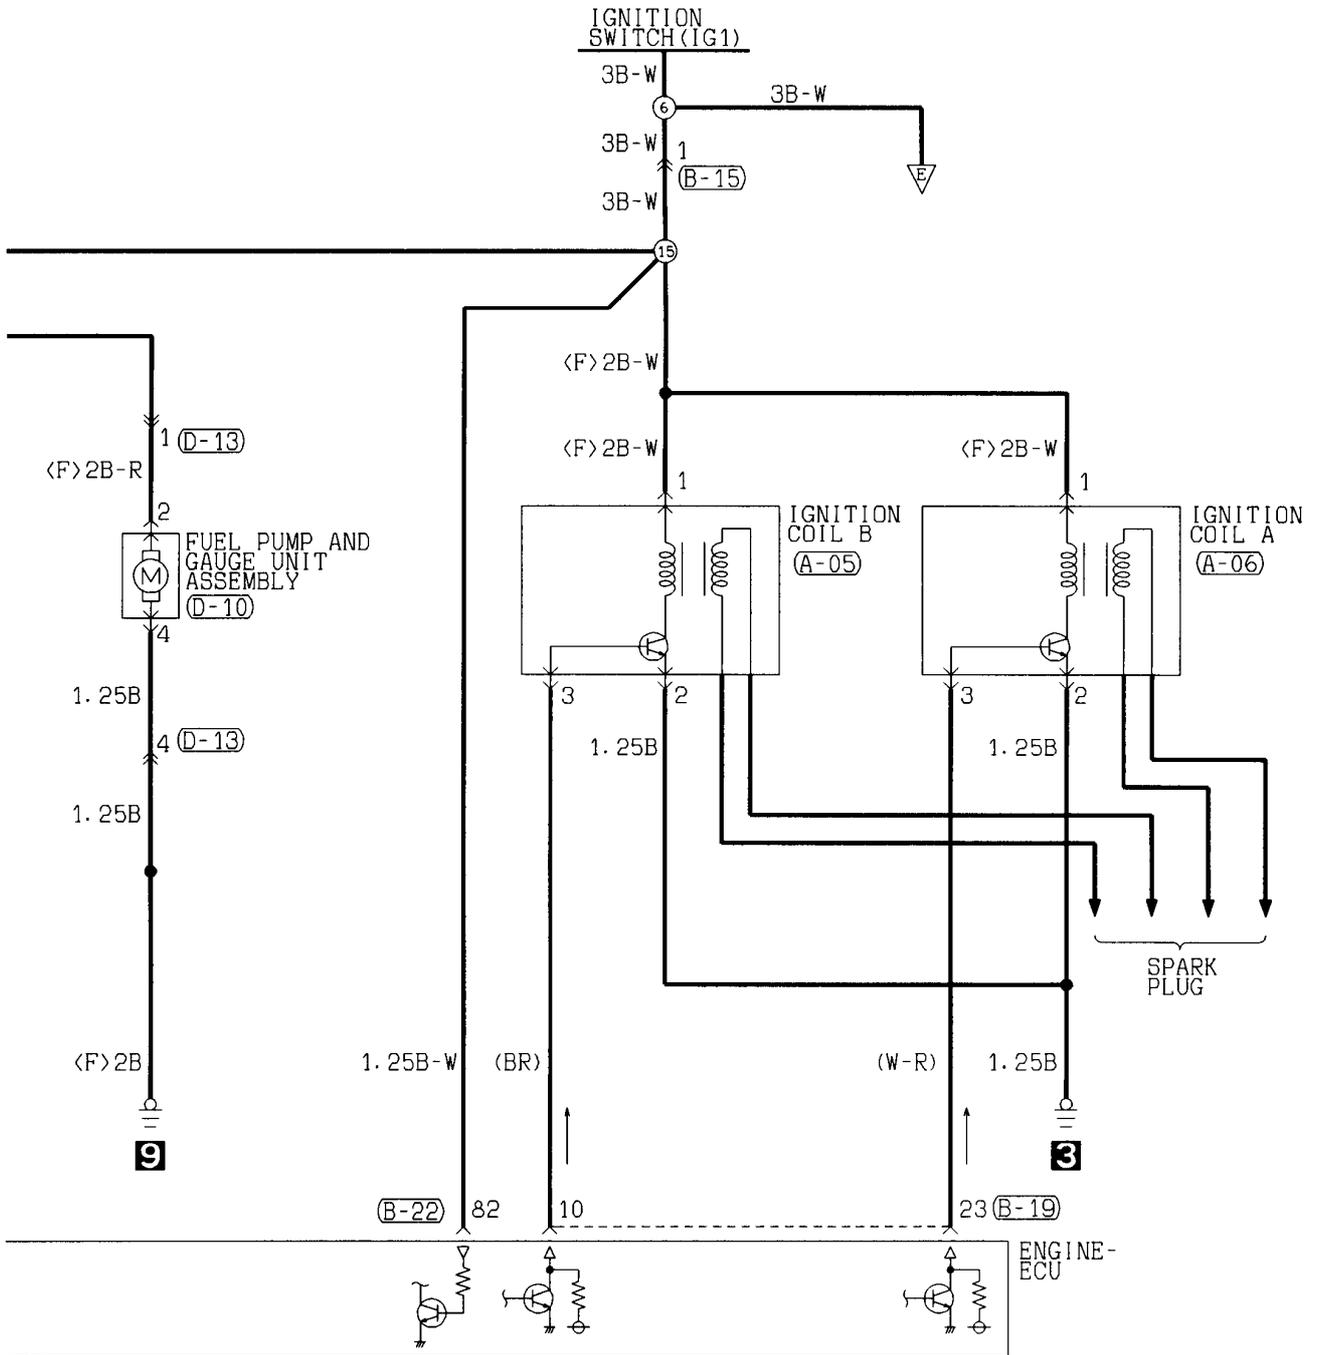



MPI SYSTEM <MPI-SOHC-M/T (Vehicles without TCL)> (CONTINUED)

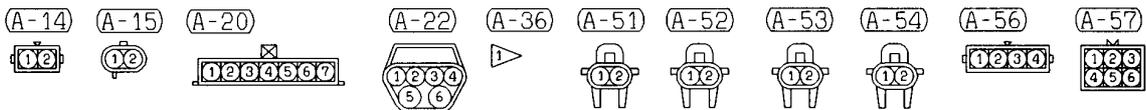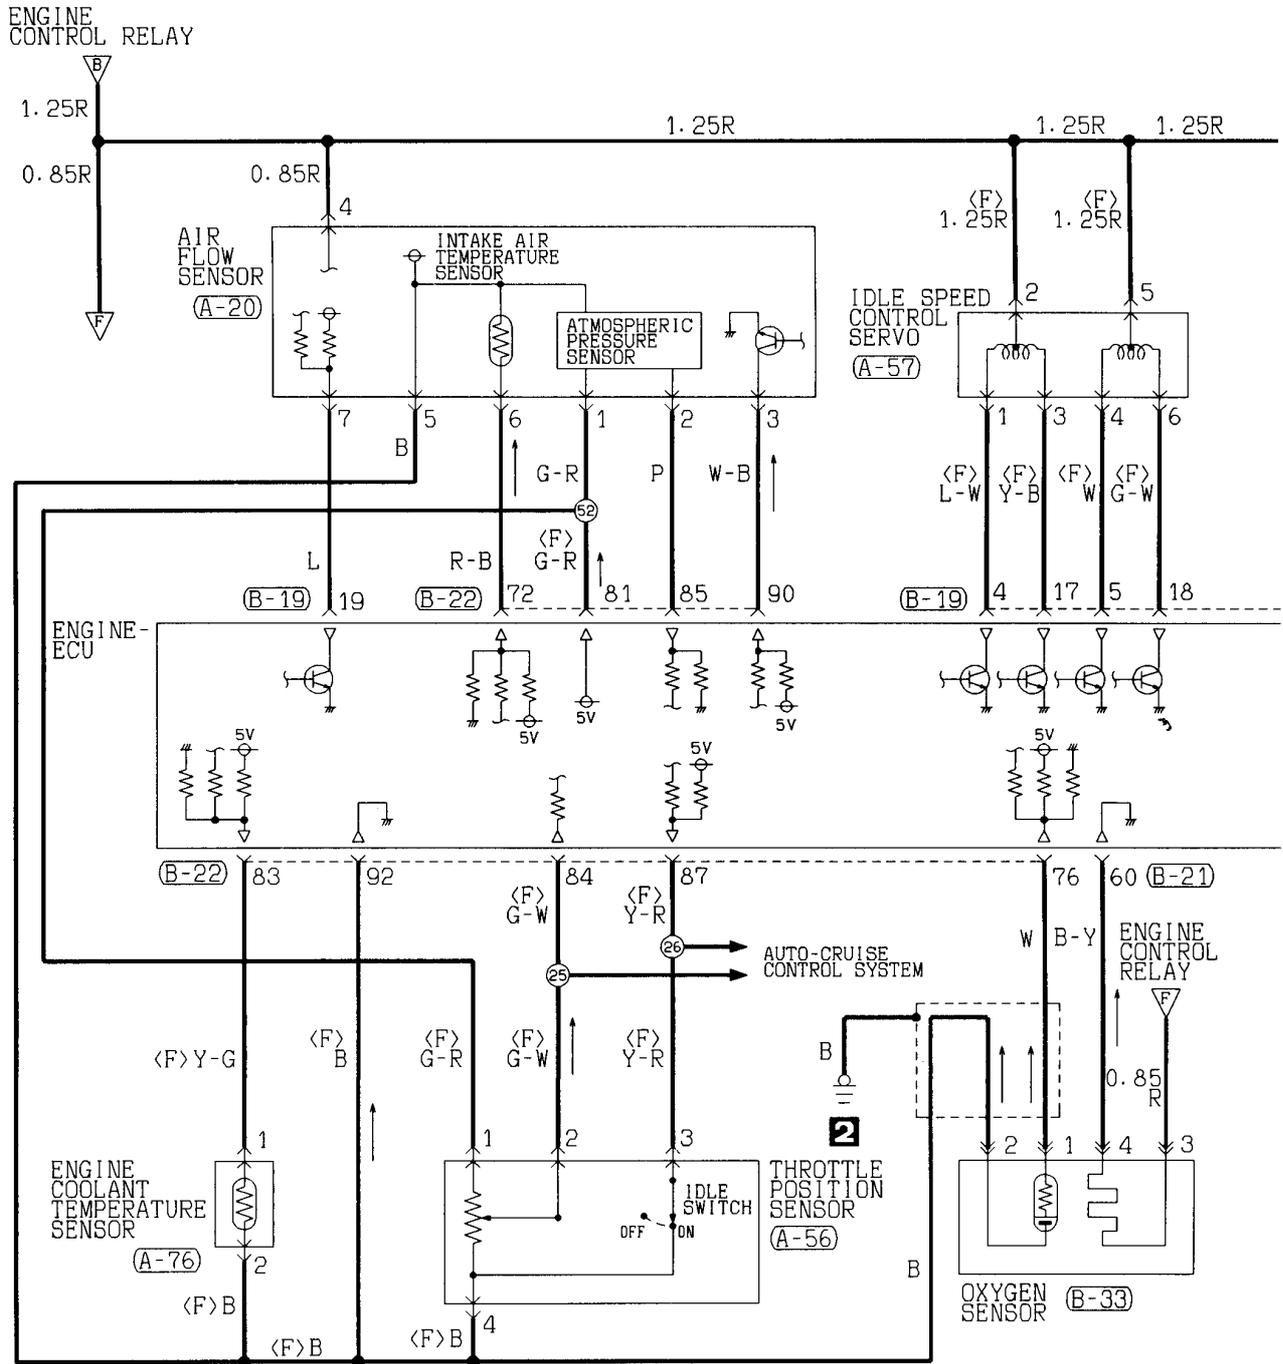

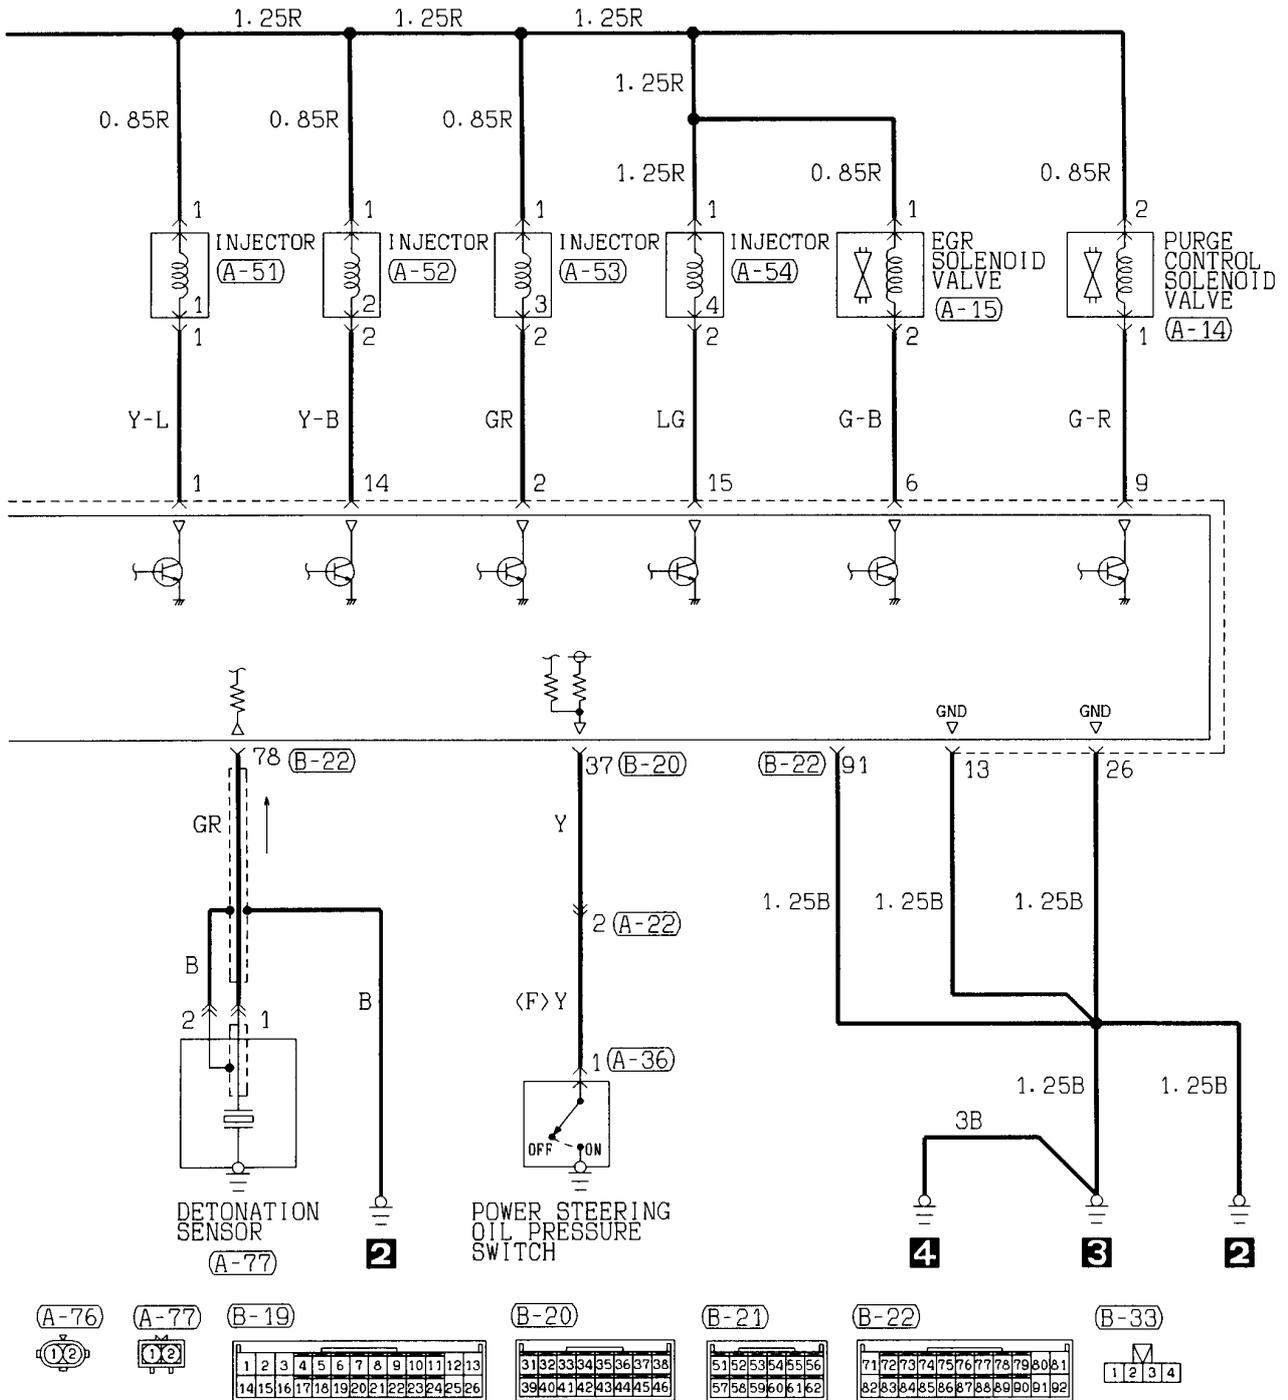

MPI SYSTEM <MPI-SOHC-M/T (Vehicles without TCL)> (CONTINUED)

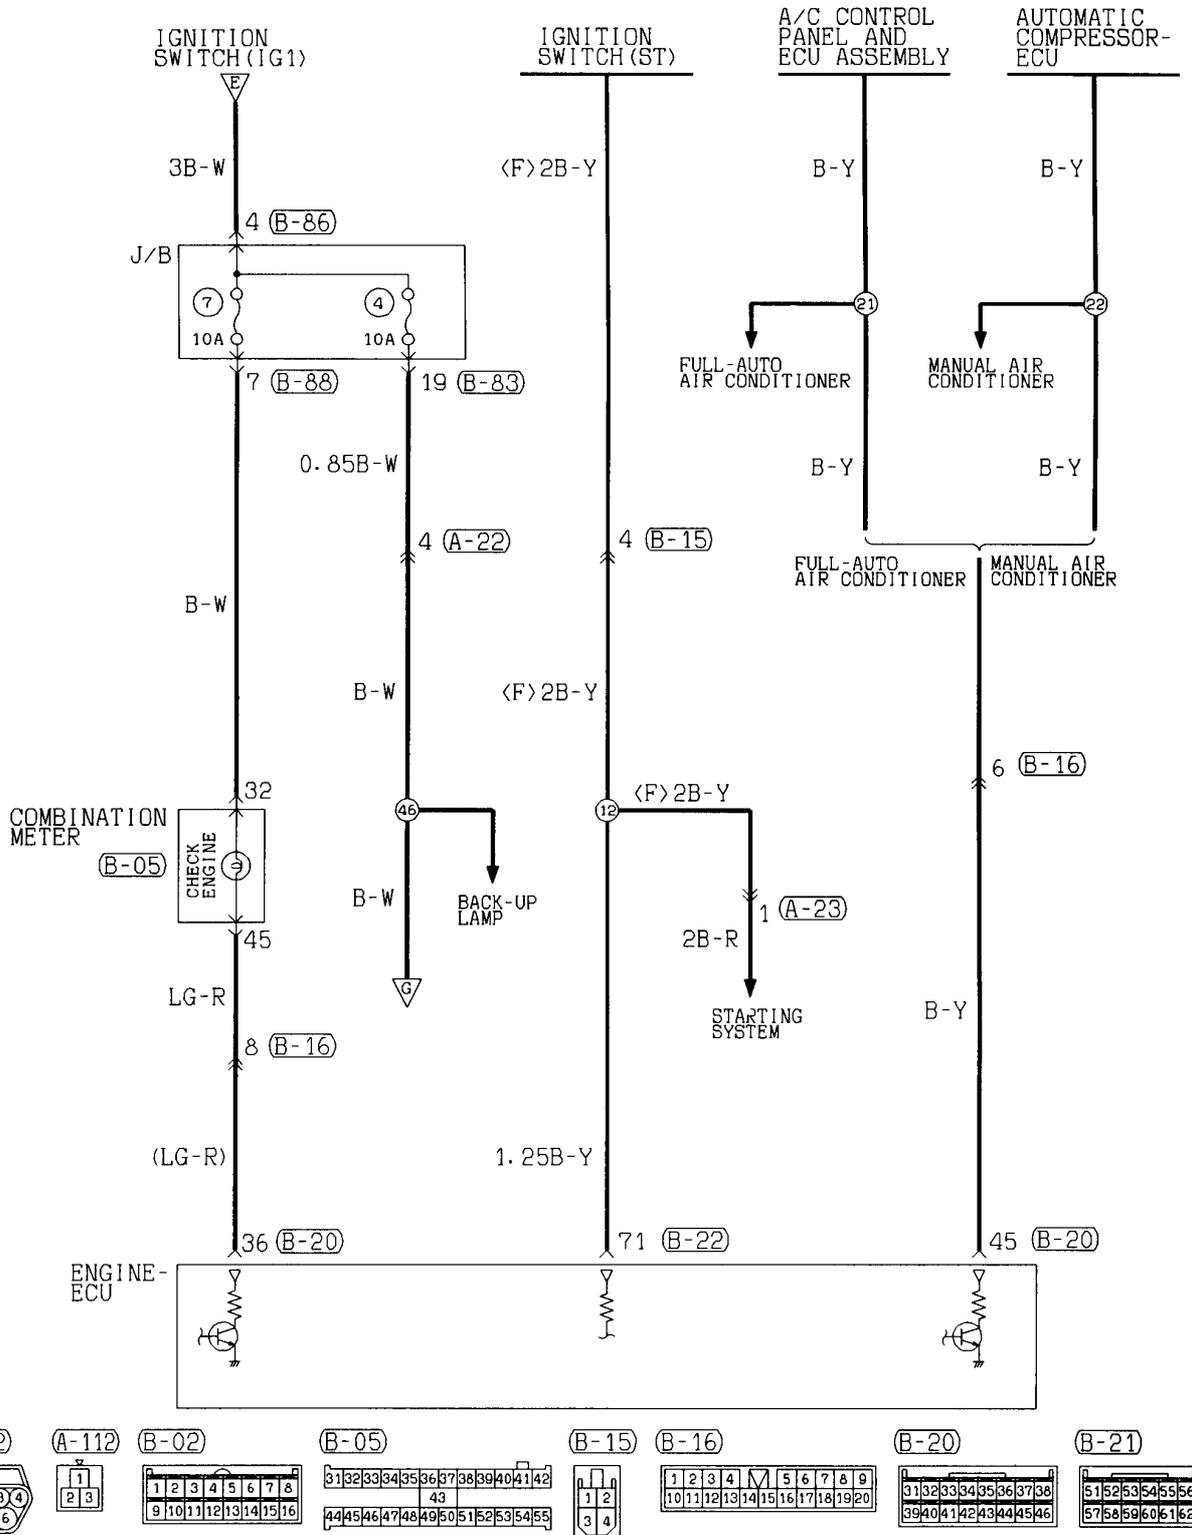

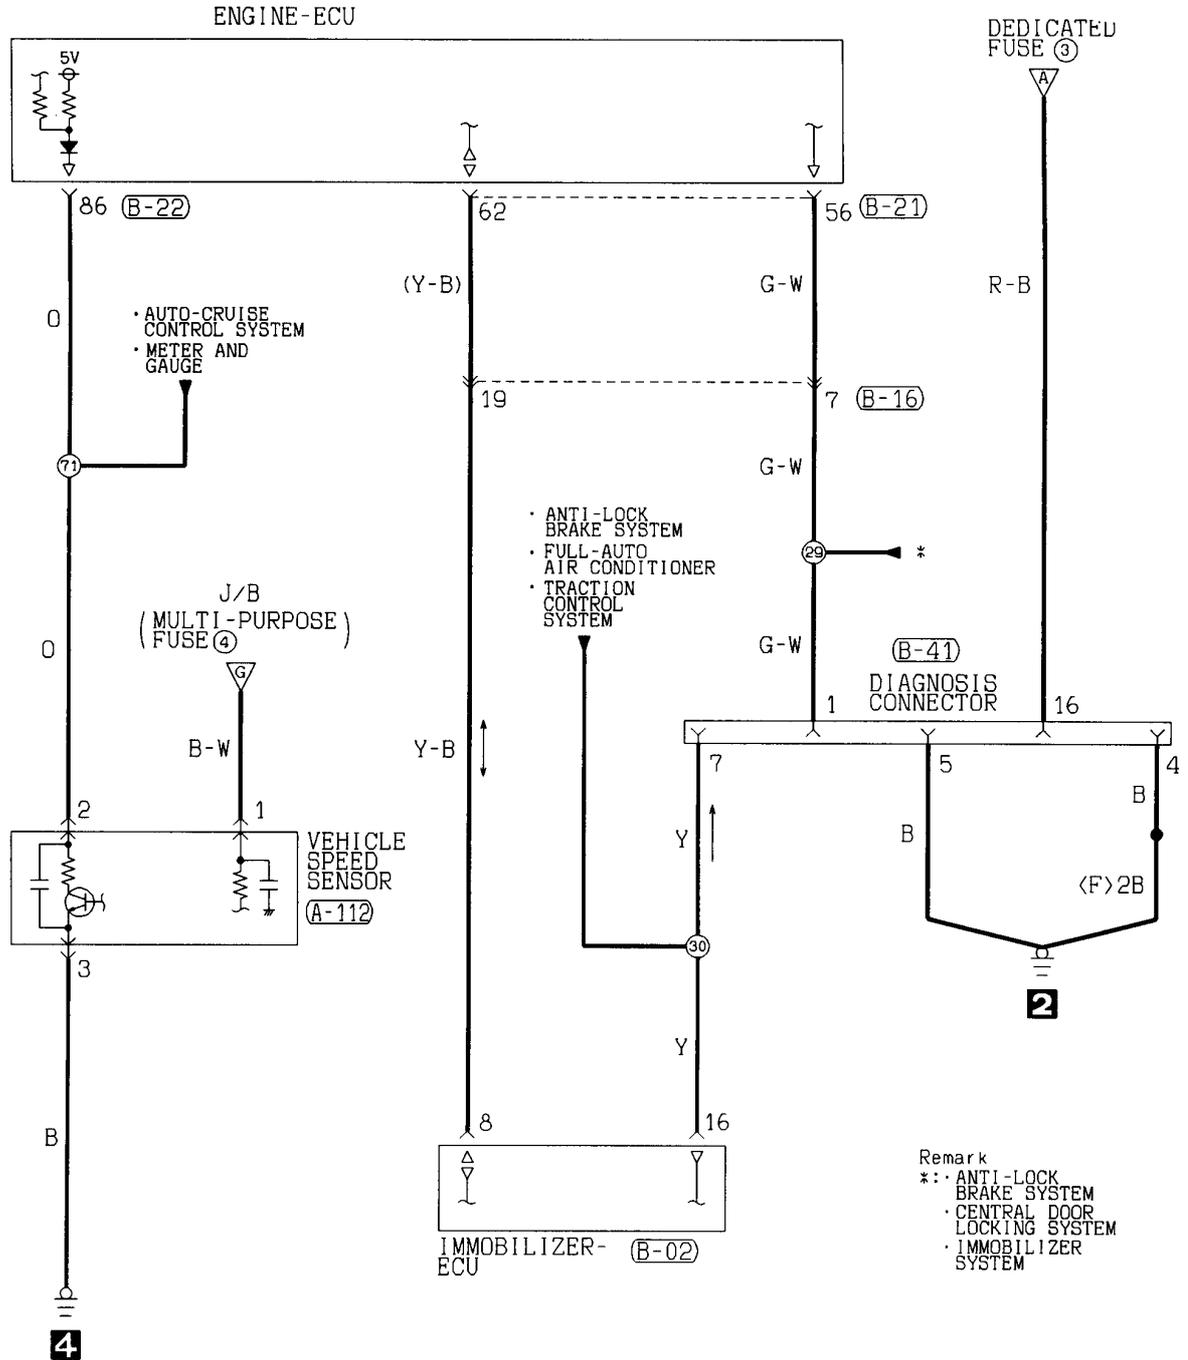

Remark
 *: ANTI-LOCK BRAKE SYSTEM
 CENTRAL DOOR LOCKING SYSTEM
 IMMOBILIZER SYSTEM

(B-22)

1	2	3	4	5	6	7	8	9	10
71	72	73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88	89	90
91	92								

(B-41) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-83)

1	2	3	4	M	5	6	7	8	9
10	11	12	13	14	15	16	17	18	19
20									

(B-86)



1	2	3	4	M	5	6	7	8
9	10	11	12	13	14	15	16	17
18								

(B-88)


1	2	3	4	5	M	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21
22										

Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

MPI SYSTEM <MPI-SOHC-M/T (Vehicles without TCL)> (CONTINUED)

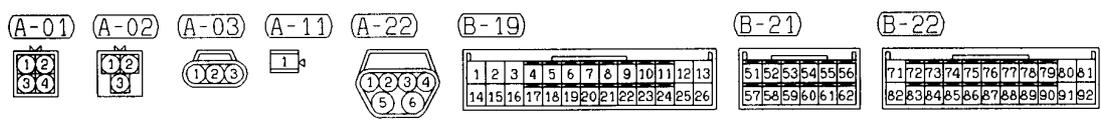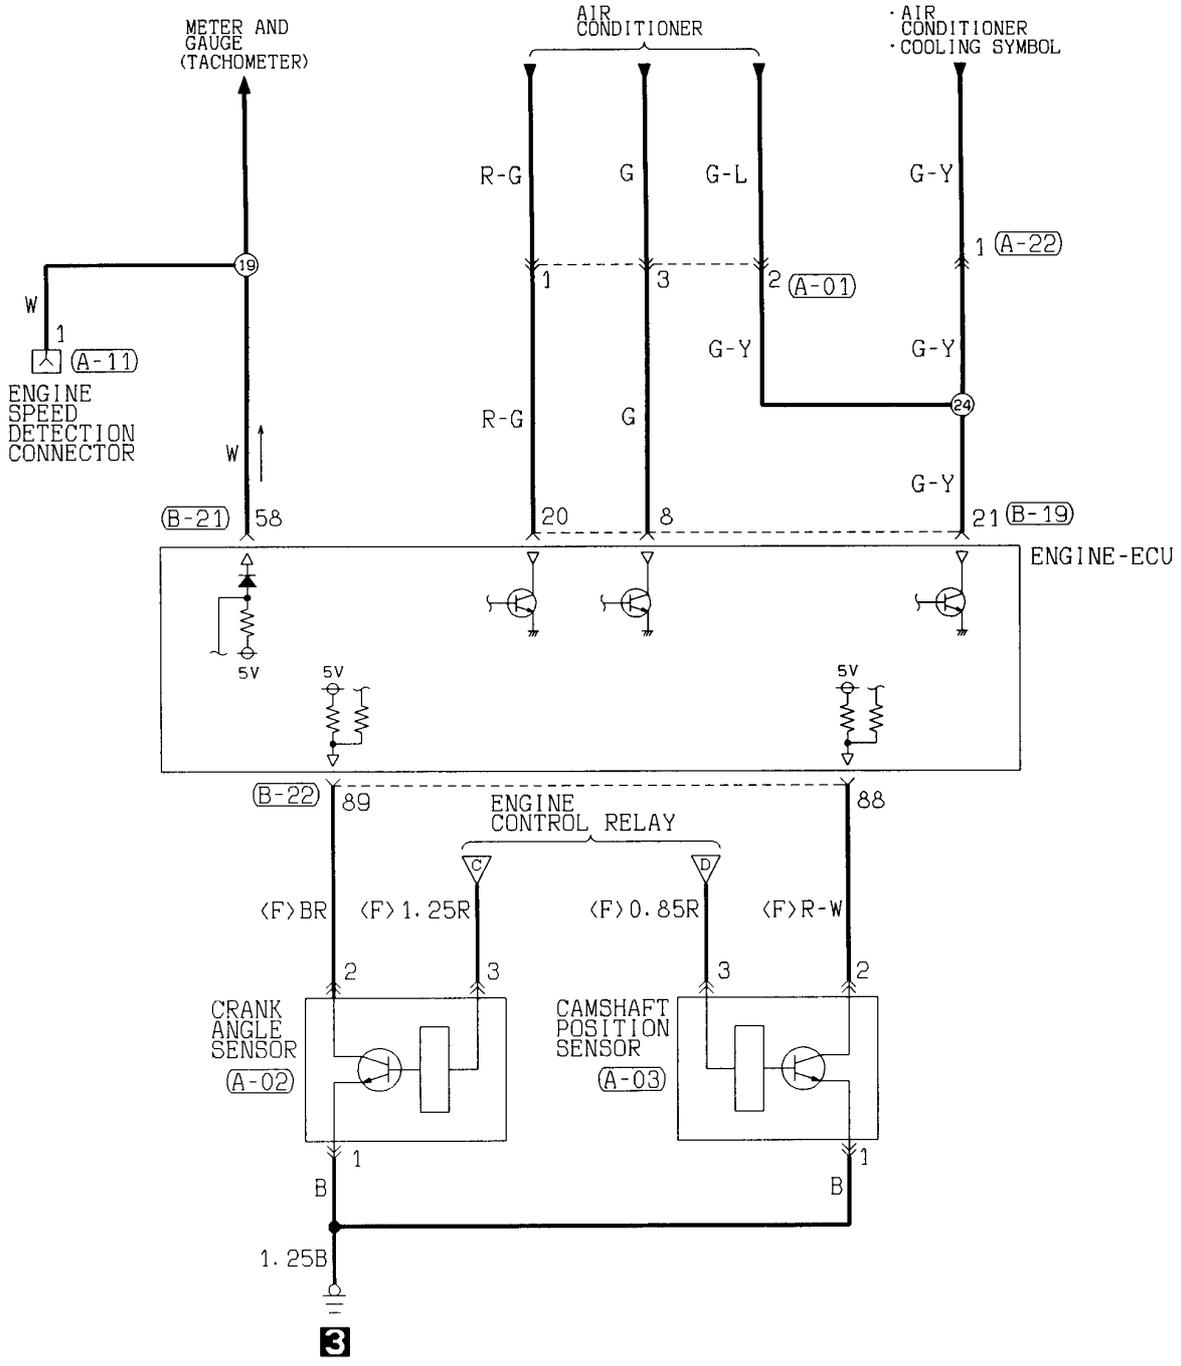

NOTES

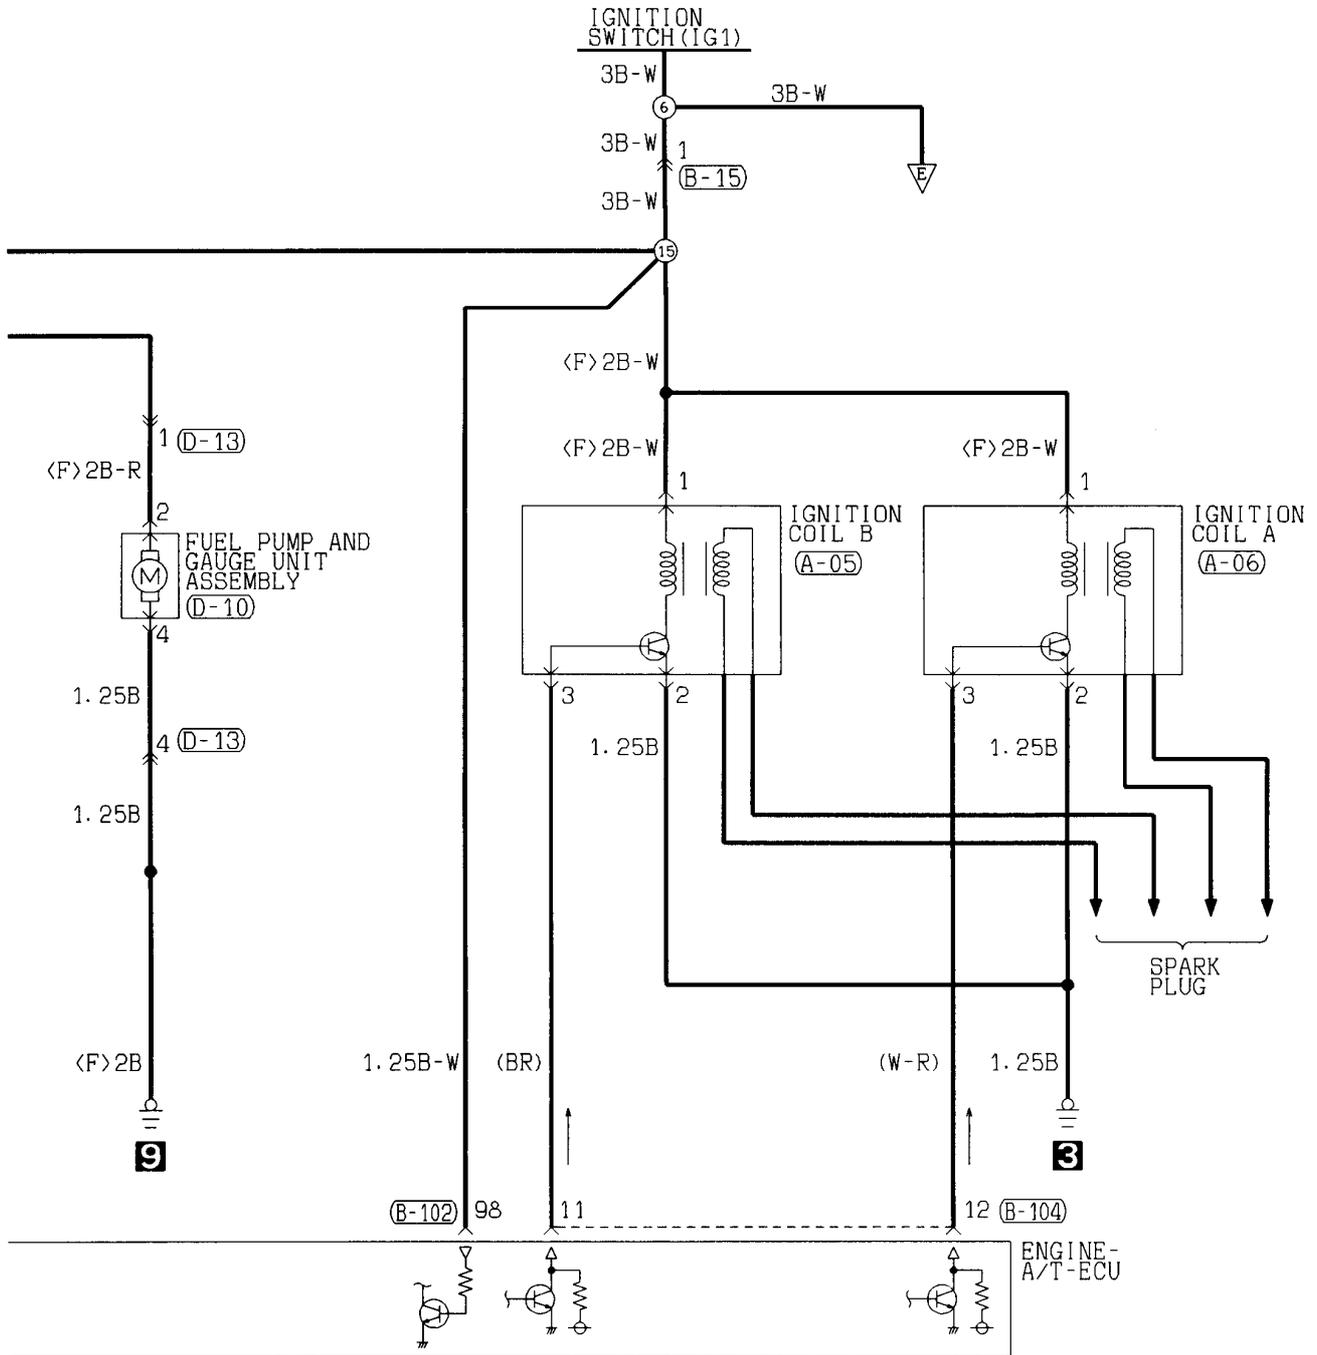

(B-102)

71	72	73	74		75	76	77				
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			


(C-103)

41	42	43		44	45	46				
47	48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66		


(C-104)

1	2	3	4		5	6	7	8						
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31	32	33	34	35			

(D-10)

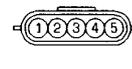


(D-13)

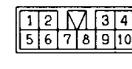


Wire colour code

B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet







MPI SYSTEM <MPI-SOHC-A/T (Vehicles without TCL)> (CONTINUED)

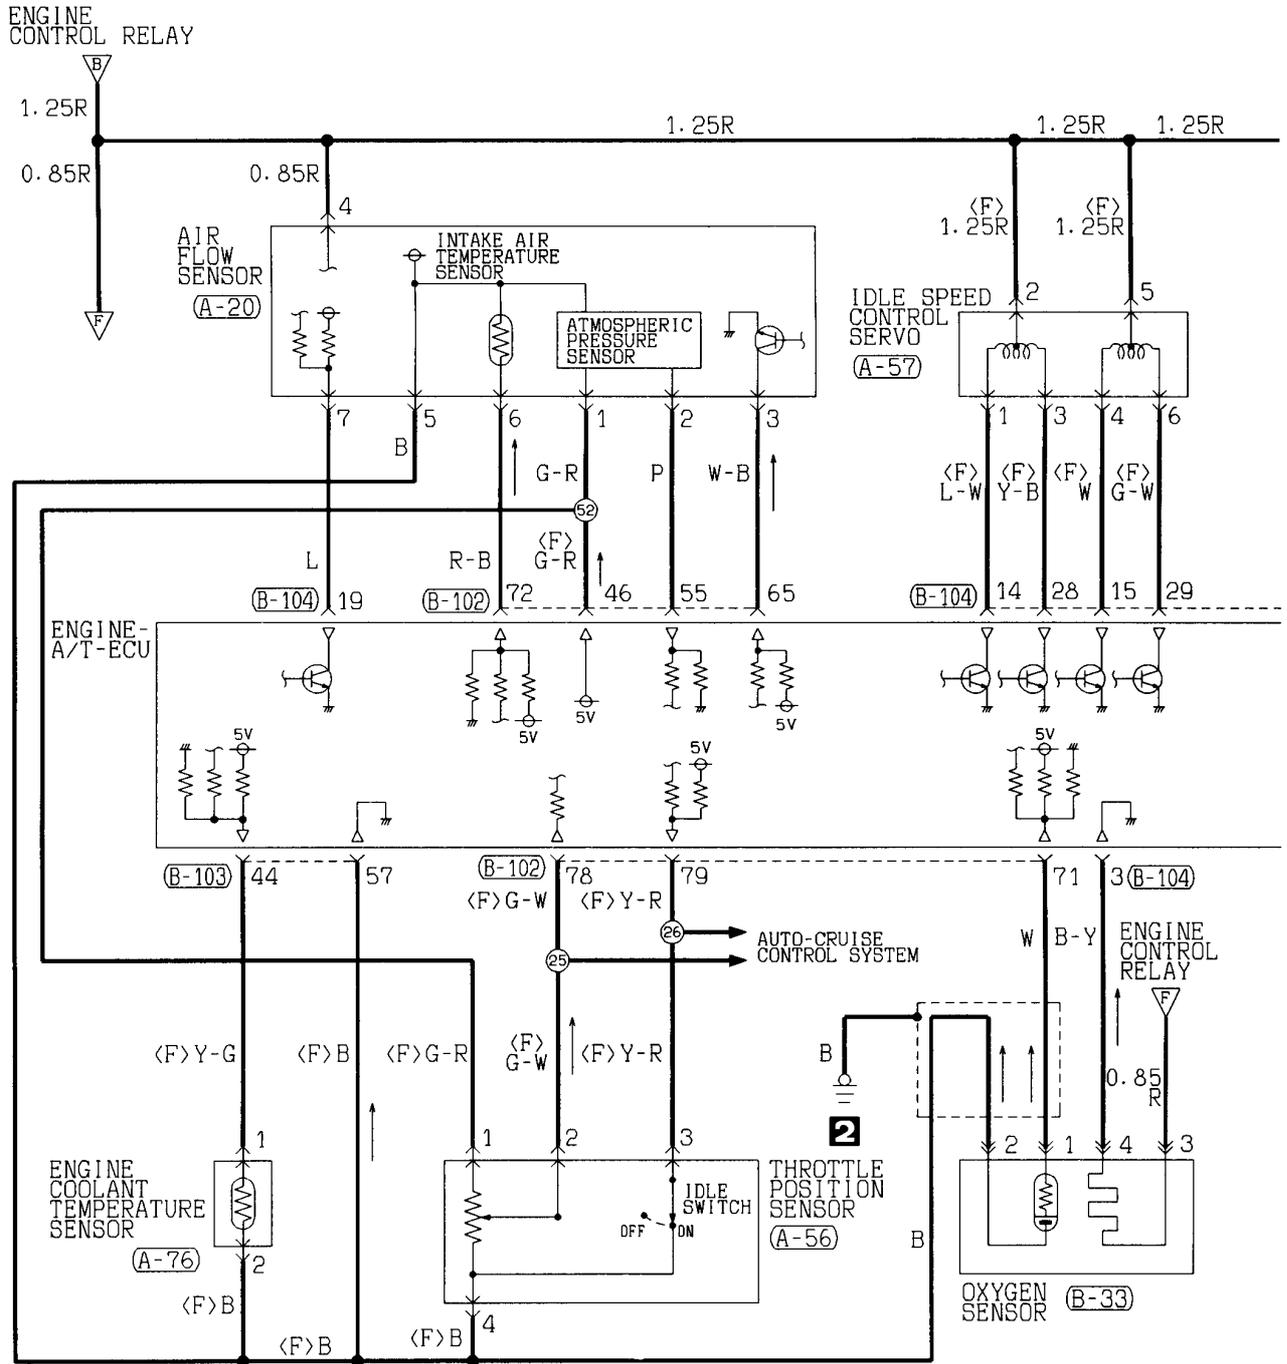


- (A-14)
- (A-15)
- (A-20)
- (A-22)
- (A-36)
- (A-51)
- (A-52)
- (A-53)
- (A-54)
- (A-56)
- (A-57)

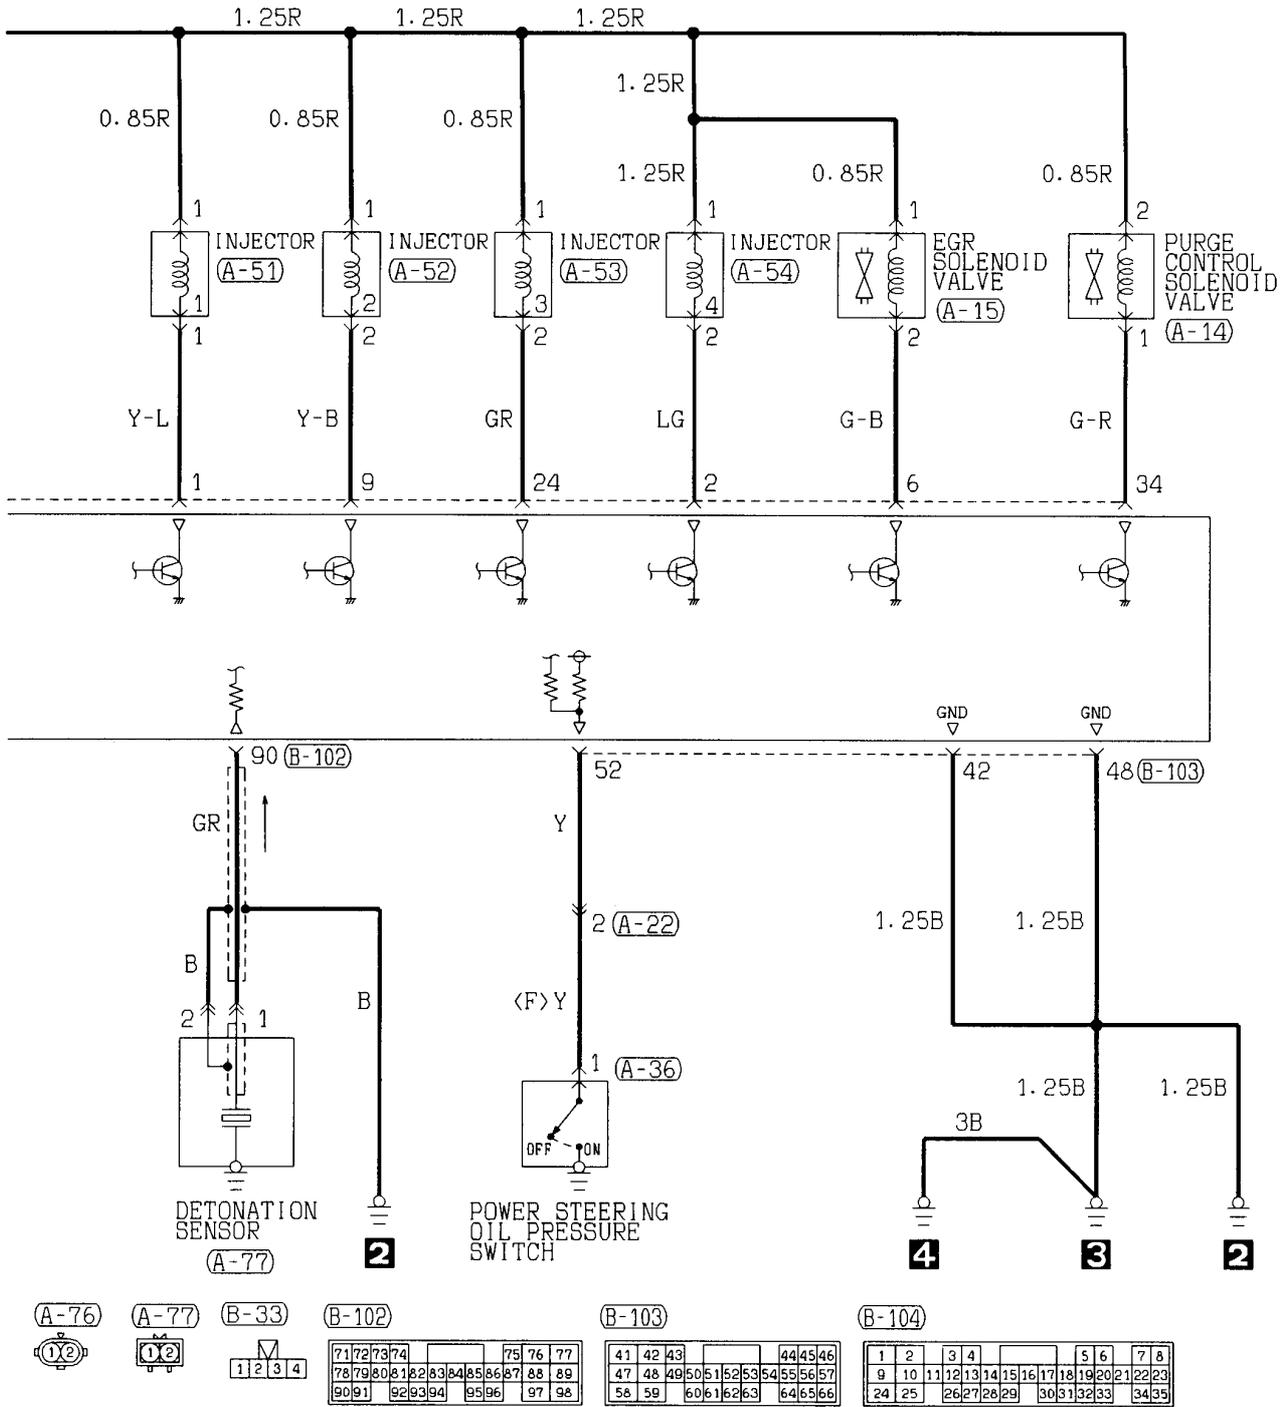

MPI SYSTEM <MPI-SOHC-A/T (Vehicles without TCL)> (CONTINUED)

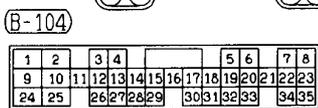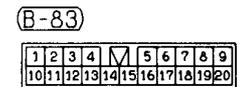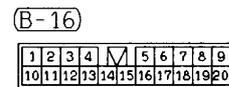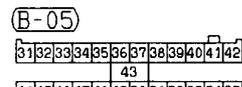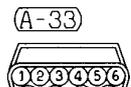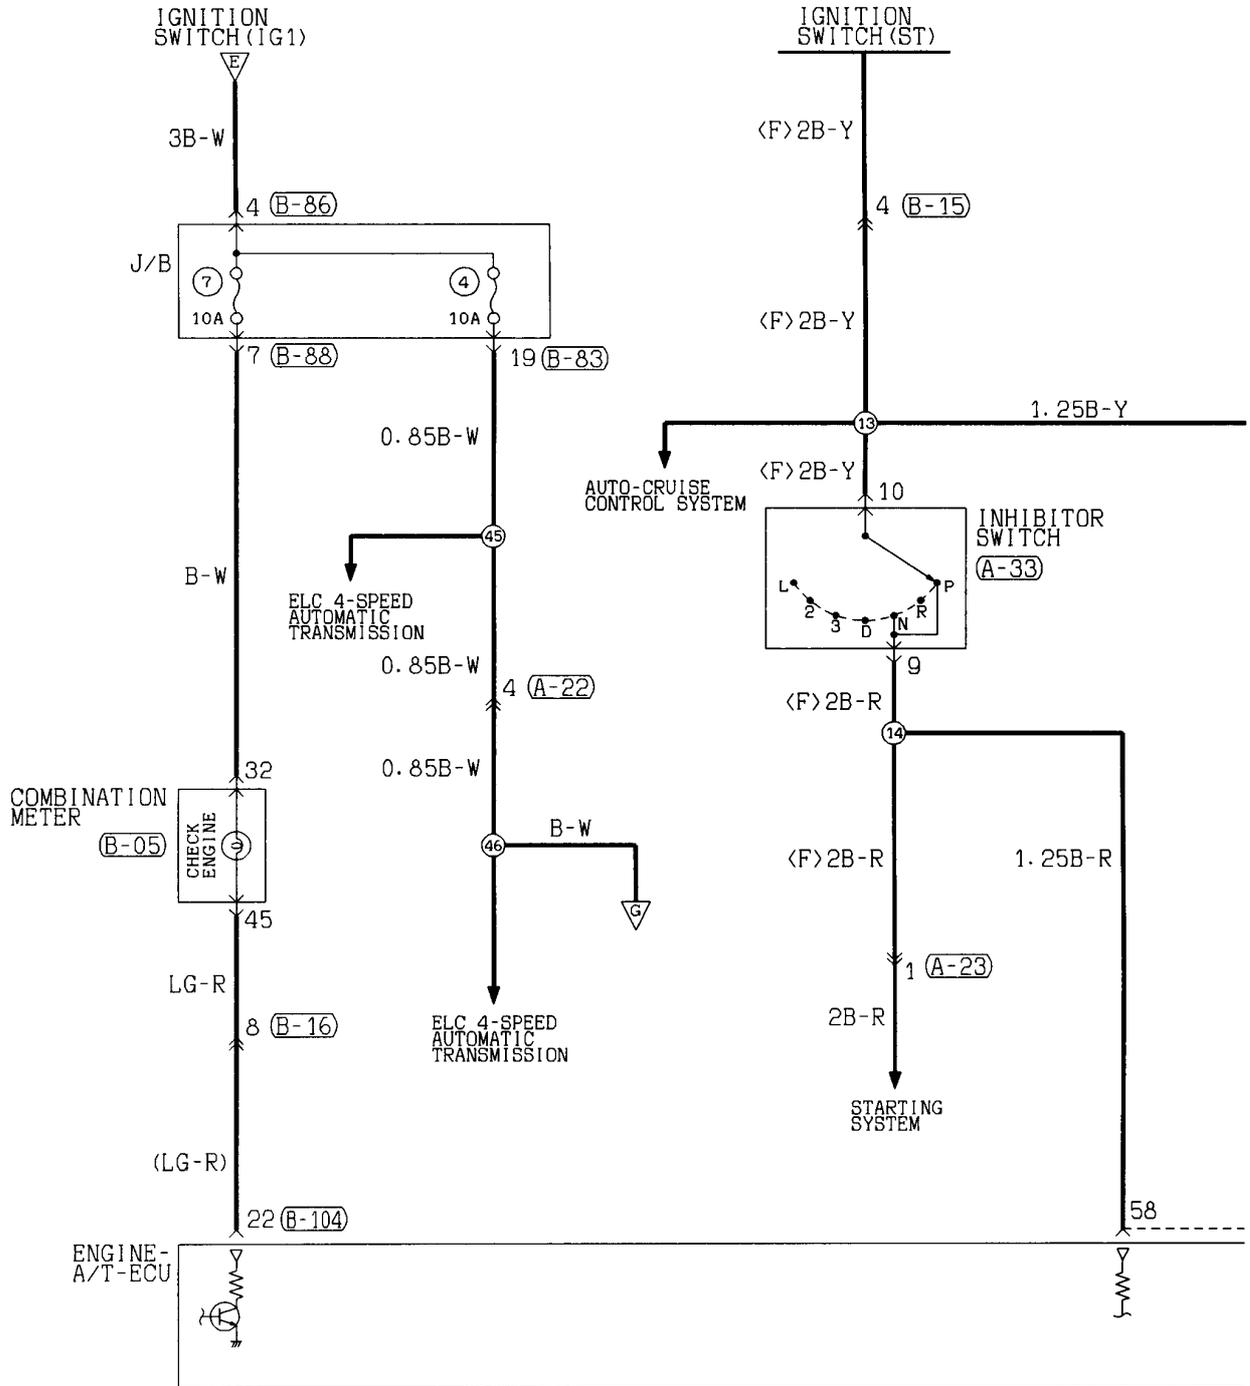

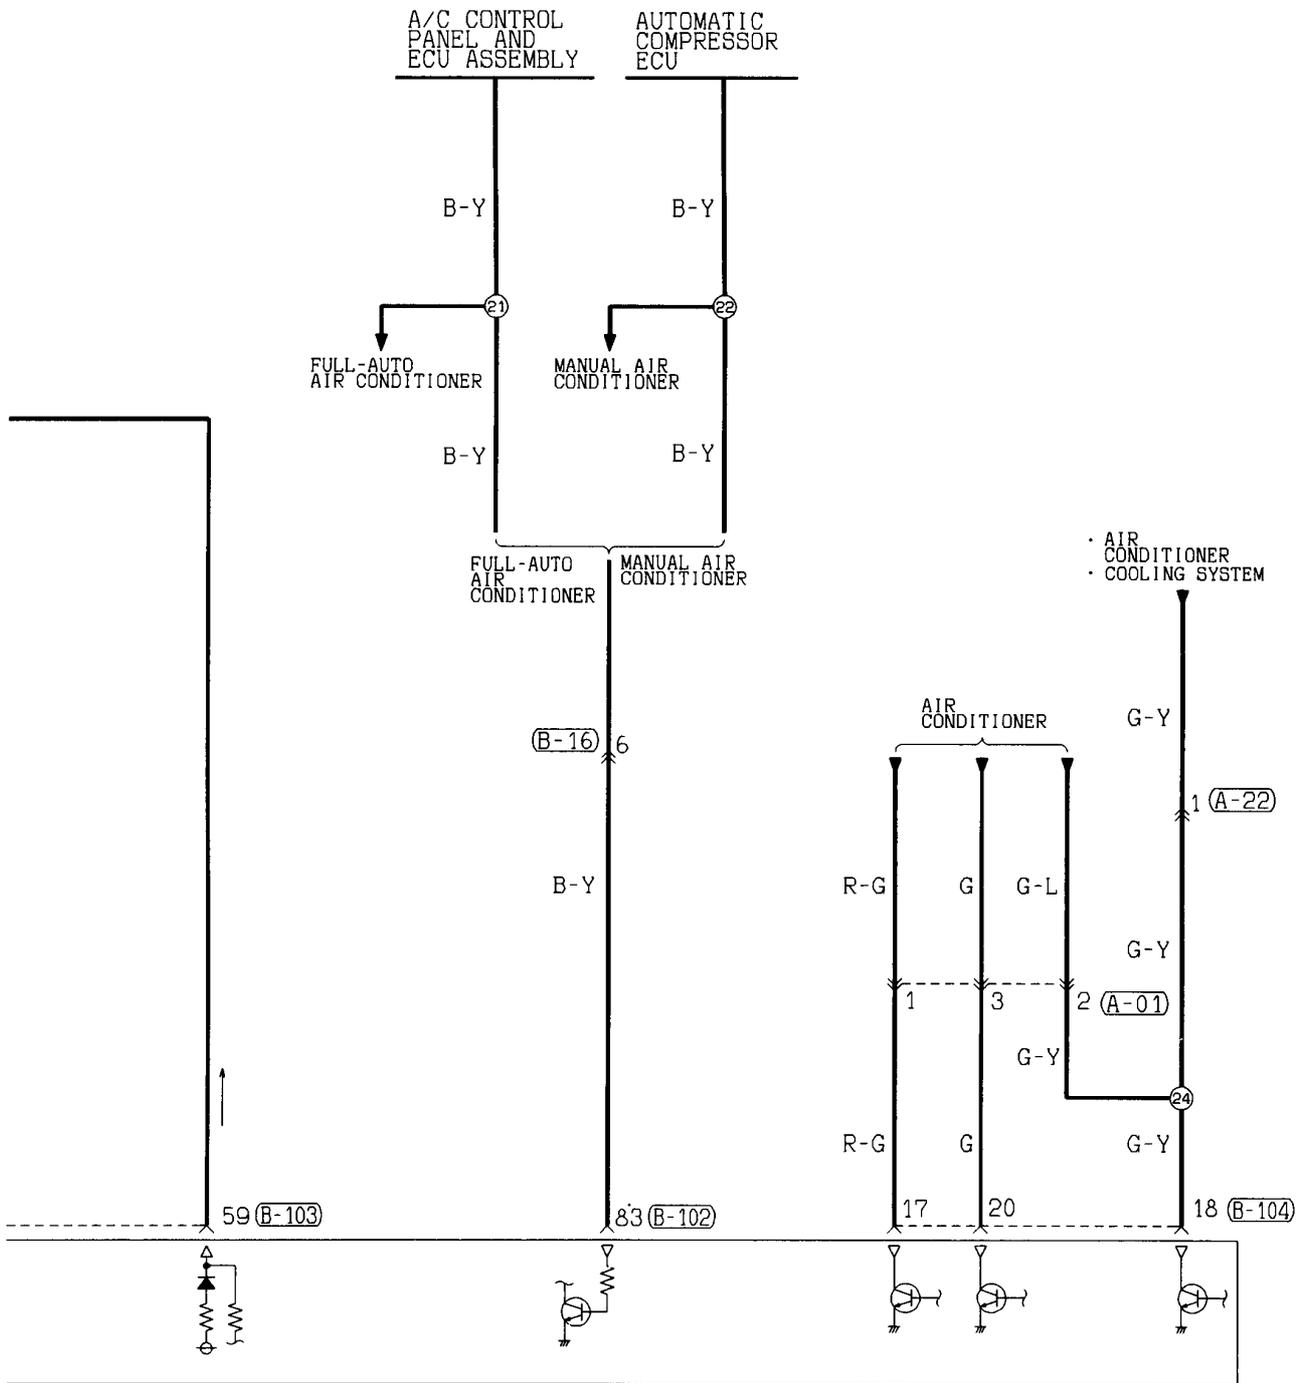

(B-86)

1	2	3	4	M	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

(B-88)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(B-102)

71	72	73	74	75	76	77					
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			






(B-103)


41	42	43	44	45	46					
47	48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66		

Wire colour code

B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
 BR : Brown O : Orange GR : Gray R : Red P : Pink V : Violet

MPI SYSTEM <MPI-SOHC-A/T (Vehicles without TCL)> (CONTINUED)

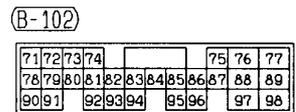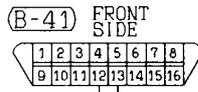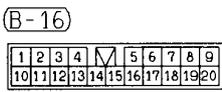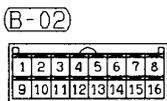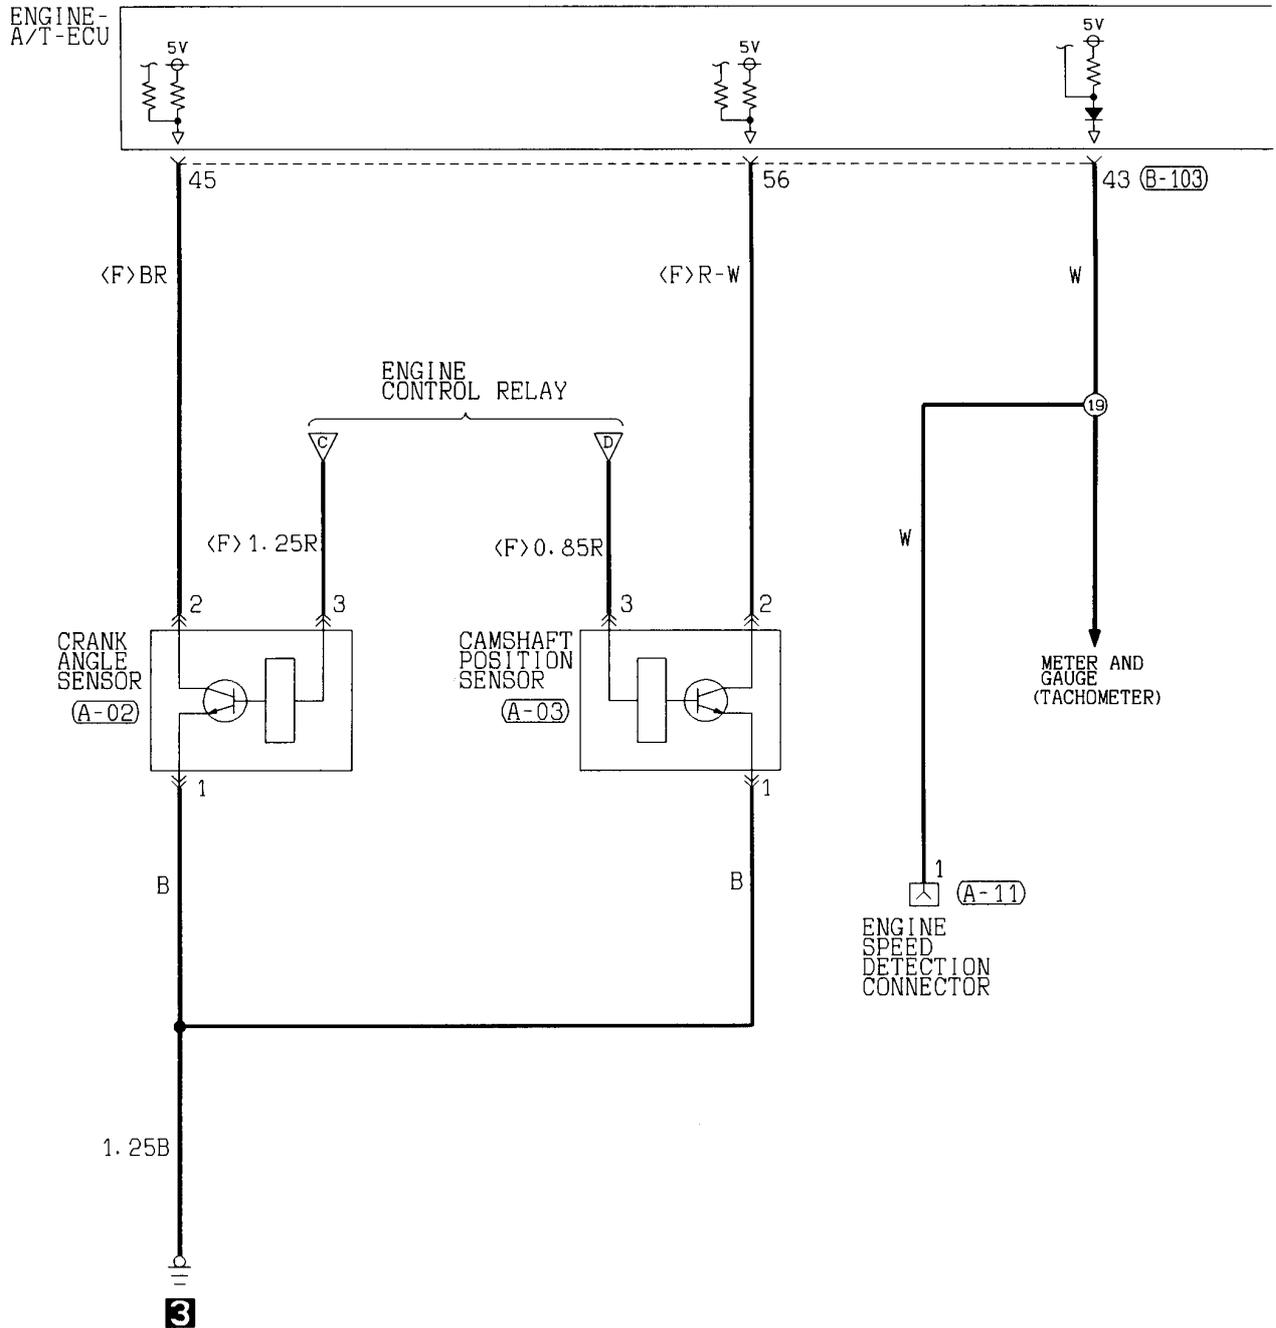


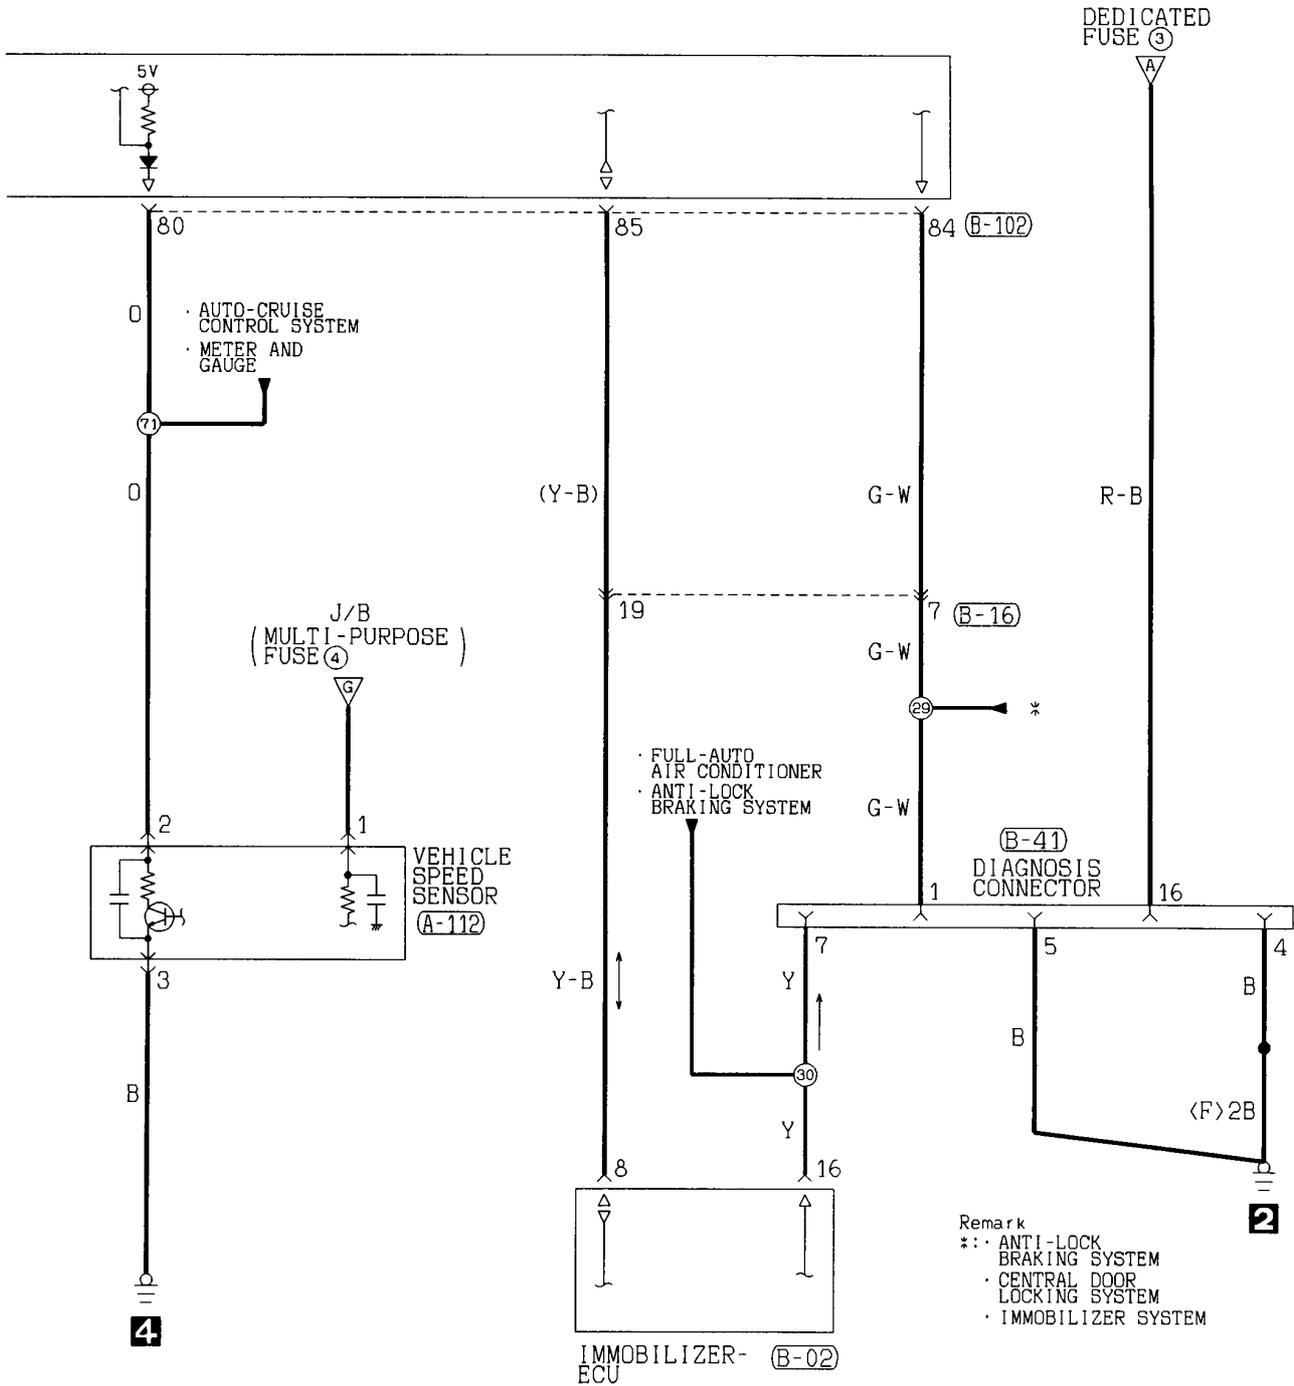



(B-103)

41	42	43		44	45	46
47	48	49	50	51	52	53
54	55	56	57	58	59	60
61	62	63	64	65	66	


MPI SYSTEM

MPI-SOHC-M/T <Vehicles with TCL>

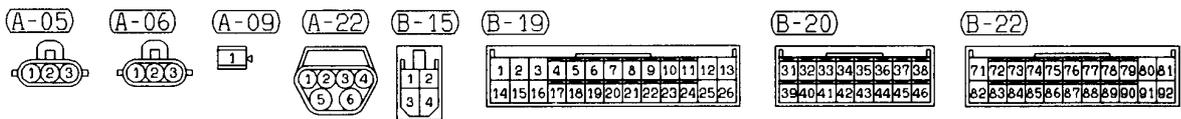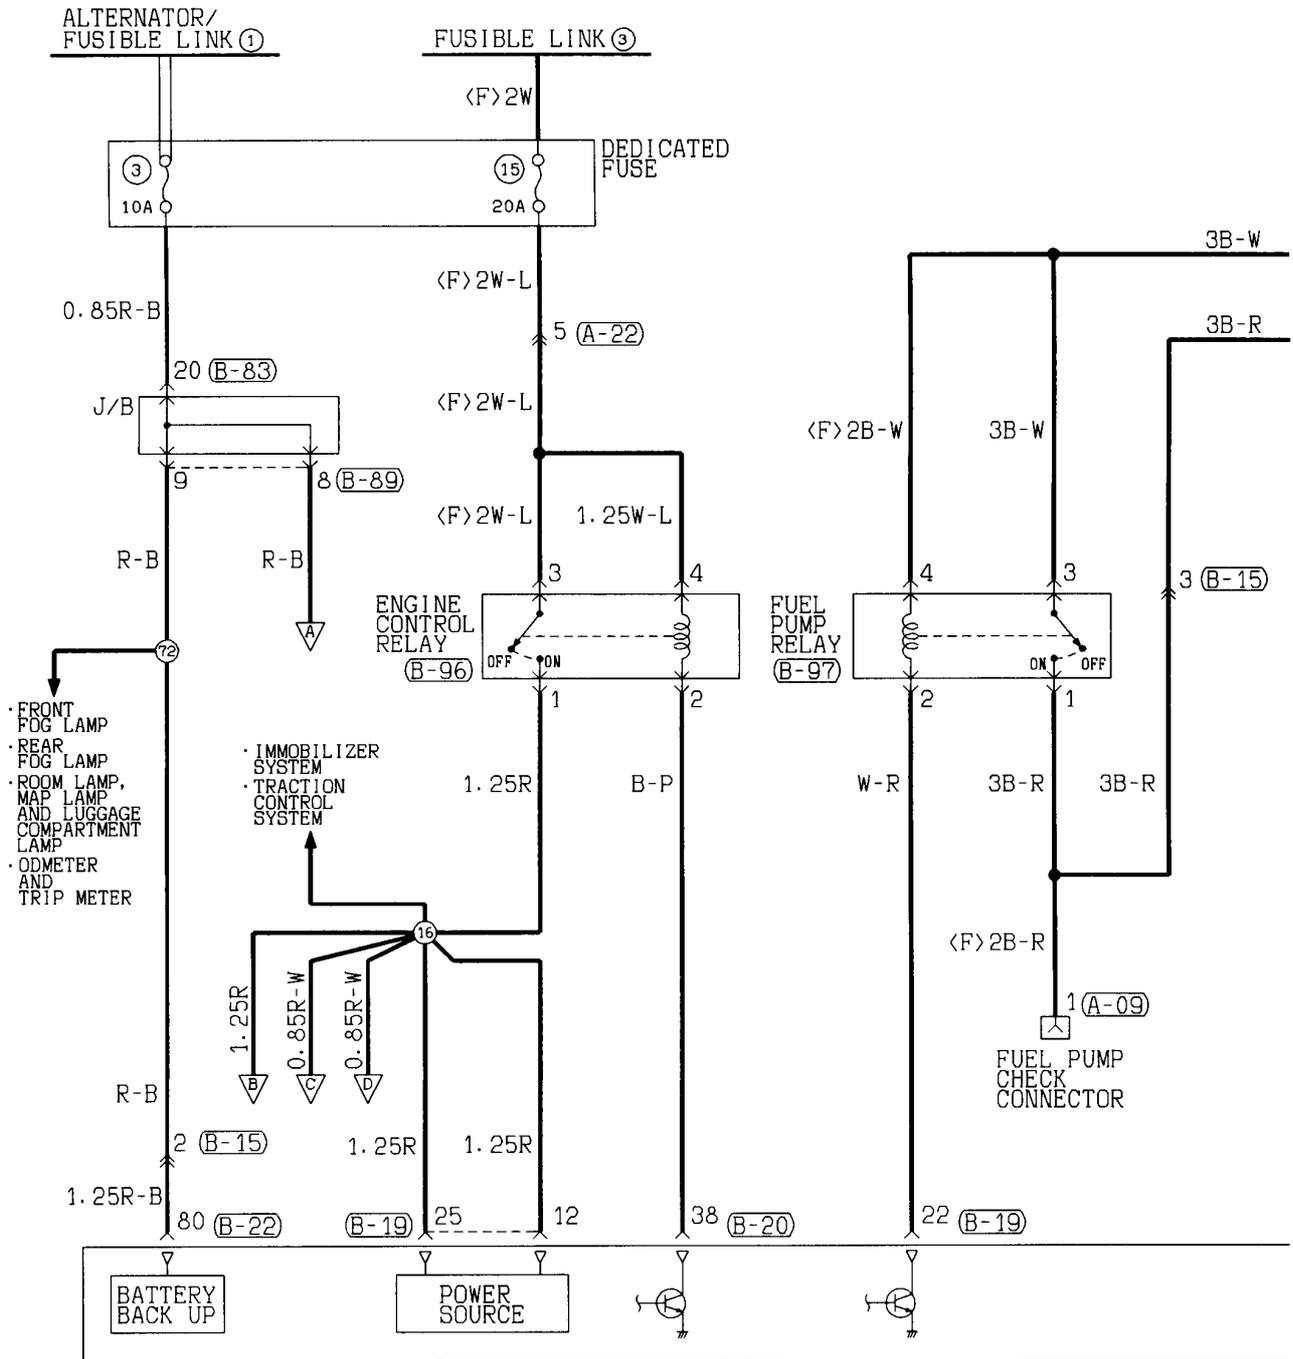


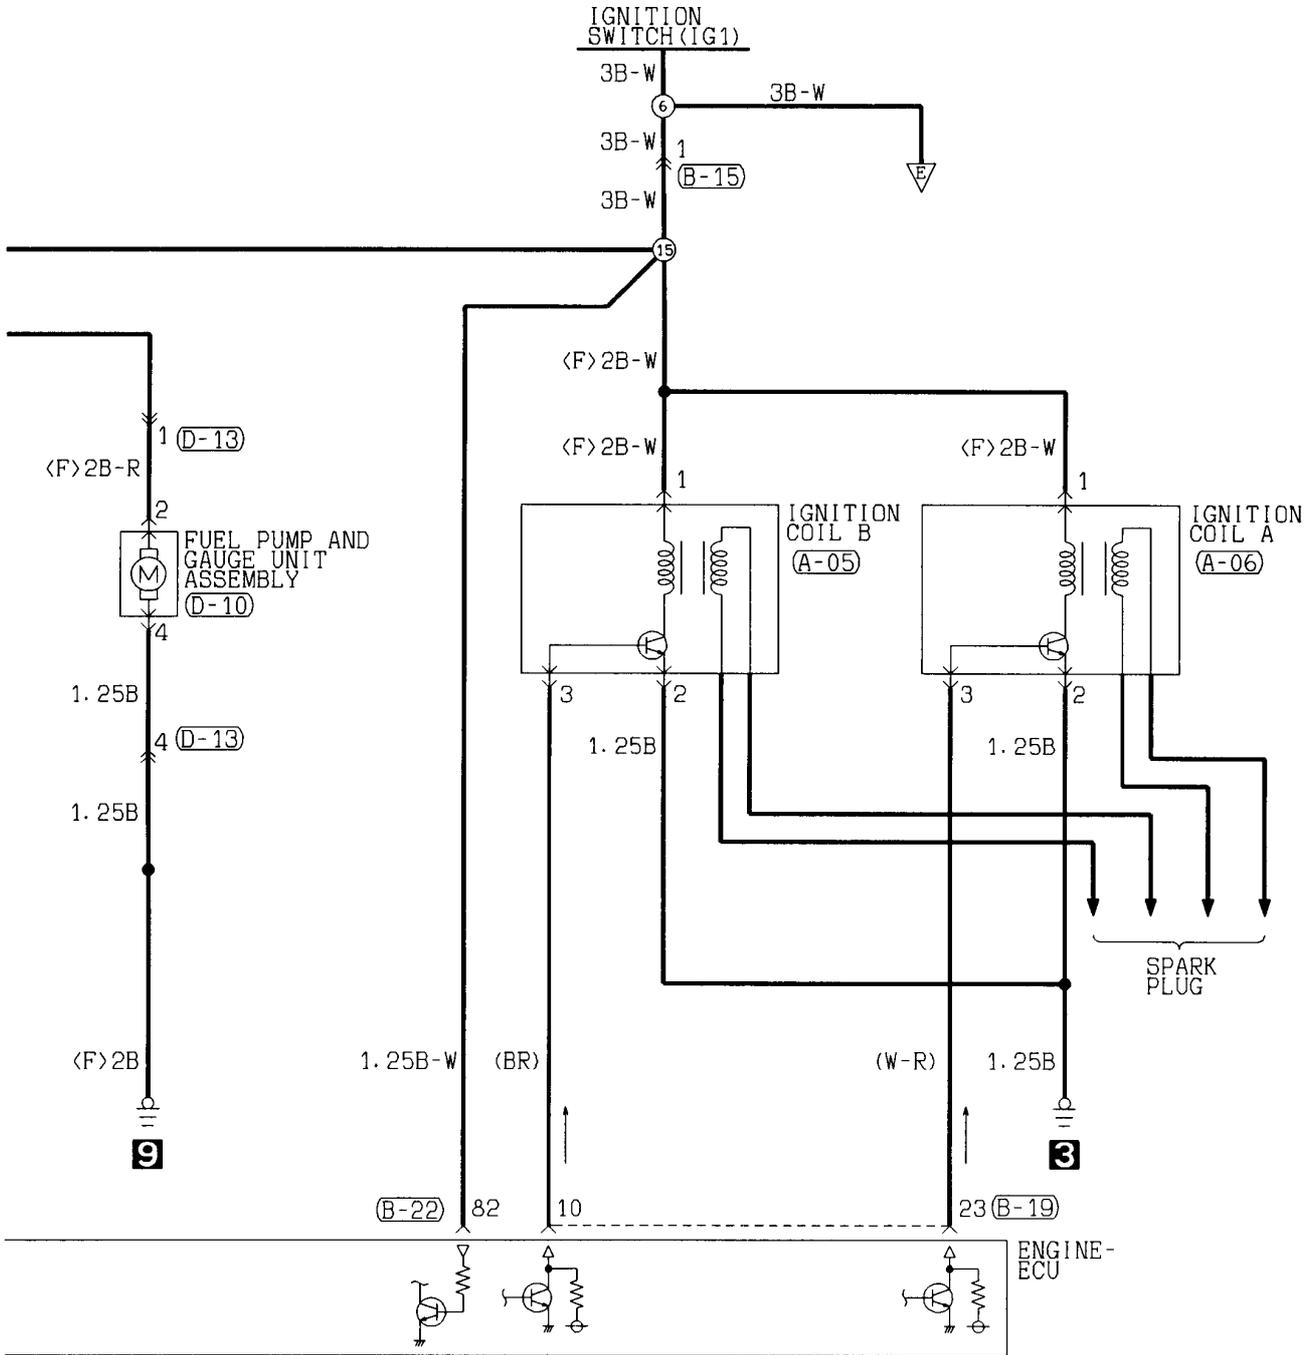

(B-83)

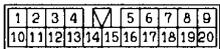

(B-89)

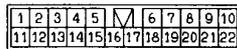


(B-96)




(B-97)




(D-10)

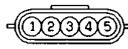


(D-13)

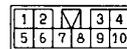

MPI SYSTEM <MPI-SOHC-M/T (Vehicles with TCL)> (CONTINUED)

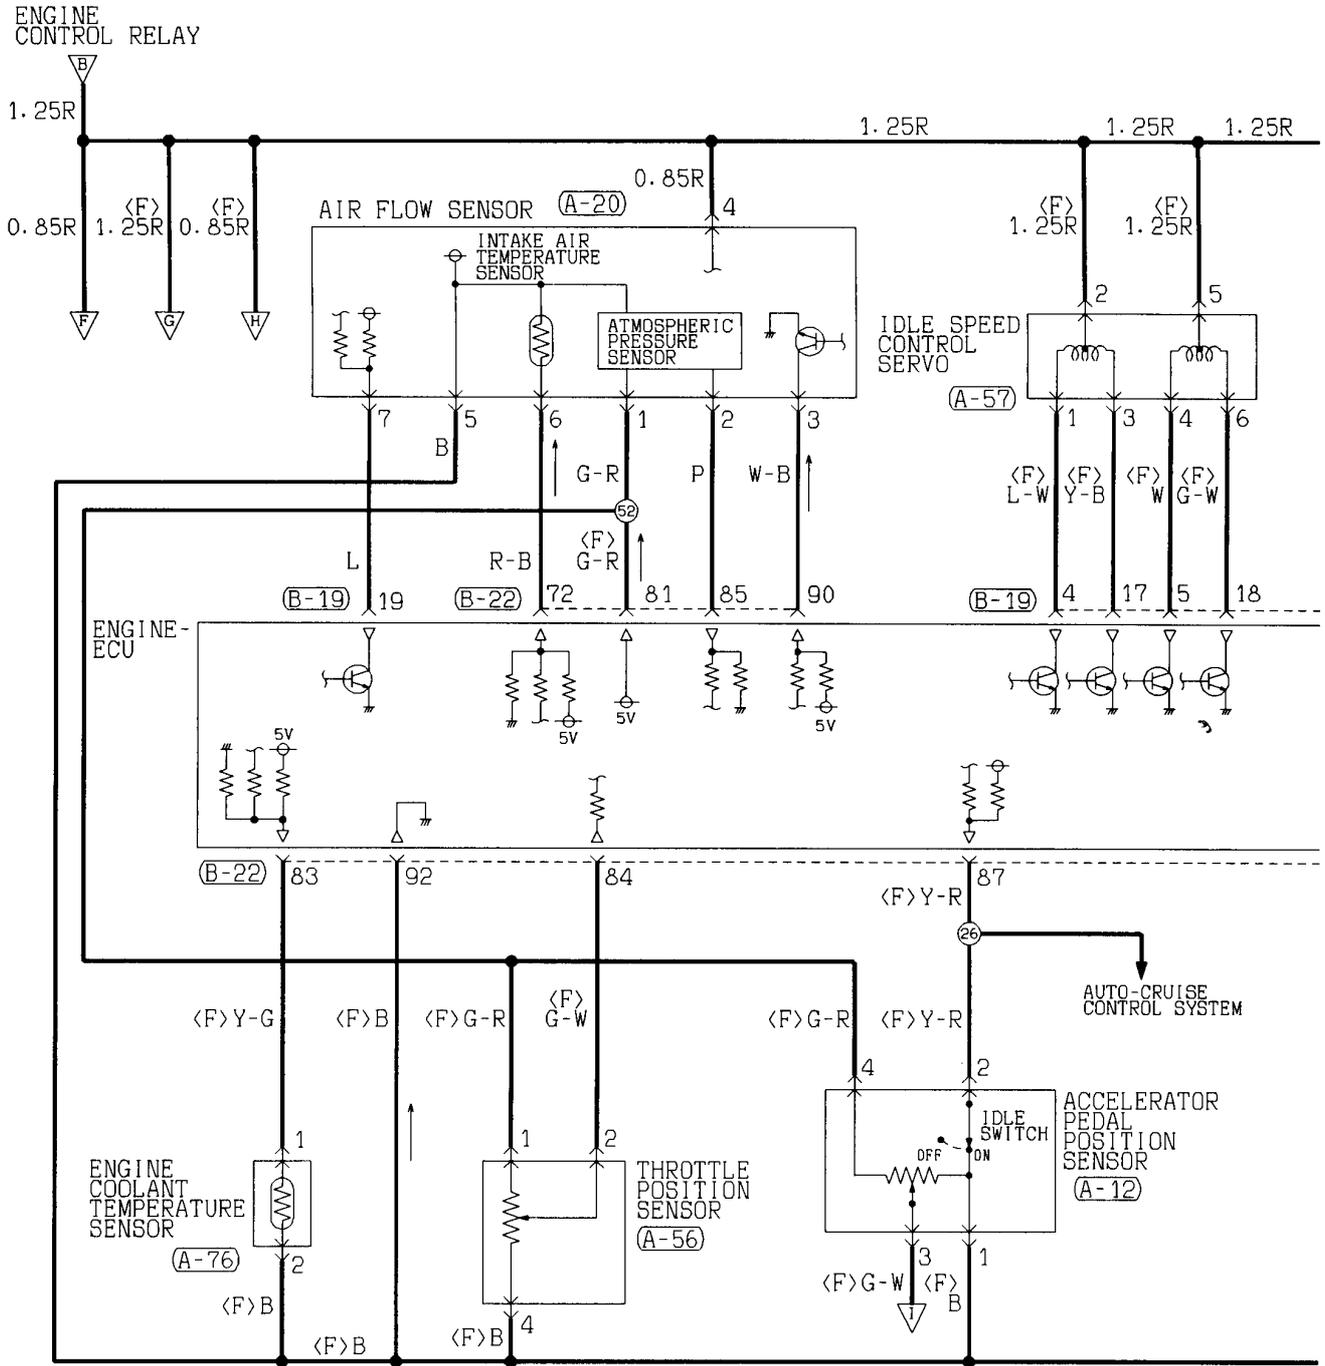

- (A-12) 
- (A-14) 
- (A-15) 
- (A-20) 
- (A-22) 
- (A-36) 
- (A-51) 
- (A-52) 
- (A-53) 
- (A-54) 
- (A-56) 
- (A-57) 

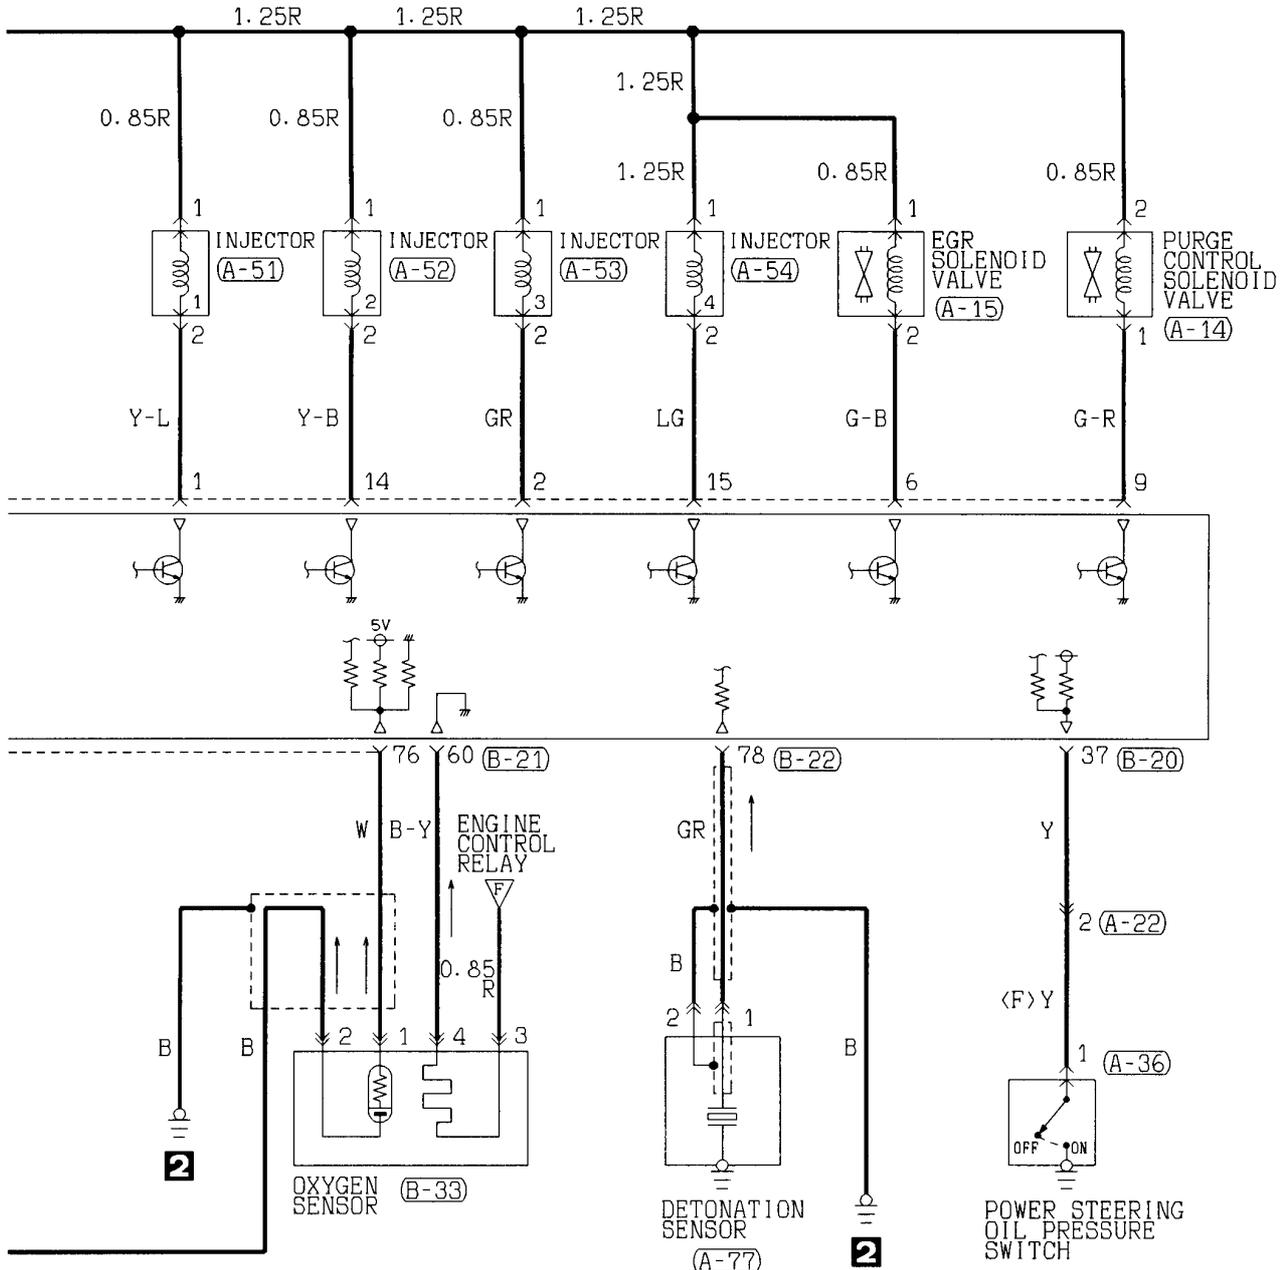

(A-76)



(A-77)



(B-19)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(B-20)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(B-21)

51	52	53	54	55	56
57	58	59	60	61	62


(B-22)


71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

(B-33)

1	2	3	4
---	---	---	---

MPI SYSTEM <MPI-SOHC-M/T (Vehicles with TCL)> (CONTINUED)

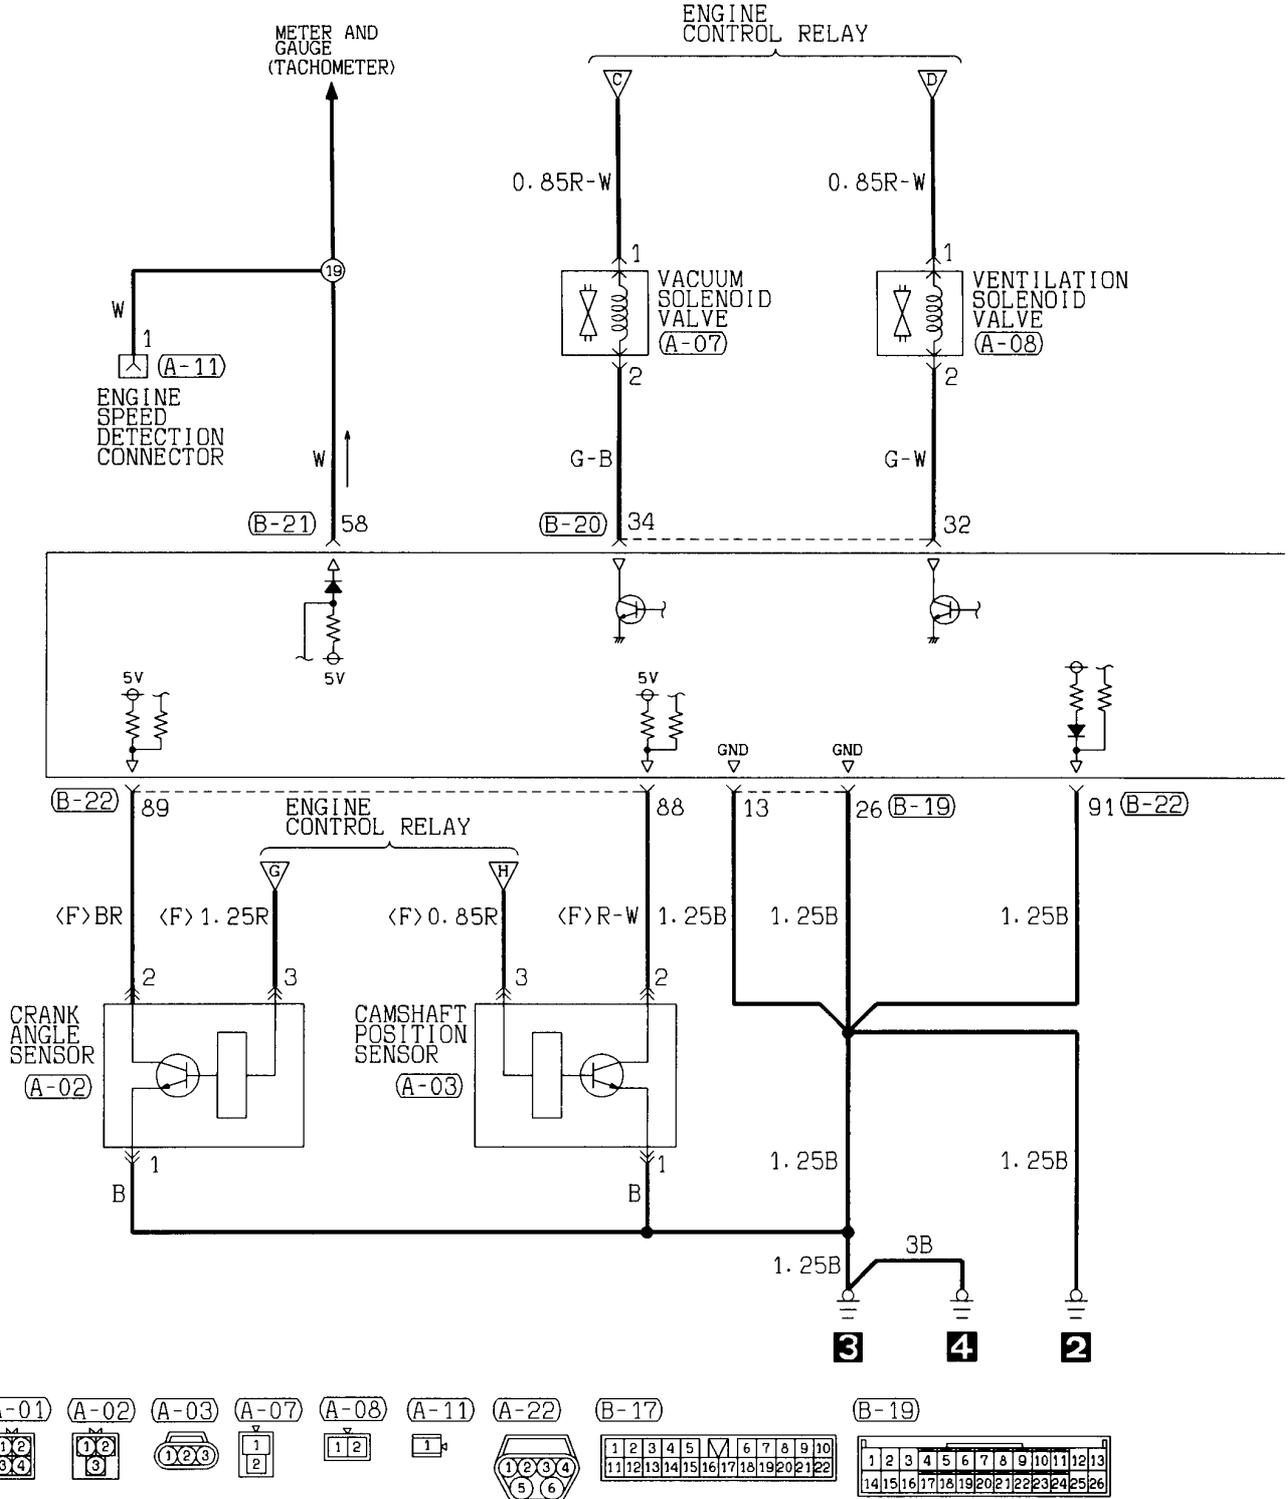

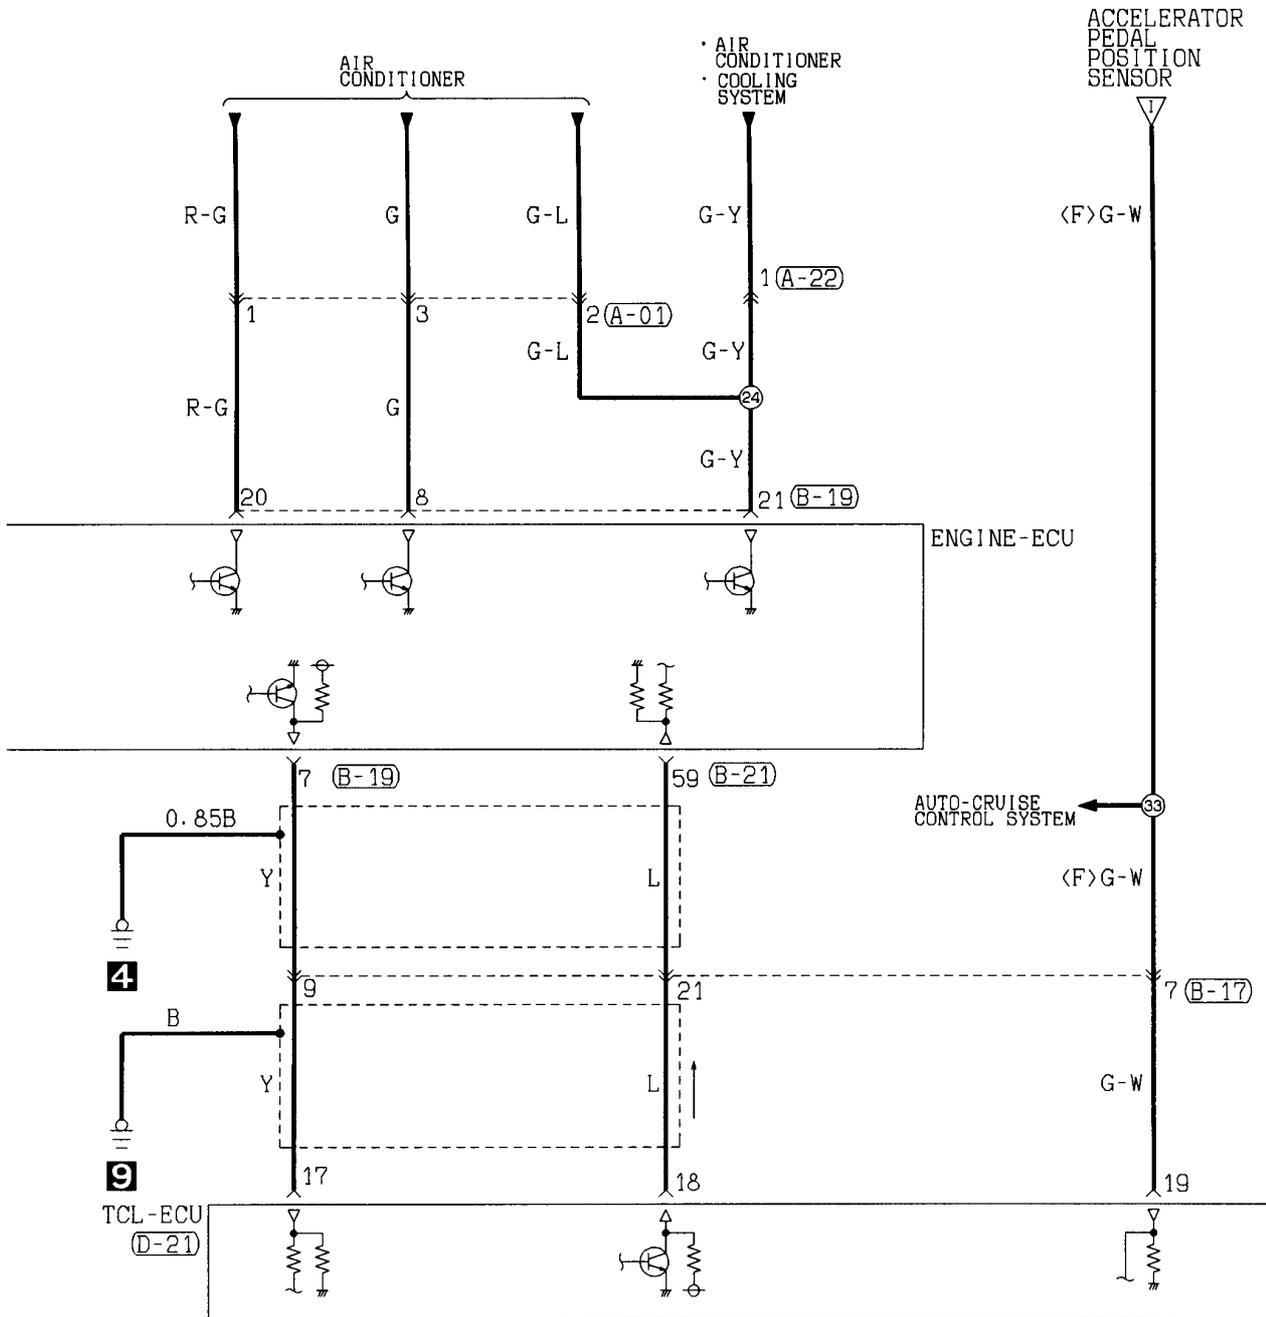

(B-20)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(B-21)

51	52	53	54	55	56
57	58	59	60	61	62








(B-22)


71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

MPI SYSTEM <MPI-SOHC-M/T (Vehicles with TCL)> (CONTINUED)

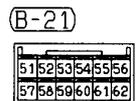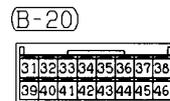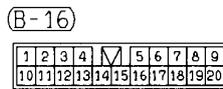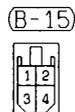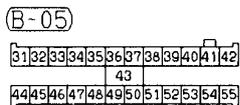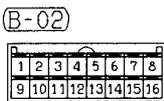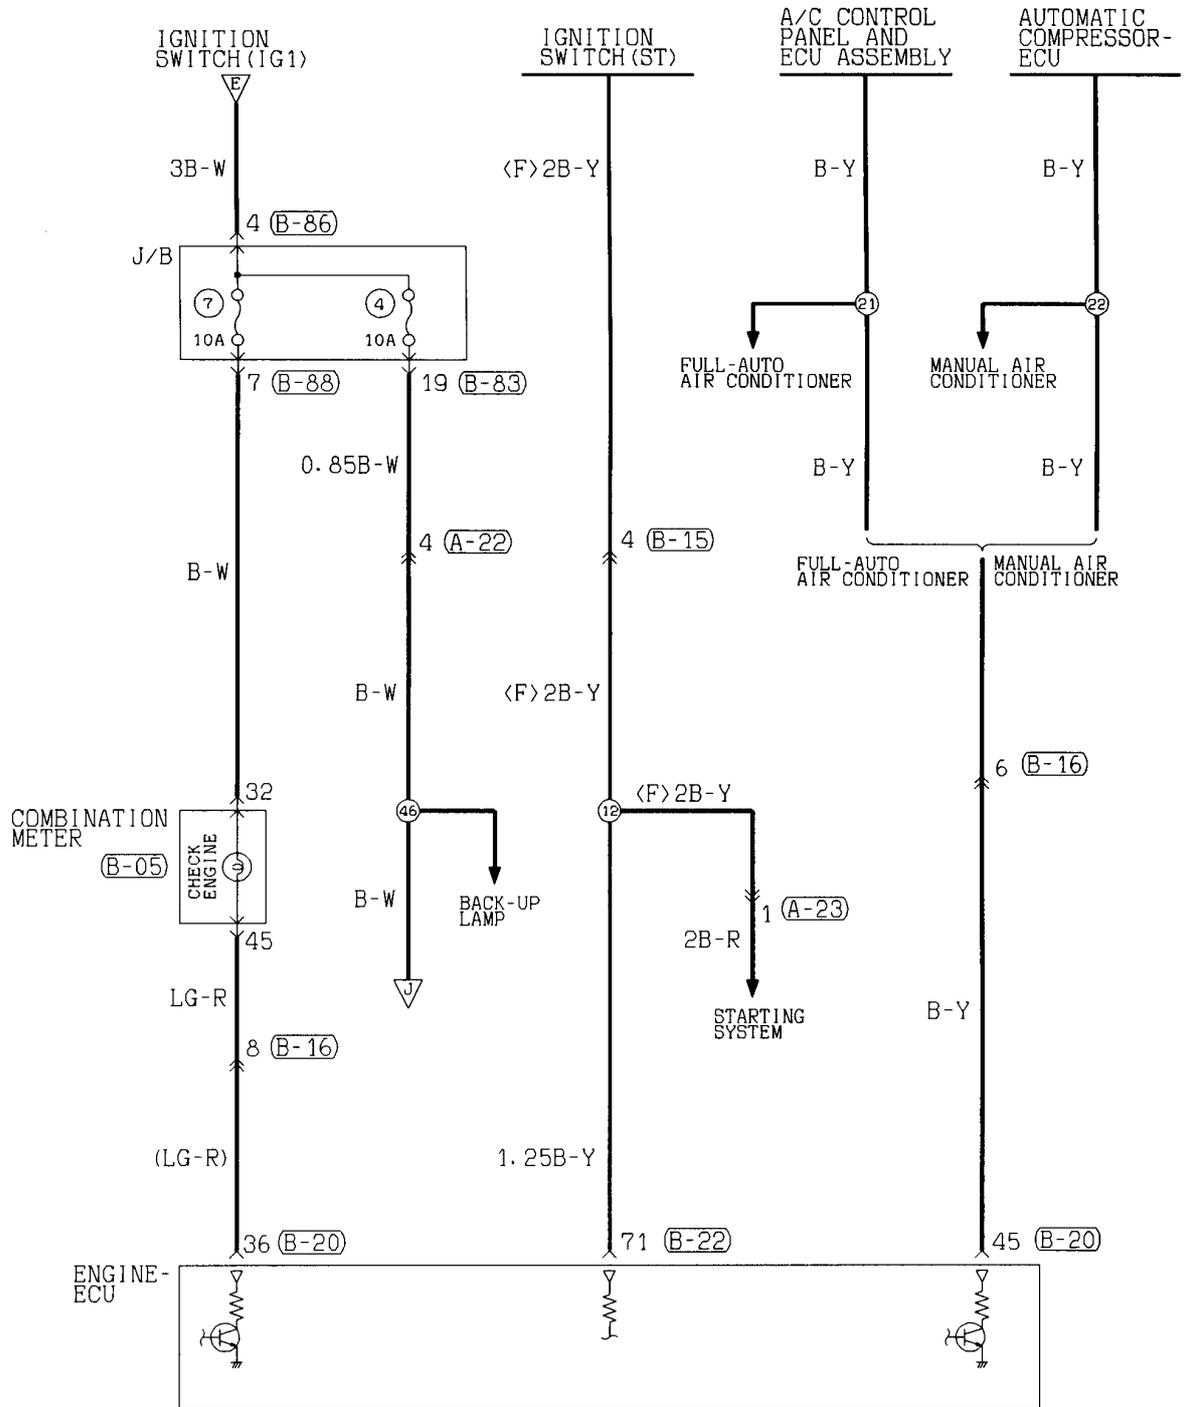

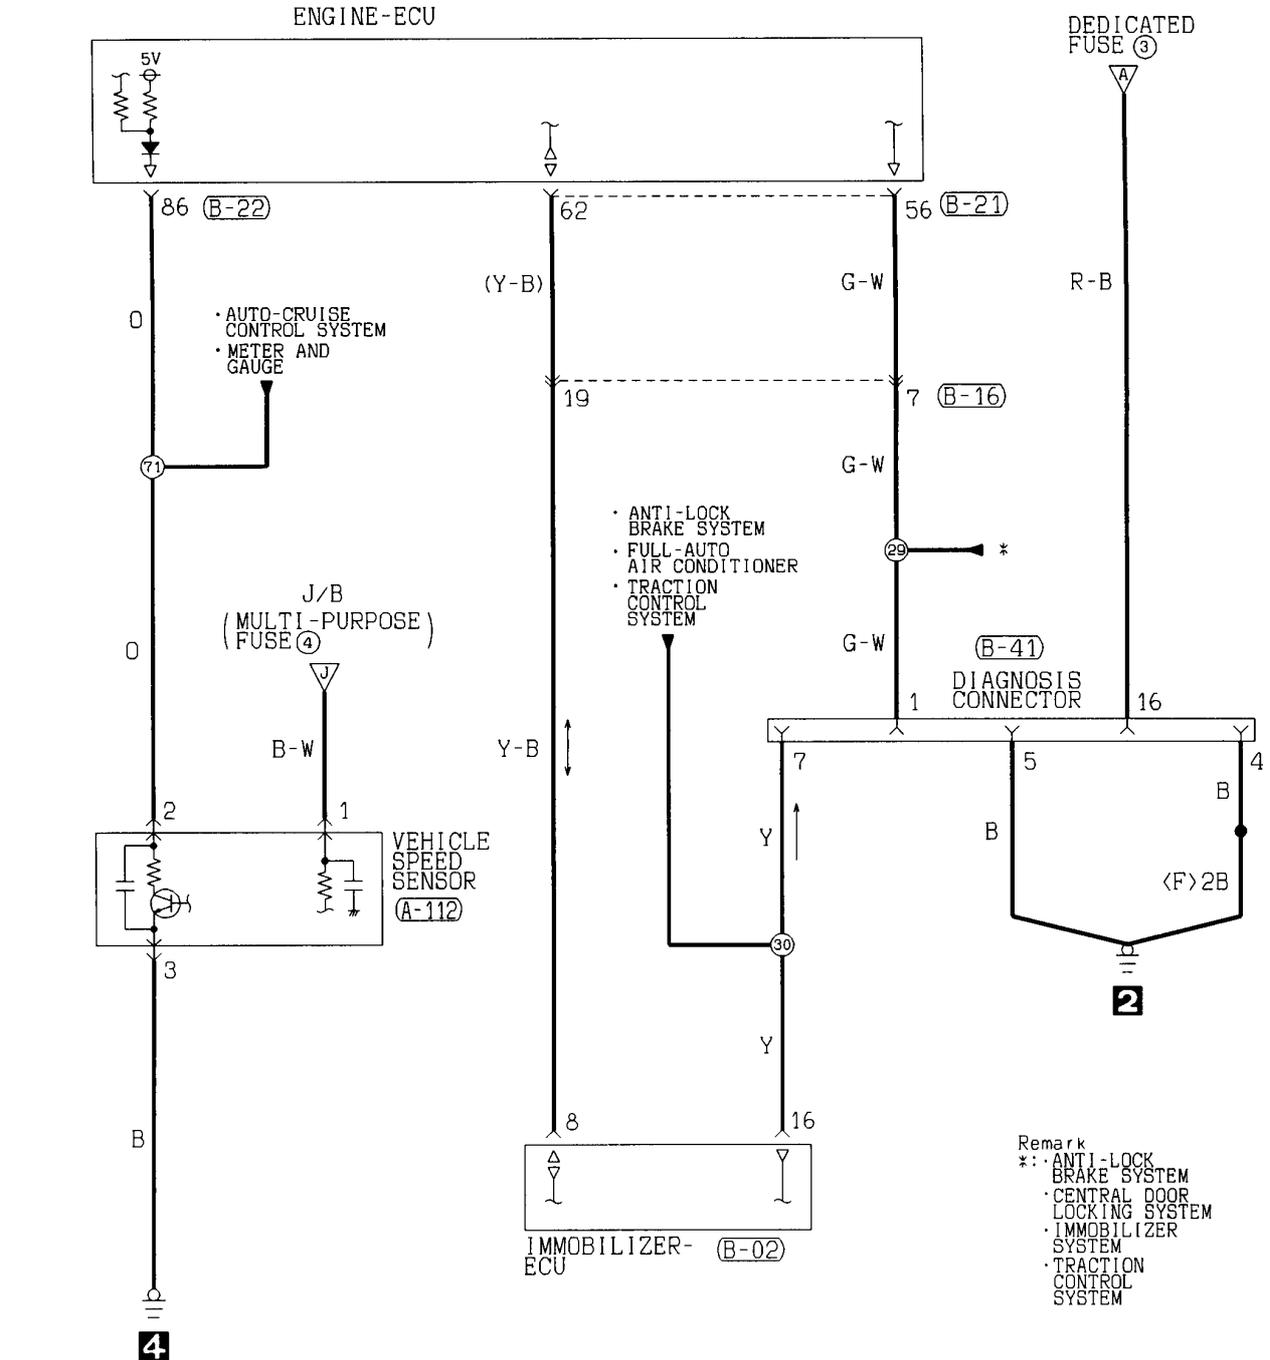

(B-22)

71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

(B-41) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-83)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(B-86)

1	2	3	4	M	5	6	7	8	
9	10	11	12	13	14	15	16	17	18



(B-88)


1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

MPI SYSTEM

MPI-SOHC-A/T <Vehicles with TCL>

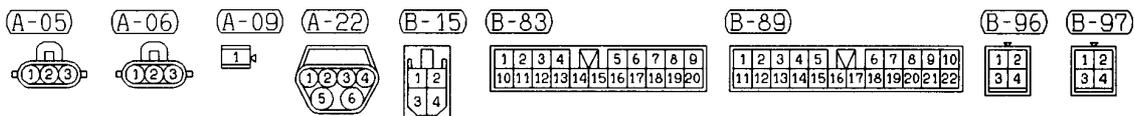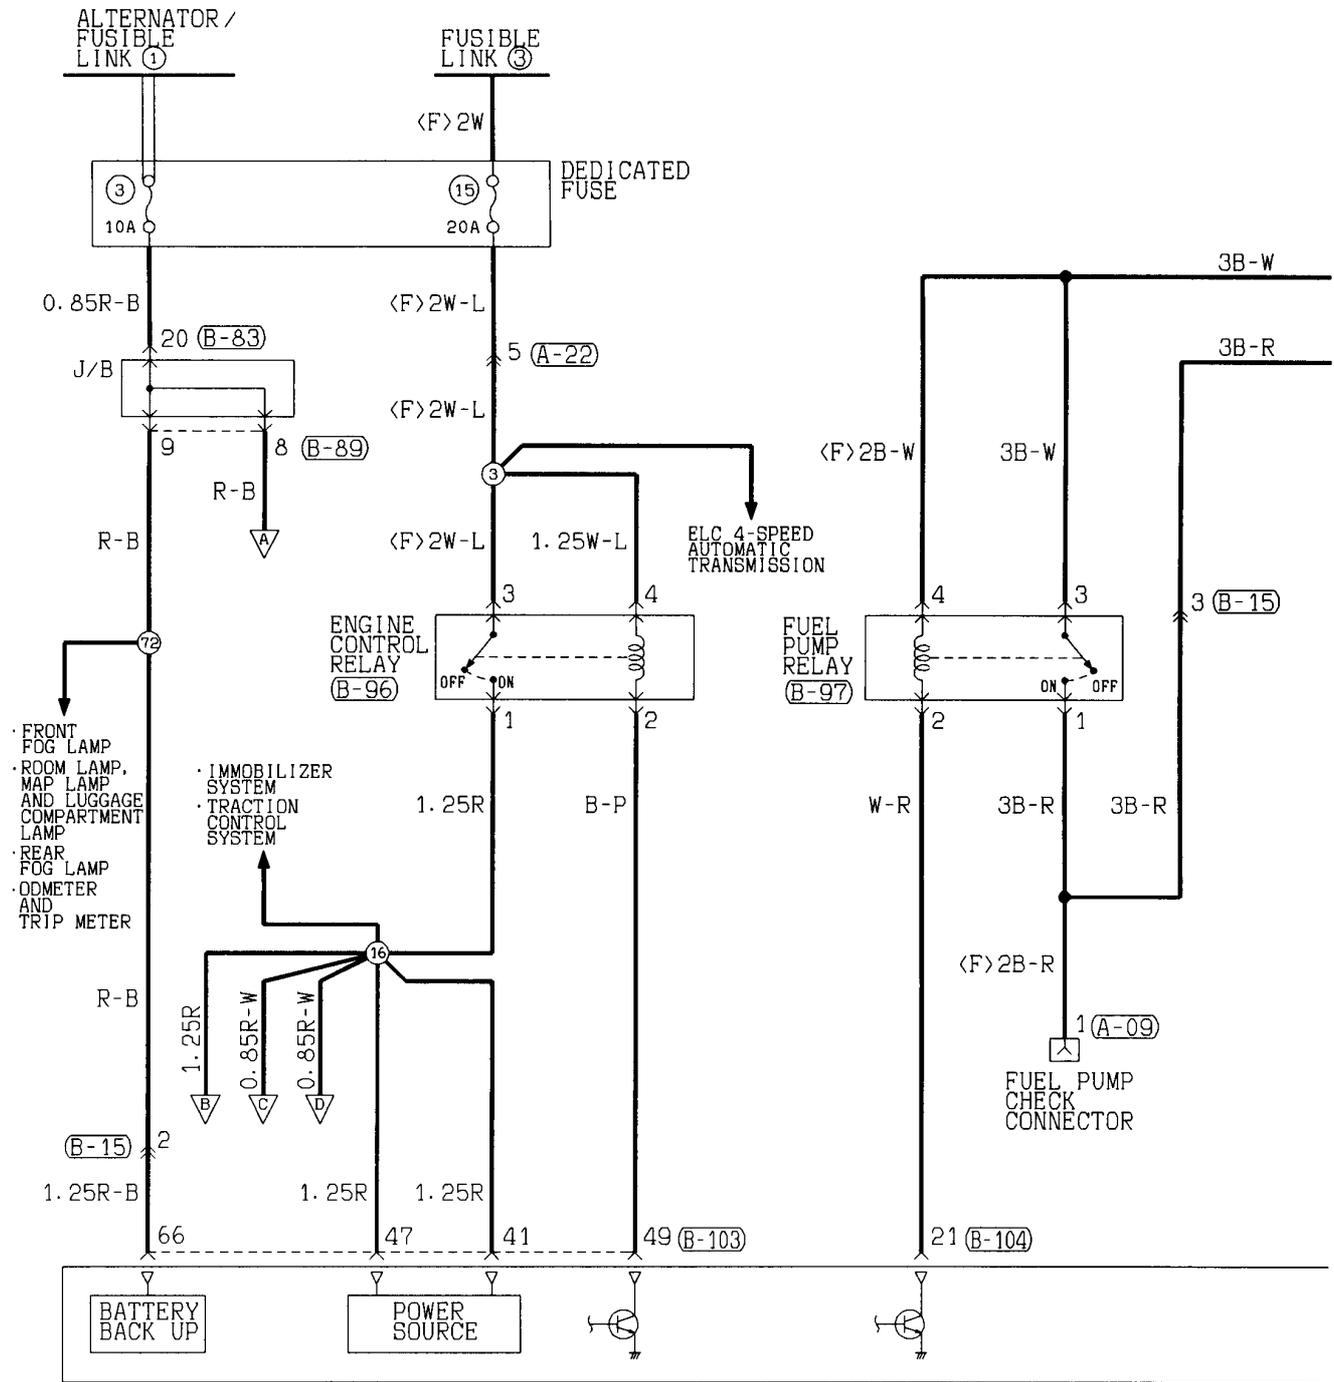

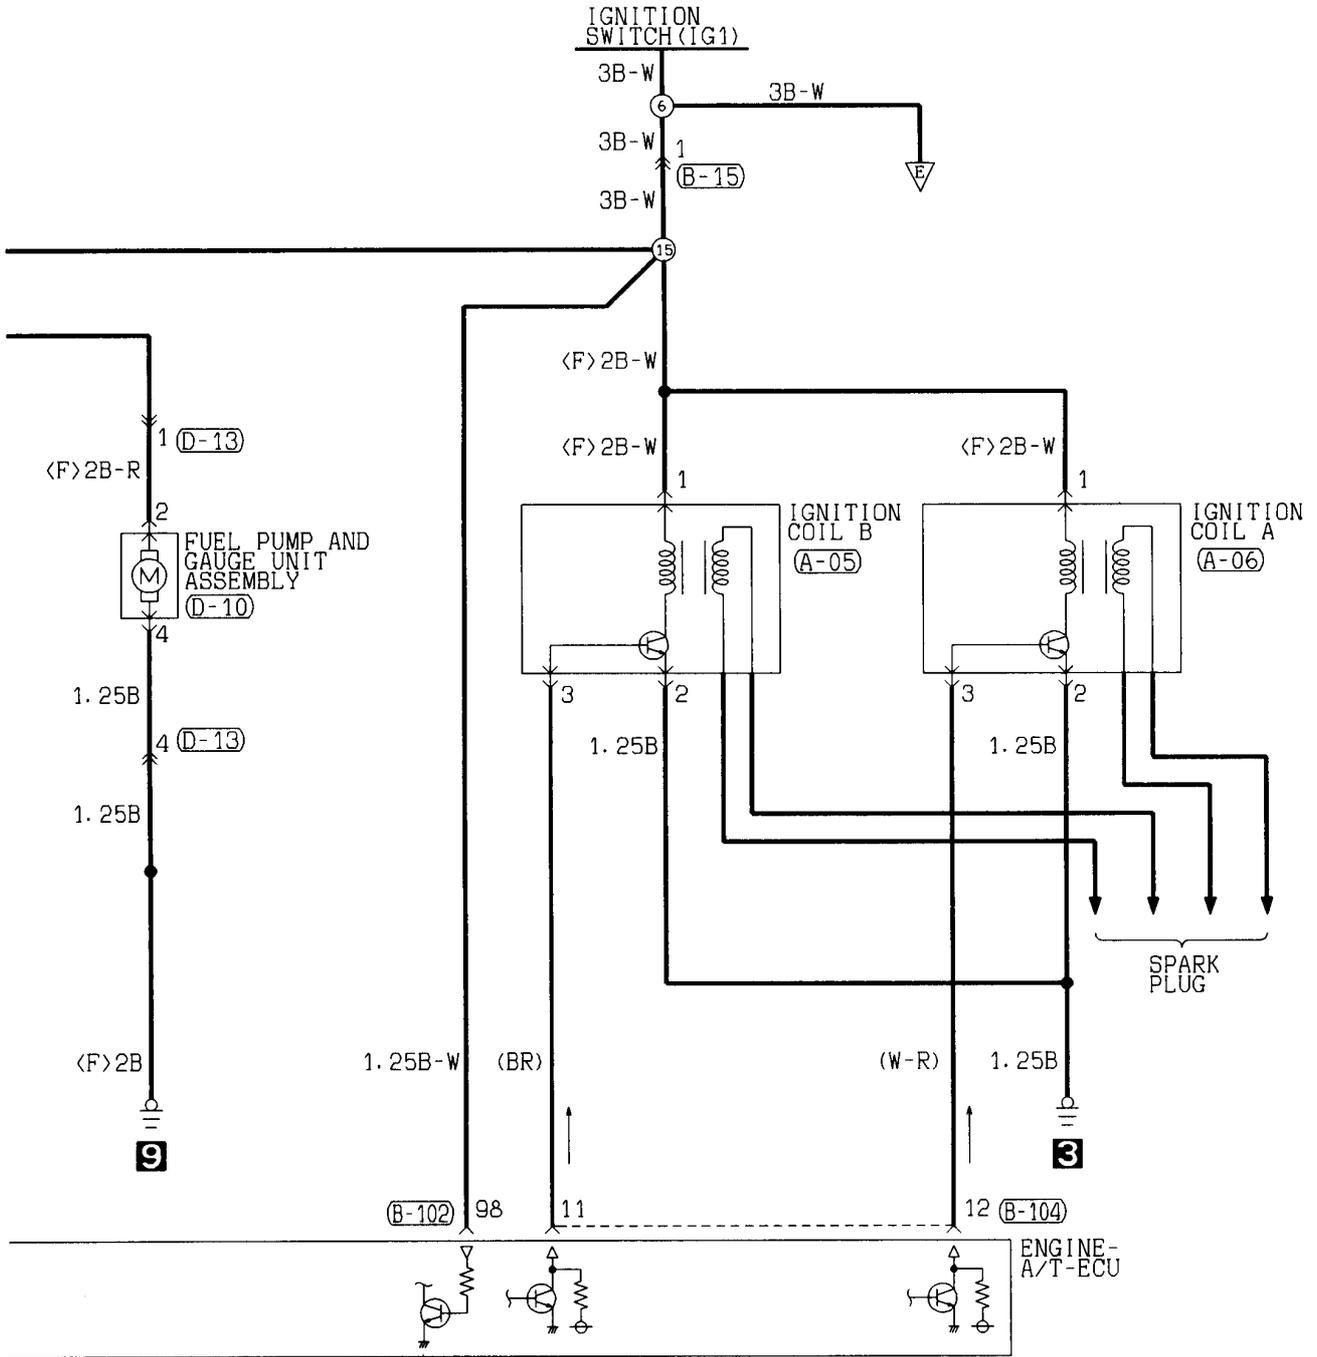

(B-102)

71	72	73	74	75	76	77
78	79	80	81	82	83	84
85	86	87	88	89	90	91
92	93	94	95	96	97	98

(B-103)

41	42	43	44	45	46
47	48	49	50	51	52
53	54	55	56	57	58
59	60	61	62	63	64
65	66				


(B-104)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

(D-10)




(D-13)

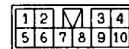


Wire colour code

B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet


MPI SYSTEM <MPI-SOHC-A/T (Vehicles with TCL)> (CONTINUED)

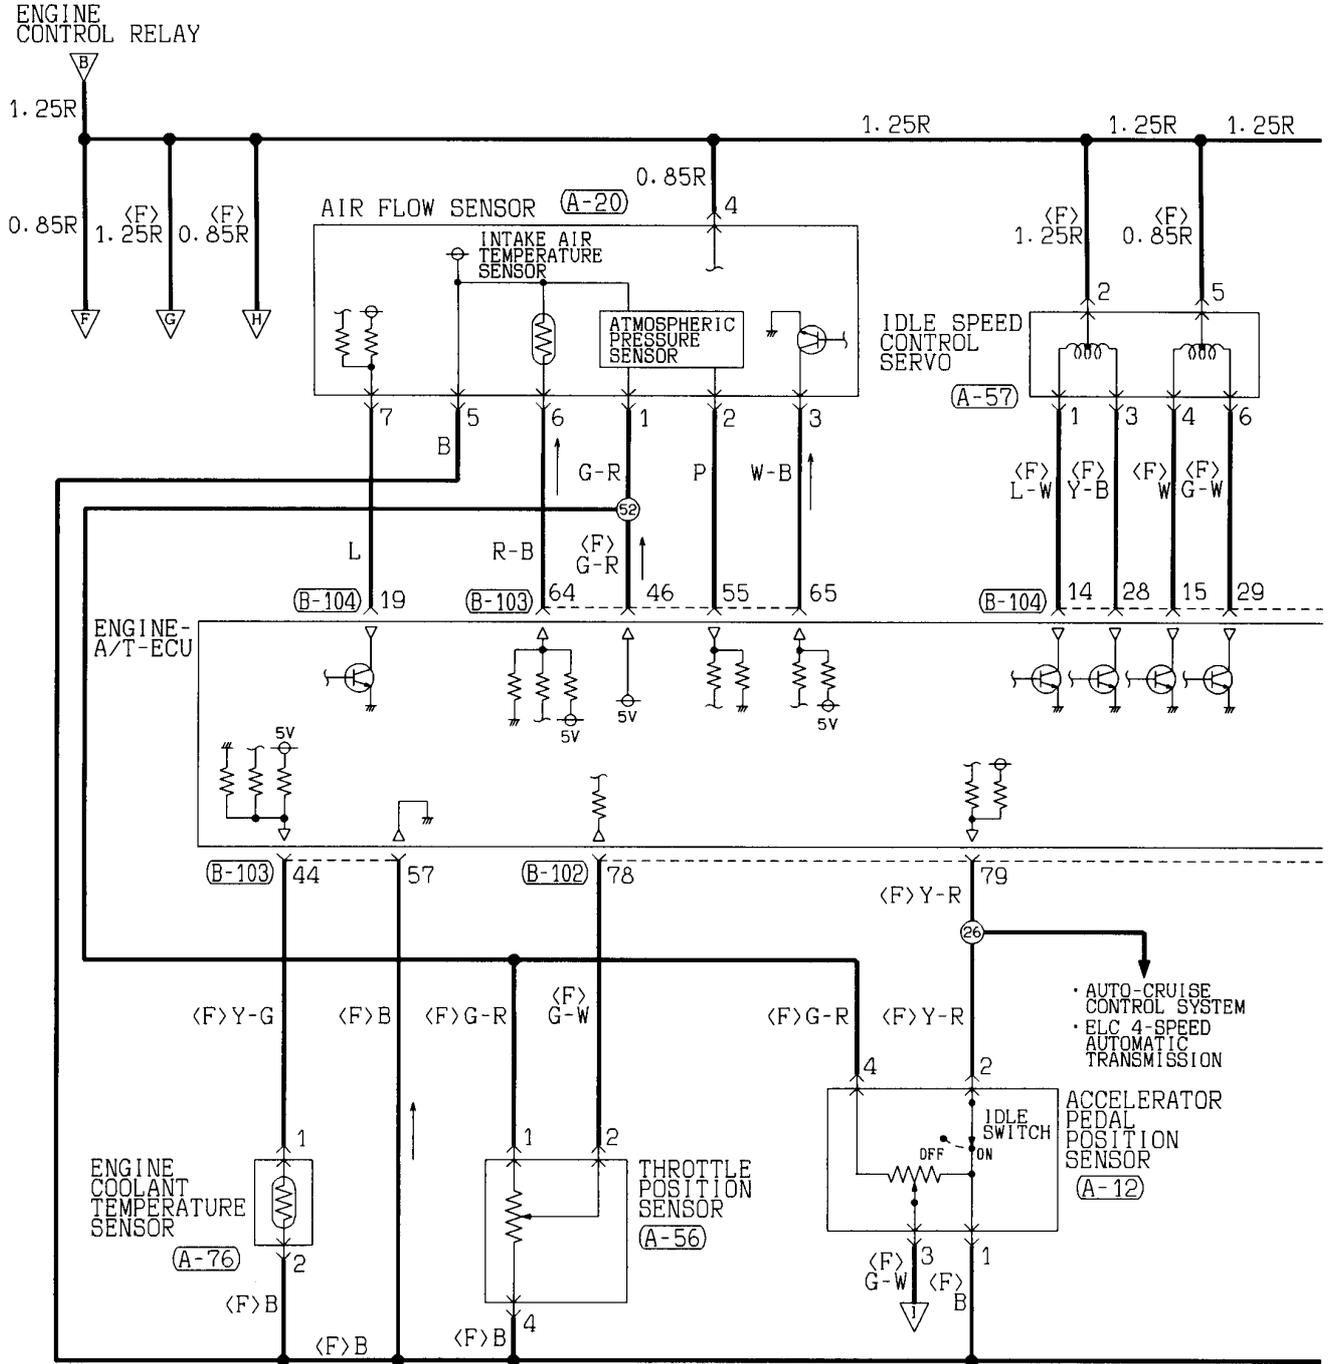


- A-12
- A-14
- A-15
- A-20
- A-22
- A-36
- A-51
- A-52
- A-53
- A-54
- A-56
- A-57

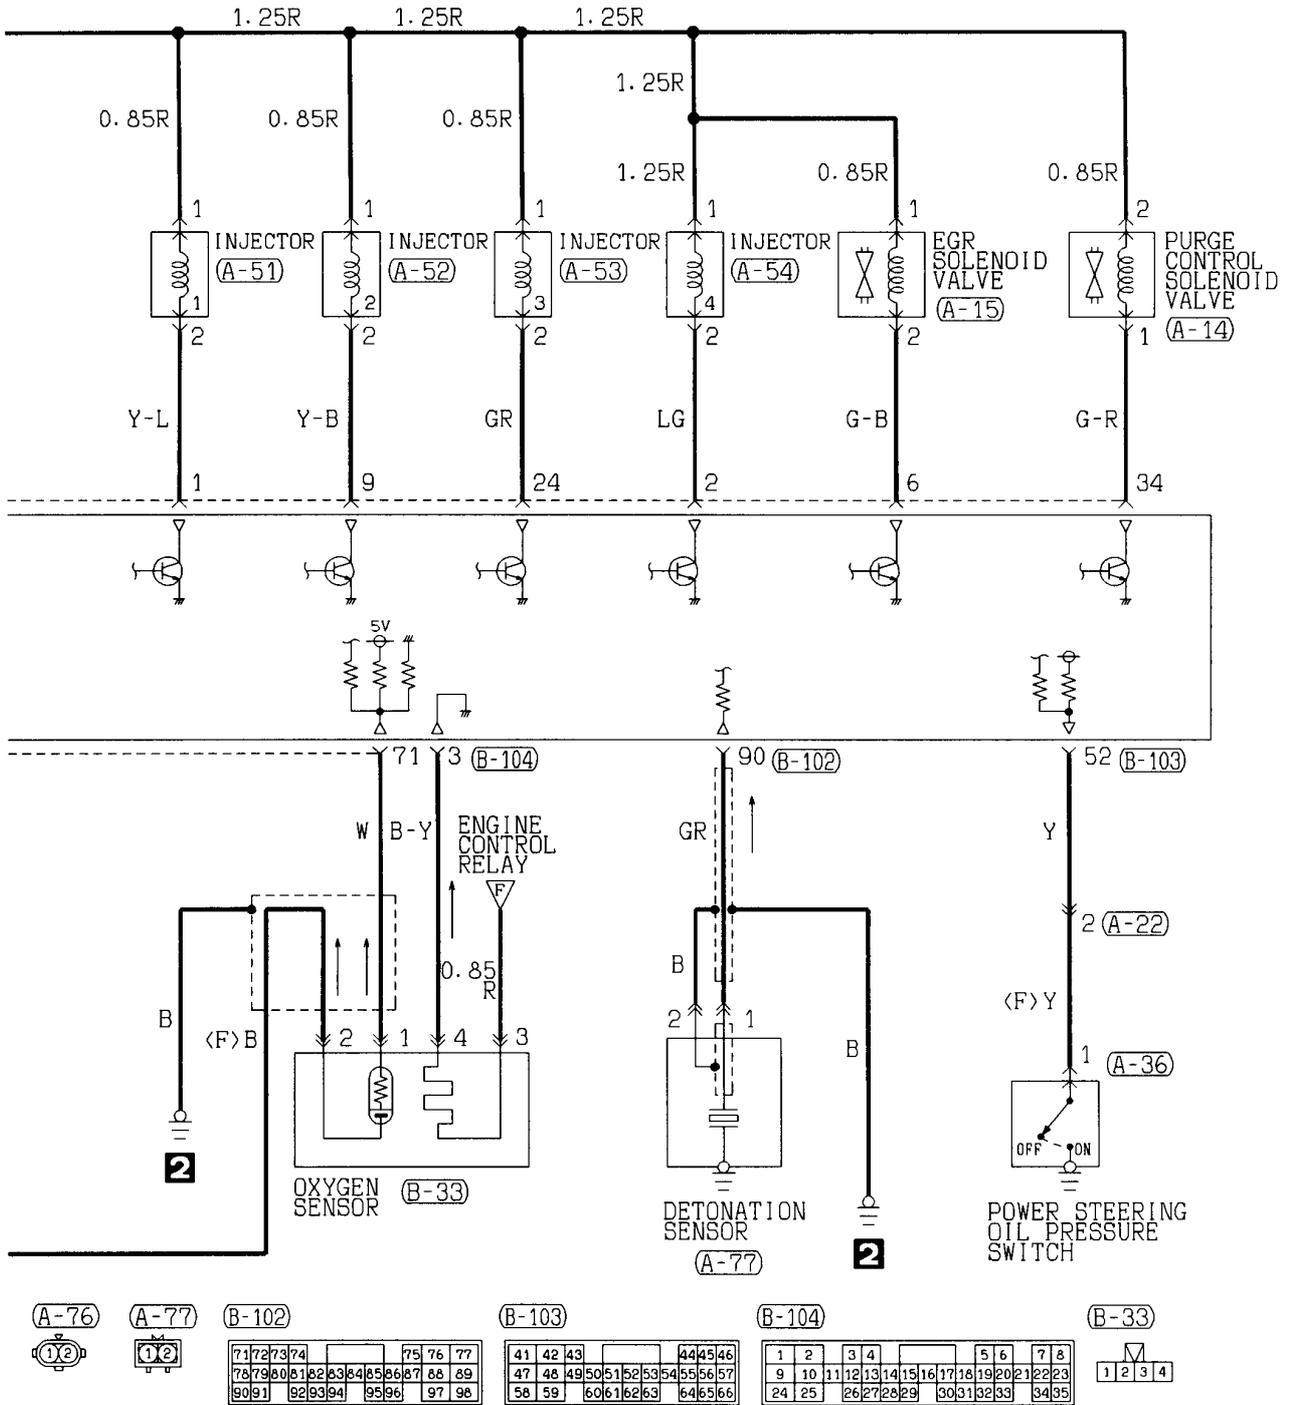

MPI SYSTEM <MPI-SOHC-A/T (Vehicles with TCL)> (CONTINUED)

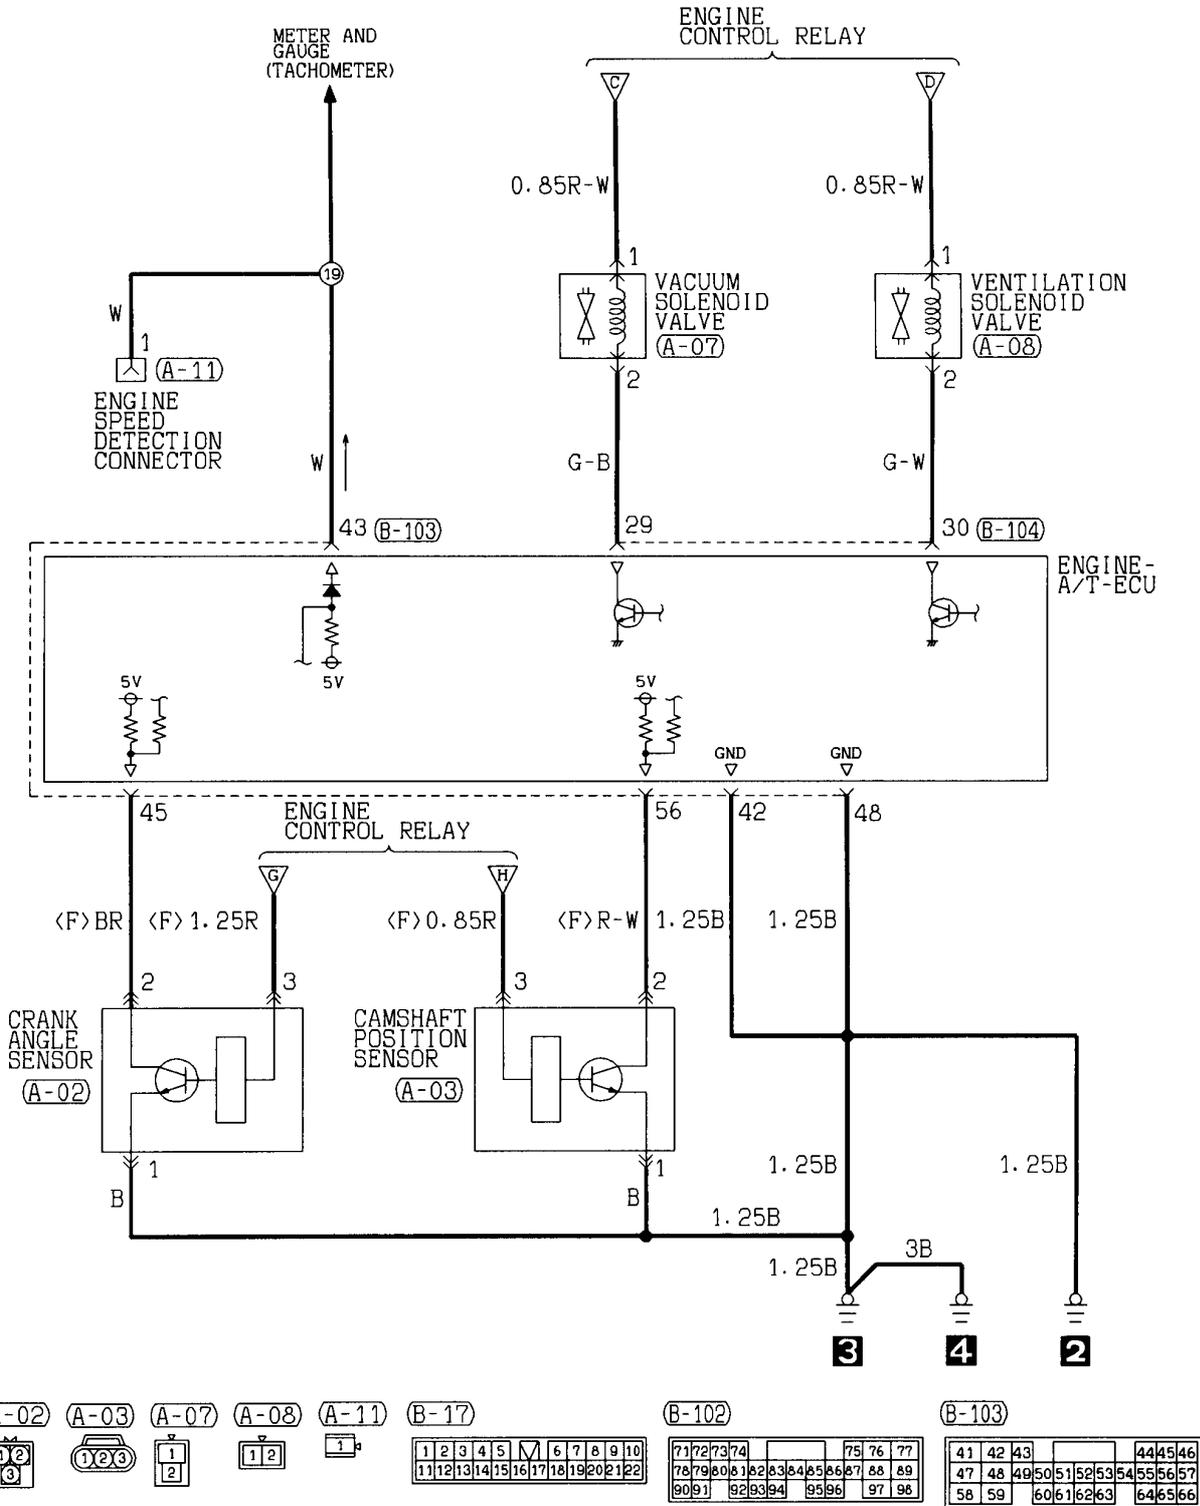

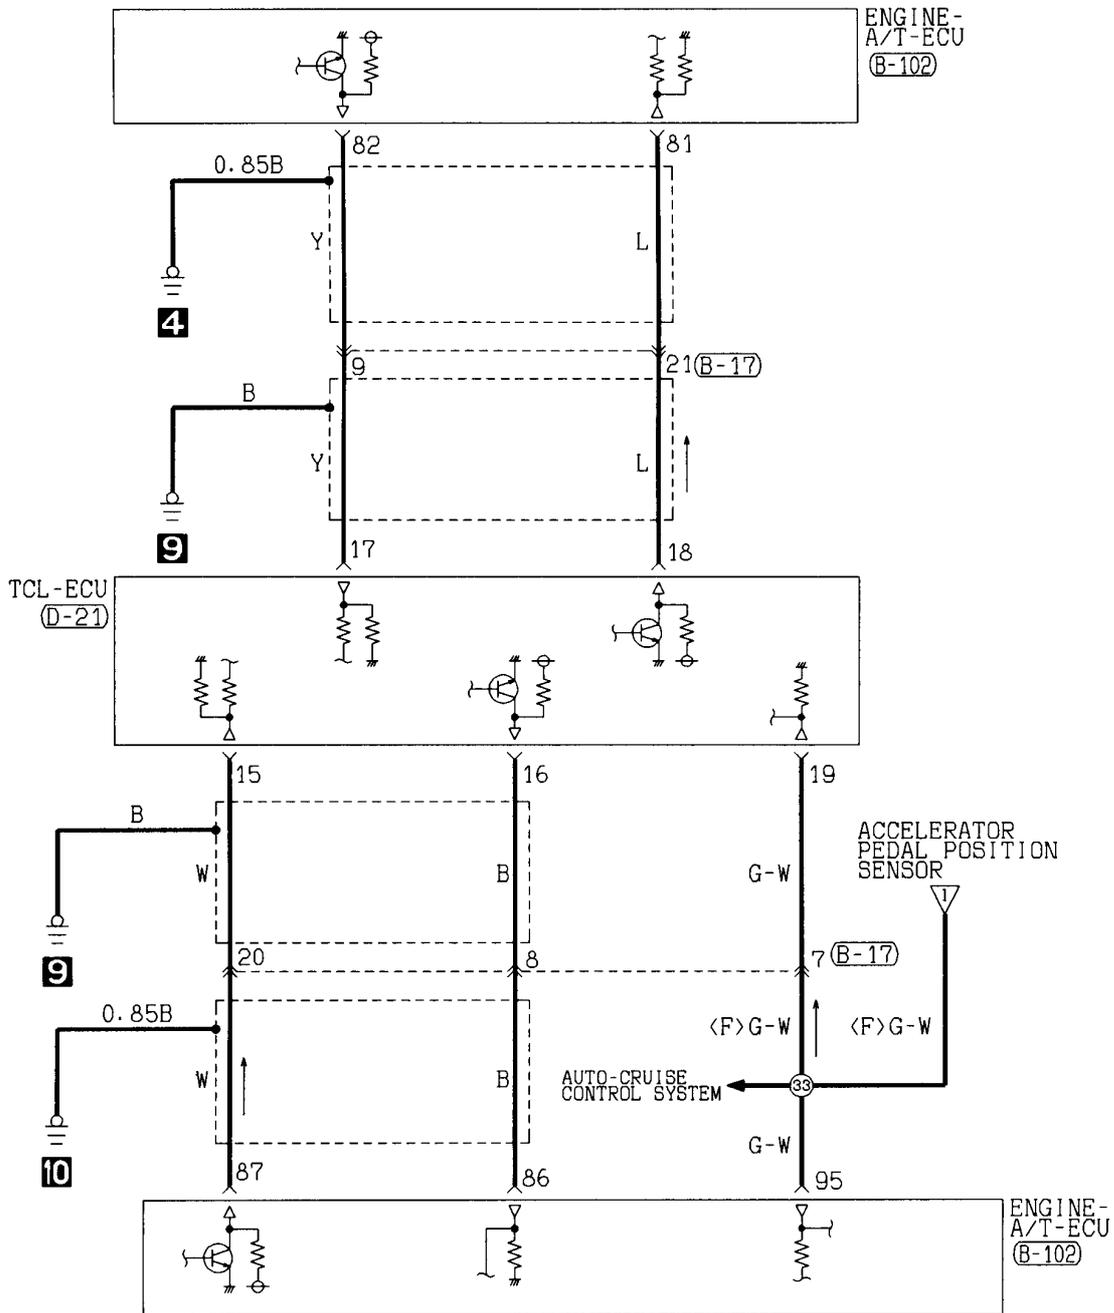



(B-104)


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

(D-21)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

MPI SYSTEM <MPI-SOHC-A/T (Vehicles with TCL)> (CONTINUED)

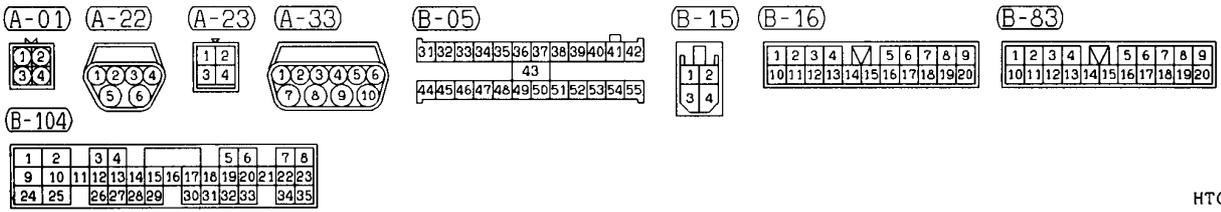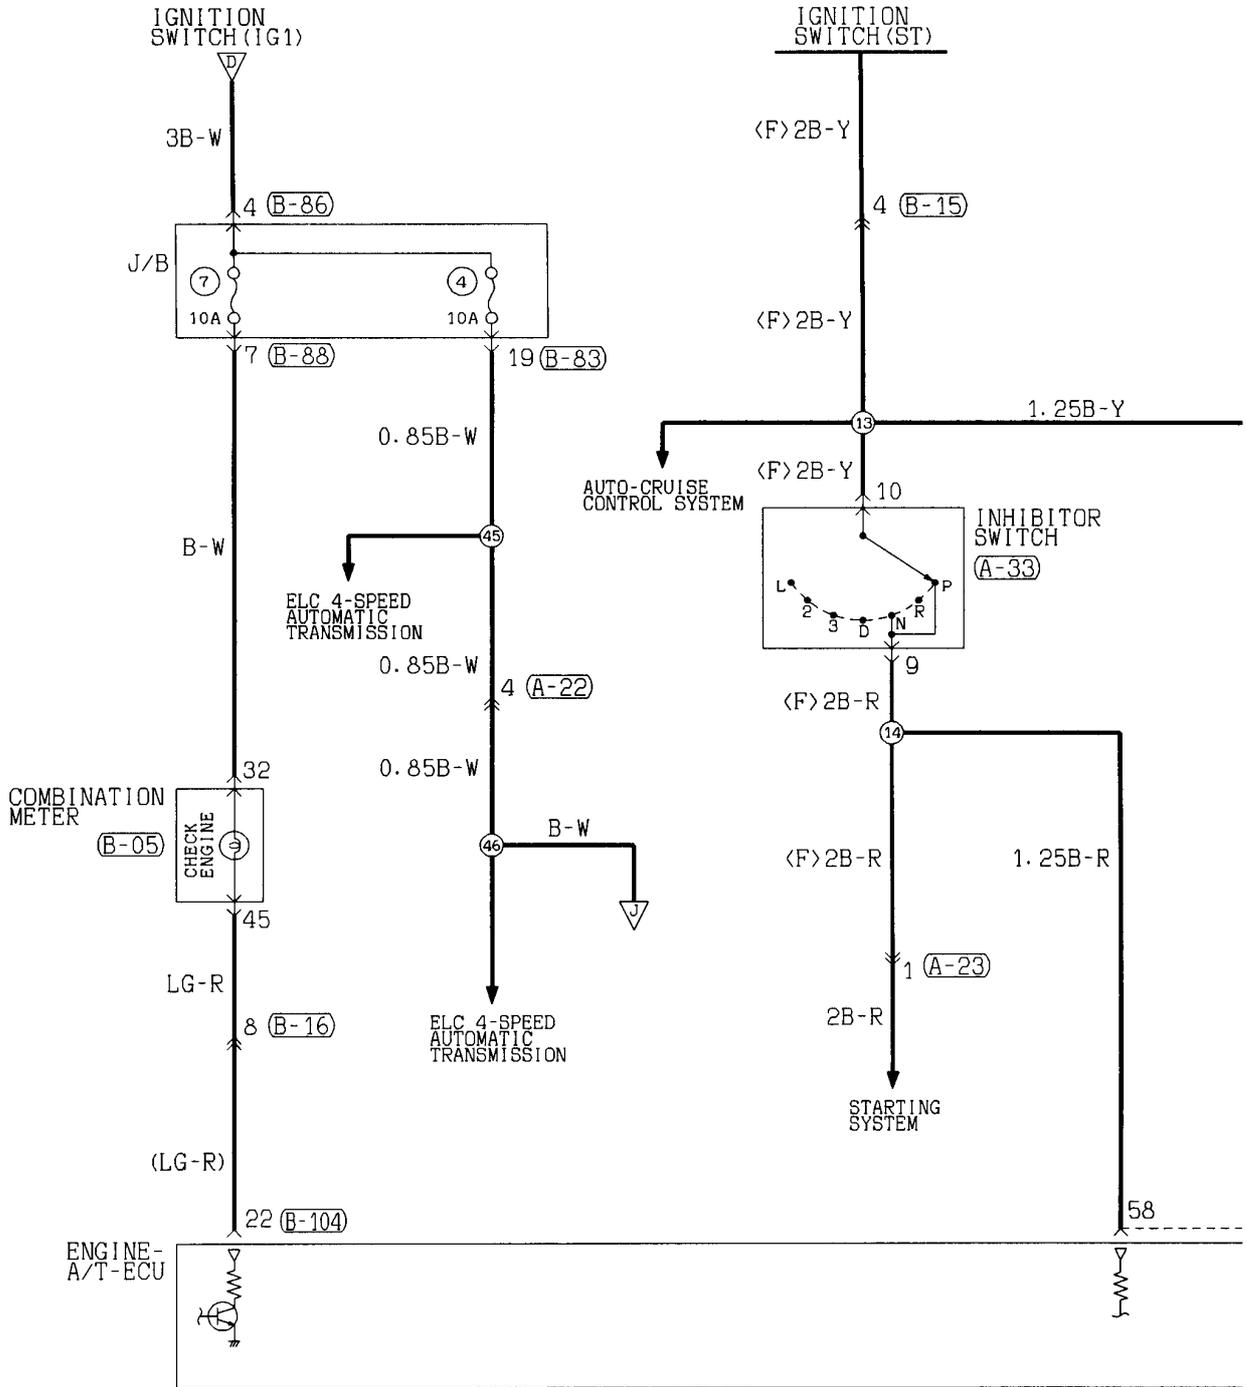

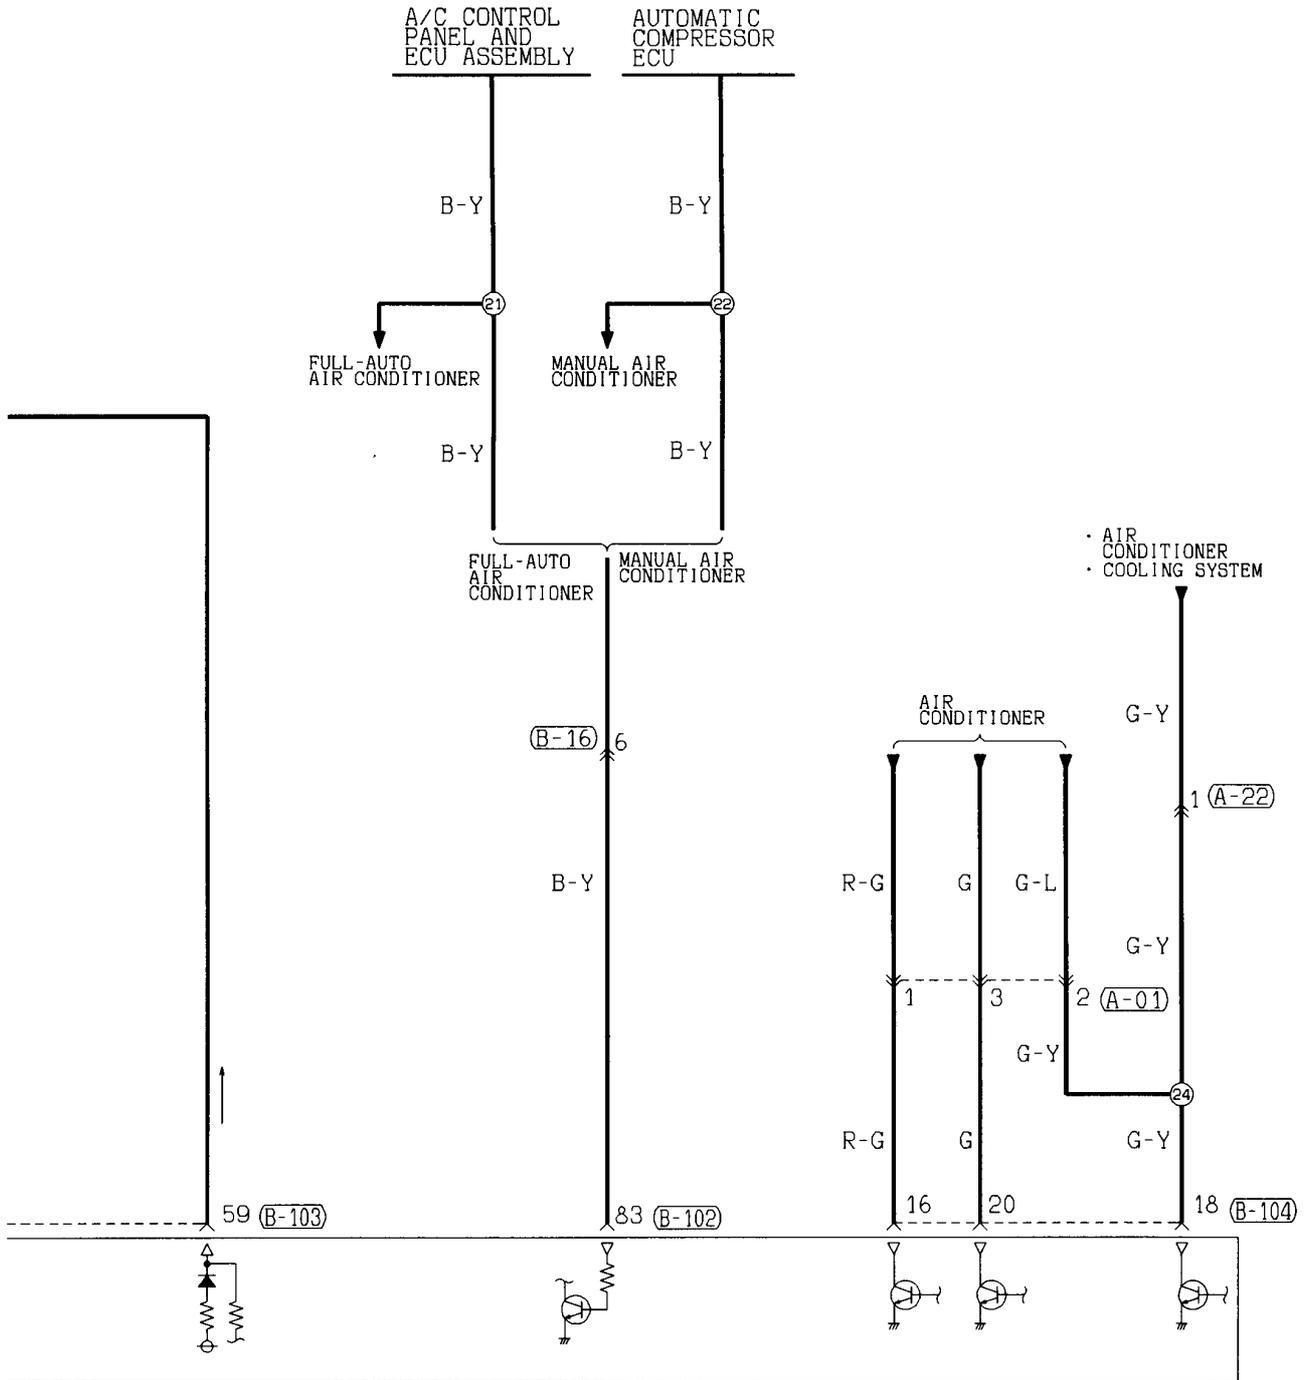

(B-86)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(B-88)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

(B-102)


71	72	73	74			75	76	77			
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

(B-103)

41	42	43				44	45	46		
47	48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66		

Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

MPI SYSTEM <MPI-SOHC-A/T (Vehicles with TCL)> (CONTINUED)

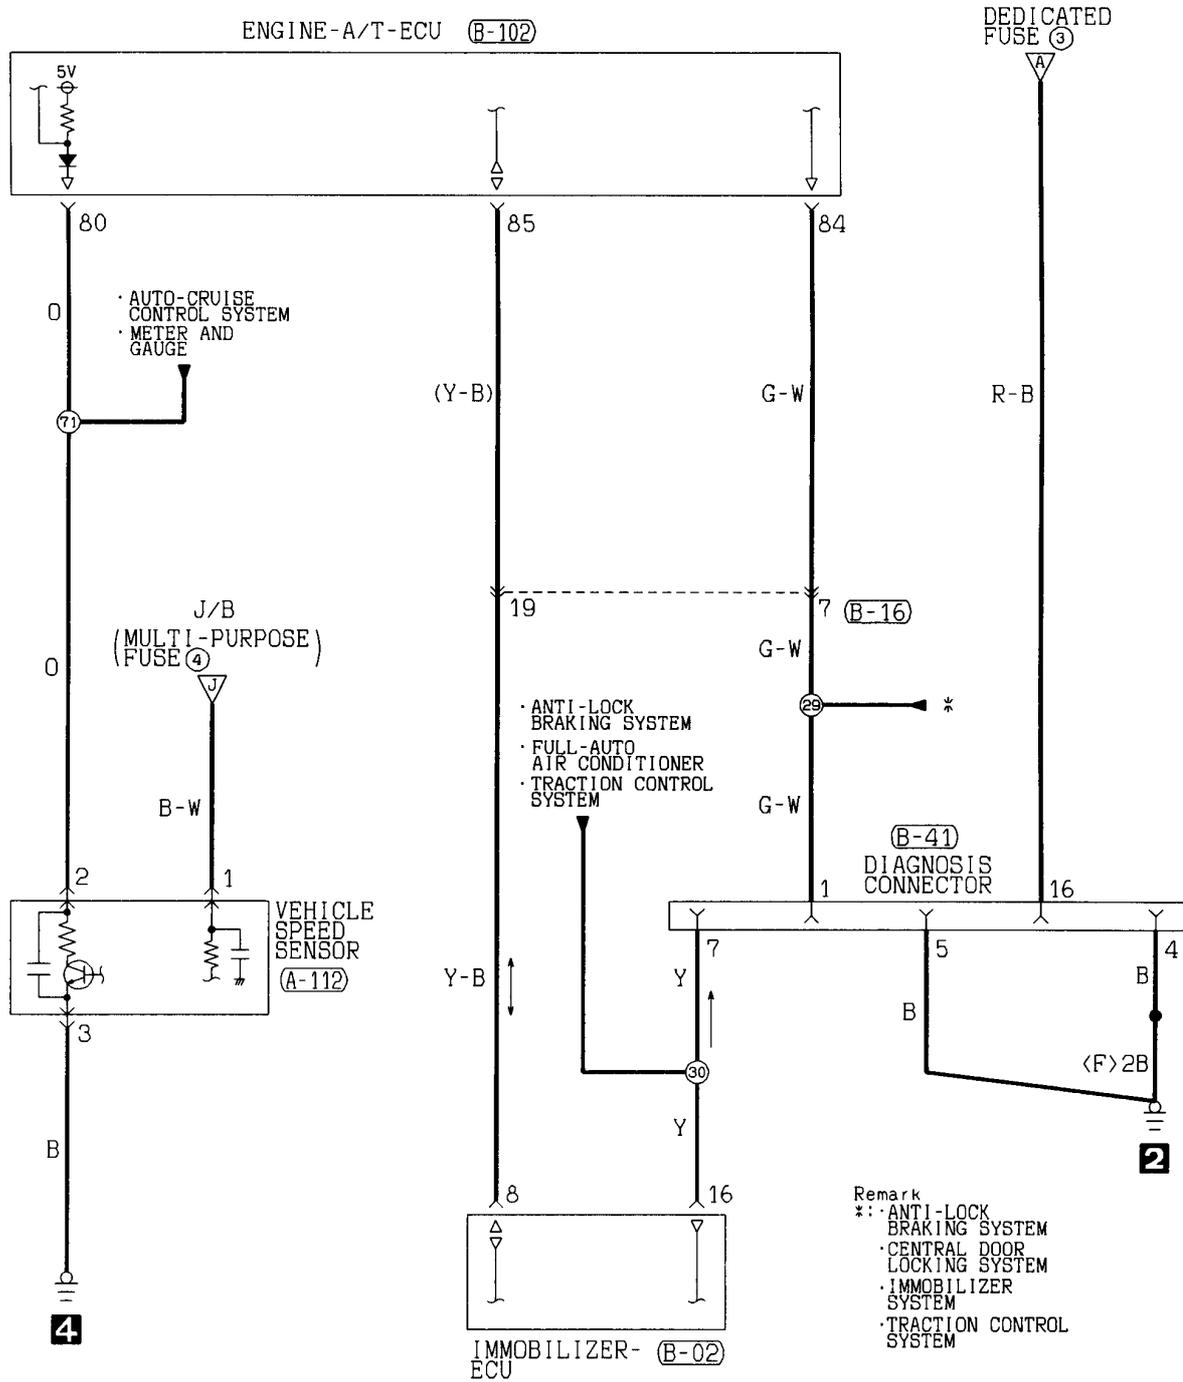

(A-112)

(B-02)

(B-16)

(B-41) FRONT SIDE

(B-102)

1	2	3
---	---	---






1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20



1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


71	72	73	74			75	76	77			
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

COOLING SYSTEM
Petrol-powered vehicles

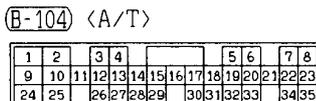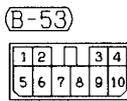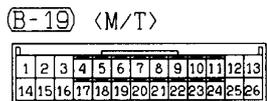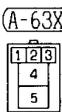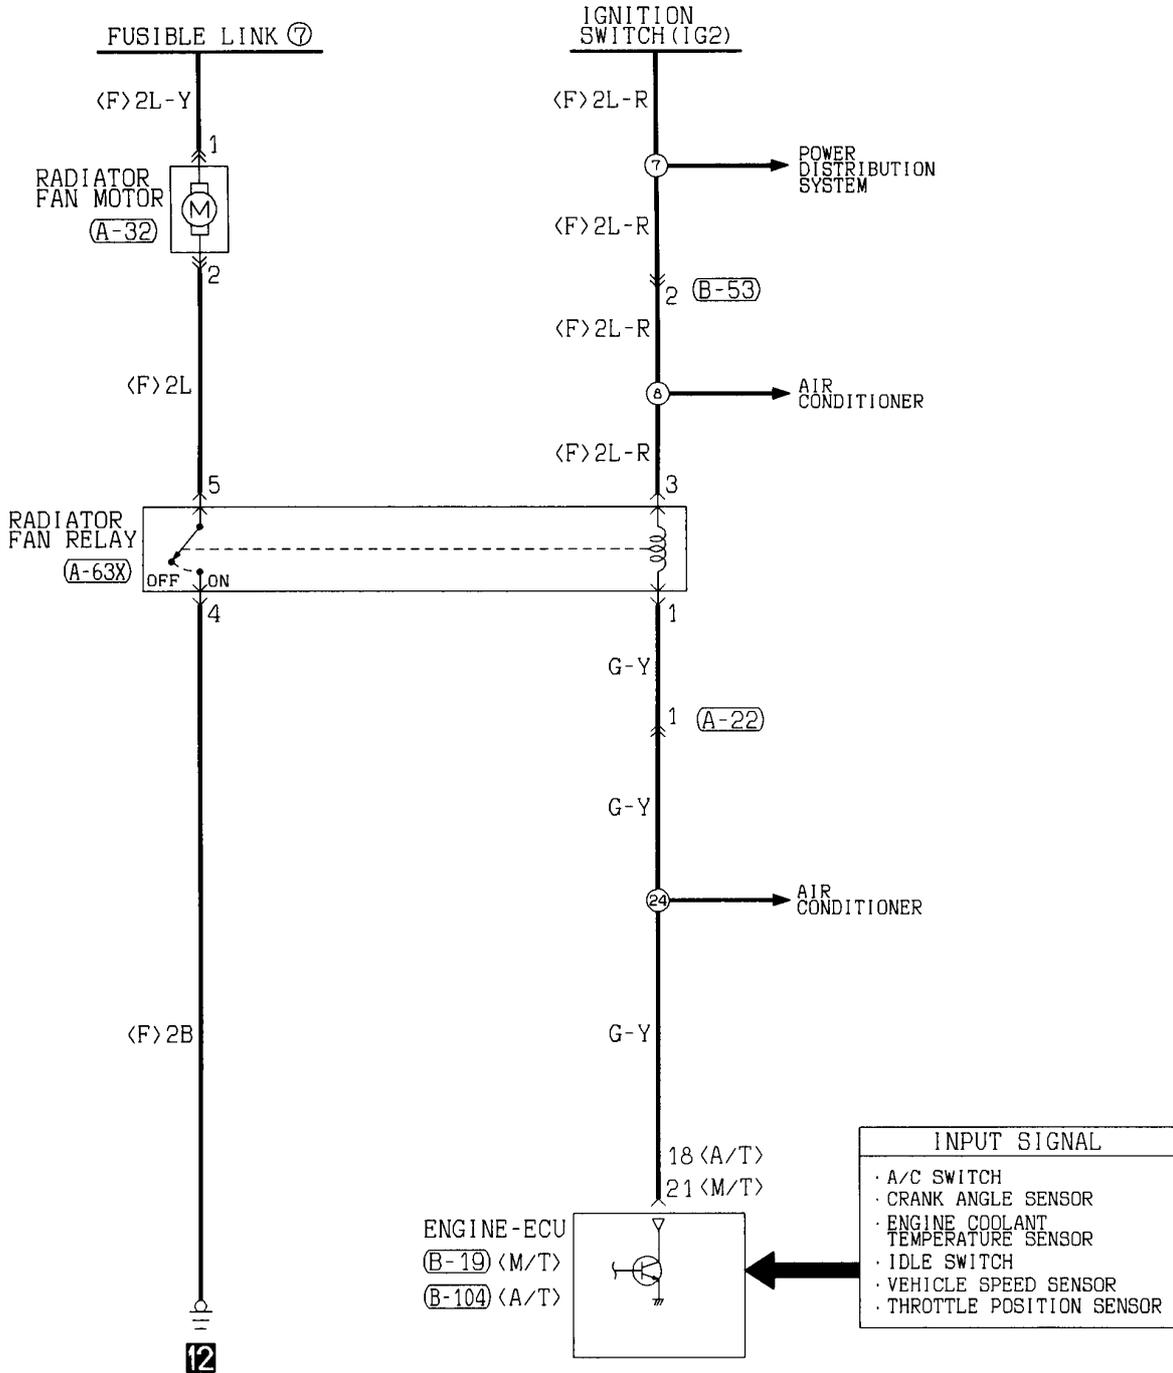

ELC 4-SPEED AUTOMATIC TRANSMISSION

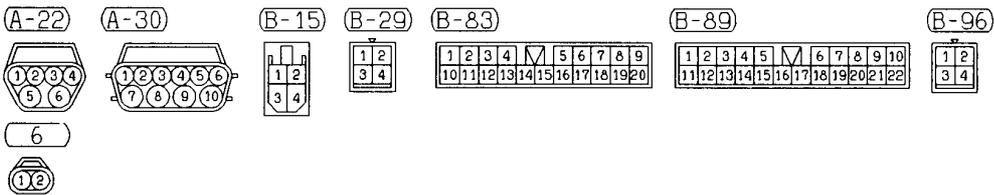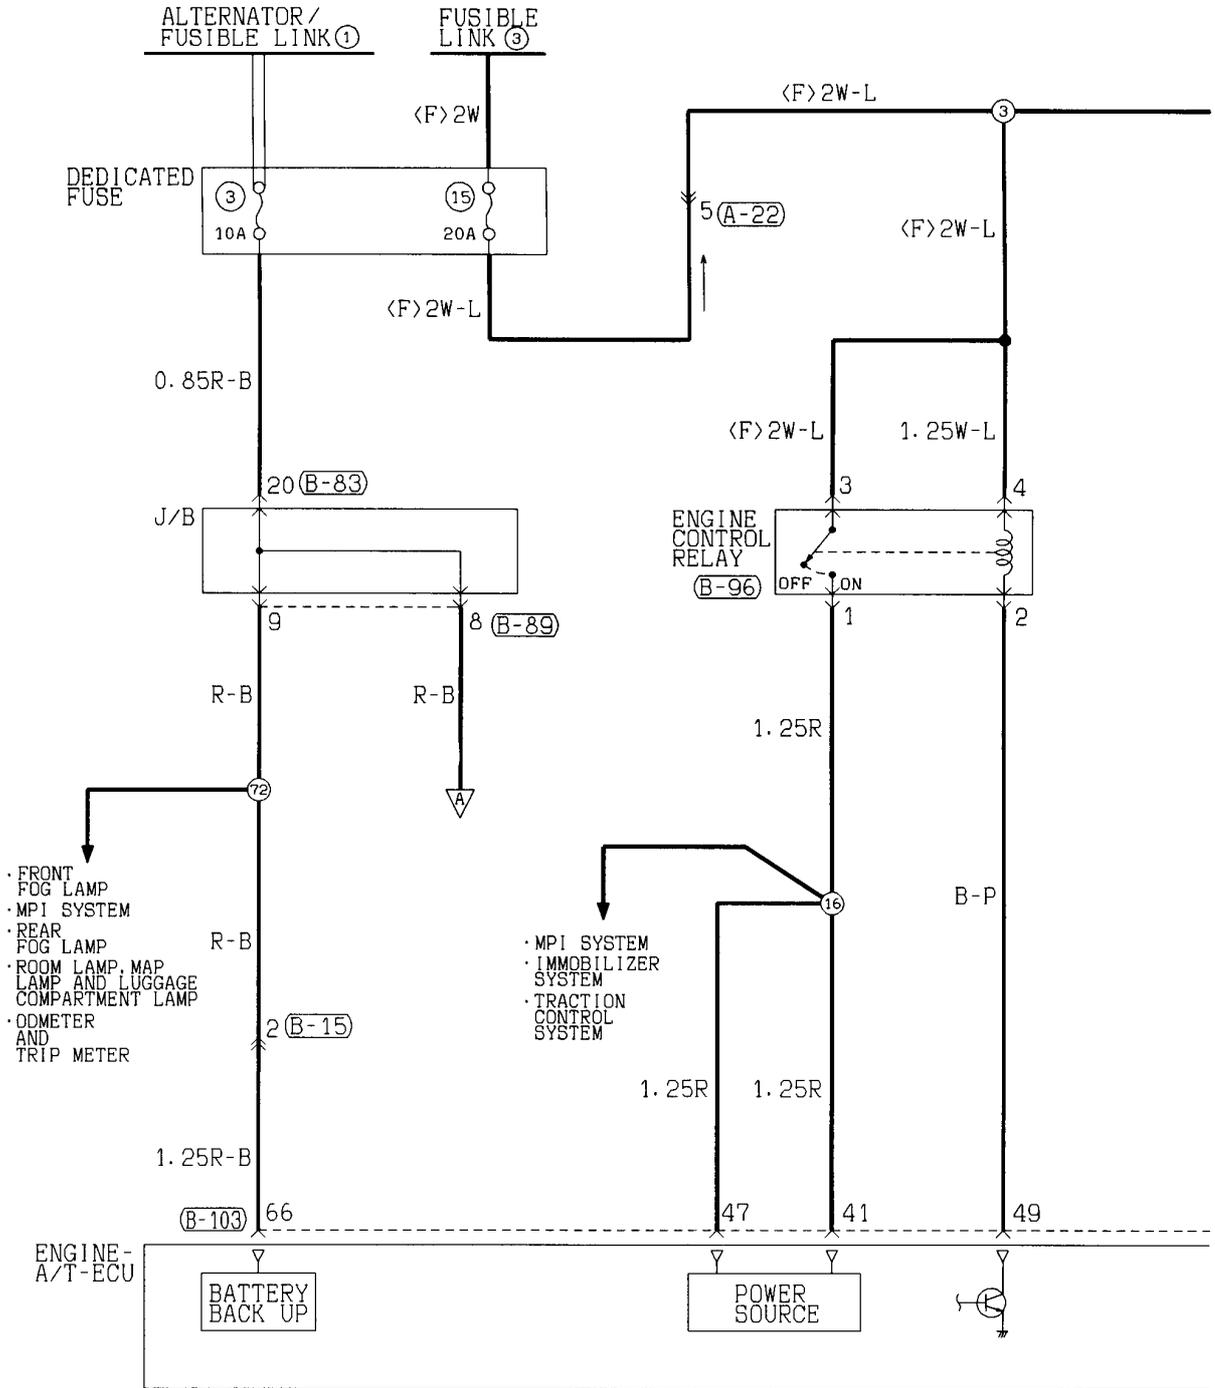

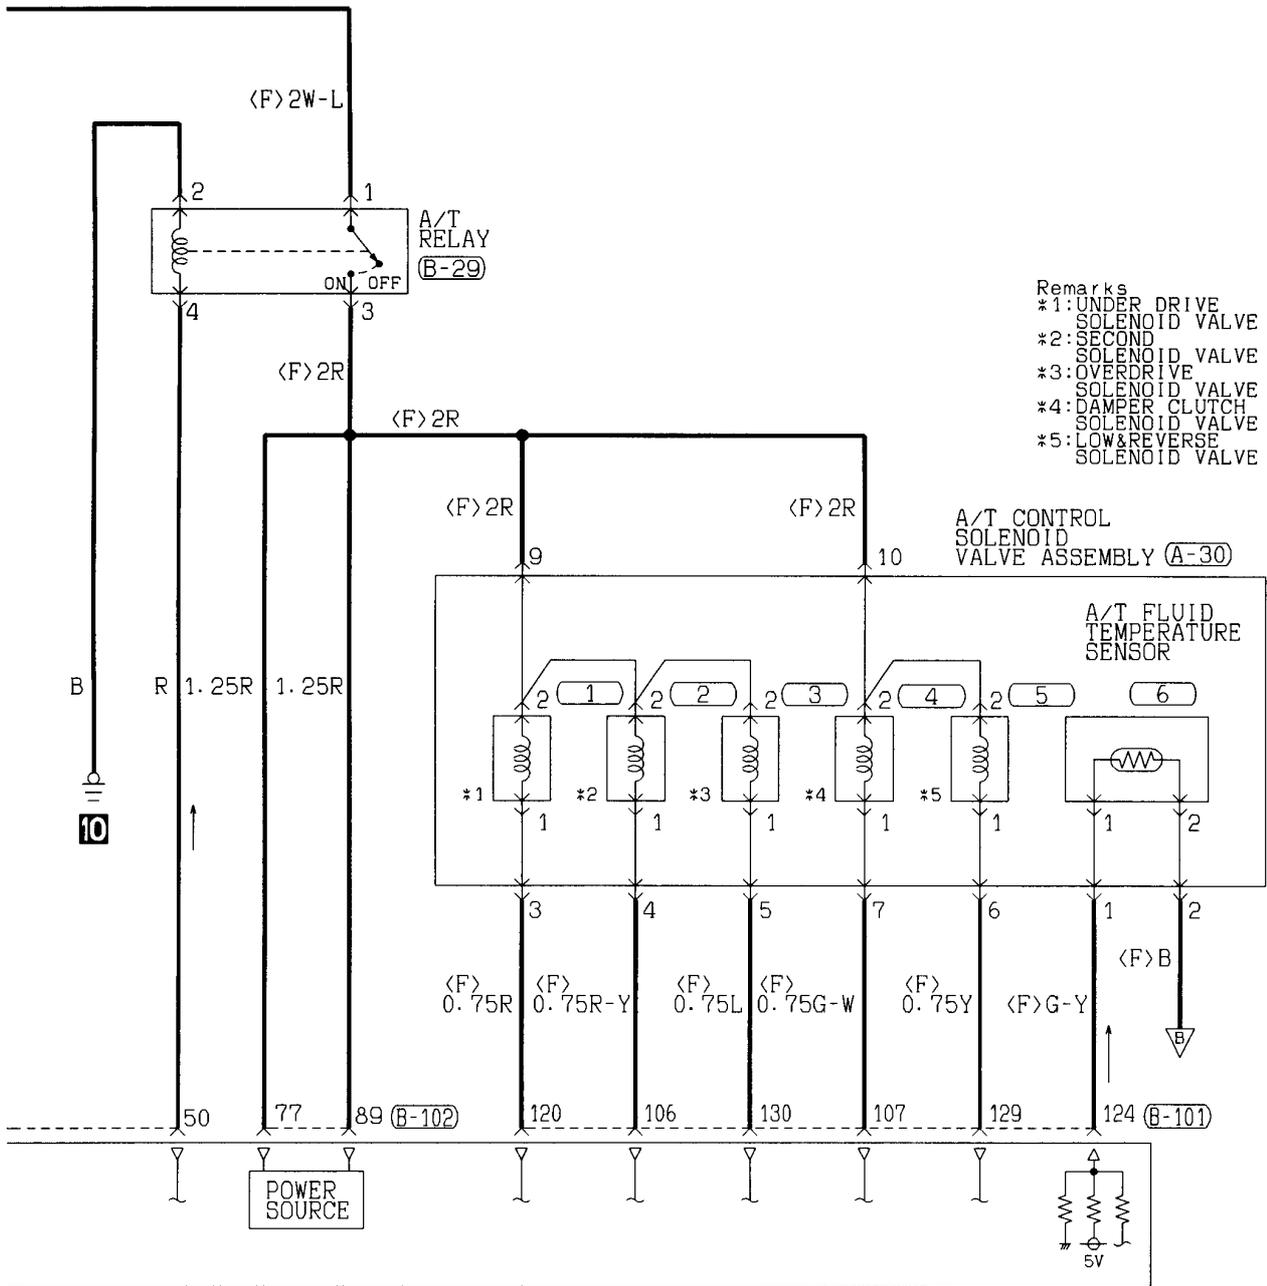

- Remarks
- *1: UNDER DRIVE SOLENOID VALVE
 - *2: SECOND SOLENOID VALVE
 - *3: OVERDRIVE SOLENOID VALVE
 - *4: DAMPER CLUTCH SOLENOID VALVE
 - *5: LOW&REVERSE SOLENOID VALVE

(B-101)

101	102	103	104	105	106	107
108	109	110	111	112	113	114
115	116	117	118	119	120	
121	122	123	124	125	126	127
128	129	130				

(B-102)


71	72	73	74	75	77	76
78	79	80	81	82	83	84
85	86	87	88	89		
90	91	92	93	94	95	96
97	98					

(B-103)


41	42	43	44	45	46
47	48	49	50	51	52
53	54	55	56	57	
58	59	60	61	62	63
64	65	66			


1	2	3	4	5
1	1	1	1	1
2	2	2	2	2

ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

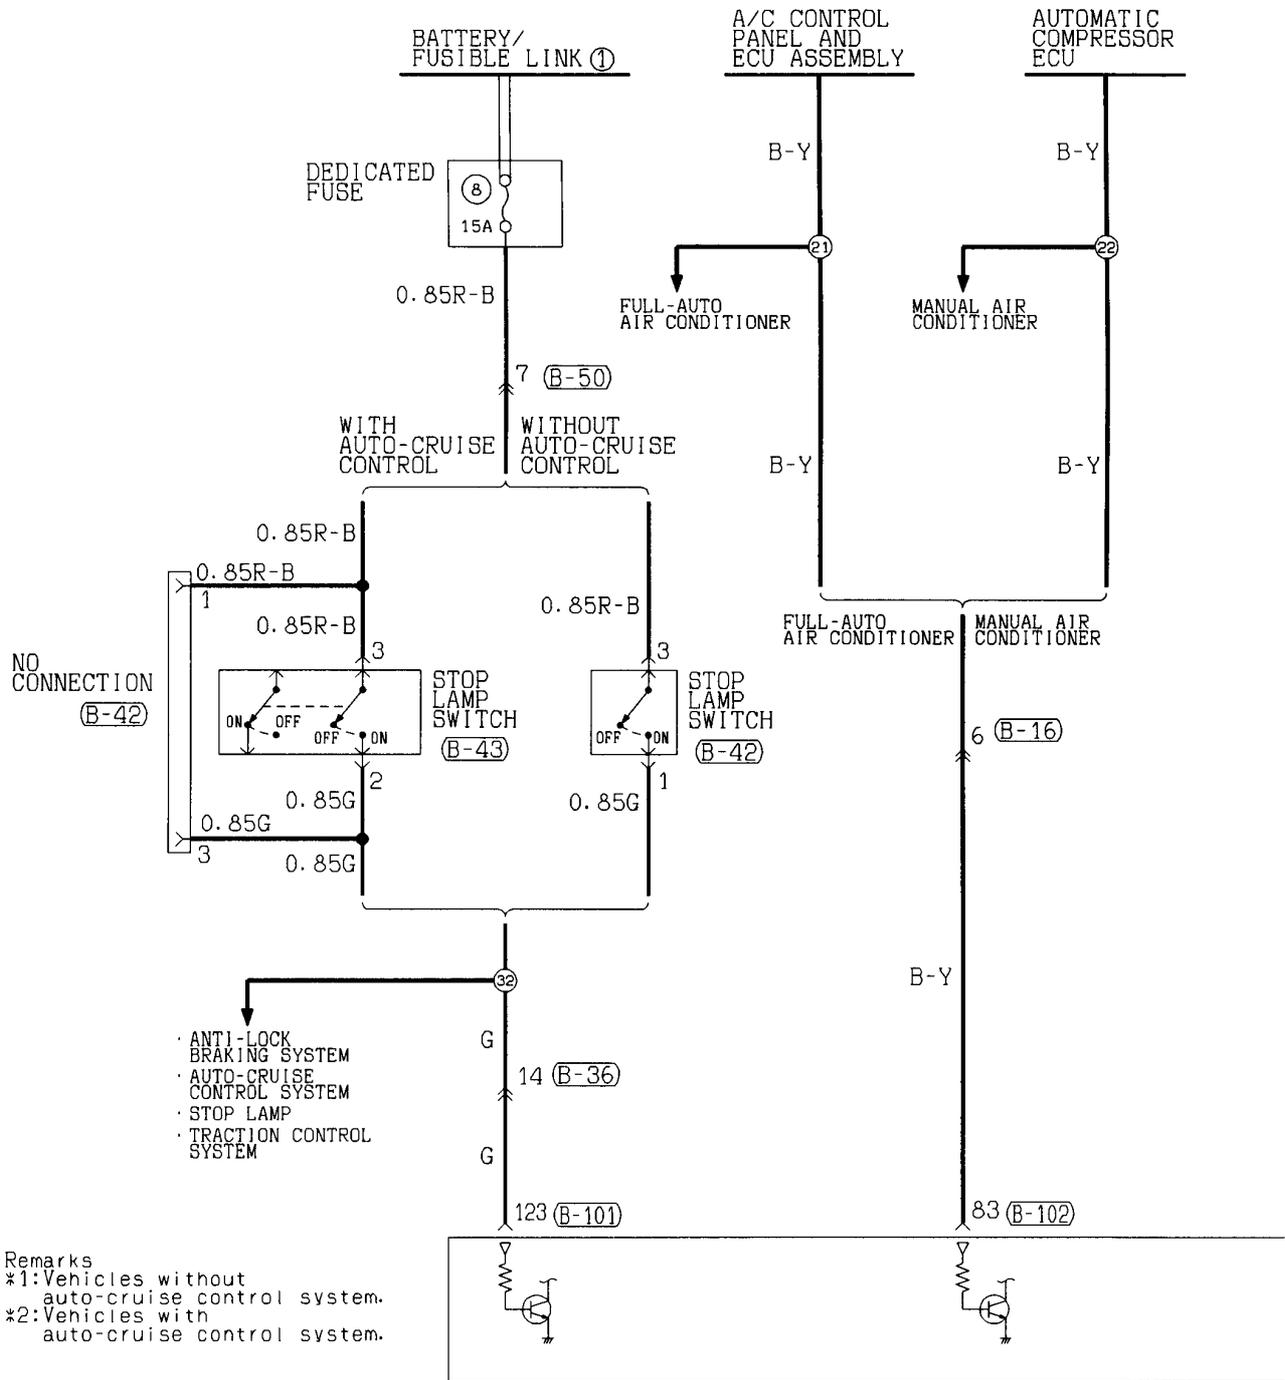

Remarks
 *1: Vehicles without auto-cruise control system.
 *2: Vehicles with auto-cruise control system.

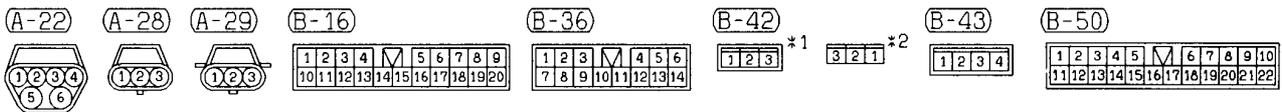

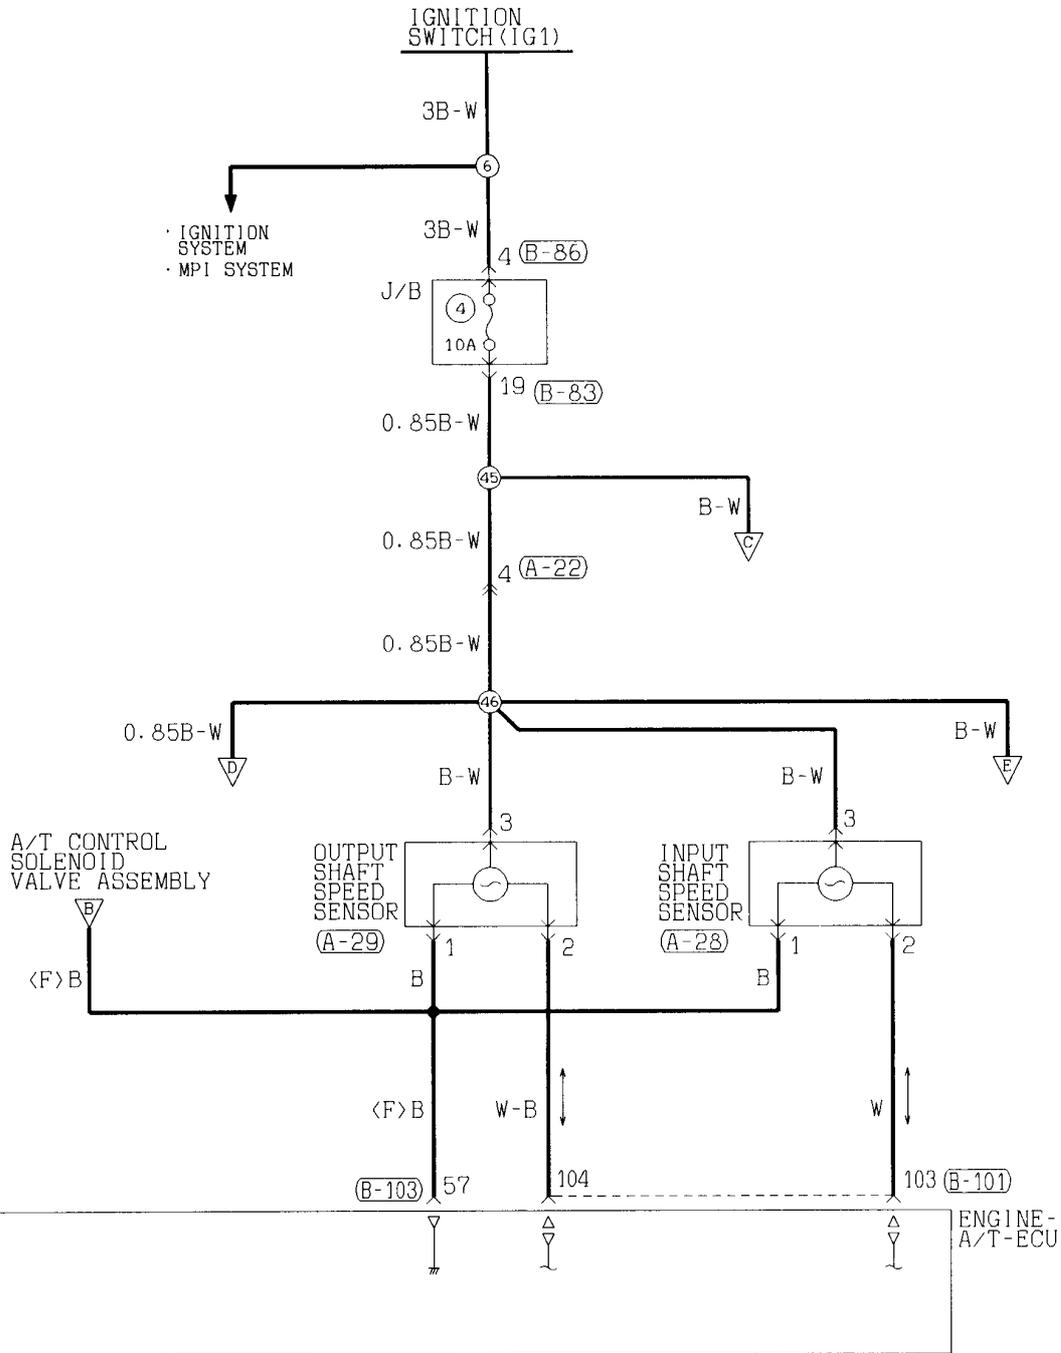

(B-83)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

(B-86)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(B-101)

101	102	103	104	105	106	107						
108	109	110	111	112	113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128	129	130			


(B-102)

71	72	73	74	75	76	77					
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

(B-103)

41	42	43	44	45	46					
47	48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66		

ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

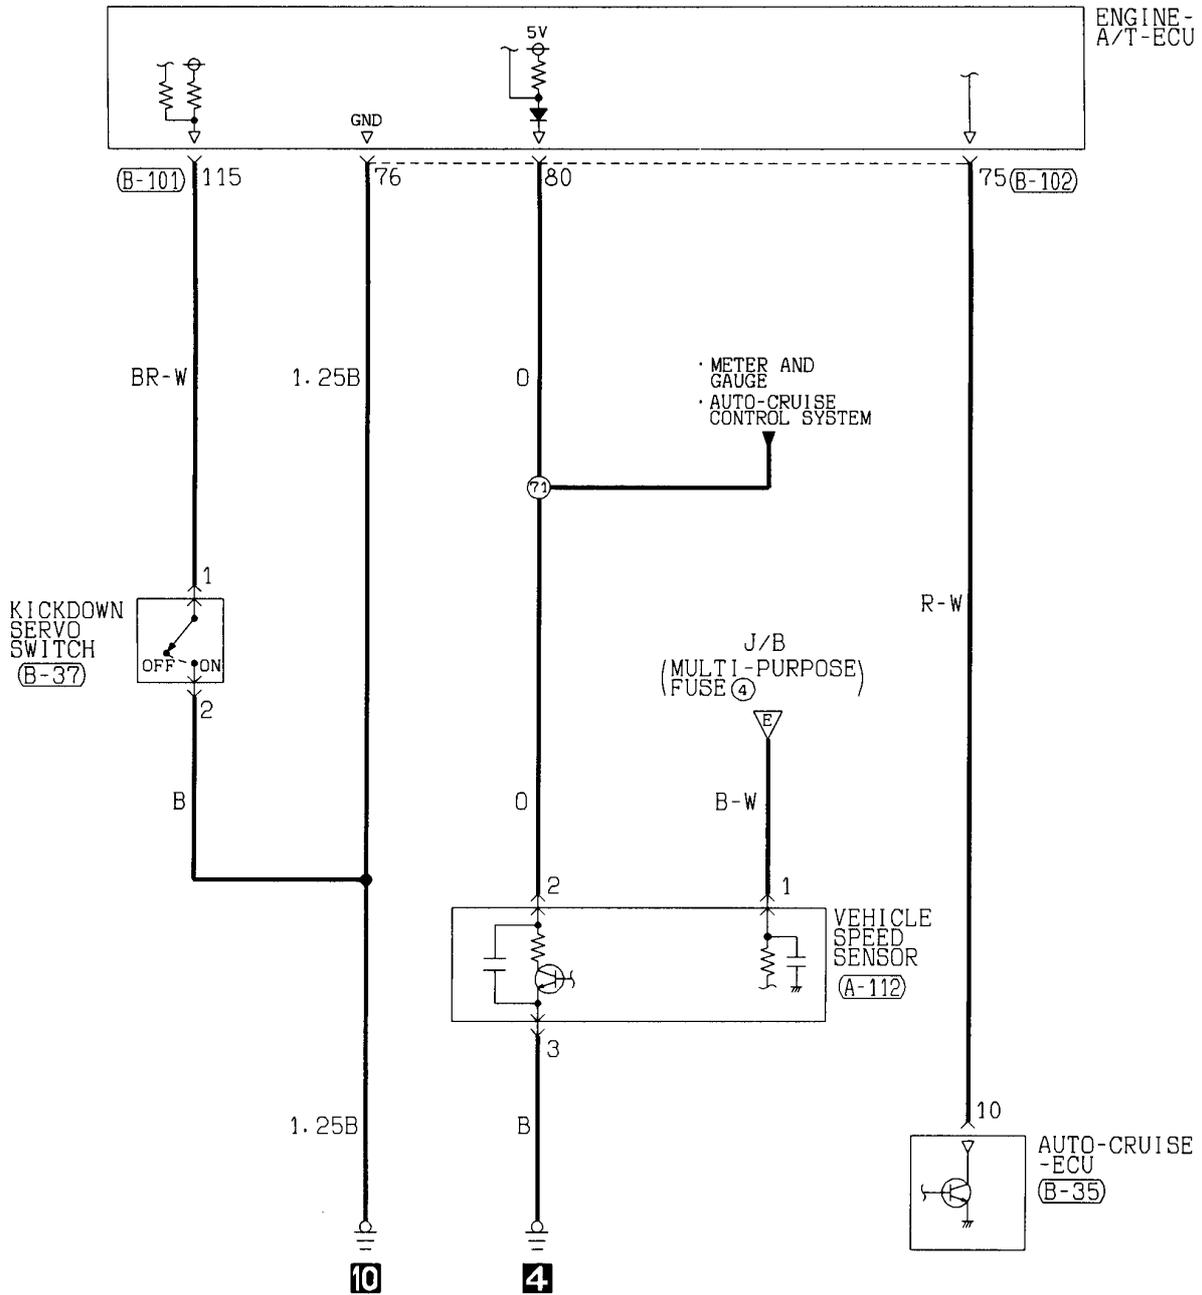

(A-112)

(B-35)

(B-37)

(B-50)

(B-75X)

(B-83)

1
2 3


1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

12

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

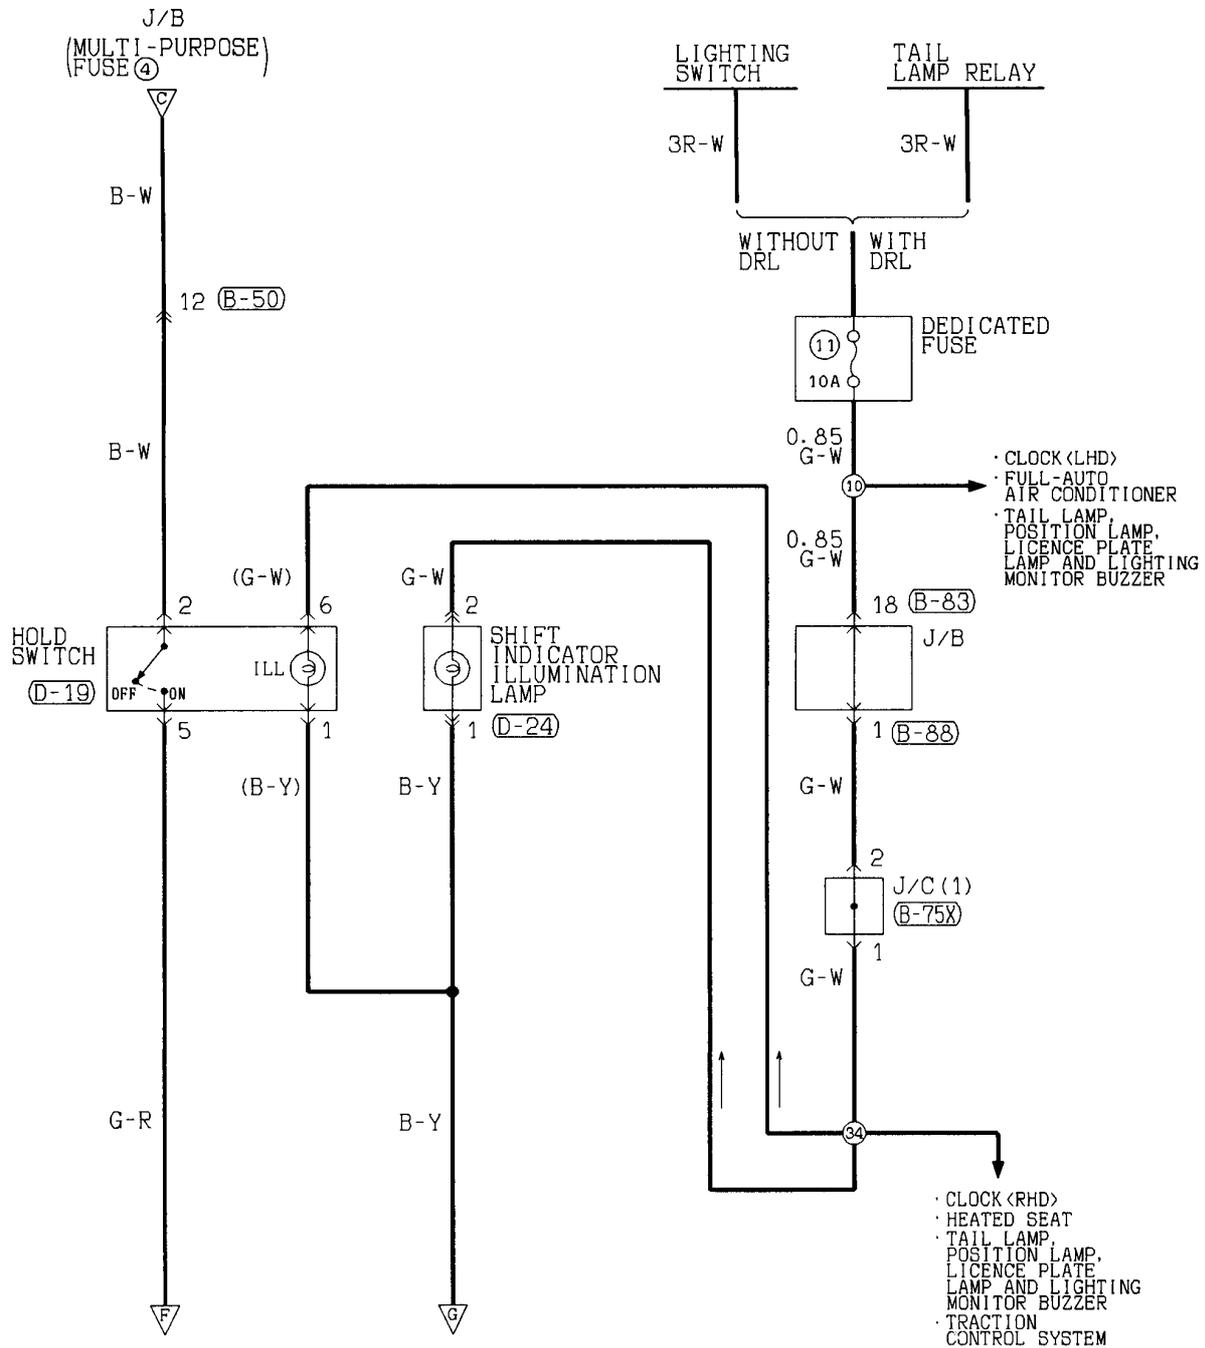

(B-88)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-101)

101	102	103	104	105	106	107			
108	109	110	111	112	113	114	115	116	117
118	119	120	121	122	123	124	125	126	127
128	129	130							

(B-102)

71	72	73	74	75	76	77			
78	79	80	81	82	83	84	85	86	87
88	89	90	91	92	93	94	95	96	97
98									


(D-19)

1	2	3	
4	5	6	7
8			


(D-24)

1	2
---	---


ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

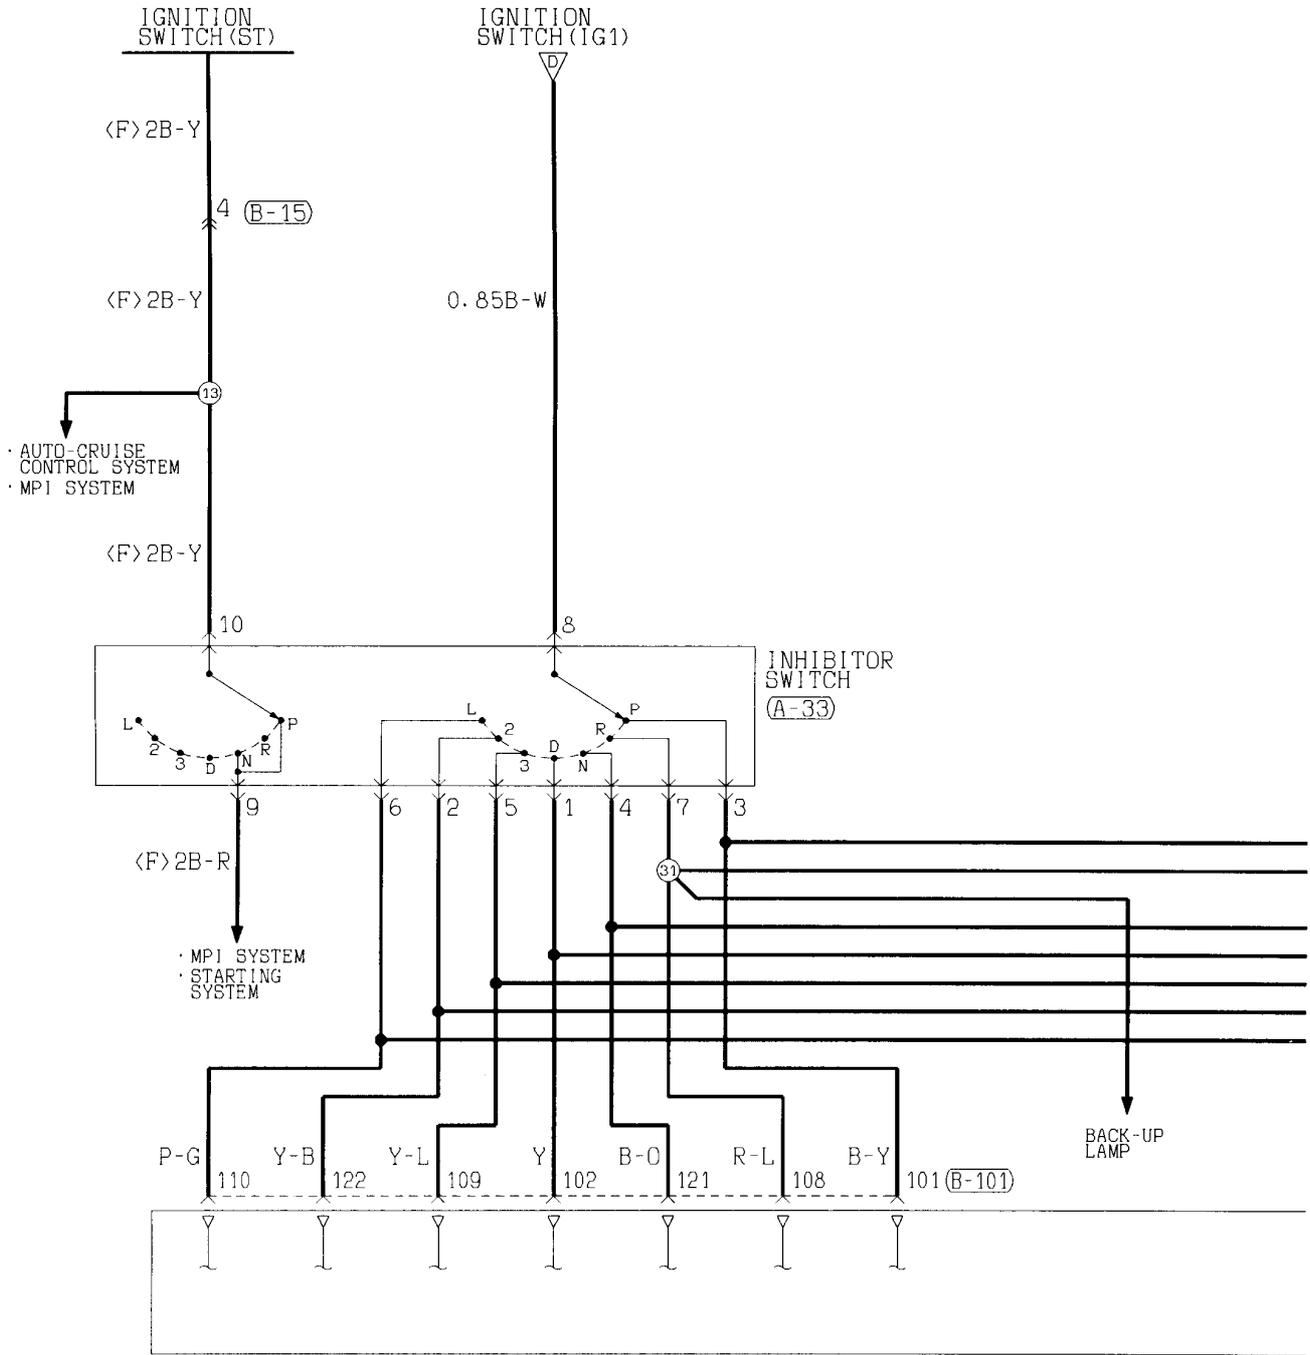


(A-33)

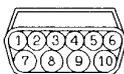

(B-03)

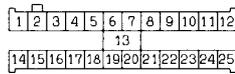


(B-05)

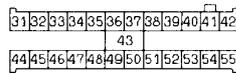


(B-15)




(B-36)

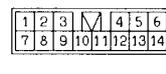

(B-75X)

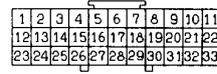

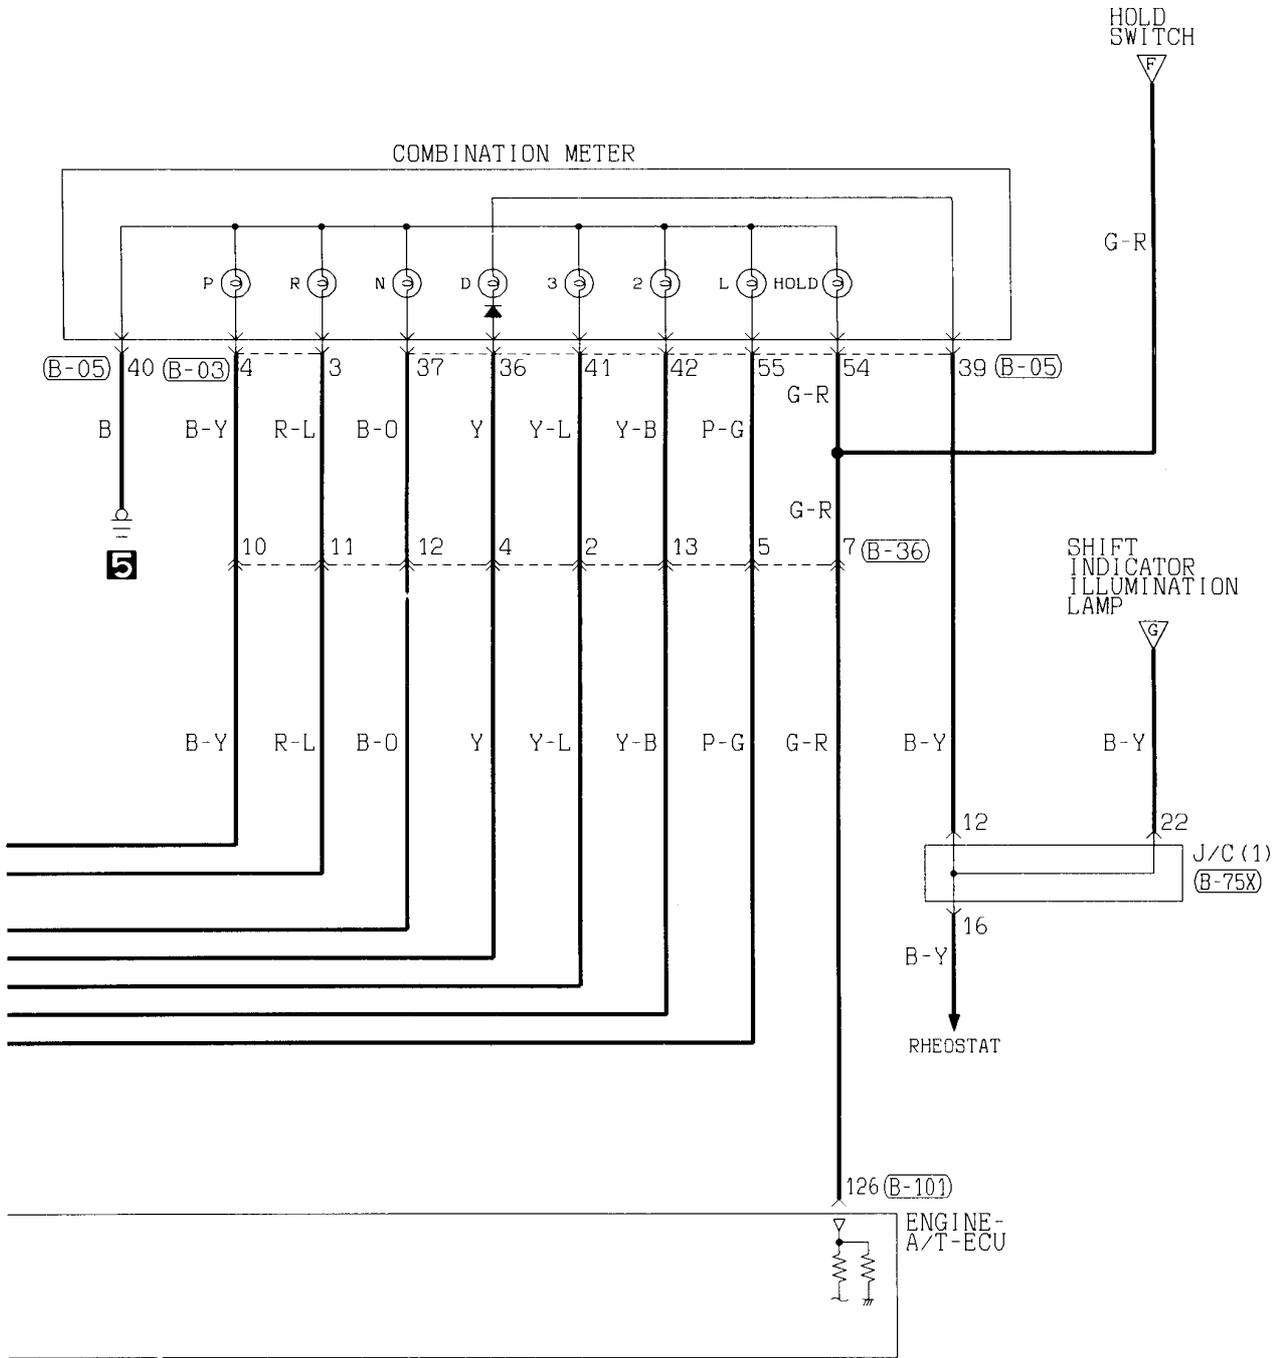


(B-101)

101	102	103	104	105	106	107
108	109	110	111	112	113	114
115	116	117	118	119	120	
121	122	123	124	125	126	127
128	129	130				

ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

<WITH TCL>

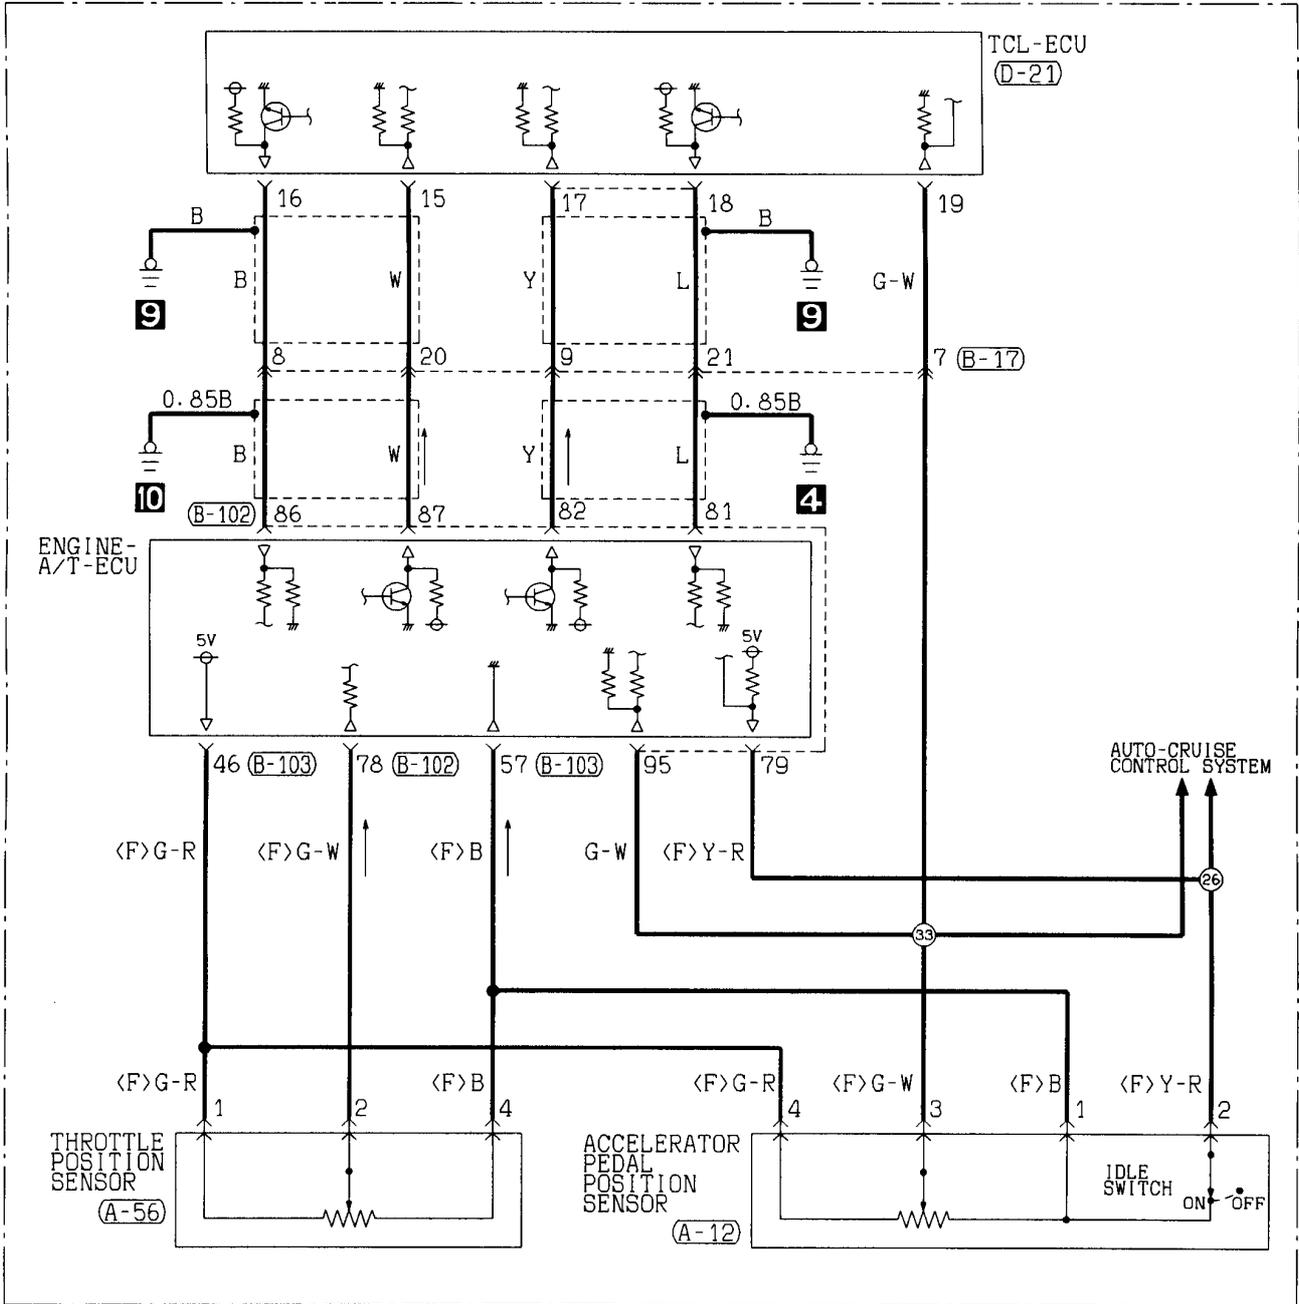

(A-12)

1	2	3	4
---	---	---	---

(A-56)

1	2	3	4
---	---	---	---

(B-17)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

(B-102)

71	72	73	74	75	76	77					
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			


(B-103)

41	42	43	44	45	46					
47	48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66		


(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

<WITHOUT TCL>

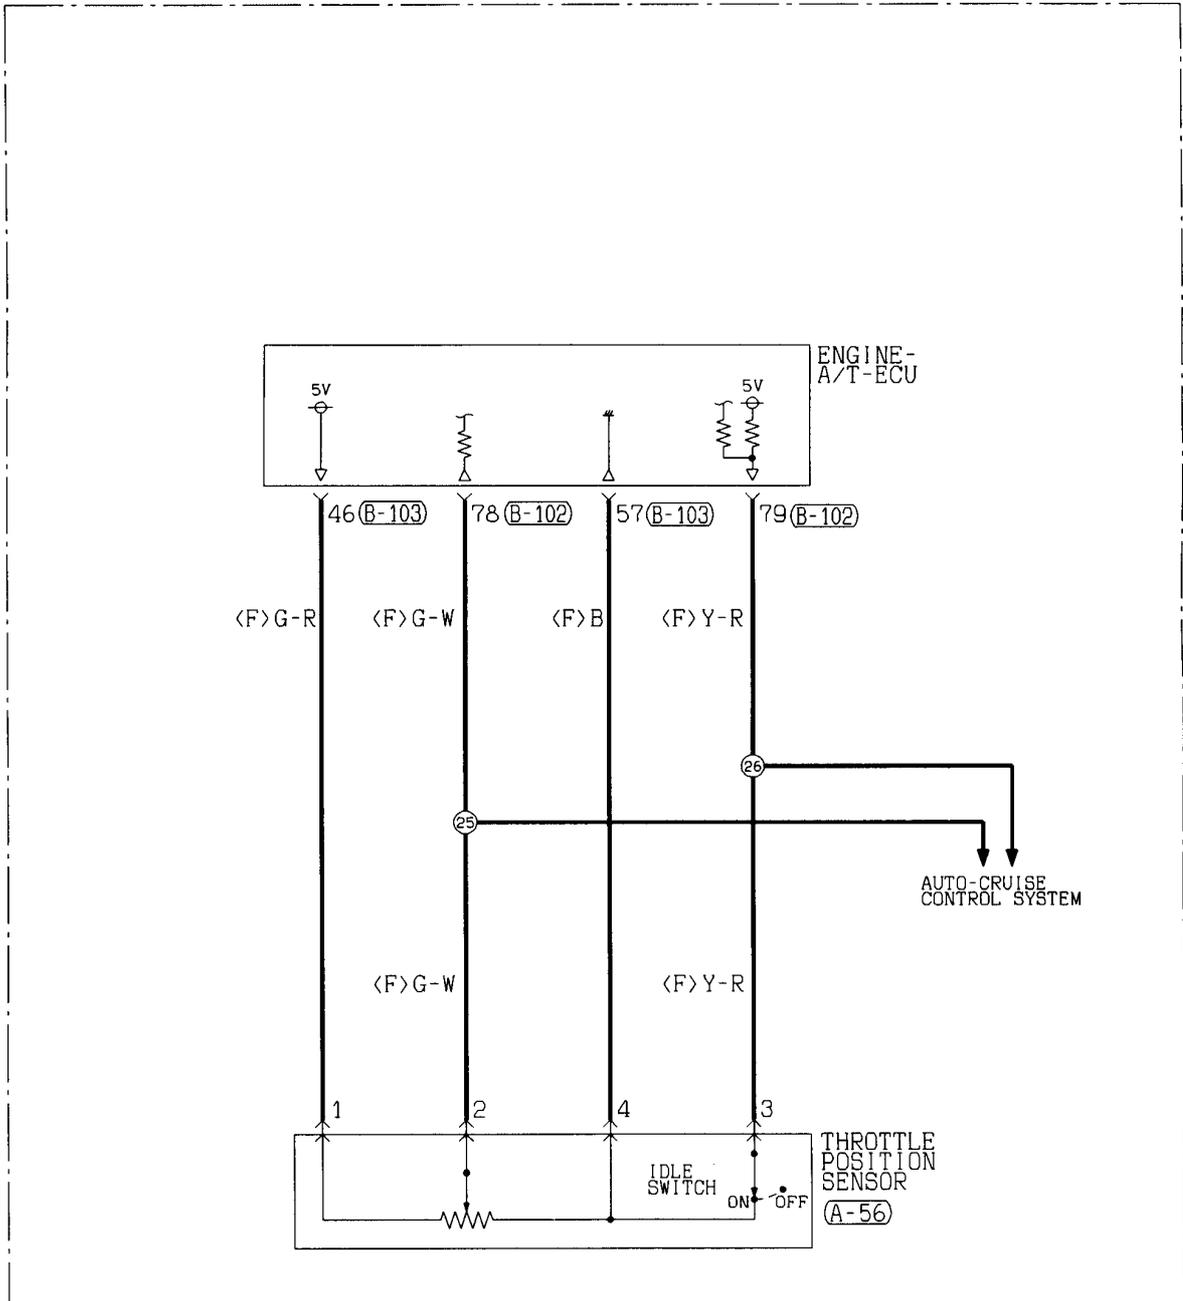

ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

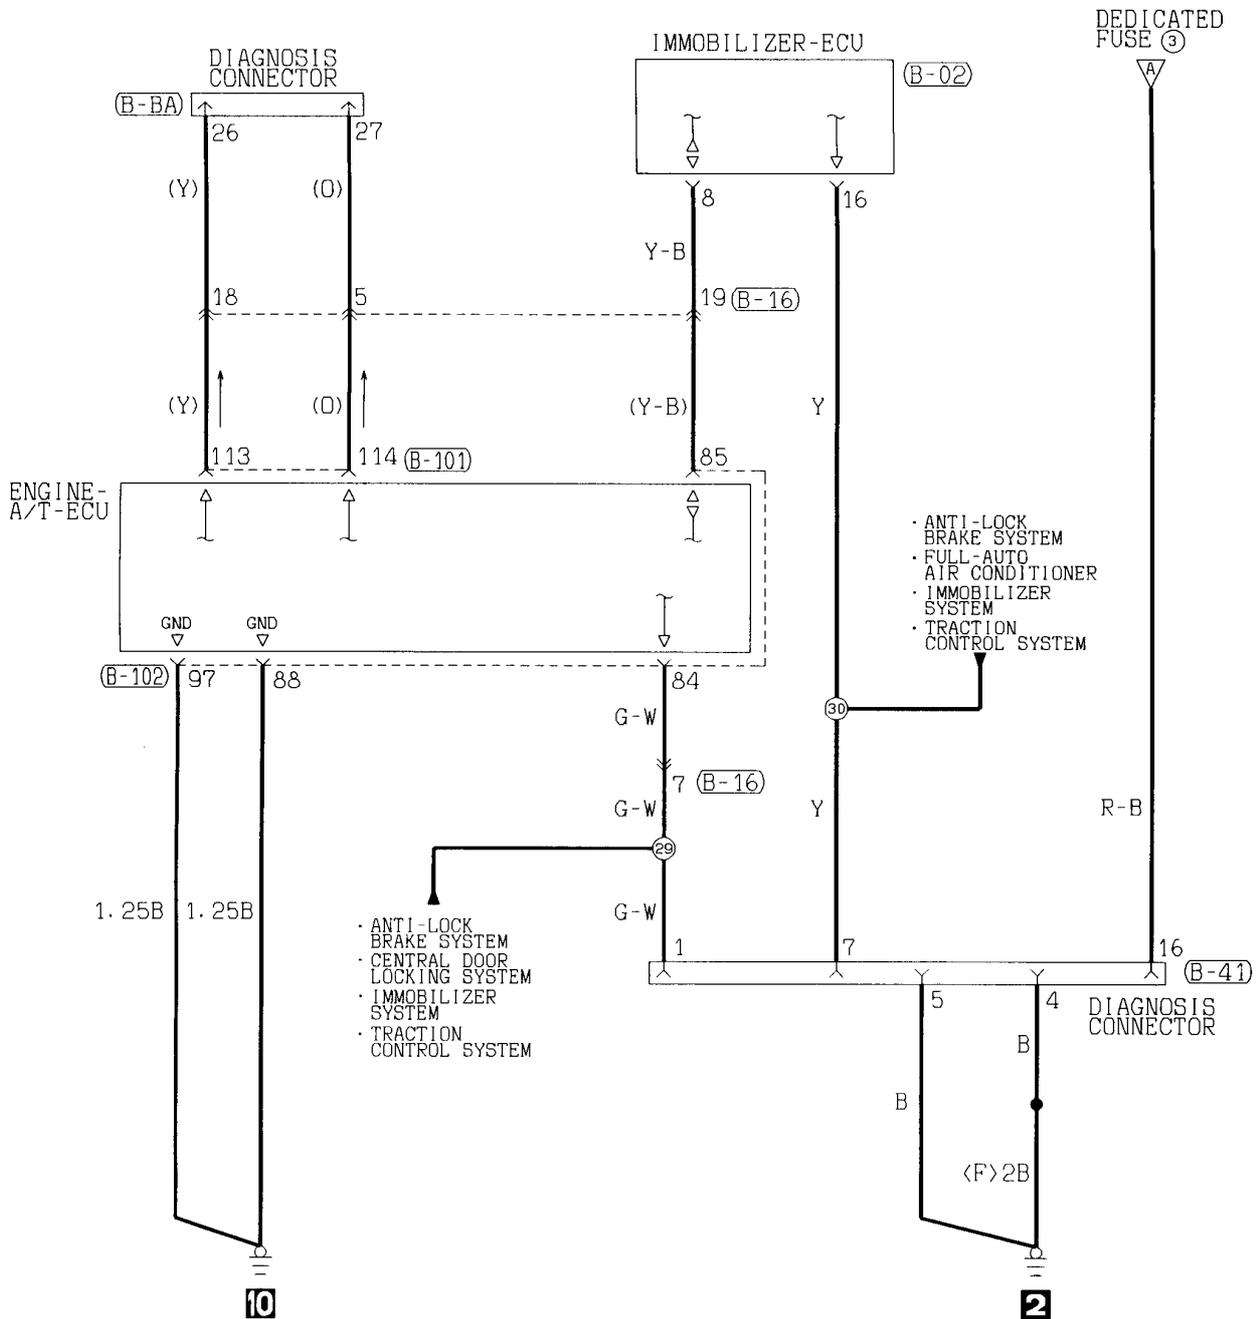

(B-02)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-16)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

(B-41) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-BA) FRONT SIDE

25	24	23	22	21		
32	31	30	29	28	27	26

(B-101)



101	102	103	104	105	106	107						
108	109	110	111	112	113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128	129	130			

(B-102)

71	72	73	74	75	76	77					
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			



HEADLAMP


Vehicles without daytime running lamp

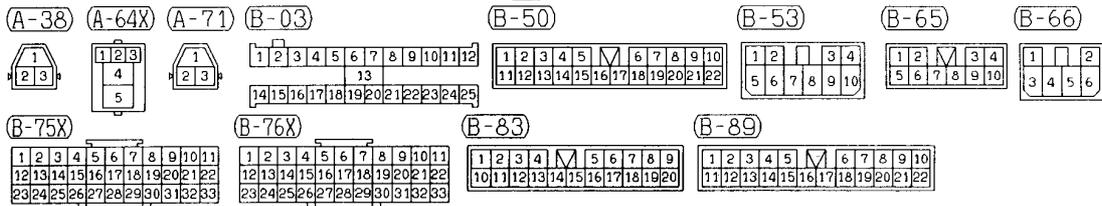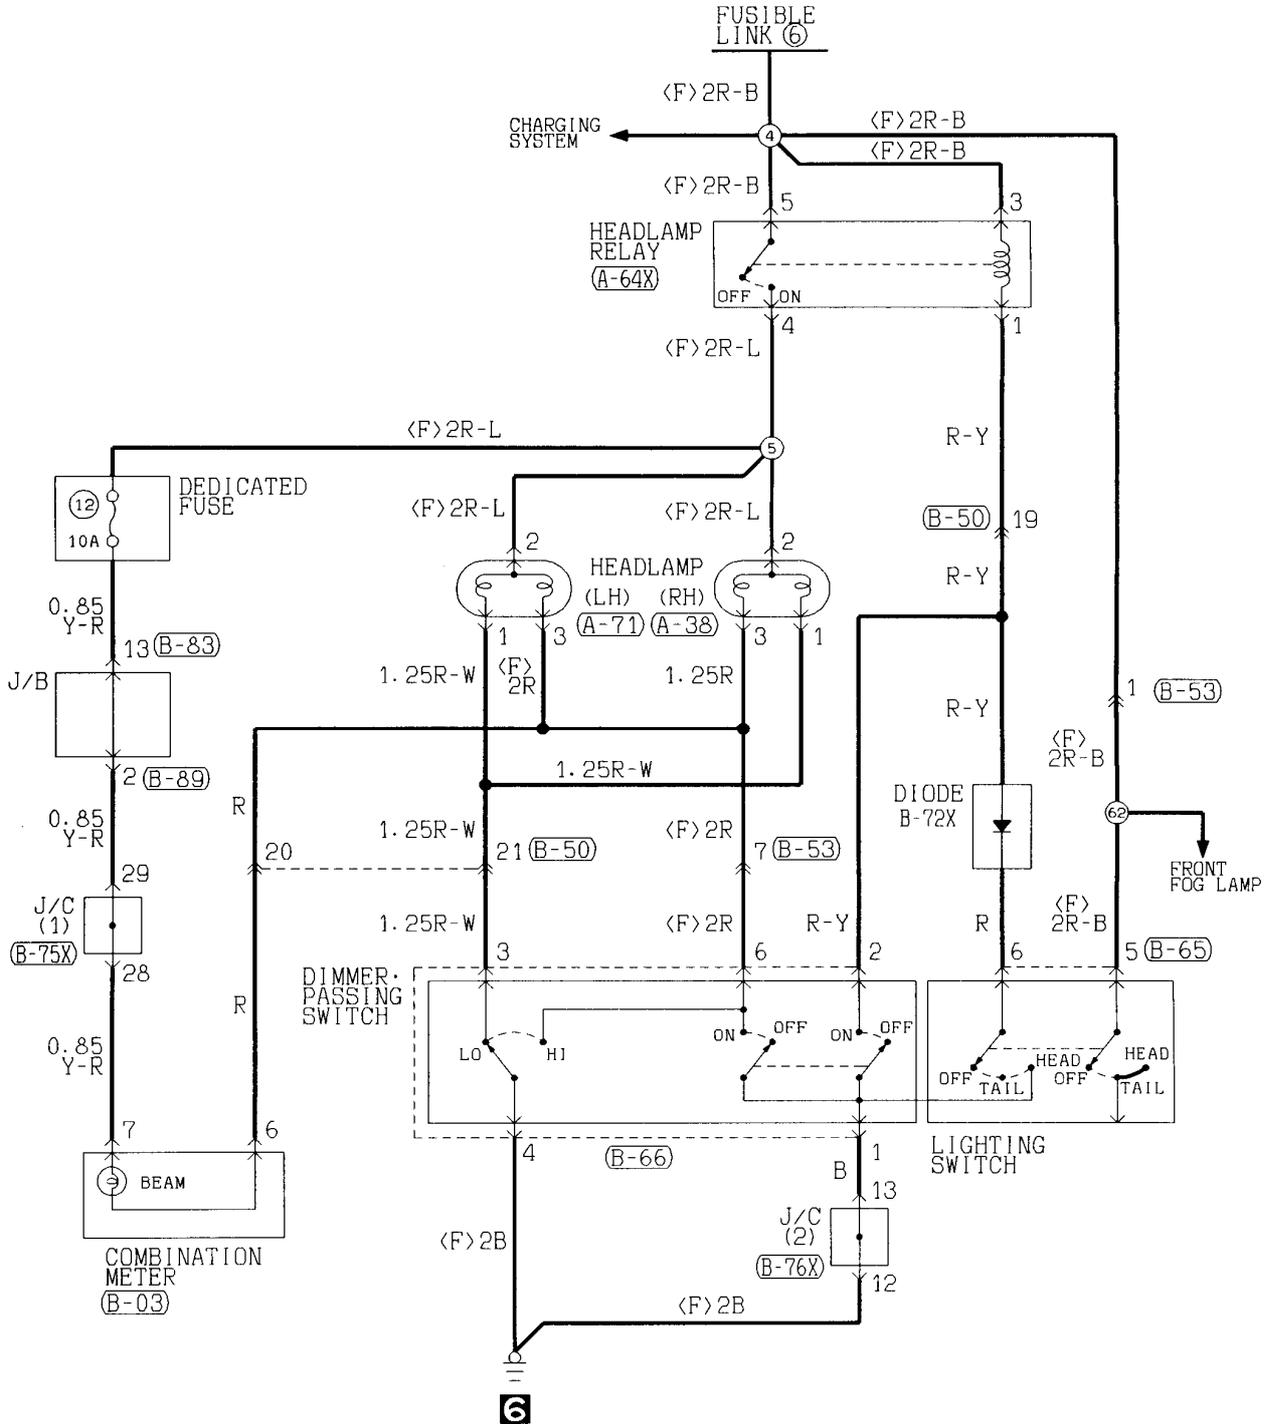

HEADLAMP

Vehicles with daytime running lamp

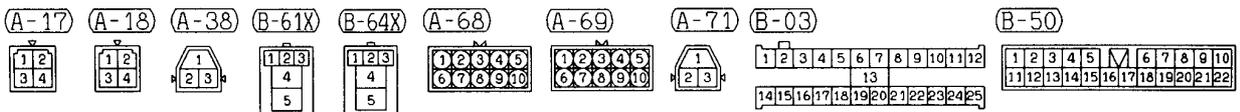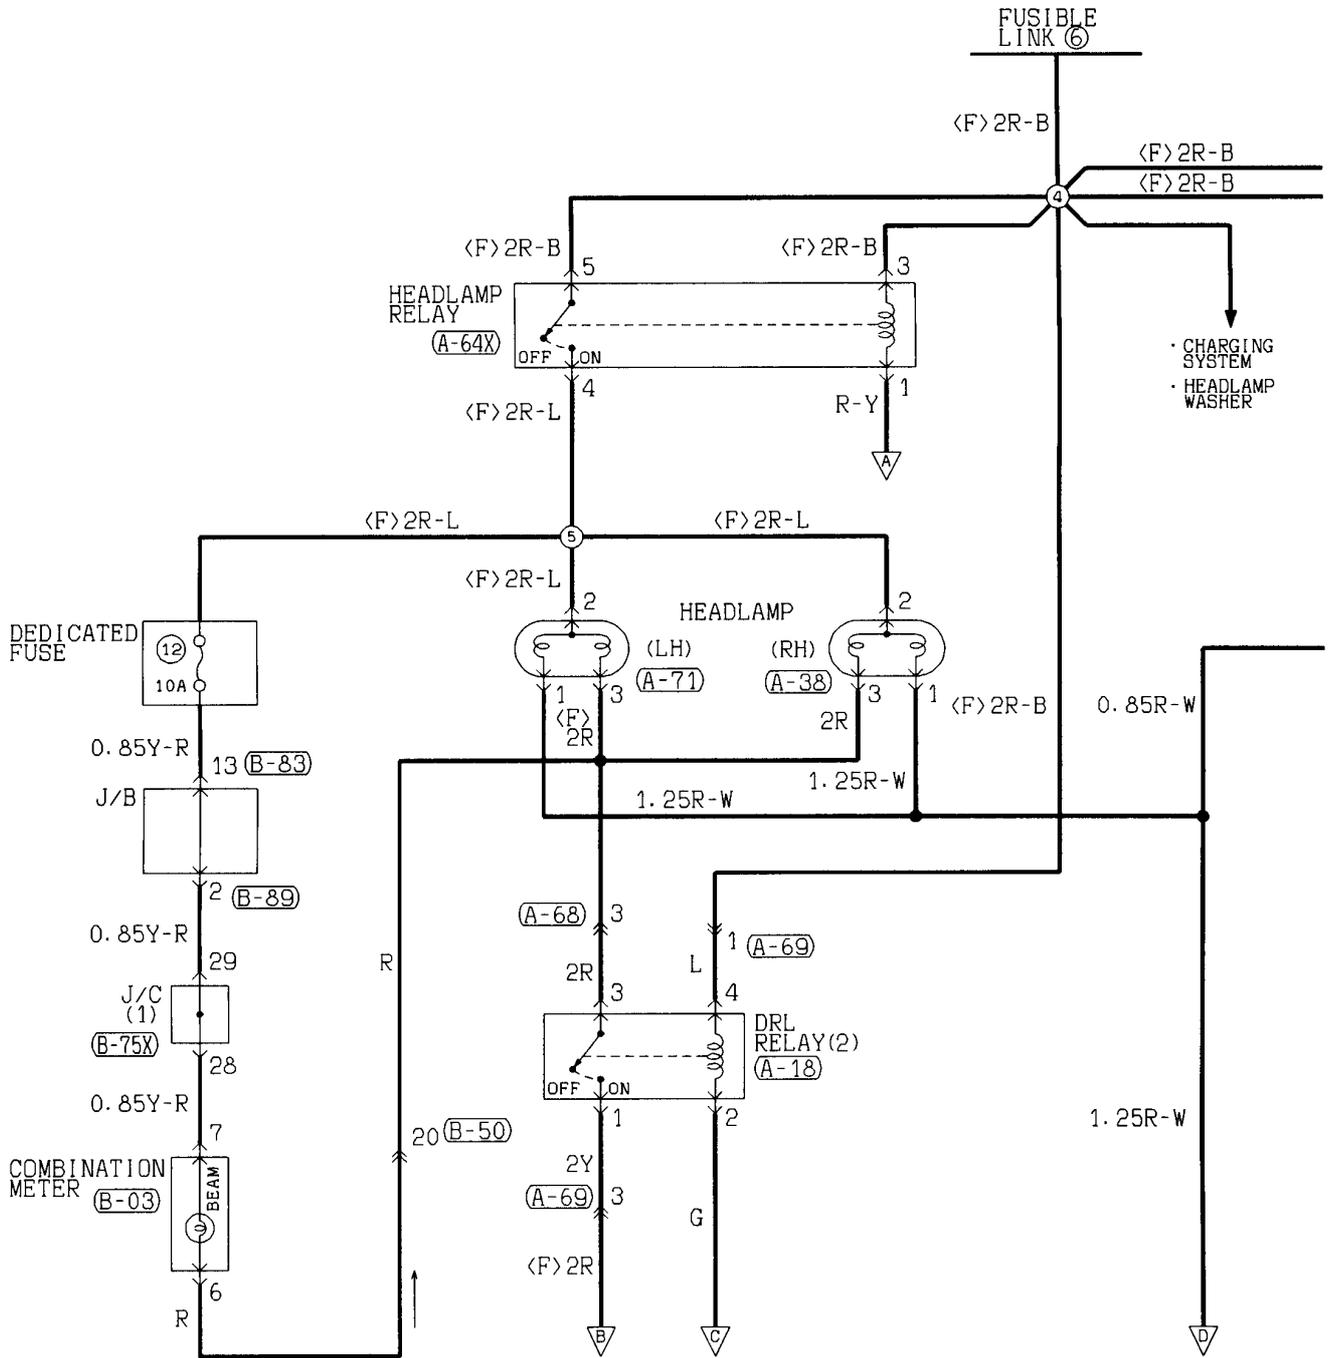

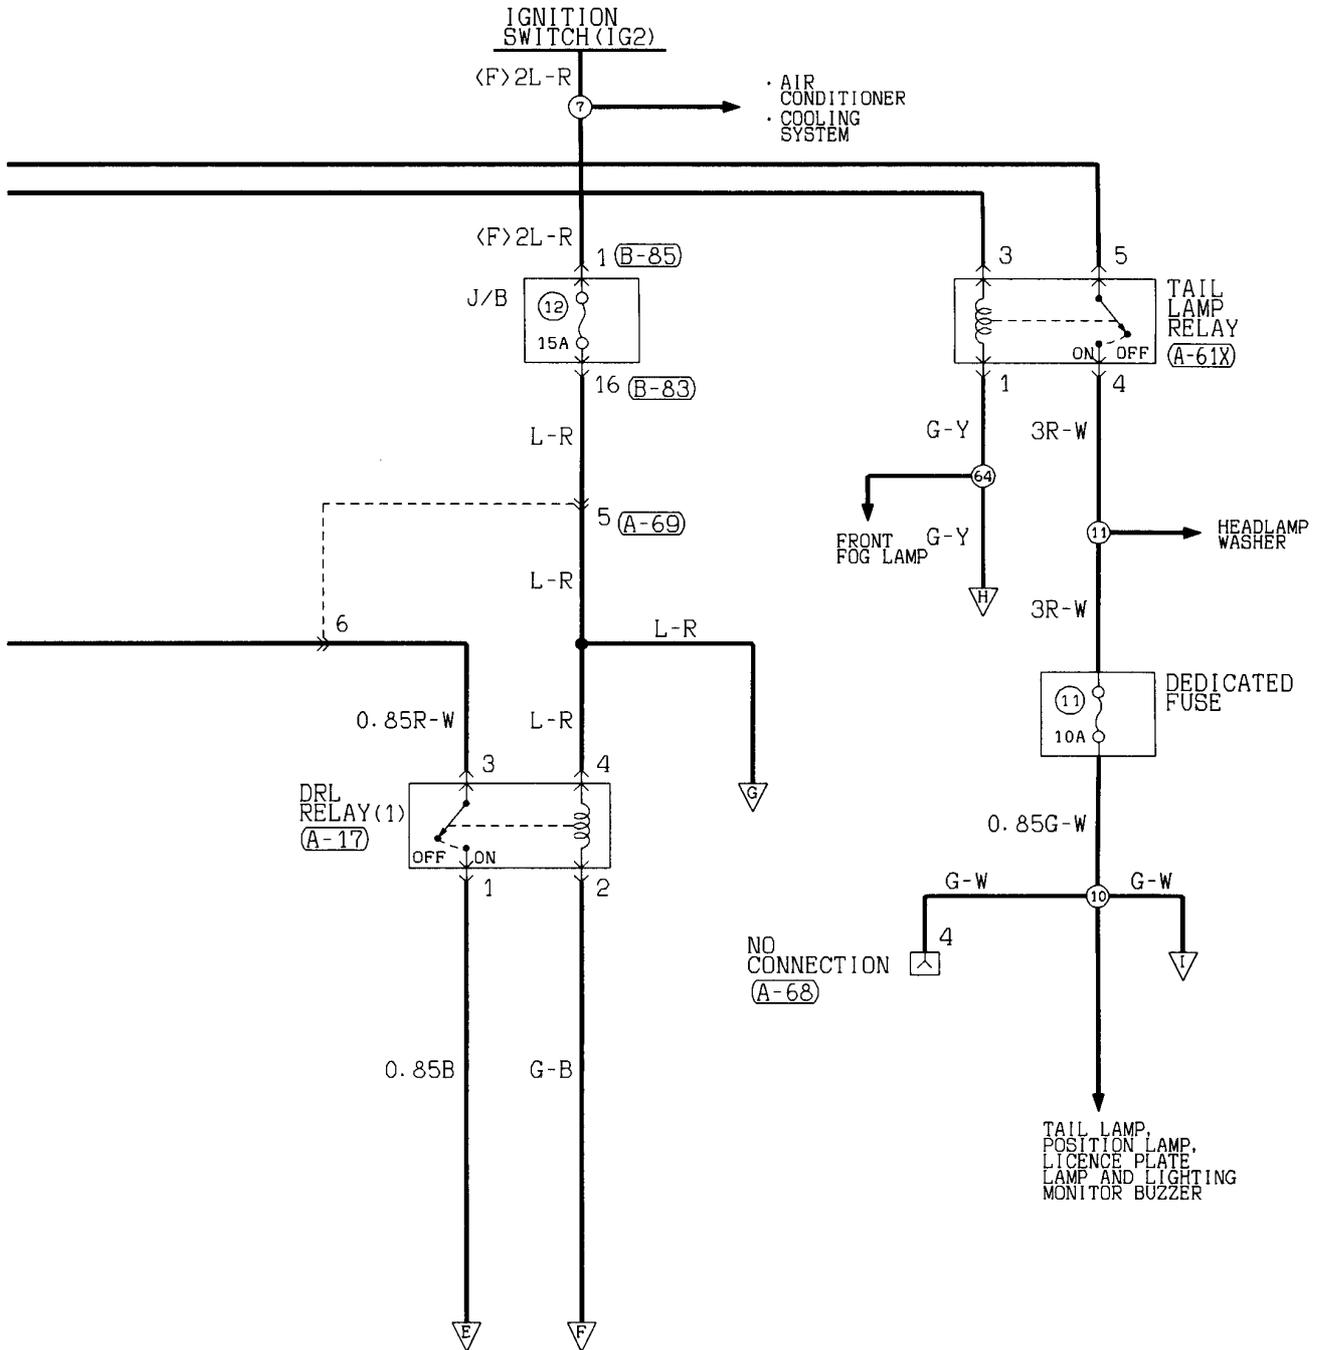

(B-53)

1	2	3	4
5	6	7	8
9	10		

(B-75X)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-83)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							








(B-85)


1	2	3
---	---	---

(B-89)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								


HEADLAMP <Vehicles with daytime running lamp> (CONTINUED)

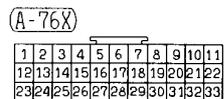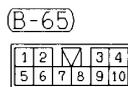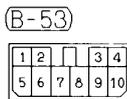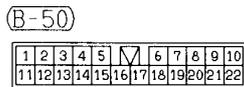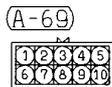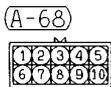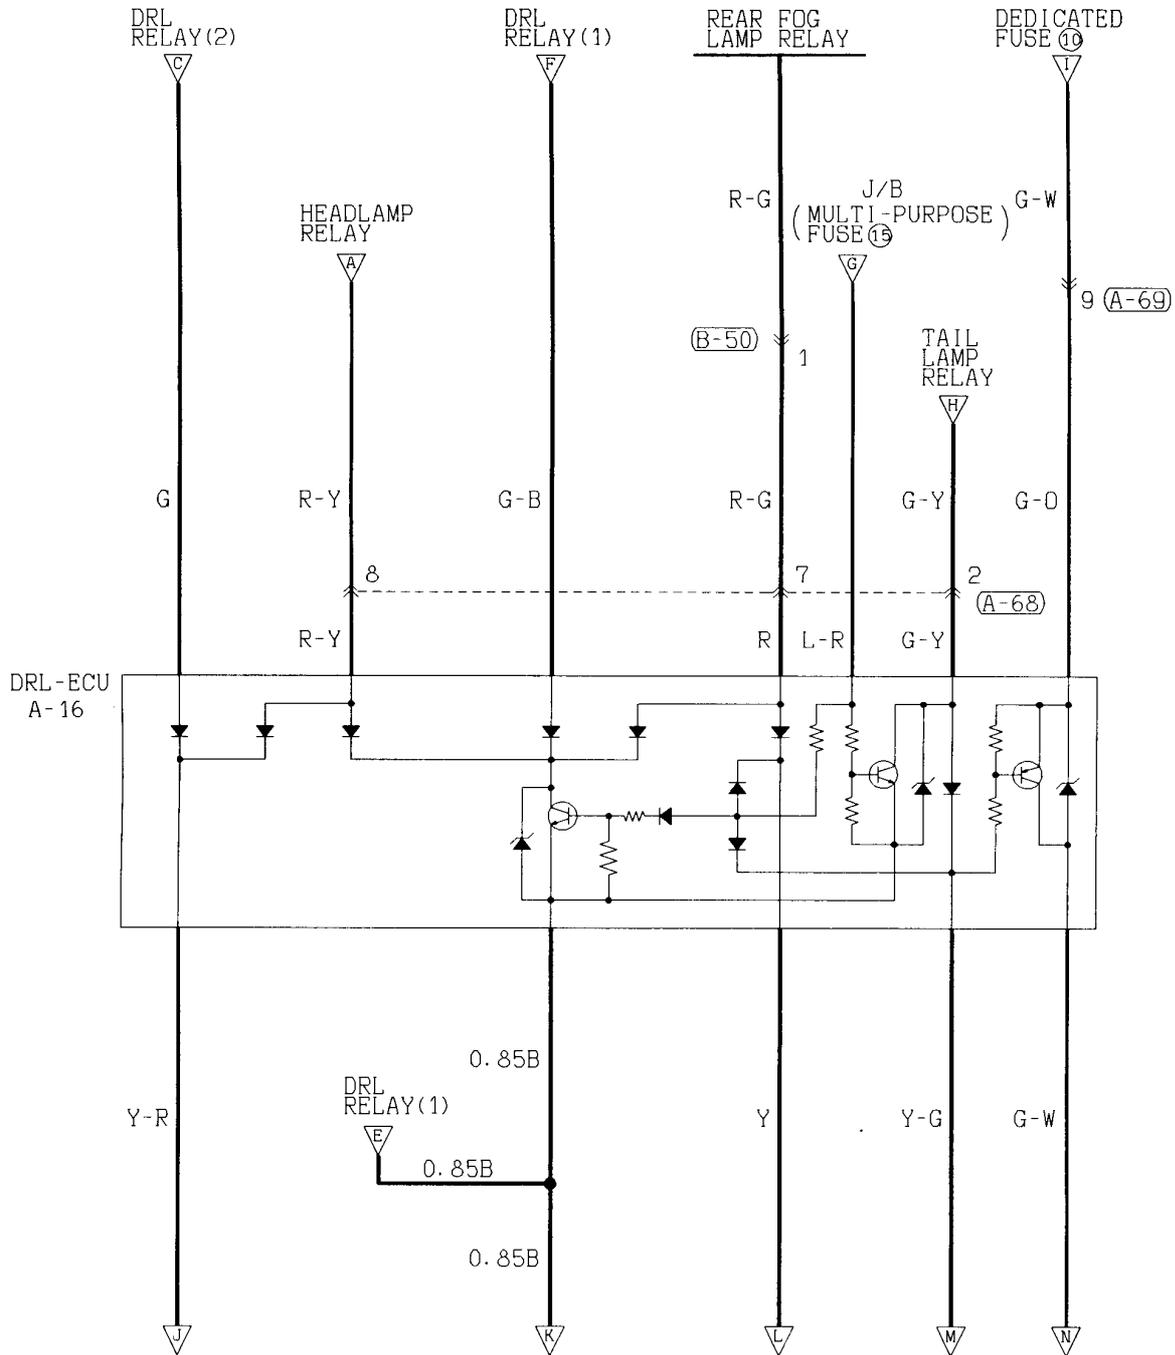

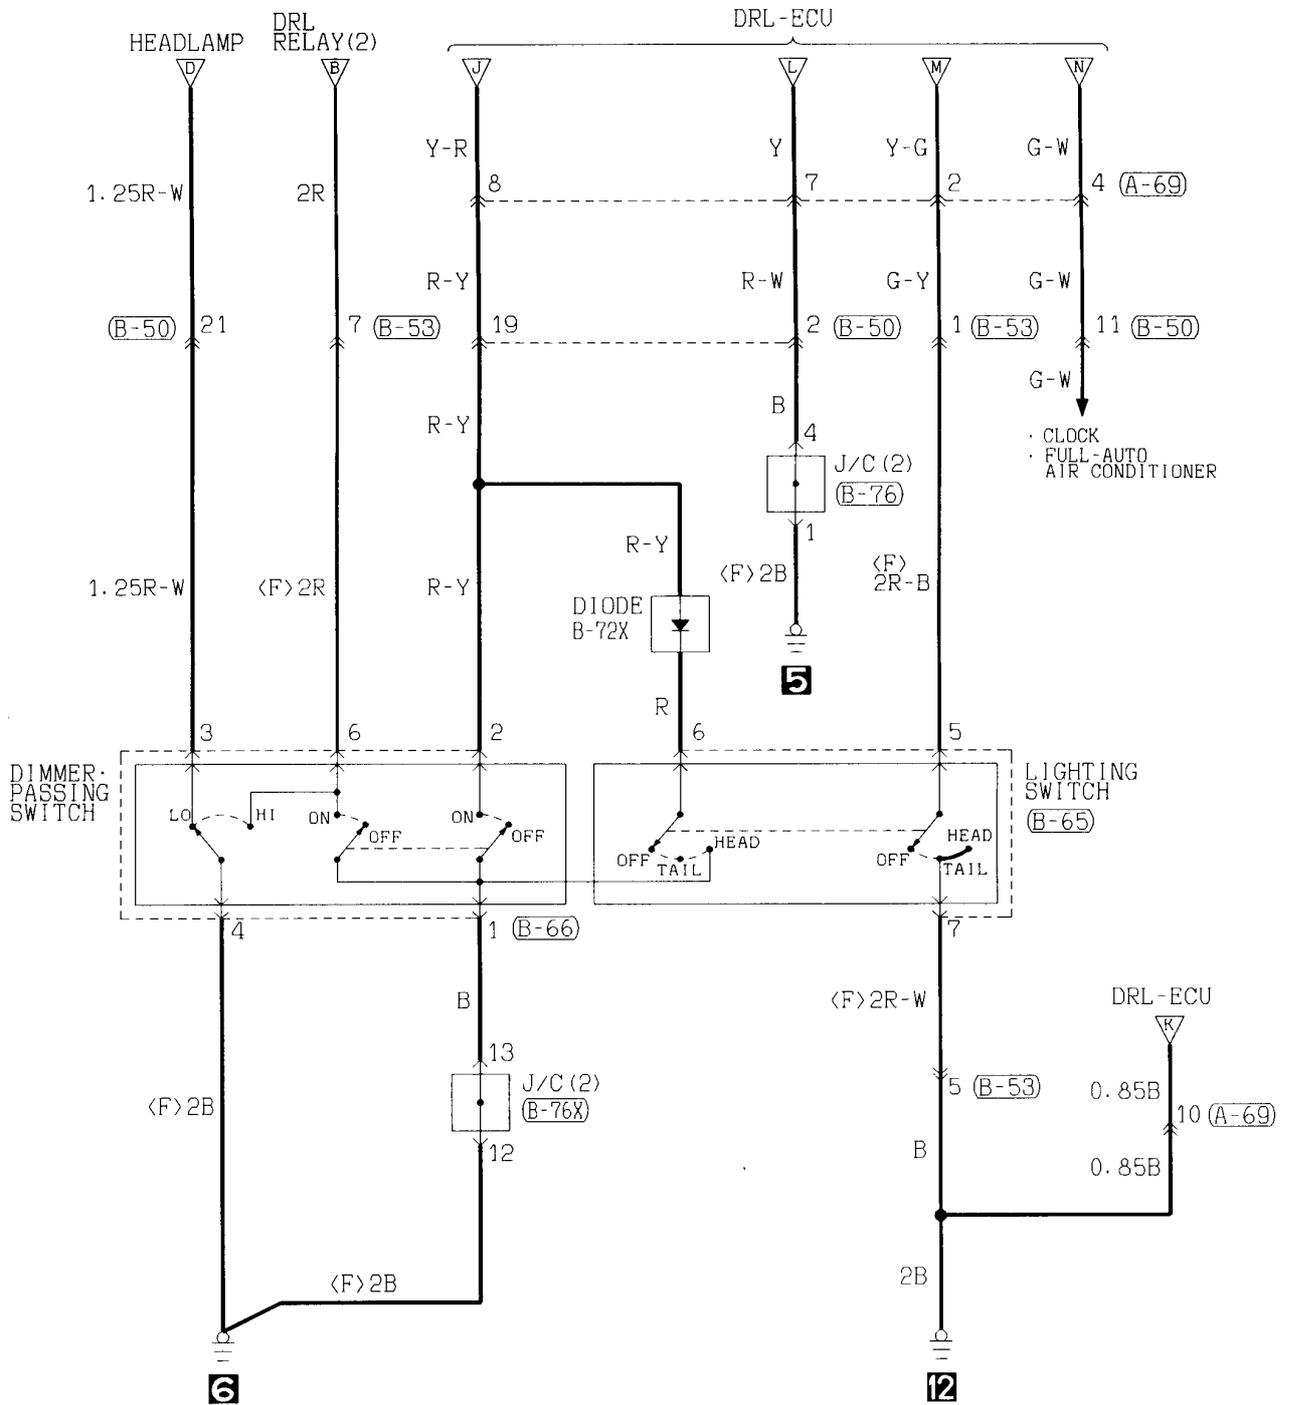

FRONT FOG LAMP

Vehicles without daytime running lamp

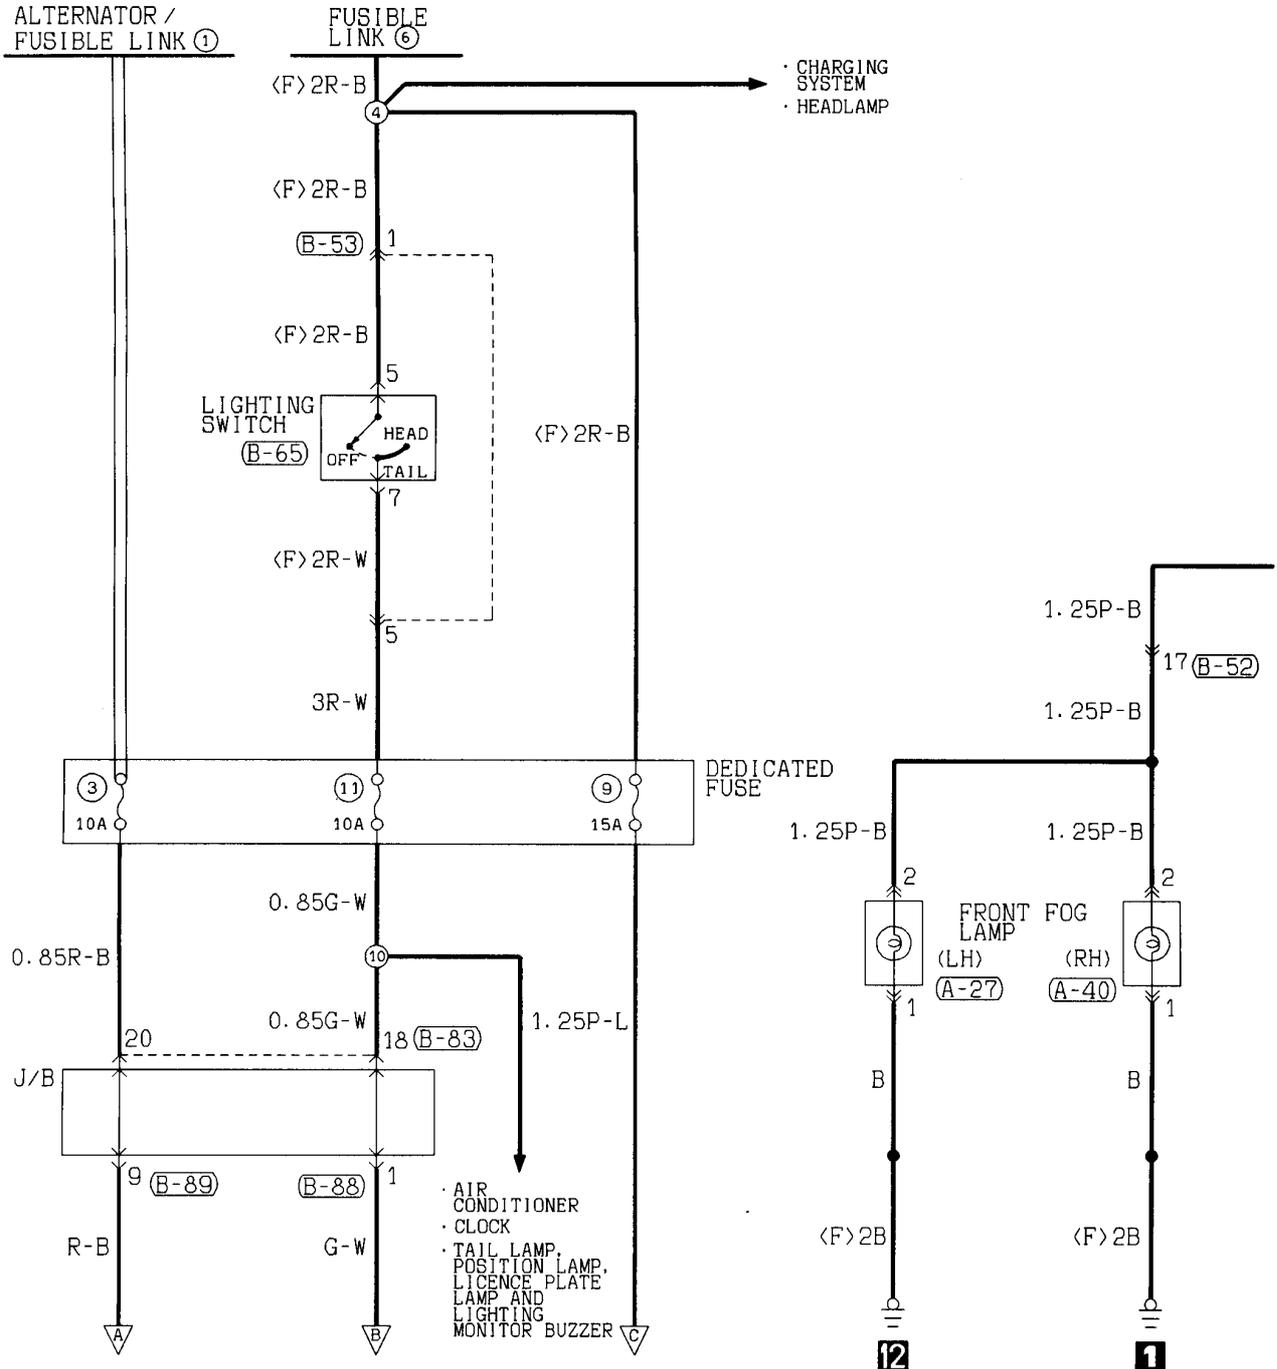

(A-27)

1	2	3	4	5	6	7	8	9	10
1	2								

(A-40)

1	2	3	4	5	6	7	8	9	10
1	2								

(B-03)

1	2	3	4	5	6	7	8	9	10	11	12
					13						
14	15	16	17	18	19	20	21	22	23	24	25

(B-05)

31	32	33	34	35	36	37	38	39	40	41	42
					43						
44	45	46	47	48	49	50	51	52	53	54	55

(B-47)

1	2	3	4
5	6	7	8
9	10	11	12

(B-52)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

(B-53)


1	2	3	4
5	6	7	8
9	10		

(B-89)


1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

CIRCUIT DIAGRAM

4-77

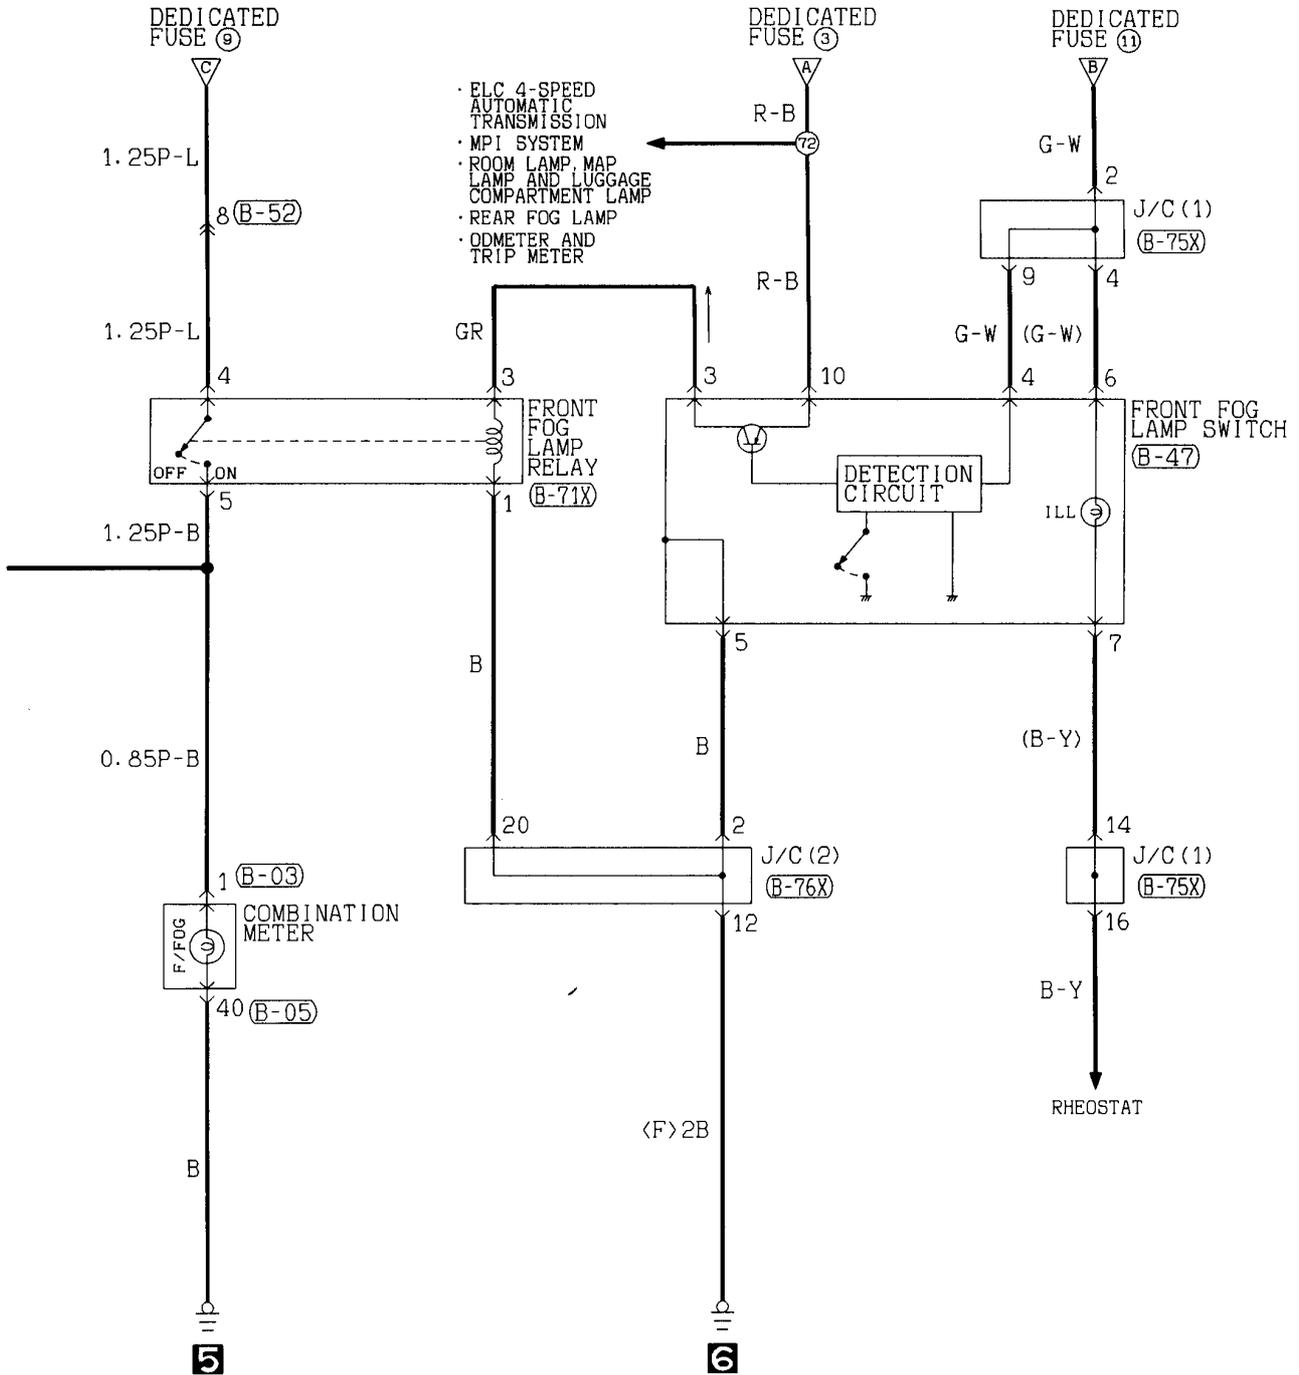


(B-65)

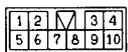


(B-71X)




(B-75X)

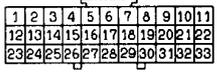


(B-76X)

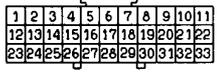

(B-83)


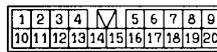



(B-88)

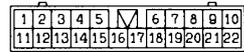

FRONT FOG LAMP

Vehicles with daytime running lamp

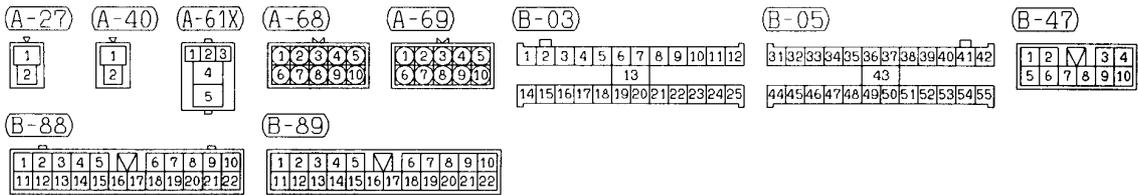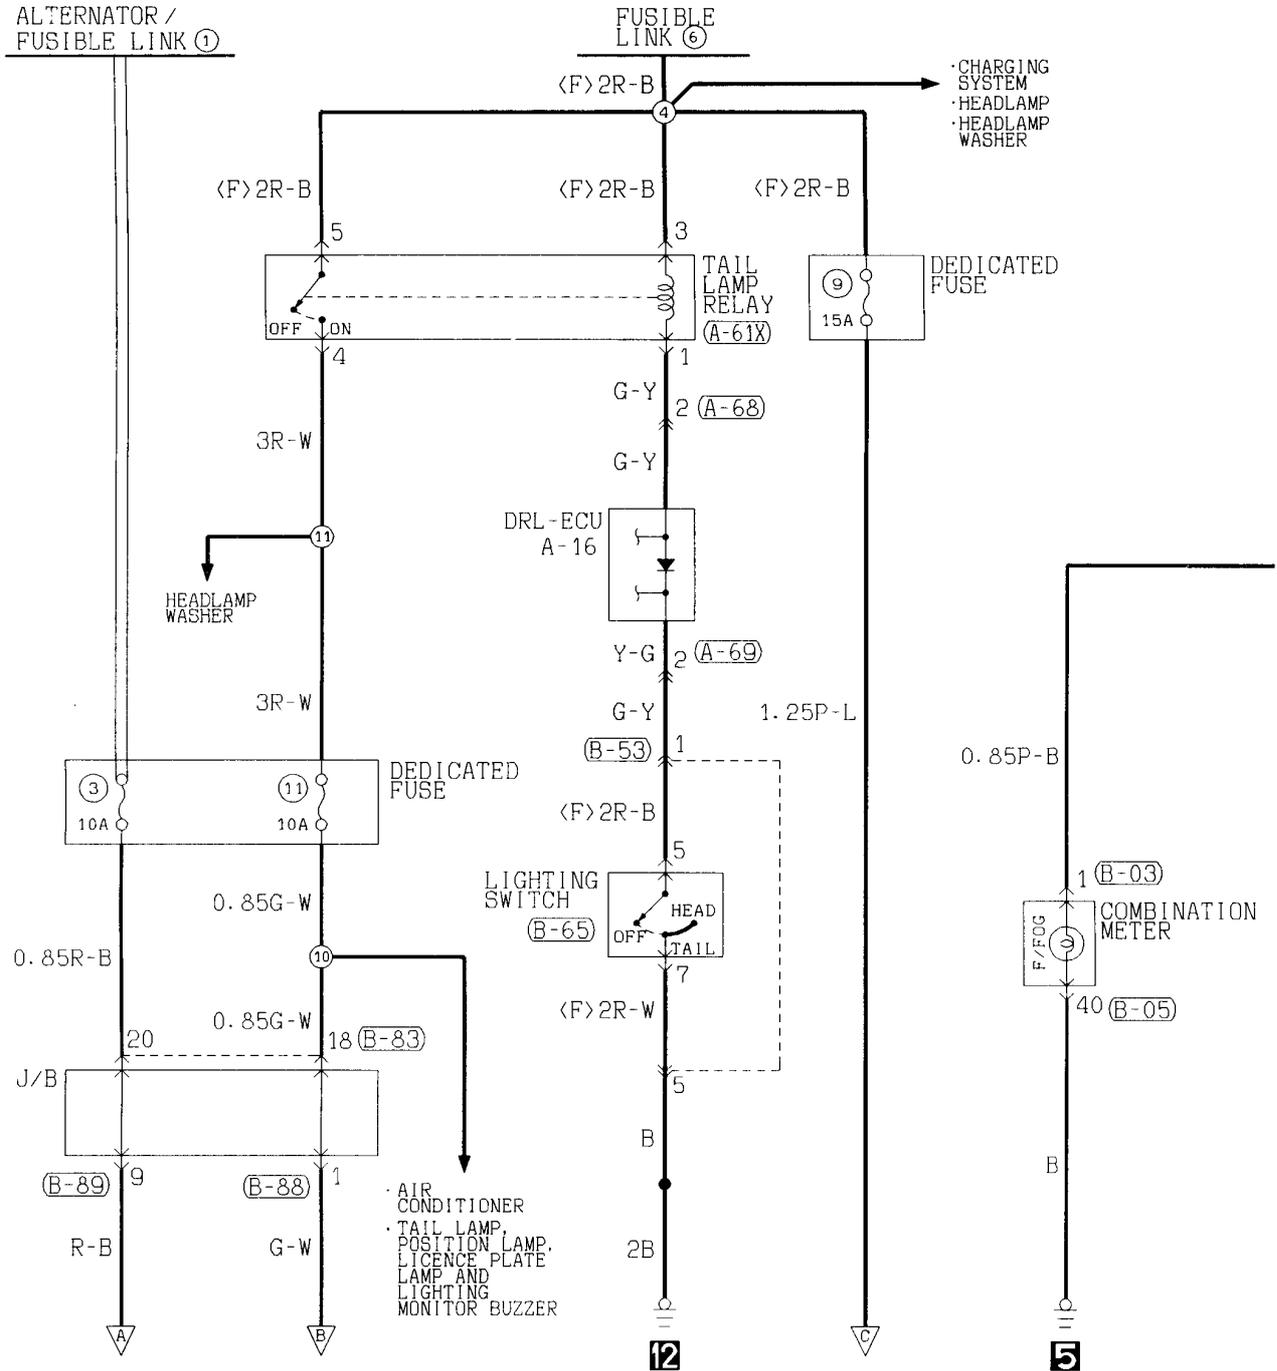

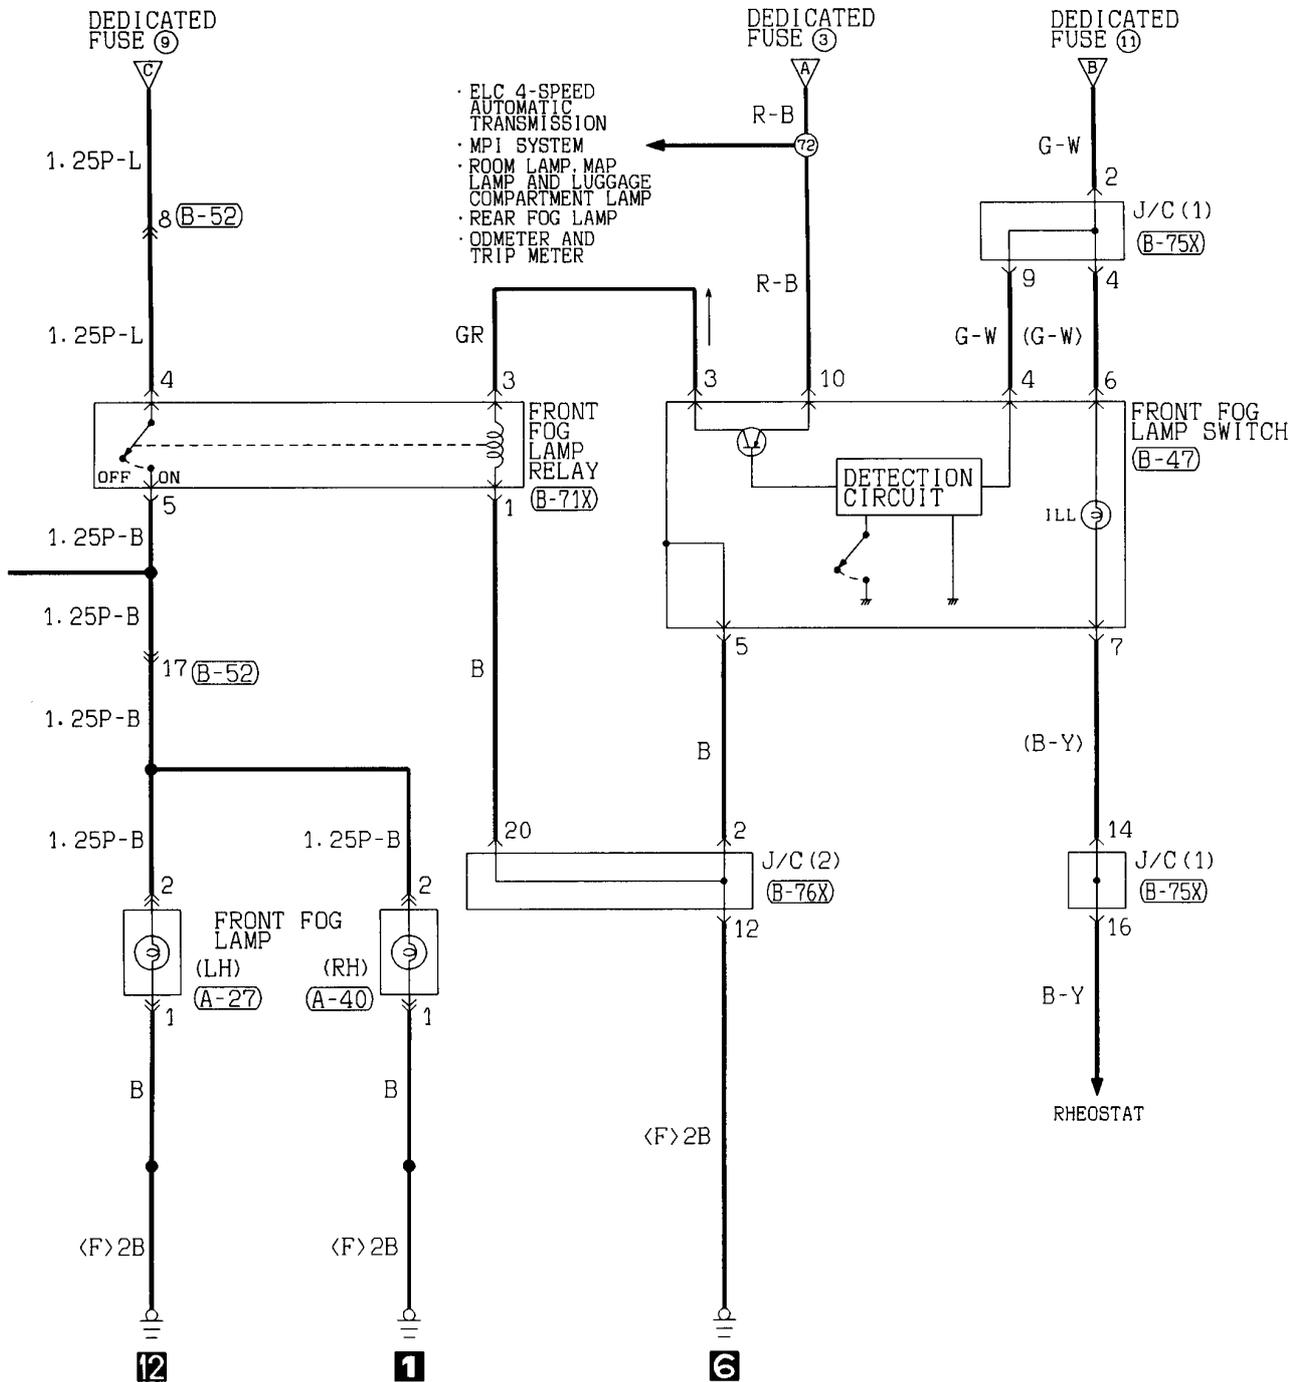

(B-52)

1	2	3	4	M	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

(B-53)

1	2	3	4		
5	6	7	8	9	10

(B-65)

1	2	M	3	4	
5	6	7	8	9	10

(B-71X)

1	2	3
4		
5		

(B-75X)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-76X)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-83)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

REAR FOG LAMP

Vehicles without daytime running lamp

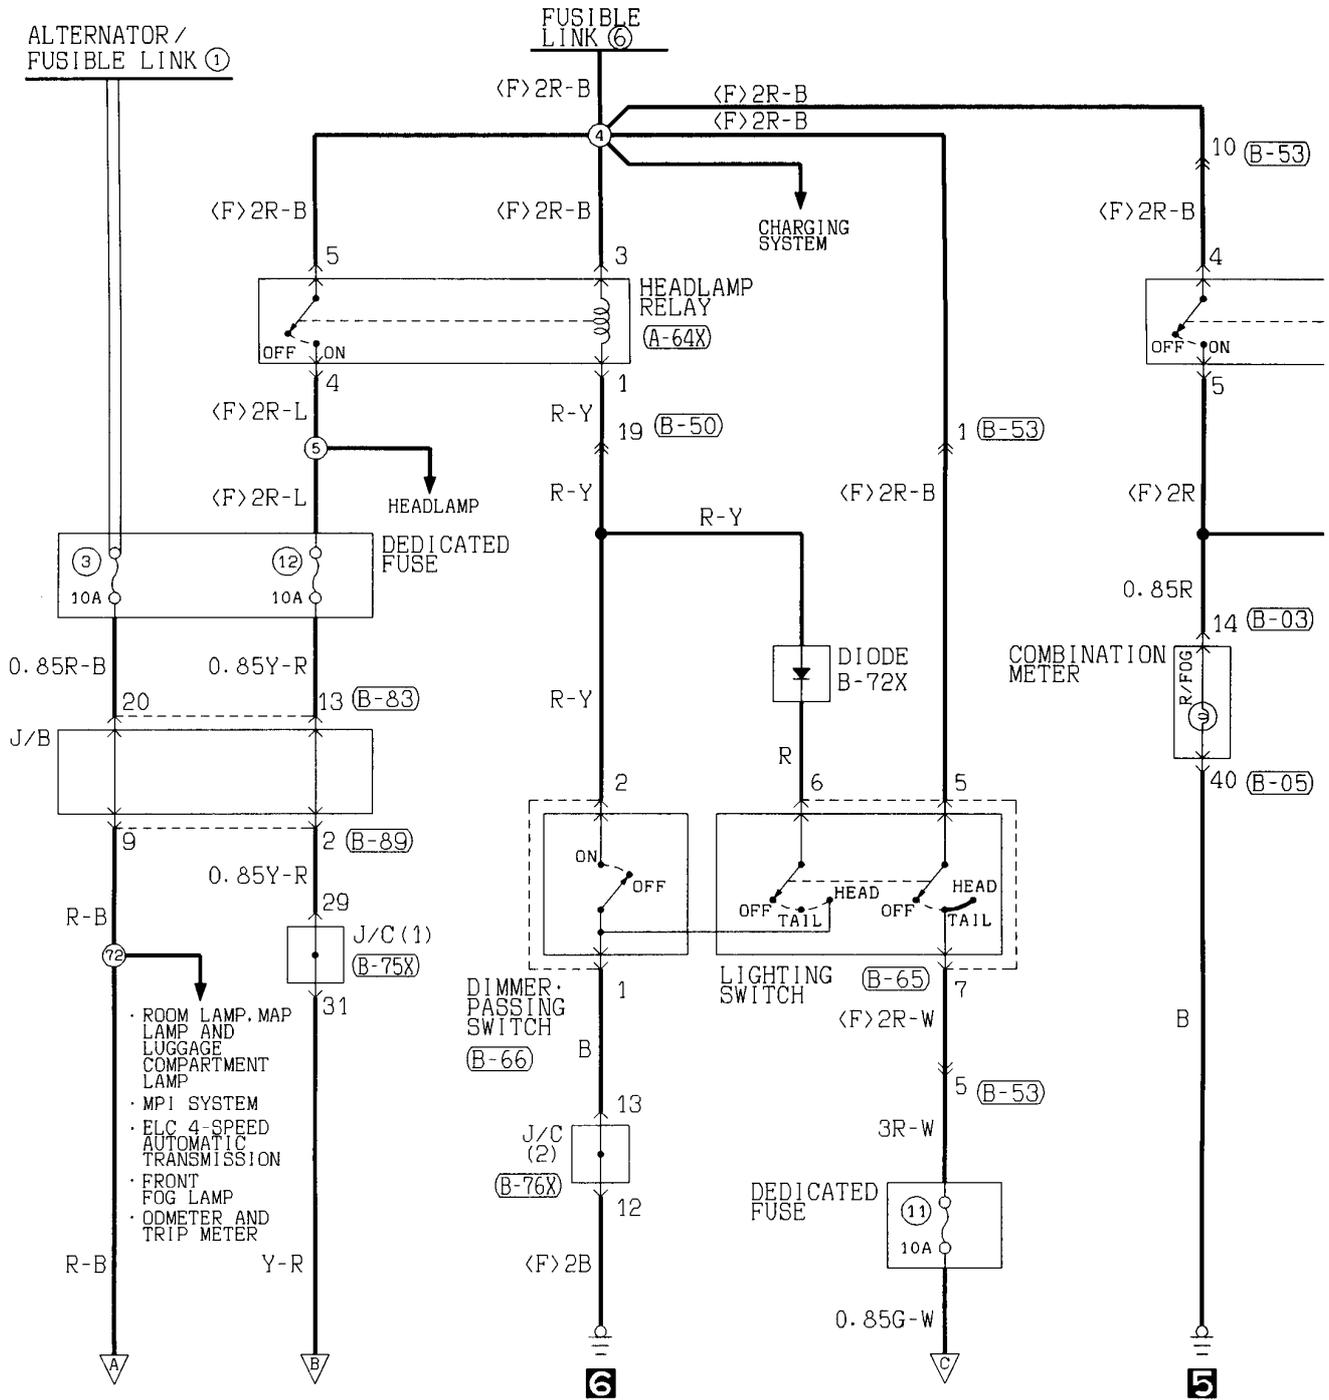

(A-64X)

1	2	3
4		
5		

(B-03)

1	2	3	4	5	6	7	8	9	10	11	12
13											
14	15	16	17	18	19	20	21	22	23	24	25

(B-05)

31	32	33	34	35	36	37	38	39	40	41	42
43											
44	45	46	47	48	49	50	51	52	53	54	55

(B-47)

1	2	M	3	4	
5	6	7	8	9	10

(B-50)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(B-53)

1	2		3	4	
5	6	7	8	9	10


(B-65)

1	2	M	3	4	
5	6	7	8	9	10

(B-89)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22



REAR FOG LAMP <Vehicles without daytime running lamp> (CONTINUED)

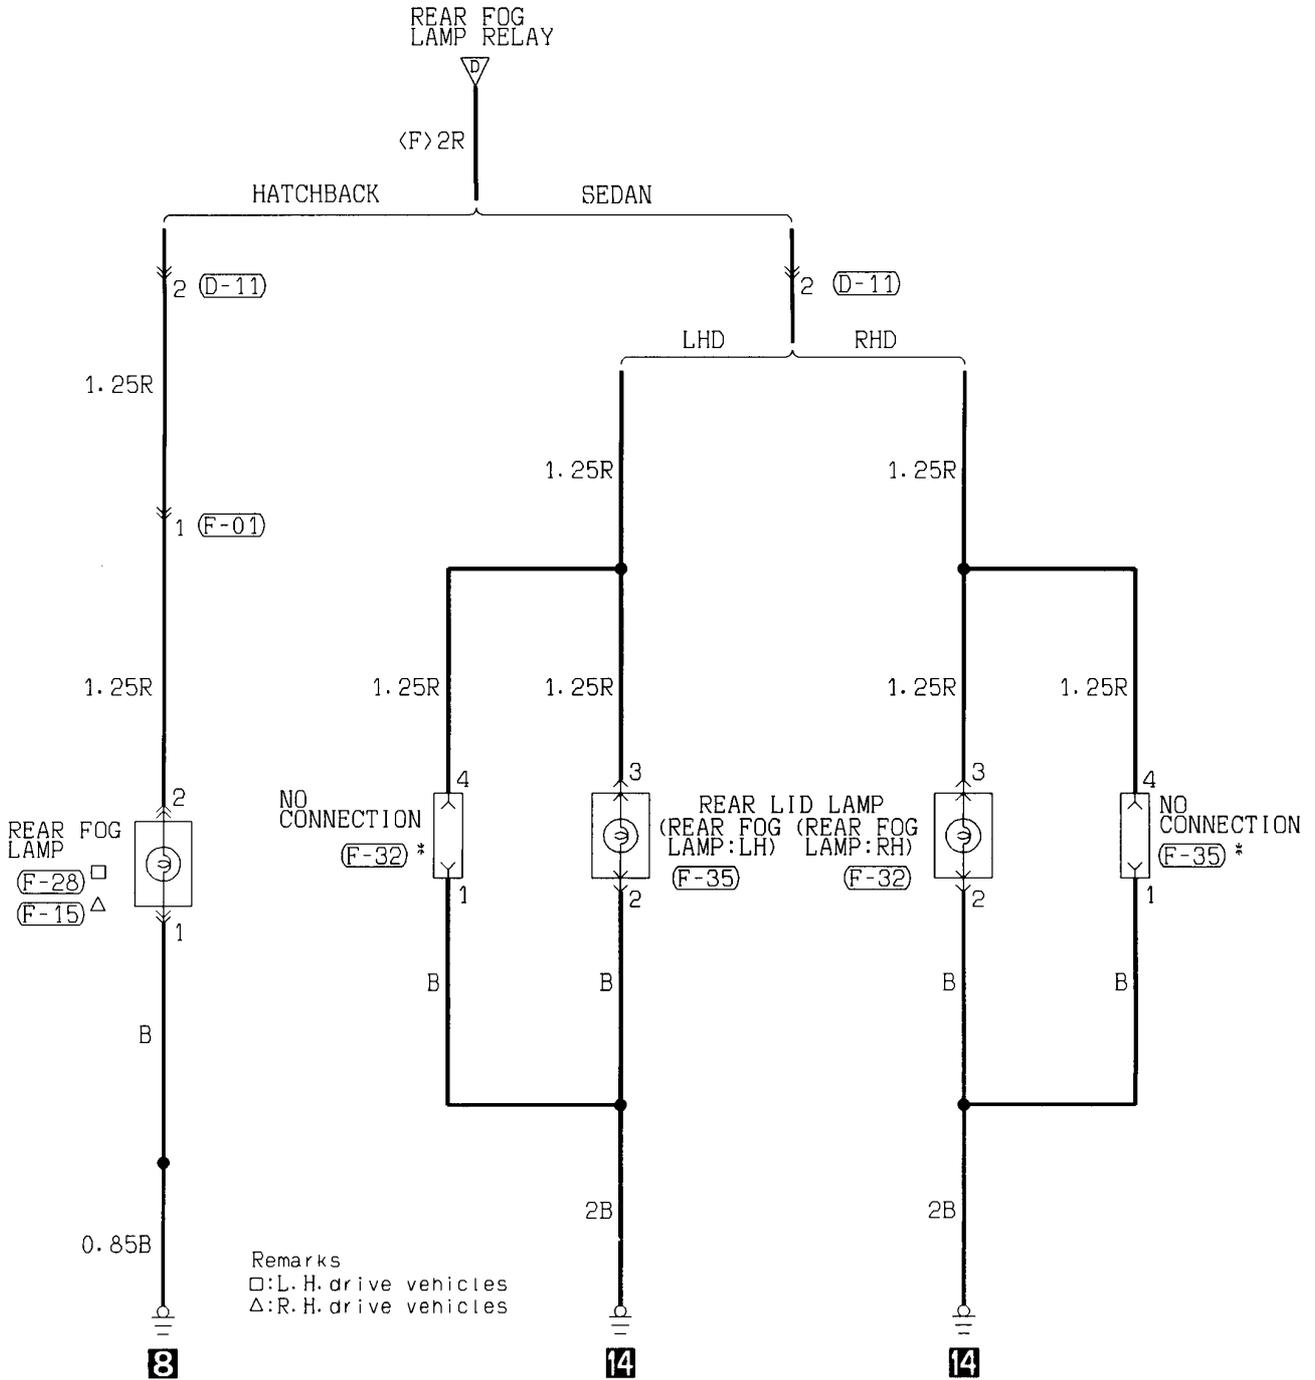


D-11	F-01	F-15	F-28	F-32	F-32 *	F-35	F-35 *																																																													
<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr> <tr><td>21</td><td>22</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22									<table border="1"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td></td></tr> </table>	1	2	3	4	5	6	7	8		<table border="1"> <tr><td>1</td><td>2</td></tr> </table>	1	2	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4
1	2	3	4	5	6	7	8	9	10																																																											
11	12	13	14	15	16	17	18	19	20																																																											
21	22																																																																			
1	2	3																																																																		
4	5	6																																																																		
7	8																																																																			
1	2																																																																			
1	2																																																																			
3	4																																																																			
1	2																																																																			
3	4																																																																			
1	2																																																																			
3	4																																																																			
1	2																																																																			
3	4																																																																			
1	2																																																																			
3	4																																																																			

REAR FOG LAMP

Vehicles with daytime running lamp

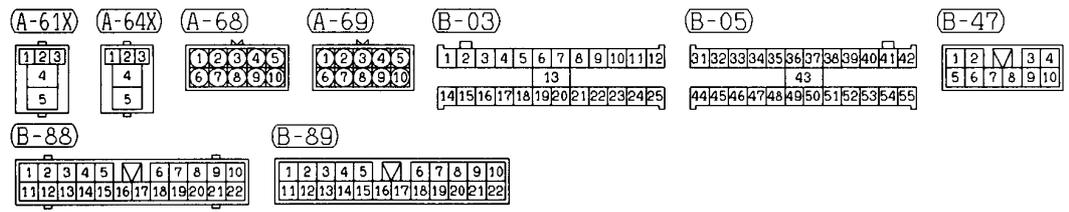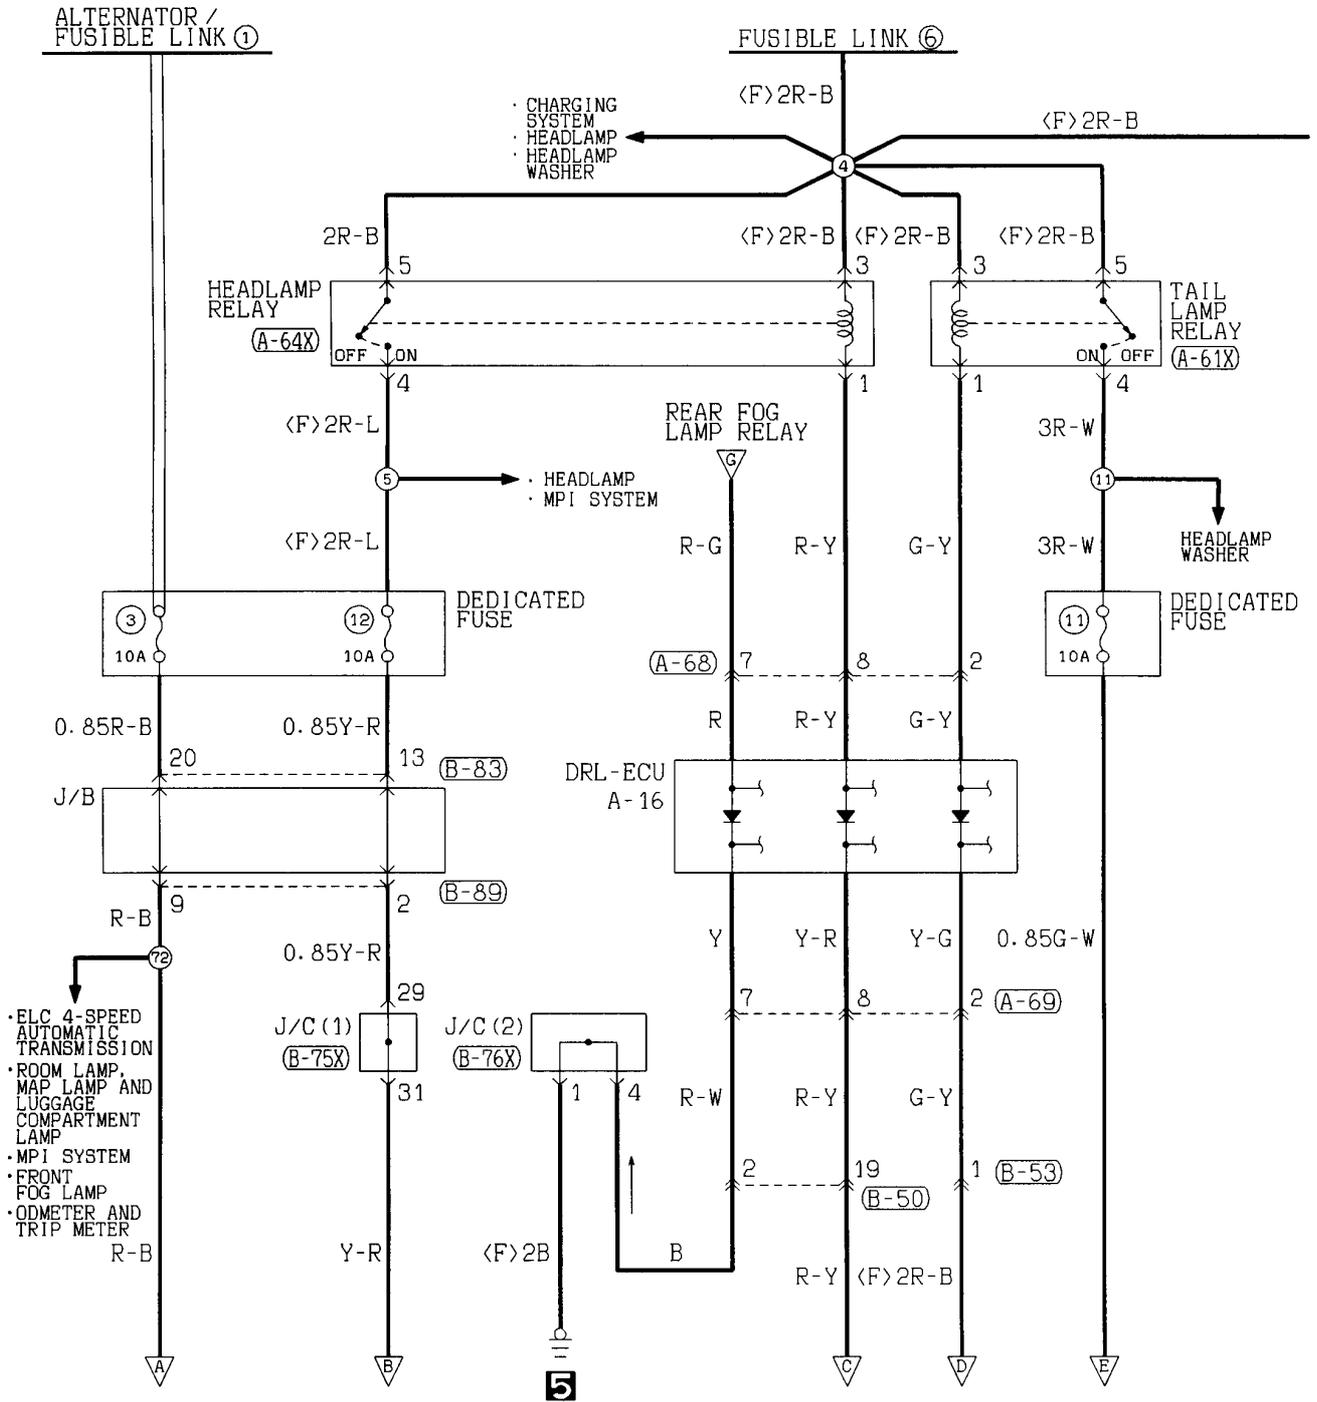


REAR FOG LAMP <Vehicles with daytime running lamp> (CONTINUED)

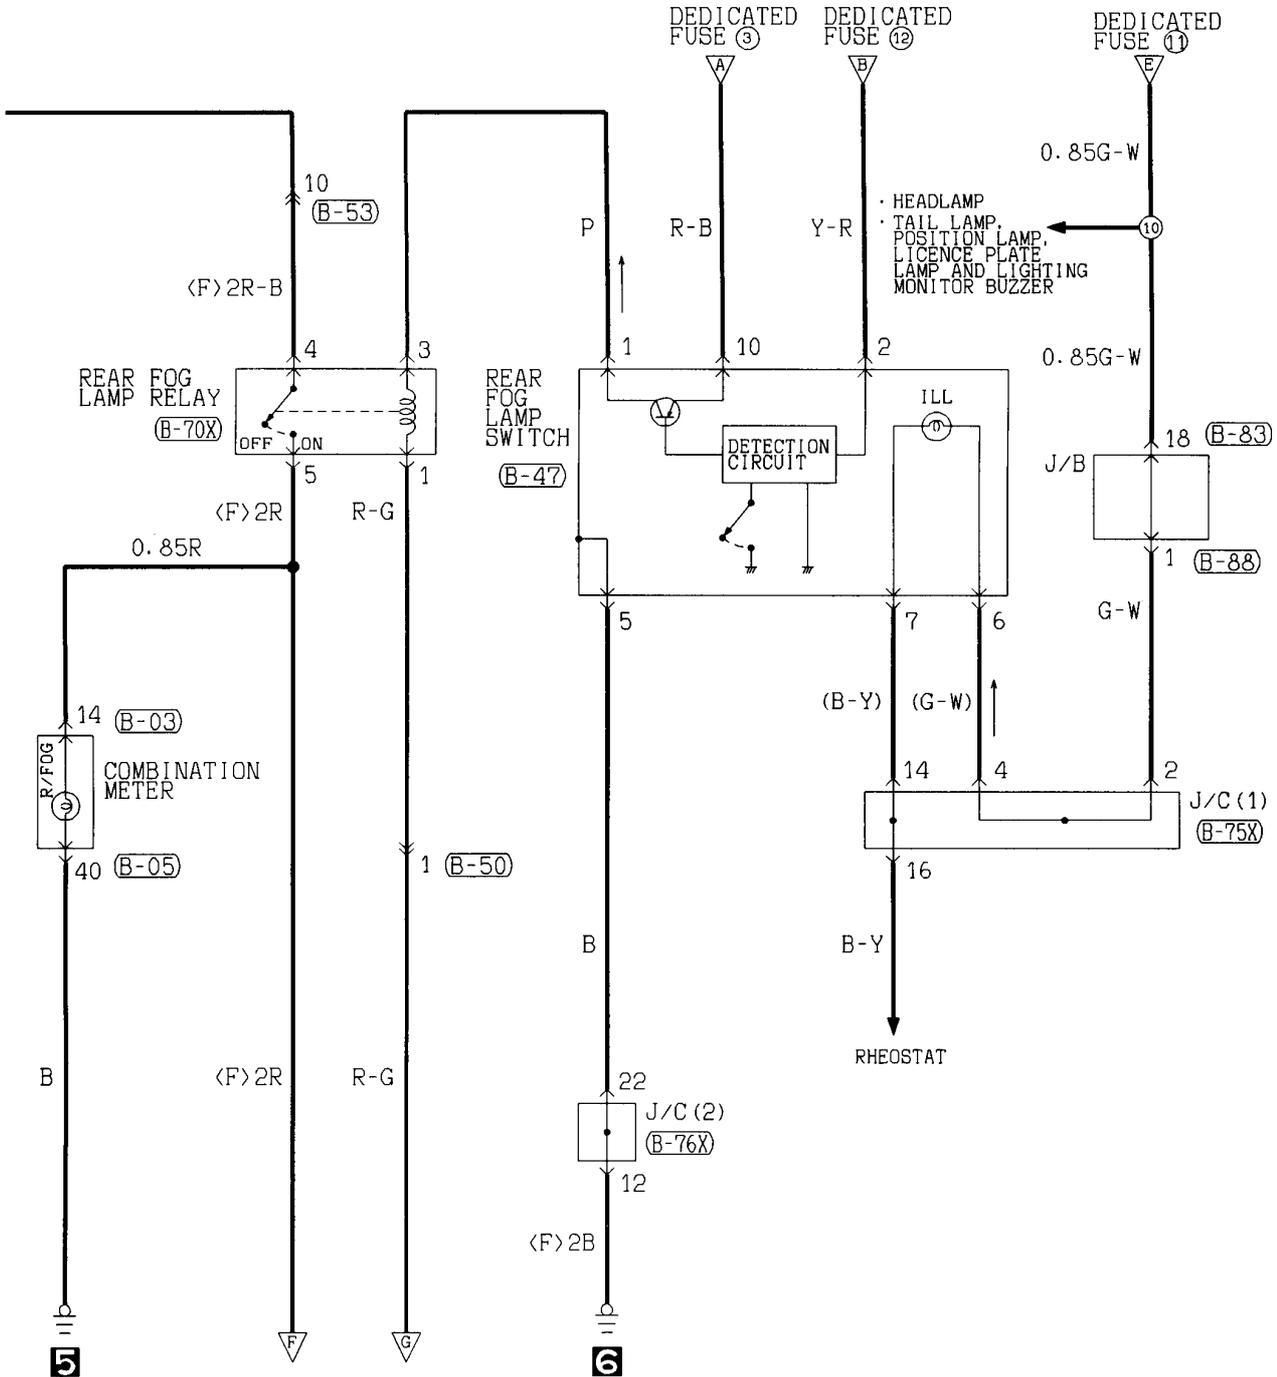

(B-50)	(B-53)	(B-70X)	(B-75X)	(B-76X)	(B-83)																																																																																																																																																
<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr> <tr><td>21</td><td>22</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22									<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> <tr><td>9</td><td>10</td><td></td><td></td></tr> </table>	1	2	3	4	5	6	7	8	9	10			<table border="1"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td></td><td></td></tr> <tr><td>5</td><td></td><td></td></tr> </table>	1	2	3	4			5			<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td></tr> <tr><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> <tr><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td></tr> <tr><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> <tr><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr> <tr><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td></tr> <tr><td>19</td><td>20</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20							
1	2	3	4	5	6	7	8	9	10																																																																																																																																												
11	12	13	14	15	16	17	18	19	20																																																																																																																																												
21	22																																																																																																																																																				
1	2	3	4																																																																																																																																																		
5	6	7	8																																																																																																																																																		
9	10																																																																																																																																																				
1	2	3																																																																																																																																																			
4																																																																																																																																																					
5																																																																																																																																																					
1	2	3	4	5	6	7	8	9	10	11																																																																																																																																											
12	13	14	15	16	17	18	19	20	21	22																																																																																																																																											
23	24	25	26	27	28	29	30	31	32	33																																																																																																																																											
1	2	3	4	5	6	7	8	9	10	11																																																																																																																																											
12	13	14	15	16	17	18	19	20	21	22																																																																																																																																											
23	24	25	26	27	28	29	30	31	32	33																																																																																																																																											
1	2	3	4	5	6	7	8	9																																																																																																																																													
10	11	12	13	14	15	16	17	18																																																																																																																																													
19	20																																																																																																																																																				

Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

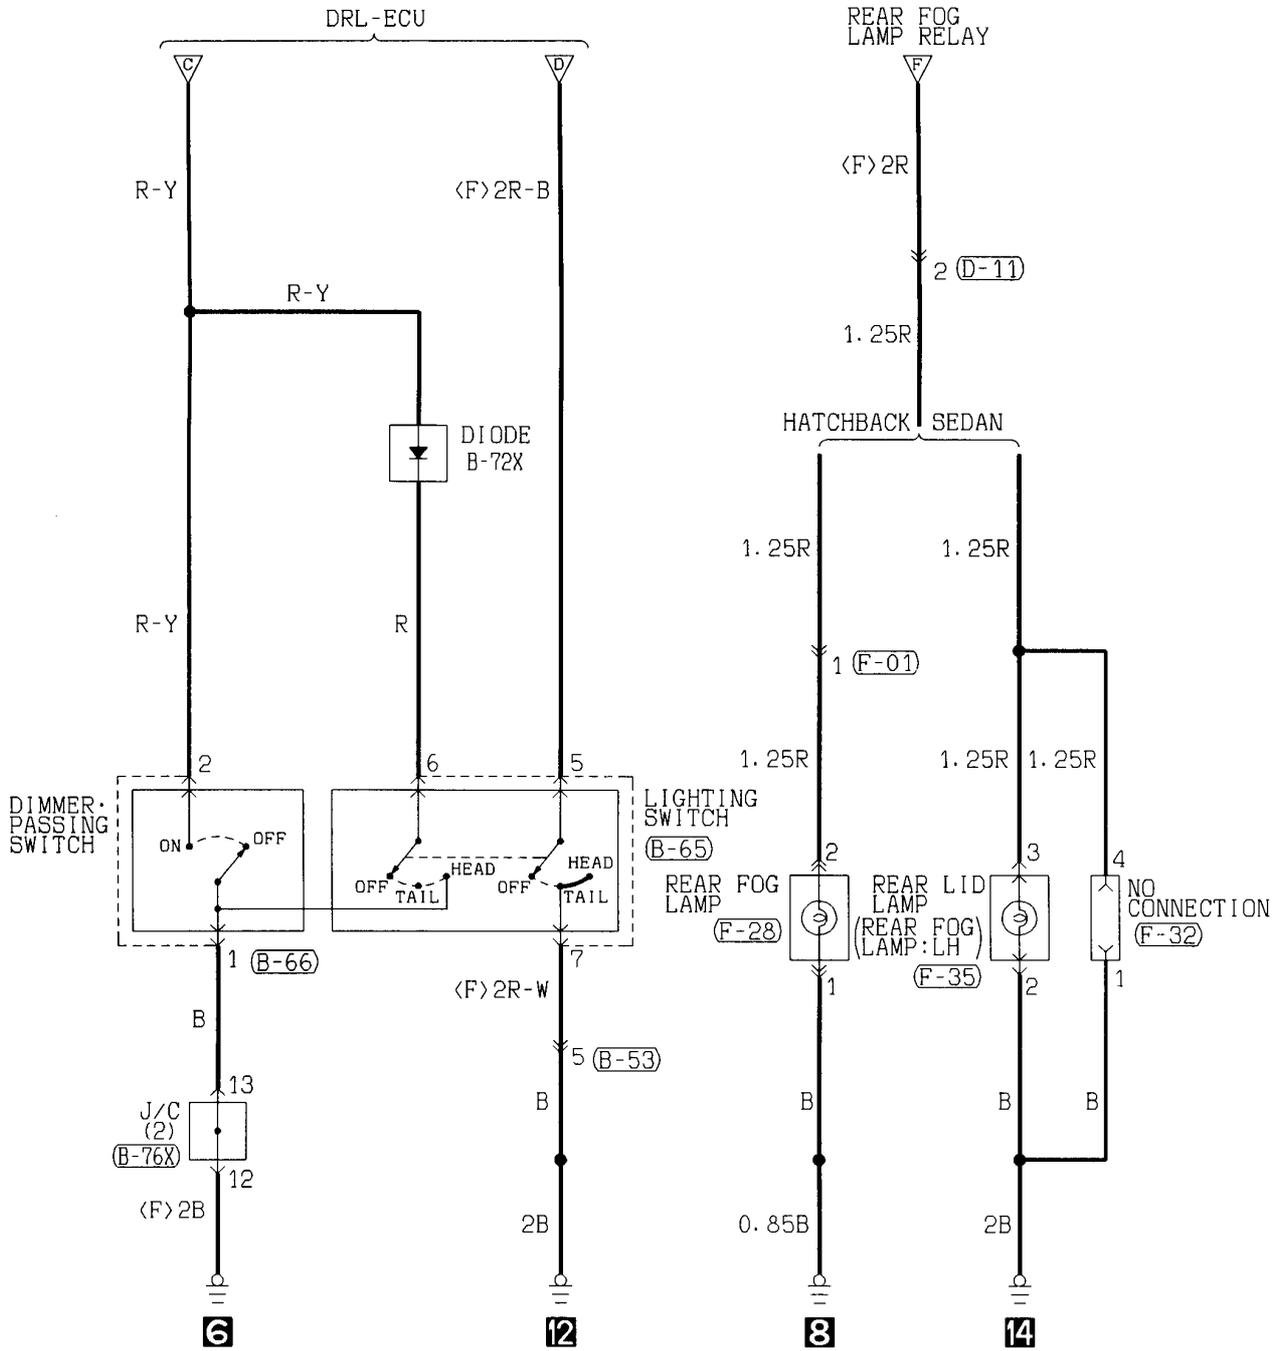

B-53

1	2	3	4
5	6	7	8
9	10		

B-65

1	2	3	4
5	6	7	8
9	10		

B-66

1	2
3	4
5	6

B-76X

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

D-11

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

F-01

1	2	3
4	5	6
7	8	

F-28

1	2
3	4


F-32

1	2
3	4

F-35

1	2
3	4

ROOM LAMP, MAP LAMP AND LUGGAGE COMPARTMENT LAMP
Hatchback

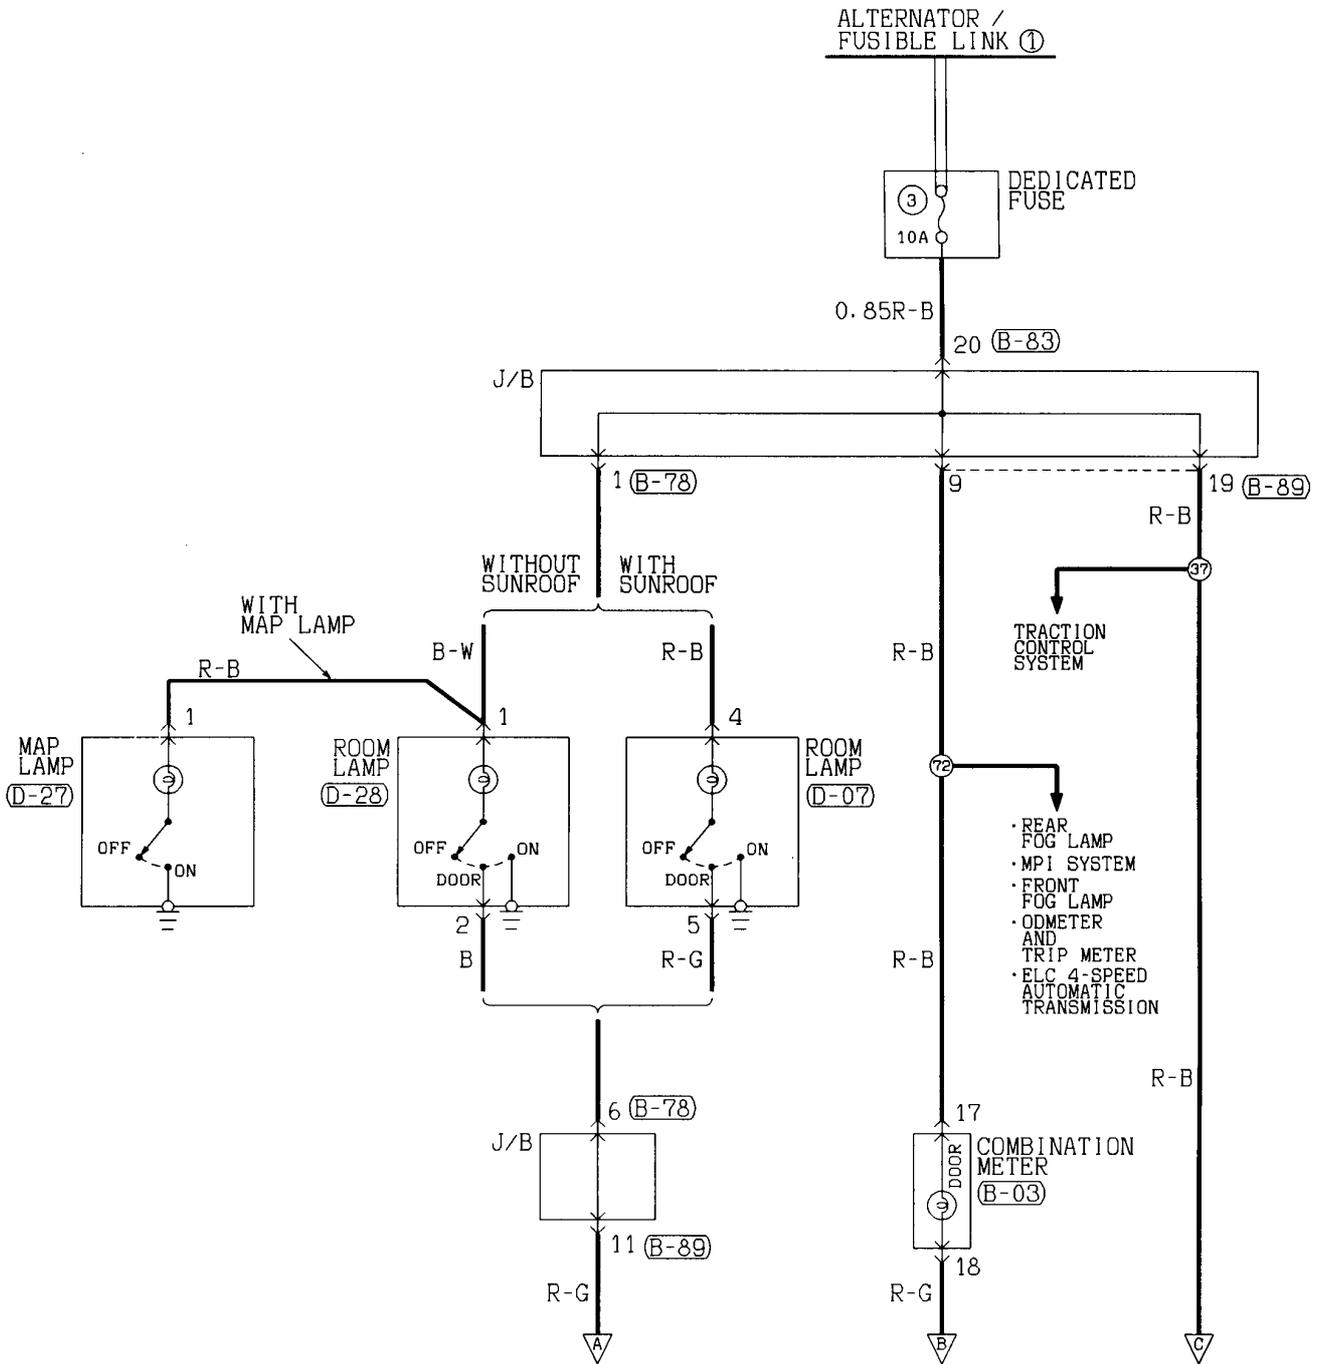

(B-03)

1	2	3	4	5	6	7	8	9	10	11	12
13											
14	15	16	17	18	19	20	21	22	23	24	25

(B-78)

1	M	2	
3	4	5	6

(B-83)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(B-89)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(D-02)


1

(D-07)

1	M	2	3	
4	5	6	7	8


(D-11)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

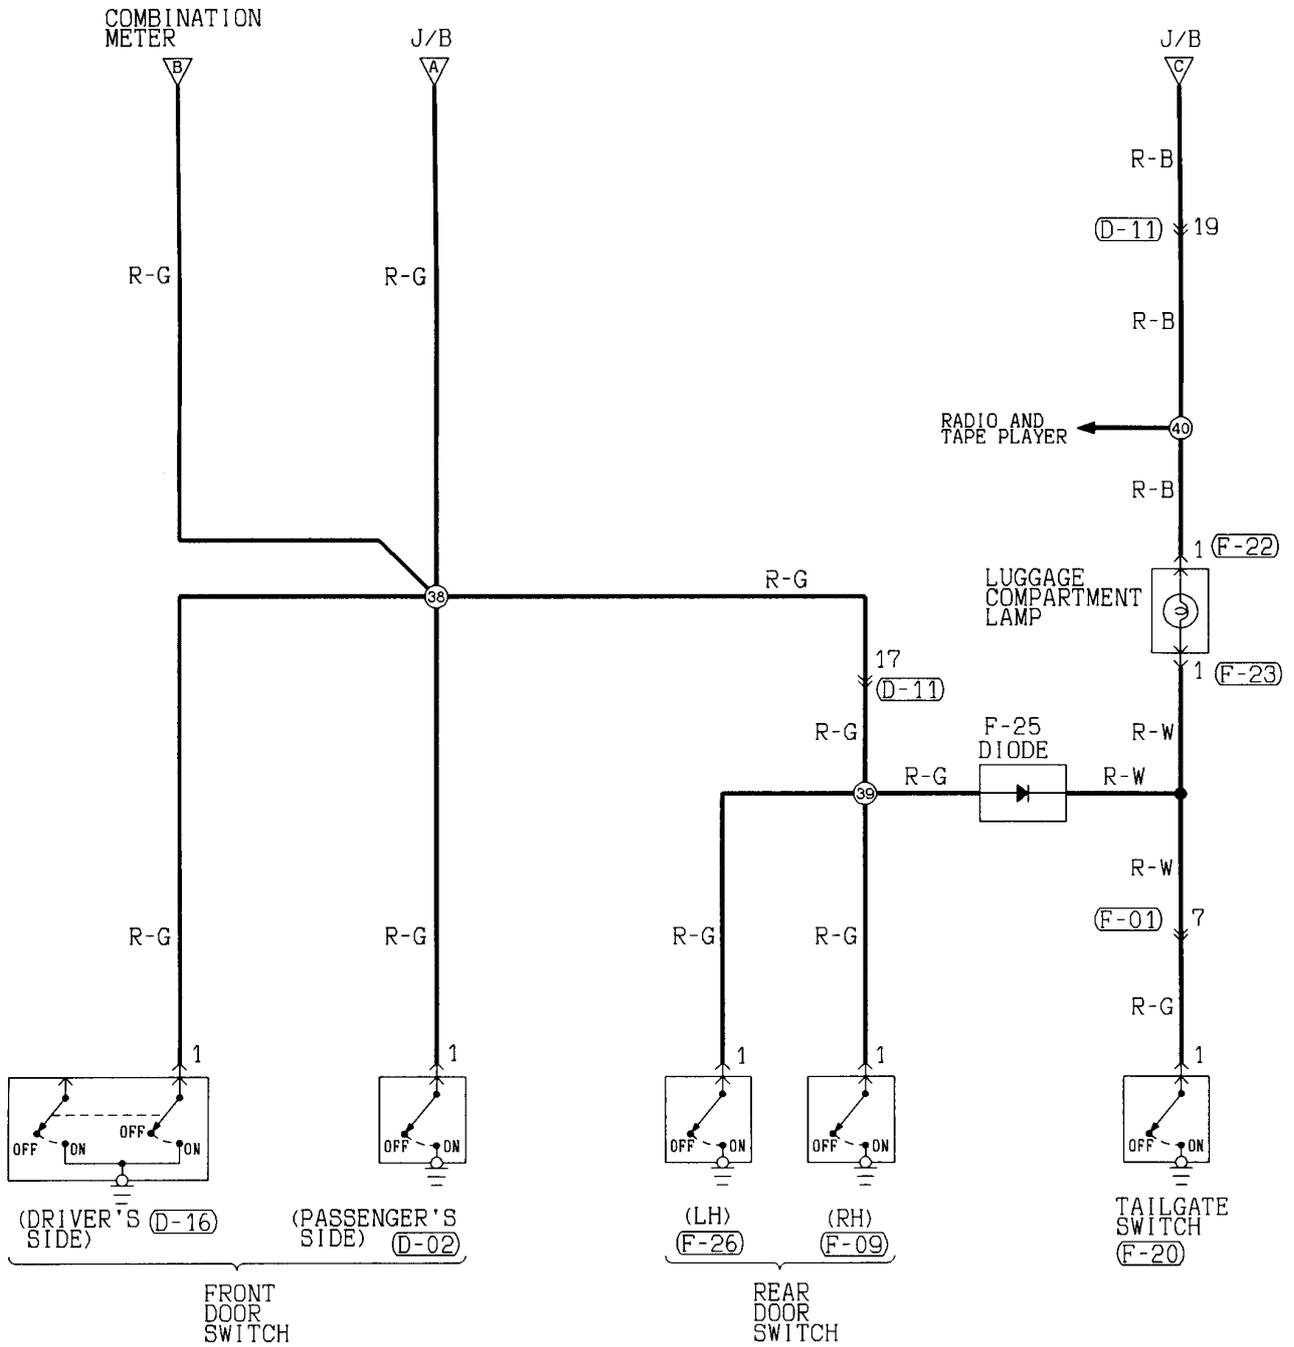


- (D-16)
- (D-27)
- (D-28)
- (F-01)
- (F-09)
- (F-20)
- (F-22)
- (F-23)
- (F-26)

ROOM LAMP, MAP LAMP AND LUGGAGE COMPARTMENT LAMP
Sedan

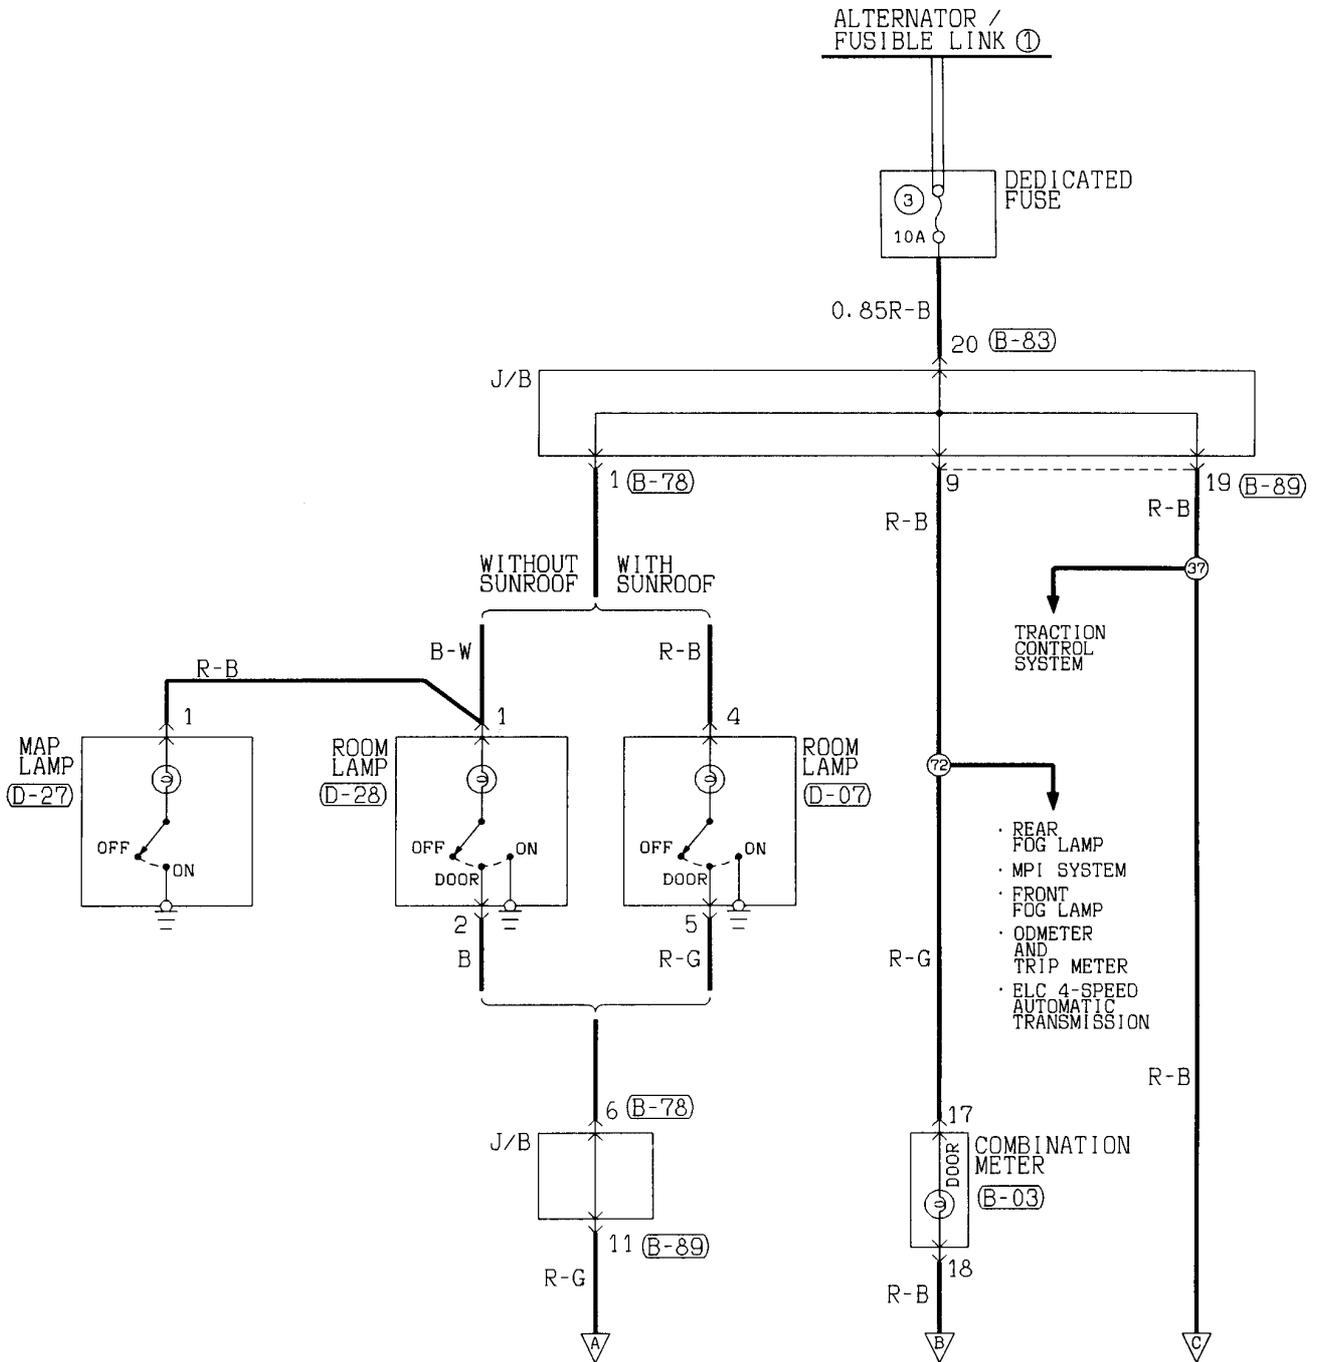


(B-03)

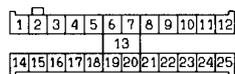


(B-78)



(B-83)

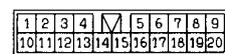

(B-89)

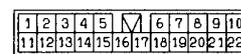


(D-02)




(D-07)




(D-11)

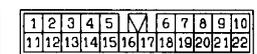


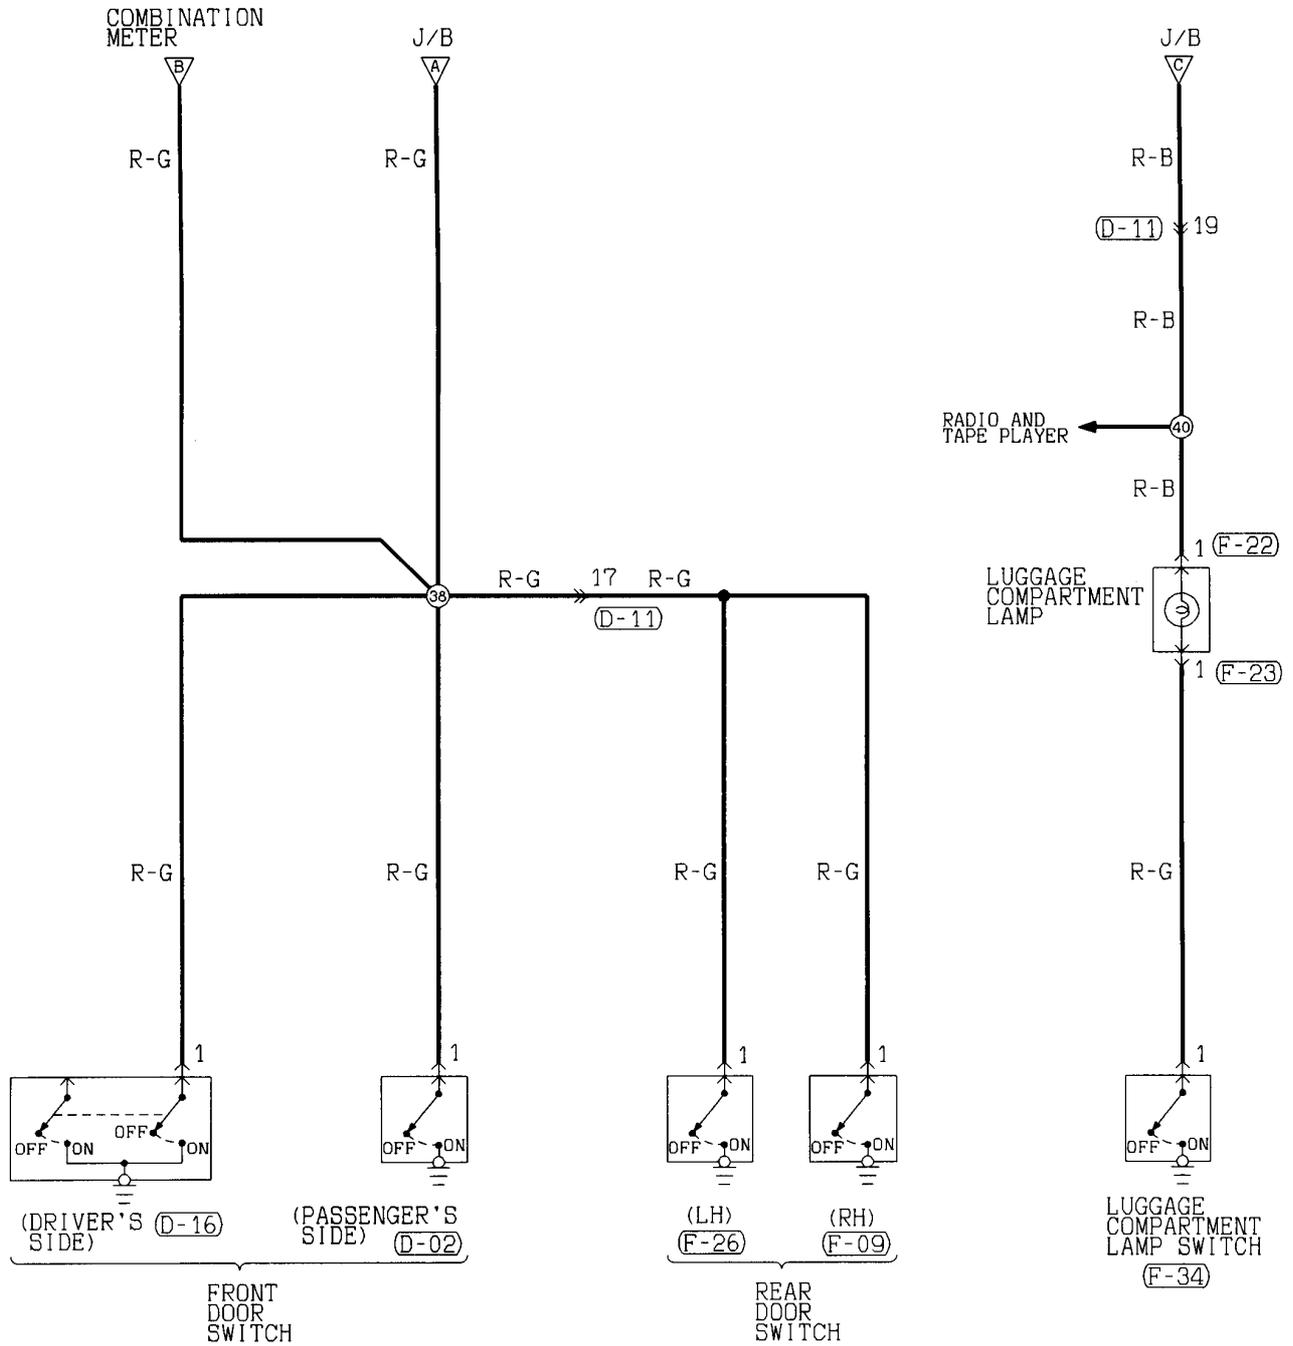

- | | | | | | | | |
|--------|--------|--------|--------|--------|--------|--------|--------|
| (D-16) | (D-27) | (D-28) | (F-09) | (F-22) | (F-23) | (F-26) | (F-34) |
| | | | | | | | |

TURN-SIGNAL LAMP AND HAZARD WARNING LAMP

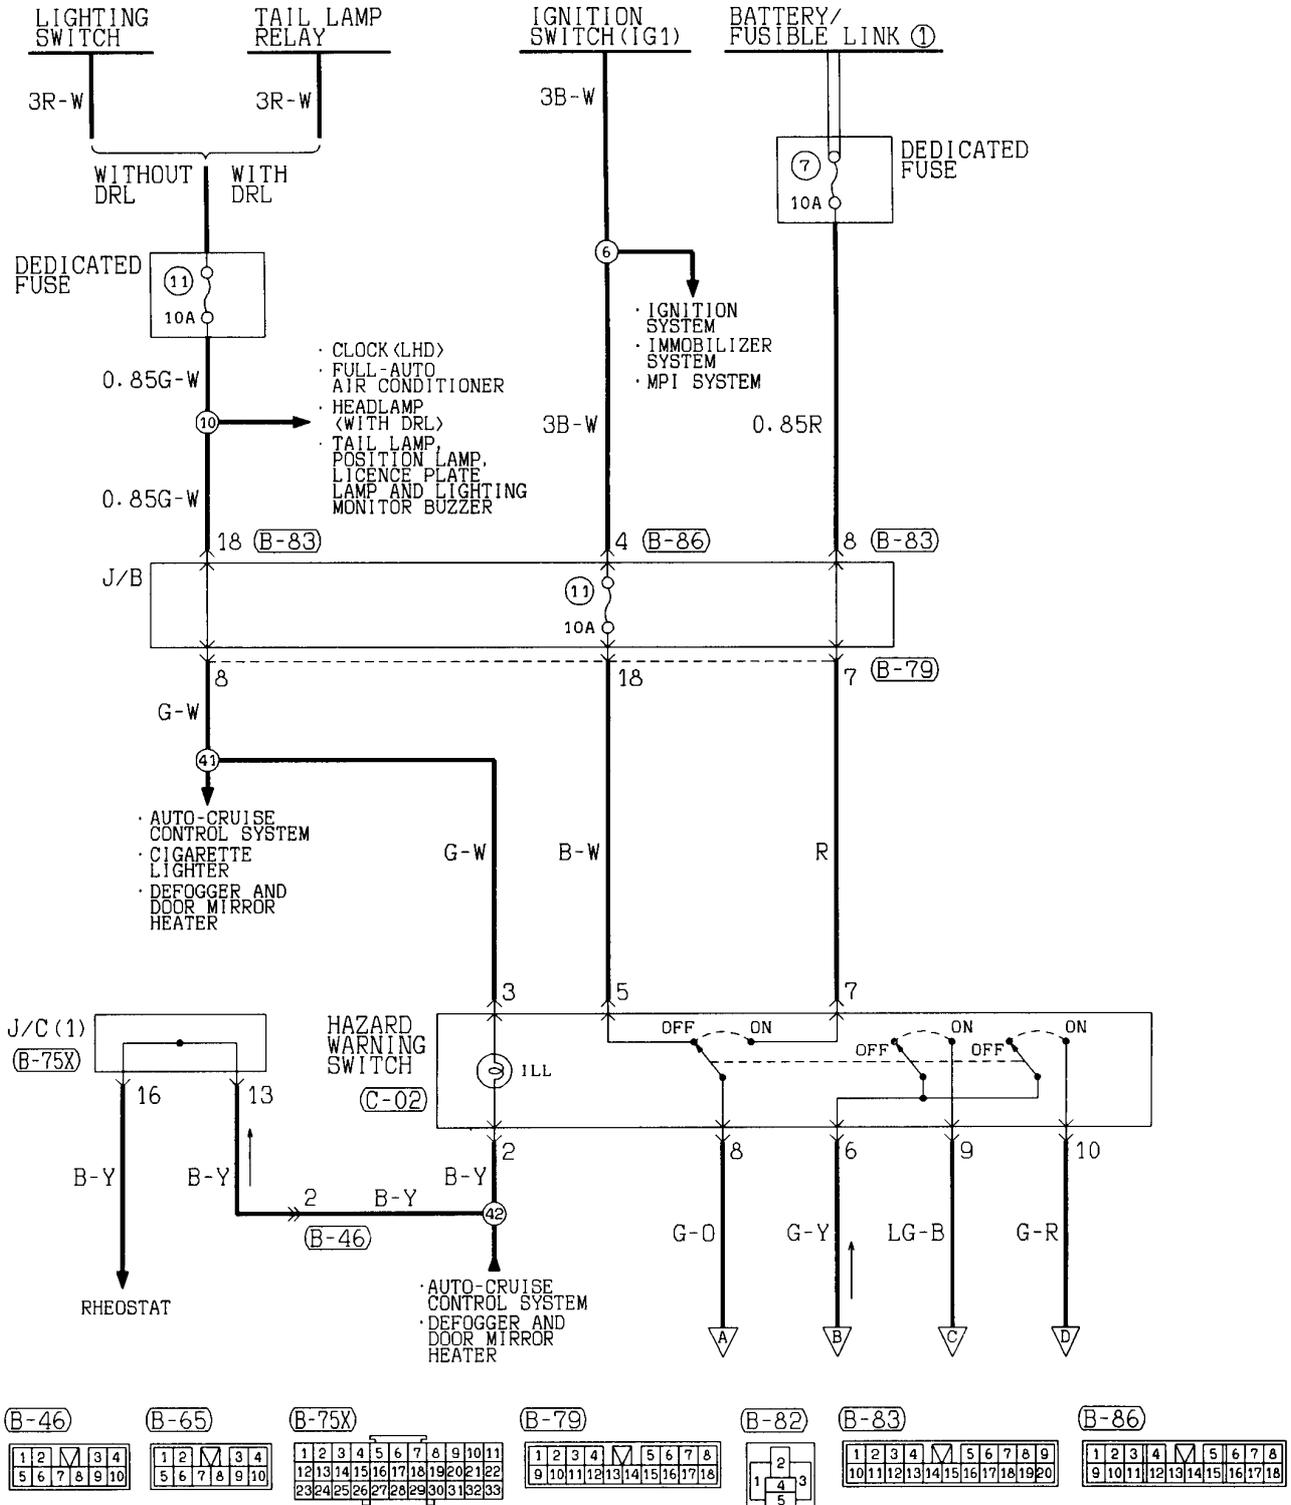

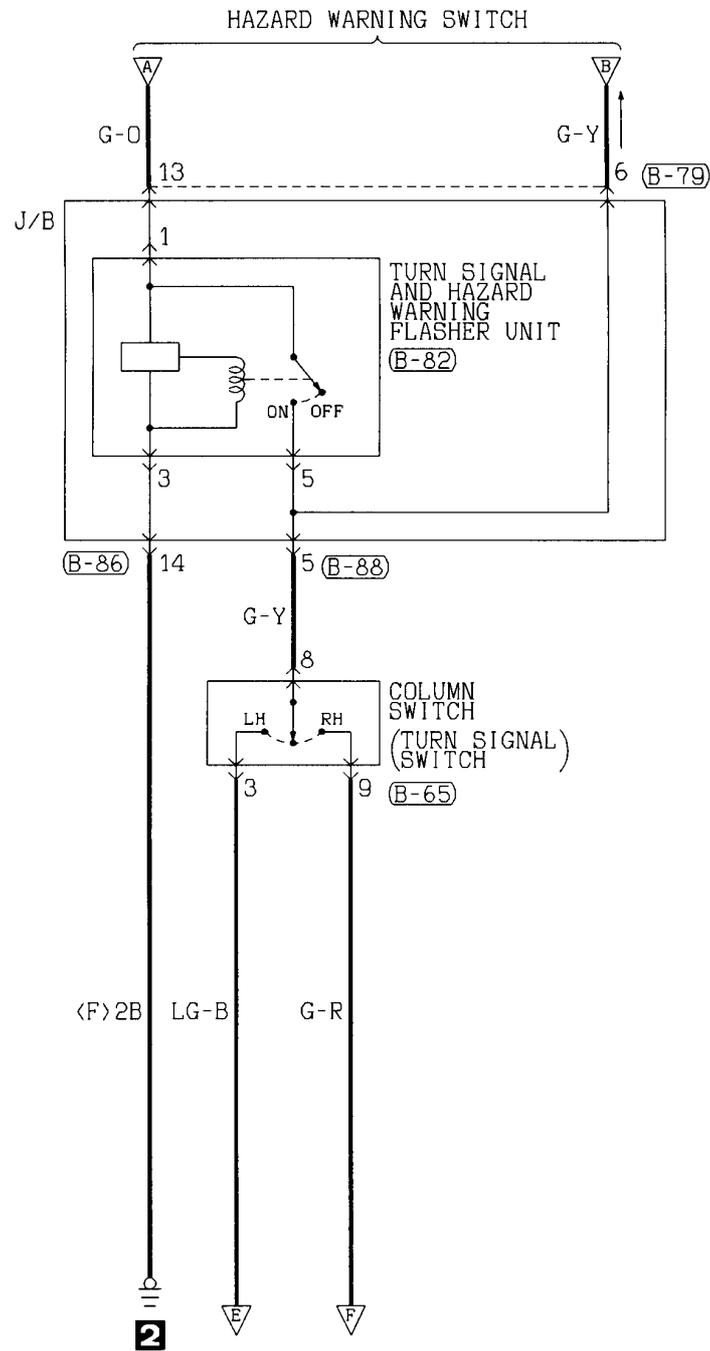


(B-88)


1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(C-02)

1	2	M	3	4	
5	6	7	8	9	10

TURN-SIGNAL LAMP AND HAZARD WARNING LAMP (CONTINUED)

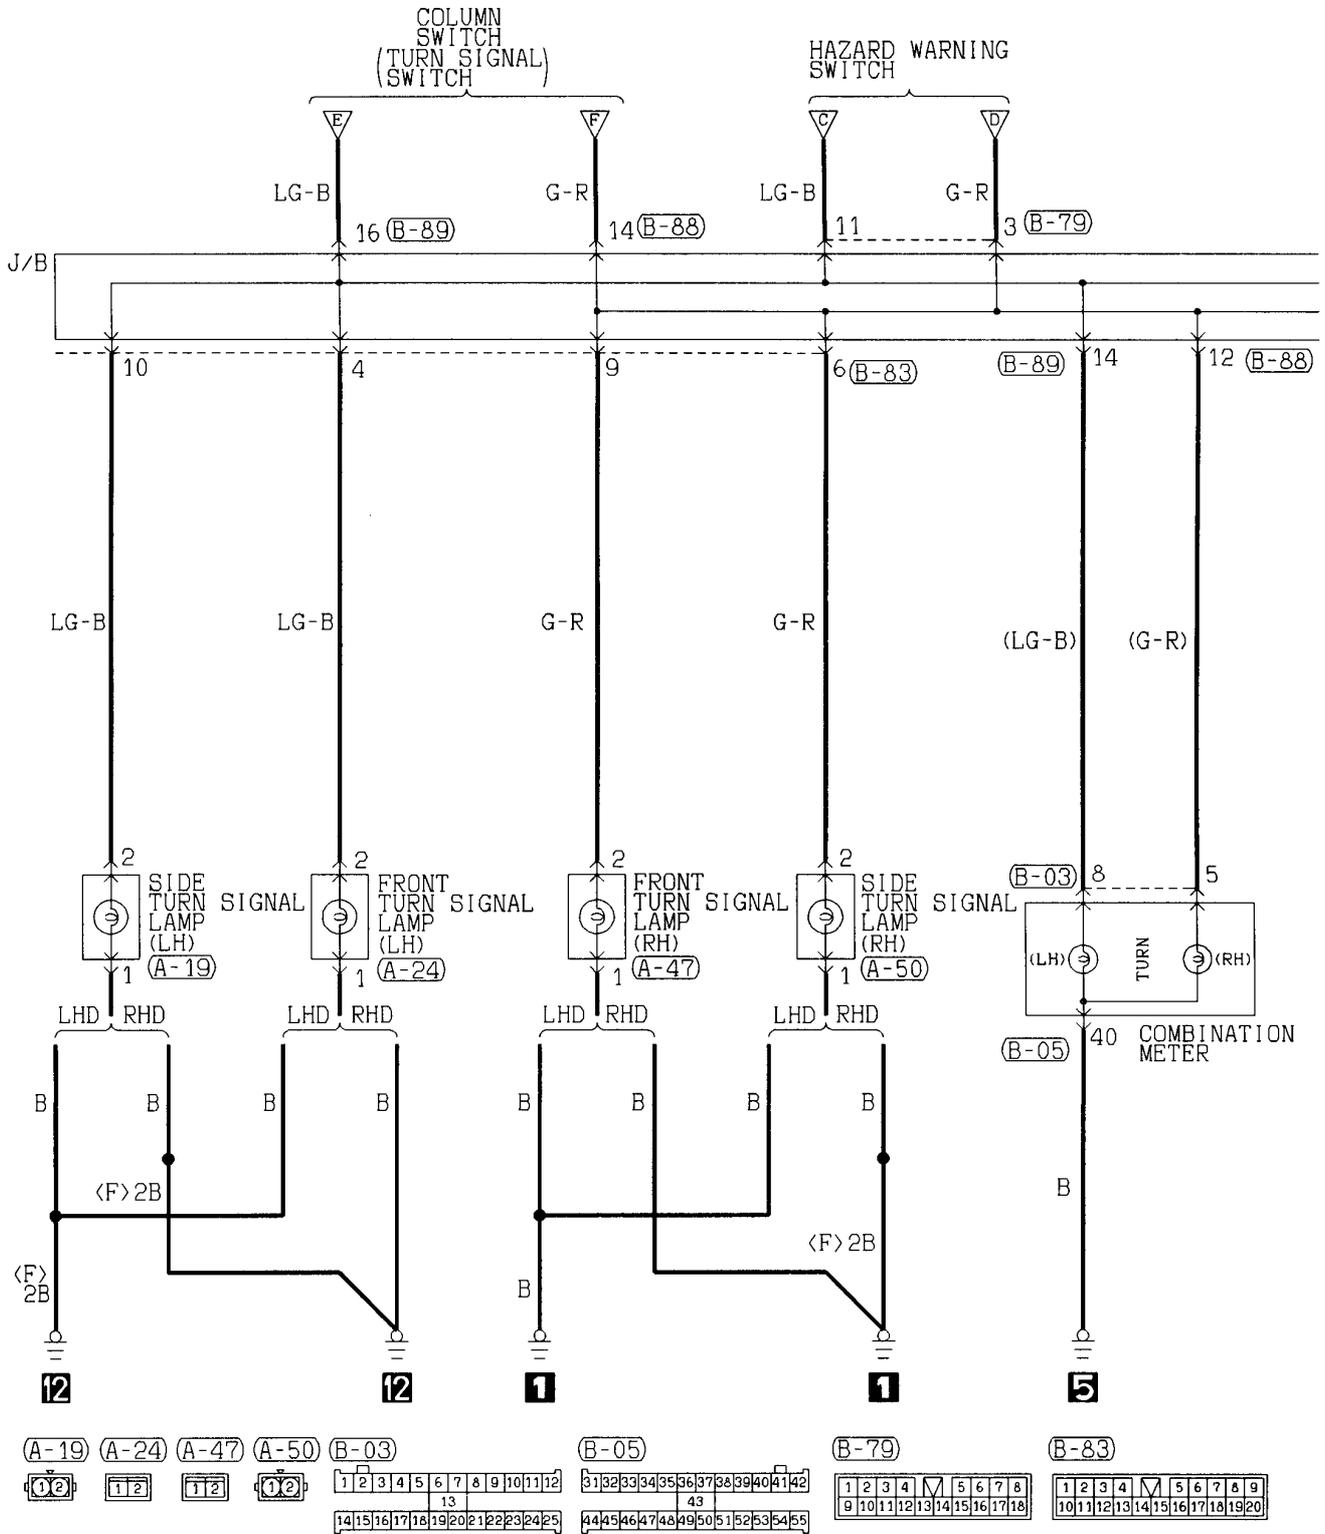

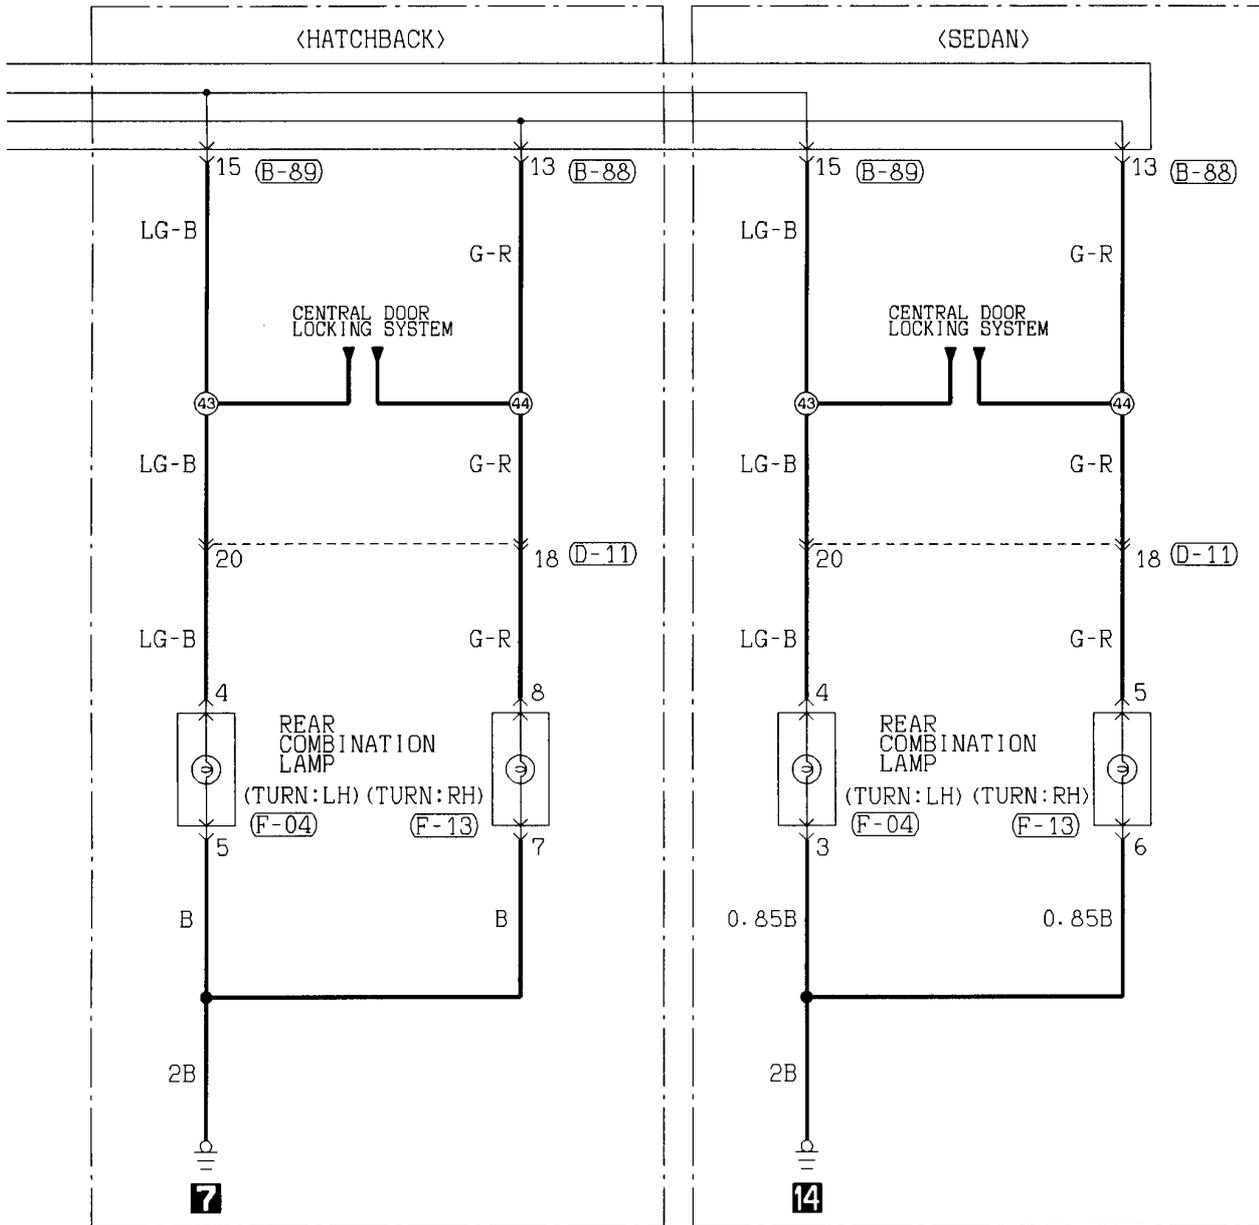

(B-88)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-89)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(D-11)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								



(F-04)


〈HATCHBACK〉		〈SEDAN〉	
1	2	1	2
3	4	5	6

(F-13)

〈HATCHBACK〉		〈SEDAN〉	
1	2	1	2
3	4	5	6

BACK-UP LAMP

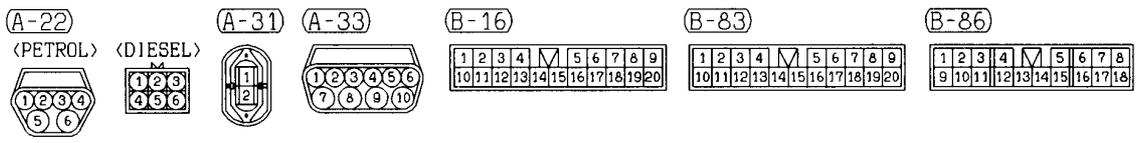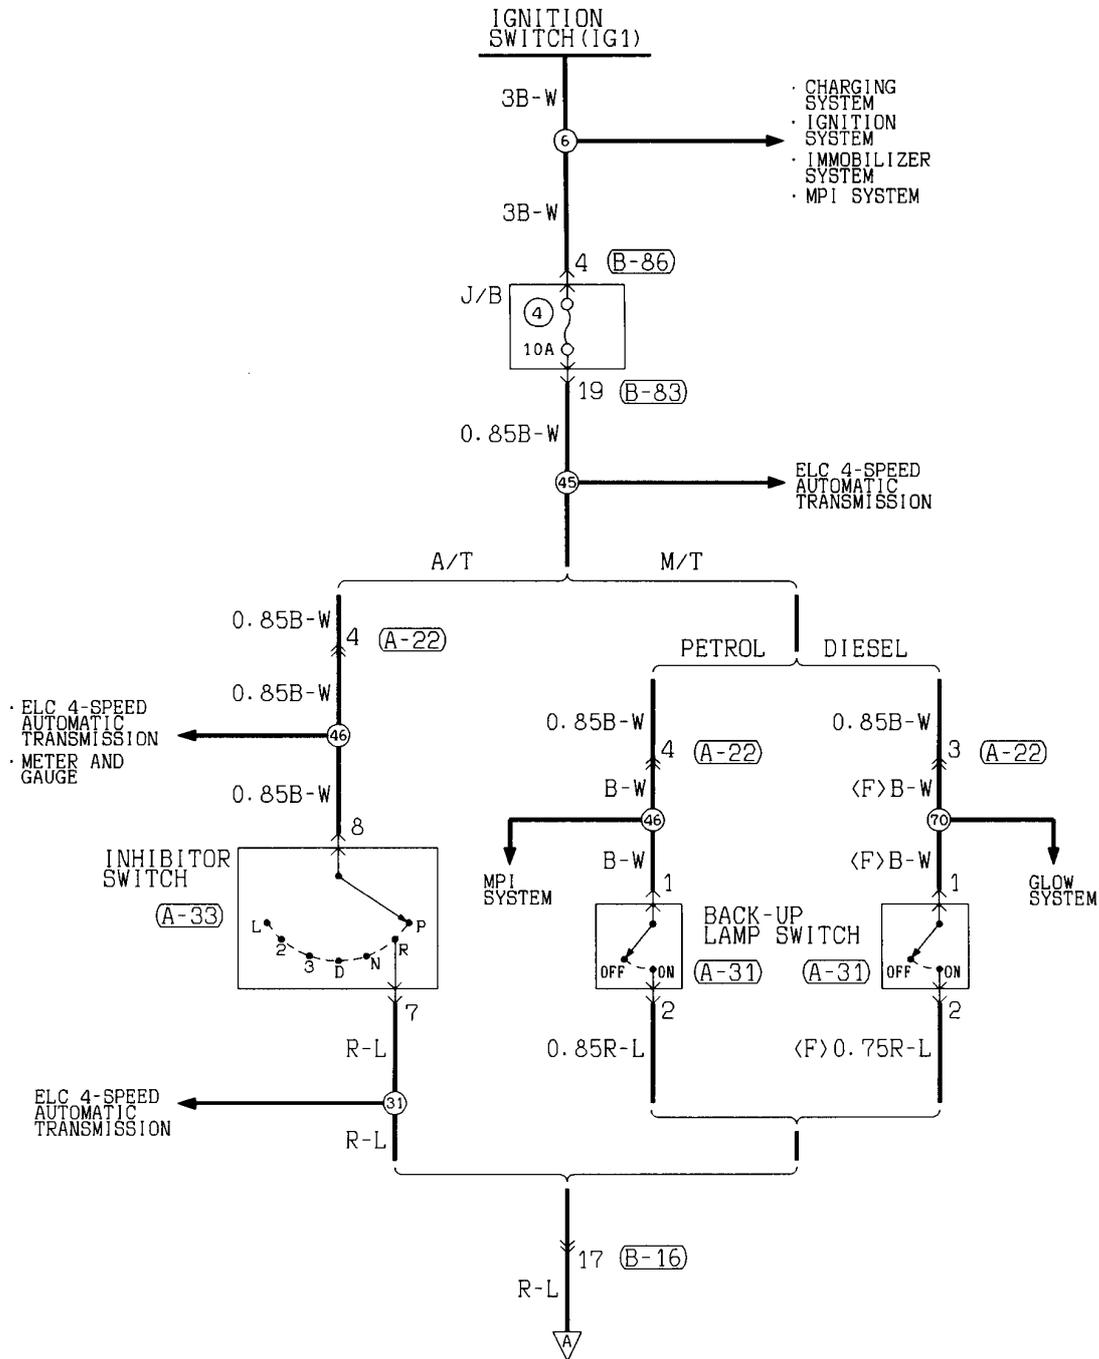

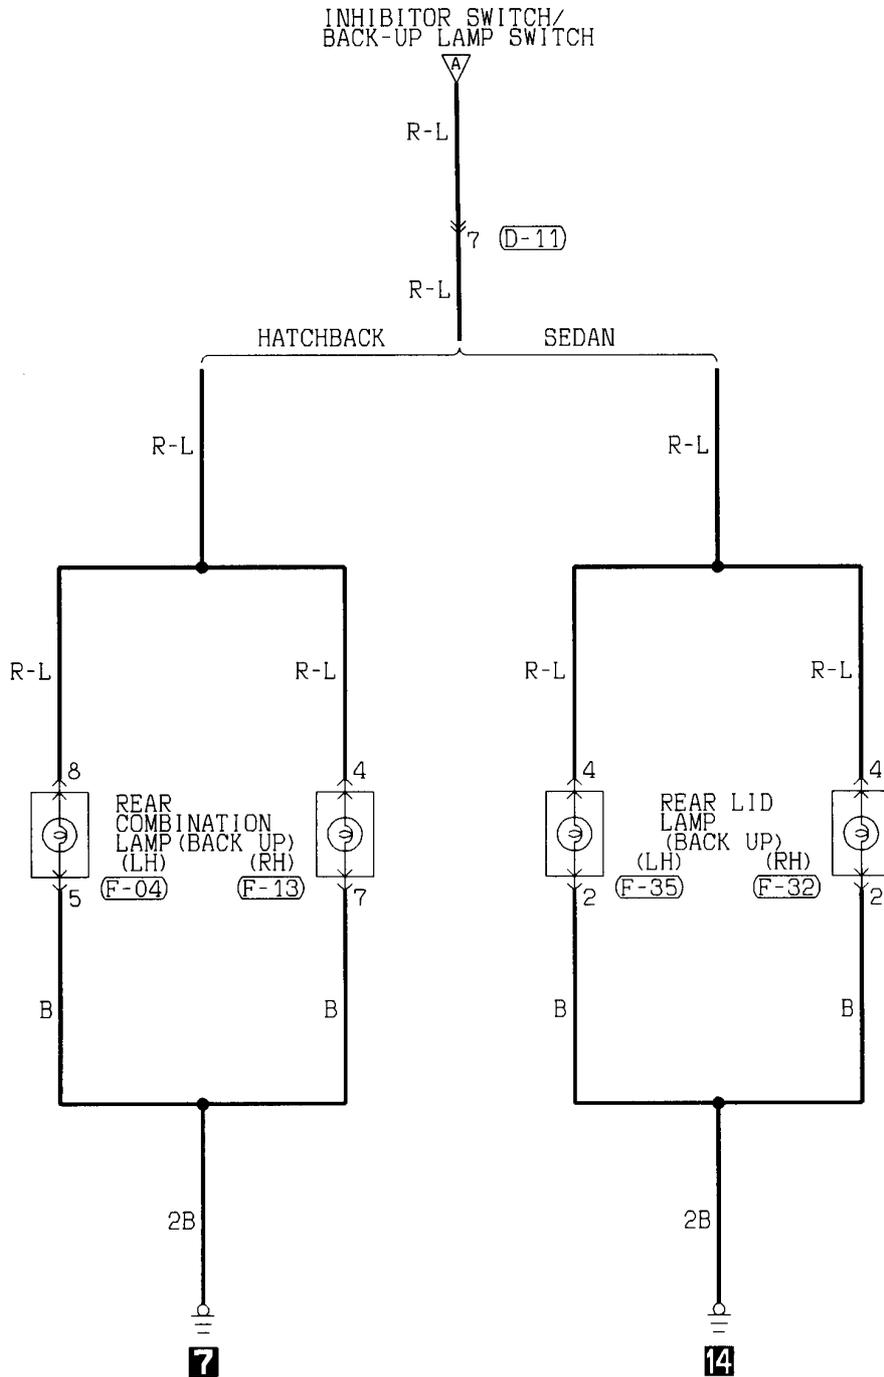

(D-11)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

(F-04)

1	2	3
4	5	6

(F-13)

1	2	3
4	5	6

(F-32)






1	2
3	4


(F-35)

1	2
3	4

METER AND GAUGE


Petrol-powered vehicles

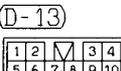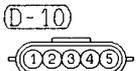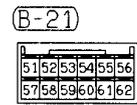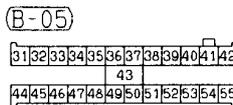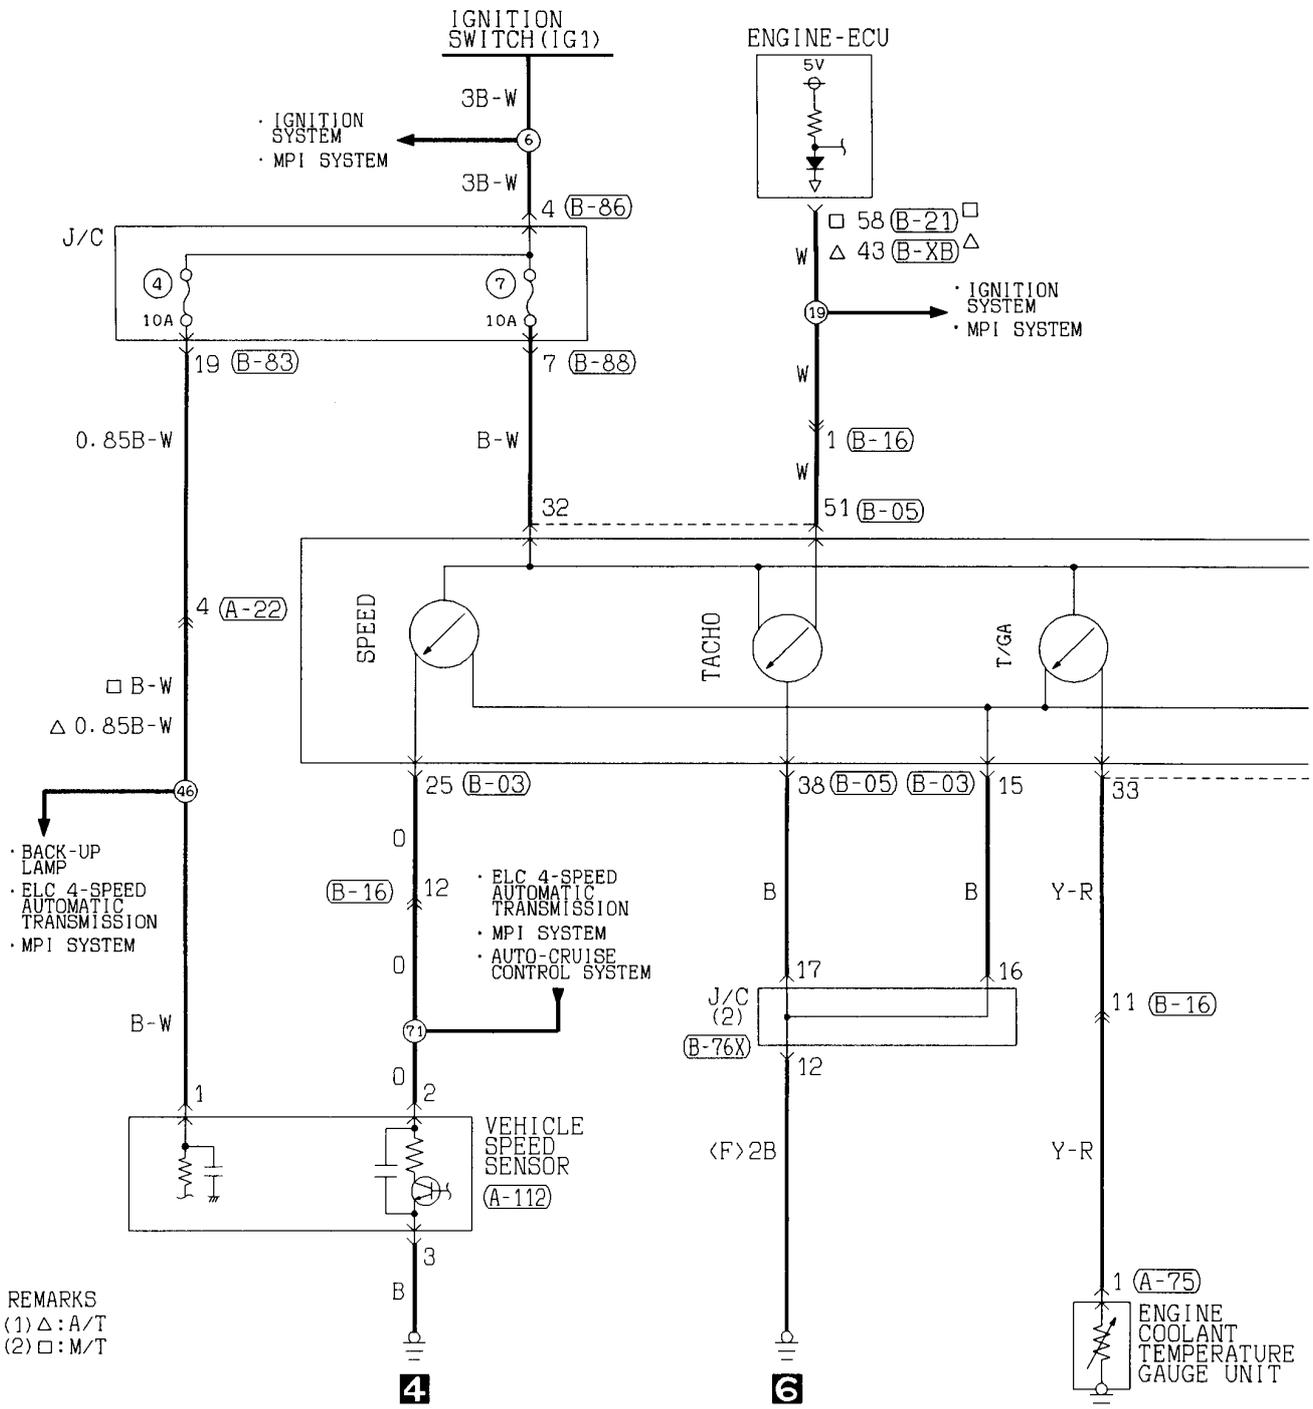

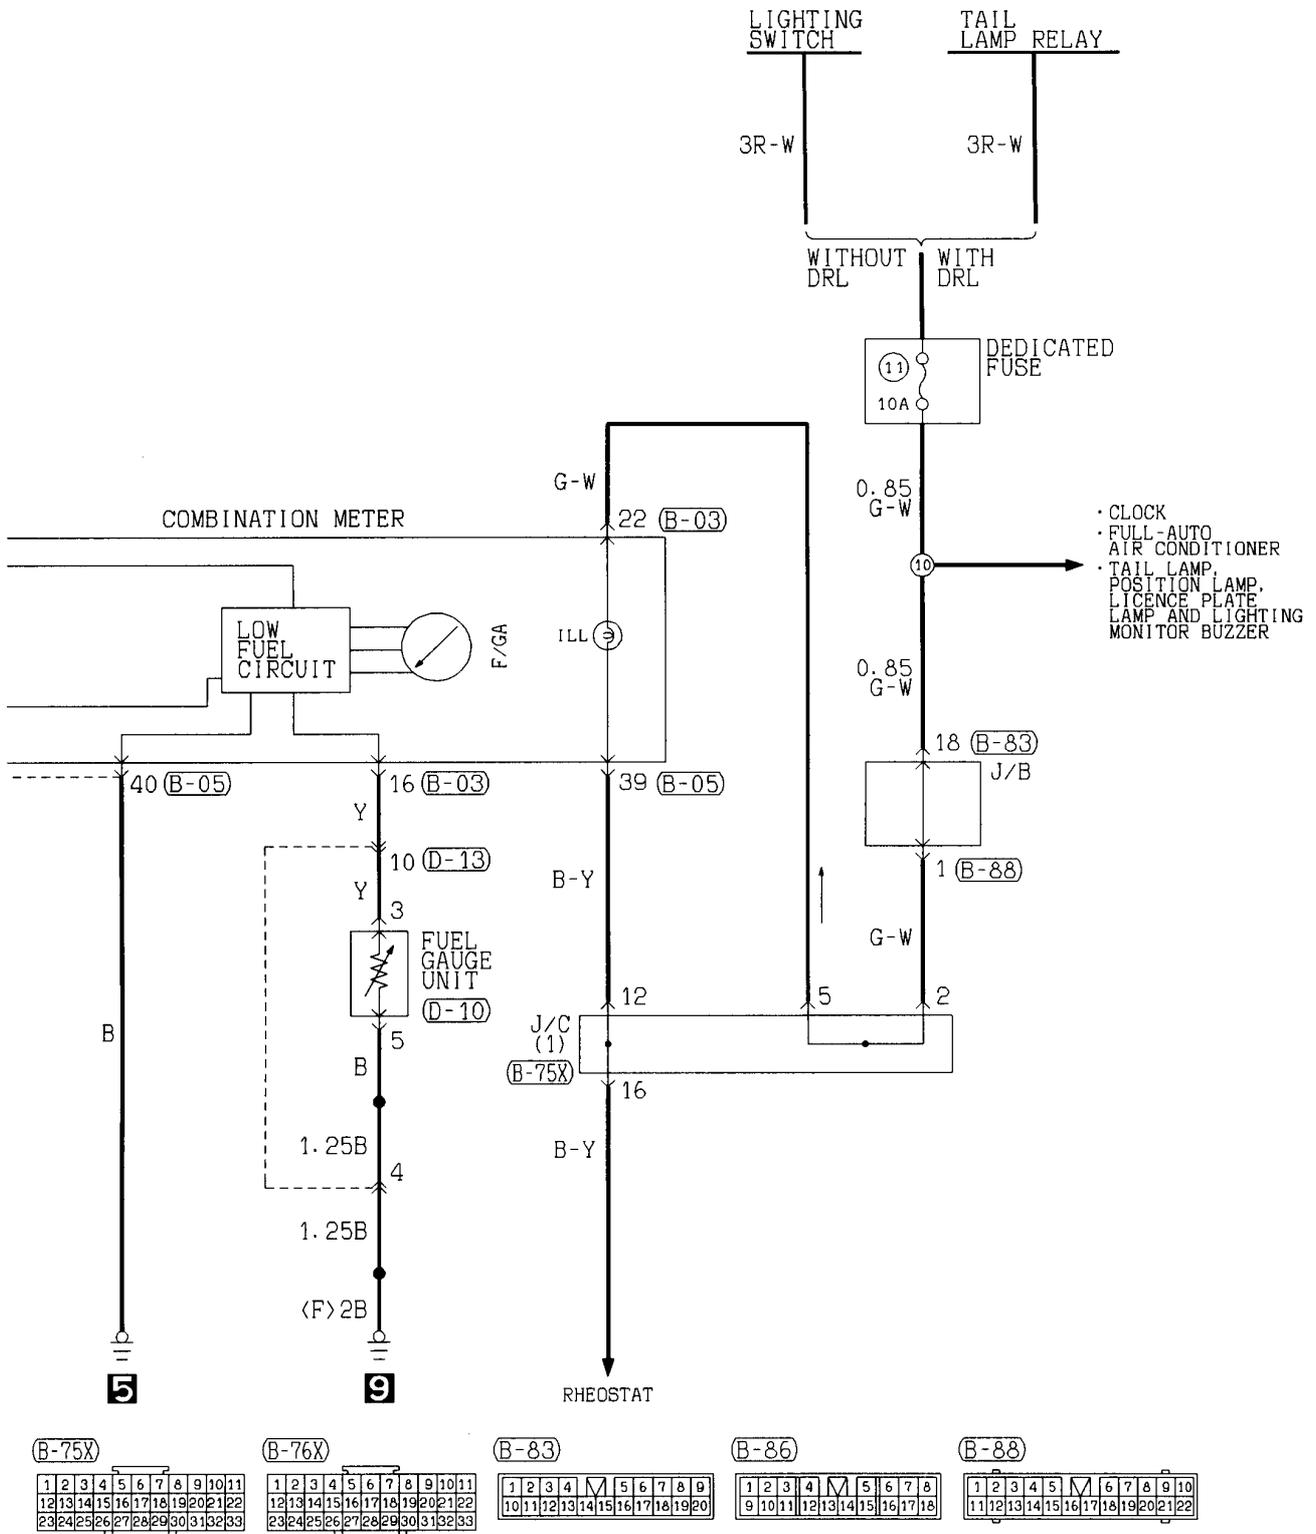

METER AND GAUGE

Diesel-powered vehicles

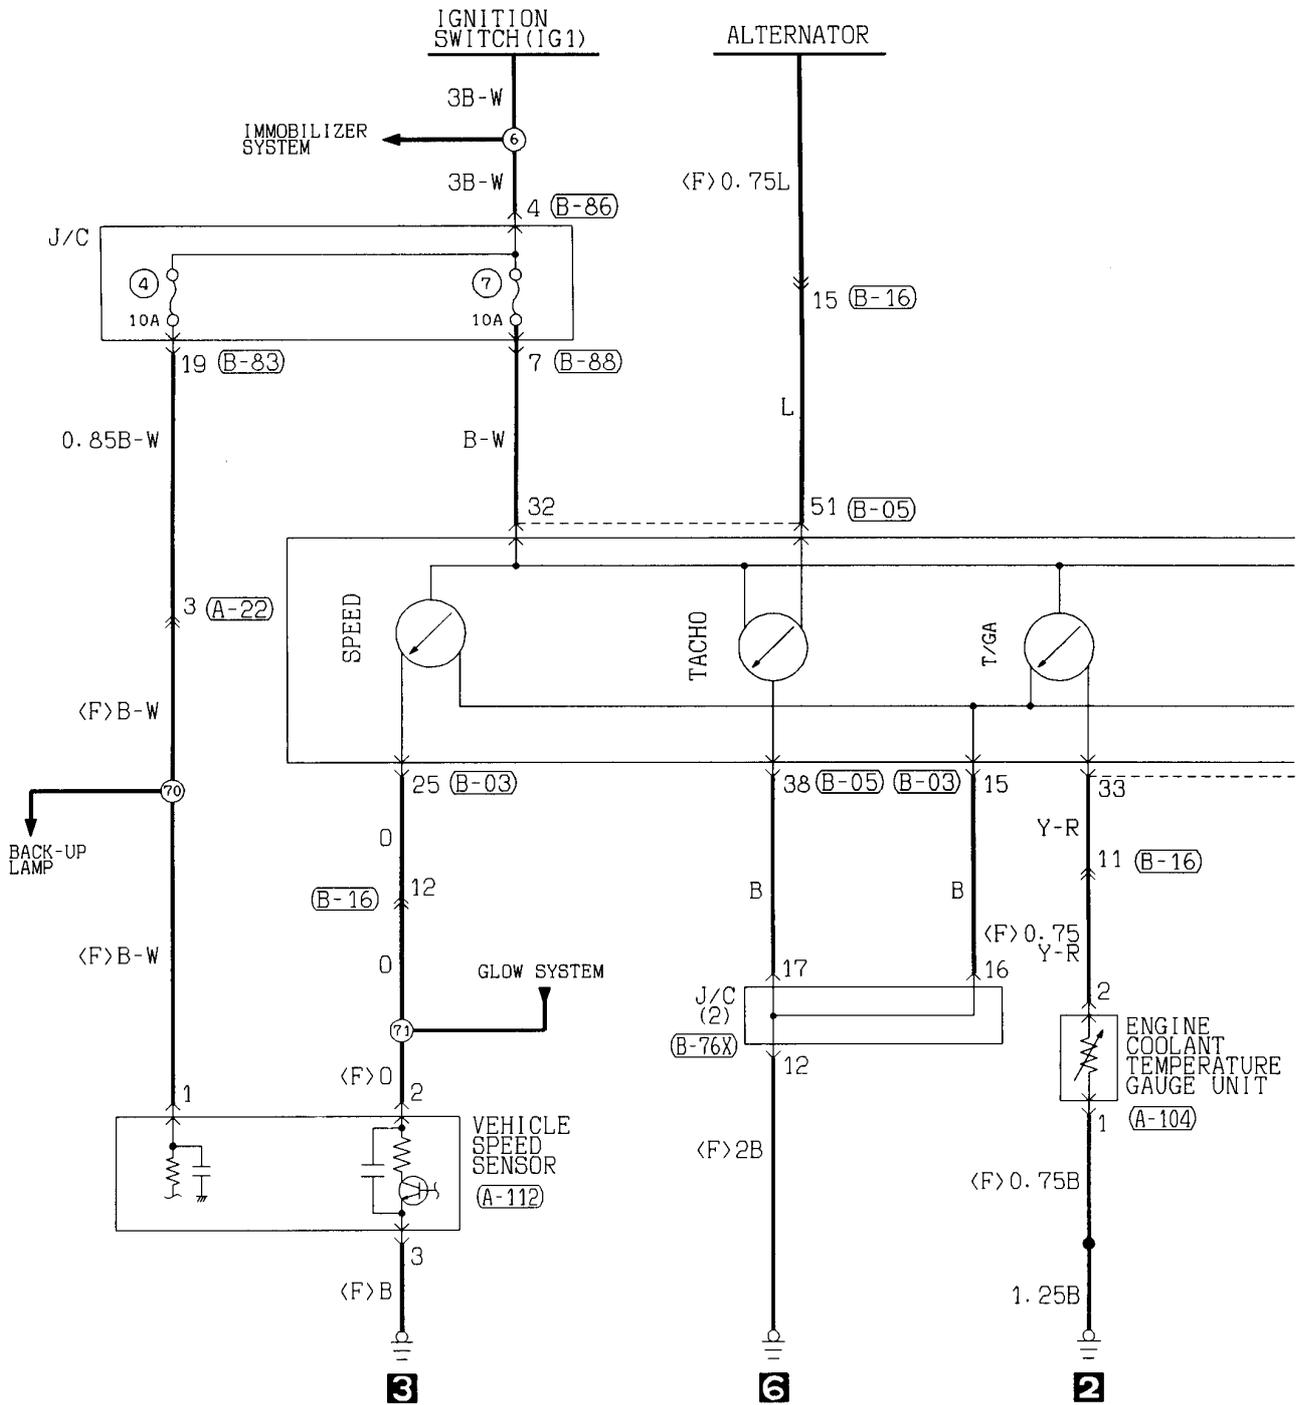


(A-22)	(A-104)	(A-112)
1 2 3 4 5 6	1 2 3 4	1 2 3

(B-03)
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25







(B-05)
31 32 33 34 35 36 37 38 39 40 41 42 43
44 45 46 47 48 49 50 51 52 53 54 55

(B-16)
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20


(B-75X)
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

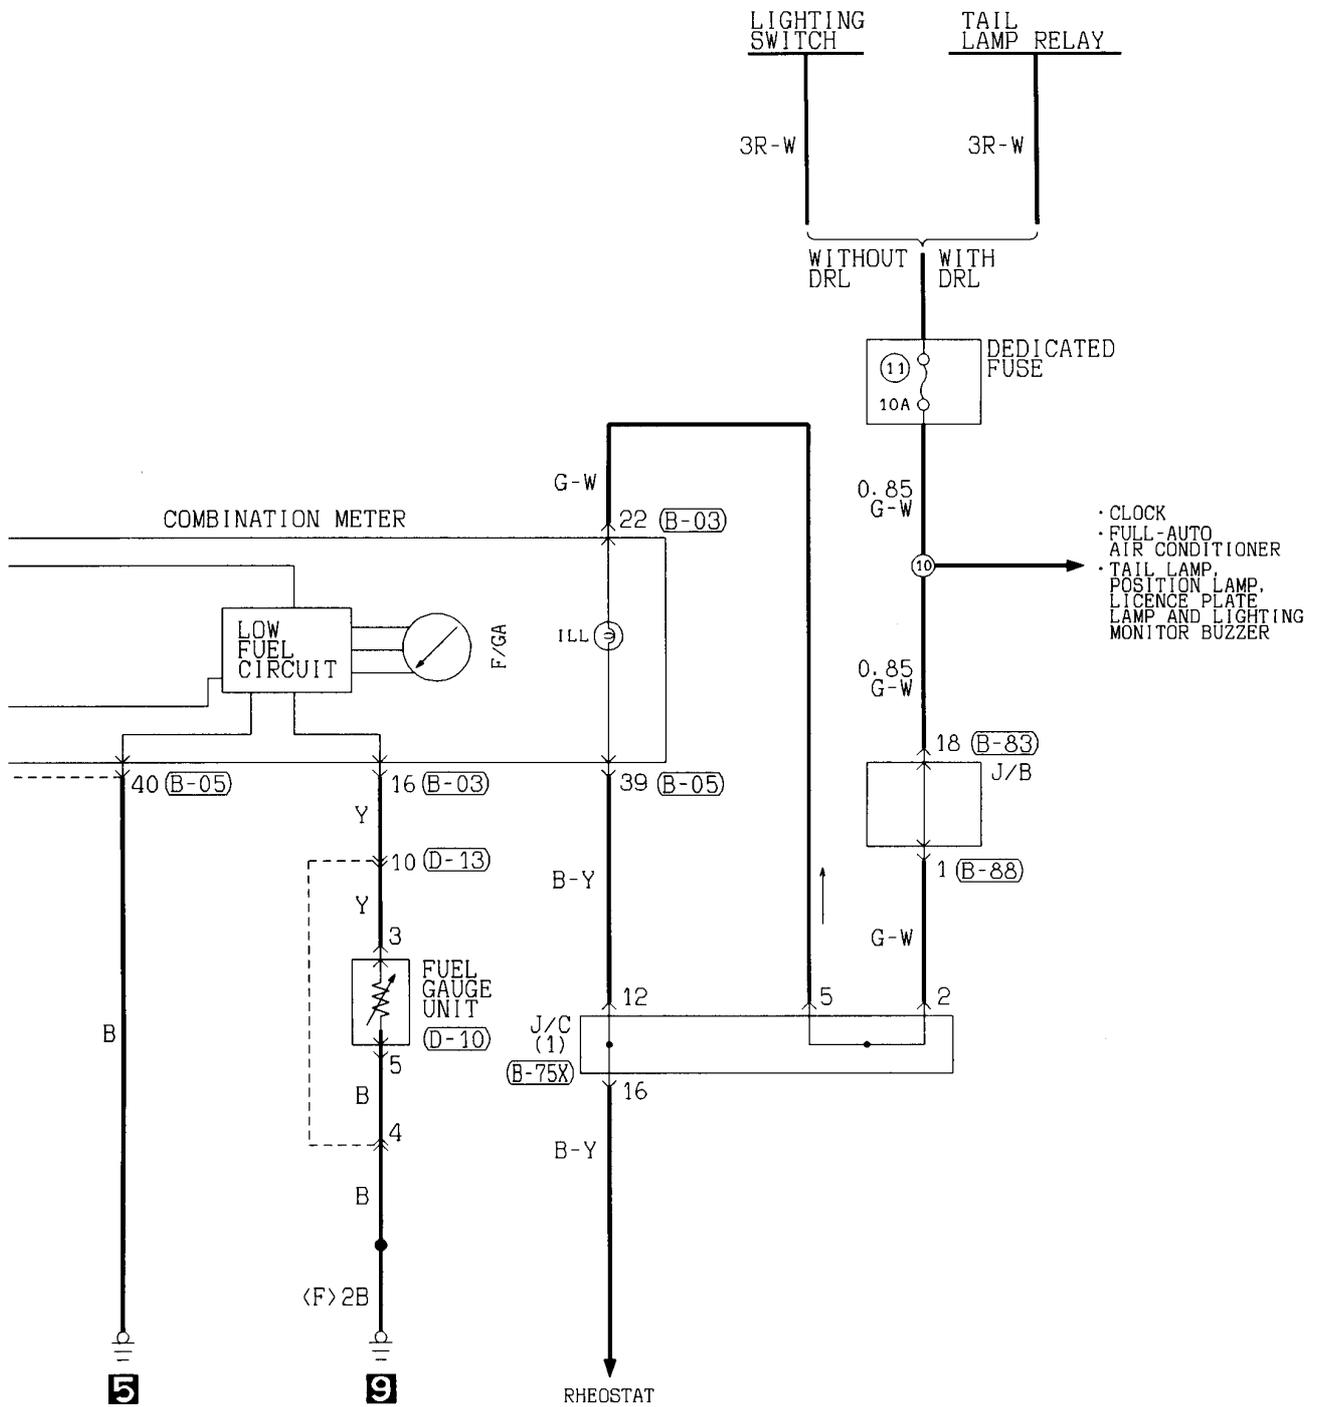

- CLOCK
- FULL-AUTO AIR CONDITIONER
- TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER

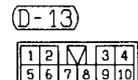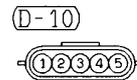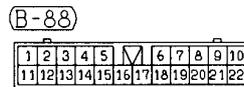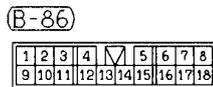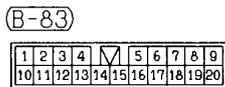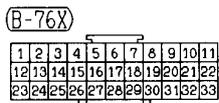

ODOMETER AND TRIP METER

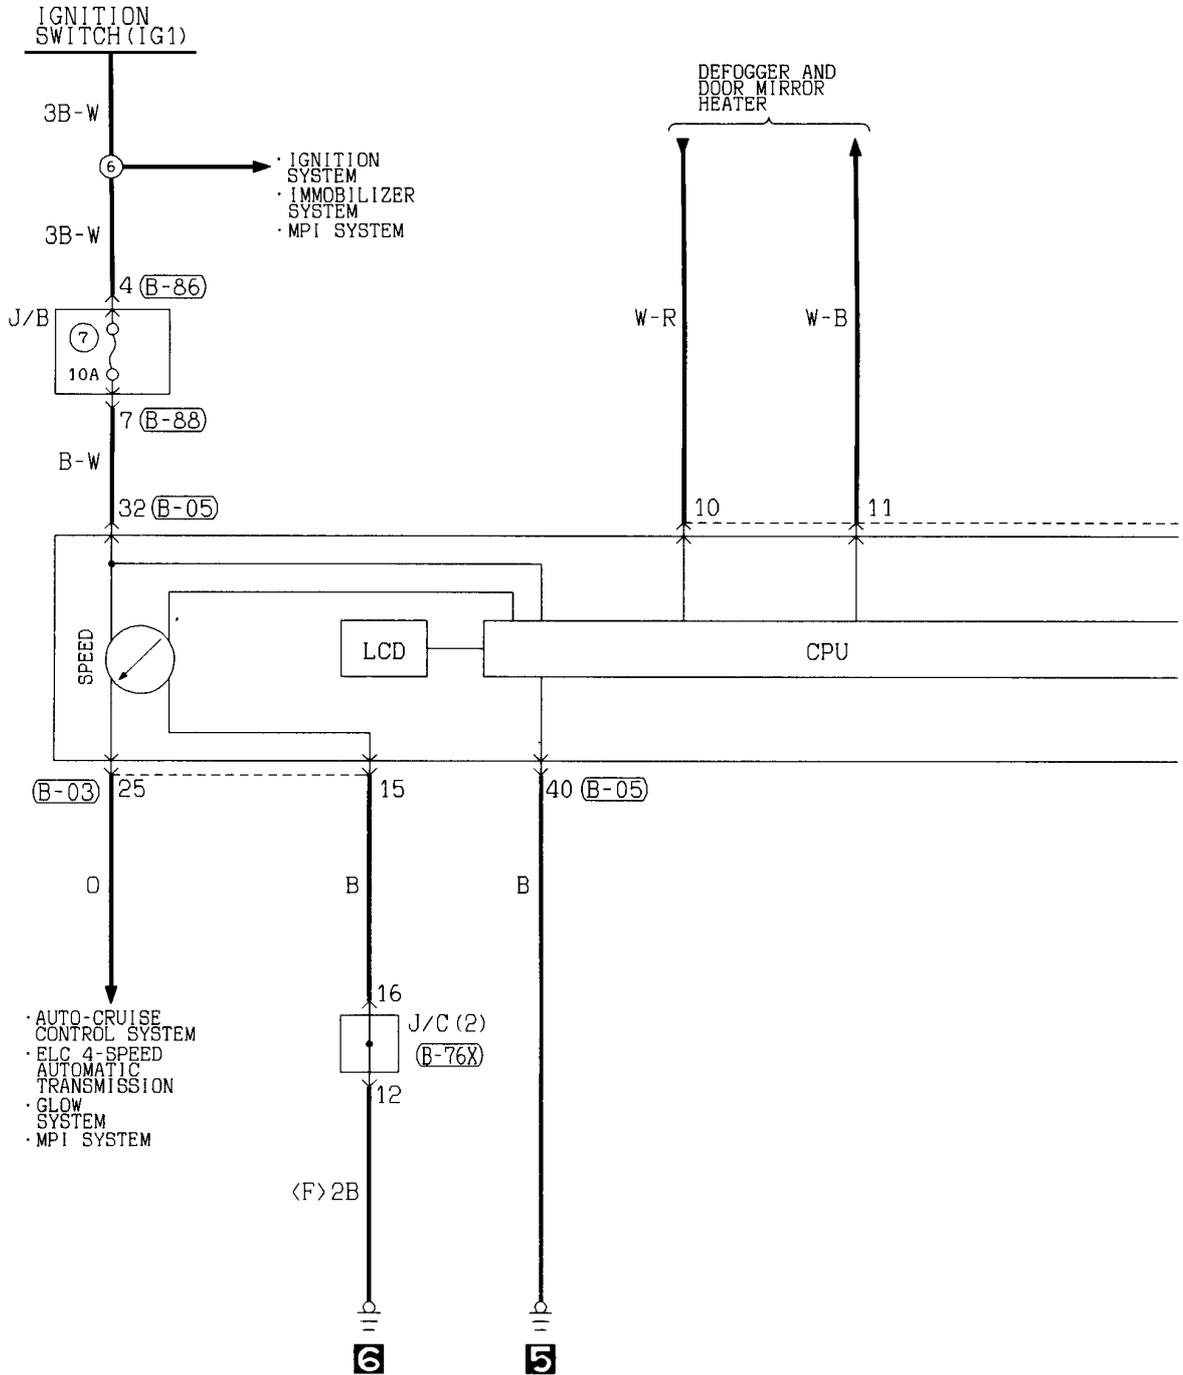

(A-113)

(B-03)

(B-05)

(B-16)

(B-50)

(B-76X)

1	2	3	4	5	6	7	8	9	10	11	12
										13	
14	15	16	17	18	19	20	21	22	23	24	25


1	2	3	4	5	6	7	8	9	10	11	12
										13	
14	15	16	17	18	19	20	21	22	23	24	25

31	32	33	34	35	36	37	38	39	40	41	42
										43	
44	45	46	47	48	49	50	51	52	53	54	55

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

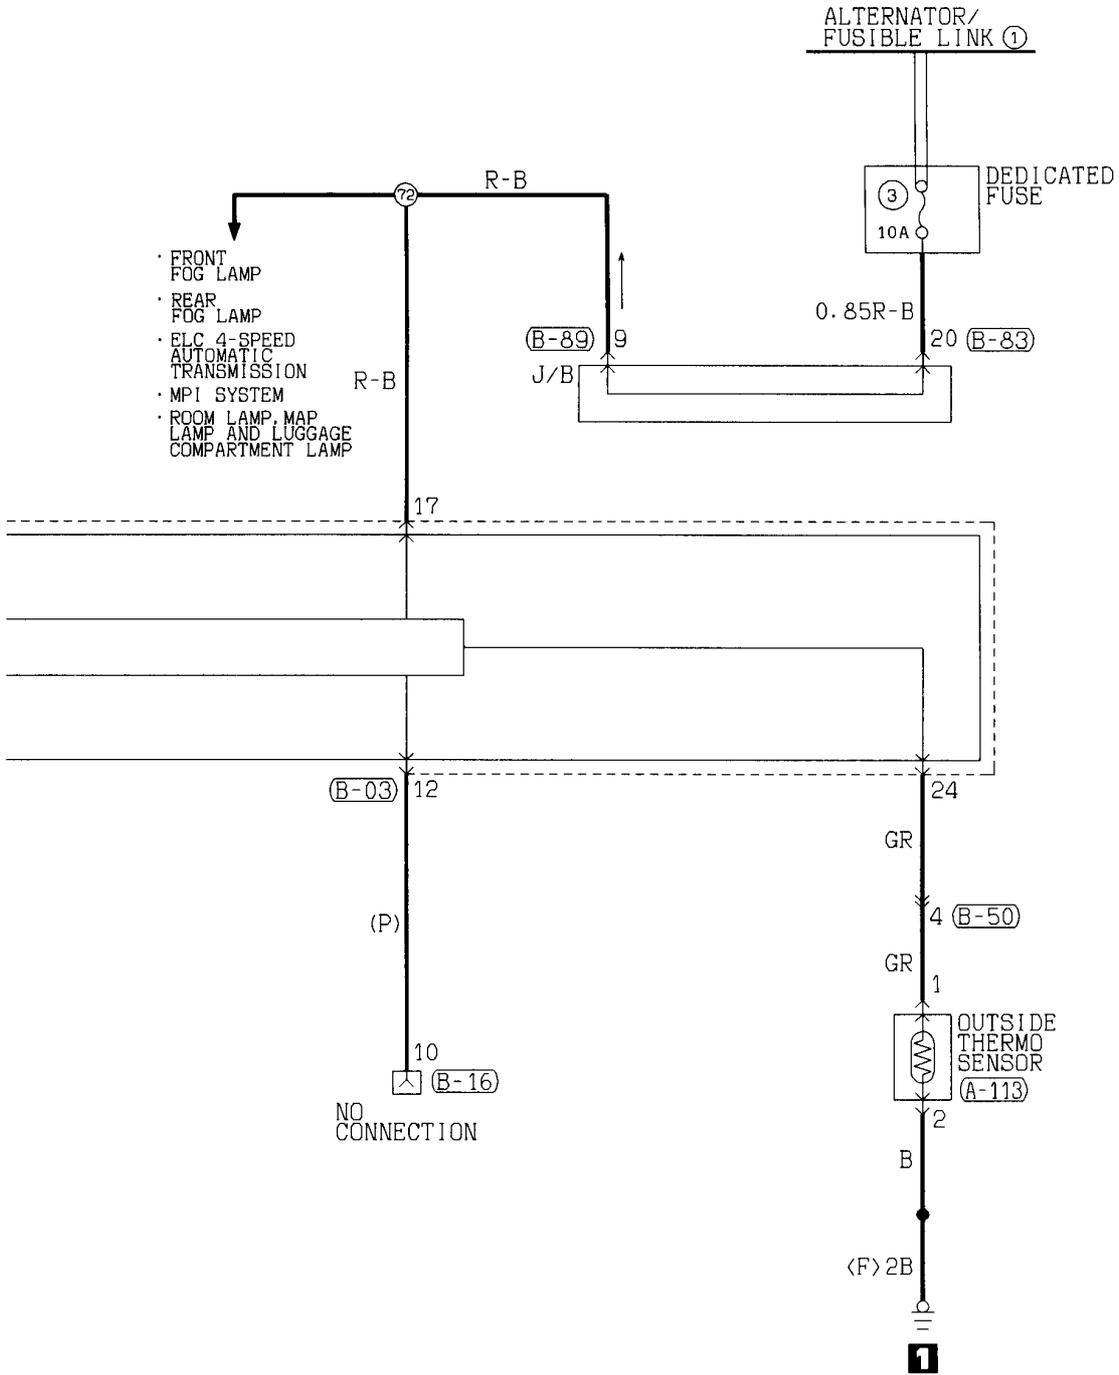

(B-83)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(B-86)

1	2	3	4	M	5	6	7	8	
9	10	11	12	13	14	15	16	17	18


(B-88)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(B-89)


1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

OIL PRESSURE WARNING LAMP FUEL WARNING LAMP

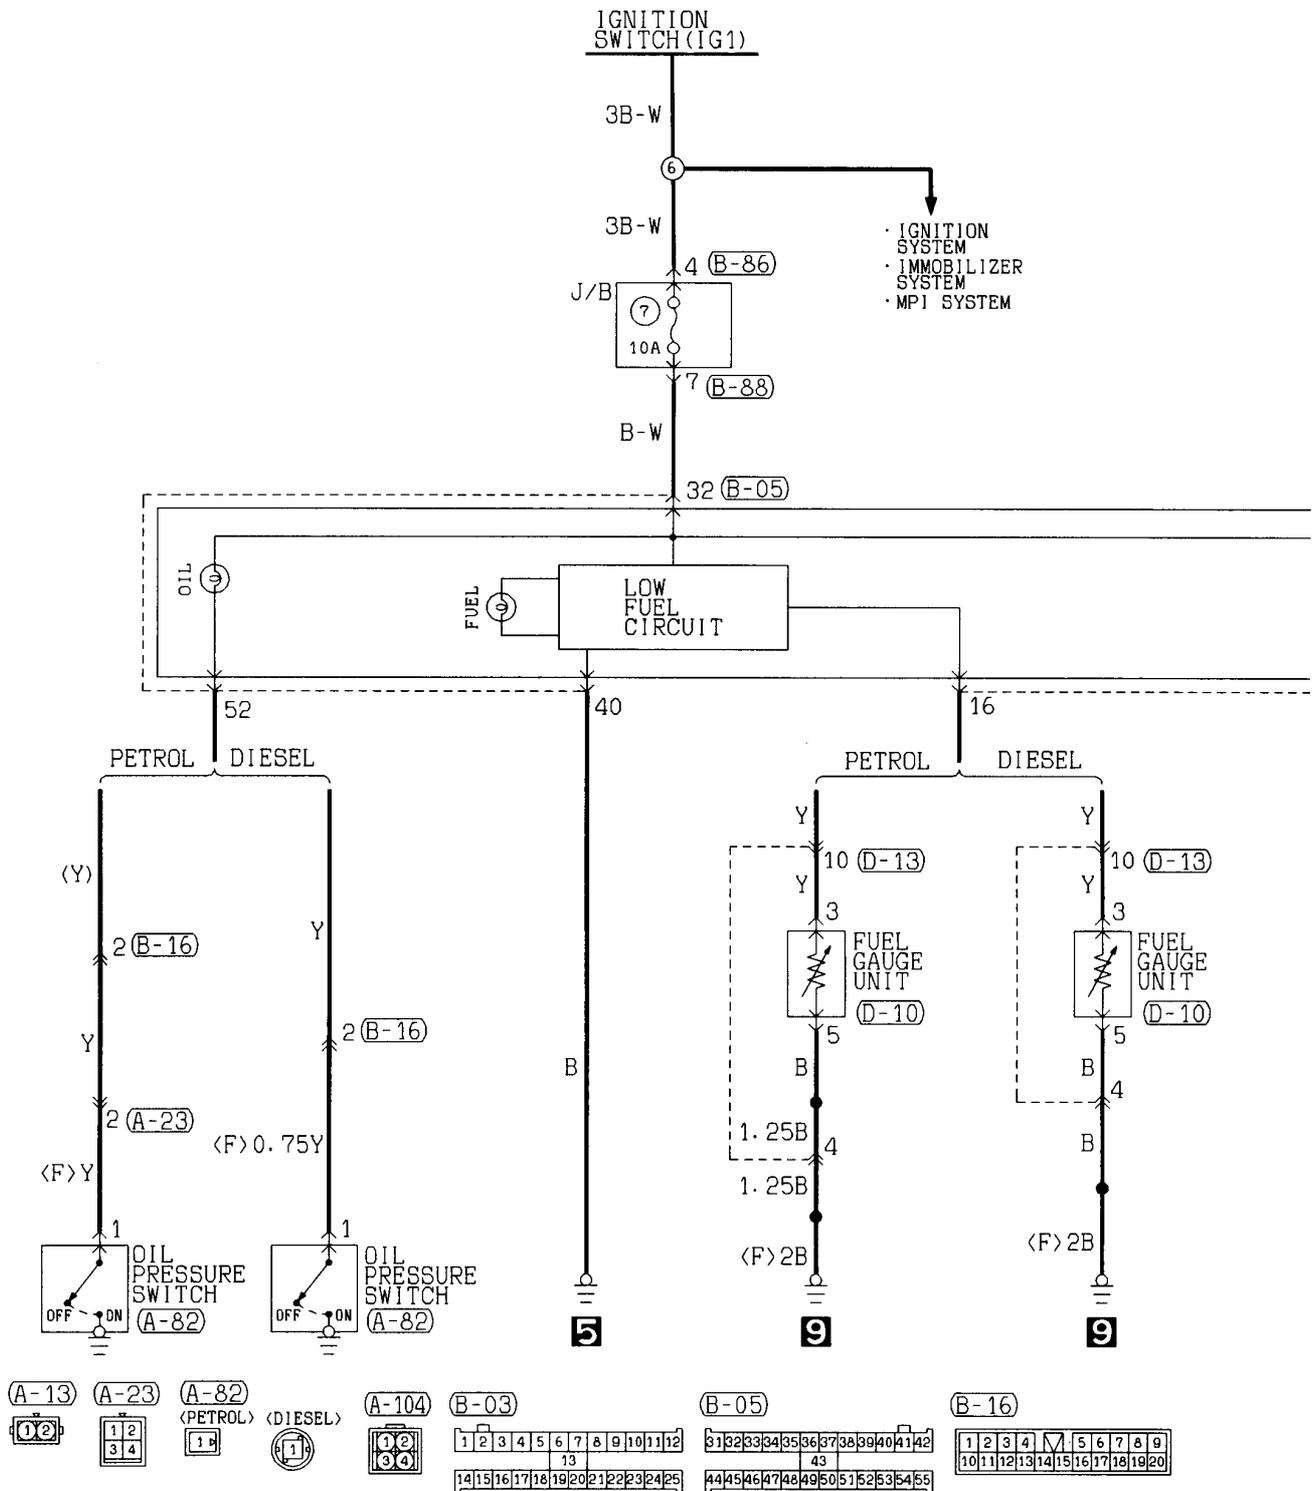


BRAKE WARNING LAMP OVERHEATING WARNING LAMP

Diesel-powered vehicles

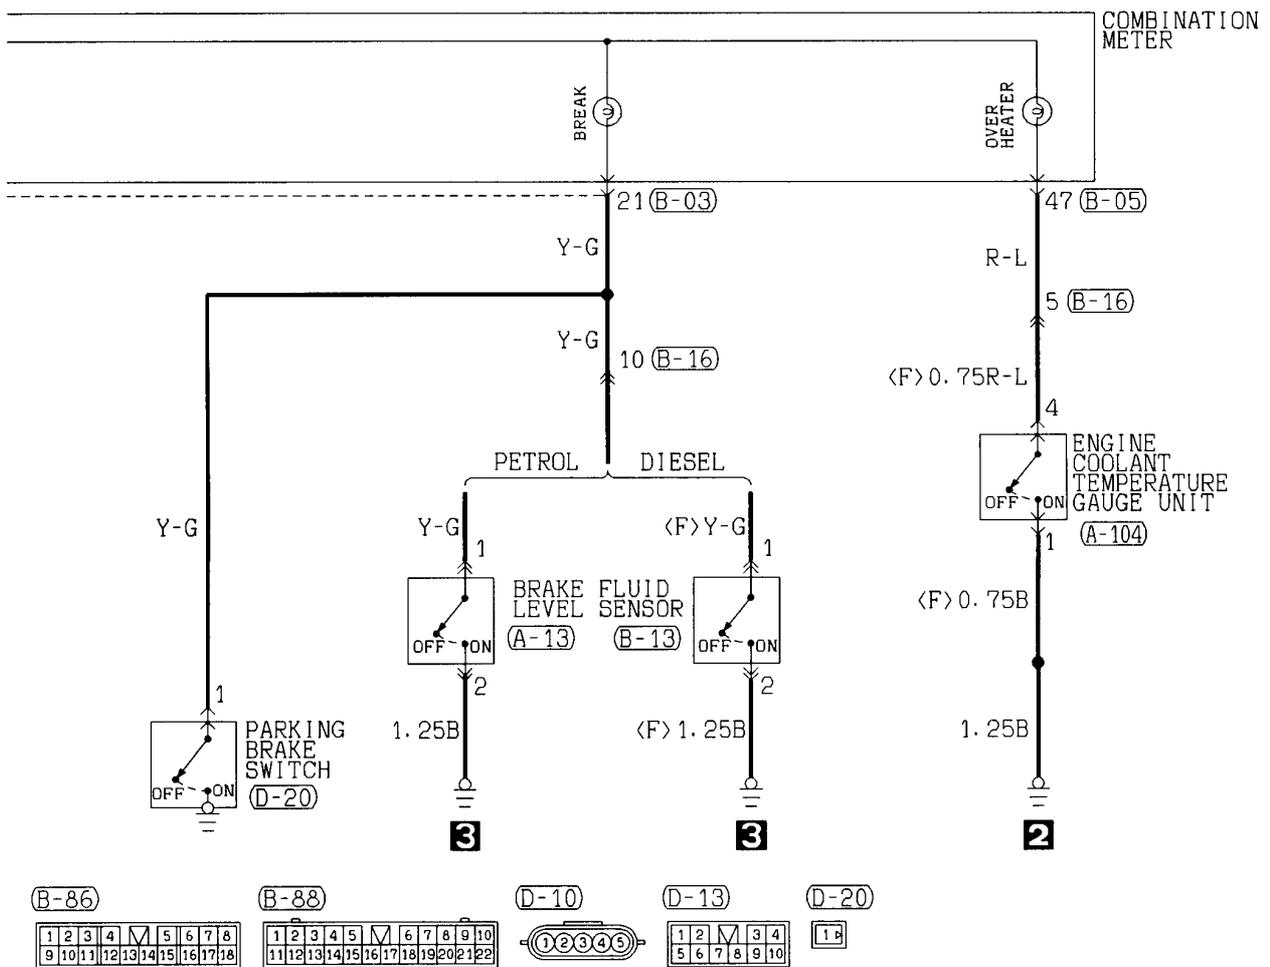

CENTRAL DOOR LOCKING SYSTEM

Vehicles without keyless entry system <Hatchback>

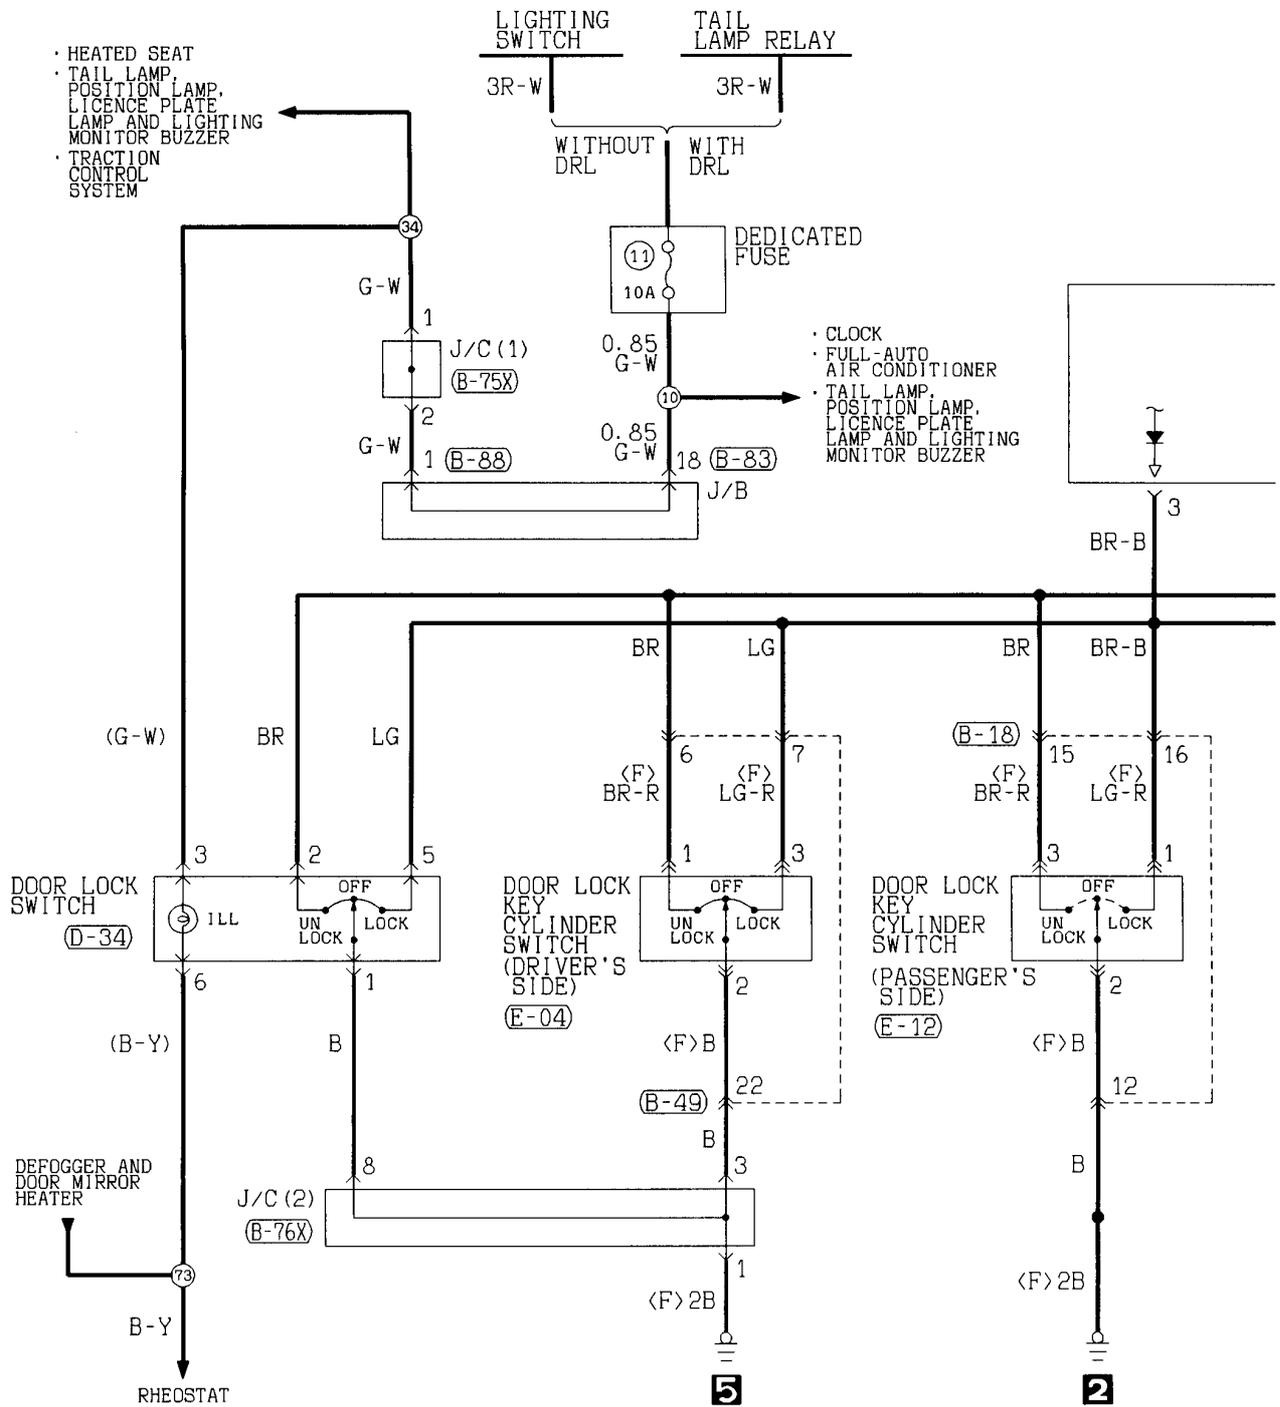

(B-18)

1	2	M	3	4			
5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20

(B-49)

1	2	3	4	5	6	7	8	9			
10	11	12	13	14	15	16	17	18	19	20	21
22	23	24	25	26	27	28	29	30	31	32	

(B-53)

1	2	3	4		
5	6	7	8	9	10

(B-67X)


1	2	3
4	5	6
7	8	9

(B-75X)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-76X)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

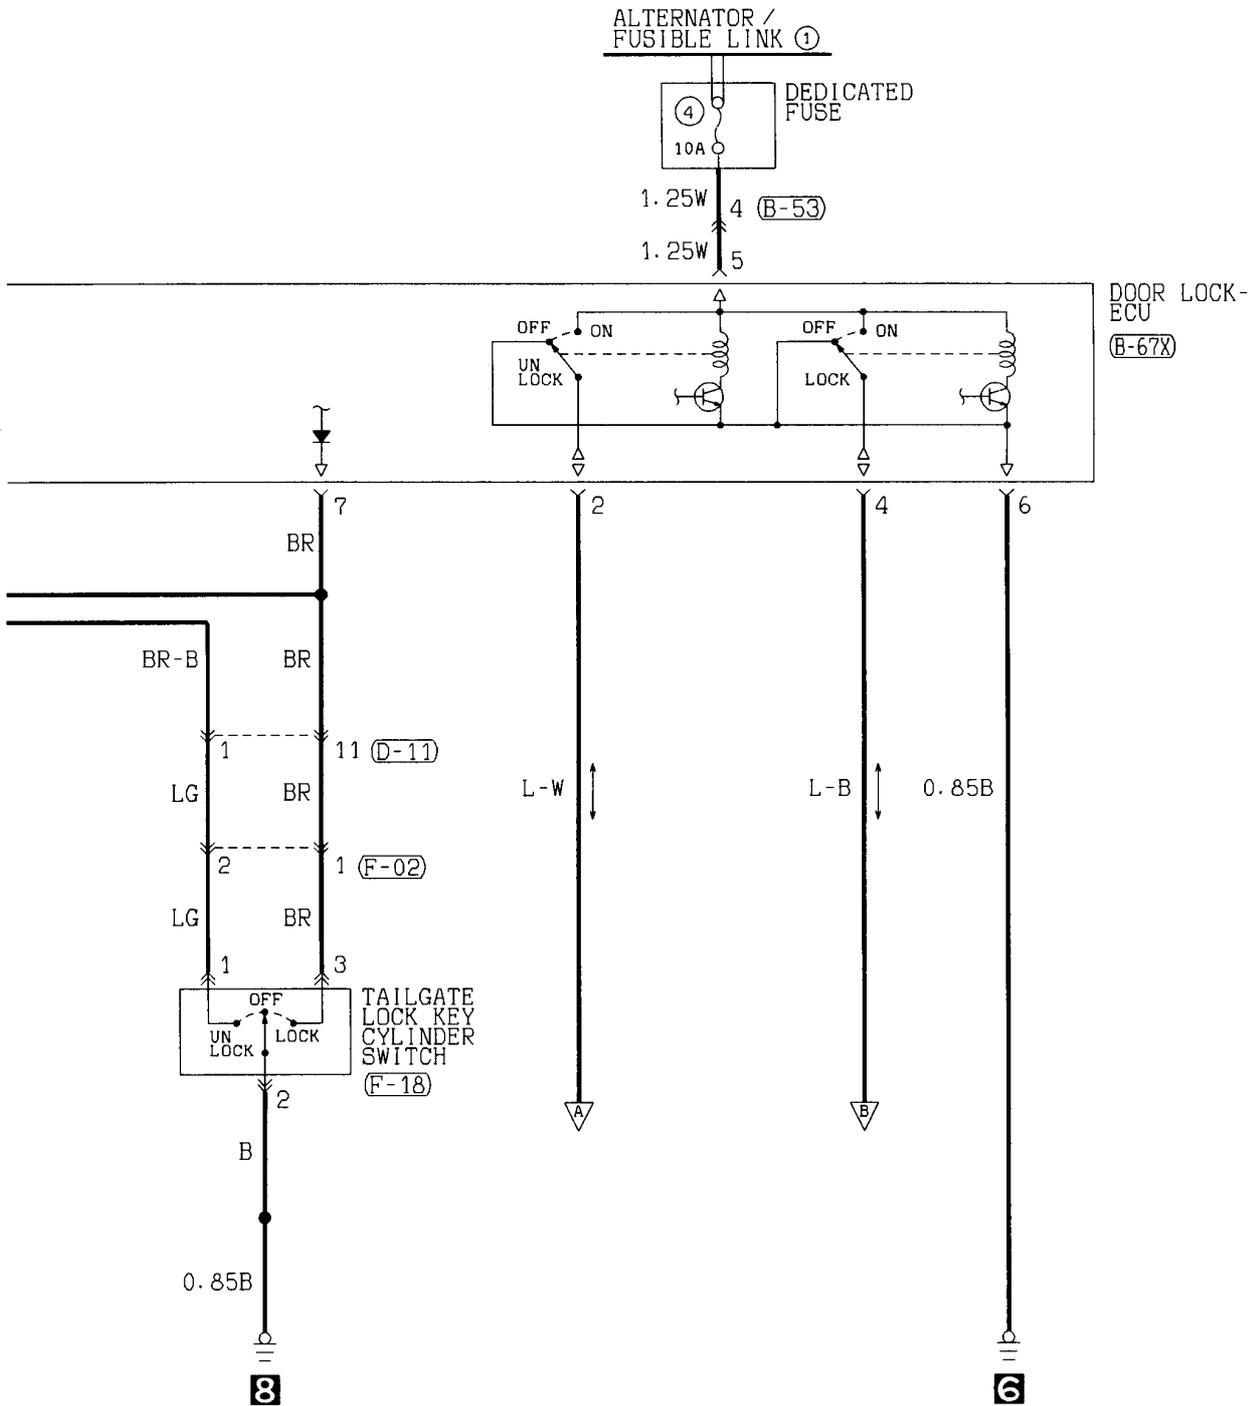


(B-83)

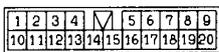

(B-88)

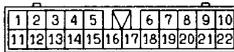

(D-11)

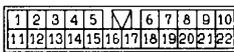

(D-34)



(E-04)



(E-12)




(F-02)



(F-18)




CENTRAL DOOR LOCKING SYSTEM <Vehicles without keyless entry system (Hatchback)> (CONTINUED)

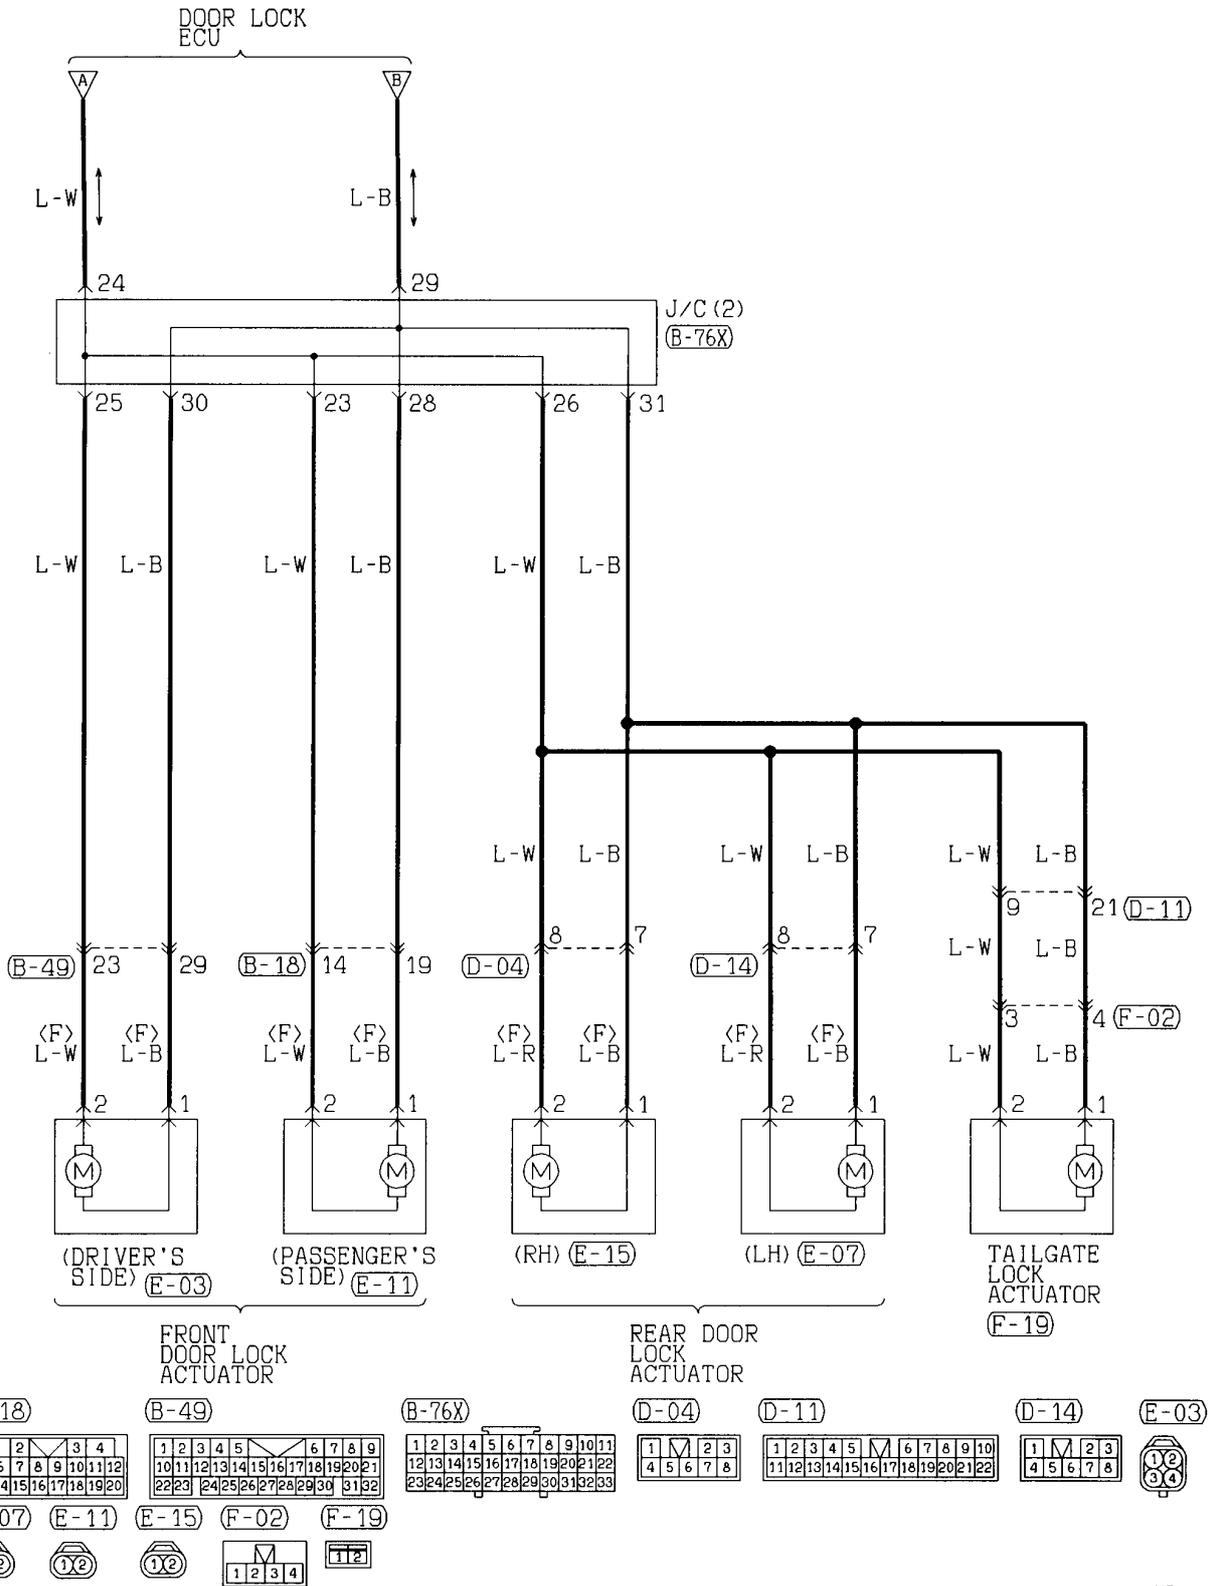


CENTRAL DOOR LOCKING SYSTEM

Vehicles without keyless entry system <Sedan>

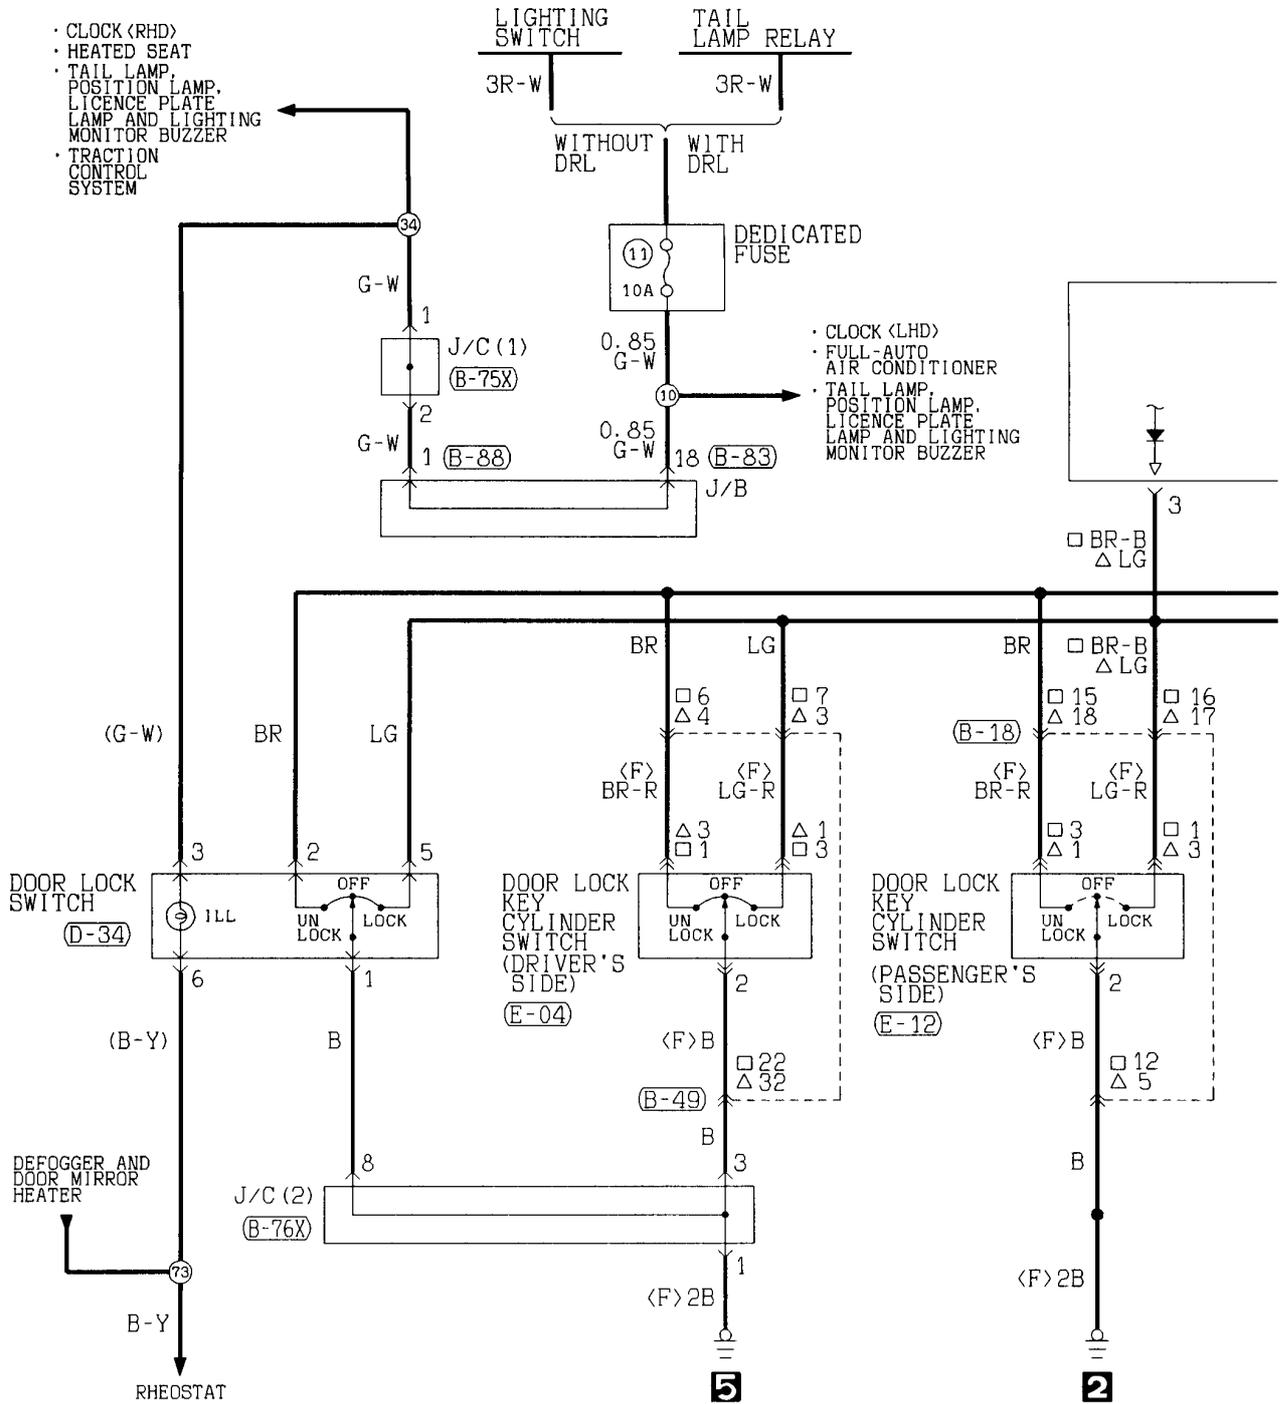


(B-18)	(B-49)	(B-53)	(B-67X)	(B-75X)	(B-76X)																																																																																																																																										
<table border="1"> <tr><td>1</td><td>2</td><td>M</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr> <tr><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr> </table>	1	2	M	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr> <tr><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td></tr> <tr><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	<table border="1"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> </table>	1	2	3	4	5	6	7	8	9	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td></tr> <tr><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> <tr><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td></tr> <tr><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> <tr><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td><td>33</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
1	2	M	3	4																																																																																																																																											
5	6	7	8	9	10	11	12																																																																																																																																								
13	14	15	16	17	18	19	20																																																																																																																																								
1	2	3	4	5	6	7	8	9																																																																																																																																							
10	11	12	13	14	15	16	17	18	19	20	21																																																																																																																																				
22	23	24	25	26	27	28	29	30	31	32																																																																																																																																					
1	2	3	4																																																																																																																																												
5	6	7	8	9	10																																																																																																																																										
1	2	3																																																																																																																																													
4	5	6																																																																																																																																													
7	8	9																																																																																																																																													
1	2	3	4	5	6	7	8	9	10	11																																																																																																																																					
12	13	14	15	16	17	18	19	20	21	22																																																																																																																																					
23	24	25	26	27	28	29	30	31	32	33																																																																																																																																					
1	2	3	4	5	6	7	8	9	10	11																																																																																																																																					
12	13	14	15	16	17	18	19	20	21	22																																																																																																																																					
23	24	25	26	27	28	29	30	31	32	33																																																																																																																																					


CENTRAL DOOR LOCKING SYSTEM <Vehicles without keyless entry system (Sedan)> (CONTINUED)

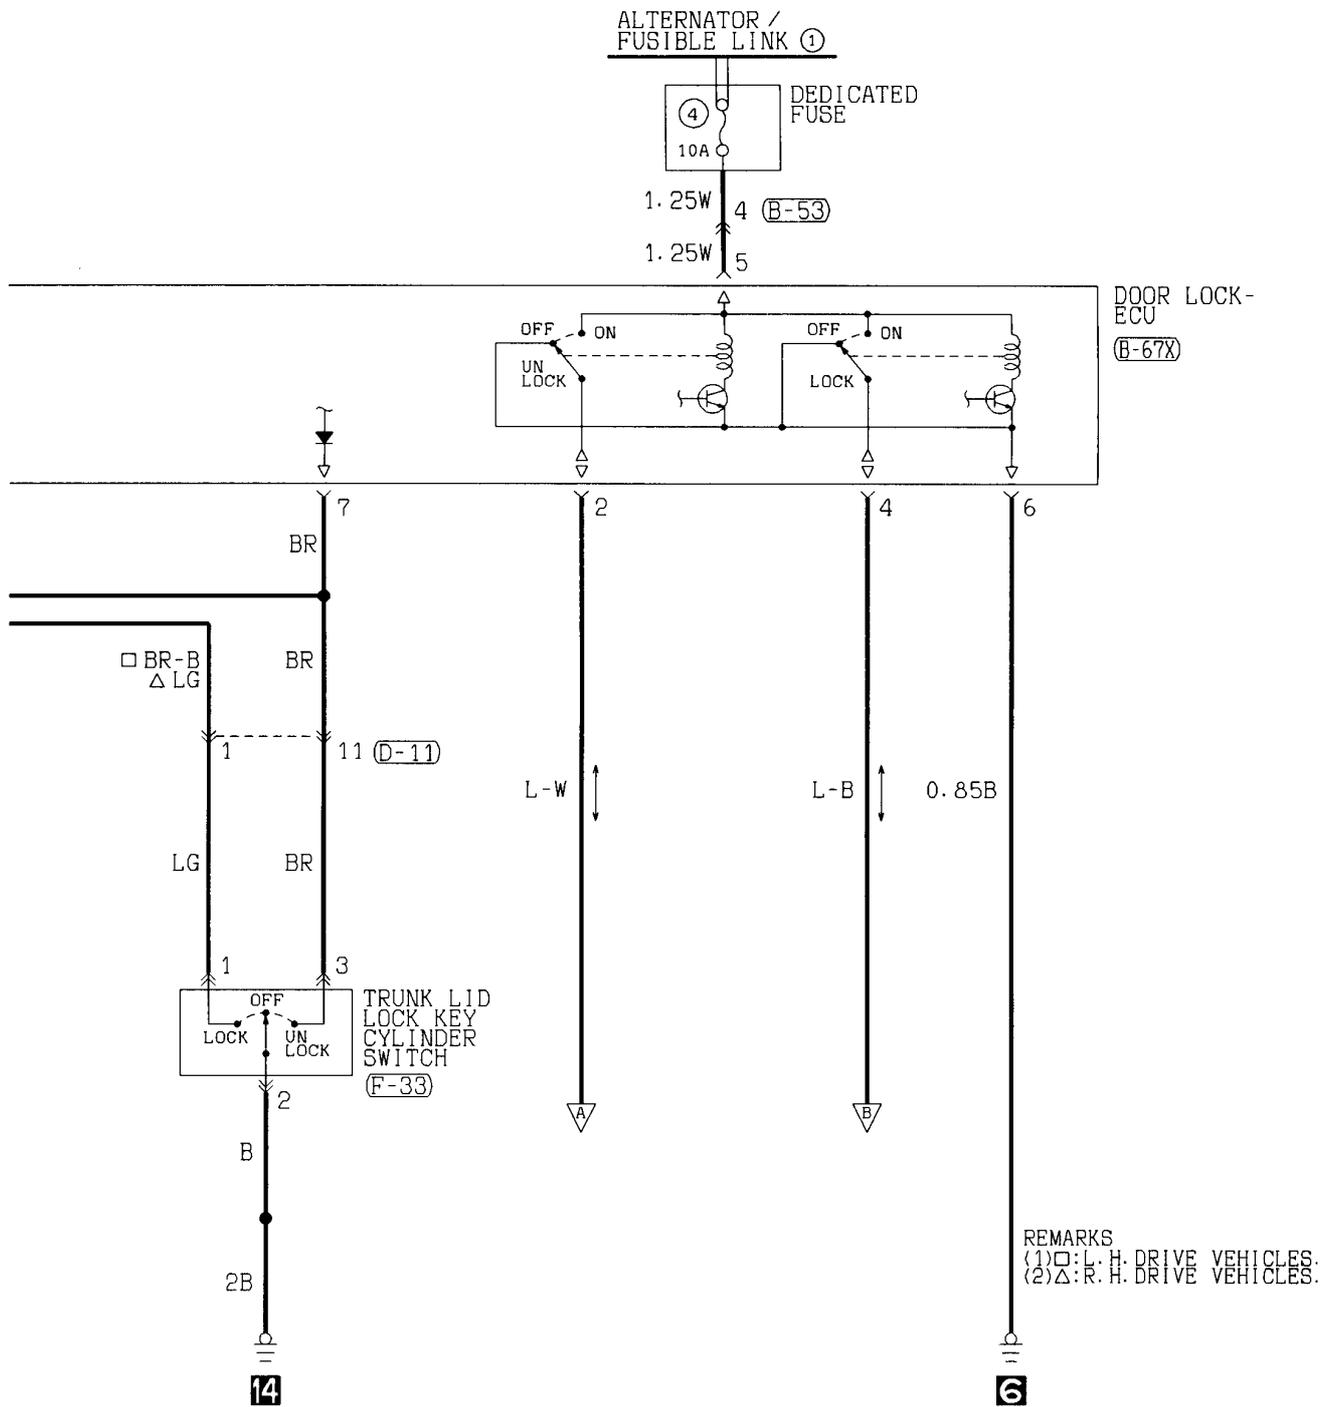


(B-83)

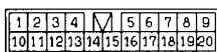

(B-88)

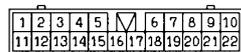

(D-11)

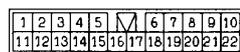

(D-34)



(E-04)




(E-12)




(F-33)



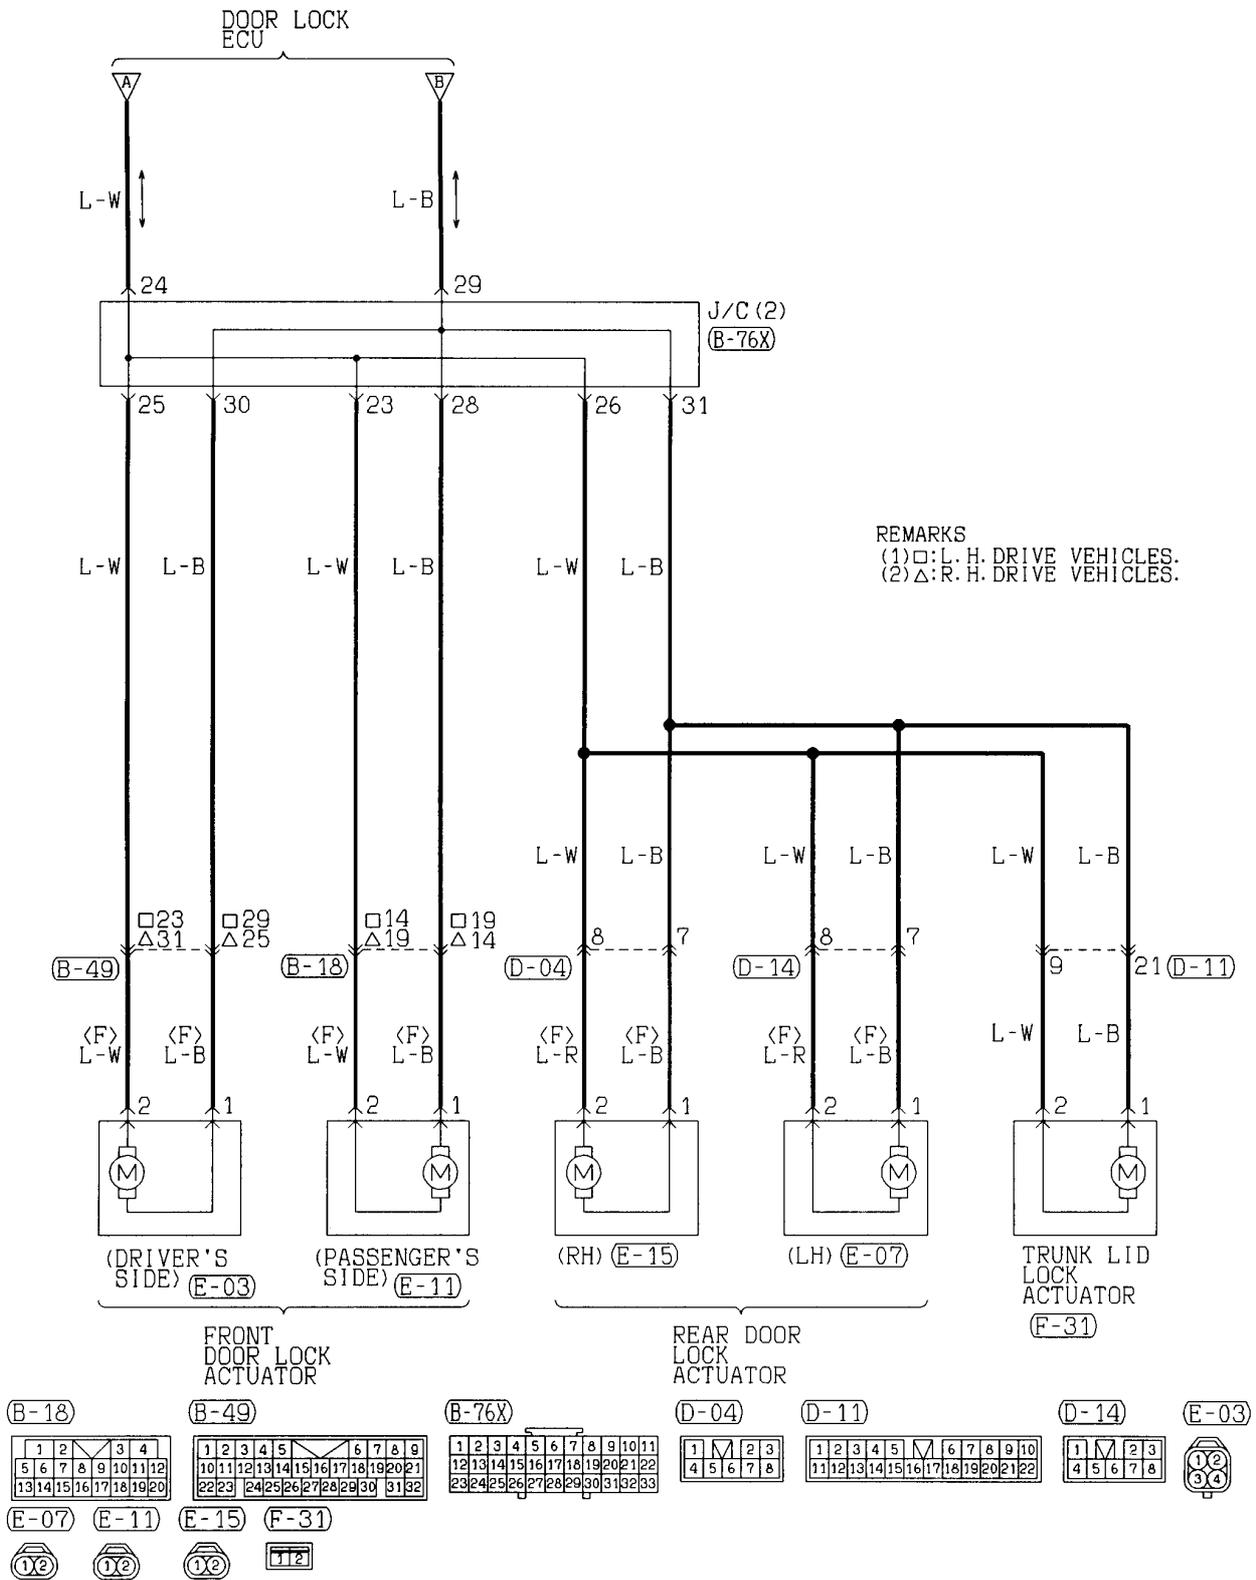



CENTRAL DOOR LOCKING SYSTEM

Vehicles with keyless entry system <Hatchback>

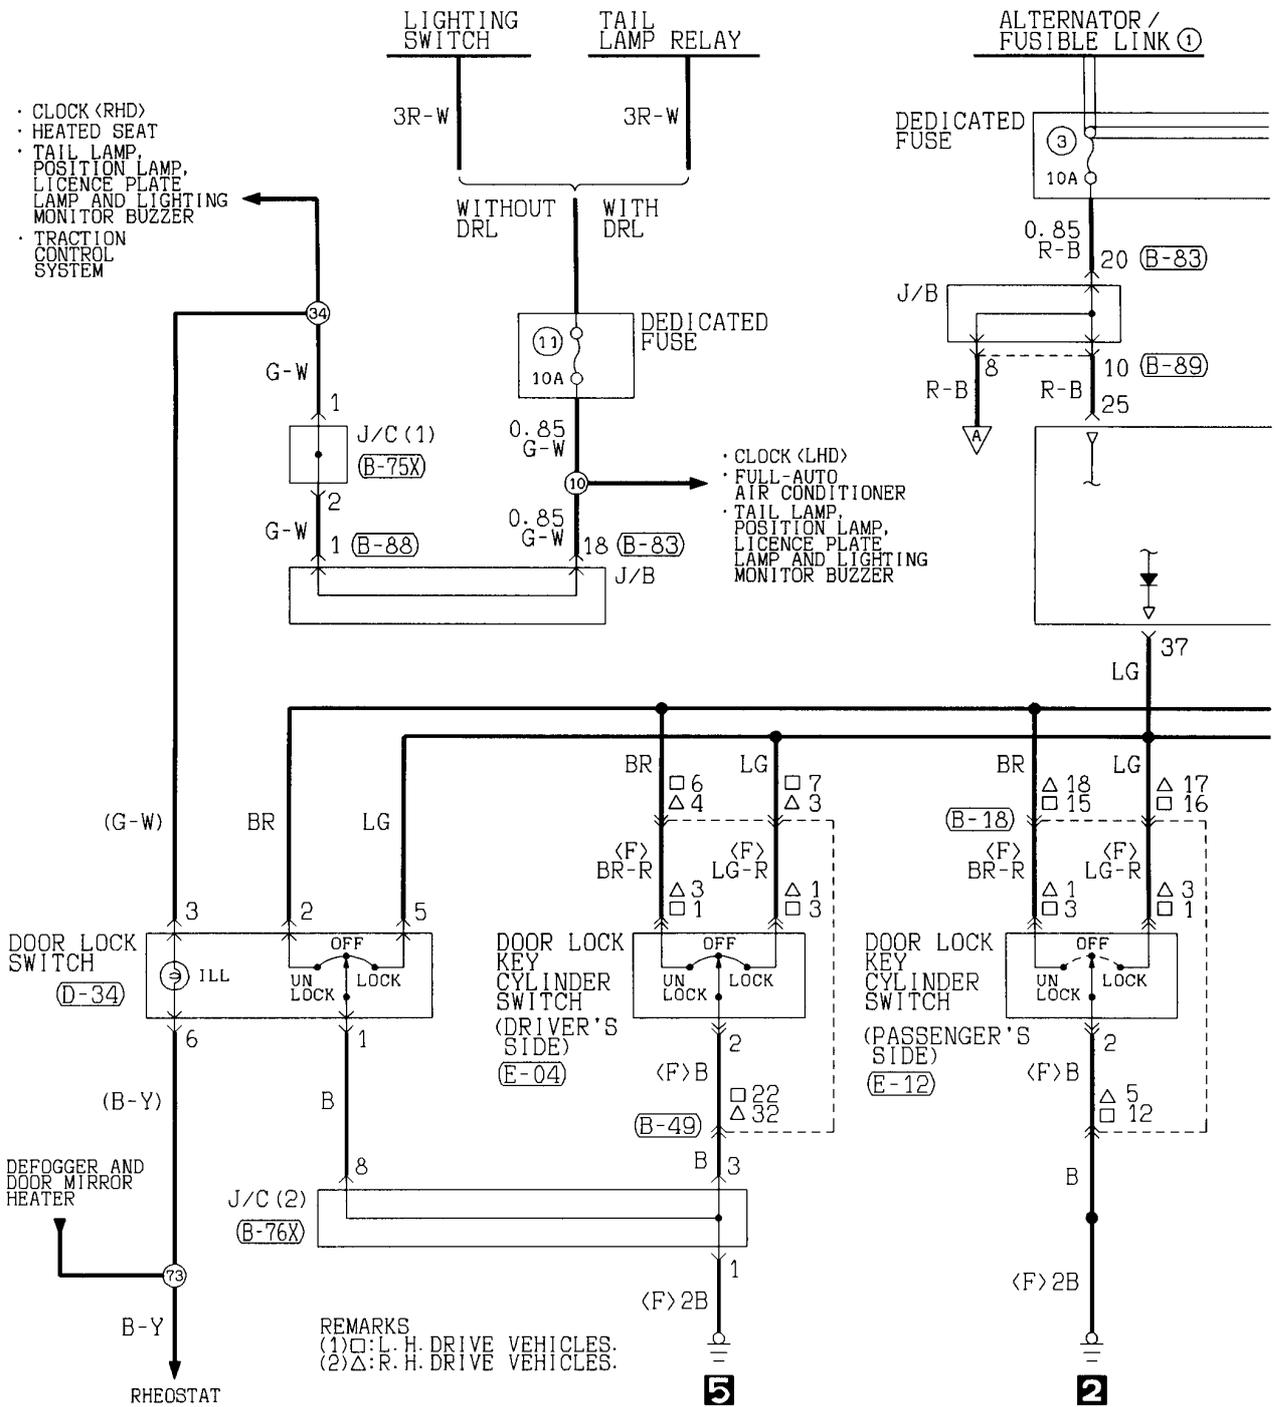


REMARKS
 (1) □: L. H. DRIVE VEHICLES.
 (2) △: R. H. DRIVE VEHICLES.

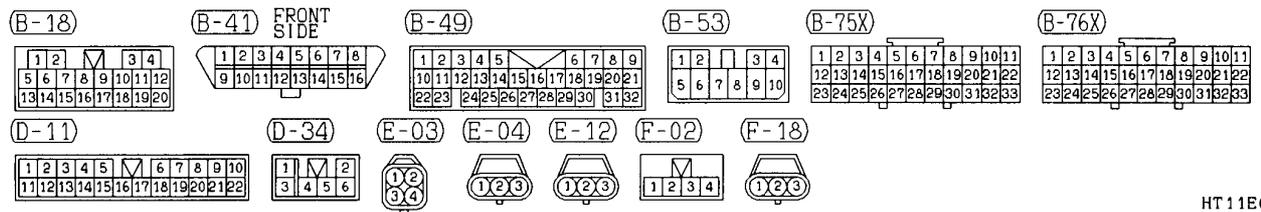

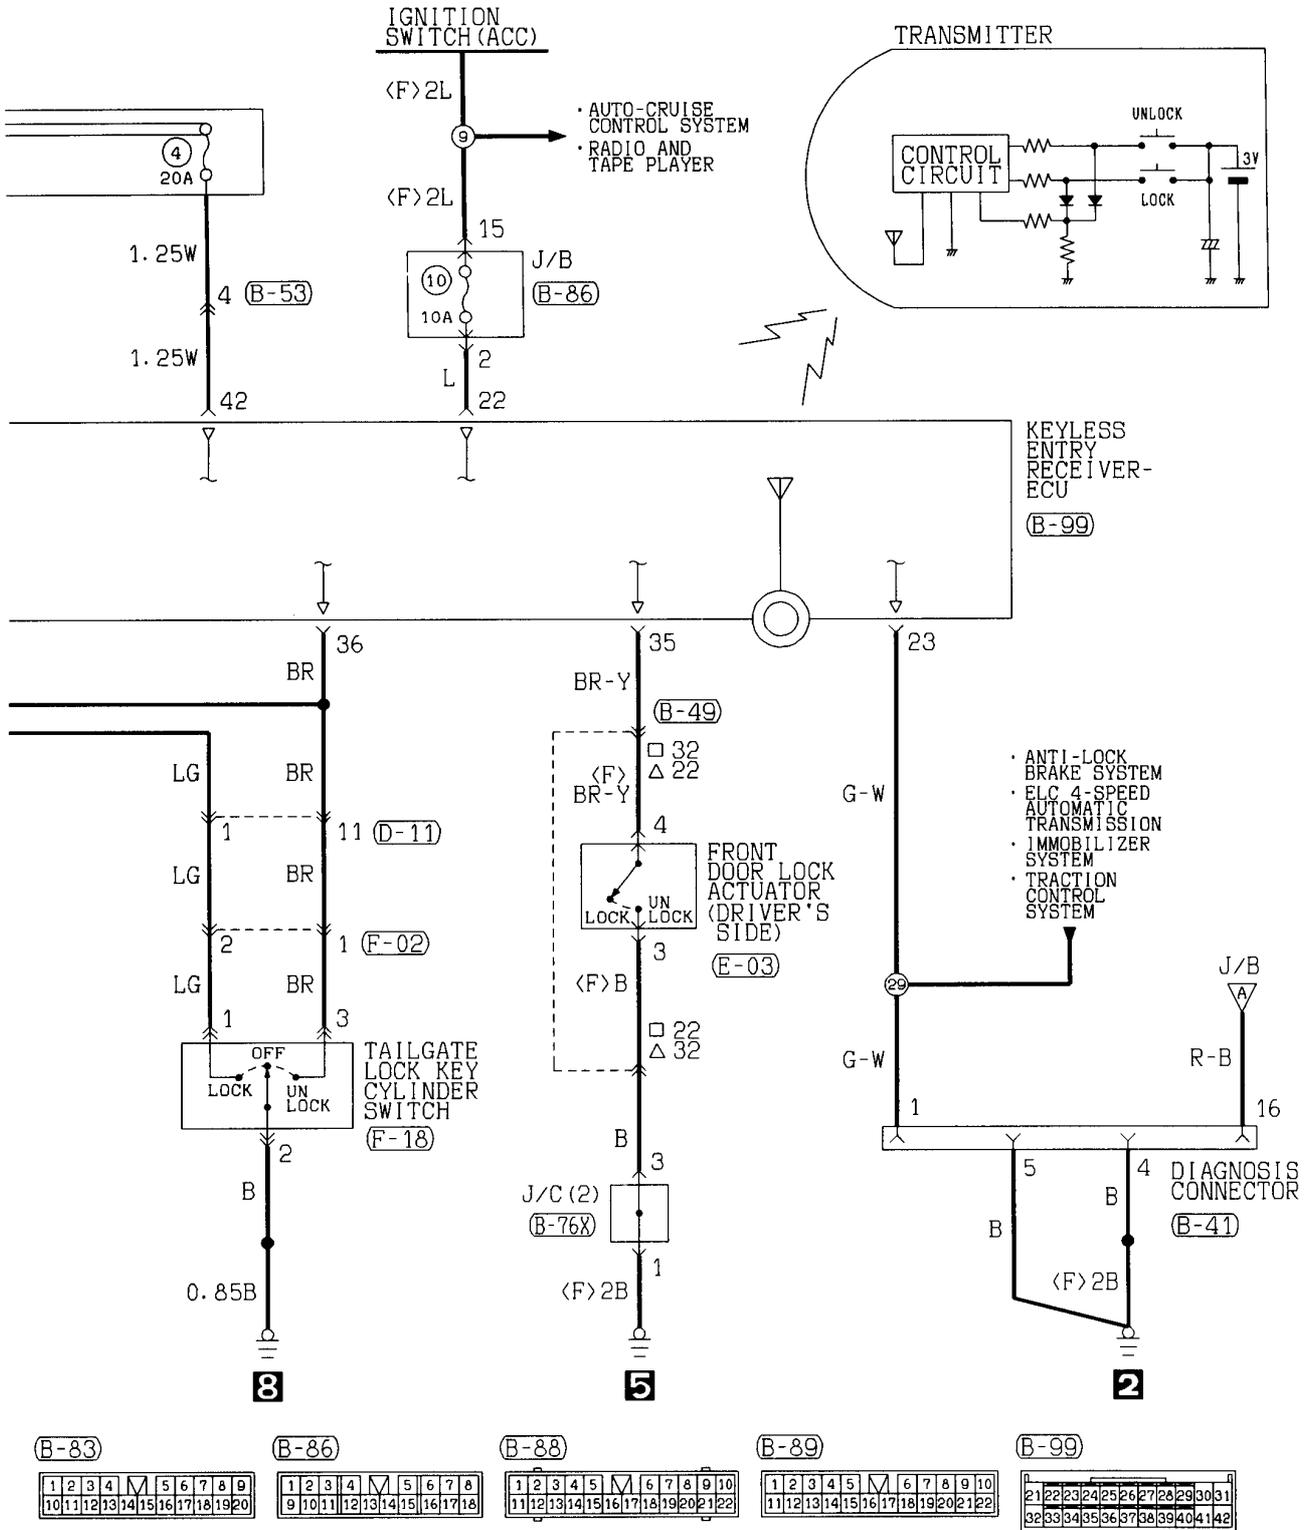

CENTRAL DOOR LOCKING SYSTEM <Vehicles with keyless entry system (Hatchback)> (CONTINUED)

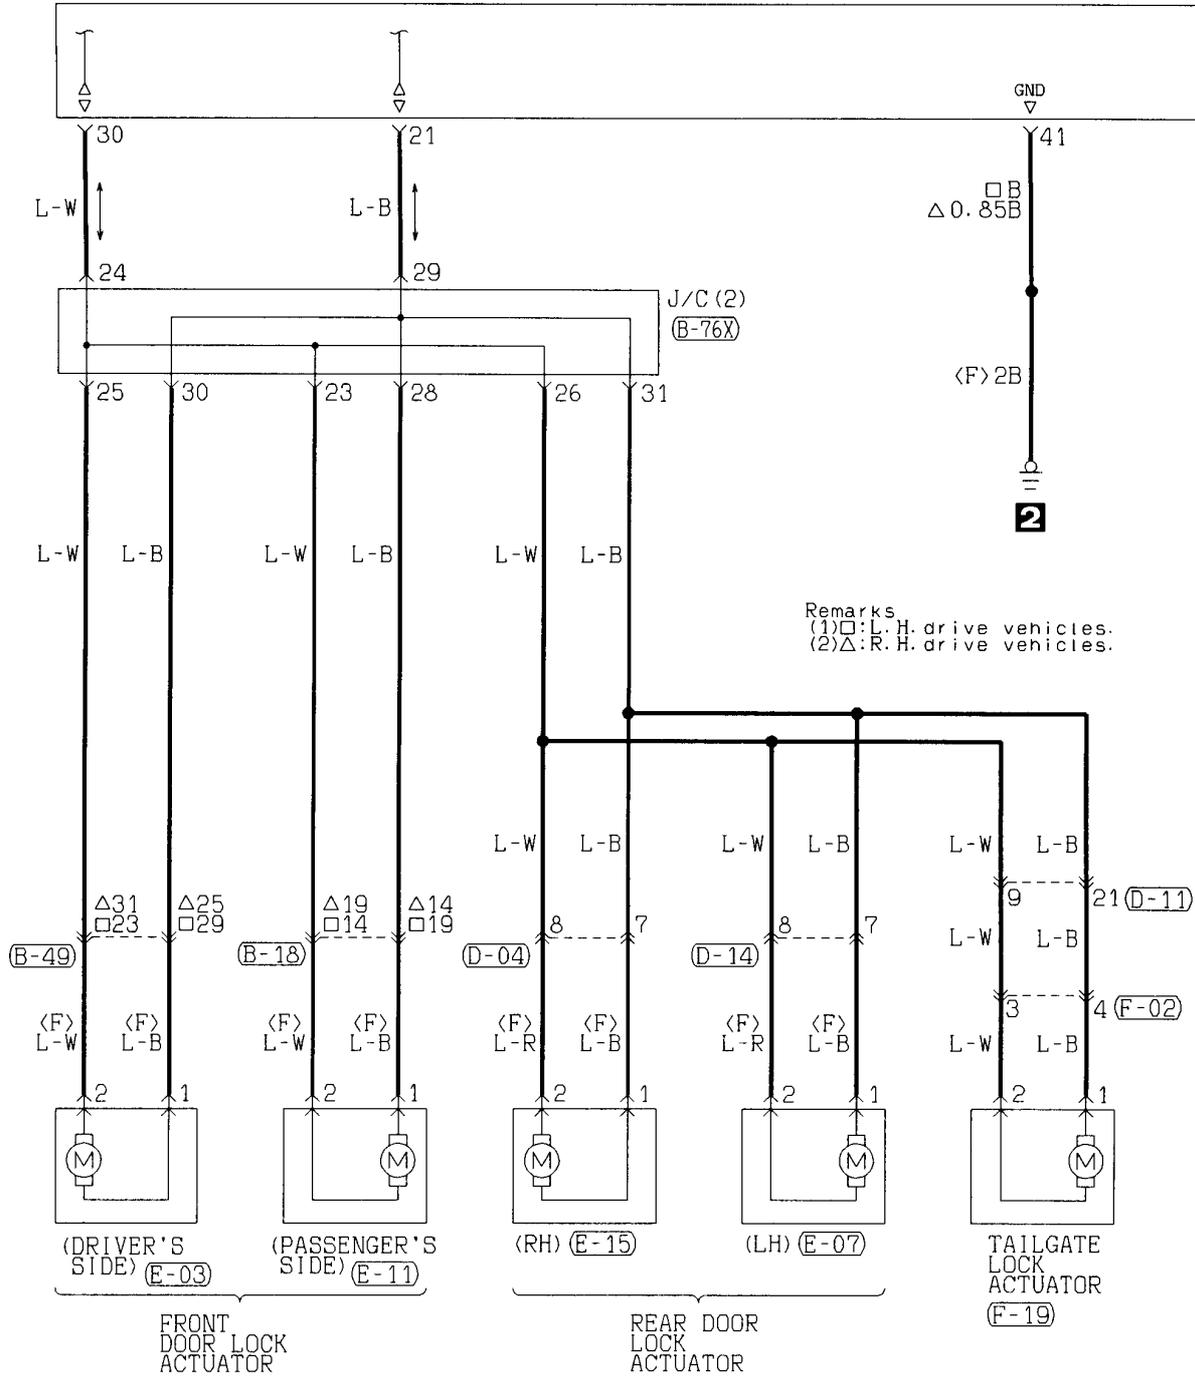

(B-18)

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20

(B-49)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32	33			

(B-76X)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-99)

21	22	23	24	25	26	27	28	29	30	31
32	33	34	35	36	37	38	39	40	41	42

(D-02)


1	B
---	---

(D-04)

1	M	2	3
4	5	6	7
8			



(F-26)


1	B
---	---

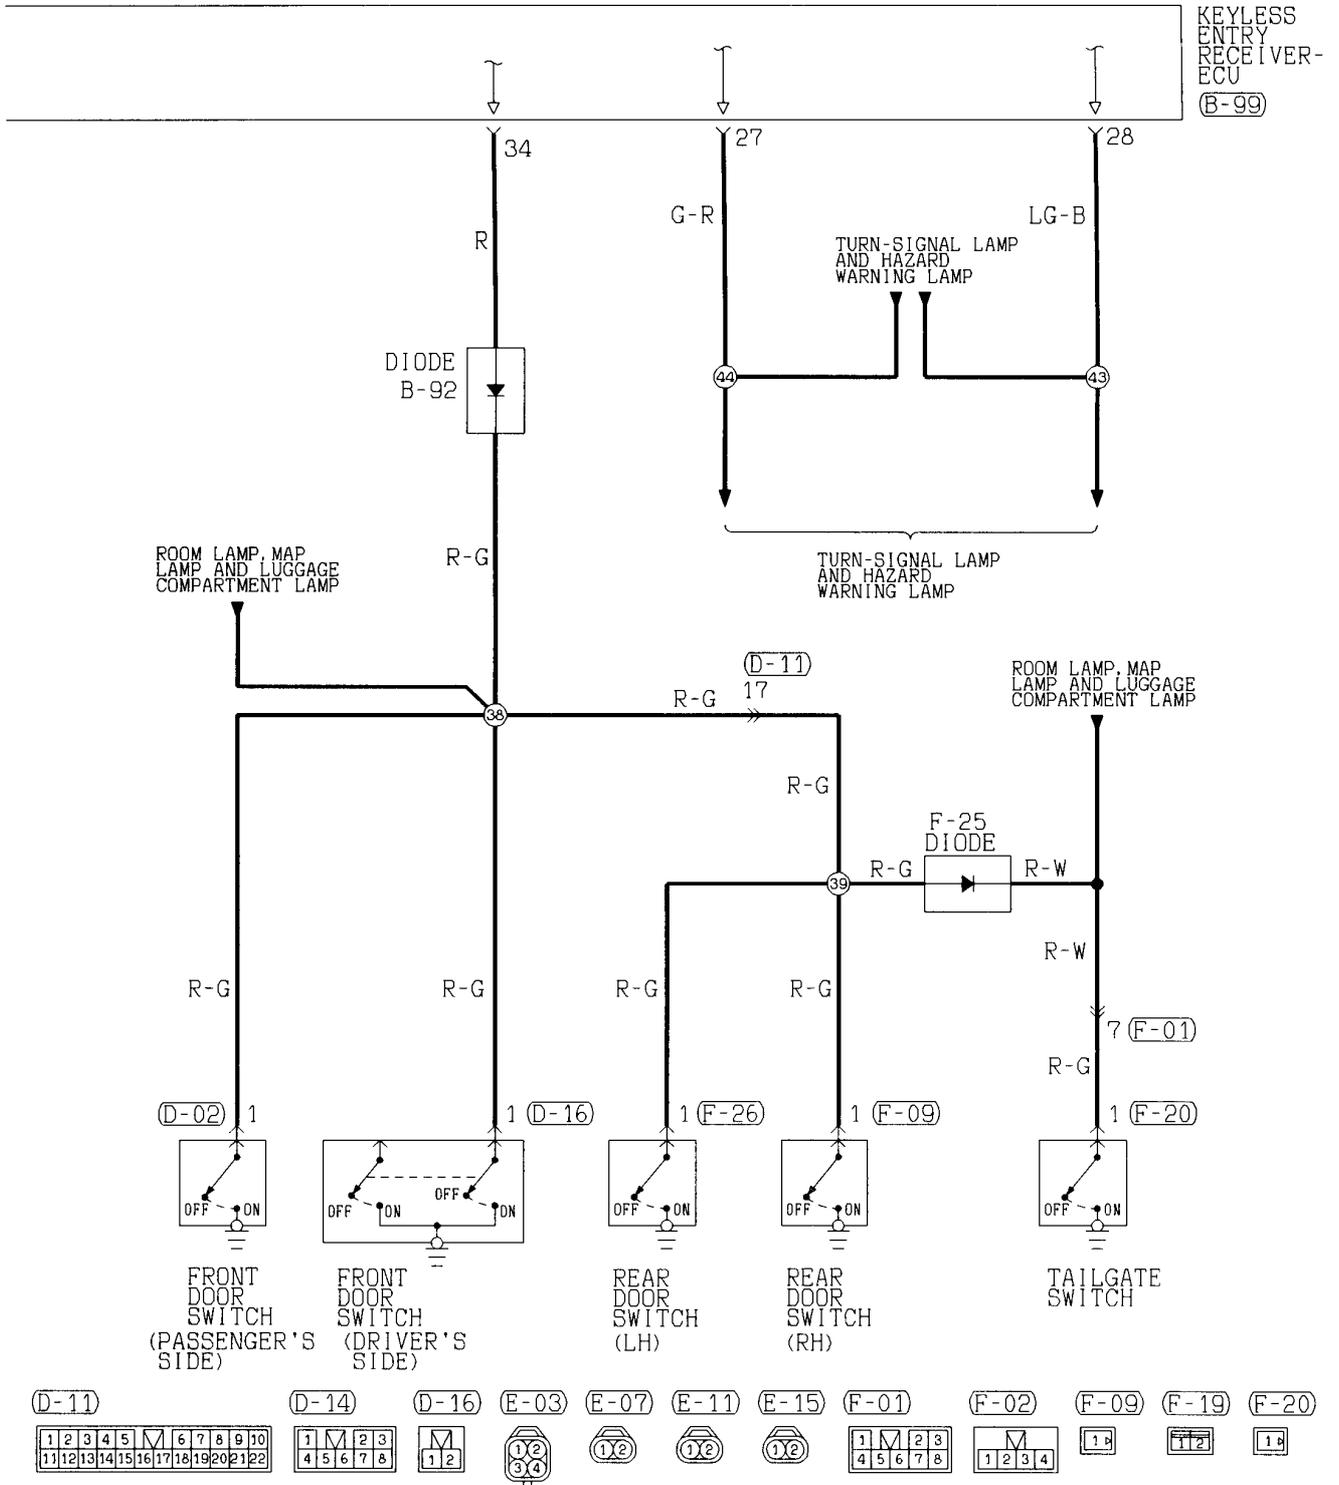

CENTRAL DOOR LOCKING SYSTEM

Vehicles with keyless entry system <Sedan>

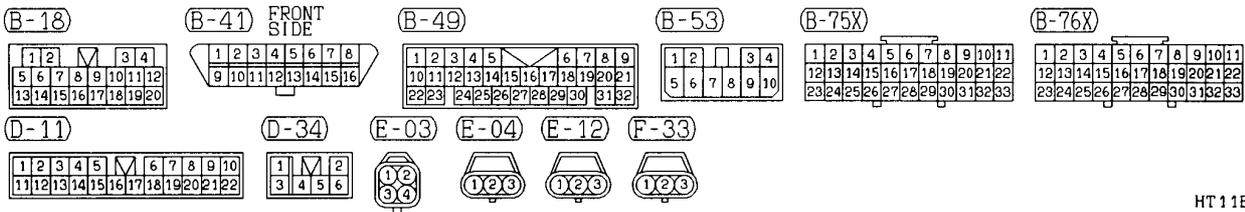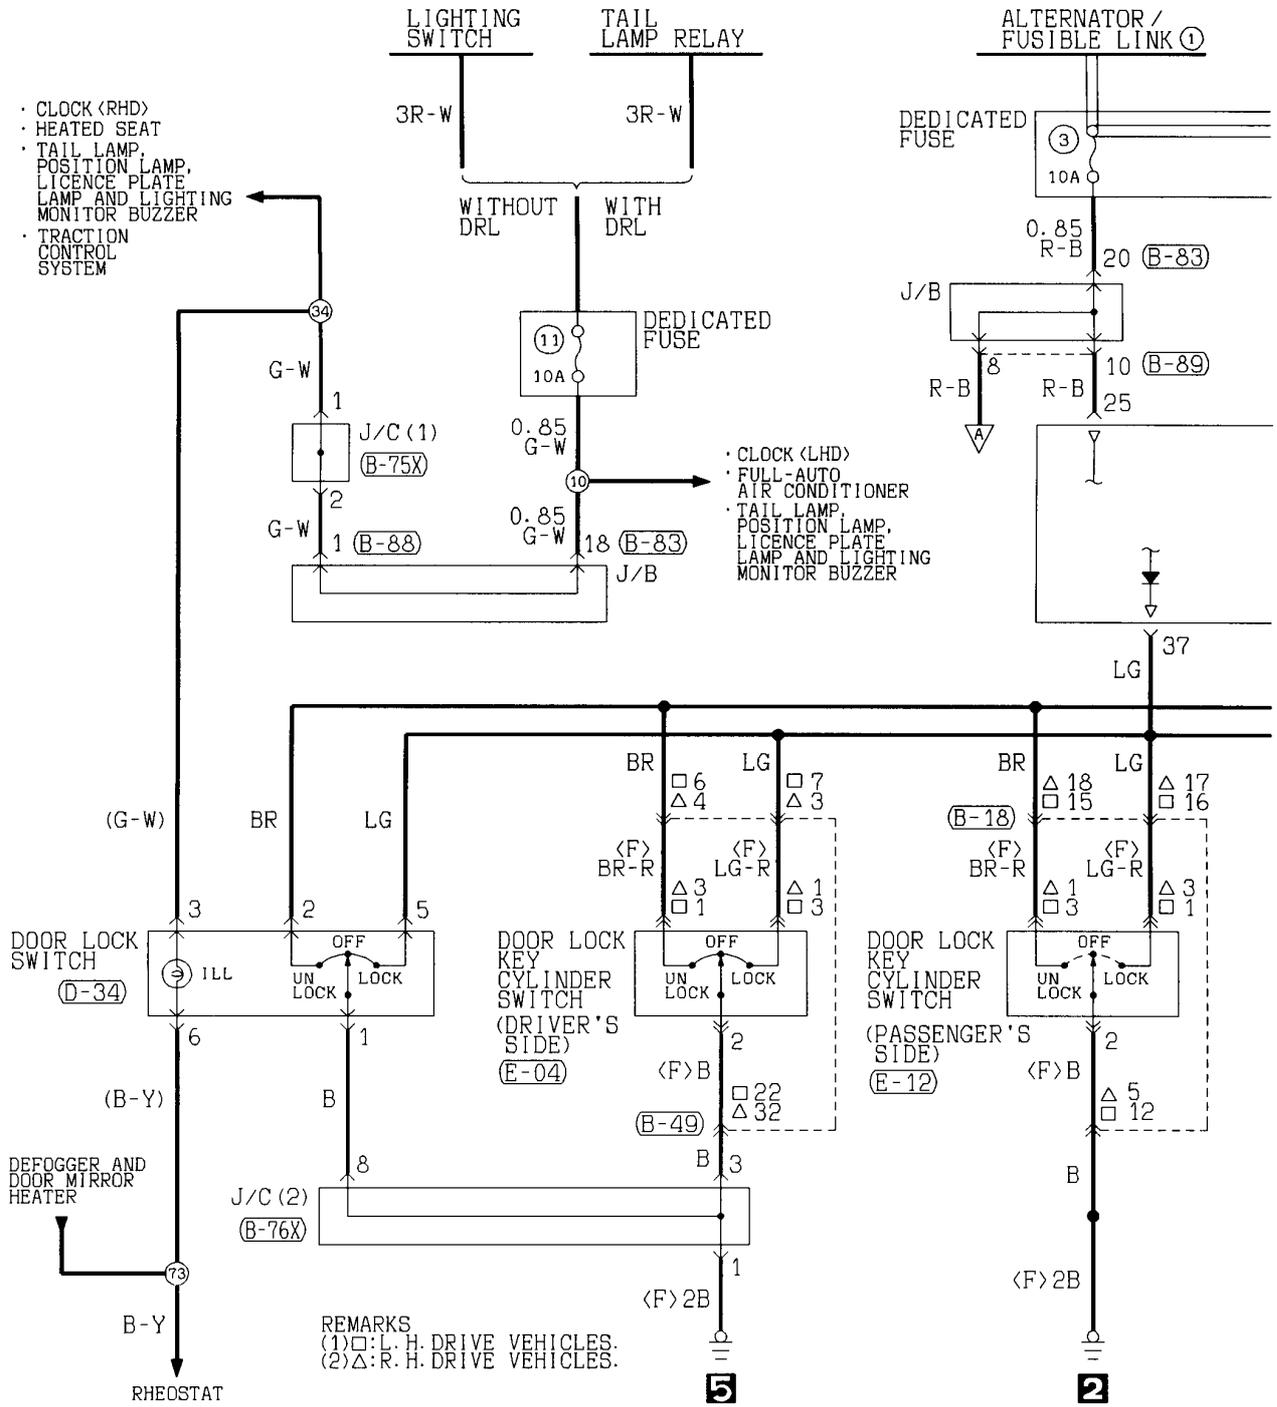

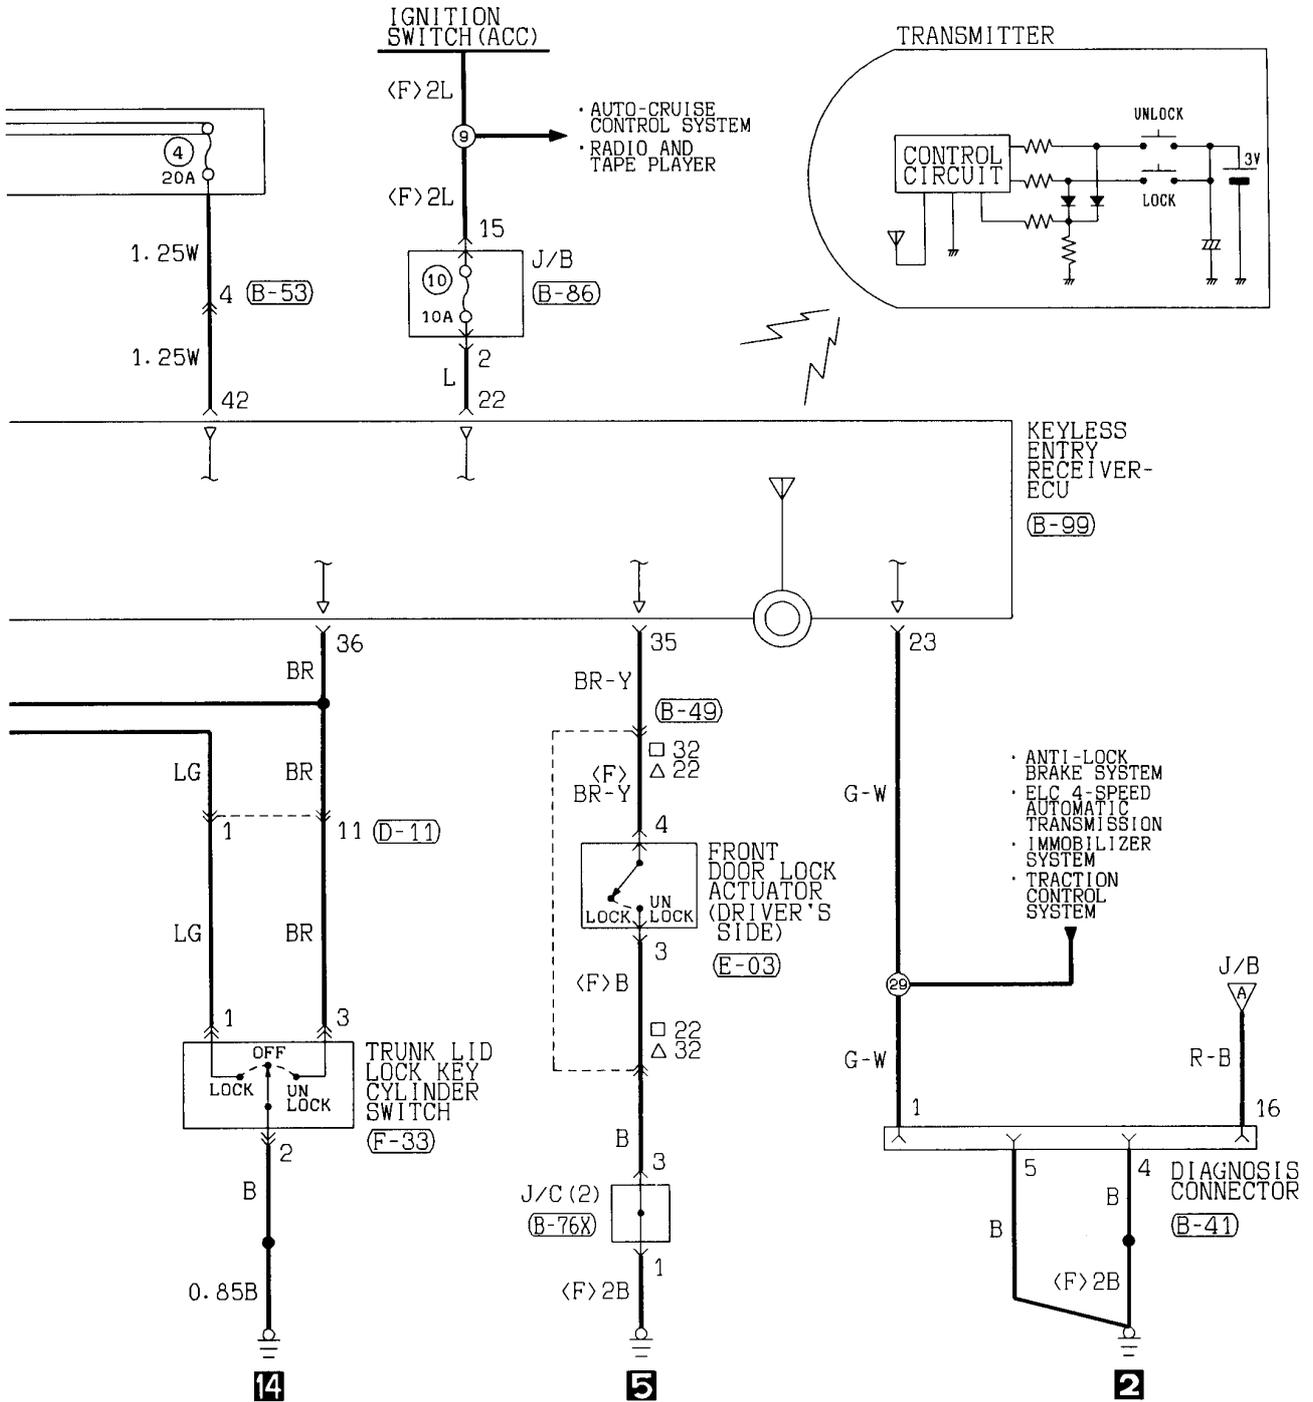

(B-83)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(B-86)

1	2	3	4	M	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

(B-88)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22


(B-89)


1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(B-99)

21	22	23	24	25	26	27	28	29	30	31
32	33	34	35	36	37	38	39	40	41	42



CENTRAL DOOR LOCKING SYSTEM <Vehicles with keyless entry system (Sedan)> (CONTINUED)

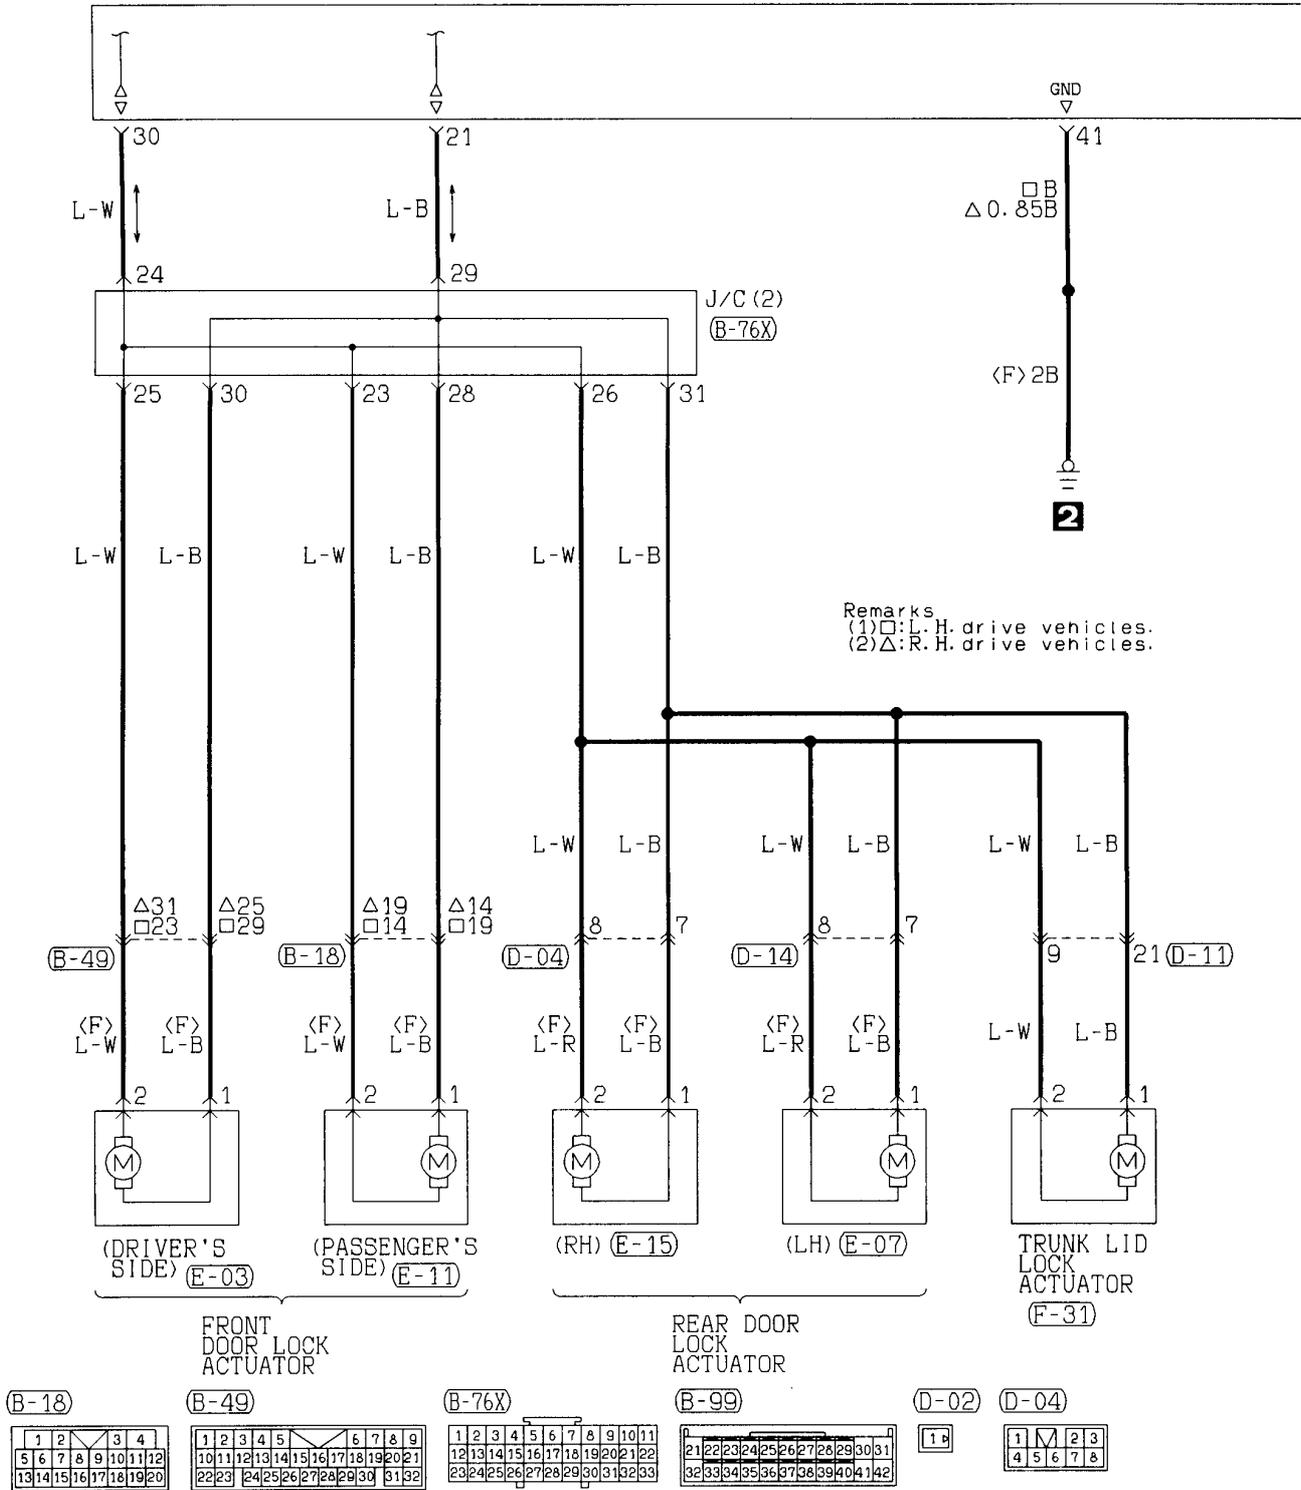


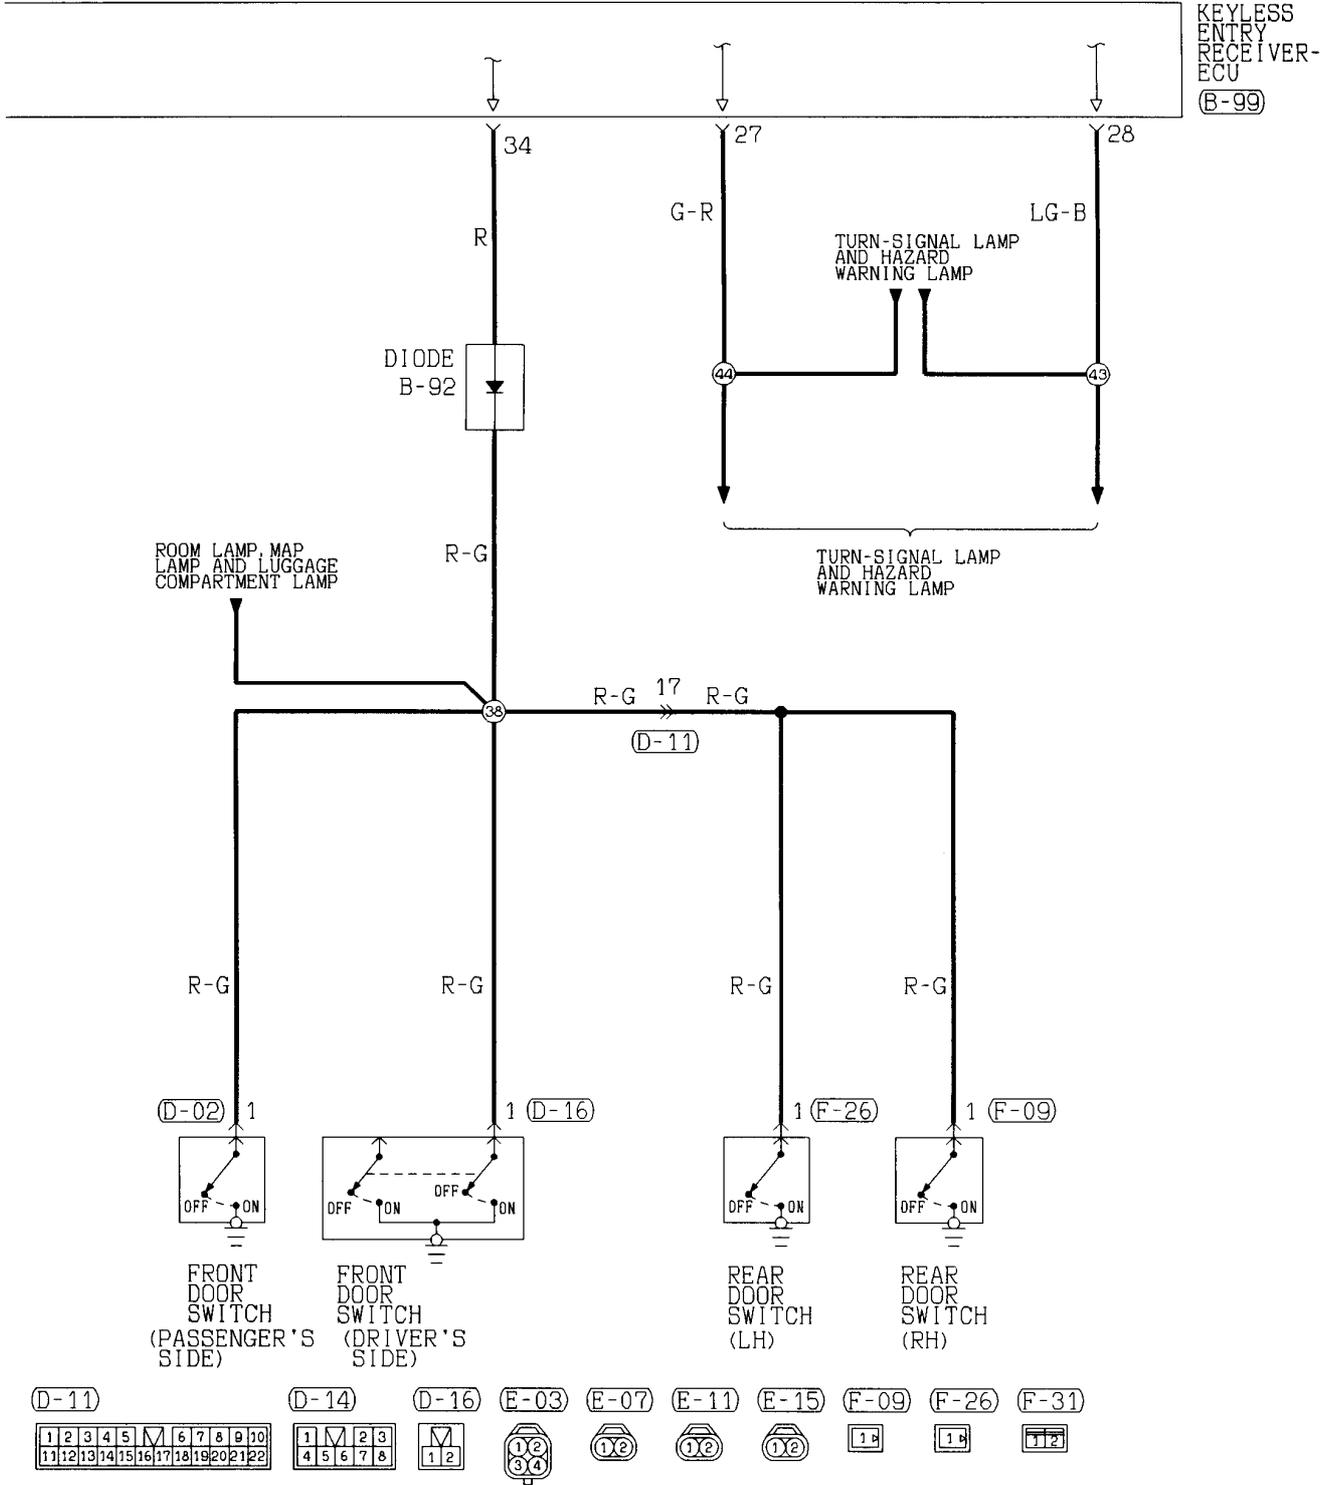

MANUAL AIR CONDITIONER



Petrol-powered vehicles

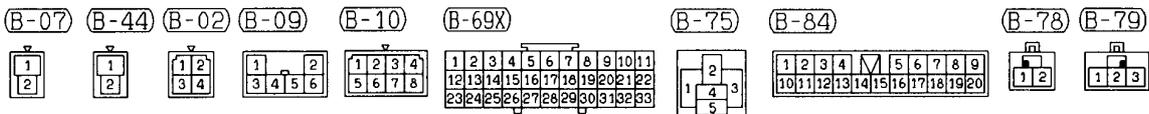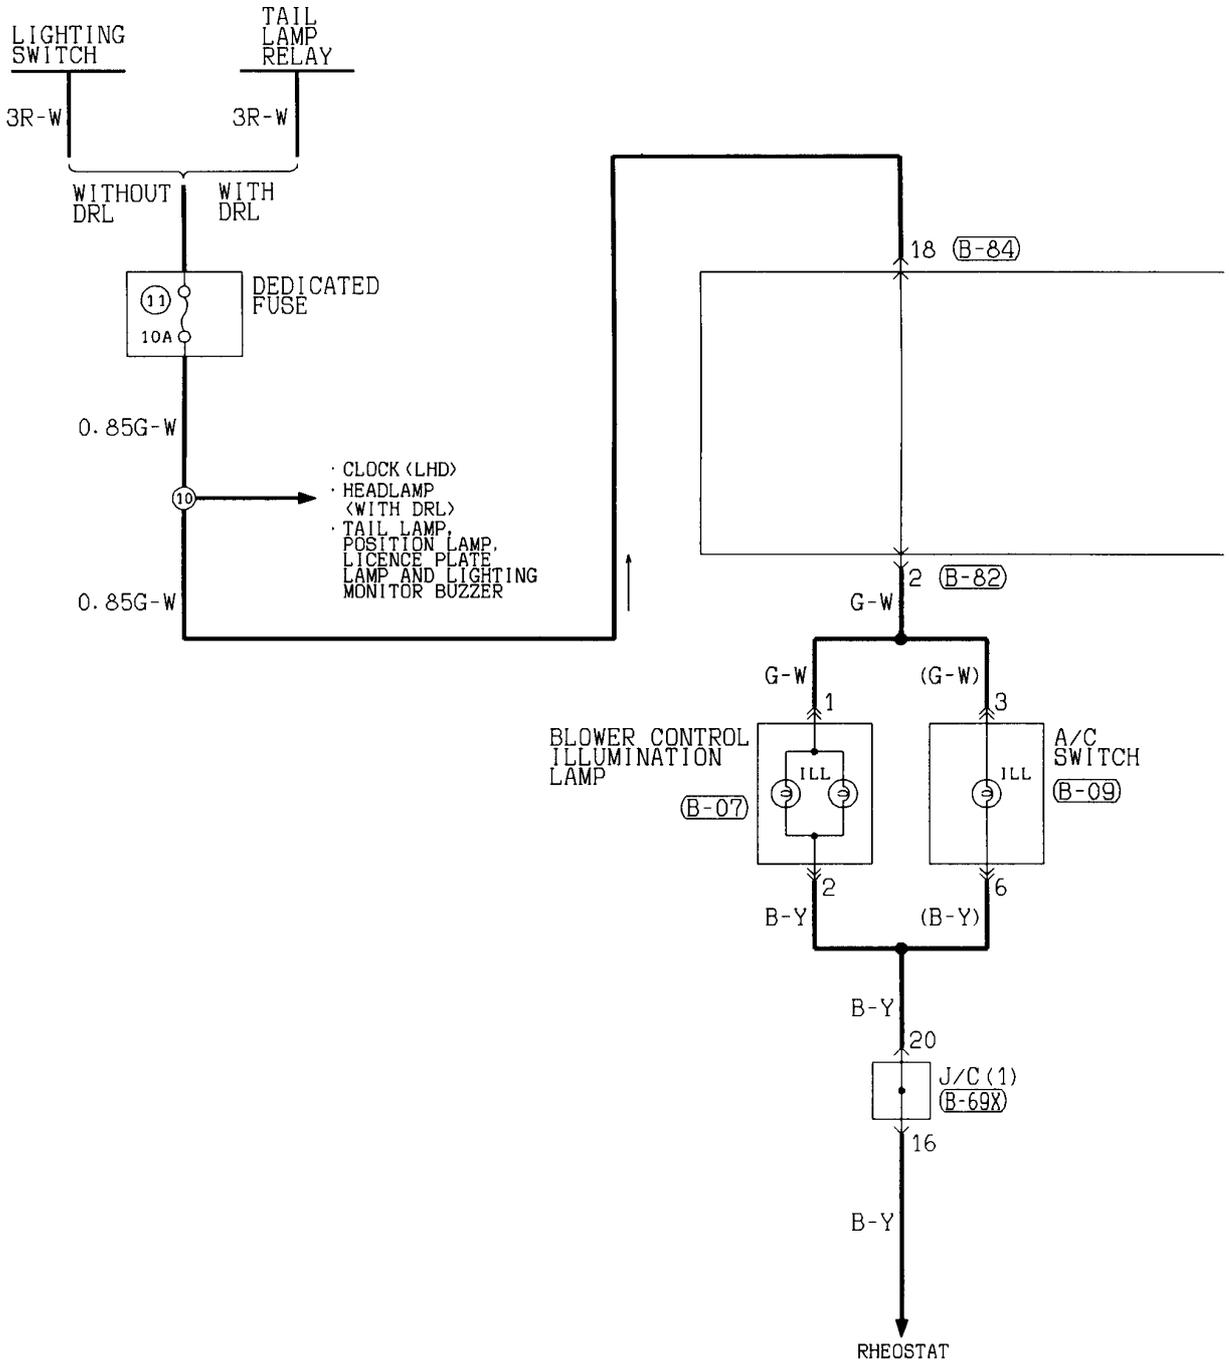


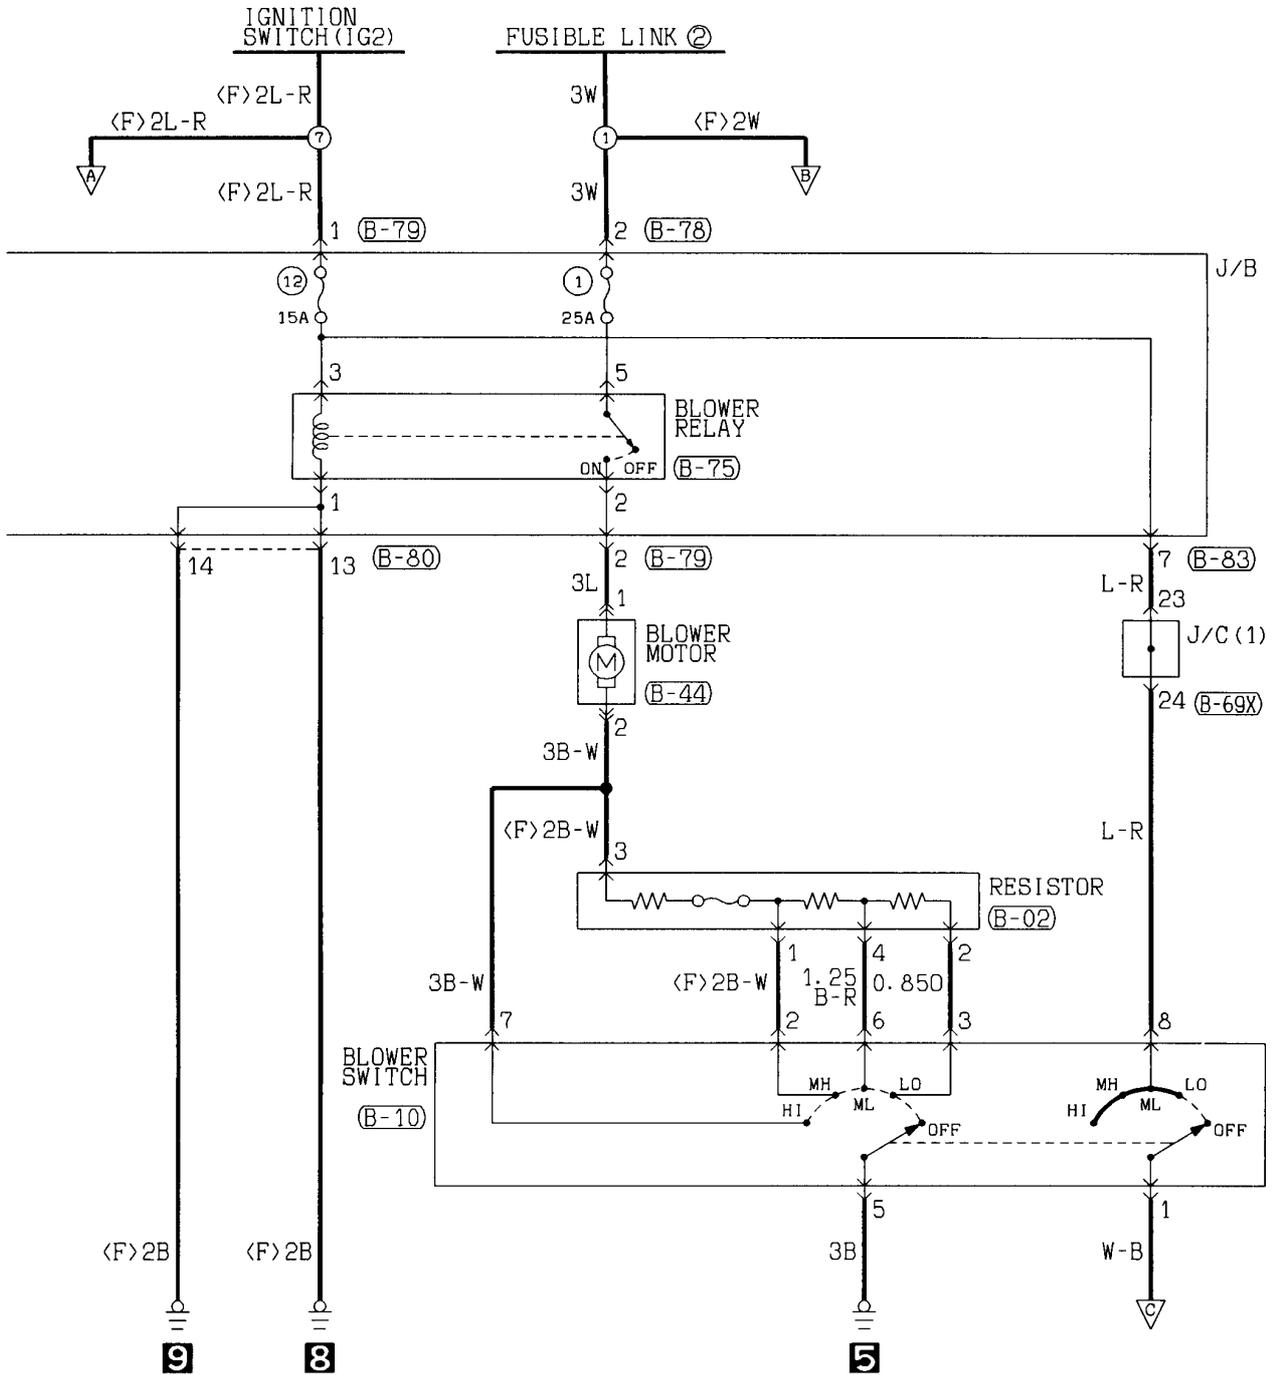

(B-80)																		(B-82)																		(B-83)																	
1	2	3	4	M	5	6	7	8	1	2	3	4	5	M	6	7	8	9	10	1	2	3	4	5	M	6	7	8	9	10																							
9	10	11	12	13	14	15	16	17	18	11	12	13	14	15	16	17	18	19	20	21	22	11	12	13	14	15	16	17	18	19	20	21	22																				

MANUAL AIR CONDITIONER <Petrol-powered vehicles> (CONTINUED)

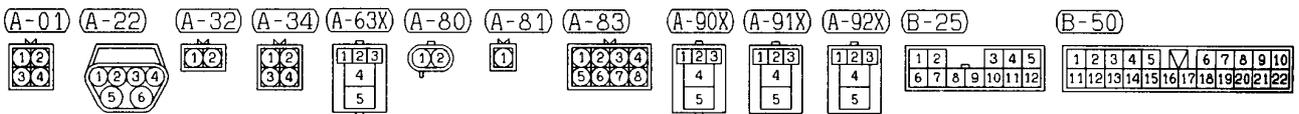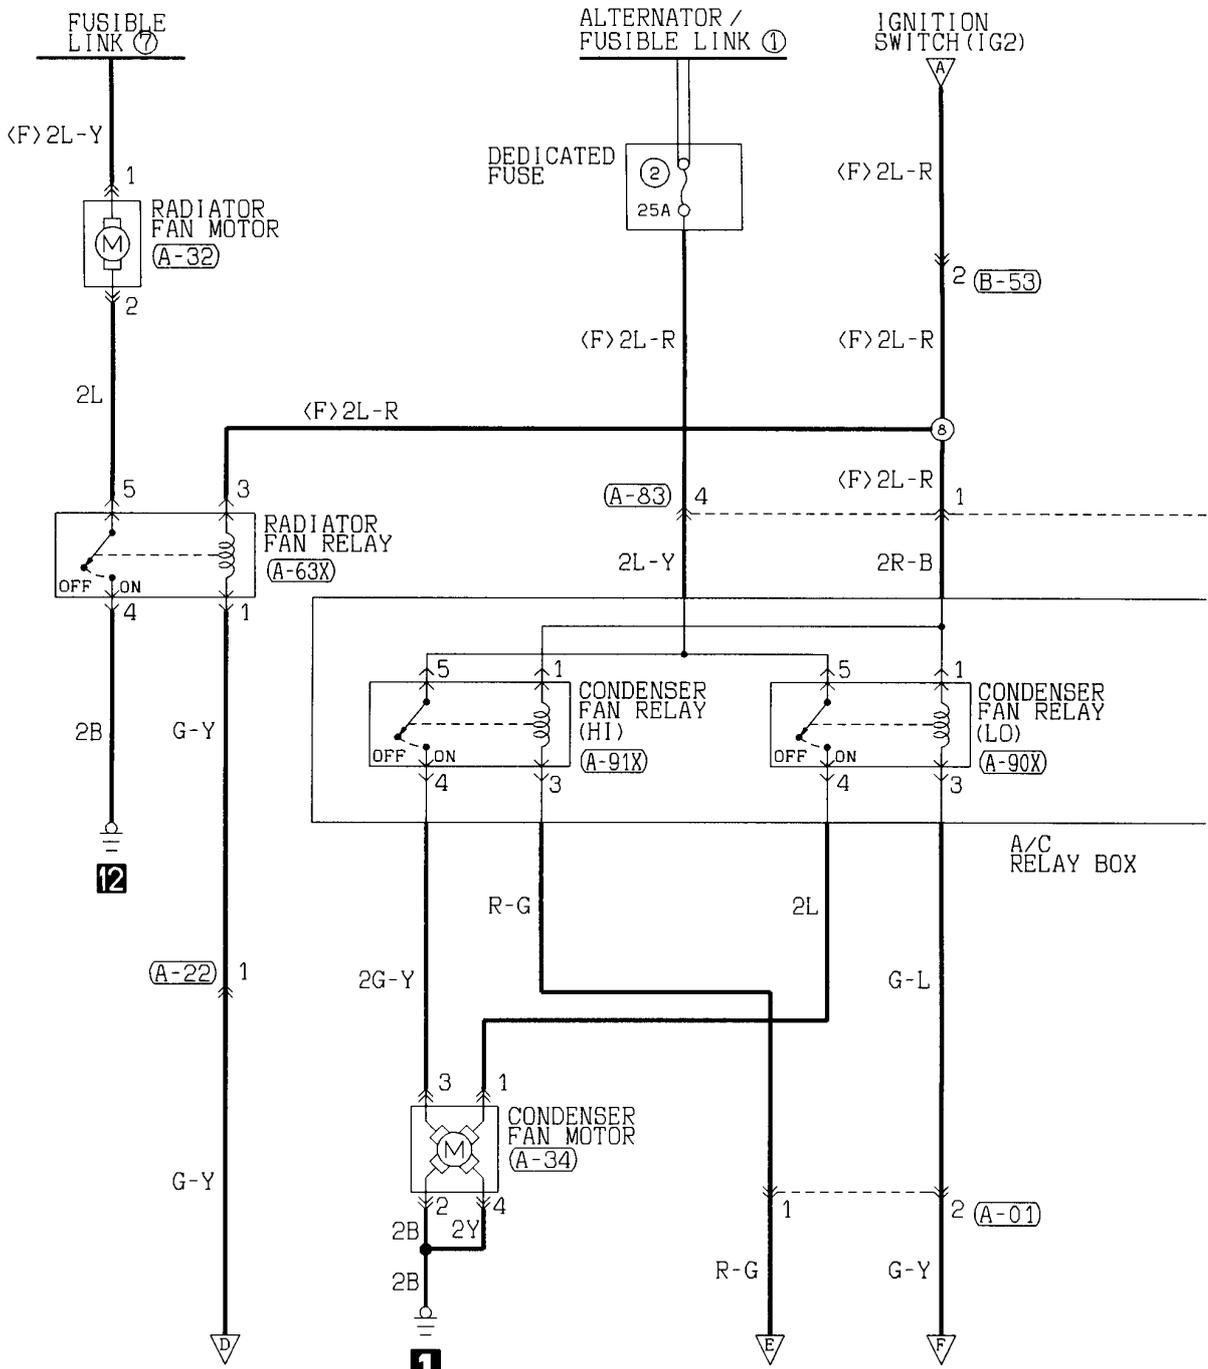


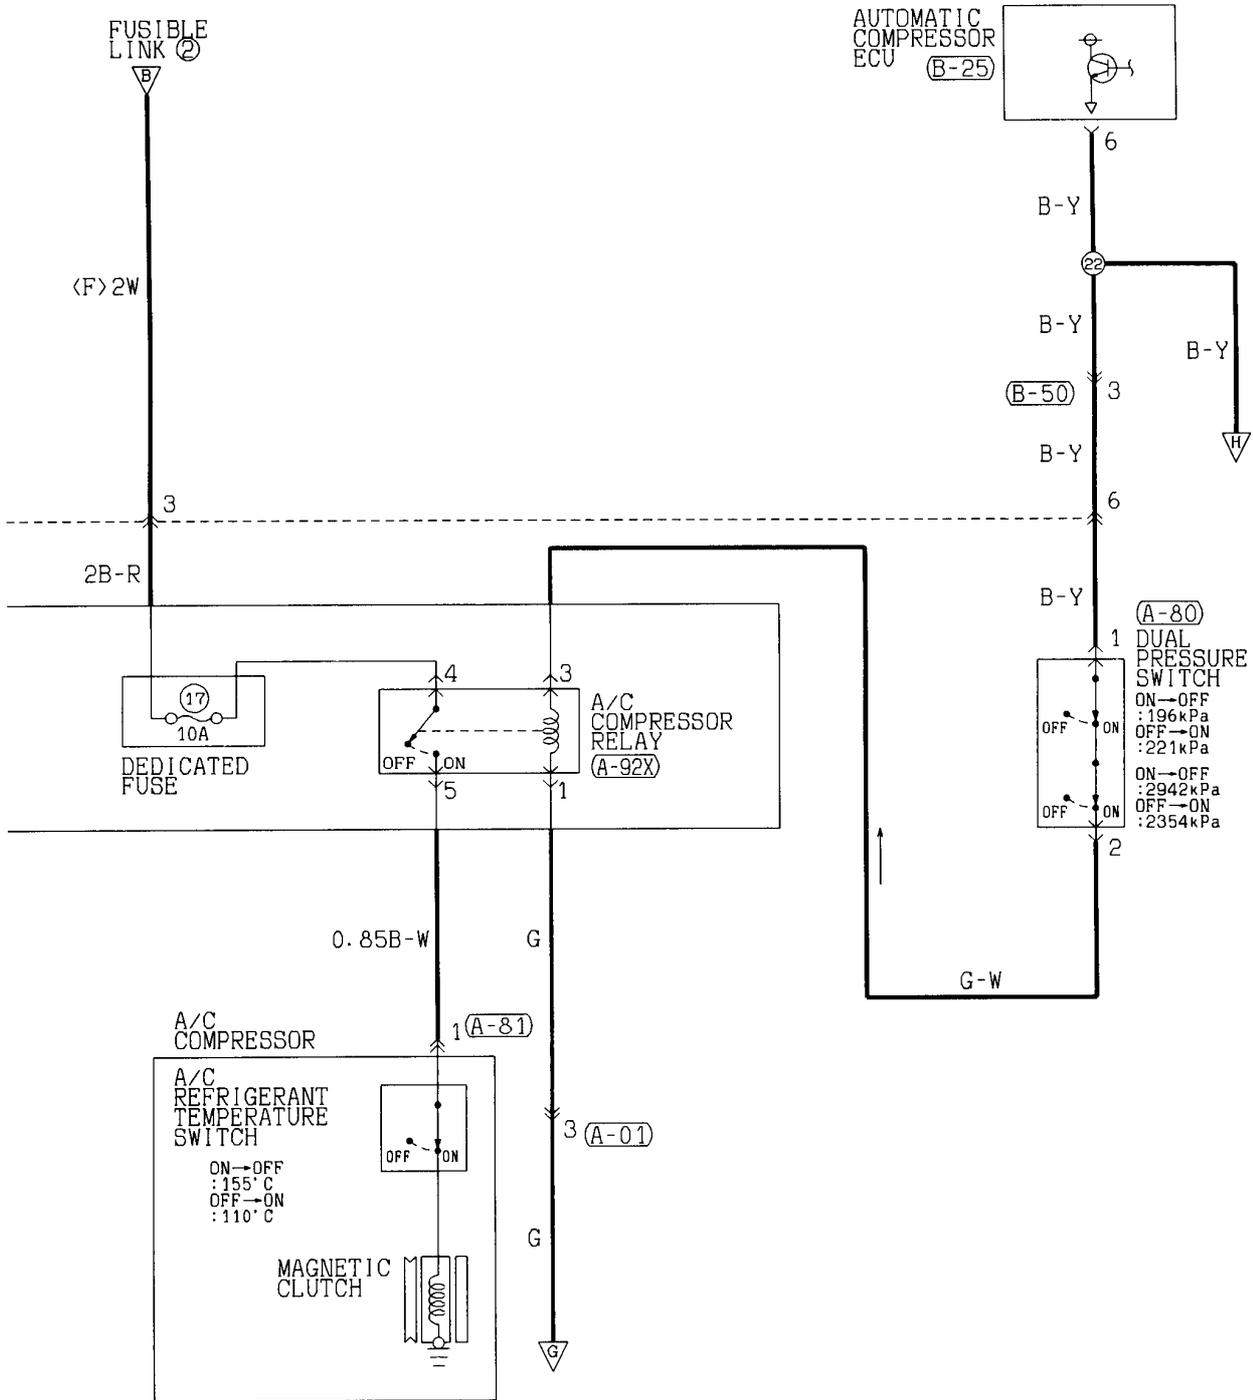

(B-53)

1	2	3	4
5	6	7	8
9	10		

MANUAL AIR CONDITIONER <Petrol-powered vehicles> (CONTINUED)

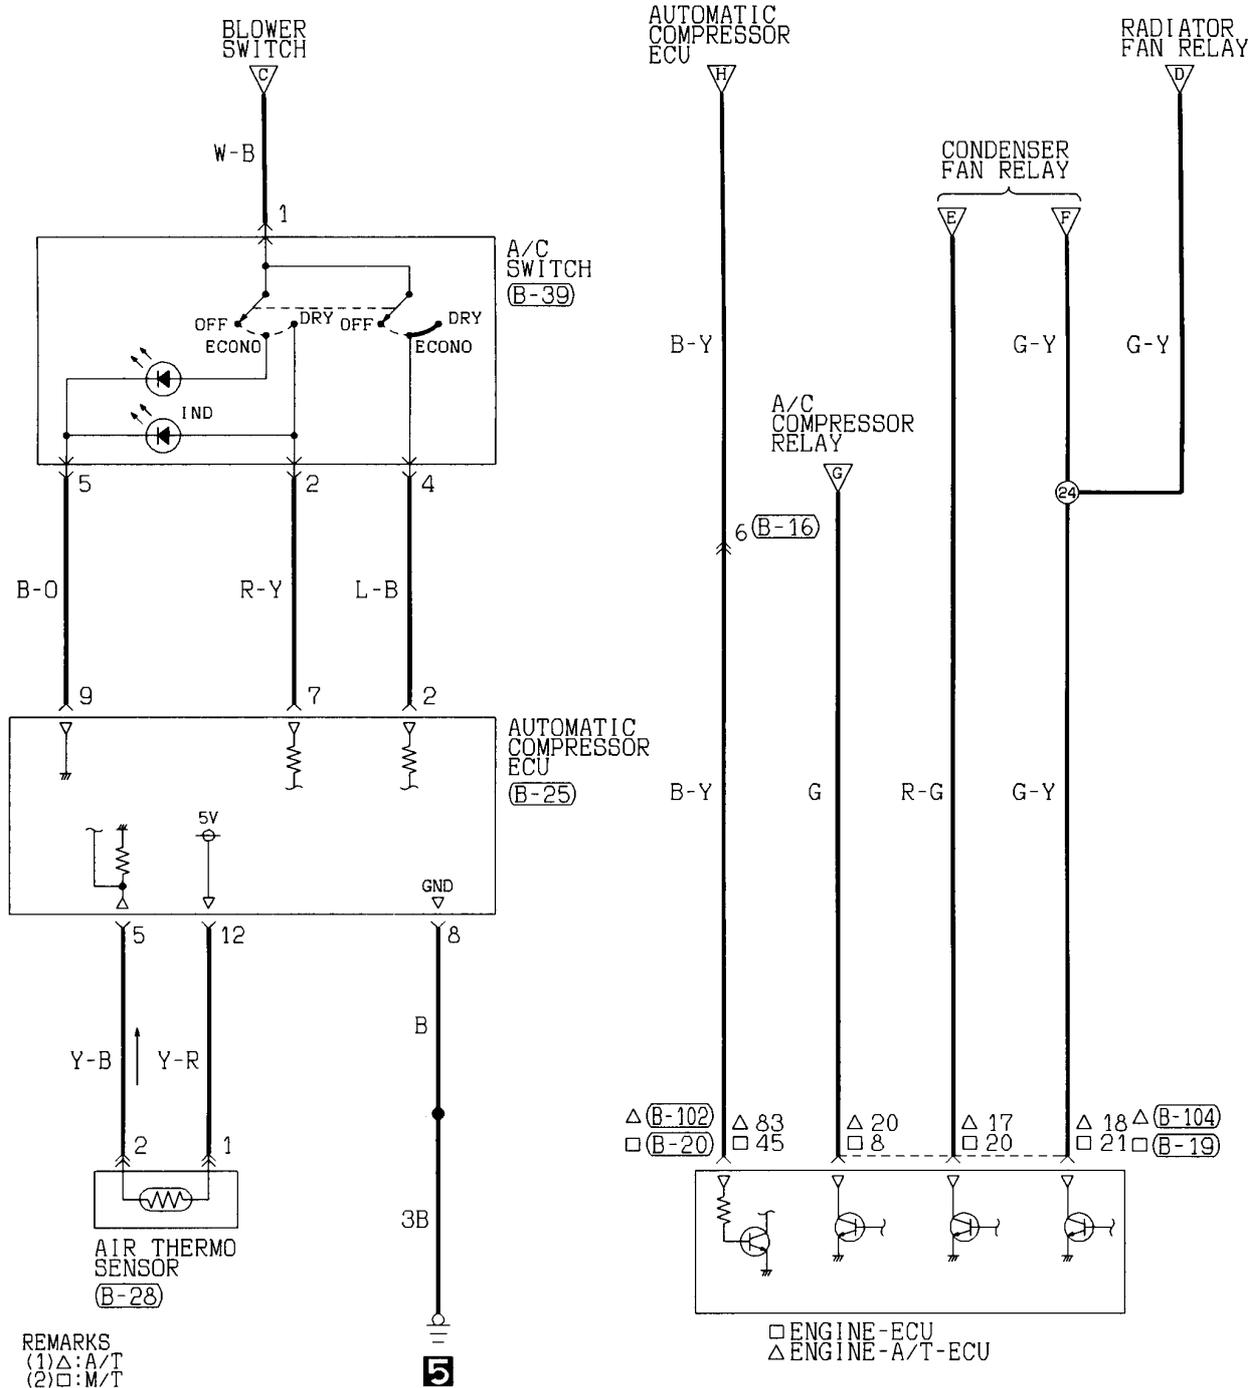


REMARKS
 (1) Δ: A/T
 (2) □: M/T

(B-16) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	(B-19) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26	(B-20) 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46	(B-25) 1 2 3 4 5 6 7 8 9 10 11 12	(B-28) 1 2	(B-39) 1 2 3 4 5 6
(B-102) 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98	(B-104) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35				

FULL-AUTO AIR CONDITIONER AND AIR PURIFIER

Petrol-powered vehicles

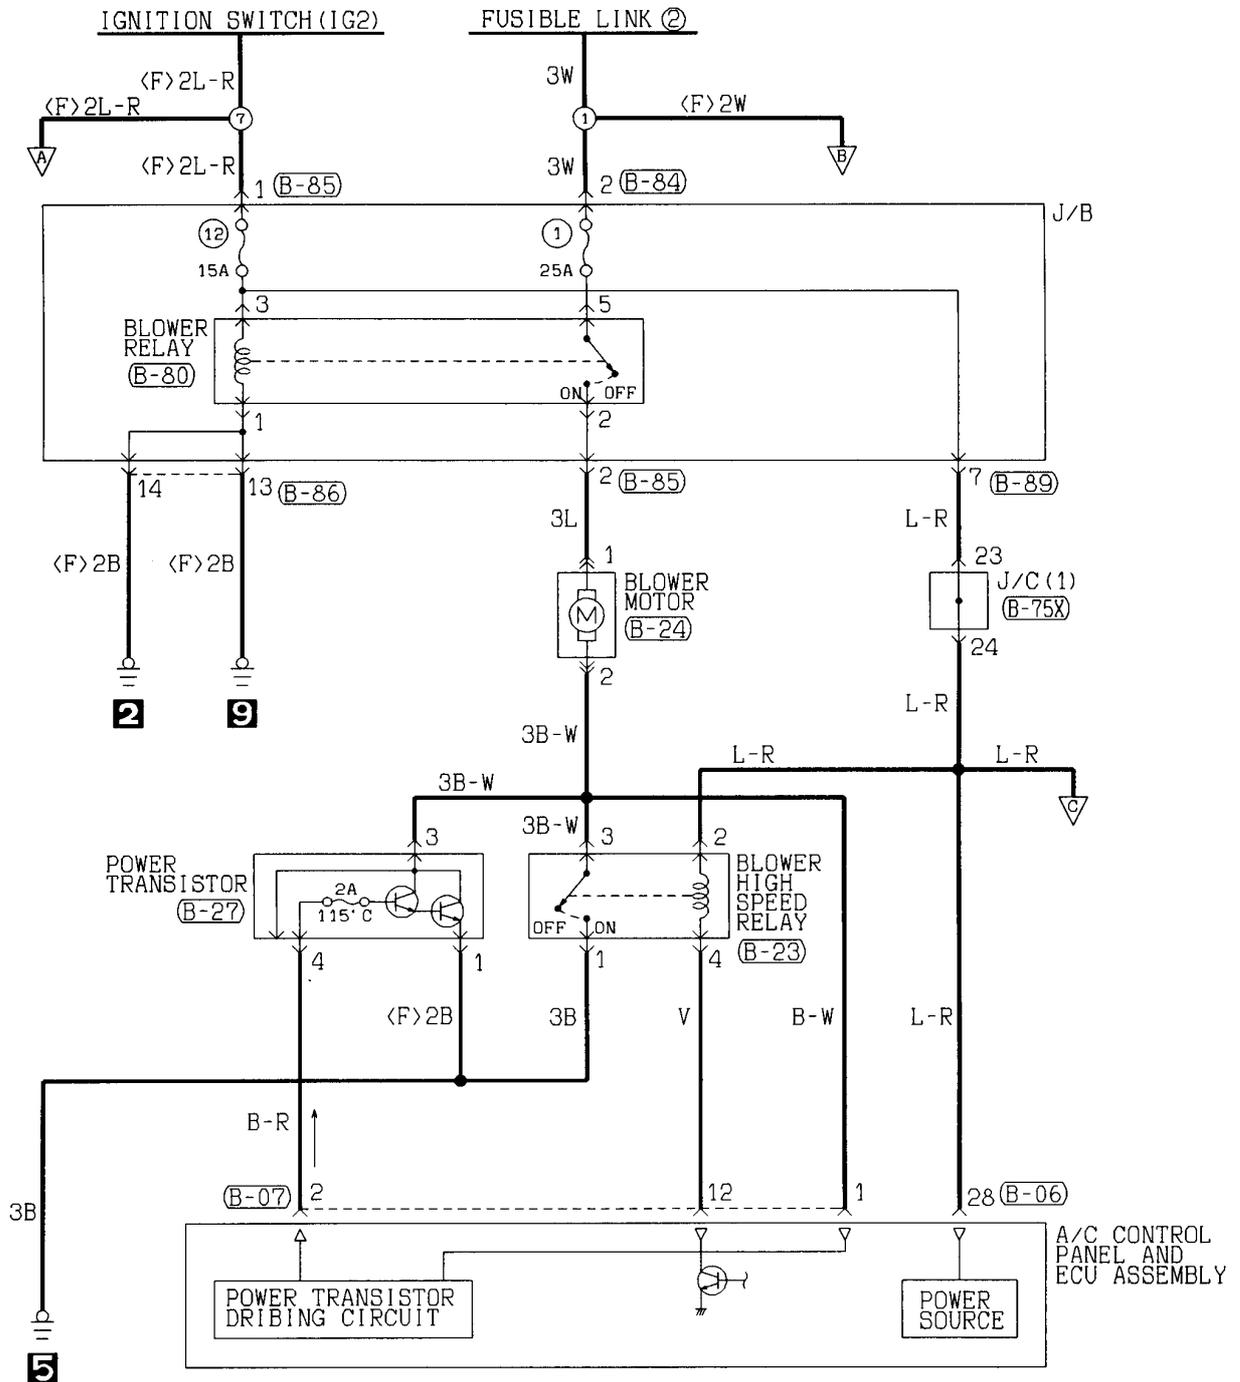

A-69

1	2	3	4	5
6	7	8	9	10

B-06

21	22	23	24	25	26	27	28
29	30	31	32	33	34	35	36

B-07

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

B-13

1	2	3	4
---	---	---	---

B-23

1	2
3	4

B-24

1
2

B-27

1	2
3	4

B-50


1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

B-89

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

A/C CONTROL PANEL AND ECU ASSEMBLY

FULL-AUTO AIR CONDITIONER AND AIR PURIFIER <Petrol-powered vehicles>
(CONTINUED)

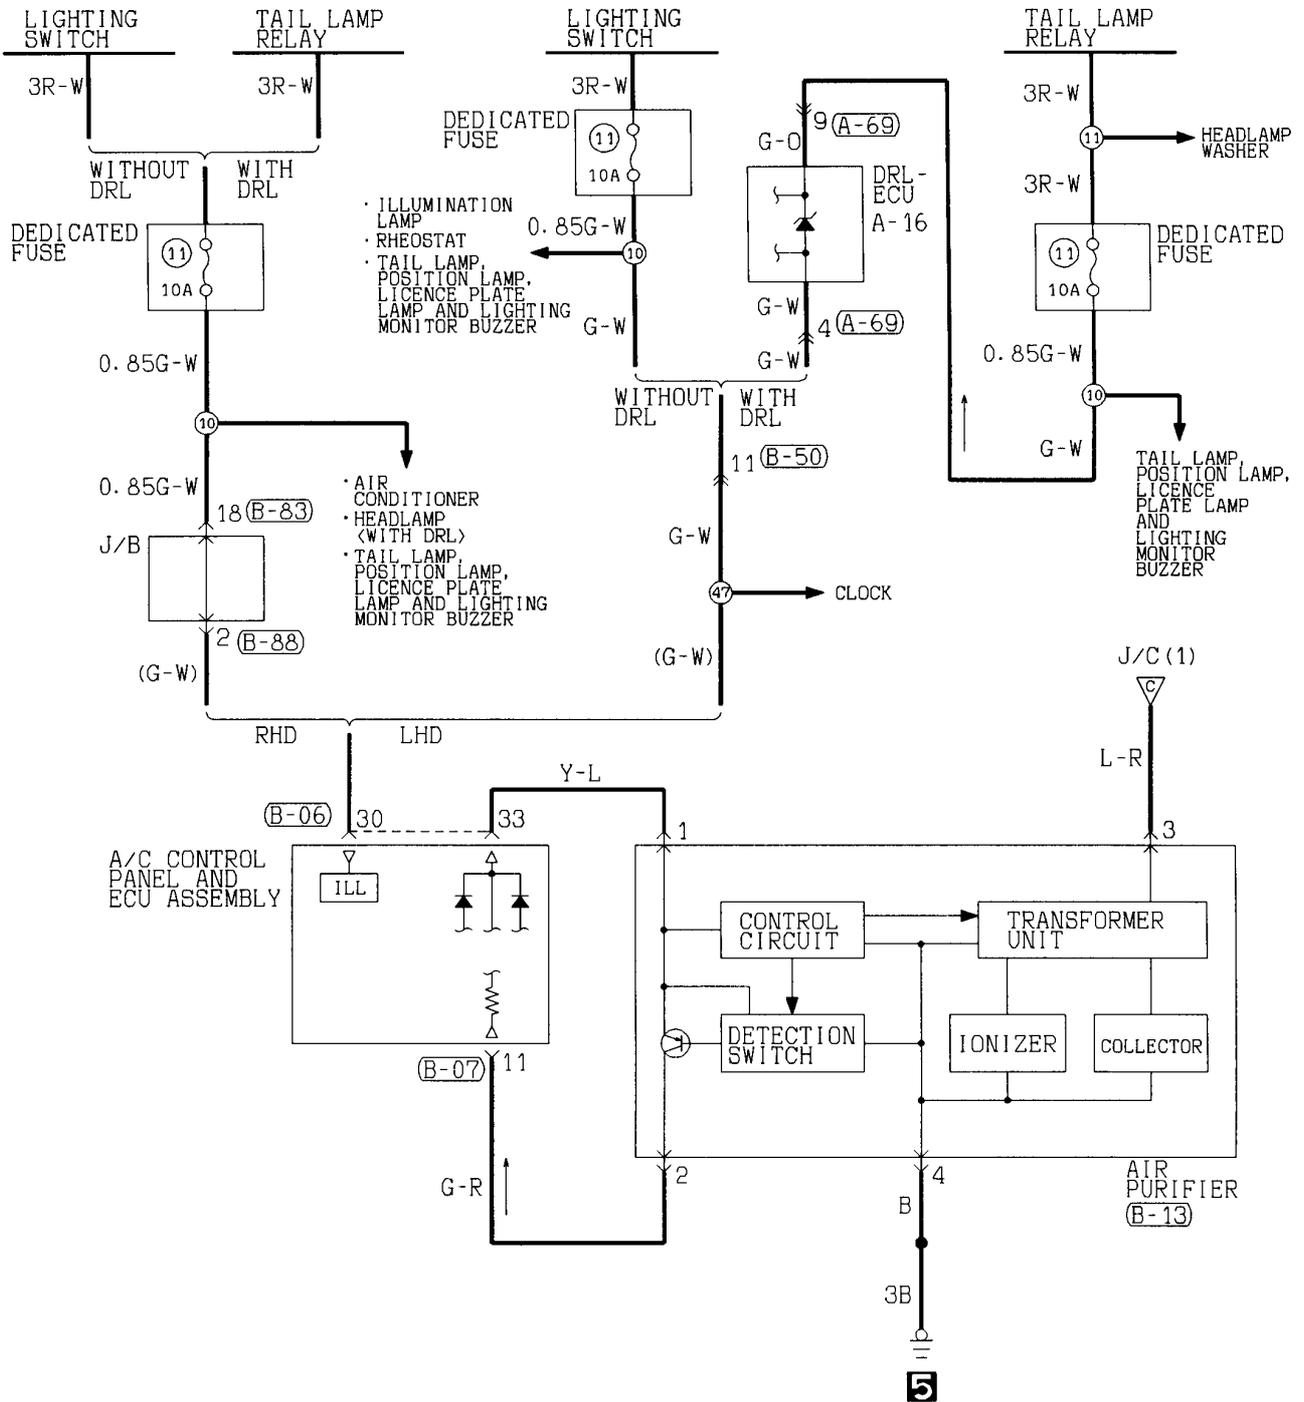


(B-75X)



(B-80)



(B-83)

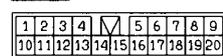


(B-84)




(B-85)




(B-86)

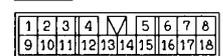


(B-88)

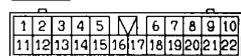


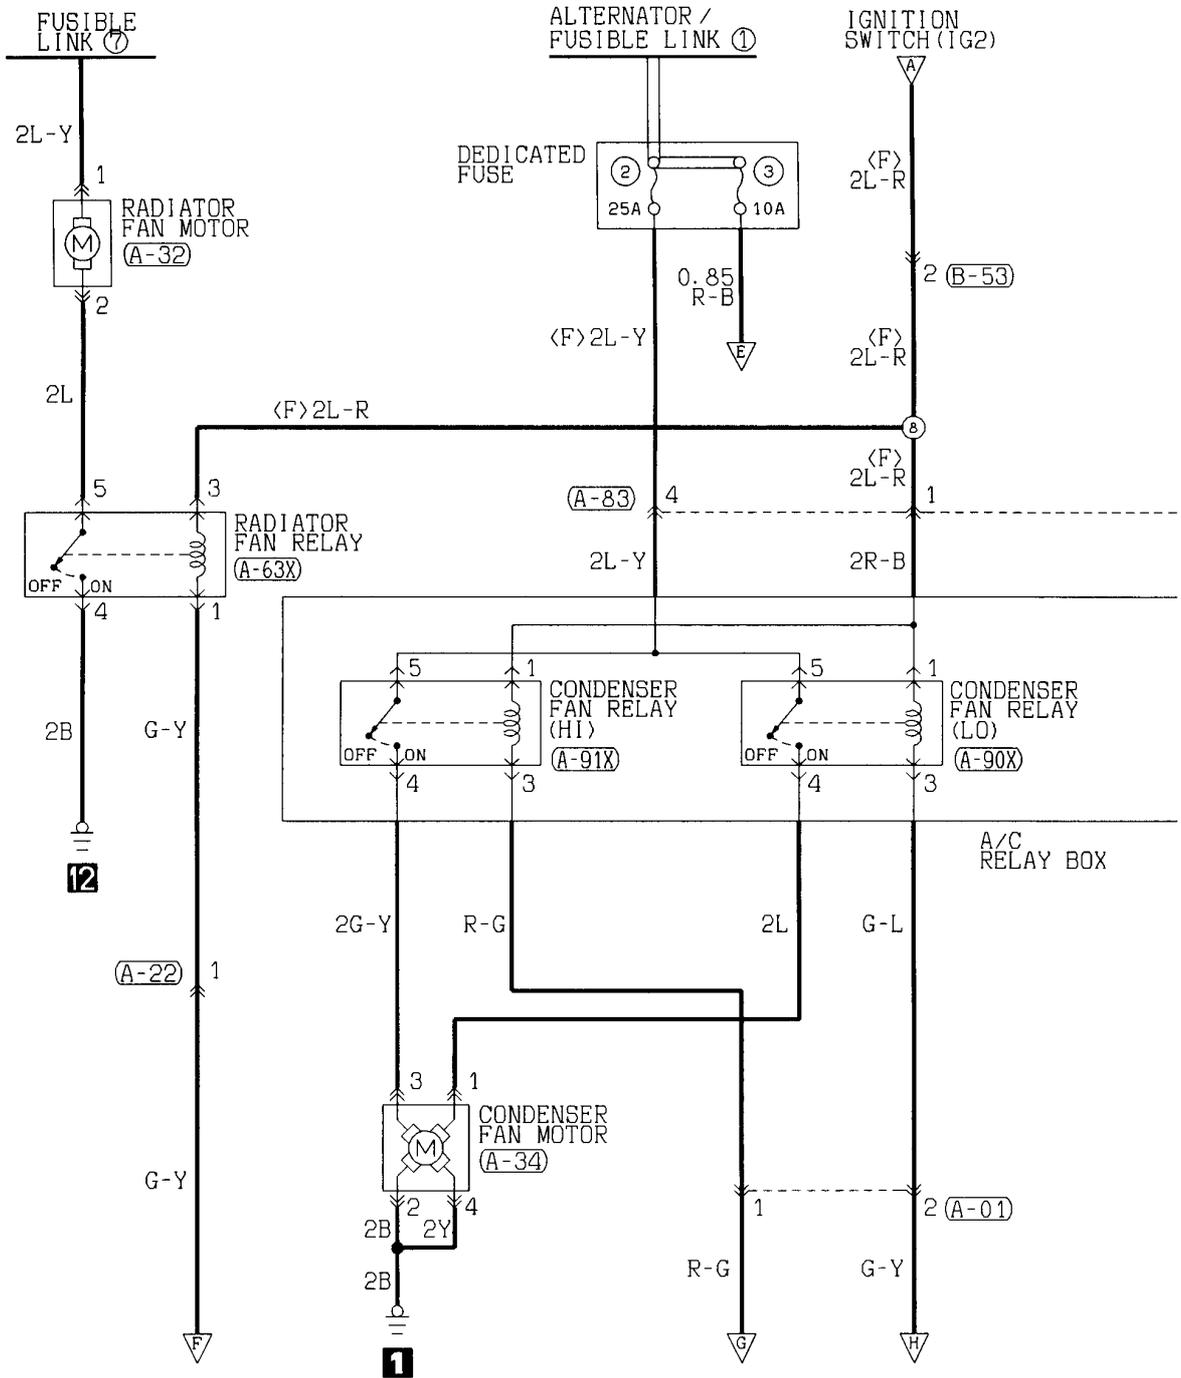

- A-01
- A-22
- A-32
- A-34
- A-63X
- A-80
- A-81
- A-83
- A-90X
- A-91X
- A-92X
- B-06

FULL-AUTO AIR CONDITIONER AND AIR PURIFIER <Petrol-powered vehicles>
(CONTINUED)

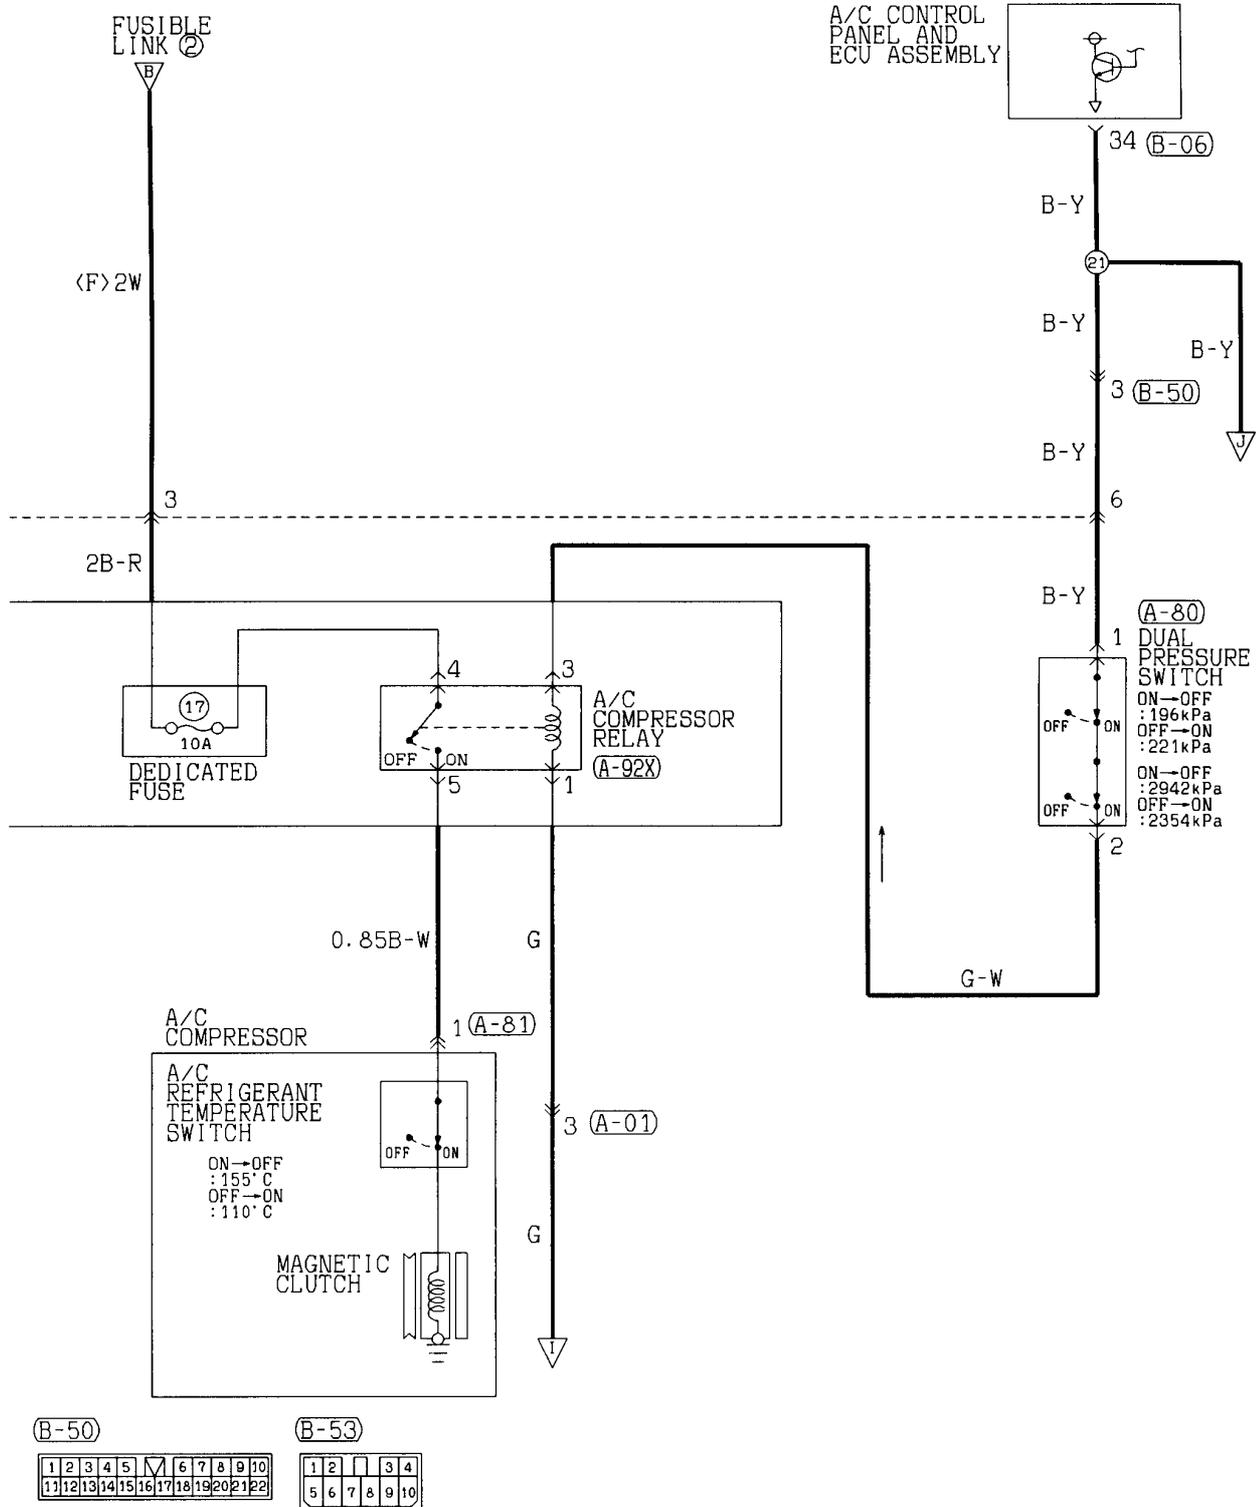

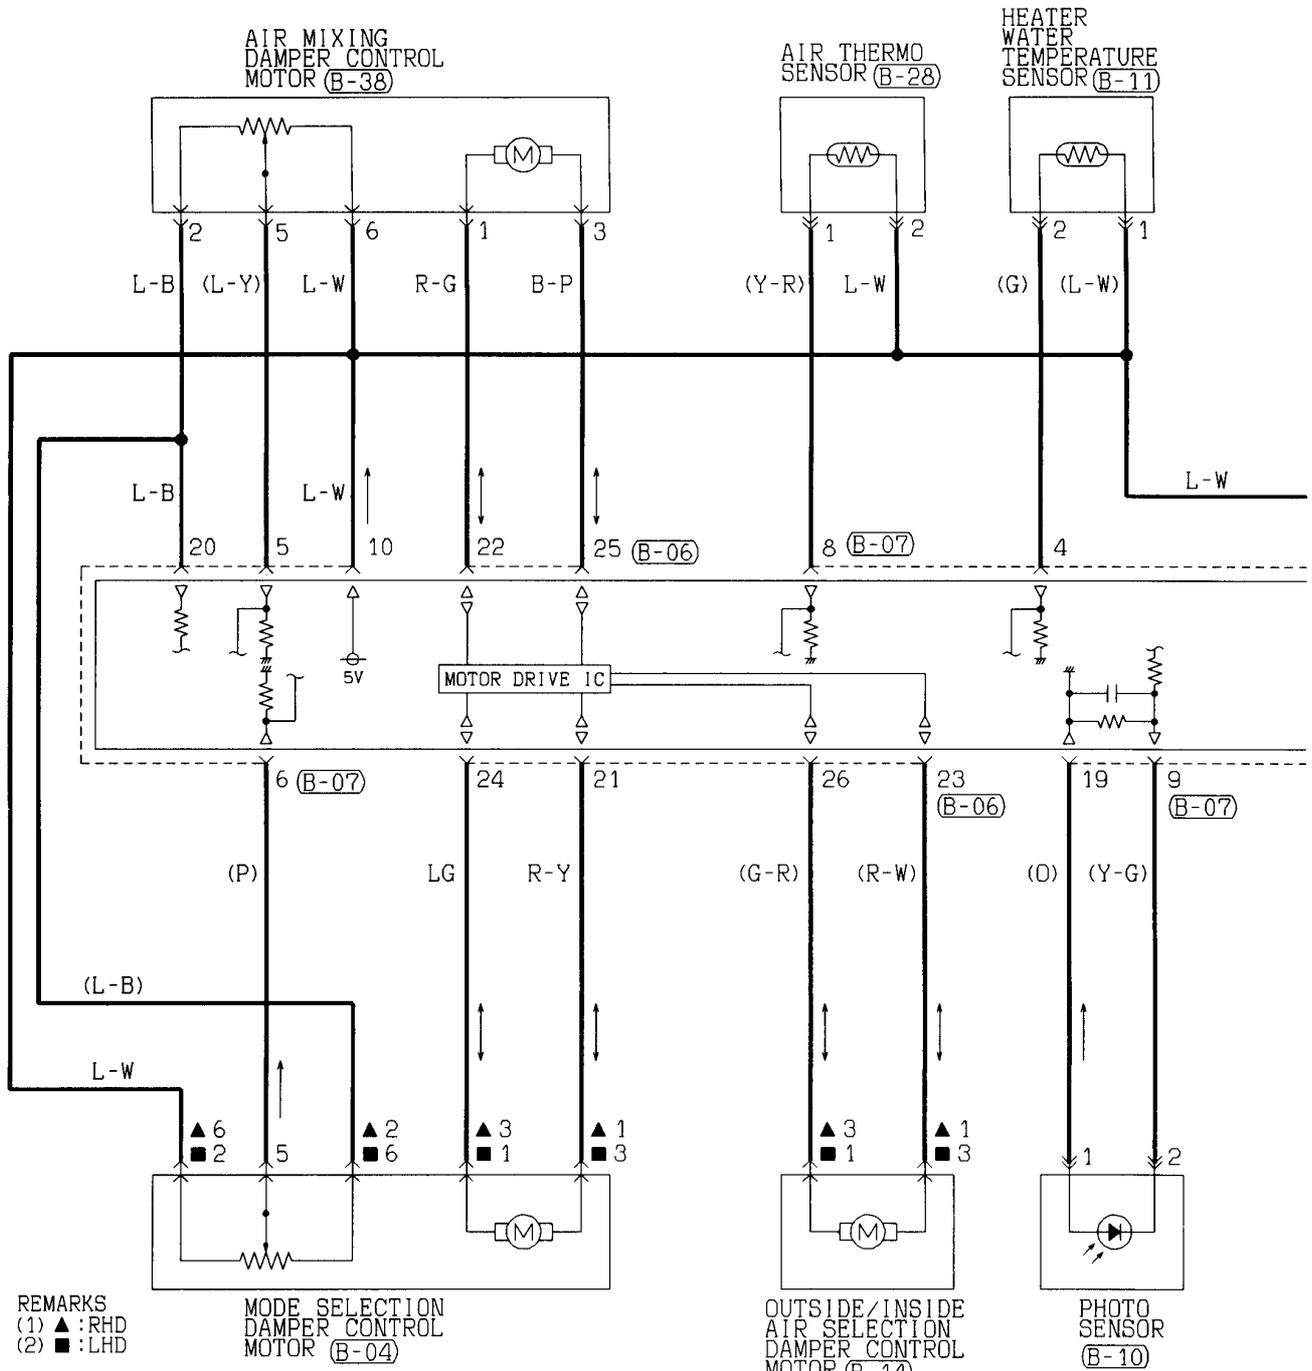

REMARKS
 (1) ▲ : RHD
 (2) ■ : LHD

MODE SELECTION
 DAMPER CONTROL
 MOTOR (B-04)

OUTSIDE/INSIDE
 AIR SELECTION
 DAMPER CONTROL
 MOTOR (B-14)

PHOTO
 SENSOR
 (B-10)

(A-35)

(A-83)

(B-04)

(B-06)

(B-07)


(B-10)

(B-11)


(B-14)


(B-28)

(B-38)

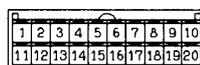

FULL-AUTO AIR CONDITIONER AND AIR PURIFIER <Petrol-powered vehicles>
(CONTINUED)

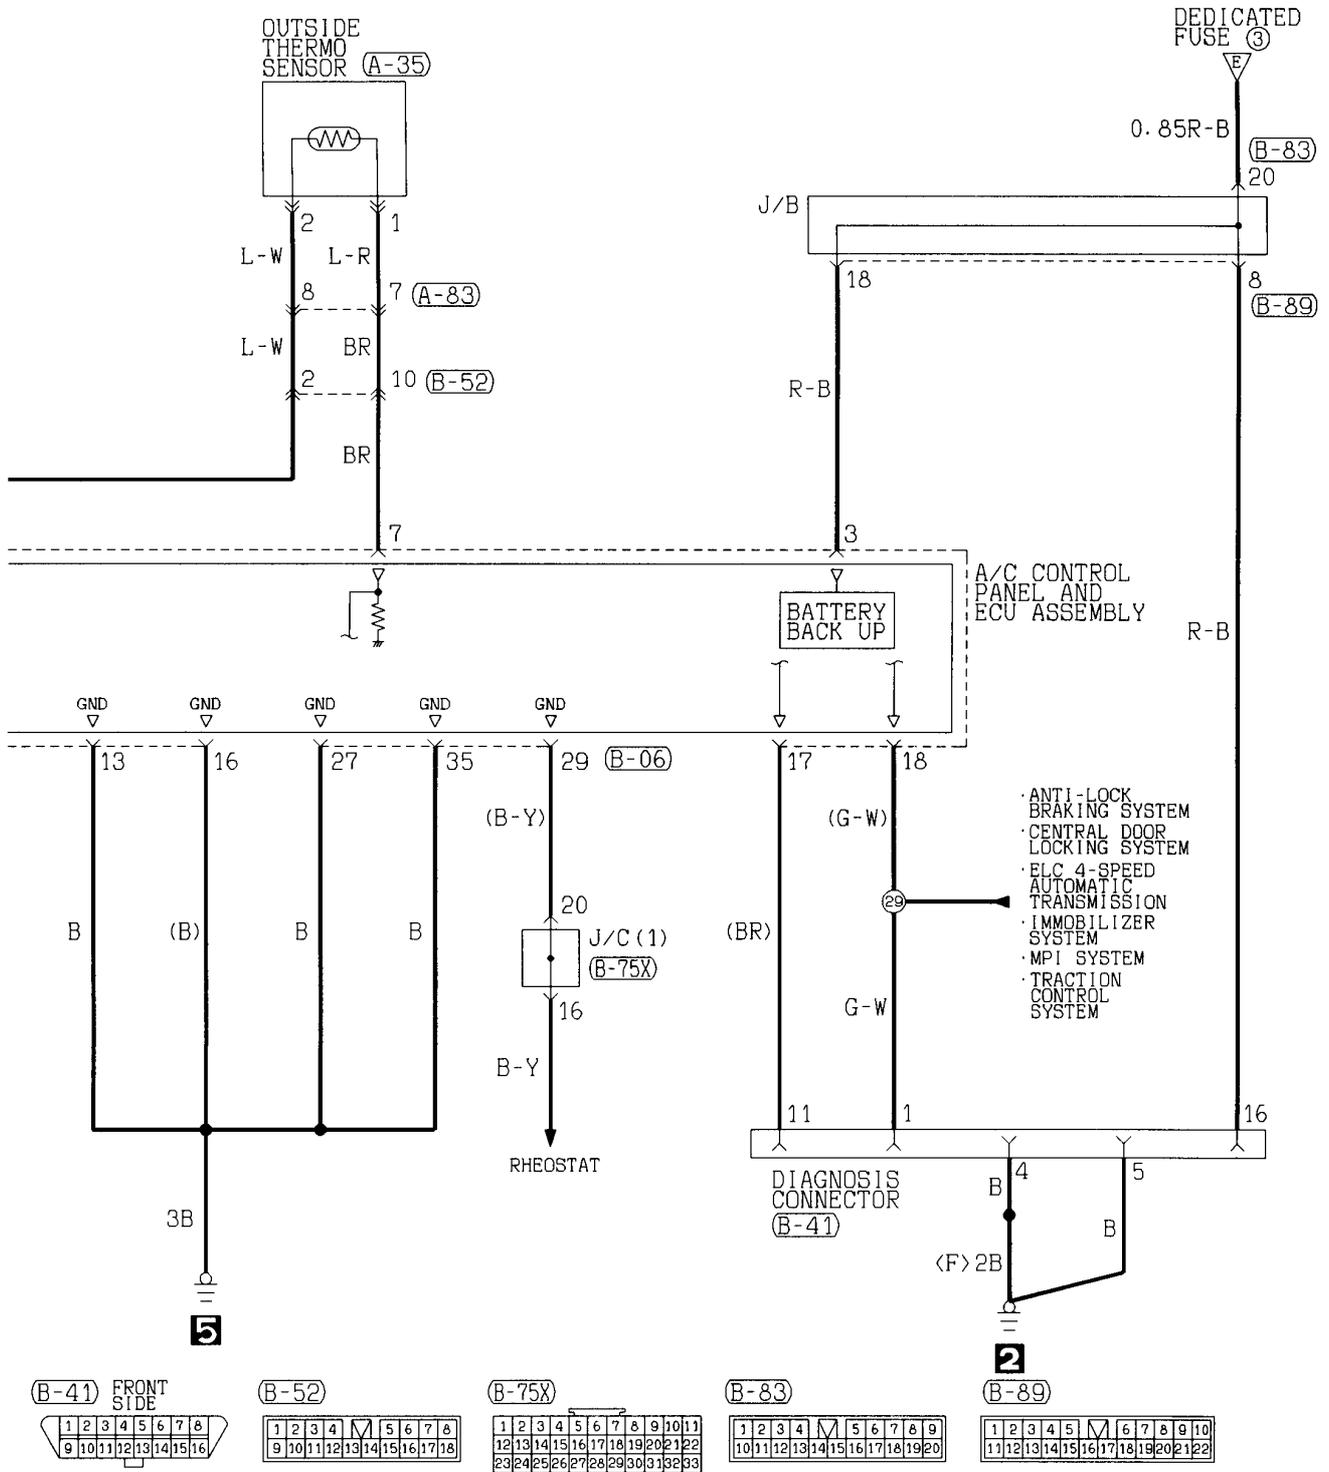

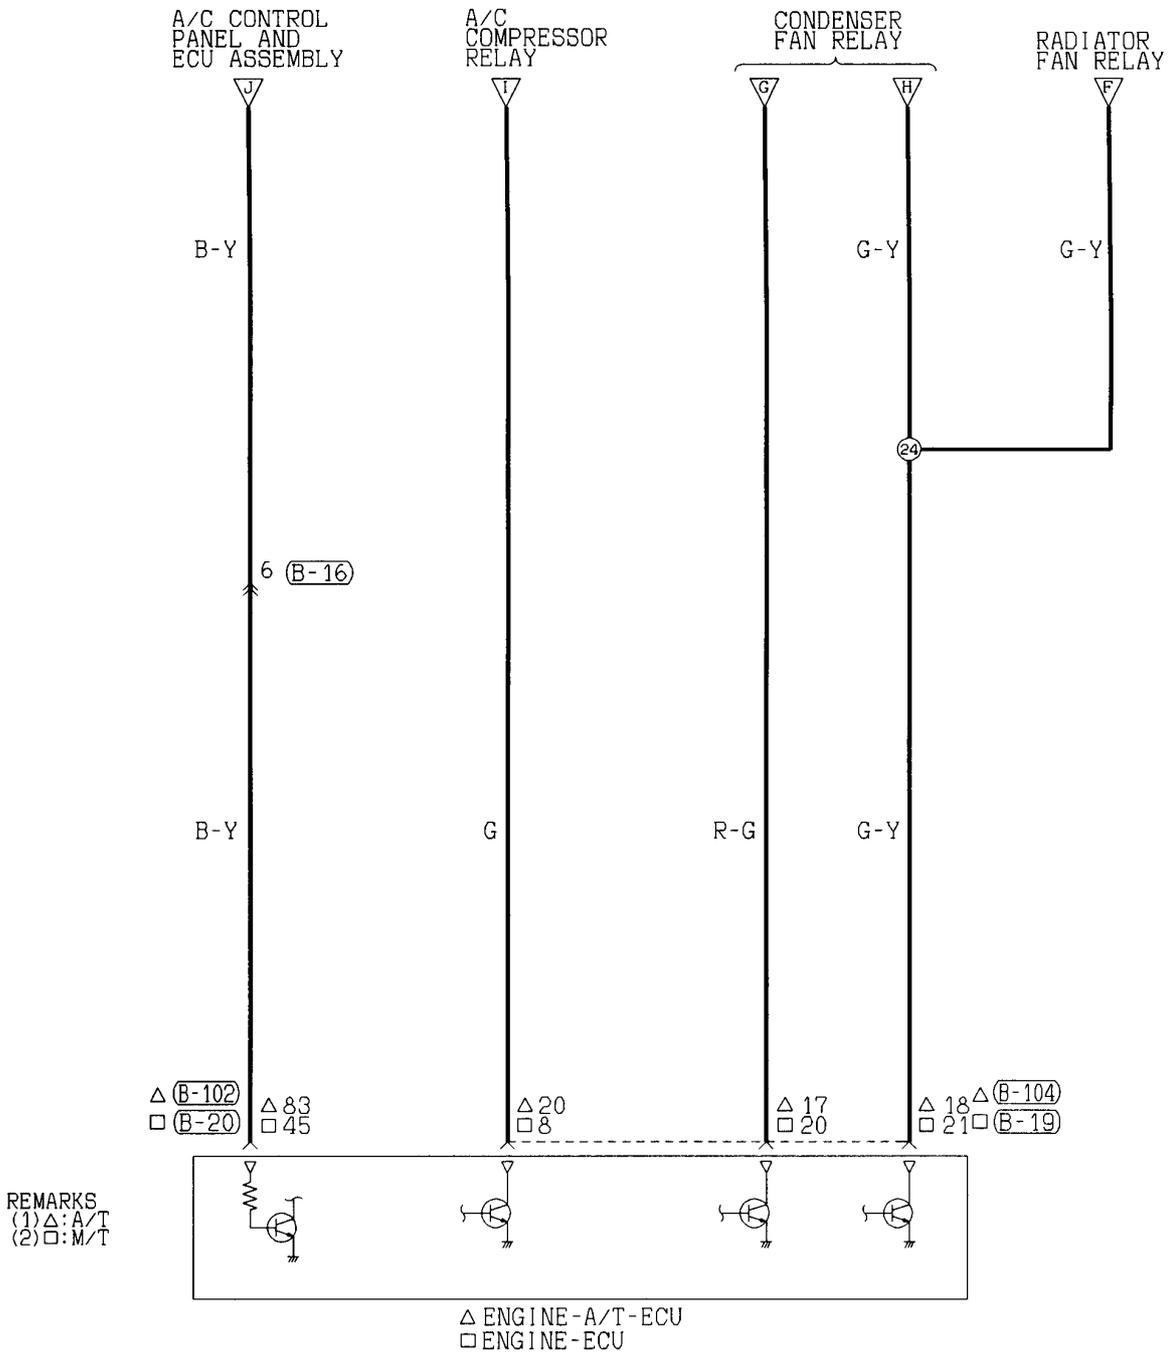

(B-16)

1	2	3	4	M	5	6	7	8	R	
10	11	12	13	14	15	16	17	18	19	20

(B-19)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(B-20)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46


(B-102)

71	72	73	74			75	76	77			
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

(B-104)

1	2	3	4			5	6	7	8					
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31	32	33	34	35			

WINDSHIELD WIPER AND WASHER

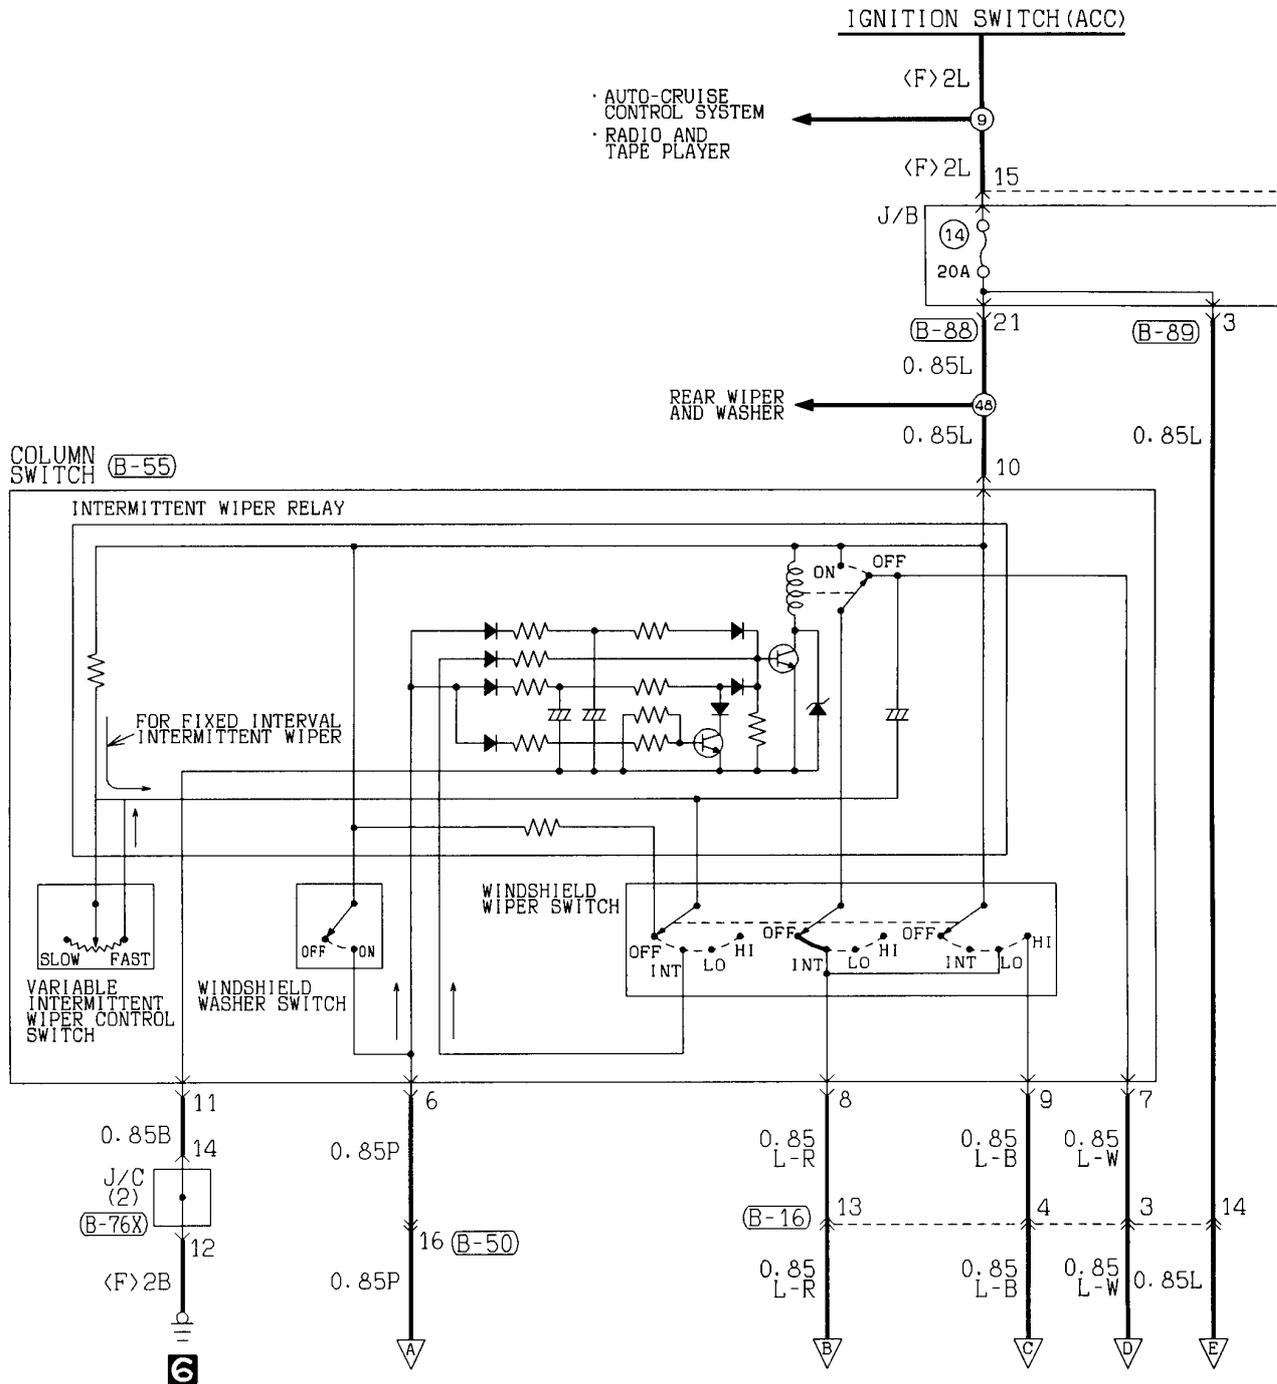

(A-04)

(A-43)






(A-46)


(B-05)

(B-16)

(B-50)


(B-55)

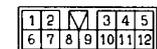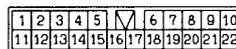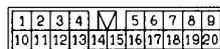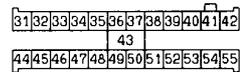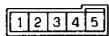

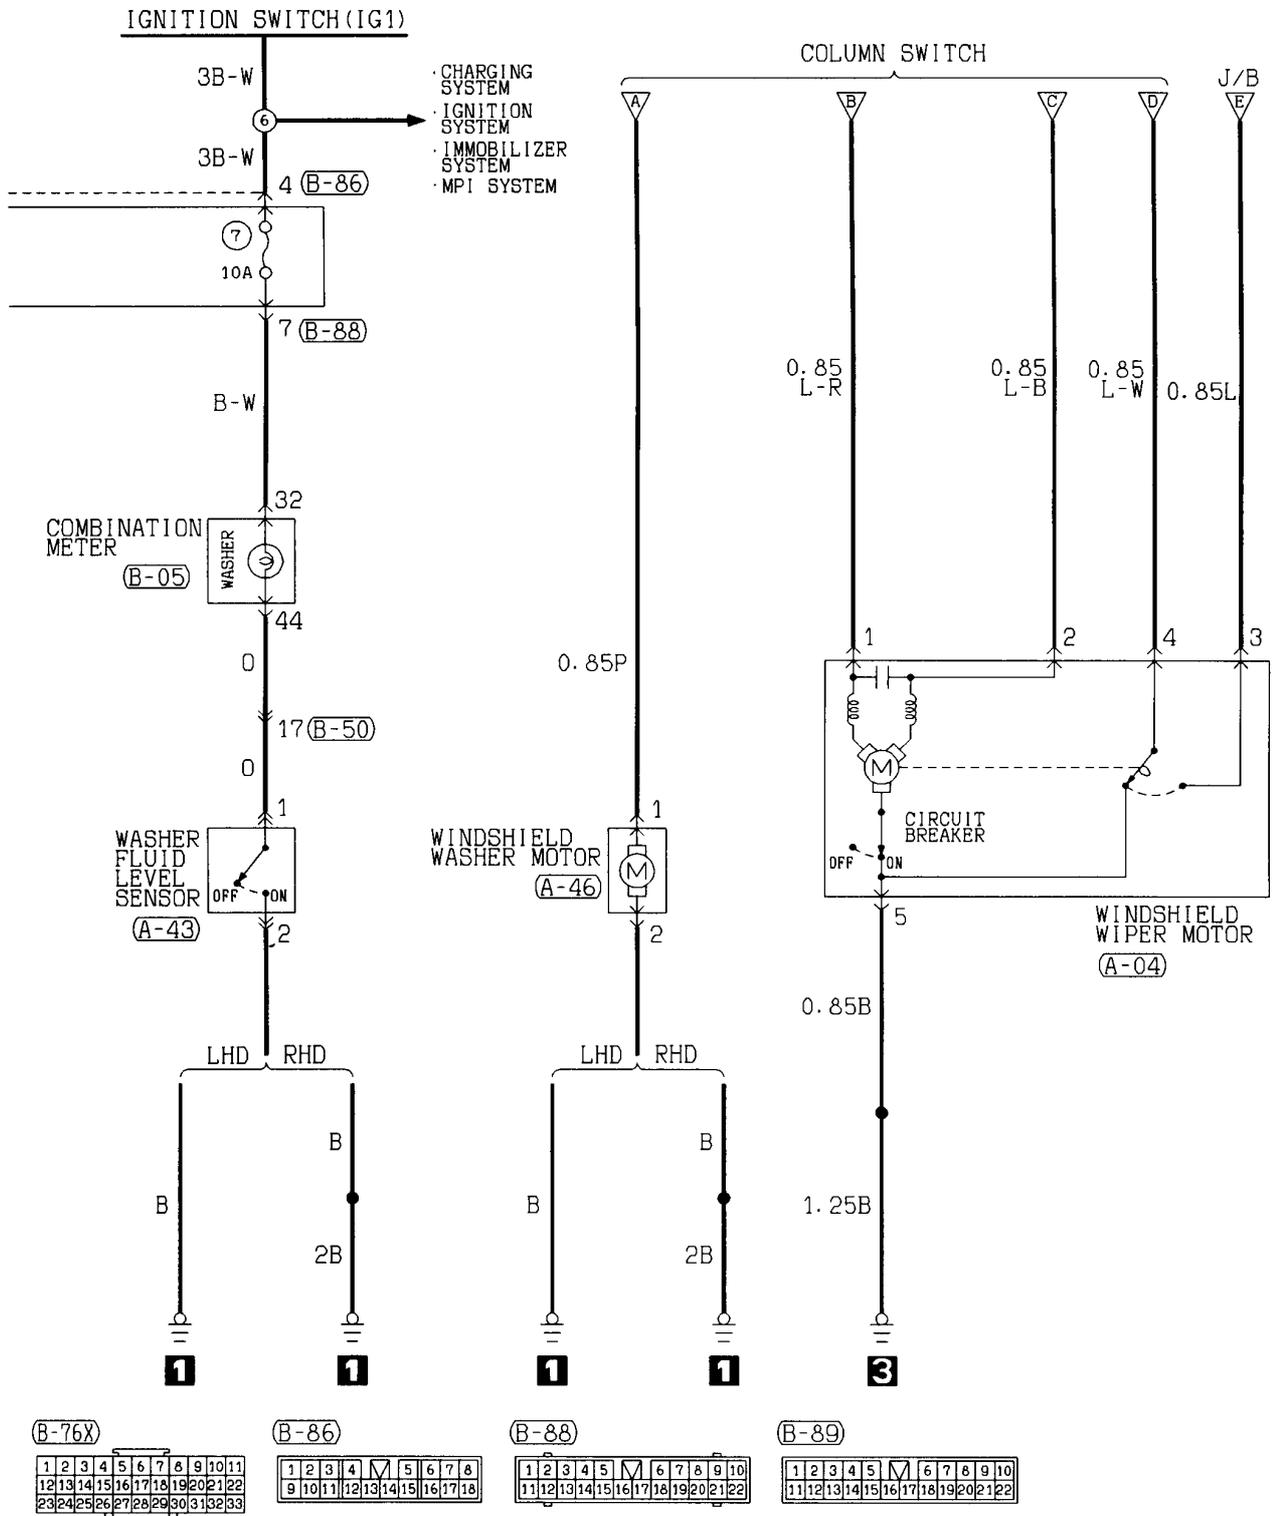

DEFOGGER AND DOOR MIRROR HEATER


Vehicles without defogger timer

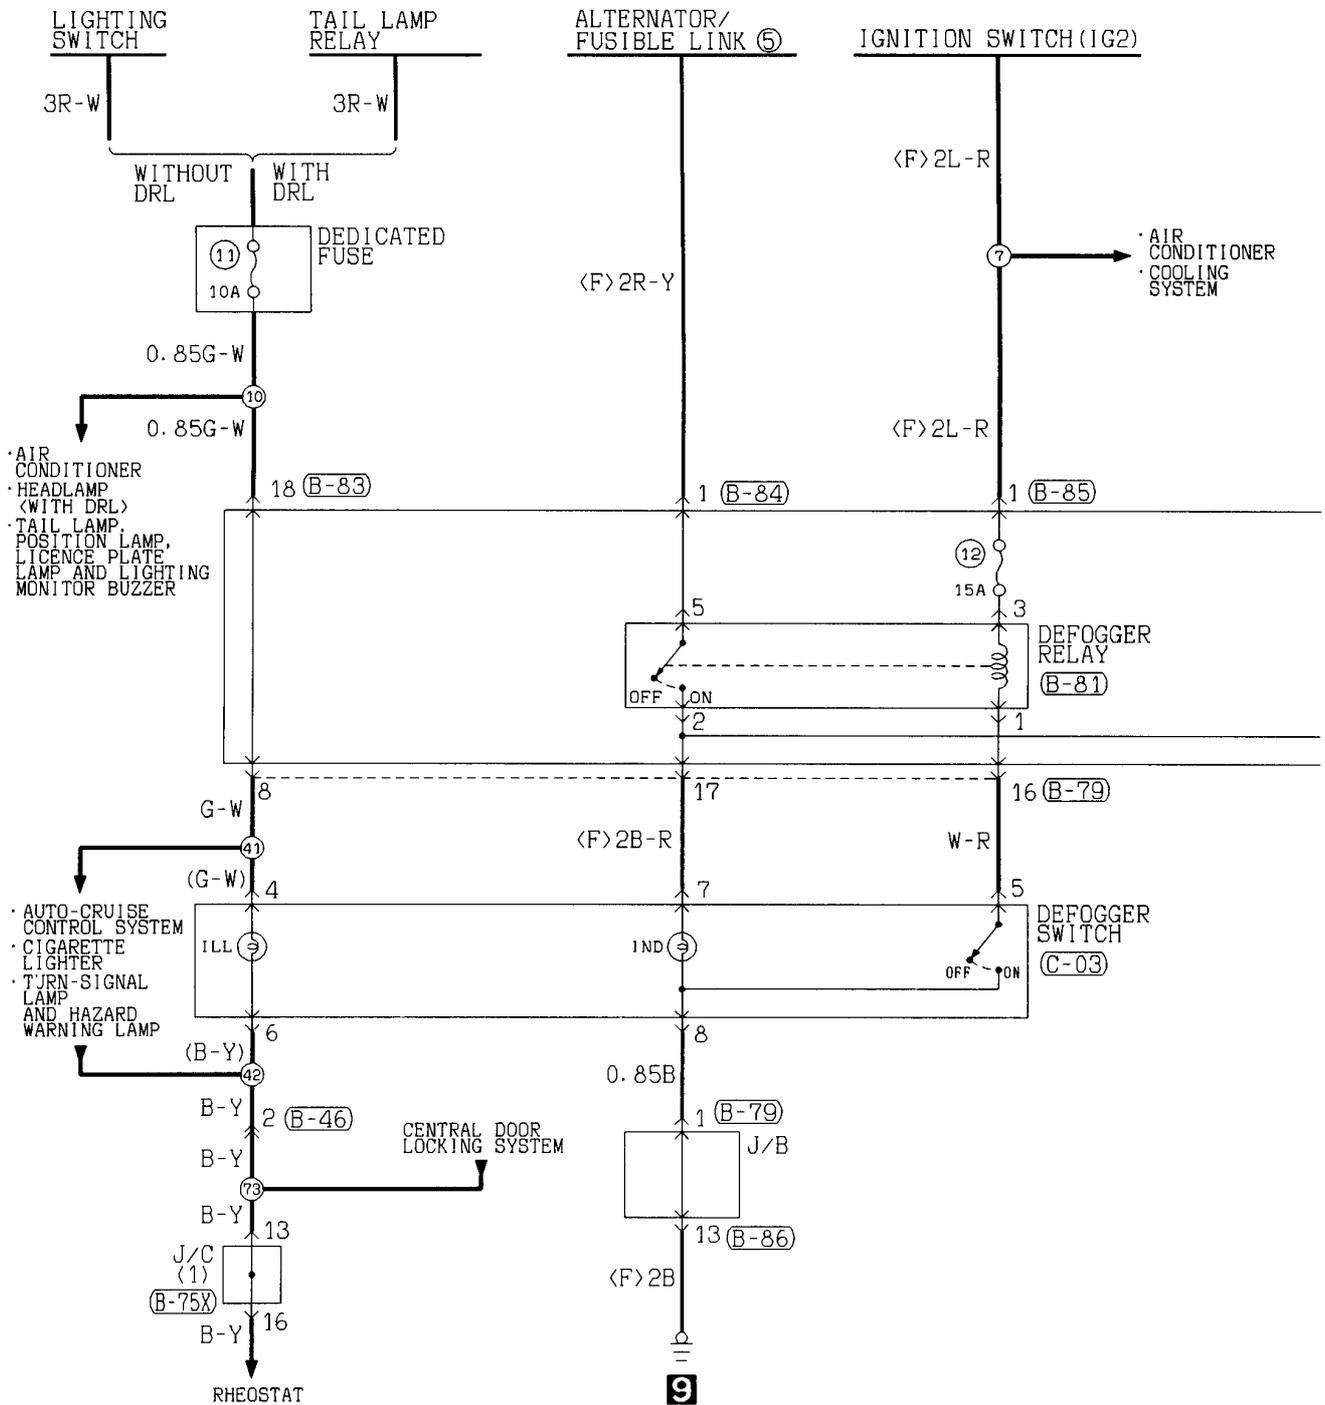

B-18



B-46

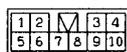


B-49




B-75X




B-76X

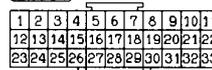

B-79

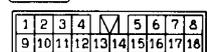

F-01





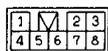




F-03




F-08



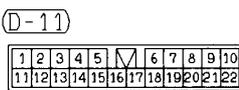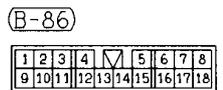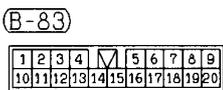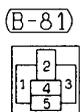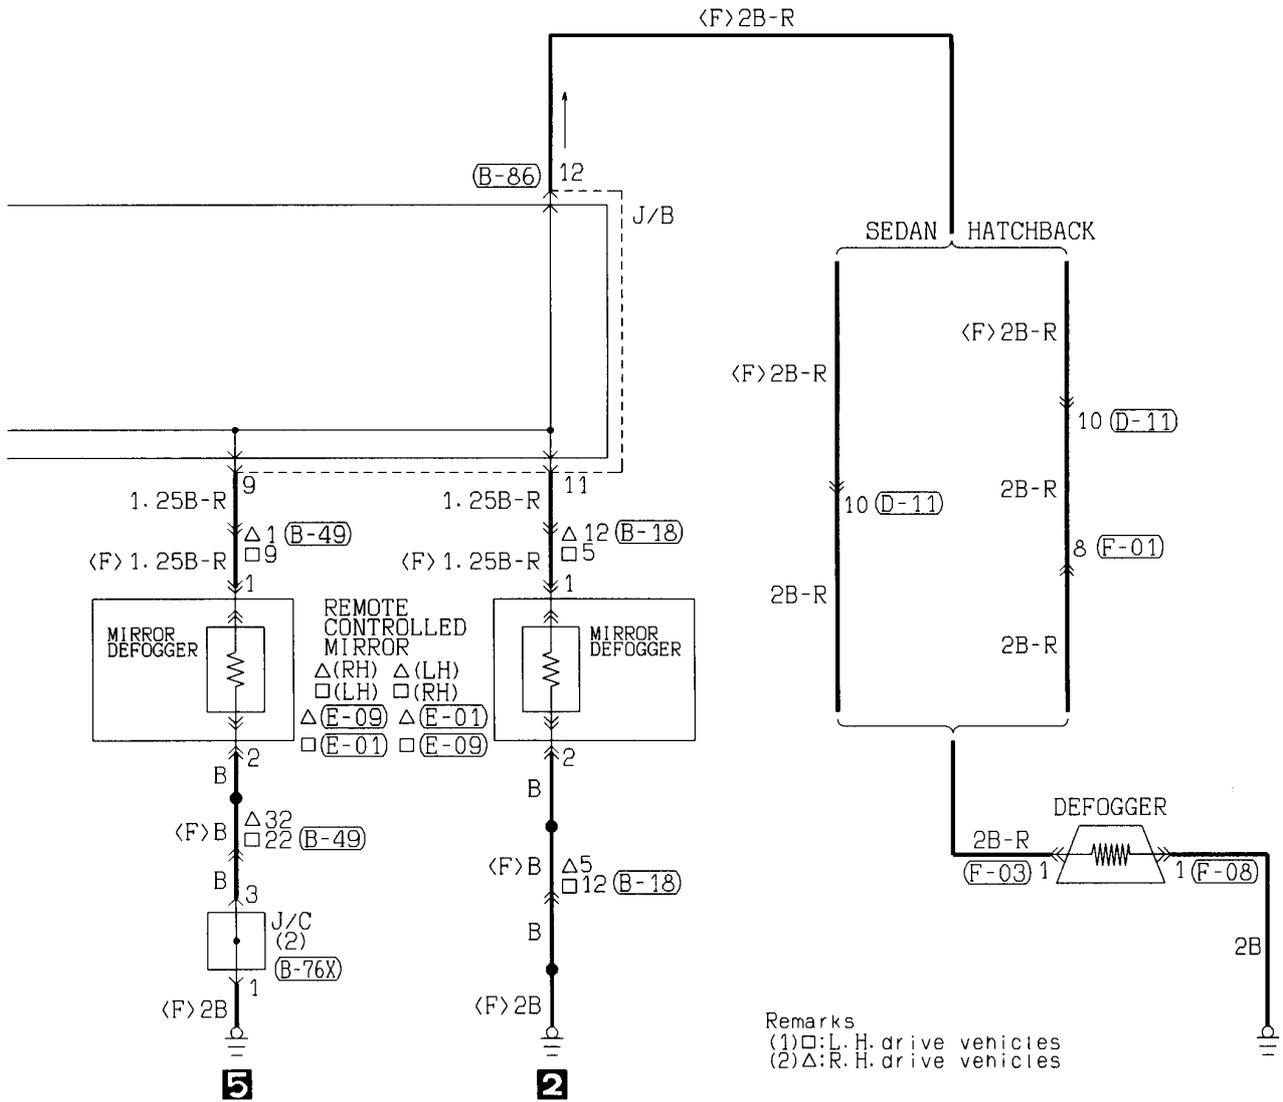


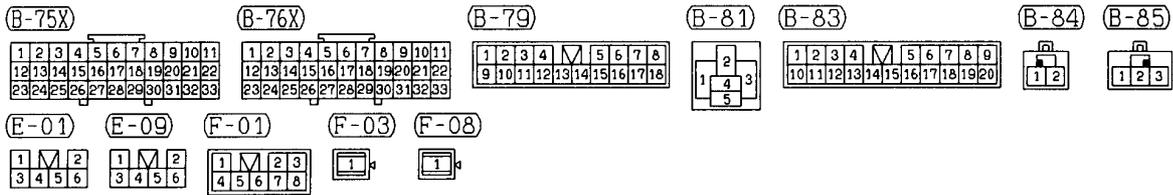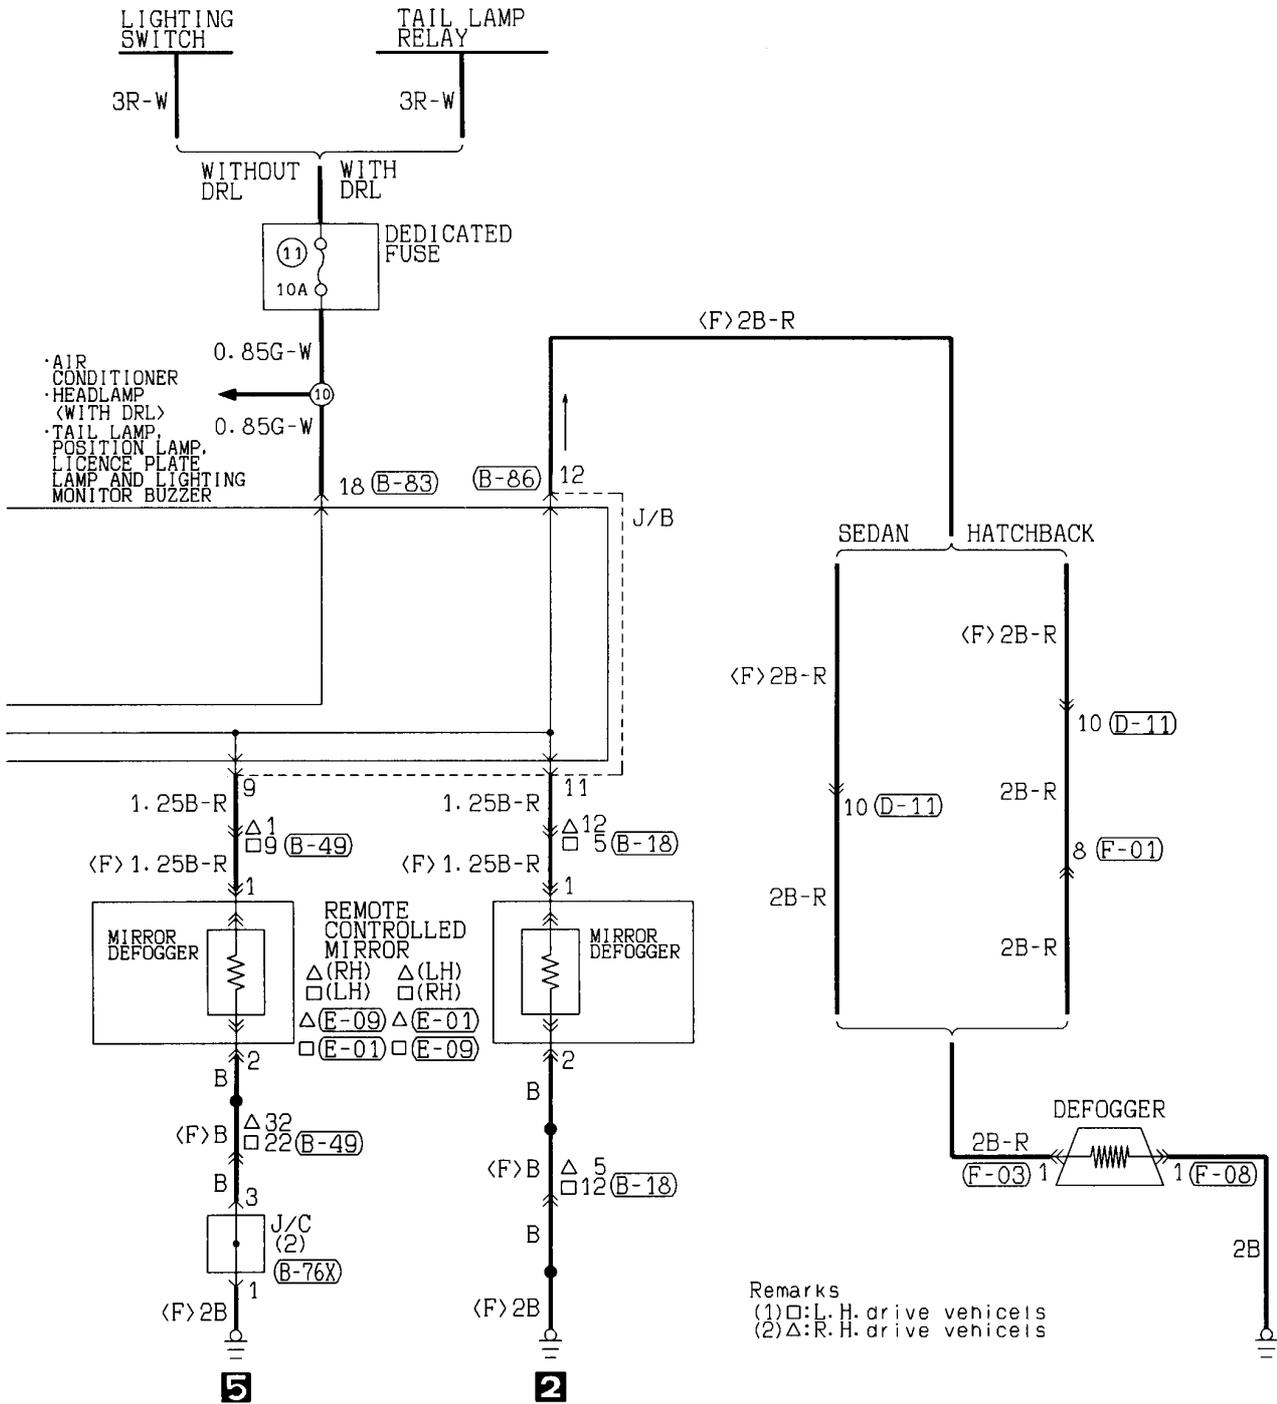


ANTI-LOCK BRAKING SYSTEM (ABS)

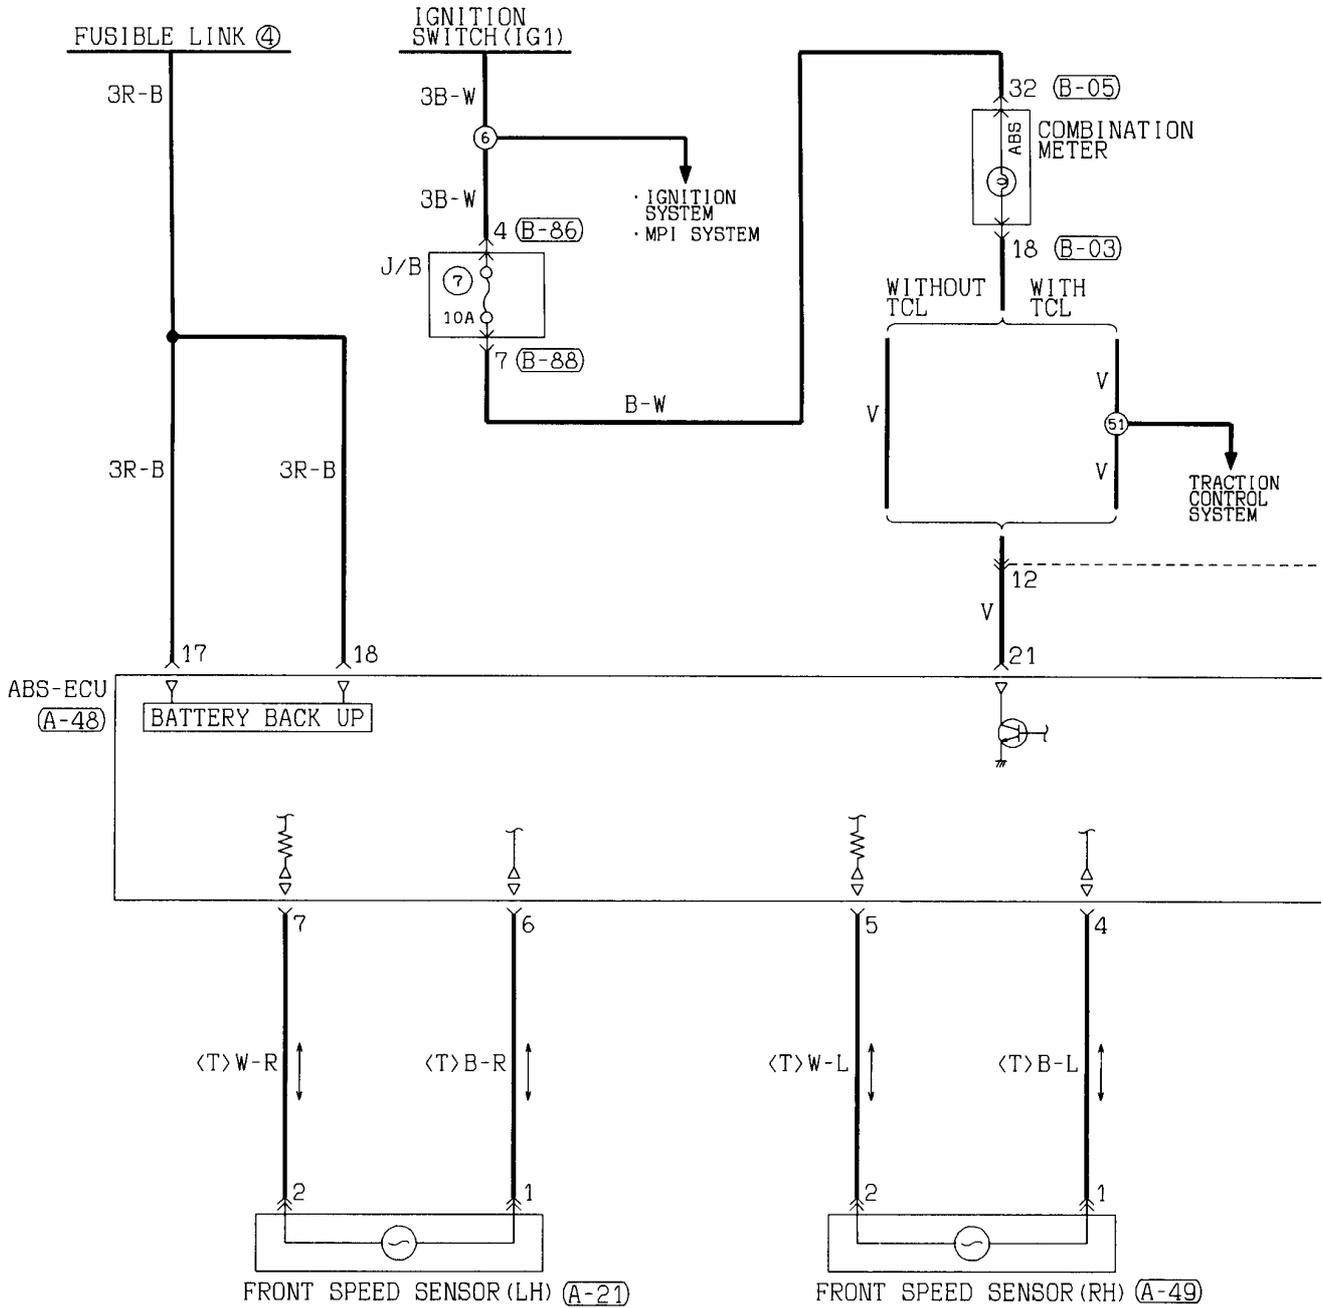

Remarks
 (1) *1: Vehicles without auto-cruise control system.
 (2) *2: Vehicles with auto-cruise control system.

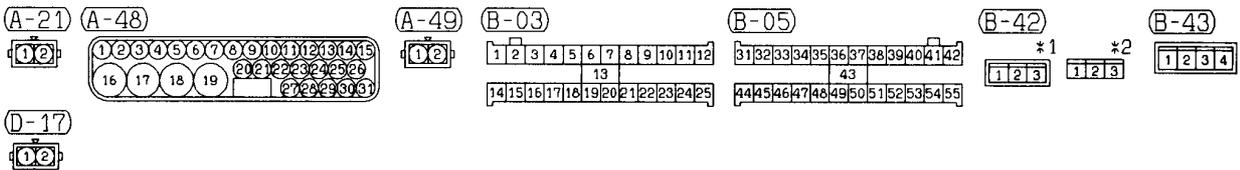

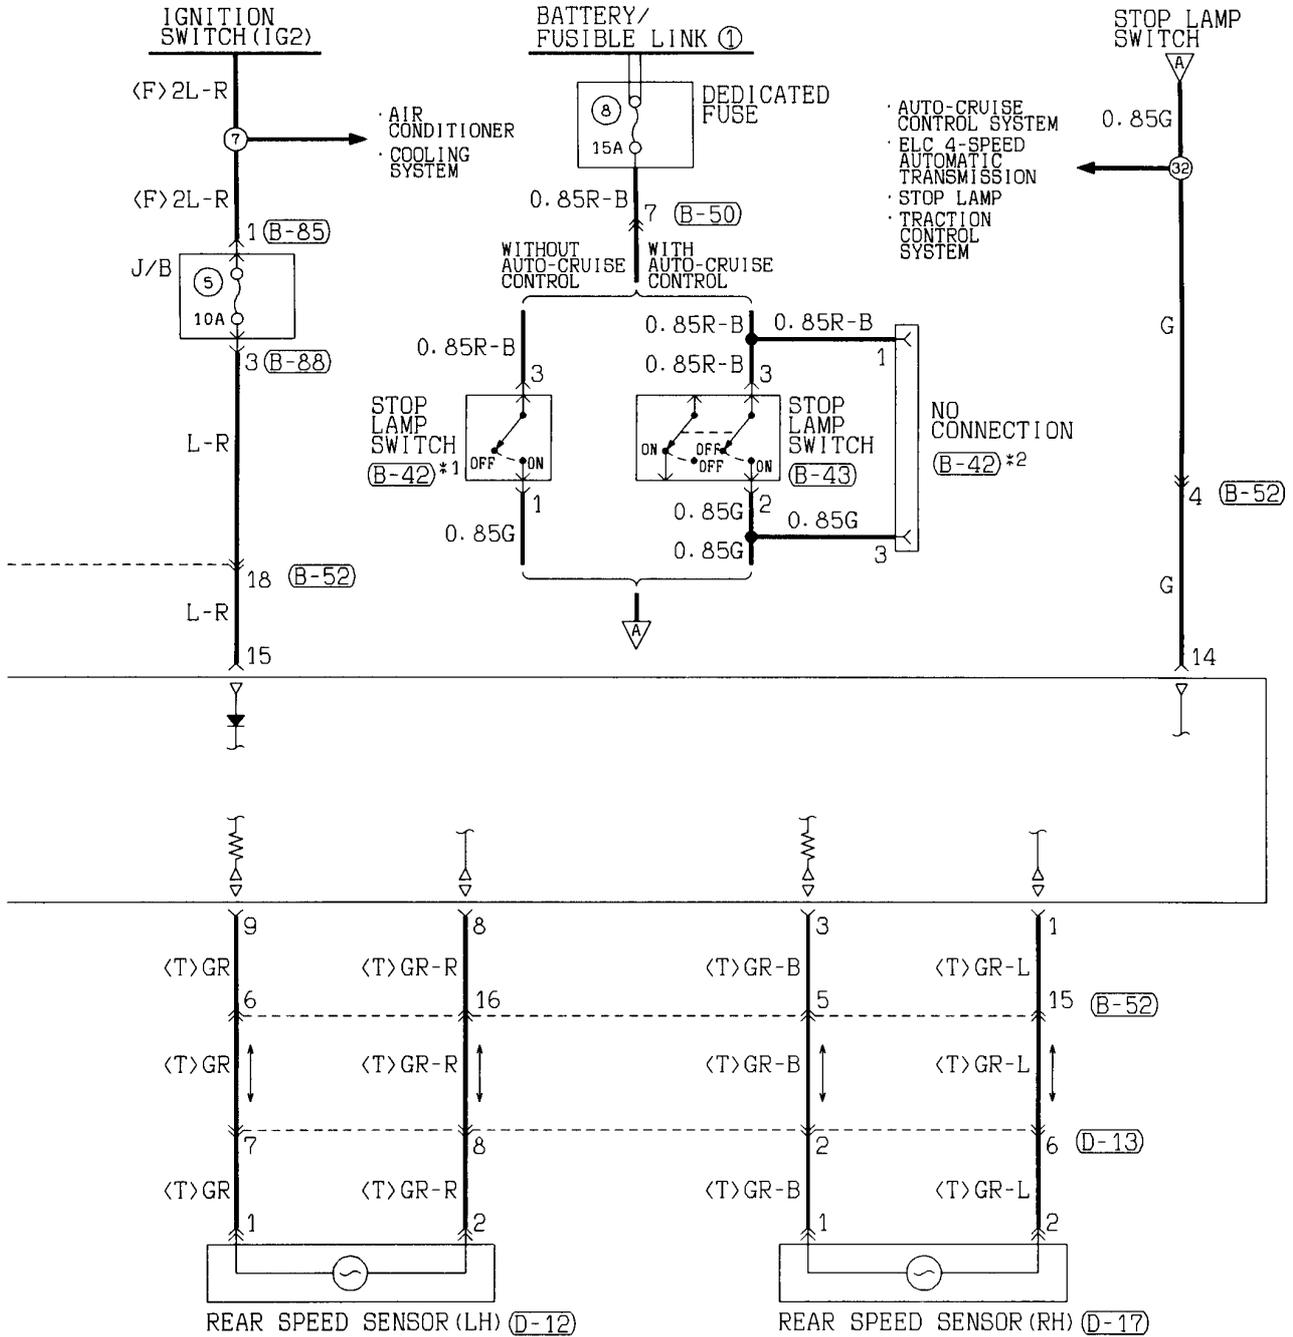

(B-50)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-52)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

(B-85)

1	2	3
---	---	---

(B-86)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

(B-88)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(D-12)


1	2
---	---

(D-13)

1	2	3	4
5	6	7	8
9	10		


NOTES

TRACTION CONTROL SYSTEM (TCL) <M/T>

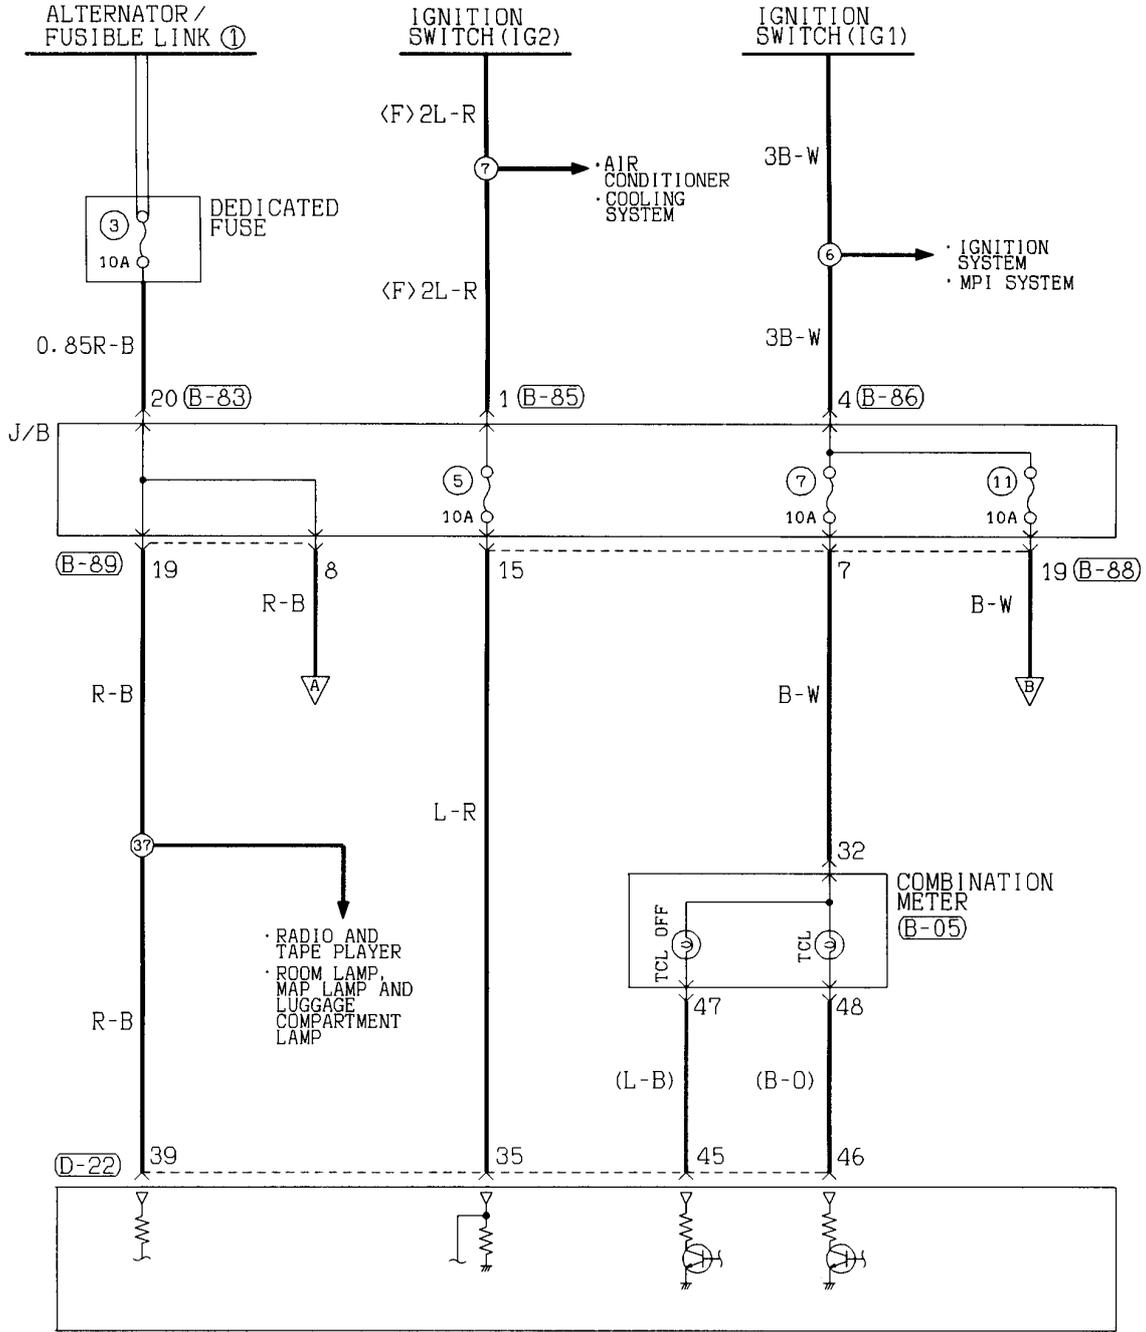


TCL-ECU


(A-48)

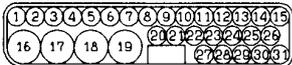

(B-05)

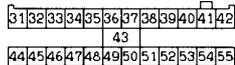


(B-52)

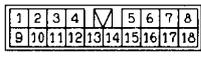


(B-61)




(B-76X)

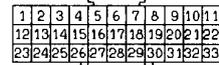


(D-21)

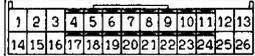

(D-22)

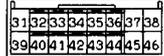

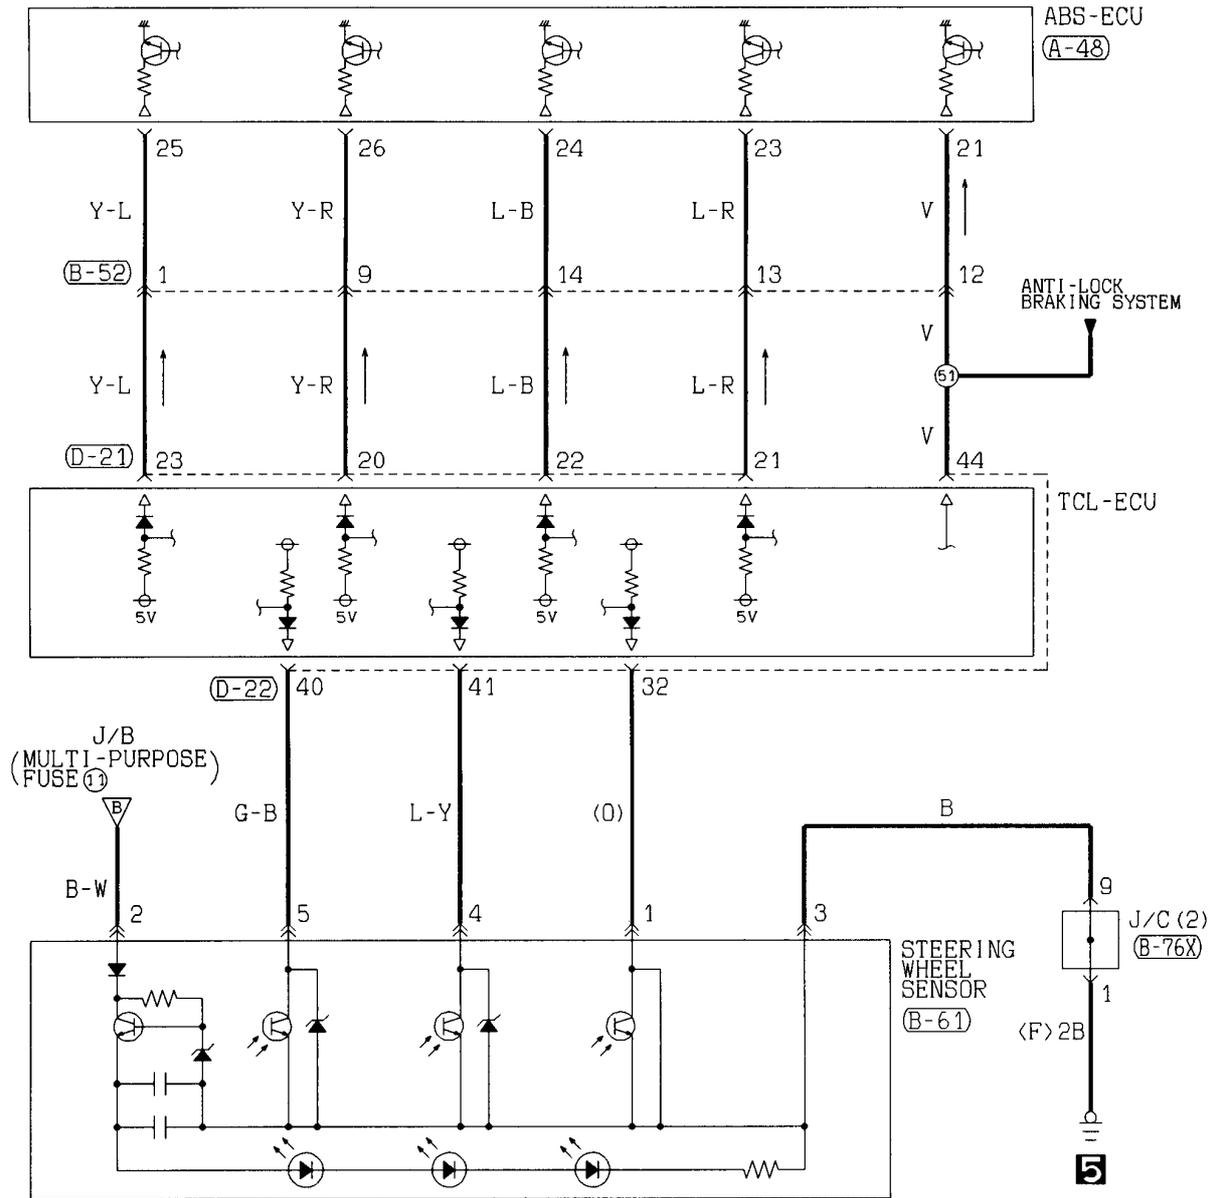

B-83

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

B-85

1	2	3
---	---	---

B-86

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18







D-88


1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

B-89

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

TRACTION CONTROL SYSTEM (TCL) <M/T> (CONTINUED)

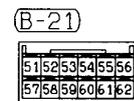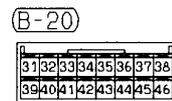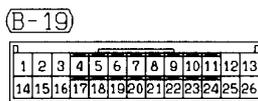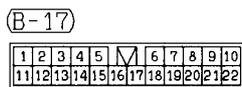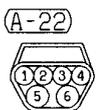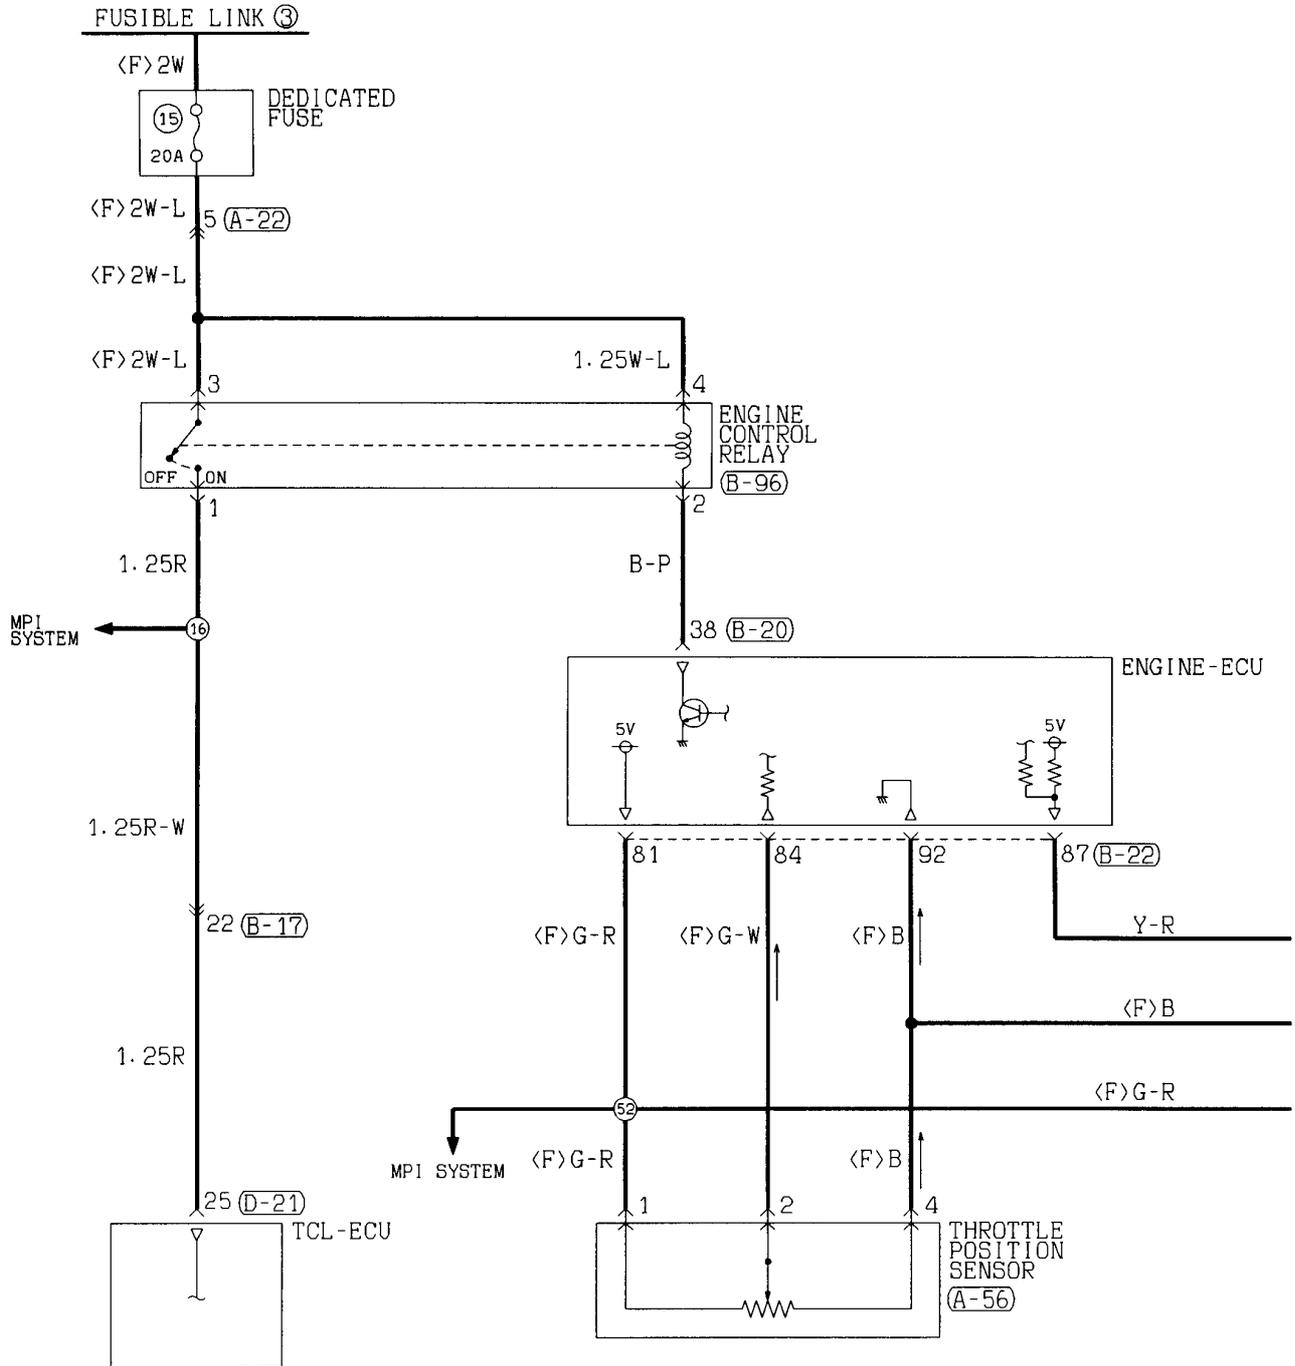

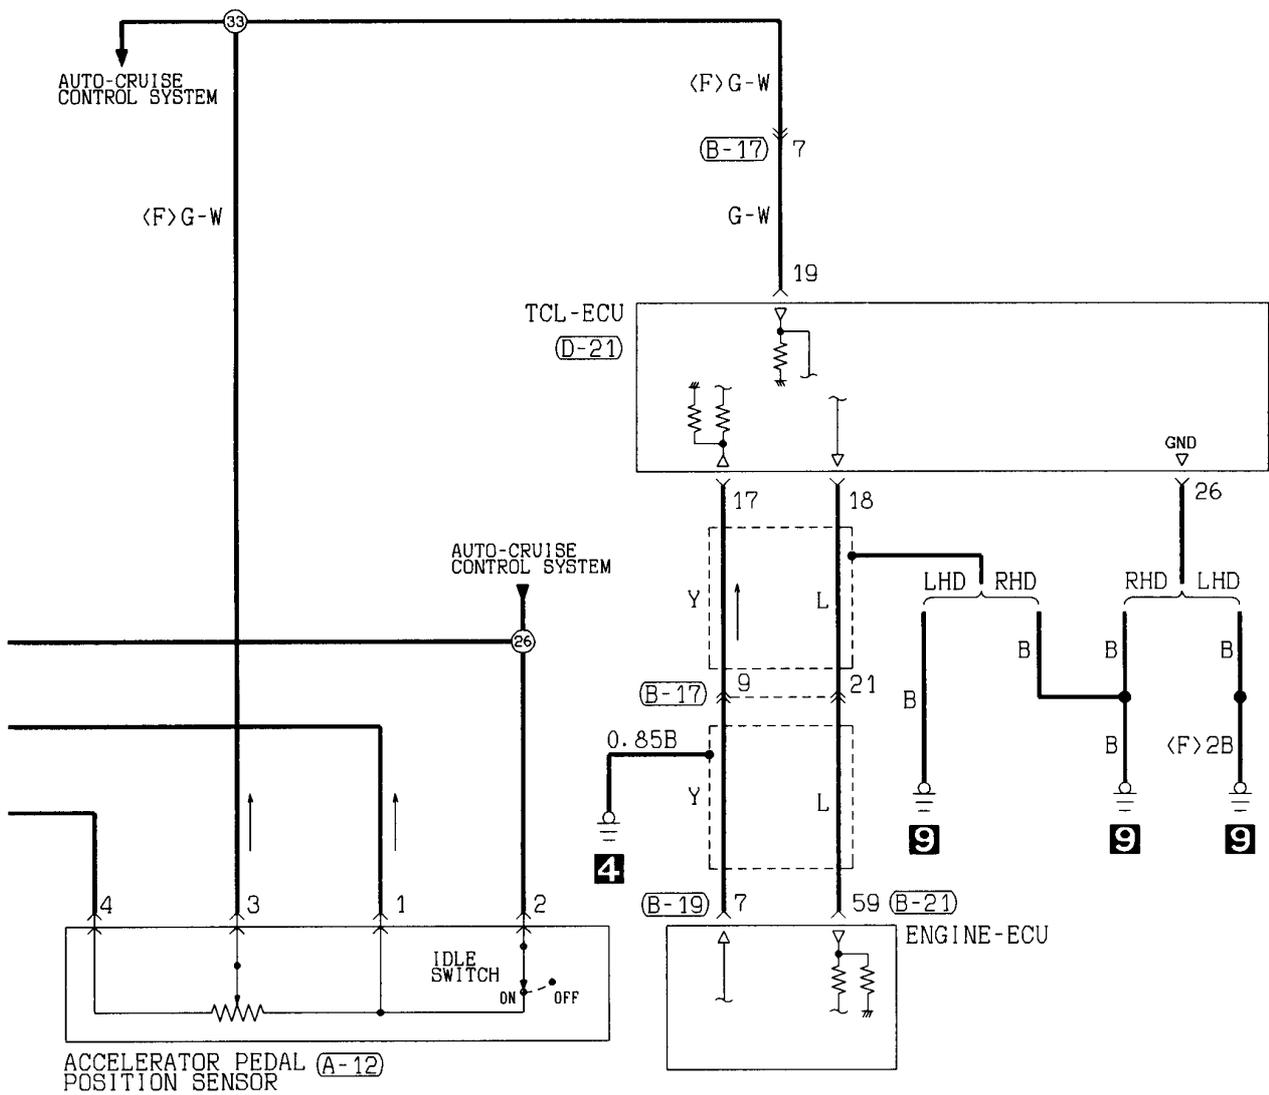

(B-22)


71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

(B-96)


1	2
3	4

(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

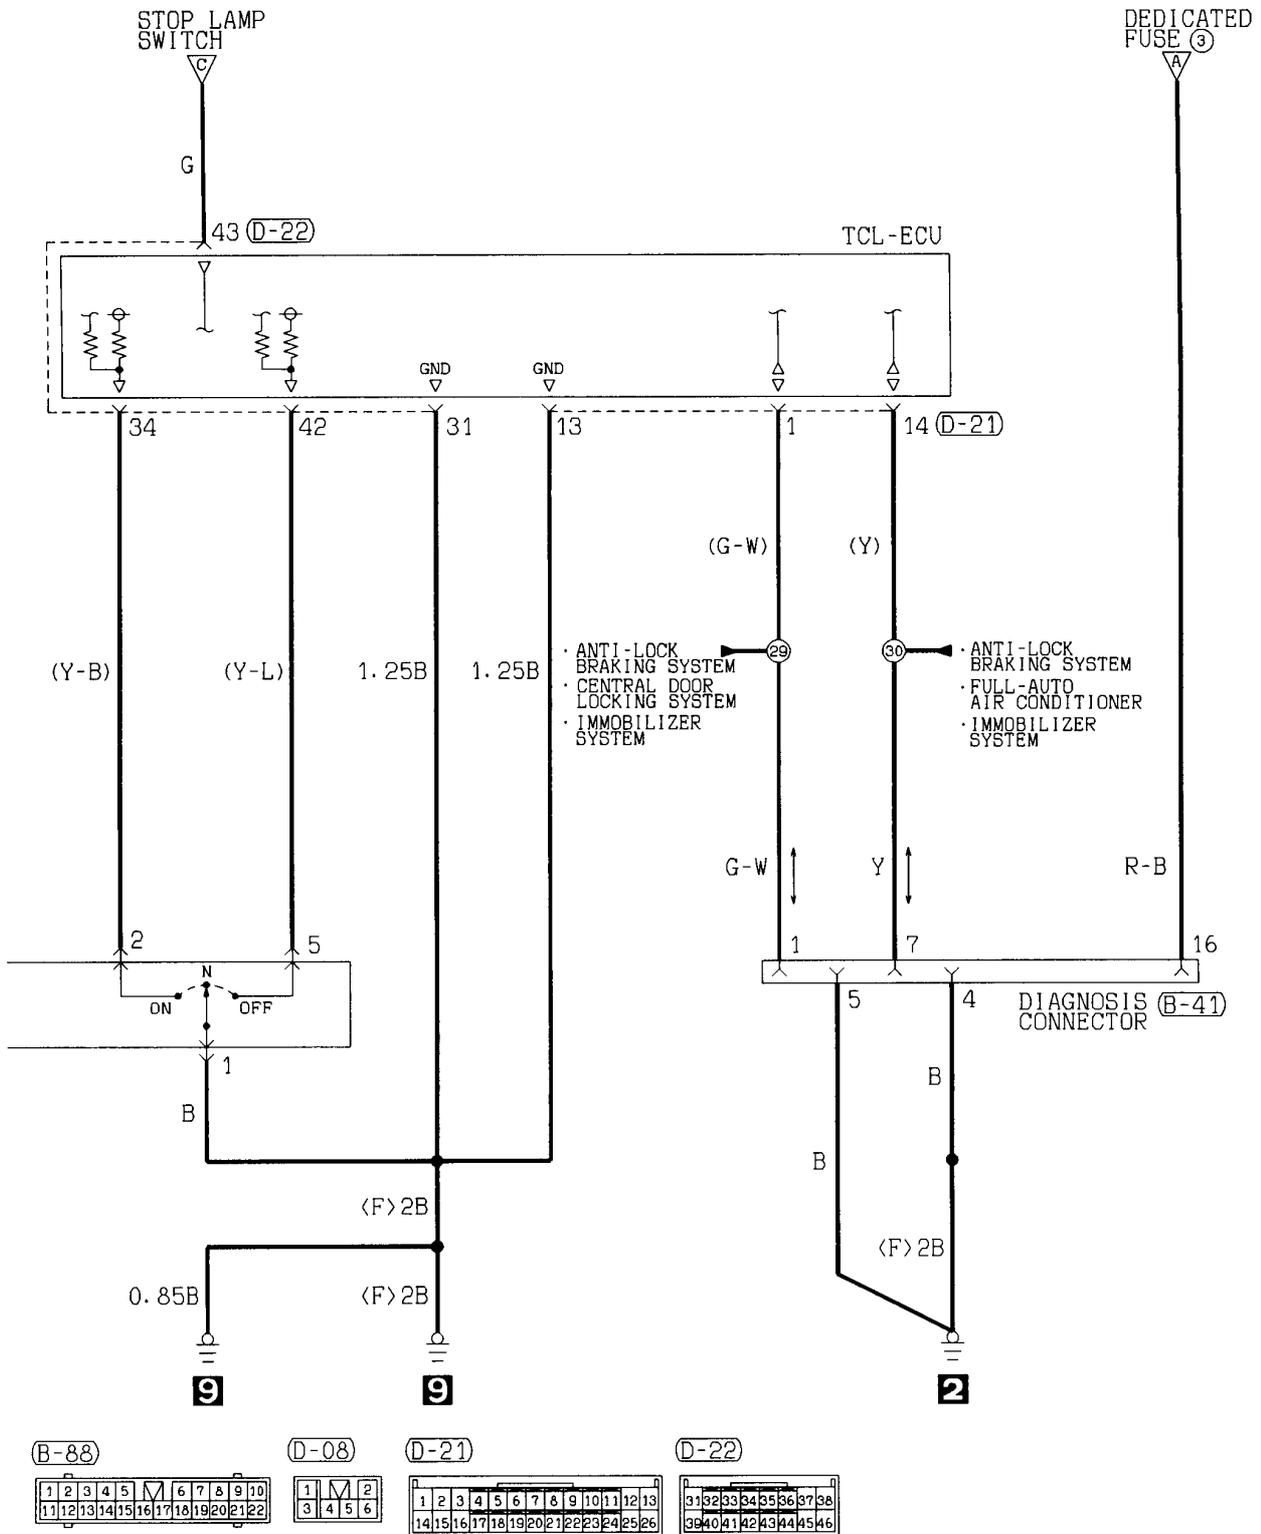


TRACTION CONTROL SYSTEM (TCL) <A/T>

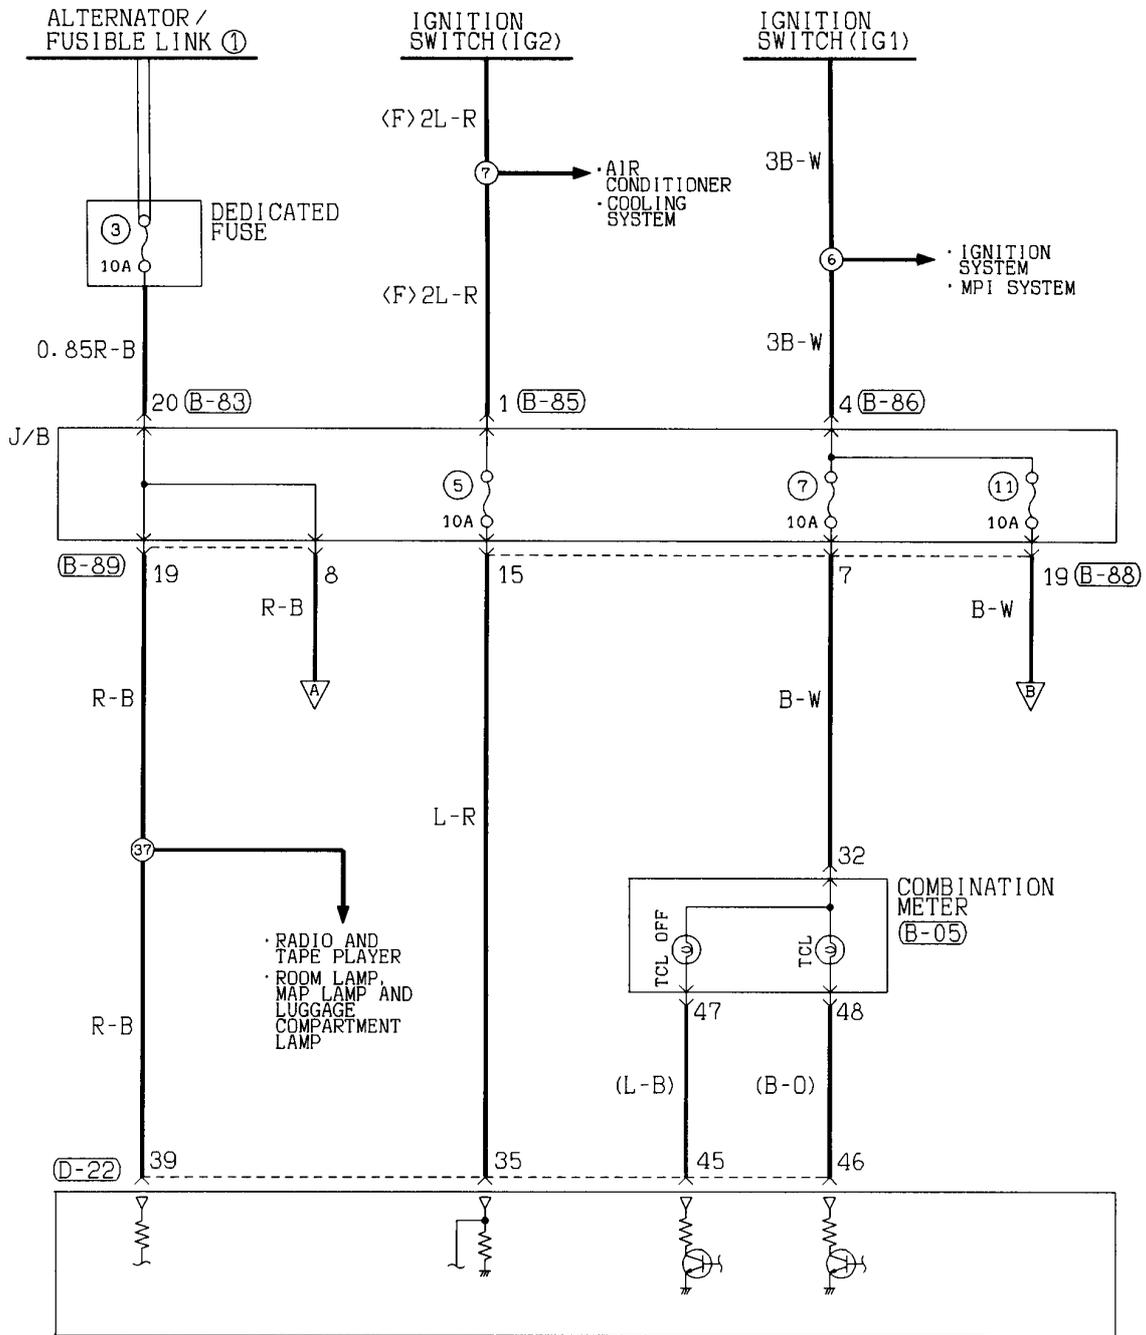


TCL-ECU


A-48

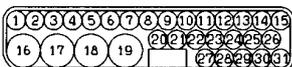

B-05

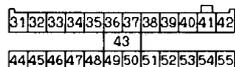


B-52

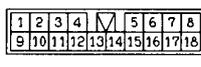


B-61




B-76X

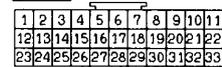


D-21

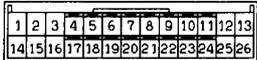


D-22

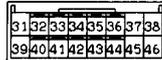

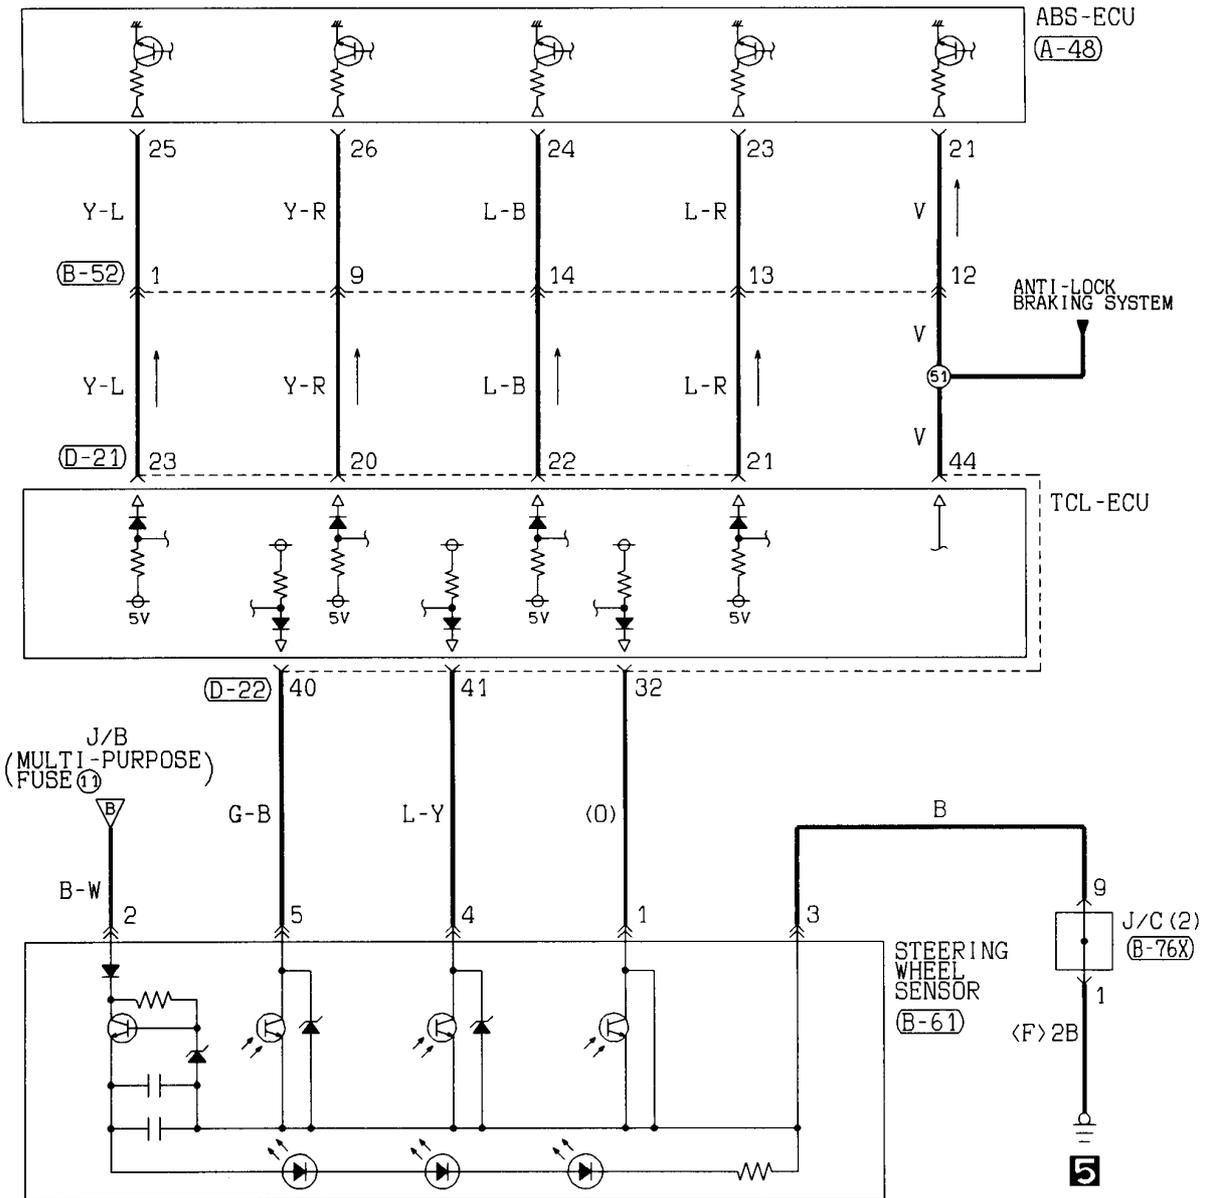


(B-83)

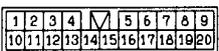


(B-85)




(B-86)

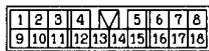


(D-88)

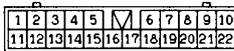

(B-89)

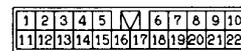

TRACTION CONTROL SYSTEM (TCL) <A/T> (CONTINUED)

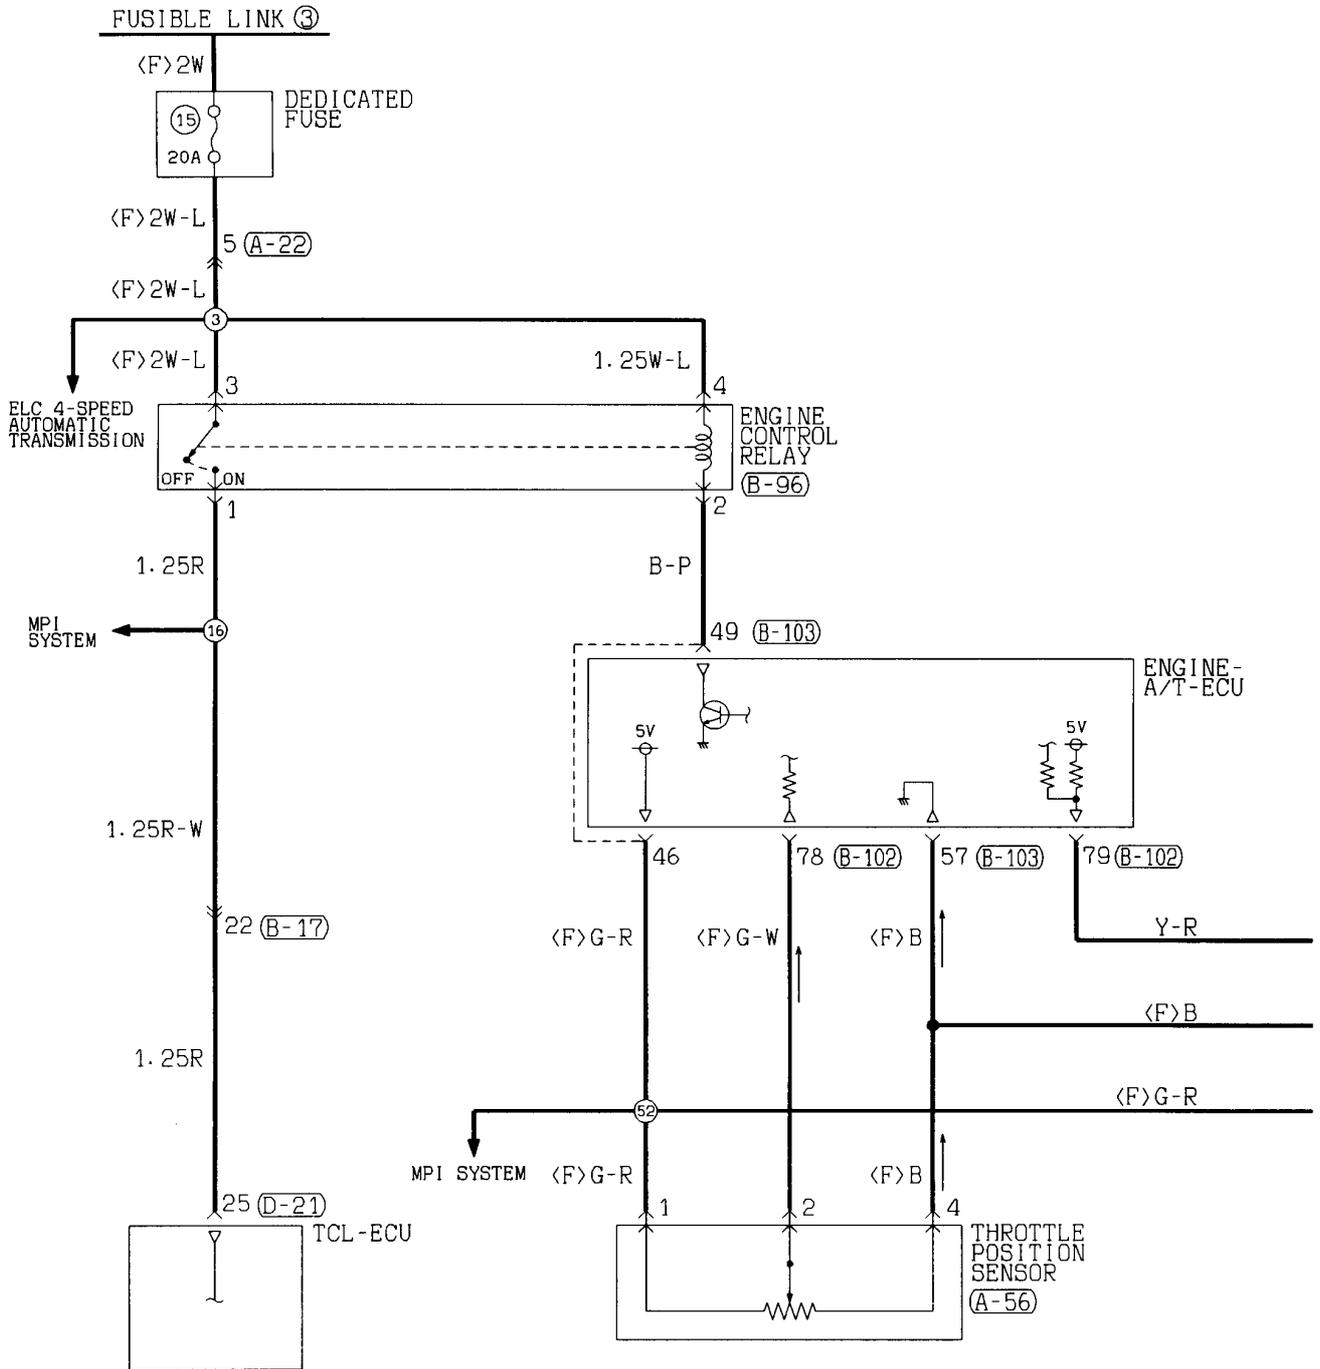

(A-12)

1	2	3	4
---	---	---	---

(A-22)

1	2	3	4
5	6		

(A-56)

1	2	3	4
---	---	---	---

(B-17)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

(B-96)


1	2
3	4

(B-102)

71	72	73	74			75	76	77			
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

(B-103)


41	42	43				44	45	46			
47	48	49	50	51	52	53	54	55	56	57	
58	59	60	61	62	63	64	65	66			

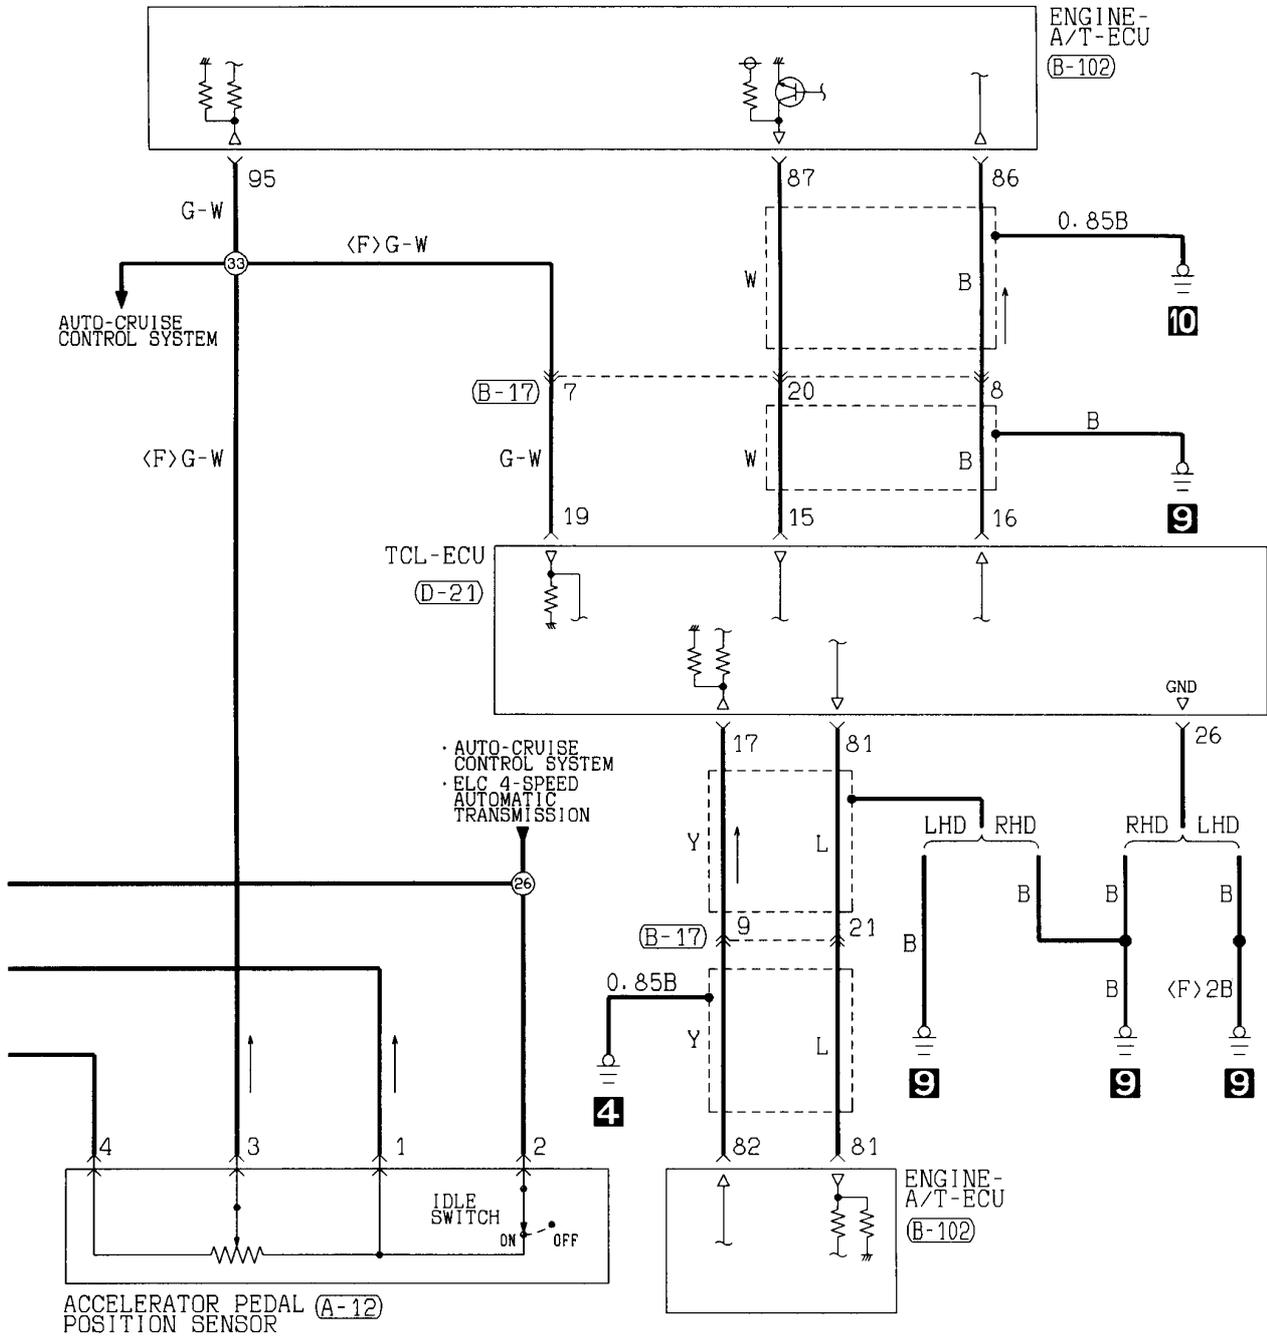

(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

TRACTION CONTROL SYSTEM (TCL) <A/T> (CONTINUED)

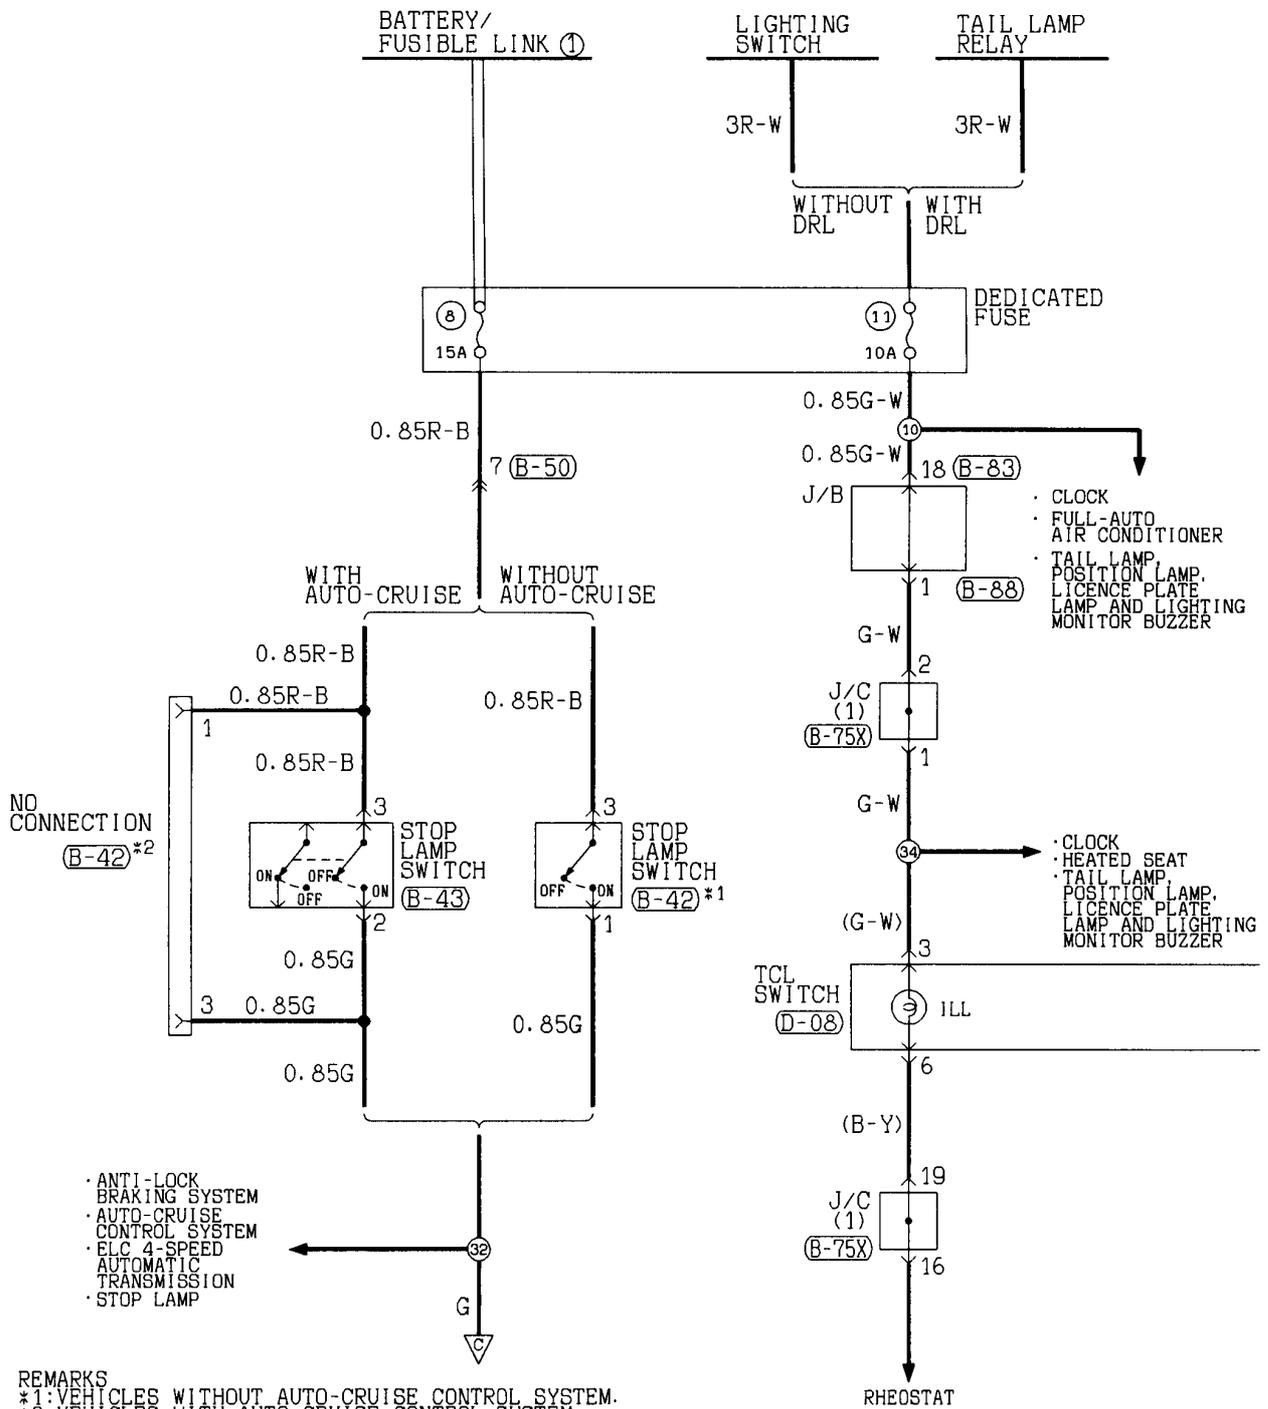

REMARKS
 *1: VEHICLES WITHOUT AUTO-CRUISE CONTROL SYSTEM.
 *2: VEHICLES WITH AUTO-CRUISE CONTROL SYSTEM.

(B-41) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-42)

*1	1	2	3
*2	1	2	3

(B-43)

1	2	3	4
---	---	---	---

(B-50)


1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

(B-75X)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-83)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

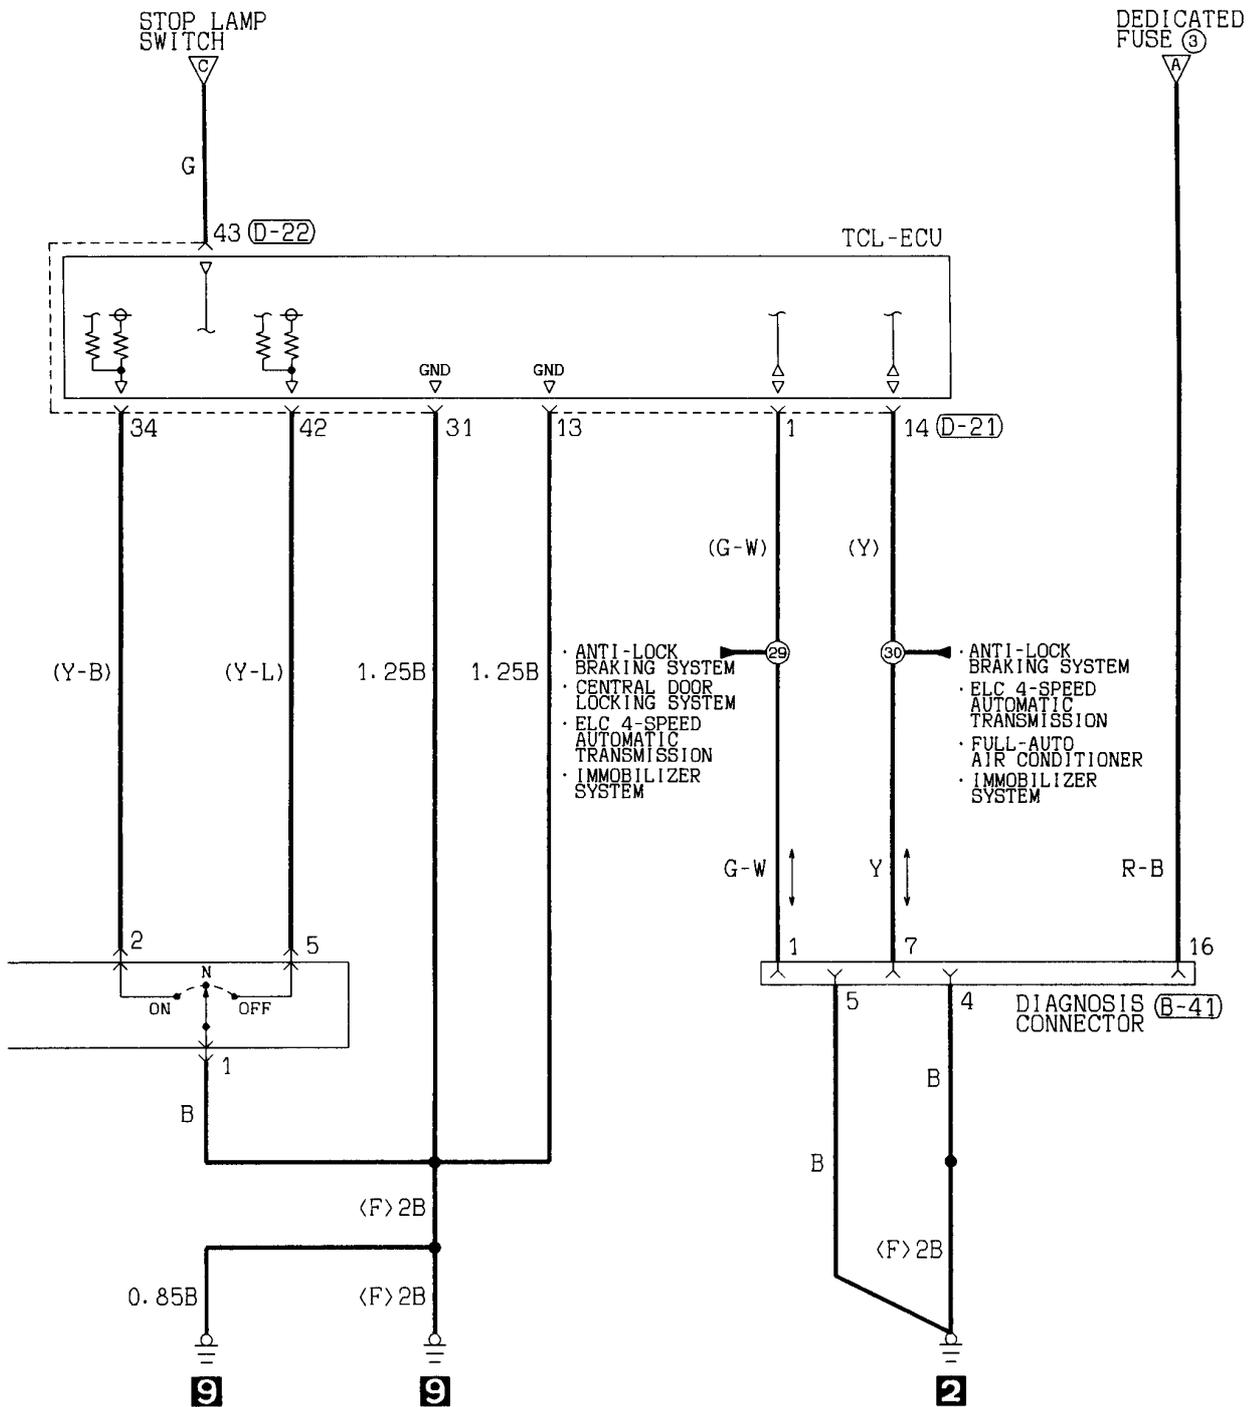

(B-88)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(D-08)

1	M	2	
3	4	5	6


(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(D-22)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

AUTO-CRUISE CONTROL SYSTEM

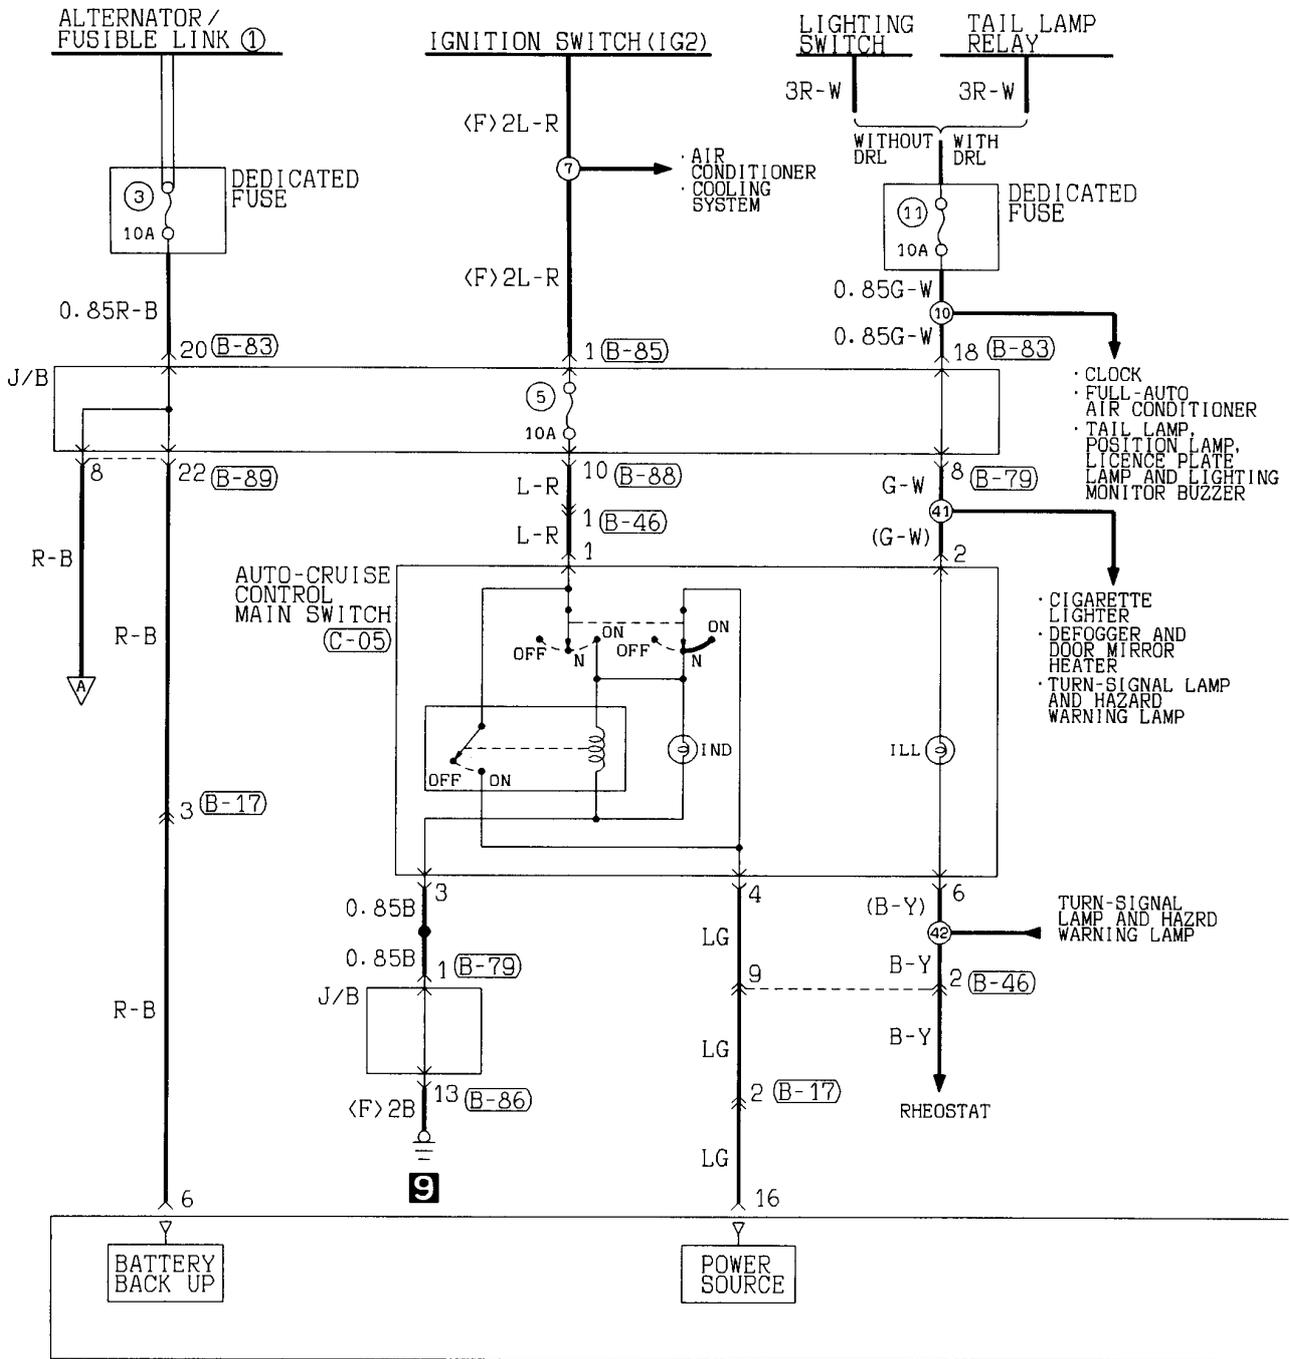

AUTO-CRUISE ECU (B-35)

A-55

1	2
3	4

B-17

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

B-35

1	2	3	4	A	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

B-42

1	2	3
---	---	---

B-43

1	2	3	4
---	---	---	---

B-46


1	2	3	4		
5	6	7	8	9	10

B-50


1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

C-05

1	2		
3	4	5	6

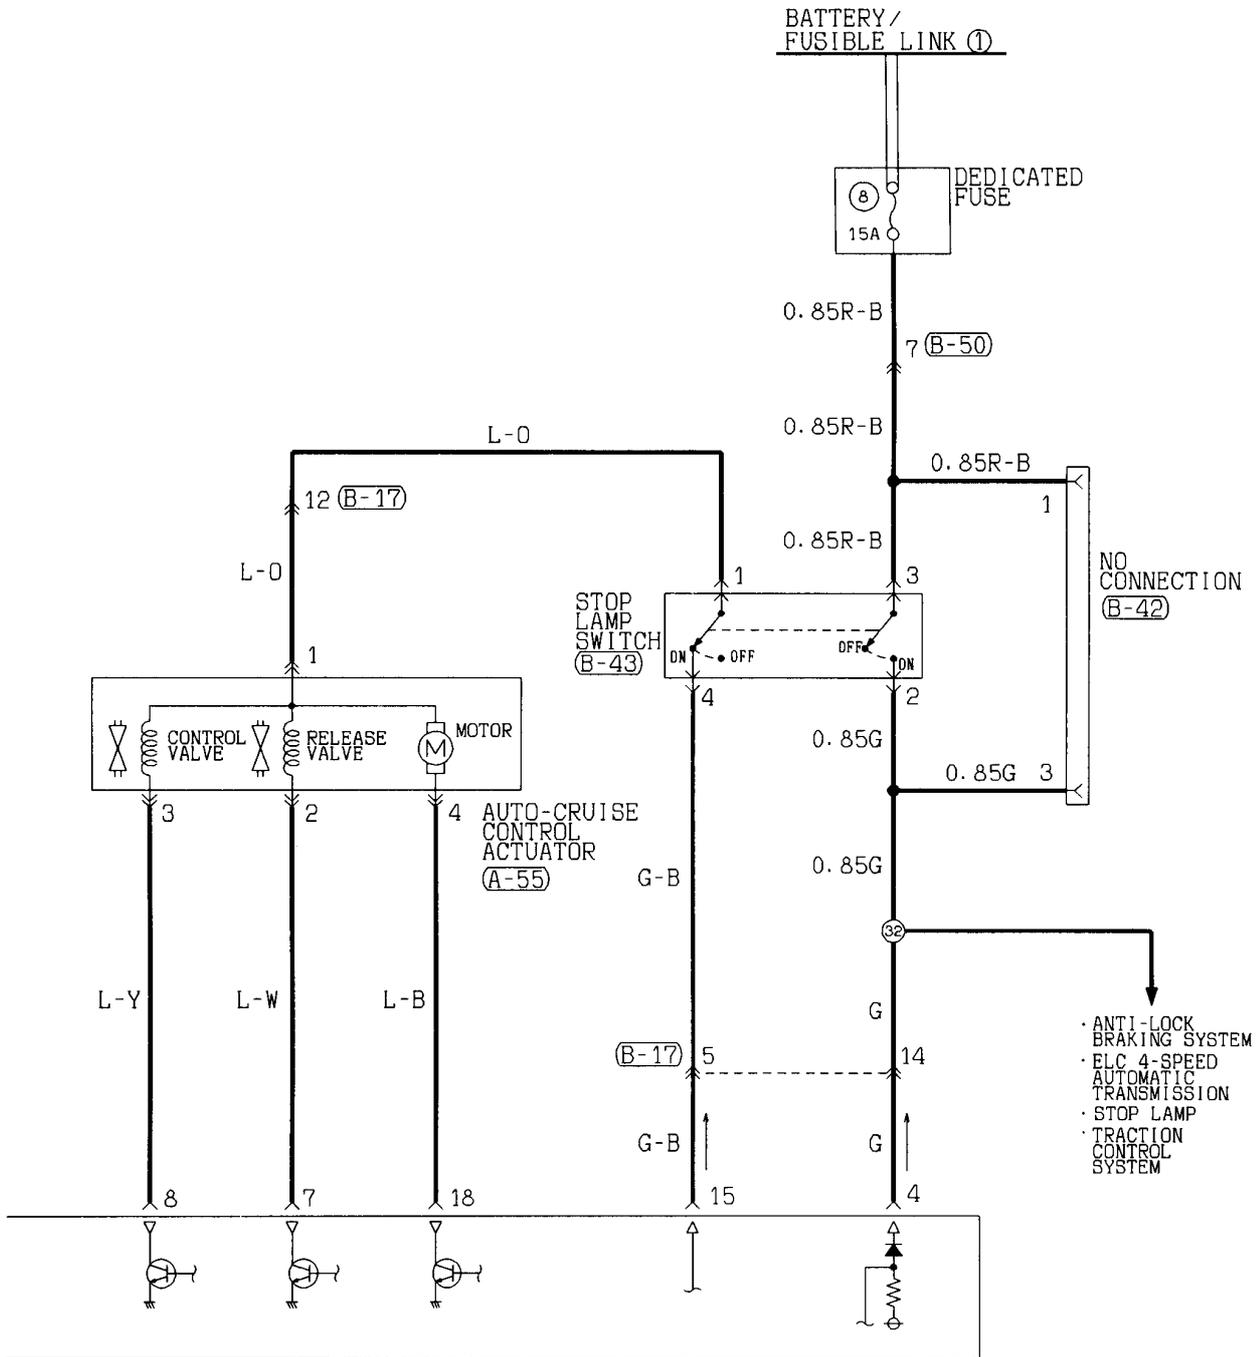

(B-79)

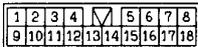


(B-83)




(B-85)




(B-86)

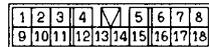







(B-88)

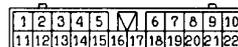


(B-89)

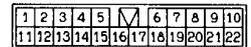


AUTO-CRUISE CONTROL SYSTEM (CONTINUED)

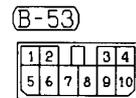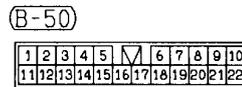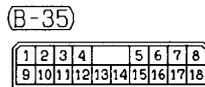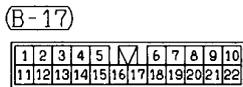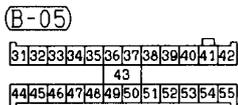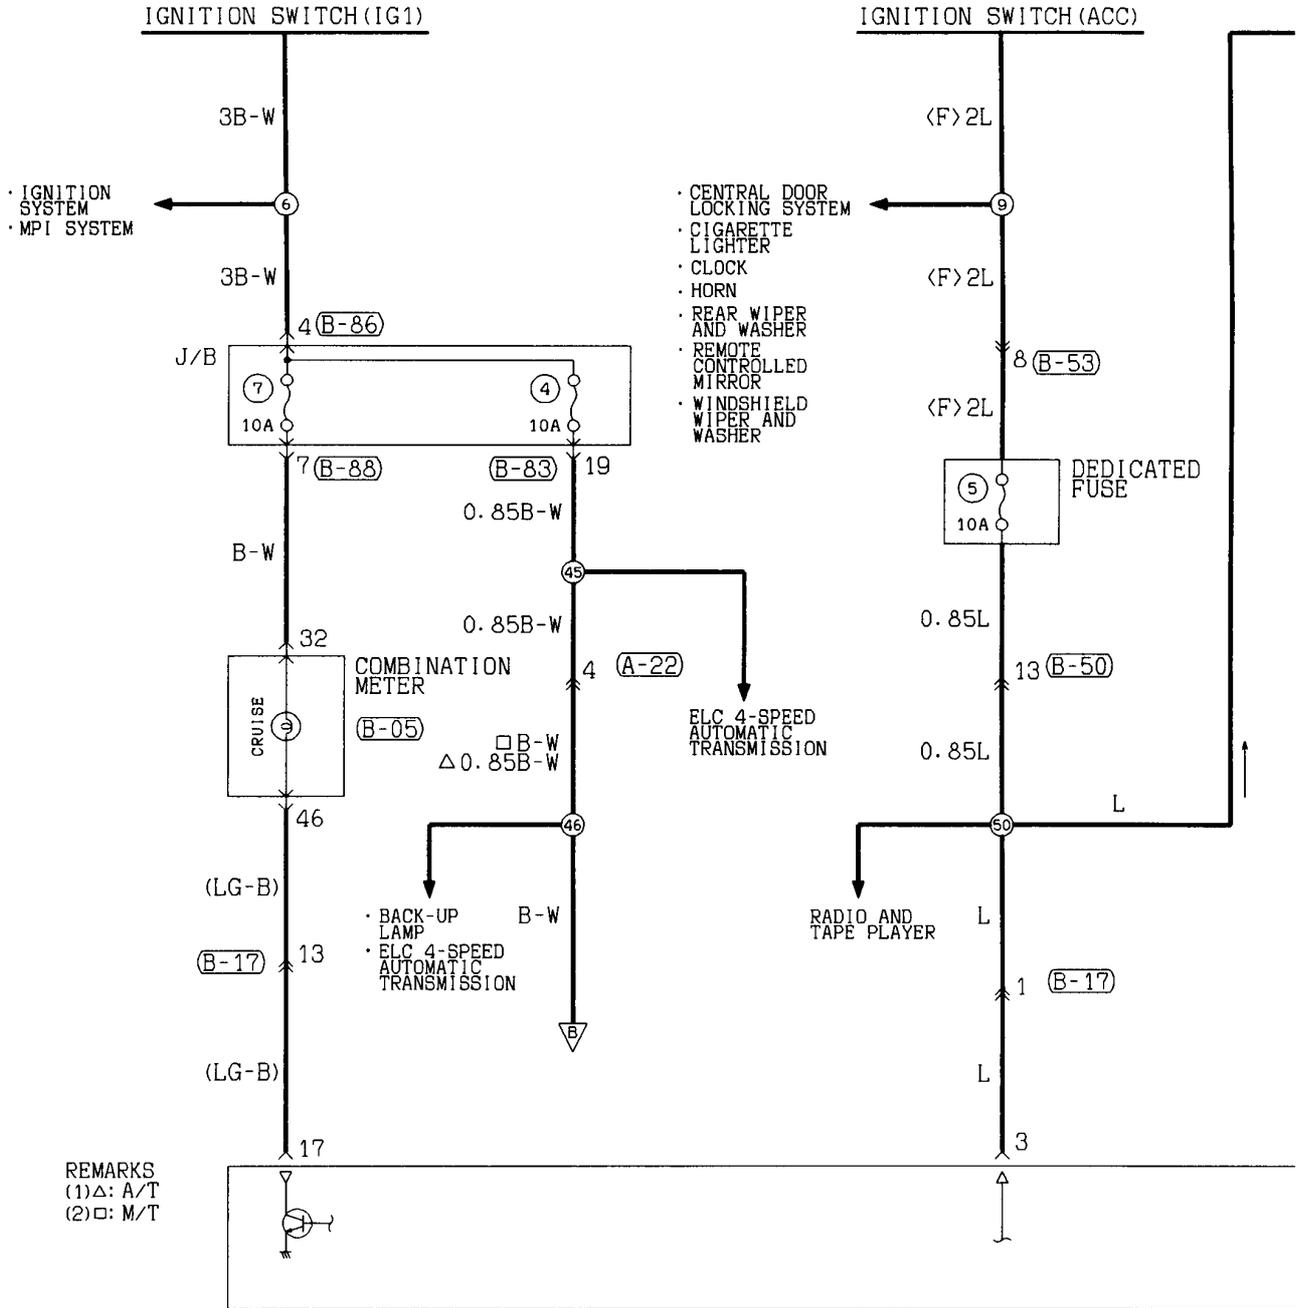

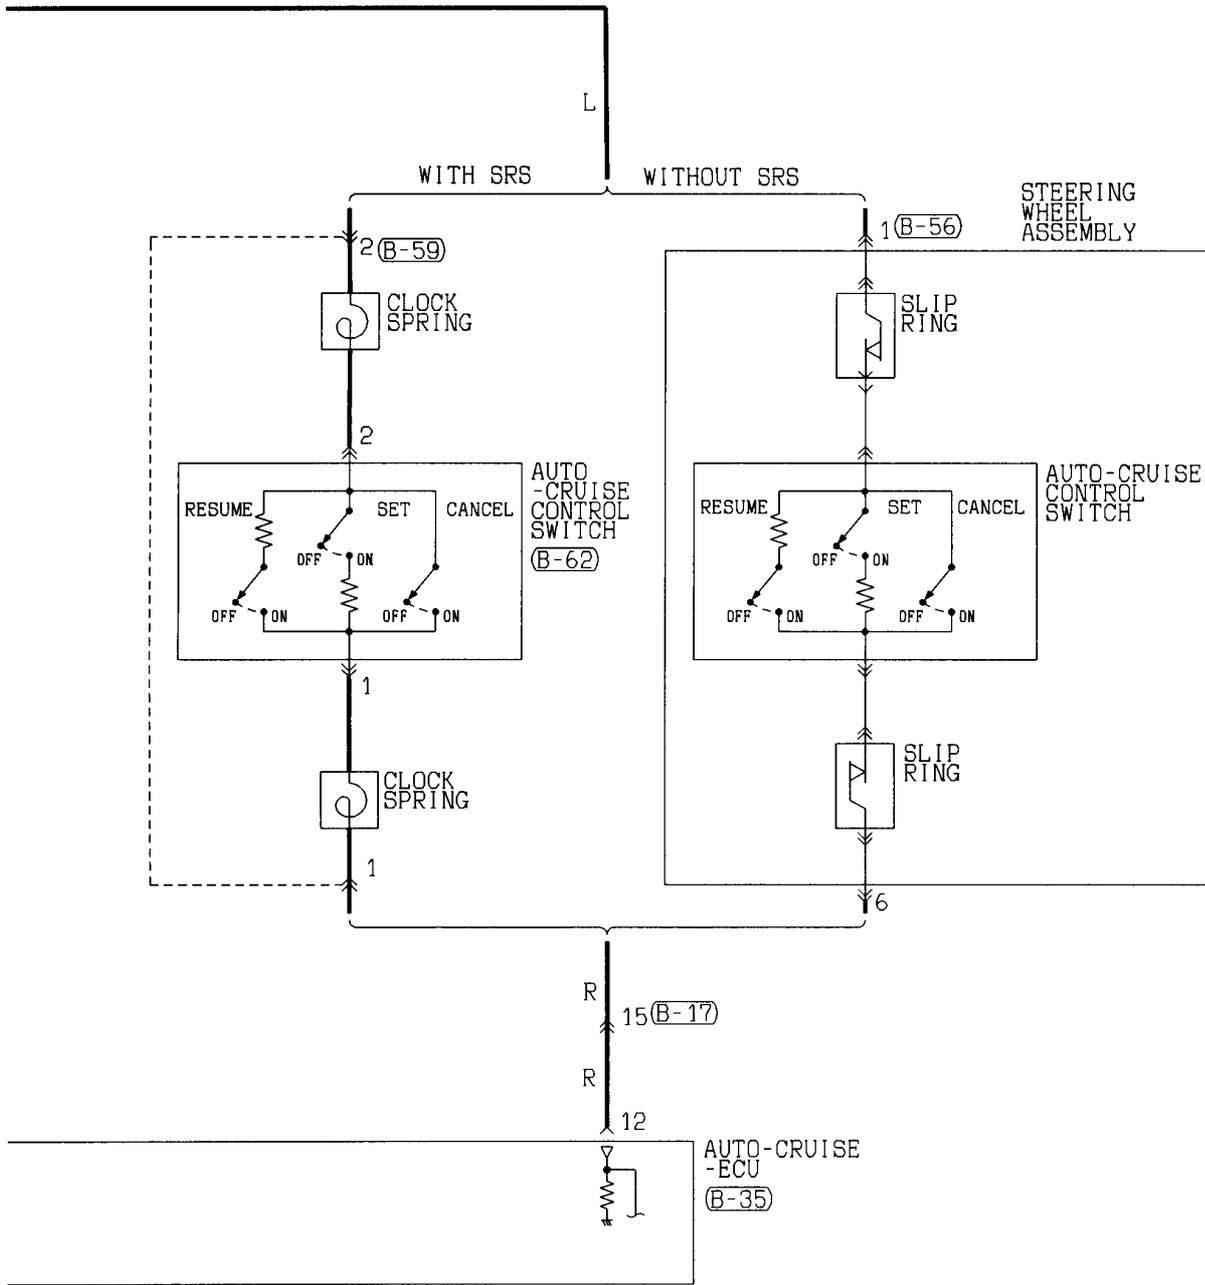

B-56

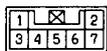

B-59




B-62




B-83



B-86

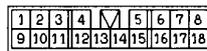


B-88

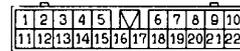

AUTO-CRUISE CONTROL SYSTEM (CONTINUED)

<WITHOUT TCL>

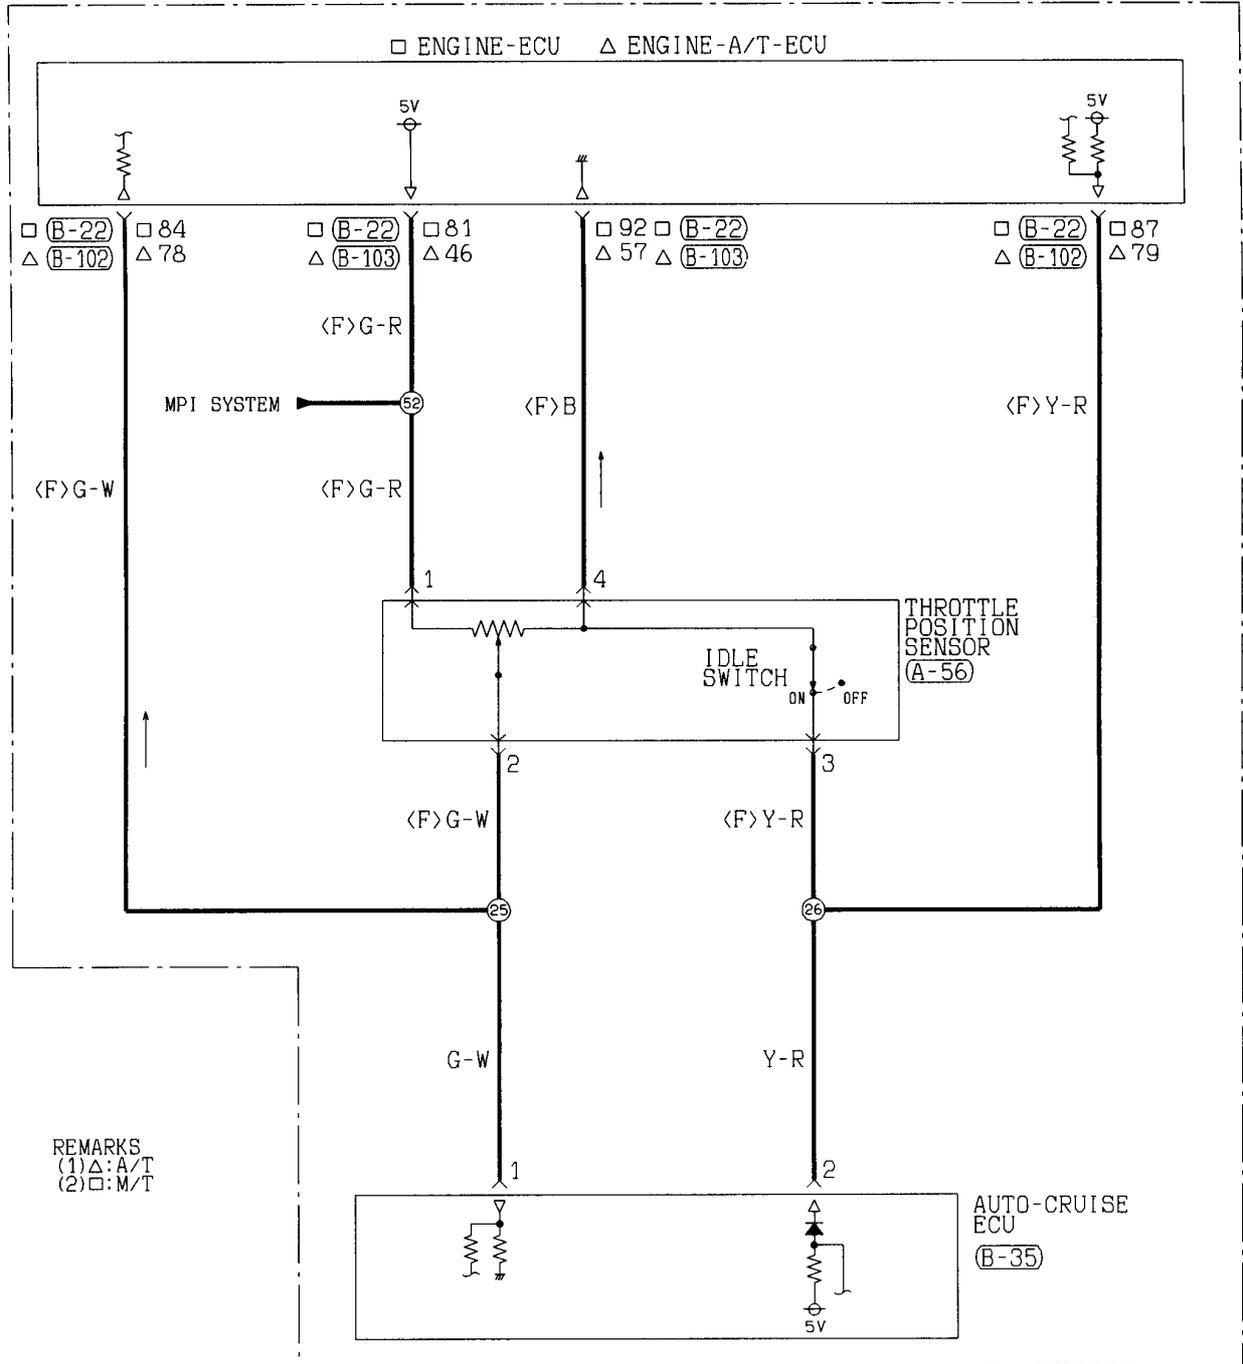

REMARKS
(1) Δ: A/T
(2) □: M/T

(A-12)

(A-56)

(B-17)

(B-22) □

(B-35)

(B-102) Δ

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22		

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22		


1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

71	72	73	74					75	76	77	
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96		97	98		

(WITH TCL)

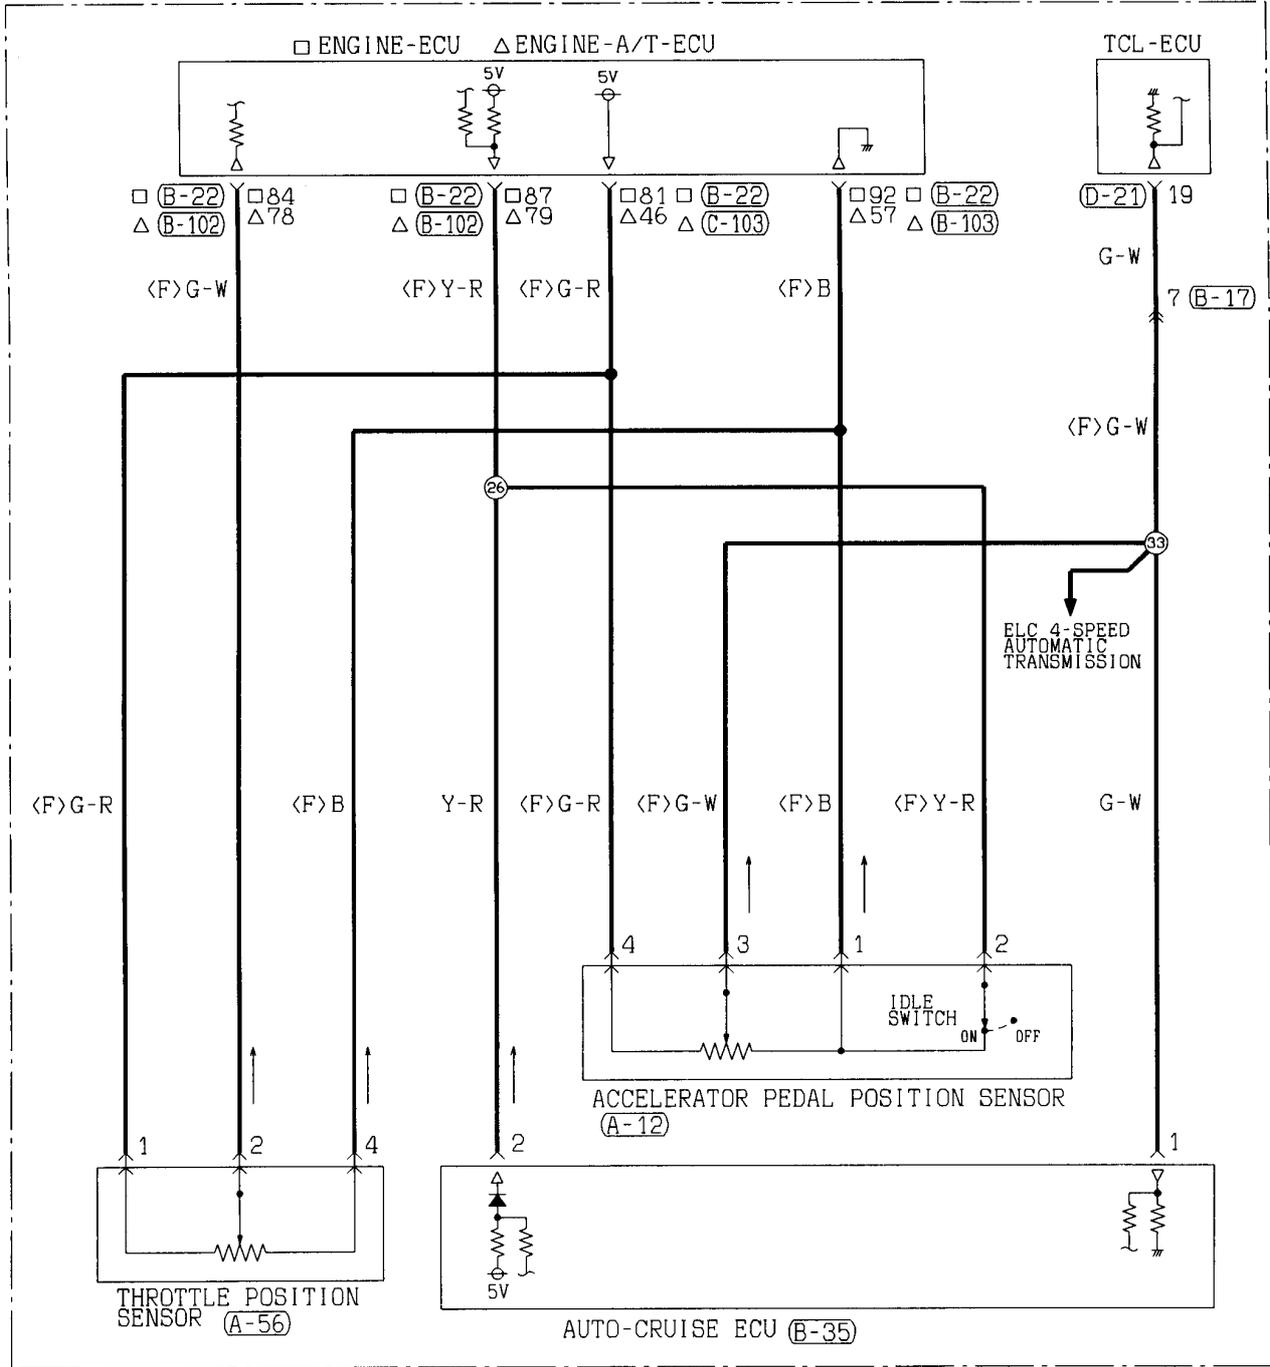


(B-103) △

41	42	43		44	45	46
47	48	49	50	51	52	53
54	55	56	57	58	59	60
61	62	63	64	65	66	

(D-21)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

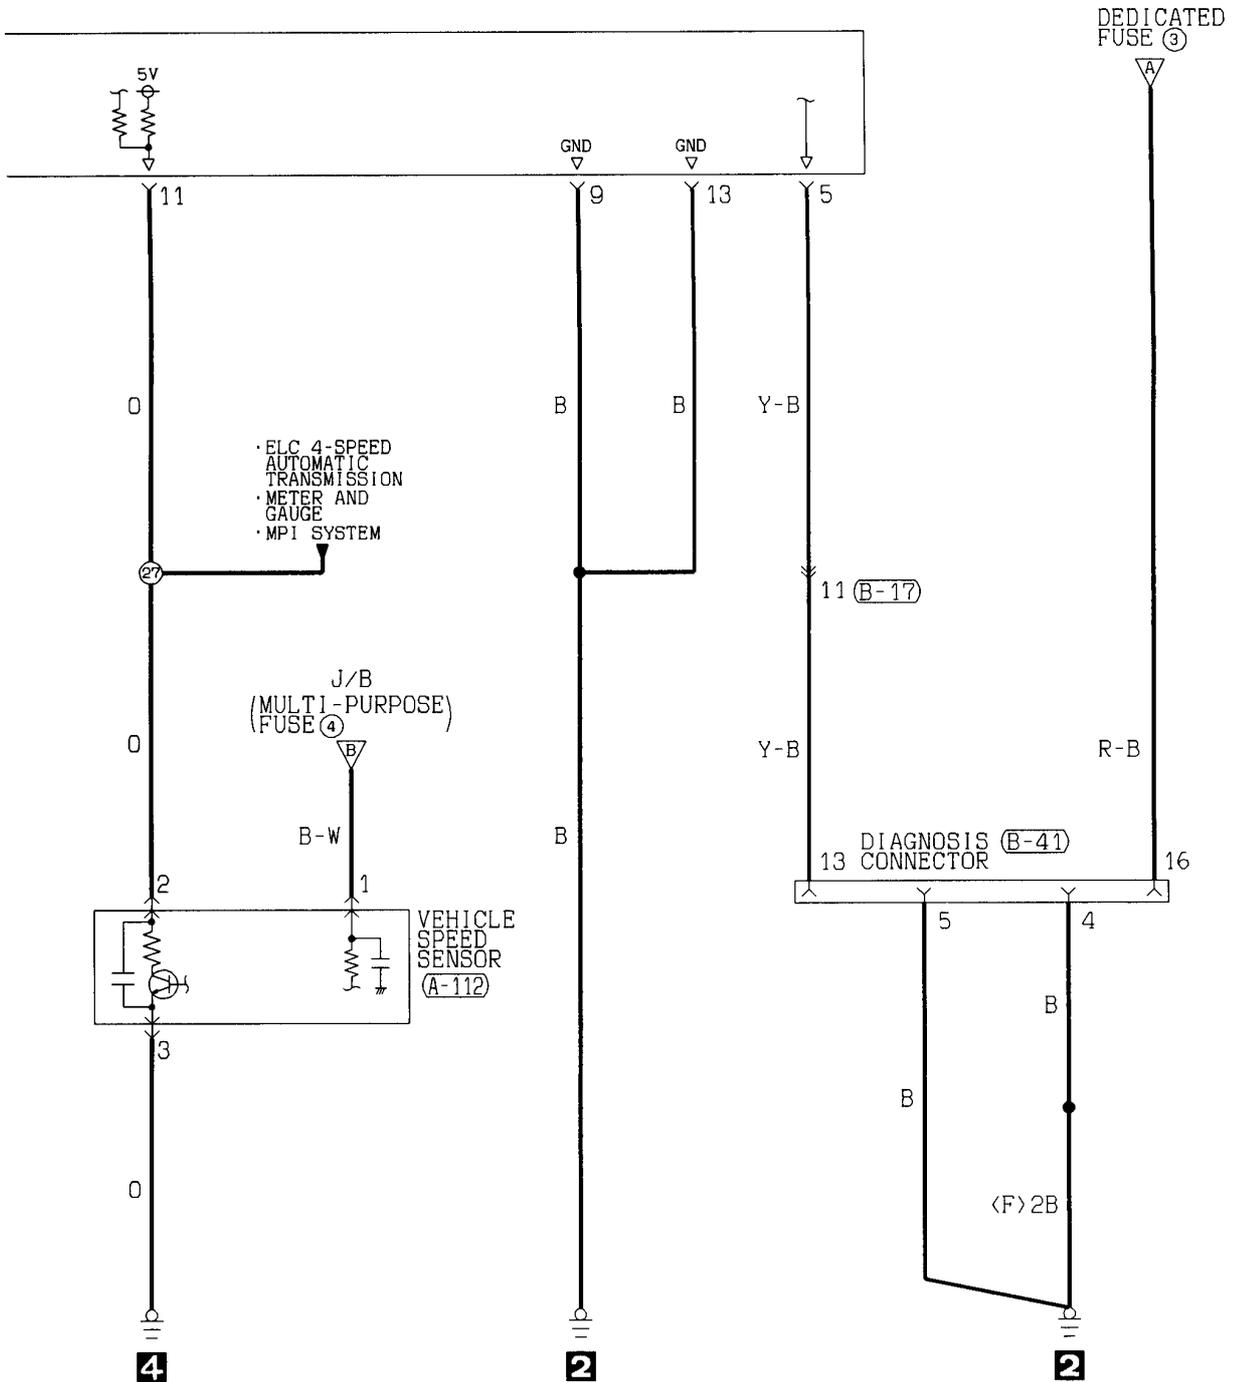

(B-41) FRONT SIDE (B-76X)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(B-102)


71	72	73	74			75	76	77			
78	79	80	81	82	83	84	85	86	87	88	89
90	91	92	93	94	95	96	97	98			

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Vehicles without side air bag

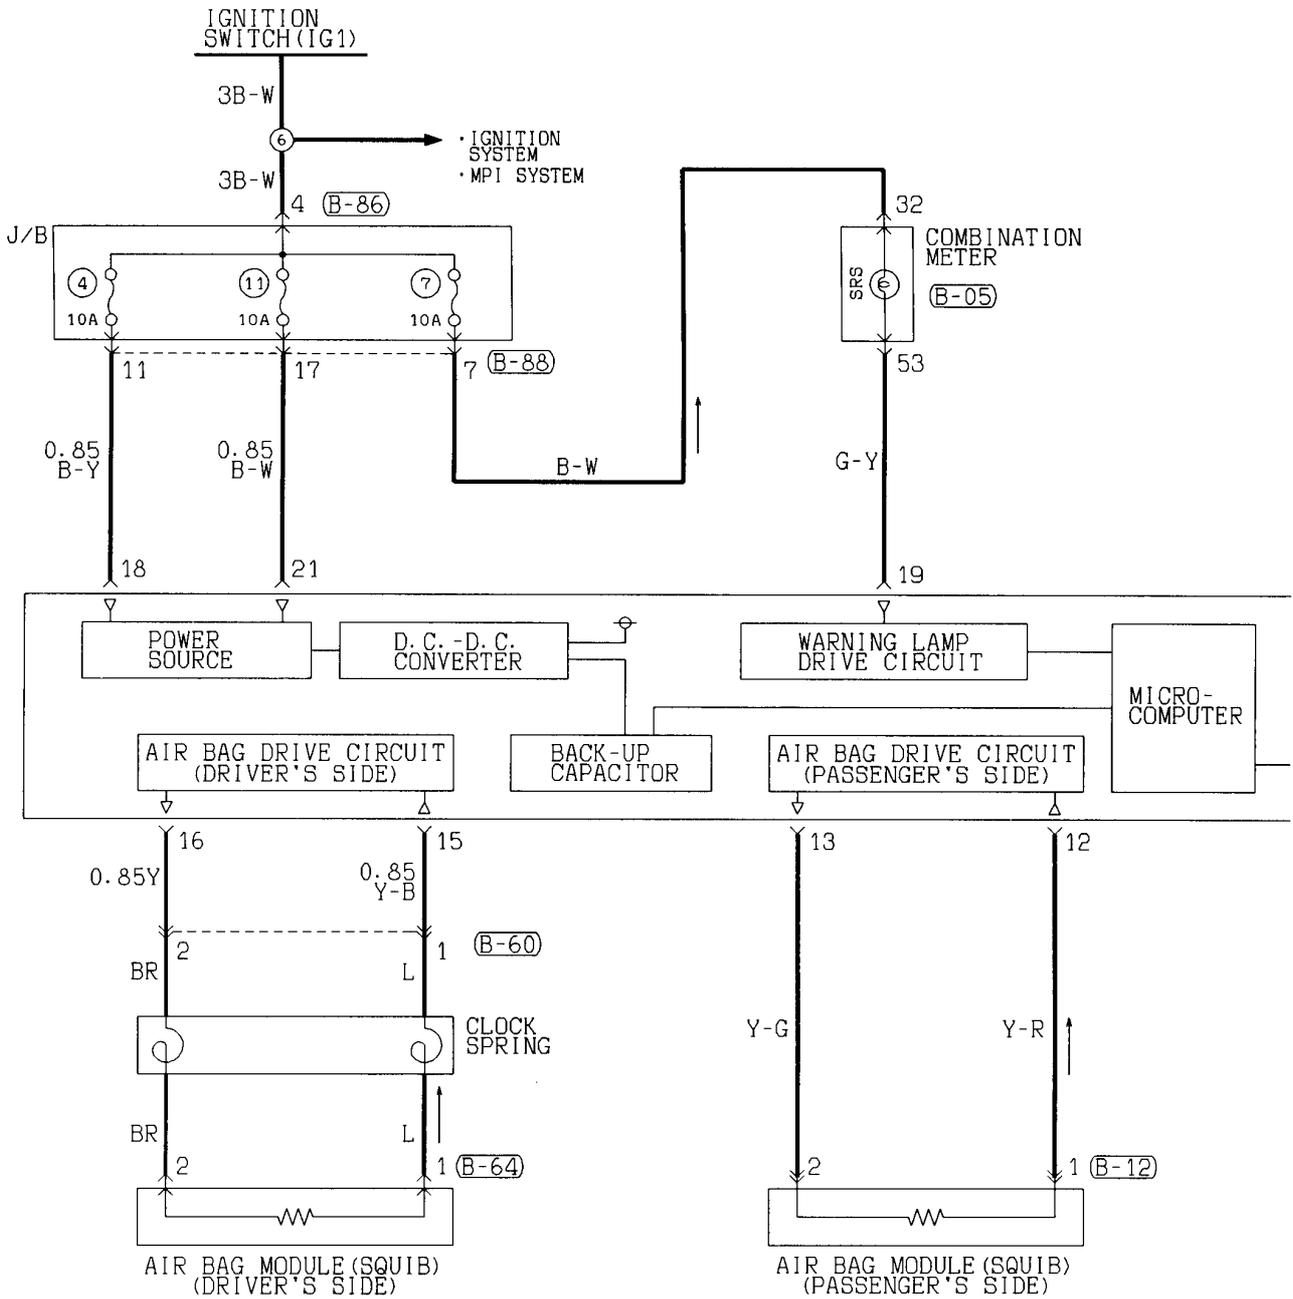


(B-05)

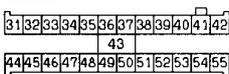

(B-12)



(B-41) FRONT SIDE

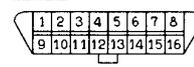


(B-60)




(B-64)




(B-83)

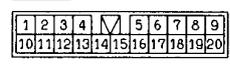


(B-86)

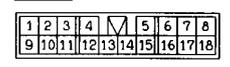

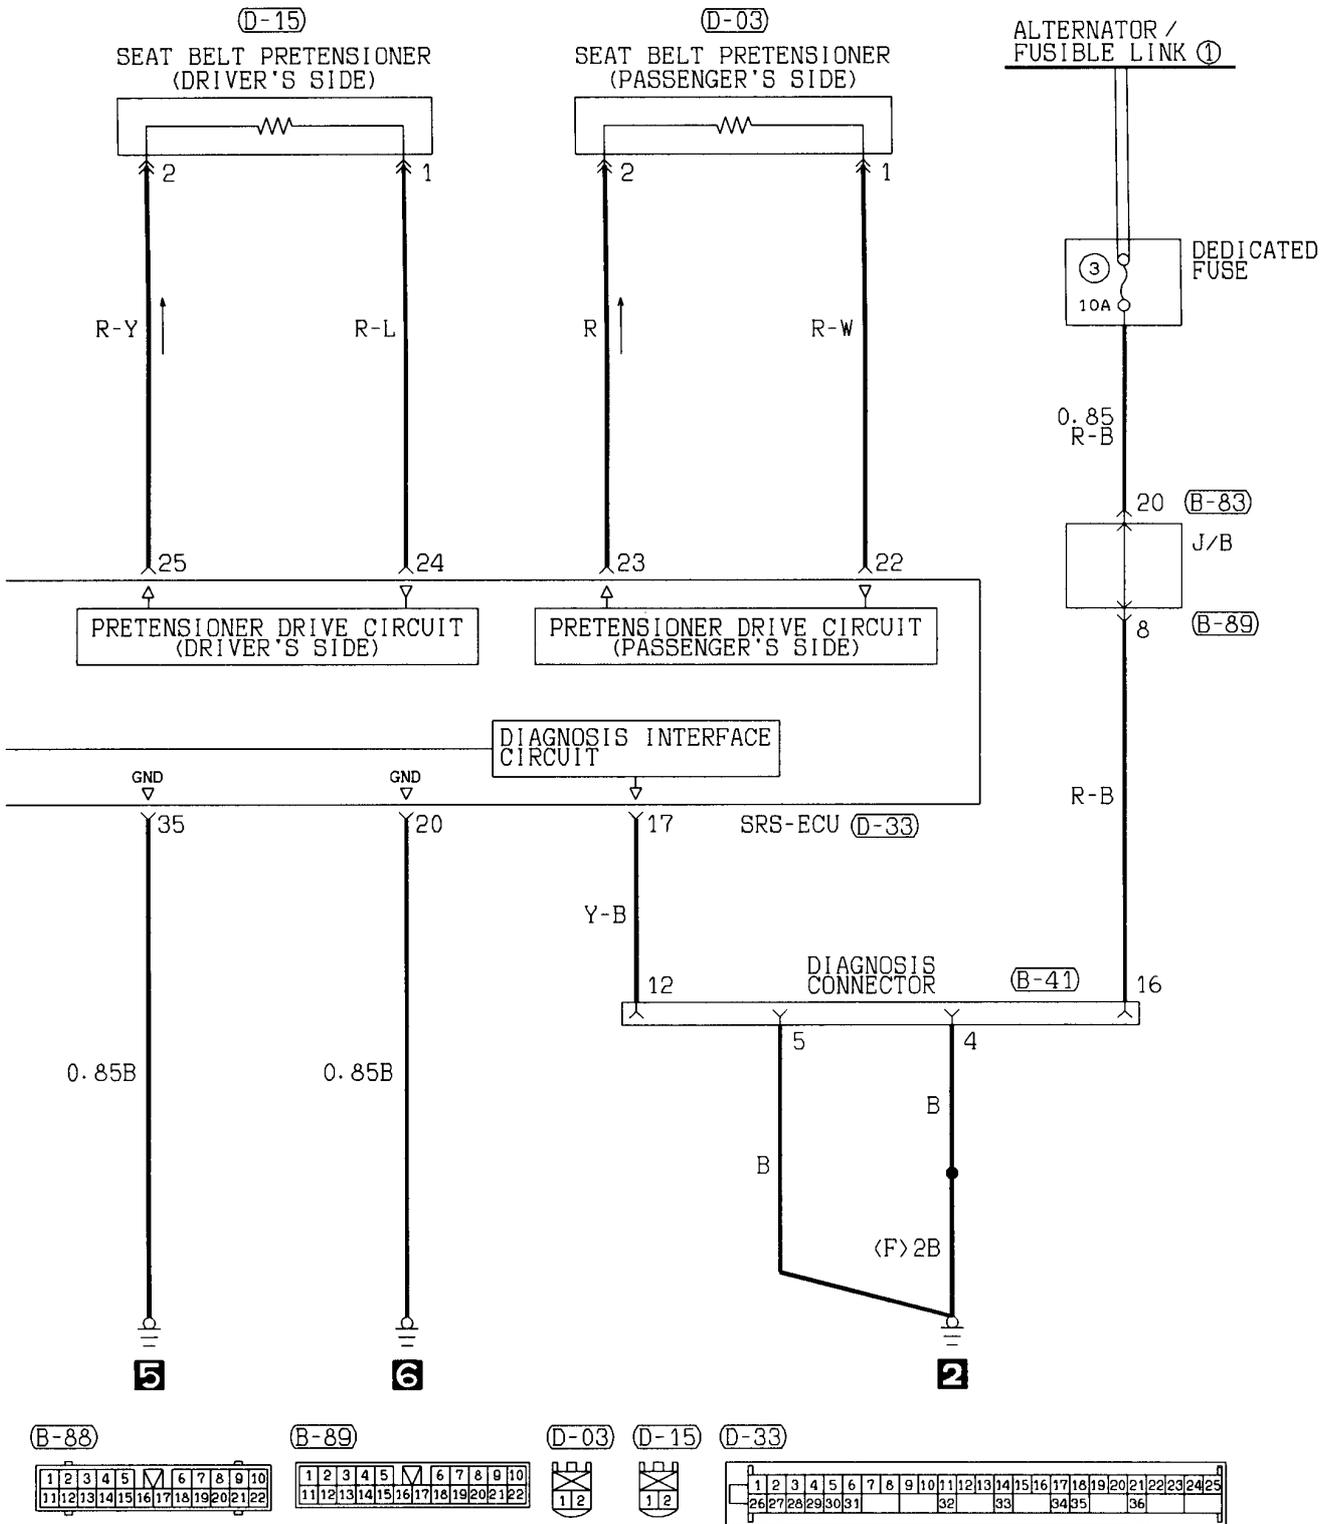


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Vehicles with side air bag <Up to 1997 models>

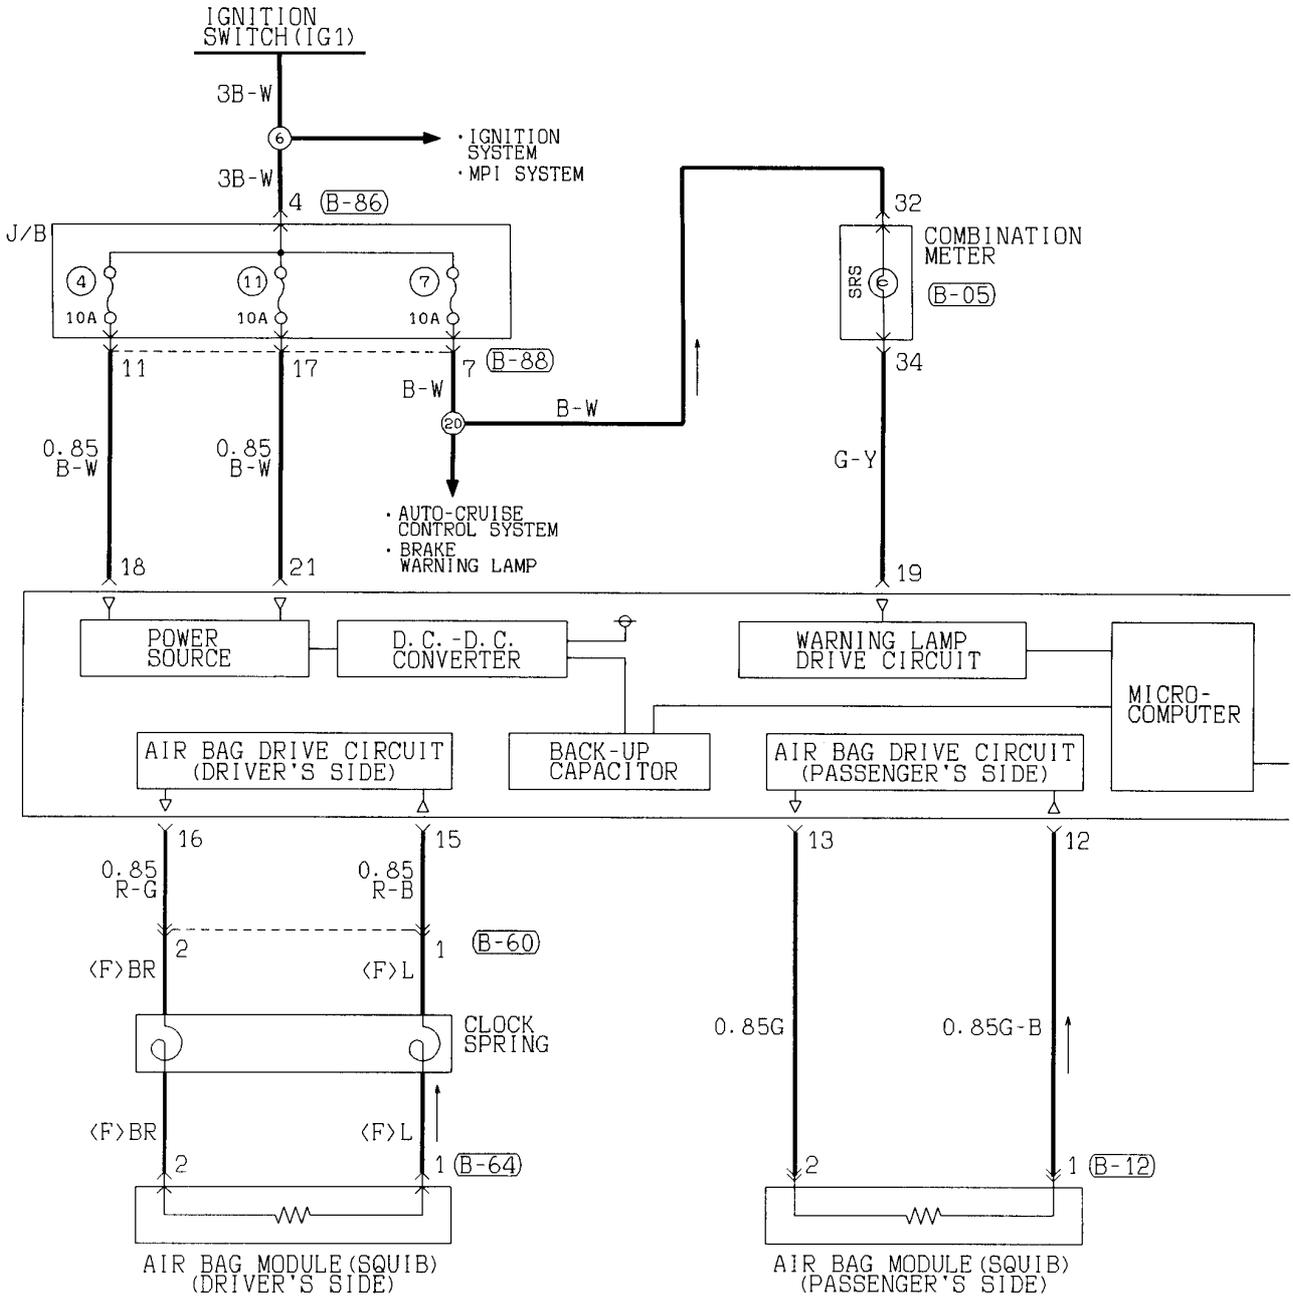


(B-05)

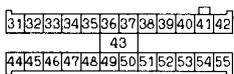

(B-12)



(B-41) FRONT SIDE

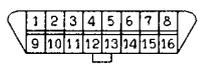


(B-60)




(B-64)




(B-83)

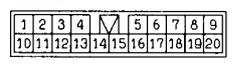


(B-86)

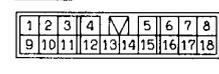


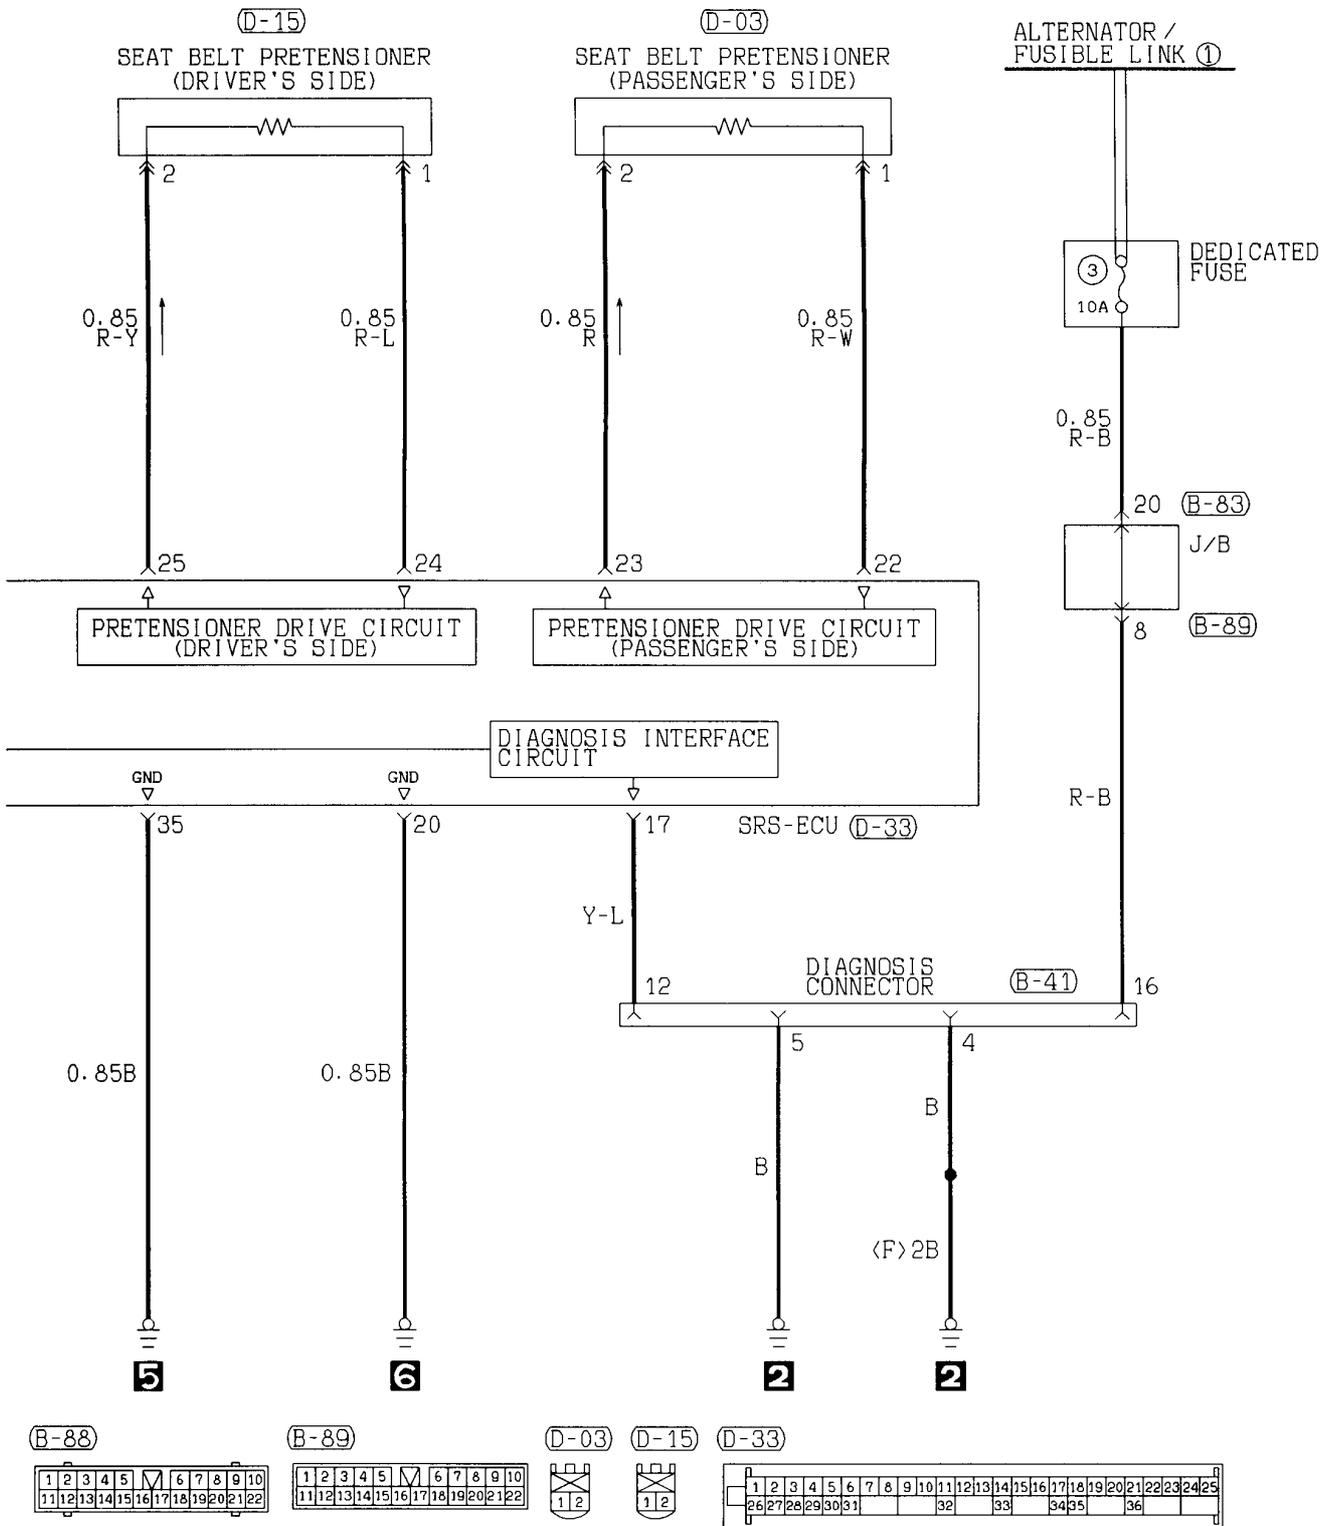

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) <Vehicles with side air bag (Up to 1997 models)> (CONTINUED)





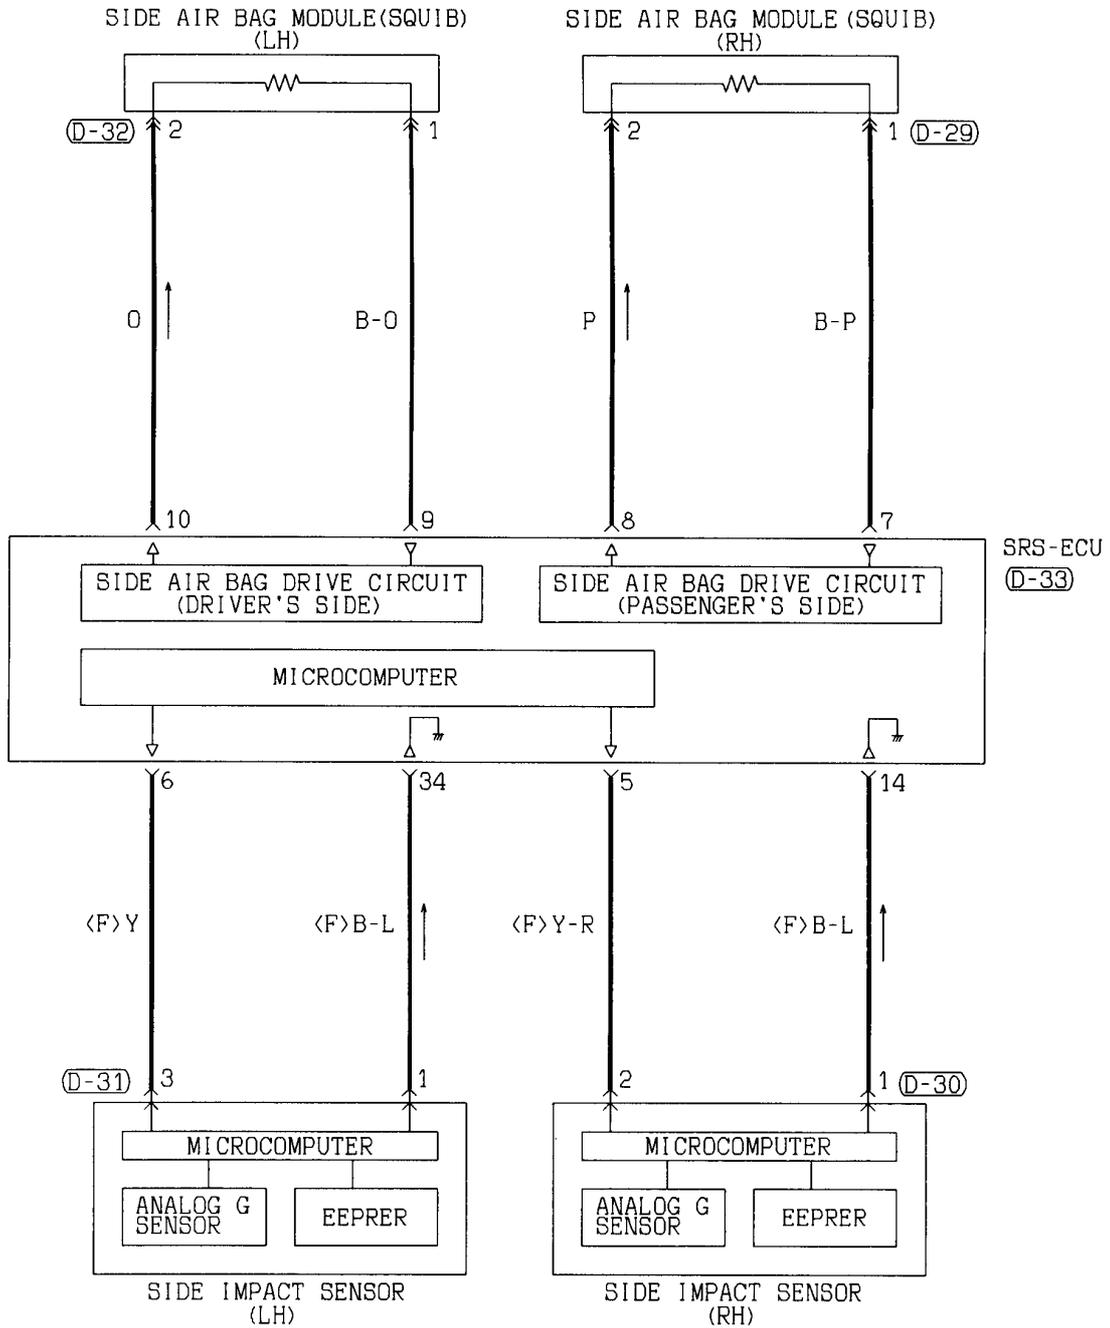


- (D-29)
- (D-30)
- (D-31)
- (D-32)
- (D-33)

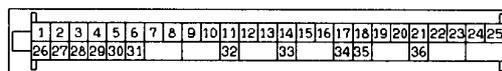



SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Vehicles with side air bag <From 1998 models>

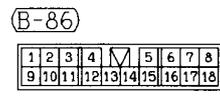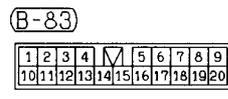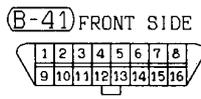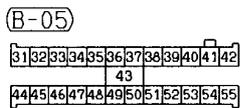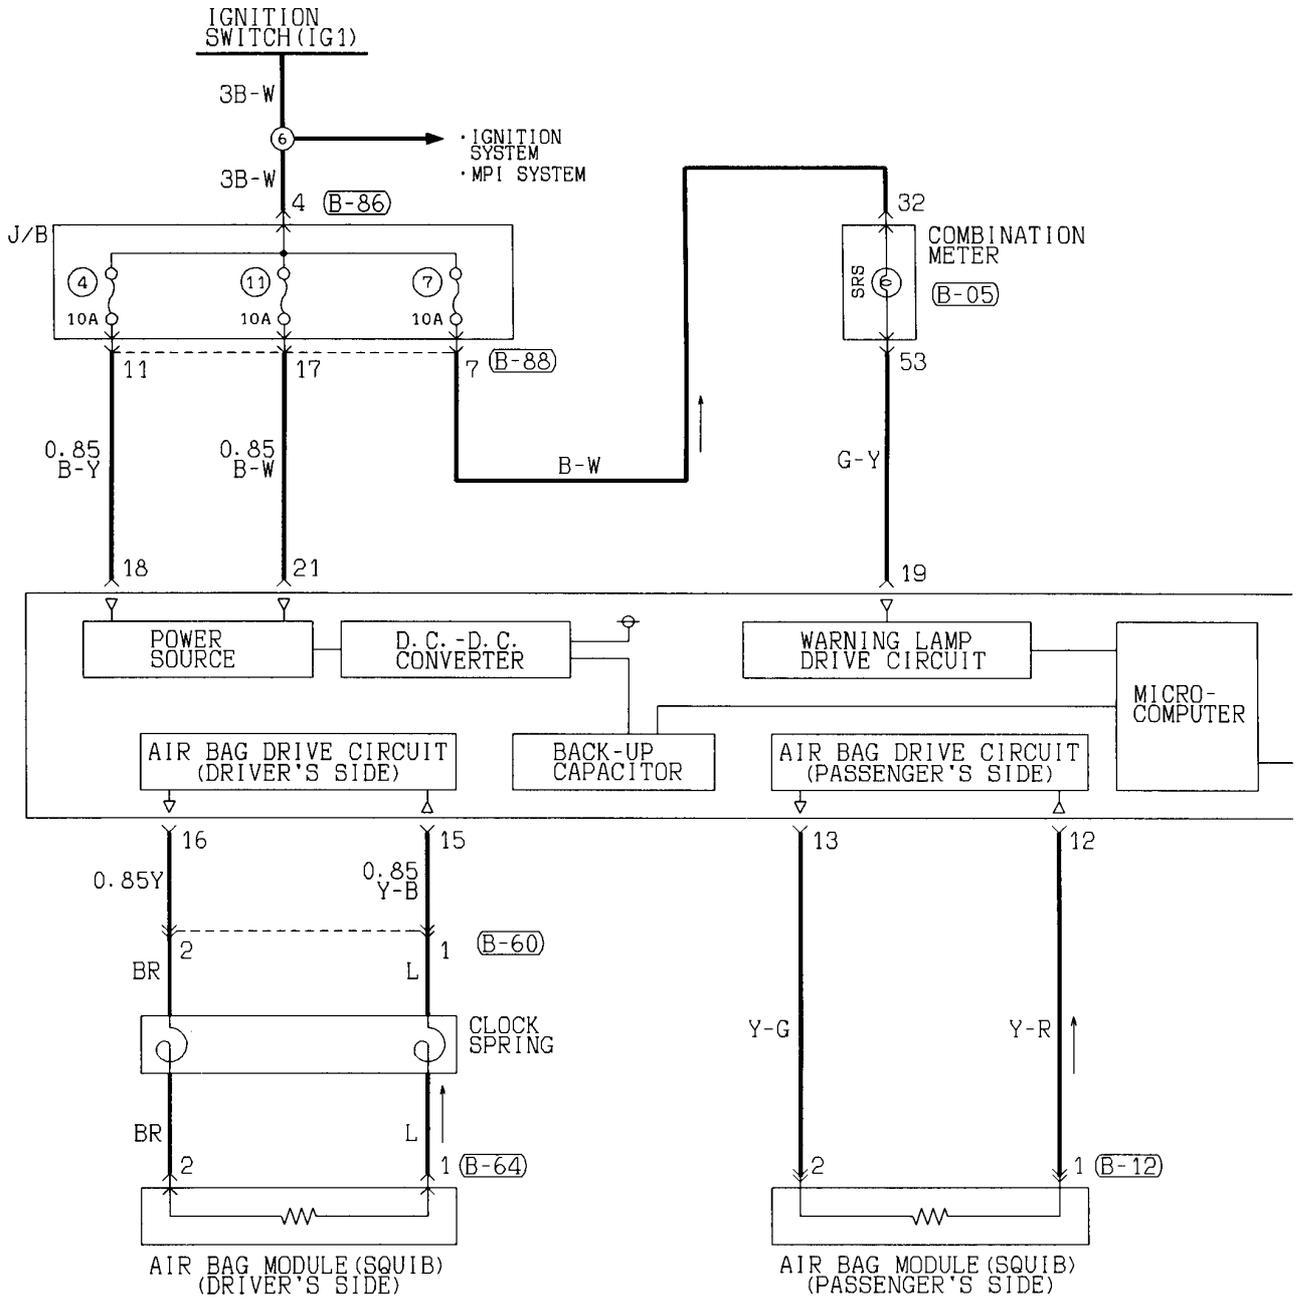


SUPPLEMENTAL RESTRAINT SYSTEM (SRS) <Vehicles with side air bag (From 1998 models> (CONTINUED)

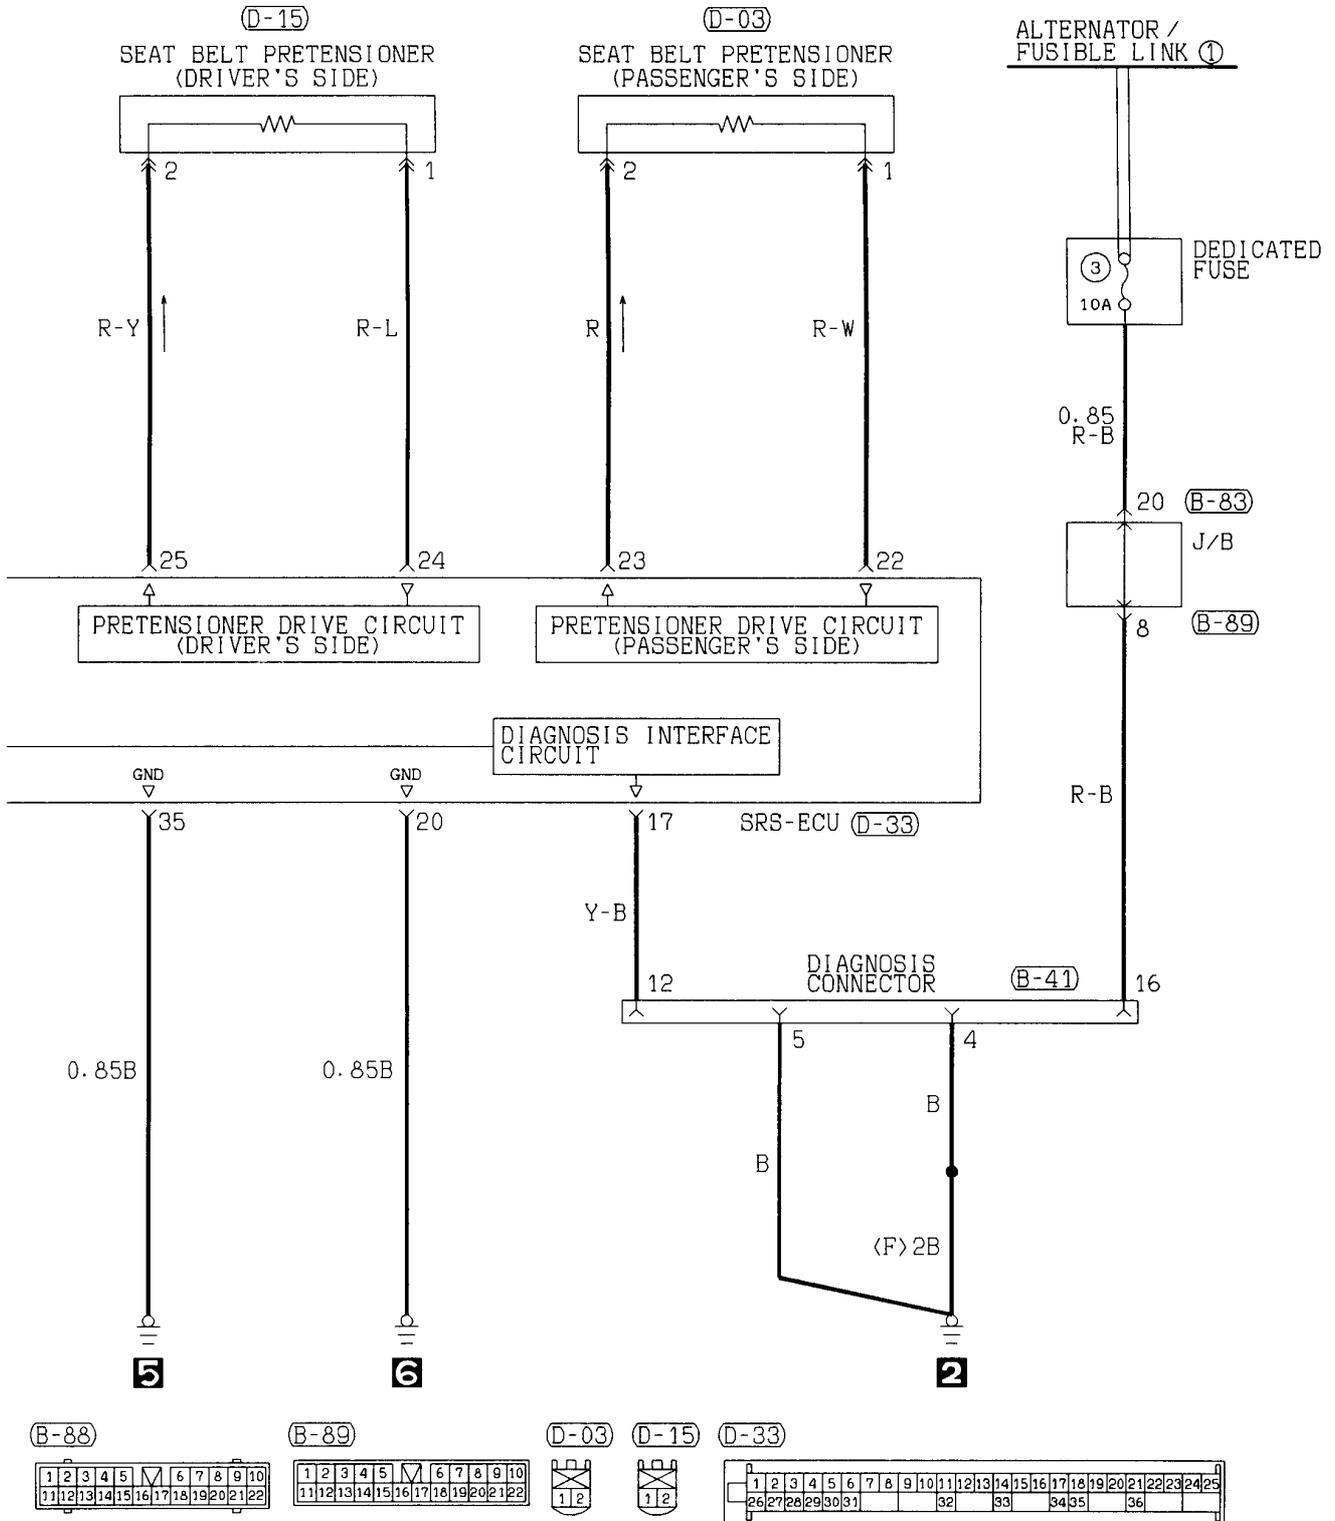

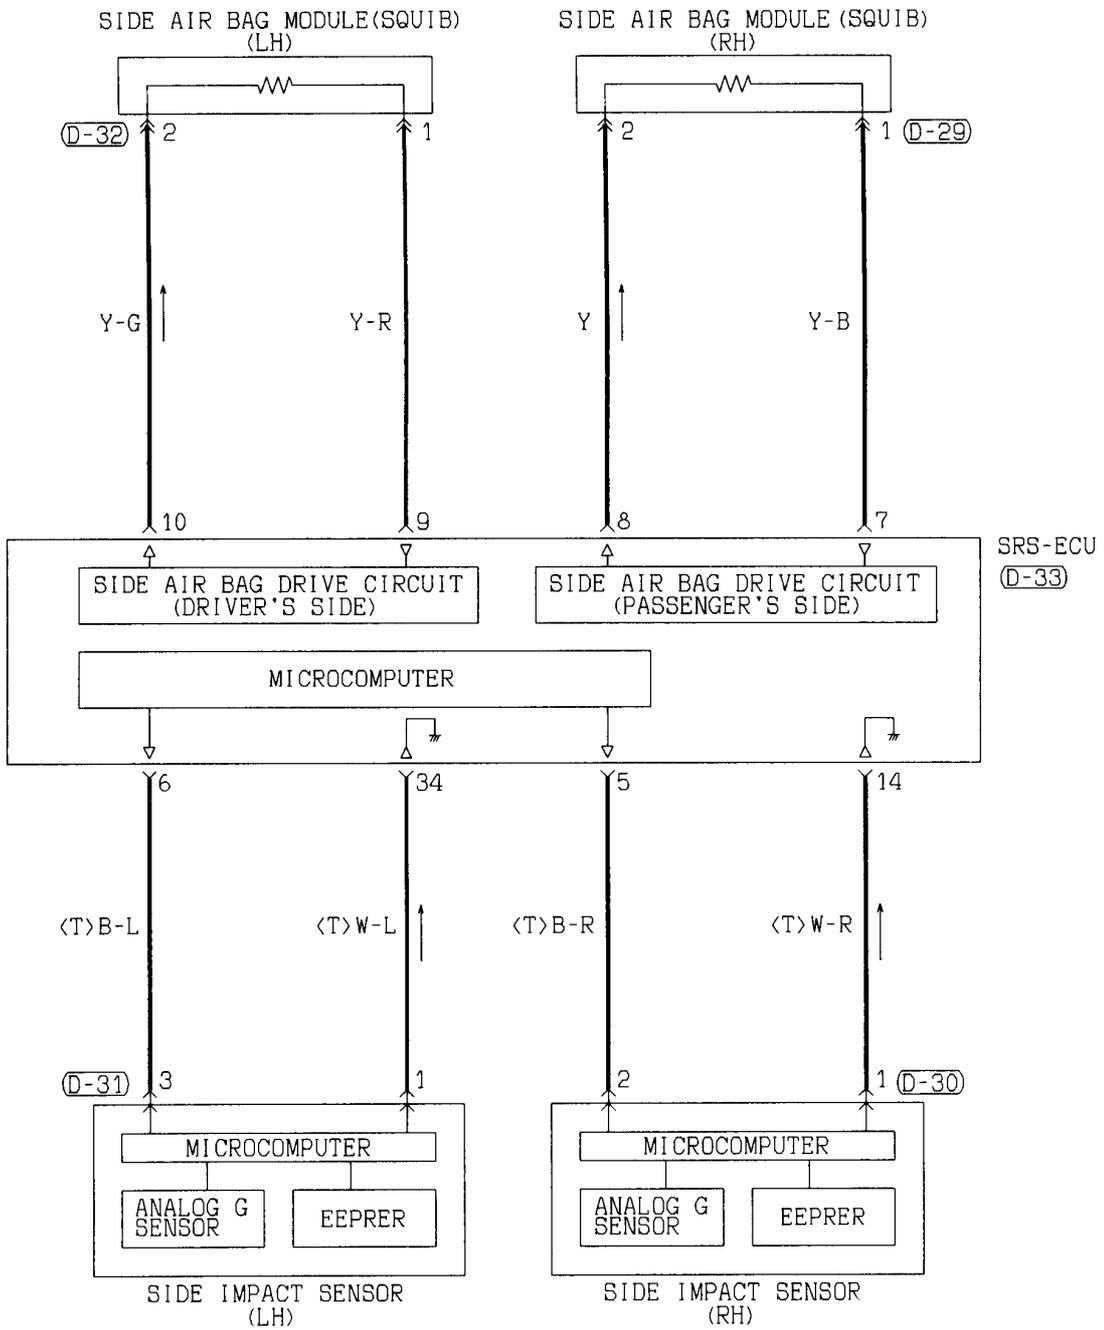


(D-29) (D-30) (D-31) (D-32) (D-33)

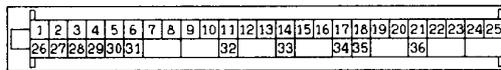

IMMOBILIZER SYSTEM

Petrol-powered vehicles

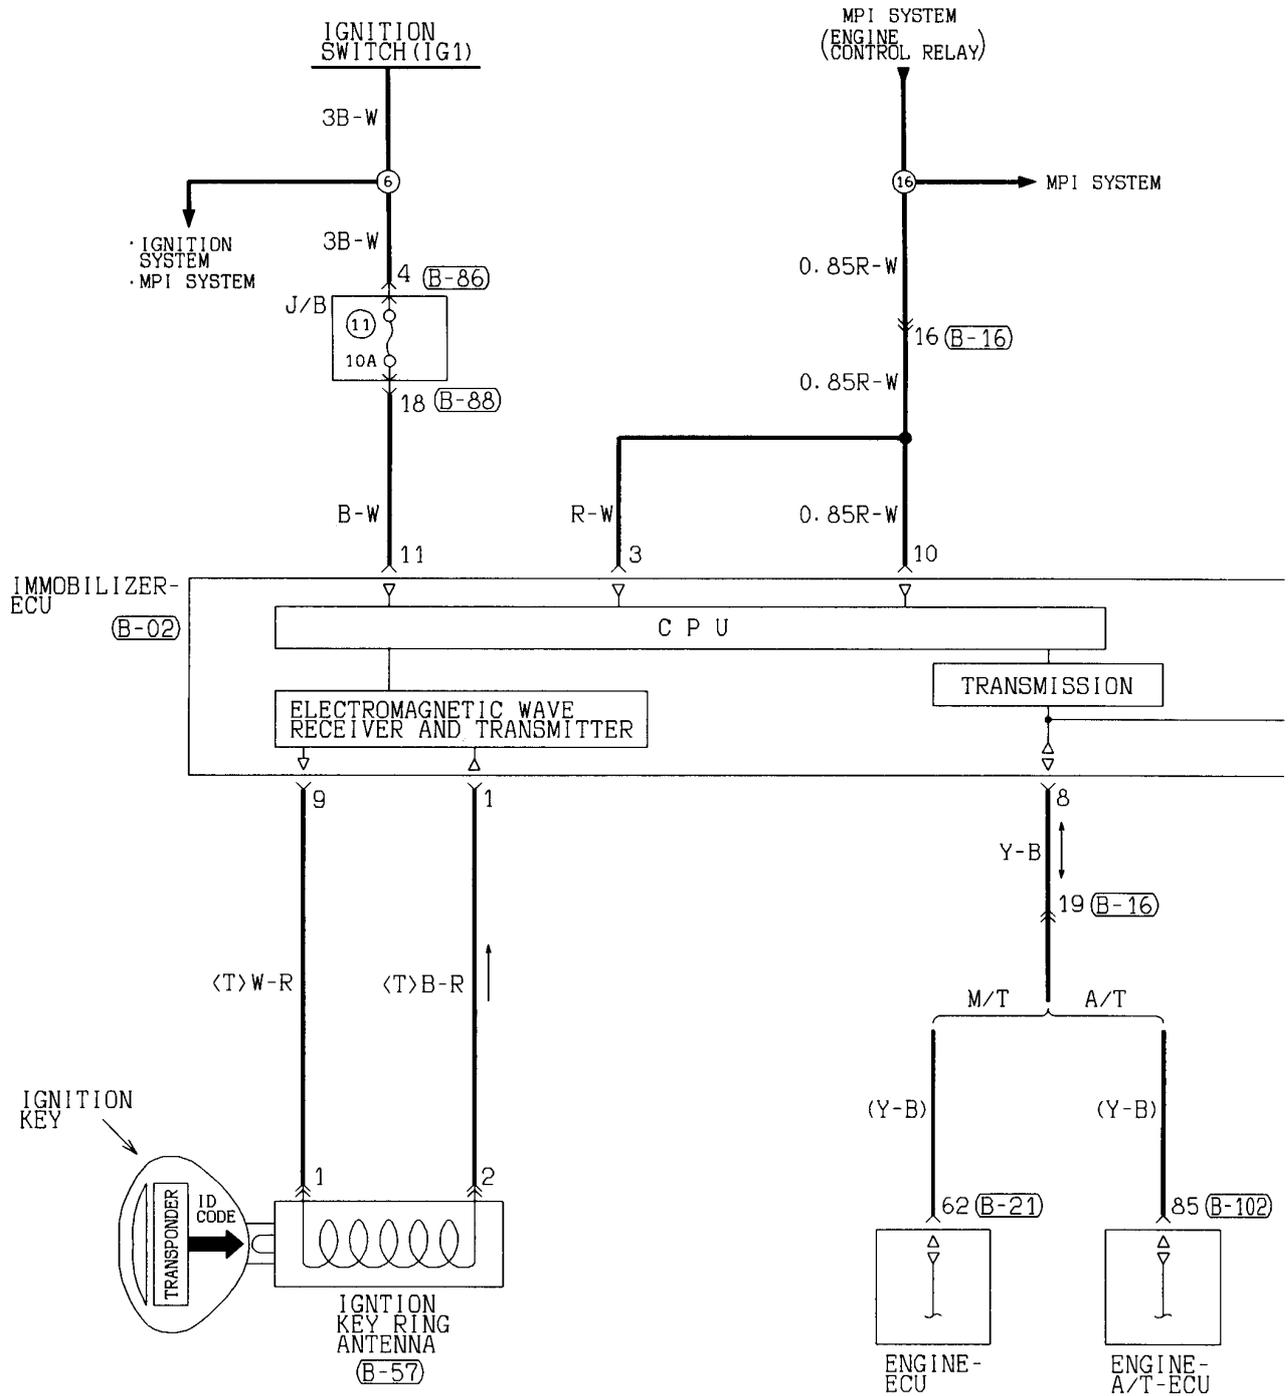

(B-02)

(B-16)

(B-21)

(B-41) FRONT SIDE

(B-57)

(B-76X)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

51	52	53	54	55	56
57	58	59	60	61	62

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


1	2
---	---

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

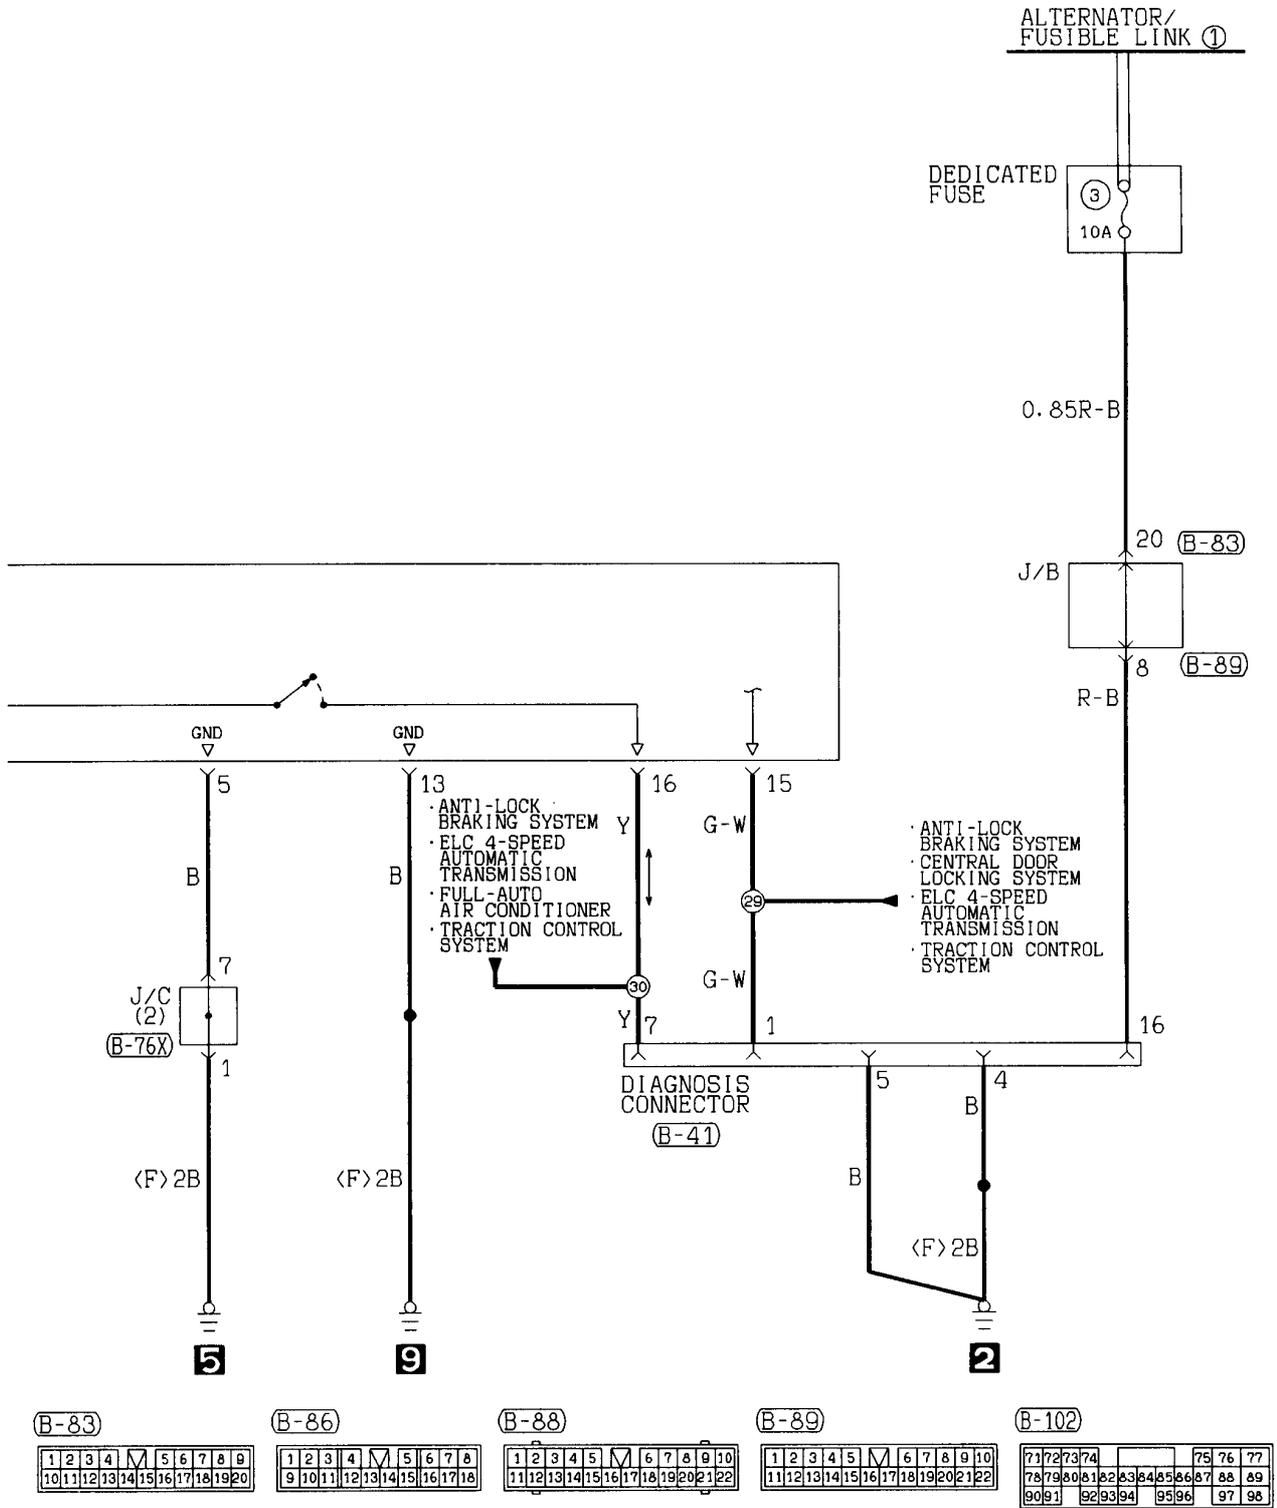

IMMOBILIZER SYSTEM

Diesel-powered vehicles

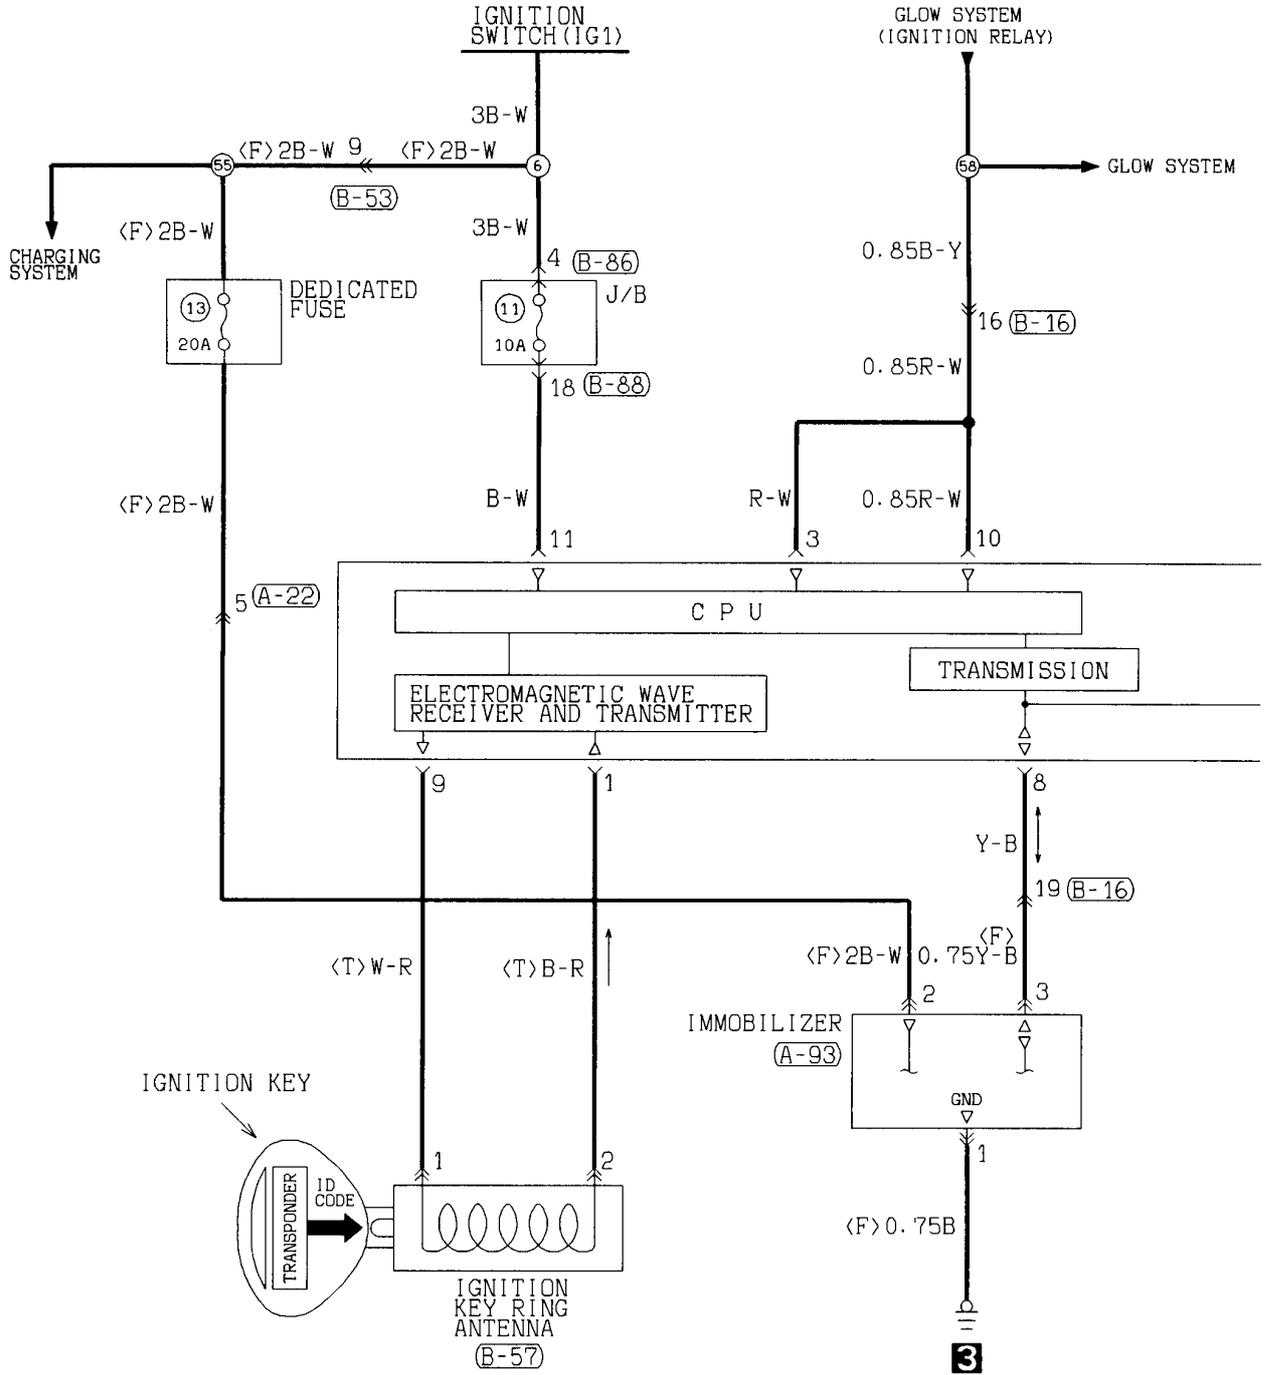

(A-22)

1	2	3
4	5	6

(A-93)

1	2	3
4	5	6

(B-02)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-16)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(B-41) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(B-53)

1	2	3	4		
5	6	7	8	9	10

(B-57)

1	2
---	---

(B-76X)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

