

# MITSUBISHI COLT/LANCER

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

Use the following manuals in combination with this manual as required.

#### TECHNICAL INFORMATION MANUAL

PYME9116

PYME9116-1

#### WORKSHOP MANUAL

ENGINE GROUP

PWEE □□□□

(Looseleaf edition)

ELECTRICAL WIRING

PHME9107

BODY REPAIR MANUAL

PBME9107

PARTS CATALOGUE

B6068004A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

General .....	00
Engine .....	11
Lubrication .....	12
Fuel .....	13
Cooling .....	14
Intake and Exhaust .....	15
Engine Electrical .....	16
Emission Control .....	17
Clutch .....	21
Manual Transmission .....	22
Automatic Transmission .....	23
Propeller Shaft .....	25
Front Axle .....	26
Rear Axle .....	27
Wheel and Tyre .....	31
Power Plant Mount .....	32
Front Suspension .....	33A
Rear Suspension .....	34
Service Brakes .....	35
Parking Brakes .....	36
Steering .....	37A
Body .....	42
Exterior .....	51
Interior .....	52A
Supplemental Restraint System (SRS) .....	52B
Chassis Electrical .....	54
Heater, Air Conditioner and Ventilation .....	55

 MITSUBISHI MOTORS CORPORATION

# WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

## WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver (from rendering the SRS Inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C (200°F) in baking or in drying after painting, remove the SRS components (air bag module, SRS diagnosis unit, front impact sensors) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.

## NOTE

Section titles with the asterisks (\*) in the table of contents in each group indicate operations requiring warnings.