




Workshop Manual

electrical wiring

SUPPLEMENT

COLT/LANCER '95

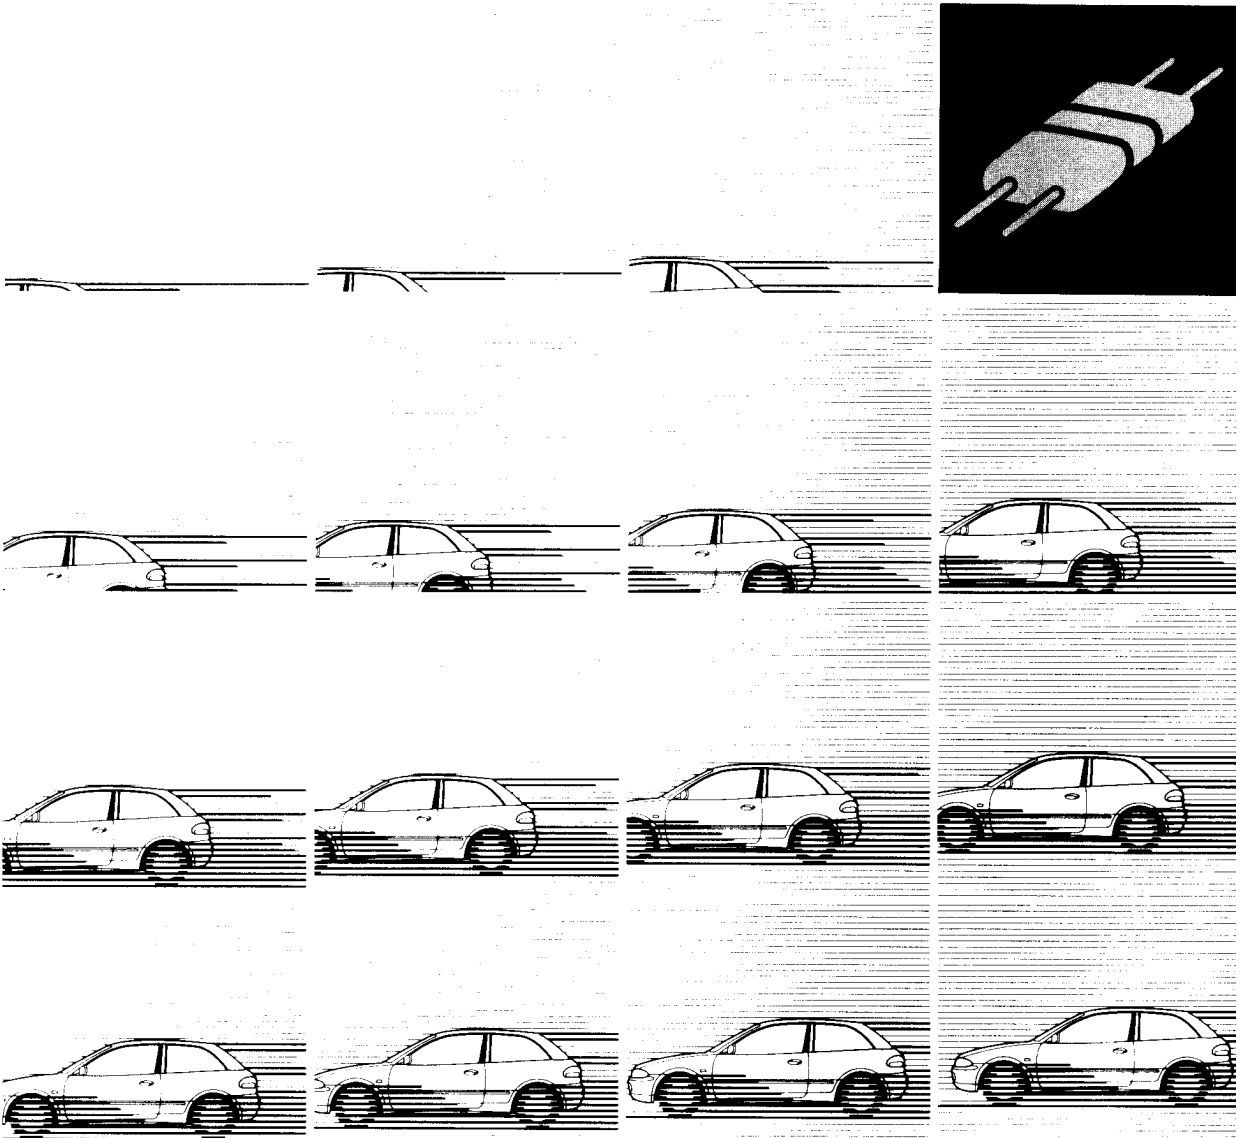

Pub. No. PHME9107-E
Pub. No. PHME9339-1

MITSUBISHI COLT/ LANCER

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring in the Mitsubishi COLT/LANCER edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams. It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL	PYME9116 PYME9116-1
WORKSHOP MANUAL CHASSIS GROUP	PWME9117 (Looseleaf edition) PWME9123 PWME9123-1 PWME9123-2 PWME9123-3 PWME9123-4
ENGINE GROUP	PWEE□□□□ (Looseleaf edition)
ELECTRICAL WIRING	PHME9107-D PHME9339
BODY REPAIR MANUAL	PBME9107
PARTS CATALOGUE	B6068005A□ B8068005A□

All information, illustrations and product descriptions contained in this manual are correct as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

OUTLINE OF CHANGES	■
HOW TO READ THE WIRING DIAGRAMS	1
WIRING HARNESS CONFIGURATION DIAGRAMS	2
SINGLE PART INSTALLATION POSITION	3
CIRCUIT DIAGRAM	4



HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX which lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page numbers can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.

INDICATION OF DESTINATION

Europe, General Export, Australia and New Zealand used for convenience to indicate destination.

NOTE

1. "General Export" means territories other than Europe, Australia, New Zealand, the U.S.A. and Canada.
2. "GCC" indicates a classification within the models for General Export category: models for countries that are members of the (Persian) Gulf Cooperation Council of nations.
3. In some instances, vehicles with other specifications may be shipped to some countries.