

HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS 1-2

MODELS

Model code		Engine model	Transmission model	Fuel supply system
CB4W	LNDEQL6	4G92 (1, 597 ml)	F5M22 (2WD-5M/T)	MPI
	LNJEQL6/R6		F4A22 (2WD-4A/T)	
	LRJEQL6/R6		W5M31 (4WD-5M/T)	
CD4W	LNDEQL6			
	LNJEQL6/R6			