
WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS

DASH PANEL **B**

L.H. drive vehicles	2-2
R.H. drive vehicles	2-4

INSTRUMENT PANEL **C**

L.H. drive vehicles	2-6
R.H. drive vehicles	2-7

INTERIOR **D**


L.H. drive vehicles	2-8
R.H. drive vehicles	2-9

DOOR **E**


L.H. drive vehicles	2-10
R.H. drive vehicles	2-11

DASH PANEL

L.H. drive vehicles

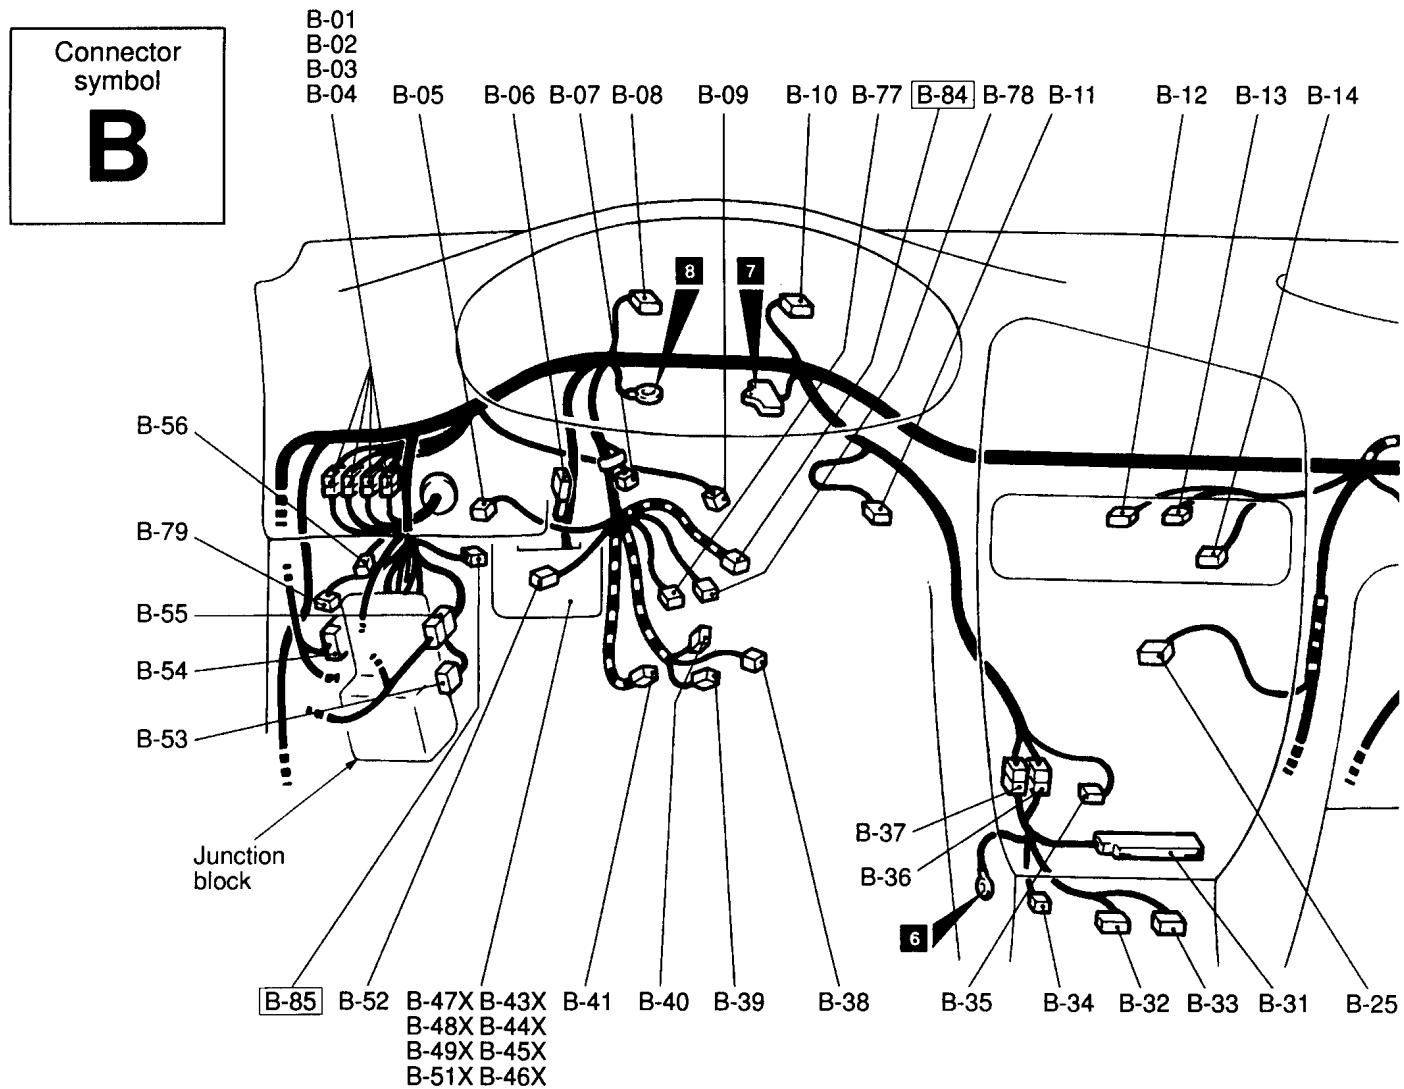


- | | | | |
|------|--|------|--|
| B-01 | Body wiring harness and front wiring harness combination | B-22 | |
| thru | | B-23 | Engine control unit |
| B-04 | | B-24 | |
| B-05 | Remote controlled mirror switch | B-25 | Radio and tape player |
| B-06 | Diode (for ABS circuit) | B-26 | |
| B-07 | Diode (for rear fog lamp circuit) | thru | - |
| B-08 | Combination meter | B-30 | |
| B-09 | Stop lamp switch | B-31 | ABS control unit <4WD> |
| B-10 | Combination meter | B-32 | ABS control unit <2WD> |
| B-11 | Rear wiper and washer switch | B-33 | |
| B-12 | A/C switch | B-34 | Diagnosis code erasure connector <ABS - 2WD> |
| B-13 | Blower switch | B-35 | Lighting monitor buzzer |
| B-14 | Clock | B-36 | Body wiring harness and ABS wiring harness combination |
| B-15 | Automatic compressor control unit | B-37 | |
| B-16 | Resistor | B-38 | |
| B-17 | Blower motor | B-39 | Column switch |
| B-18 | - | B-40 | |
| B-19 | - | B-41 | Ignition switch |
| B-20 | Body wiring harness and control wiring harness combination | B-42 | - |
| B-21 | | | |

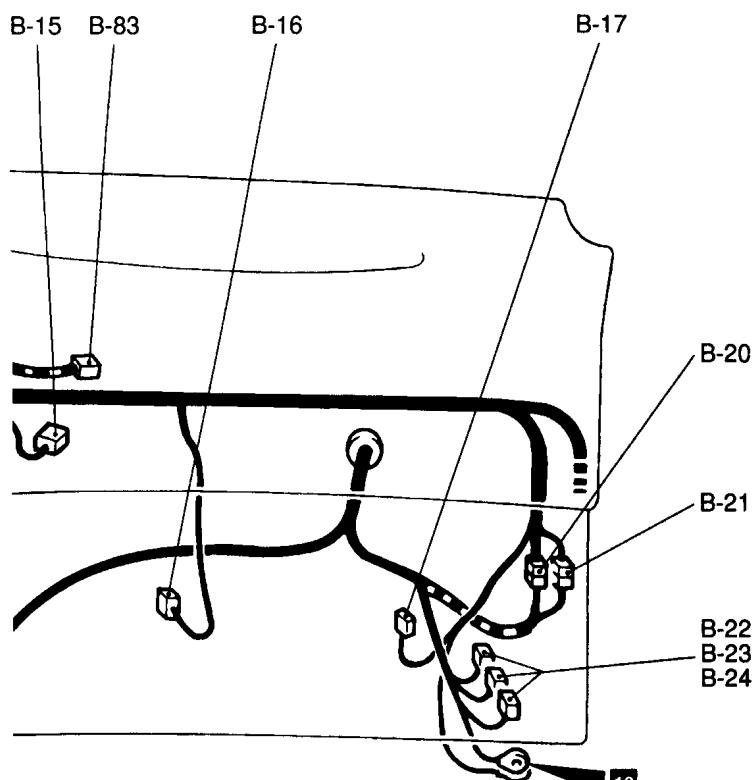


36S0376

**Junction block
(Front side)**

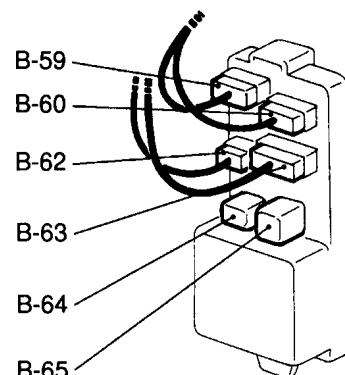

36S0076

(Rear side)

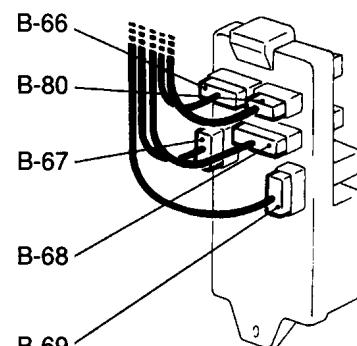

36S0244

- | | | | |
|--|-------------------------------------|---------------------------|--|
| B-43X ABS power relay | Refer to
CENTRALIZED
JUNCTION | B-63 | Instrument panel wiring harness and junction block combination |
| B-44X Power window relay | | B-64 | Blower motor relay |
| B-45X Defogger relay | | B-65 | Turn-signal and hazard flasher unit |
| B-46X Door lock control unit | | B-66 | Body wiring harness and junction block combination |
| B-47X Jumper connector | | B-67 | - |
| B-48X Diode (for headlamp circuit) | | B-68 | Clock spring |
| B-49X Front fog lamp relay | | B-69 | Diagnosis connector |
| B-50X - | | B-70 | Body wiring harness and junction block combination |
| B-51X Rear fog lamp relay | | B-71 | - |
| B-52 Headlamp leveling switch | | B-72 | Air bag module (squib) (Passenger's side) |
| B-53 Diagnosis connector | B-73 | Ignition key ring antenna | |
| B-54 Body wiring harness and roof wiring harness combination <Vehicles with sunroof> | B-74 | Immobilizer-ECU | |
| B-55 Body wiring harness and instrument panel wiring harness combination | | | |
| B-56 Diode (for ABS circuit) <2WD> | | | |
| B-57 - | | | |
| B-58 - | | | |
| B-59 } Front wiring harness and junction block combination | | | |
| B-60 } Roof wiring harness and junction block combination | | | |
| B-61 - | | | |
| B-62 - | | | |


- | | |
|----------------|--|
| B-63 | Instrument panel wiring harness and junction block combination |
| B-64 | Blower motor relay |
| B-65 | Turn-signal and hazard flasher unit |
| B-66 thru B-69 | Body wiring harness and junction block combination |
| B-70 thru B-76 | - |
| B-77 thru B-78 | Clock spring |
| B-79 | Diagnosis connector |
| B-80 | Body wiring harness and junction block combination |
| B-81 | - |
| B-82 | - |
| B-83 | Air bag module (squib) (Passenger's side) |
| B-84 | Ignition key ring antenna |
| B-85 | Immobilizer-ECU |

Remark


Connector numbers enclosed by a frame are newly added connectors.

DASH PANEL


R.H. drive vehicles

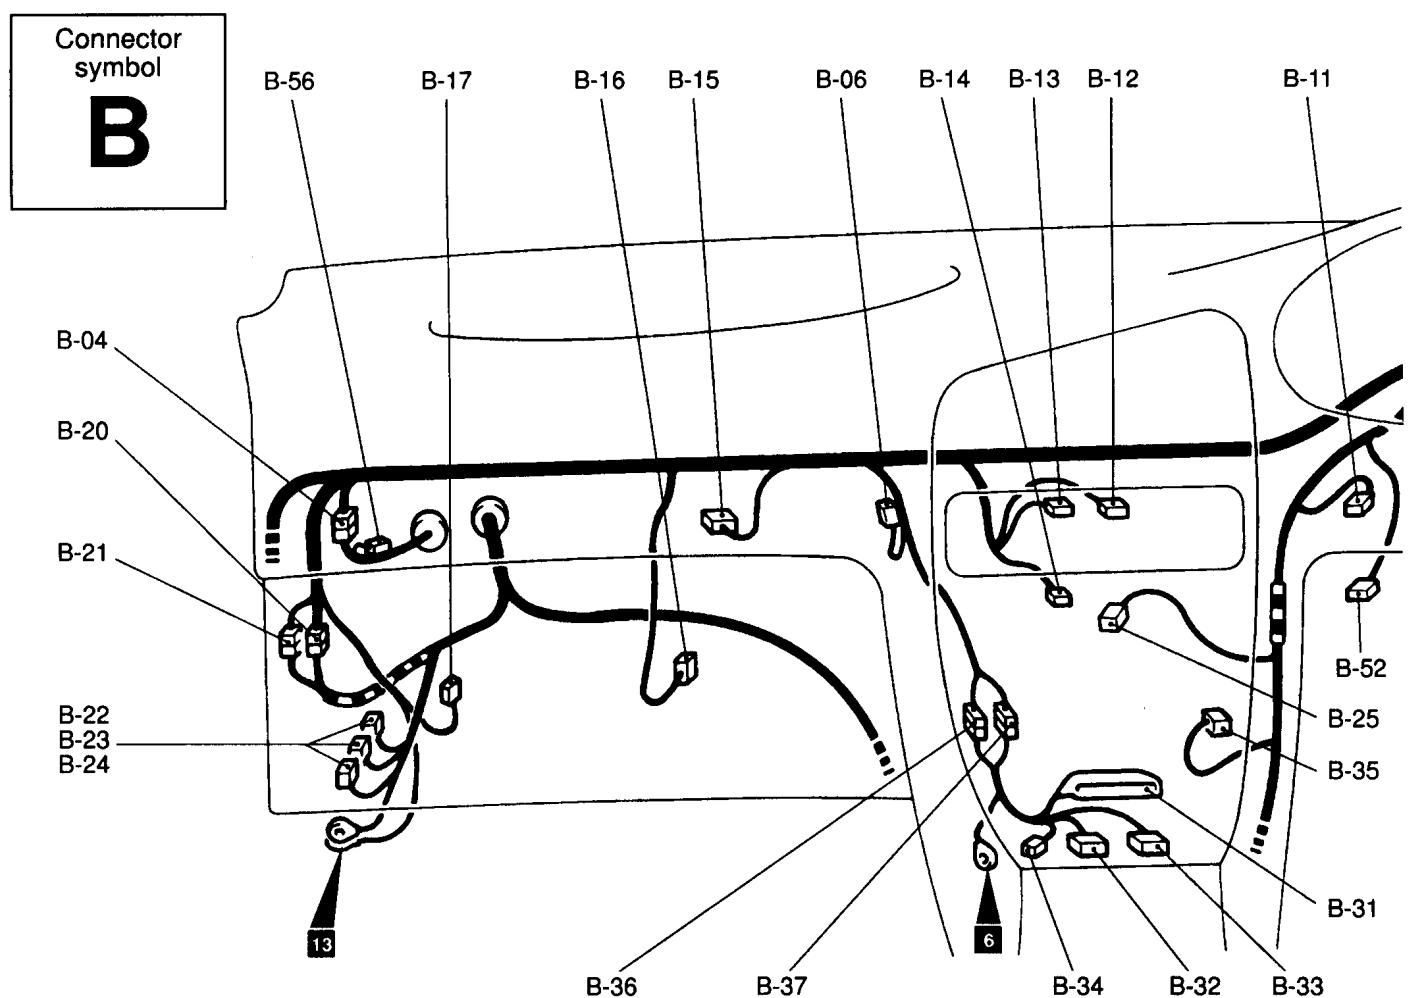

- B-01 } Body wiring harness and front wiring harness
- B-02 } combination
- B-03 -
- B-04 Body wiring harness and front wiring harness combination <ABS>
- B-05 Remote controlled mirror switch
- B-06 Diode (for ABS circuit)
- B-07 Diode (for rear fog lamp circuit)
- B-08 Combination meter
- B-09 Stop lamp switch
- B-10 Combination meter
- B-11 Rear wiper and washer switch
- B-12 A/C switch
- B-13 Blower switch
- B-14 Clock
- B-15 Automatic compressor control unit
- B-16 Resistor
- B-17 Blower motor
- B-18 -
- B-19 -
- B-20 } Body wiring harness and control wiring harness
- B-21 } combination
- B-22 } Engine control unit
- B-23 }
- B-24 }
- B-25 Radio and tape player
- B-26 } -
- B-27 }
- B-28 }
- B-29 }
- B-30 }
- B-31 ABS control unit <4WD>
- B-32 } ABS control unit <2WD>
- B-33 }
- B-34 Diagnosis code erasure connector <ABS - 2WD>
- B-35 Lighting monitor buzzer
- B-36 } Body wiring harness and ABS wiring harness
- B-37 } combination
- B-38 }
- B-39 }
- B-40 }
- B-41 Ignition switch
- B-42 Diode (for headlamp circuit)

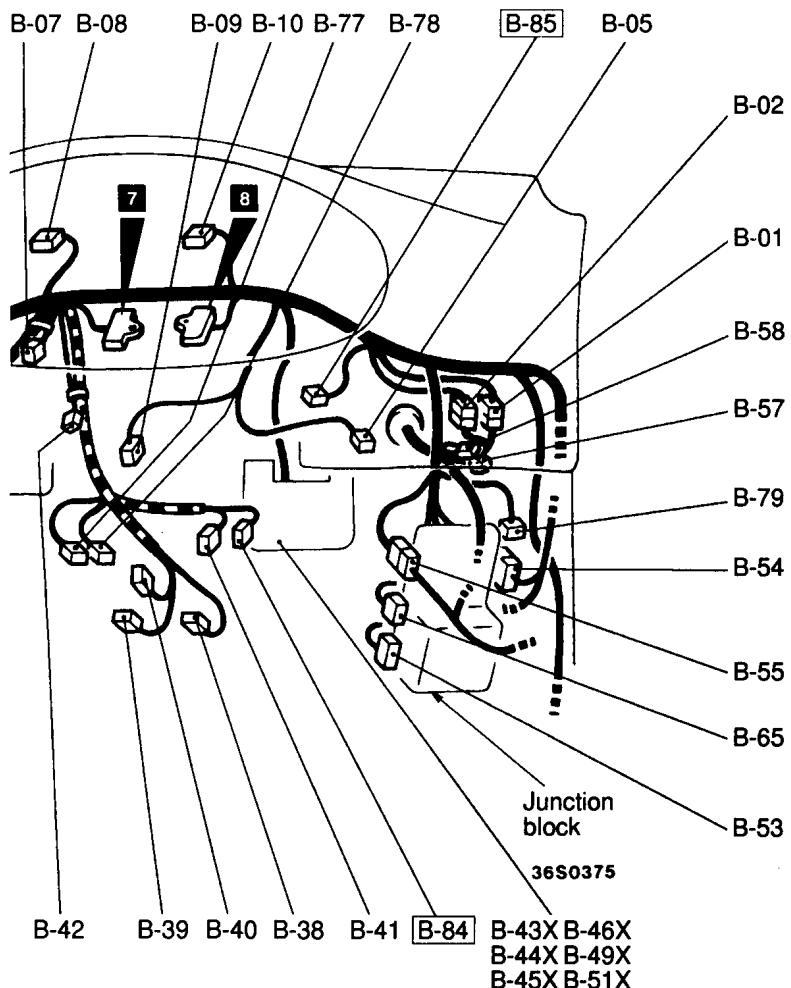


**Junction block
(Front side)**

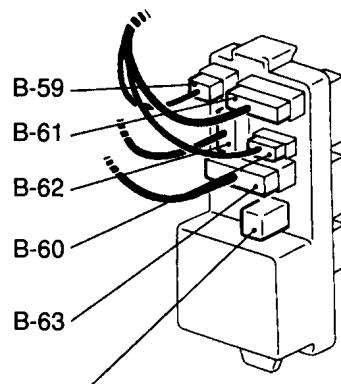

36S0074

(Rear side)

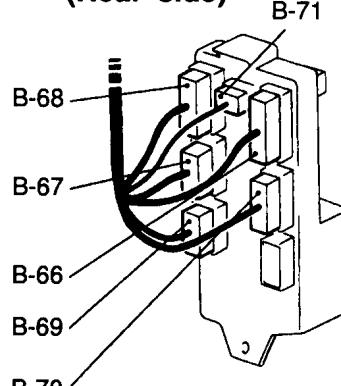

36S0075

- | | | | |
|-------------------------------|-------------------------------------|------|--|
| B-43X ABS power relay | Refer to
CENTRALIZED
JUNCTION | B-62 | Roof wiring harness and junction block combination |
| B-44X Power window relay | | B-63 | Instrument panel wiring harness and junction block combination |
| B-45X Defogger relay | | B-64 | Blower motor relay |
| B-46X Door lock control unit | | B-65 | Turn-signal and hazard flasher unit |
| B-47X – | | B-66 | Body wiring harness and junction block combination |
| B-48X – | | B-67 | |
| B-49X Front fog lamp relay | | B-68 | |
| B-50X – | | B-69 | |
| B-51X Rear fog lamp relay | | B-70 | |
| B-52 Headlamp leveling switch | | | |

- B-53 Diagnosis connector
- B-54 Body wiring harness and roof wiring harness combination <Vehicles with sunroof>
- B-55 Body wiring harness and instrument panel wiring harness combination
- B-56 Diode (for ABS circuit) <2WD>

- B-57 } Diode (for dim-dip lamp circuit)

- B-59 } Front wiring harness and junction block combination
- B-60 }
- B-61 }



- B-62 Roof wiring harness and junction block combination
- B-63 Instrument panel wiring harness and junction block combination
- B-64 Blower motor relay
- B-65 Turn-signal and hazard flasher unit
- B-66 Body wiring harness and junction block combination
- B-67
- B-68
- B-69
- B-70
- B-71
- B-72
- B-73
- B-74
- B-75
- B-76
- B-77 } Clock spring
- B-78 } Diagnosis connector
- B-79 Diagnosis connector
- B-80
- B-81
- B-82
- B-83
- B-84 Ignition key ring antenna
- B-85 Immobilizer-ECU

Remark

Connector numbers enclosed by a frame are newly added connectors.

INSTRUMENT PANEL

L.H. drive vehicles

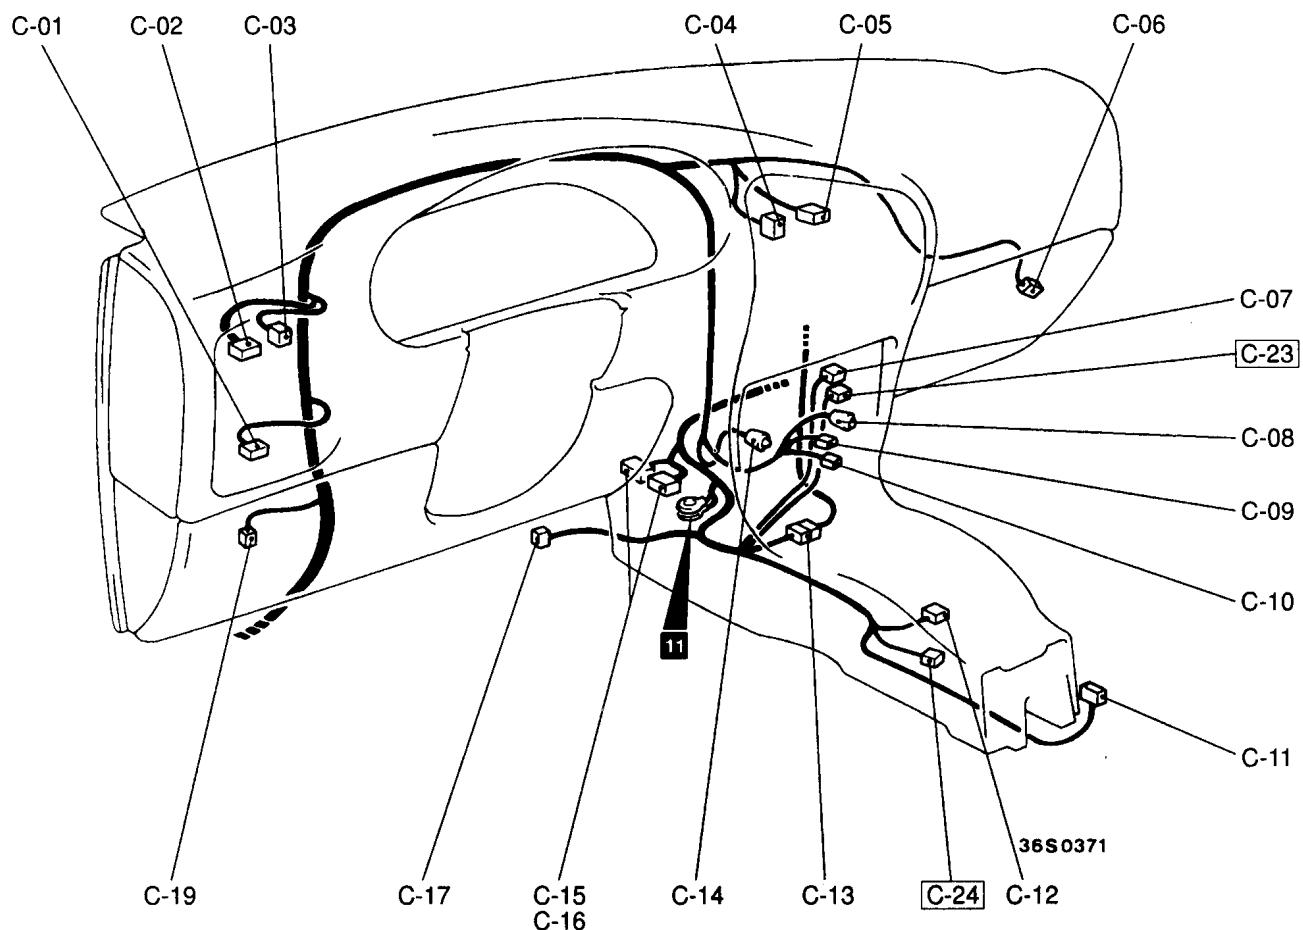
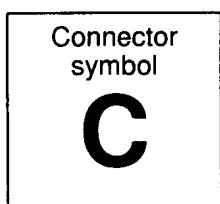


- C-01 Rheostat
- C-02 Rear fog lamp switch
- C-03 Front fog lamp switch
- C-04 Hazard switch
- C-05 Defogger switch
- C-06 Front speaker (RH)
- C-07 Engine control relay
- C-08 Cigarette lighter illumination lamp
- C-09 } Cigarette lighter
- C-10 }
- C-11 Power/Economy changeover switch
- C-12 Over drive switch
- C-13 Control wiring harness and body wiring harness combination <A/T>
- C-14 Ashtray illumination lamp

- C-15 } ELC-4A/T control unit
 - C-16 }
 - C-17 Wide open throttle switch <A/T>
 - C-18 -
 - C-19 Front speaker (LH)
 - C-20 -
 - C-21 -
 - C-22 -
 - C-23 Fuel pump relay
 - C-24 Oxygen sensor (Rear)
- Remark**
Connector numbers enclosed by a frame are newly added connectors.

INSTRUMENT PANEL

R.H. drive vehicles

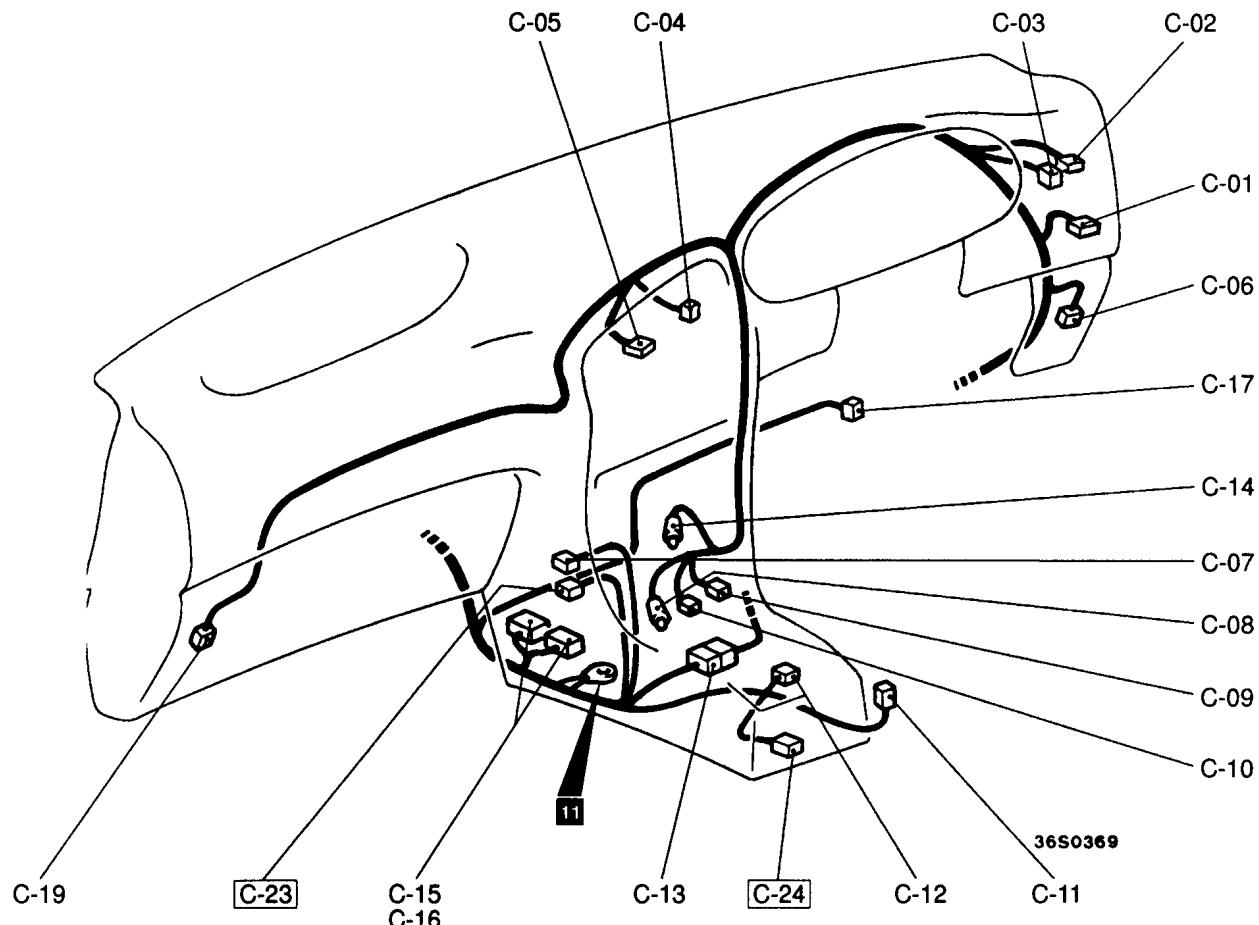
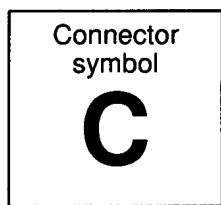


- C-01 Rheostat
- C-02 Rear fog lamp switch
- C-03 Front fog lamp switch
- C-04 Hazard switch
- C-05 Defogger switch
- C-06 Front speaker (RH)
- C-07 Engine control relay
- C-08 Cigarette lighter illumination lamp
- C-09 } Cigarette lighter
- C-10 }
- C-11 Power/Economy changeover switch
- C-12 Over drive switch
- C-13 Control wiring harness and body wiring harness combination <A/T>
- C-14 Ashtray illumination lamp

- C-15 } ELC-4A/T control unit
- C-16 }
- C-17 Wide open throttle switch <A/T>
- C-18 -
- C-19 Front speaker (LH)
- C-20 -
- C-21 -
- C-22 -
- C-23 Fuel pump relay
- C-24 Oxygen sensor (Rear)



Remark

Connector numbers enclosed by a frame are newly added connectors.

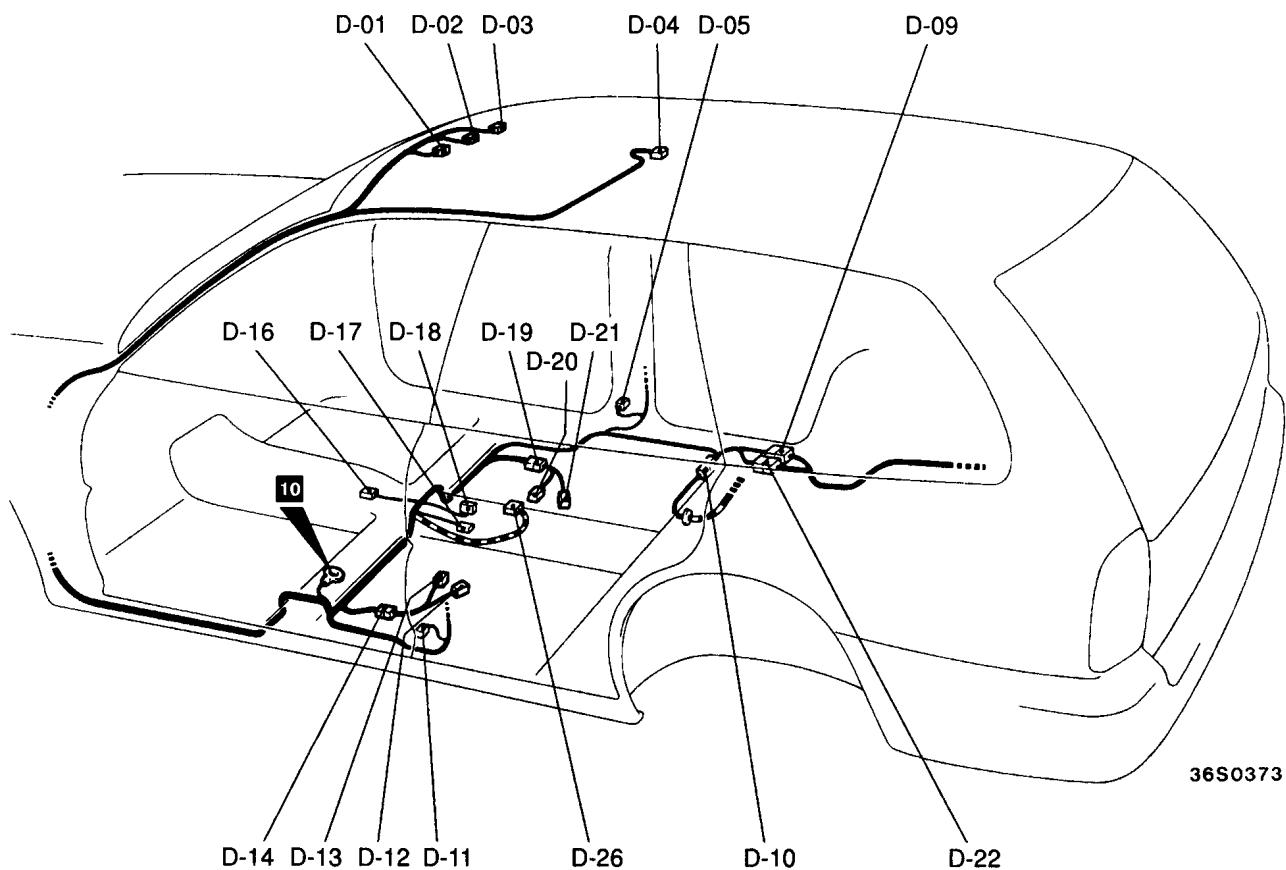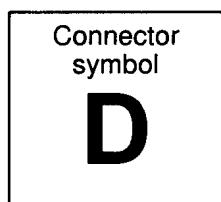INTERIOR**L.H. drive vehicles**

- D-01 Sunroof motor
- D-02 Sunroof switch and room lamp
<Vehicles with sunroof>
- D-03 Sunroof control unit
- D-04 Room lamp <Vehicles without sunroof>
- D-05 Front door switch (RH)
- D-06 –
- D-07 –
- D-08 –
- D-09 Body wiring harness and rear wiring harness combination
- D-10 Body wiring harness and fuel pump wiring harness combination <2WD> or no connection <4WD>
- D-11 Front door switch (LH)
- D-12 Seat back heater (Driver's side)
- D-13 Seat cushion heater (Driver's side)


- D-14 Body wiring harness and heated seat wiring harness combination (Driver's side)
- D-15 –
- D-16 ABS G sensor <4WD> or no connection
- D-17 Parking brake switch
- D-18 Heated seat switch
- D-19 Body wiring harness and heated seat wiring harness combination (Passenger's side)
- D-20 Seat cushion heater (Passenger's side)
- D-21 Seat back heater (Passenger's side)
- D-22 Body wiring harness and rear wiring harness combination <4WD> or no connection
- D-23 –
- D-24 –
- D-25 –
- D-26 SRS air bag control unit

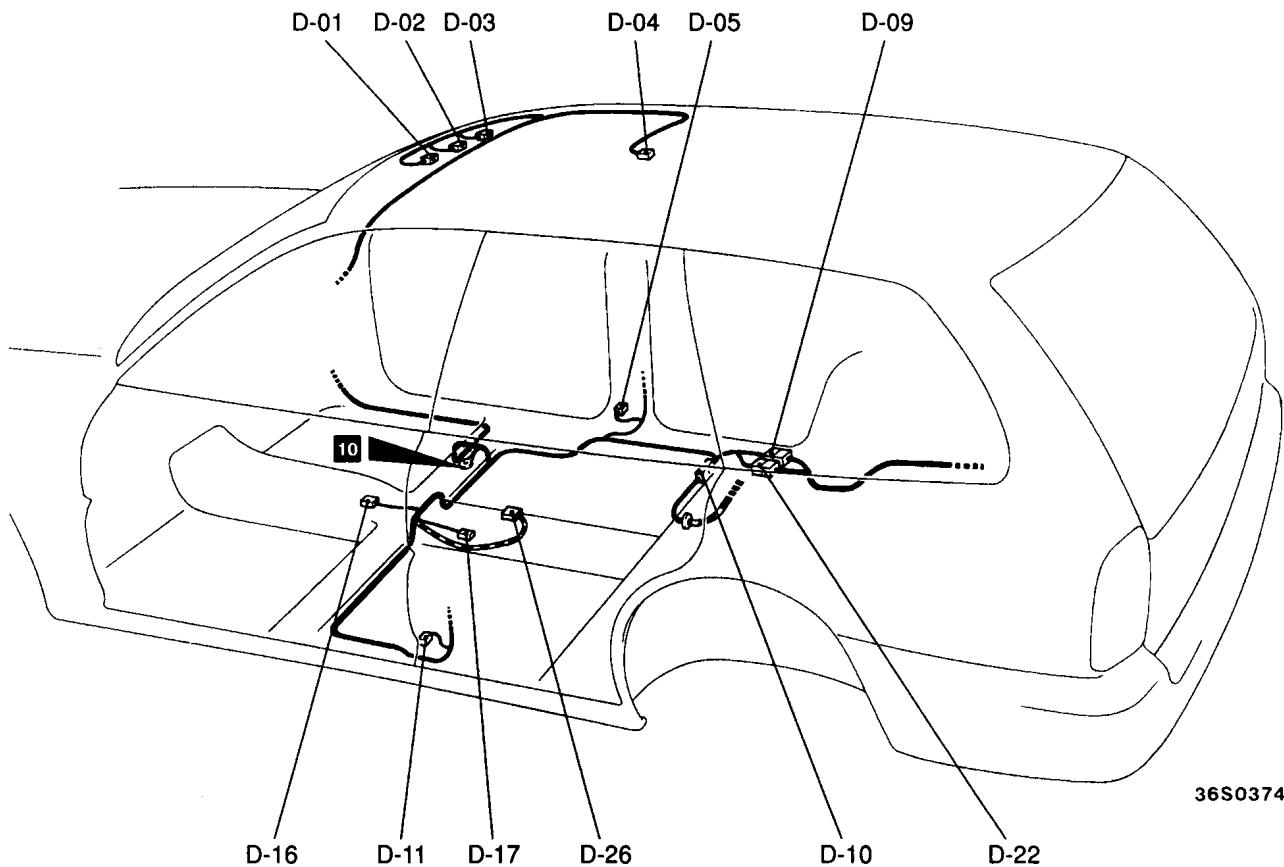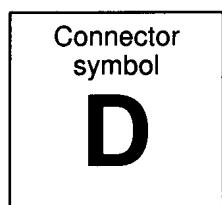INTERIOR**R.H. drive vehicles**


- | | | |
|------|--|--|
| D-01 | Sunroof motor | D-12 }
thru - |
| D-02 | Sunroof switch and room lamp
<Vehicles with sunroof> | D-15 } - |
| D-03 | Sunroof control unit | D-16 ABS G sensor <4WD> or no connection |
| D-04 | Room lamp <Vehicles without sunroof> | D-17 Parking brake switch |
| D-05 | Front door switch (RH) | D-18 }
thru - |
| D-06 | - | D-21 } - |
| D-07 | - | D-22 Body wiring harness and rear wiring harness
combination <4WD> or no connection |
| D-08 | - | D-23 - |
| D-09 | Body wiring harness and rear wiring harness
combination | D-24 - |
| D-10 | Body wiring harness and fuel pump wiring harness
combination <2WD> or no connection <4WD> | D-25 - |
| D-11 | Front door switch (LH) | D-26 SRS air bag control unit |

DOOR


L.H. drive vehicles

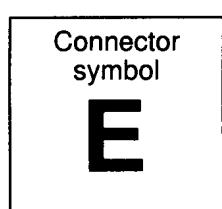

<Driver's side door>

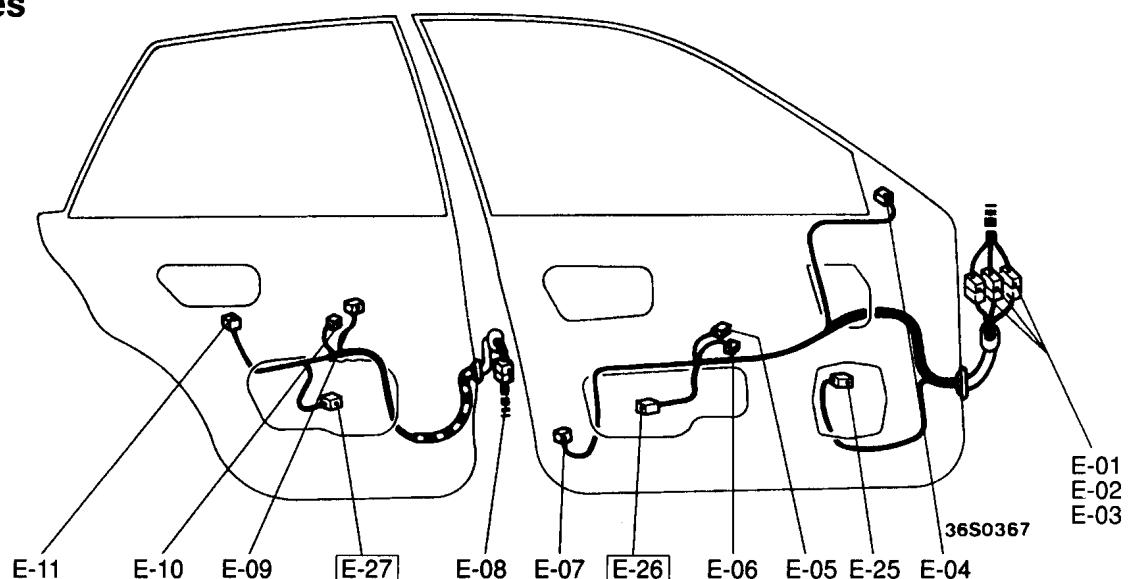


<Passenger's side door>

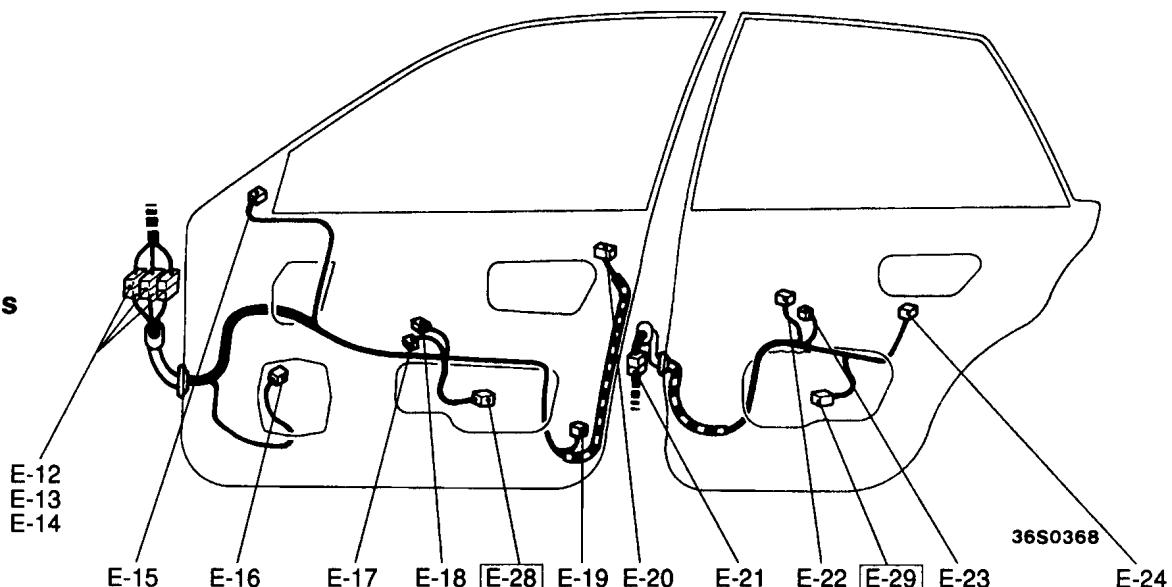


- | | | | |
|------|---|------|---|
| E-01 | Body wiring harness and front door wiring harness | E-17 | Front power window motor (RH) |
| E-02 | (LH) combination | E-18 | Front power window sub switch |
| E-03 | Body wiring harness and door wiring harness (LH) combination <Vehicles with door mirror heater> | E-19 | Front door lock actuator (RH) |
| E-04 | Remote controlled mirror (LH) | E-20 | Door lock key cylinder switch |
| E-05 | Power window main switch | E-21 | Body wiring harness and rear door wiring harness (RH) combination |
| E-06 | Front power window motor (LH) | E-22 | Rear power window sub switch (RH) |
| E-07 | Front door lock actuator (LH) | E-23 | Rear power window motor (RH) |
| E-08 | Body wiring harness and rear door wiring harness (LH) combination | E-24 | Rear door lock actuator (RH) |
| E-09 | Rear power window sub switch (LH) | E-25 | Door speaker (LH) |
| E-10 | Rear power window motor (LH) | E-26 | Power window limit switch (Front: LH) |
| E-11 | Rear door lock actuator (LH) | E-27 | Power window limit switch (Rear: LH) |
| E-12 | Body wiring harness and front door wiring harness (RH) combination | E-28 | Power window limit switch (Front: RH) |
| E-13 | (RH) combination | E-29 | Power window limit switch (Rear: RH) |
| E-14 | Body wiring harness and door wiring harness (RH) combination <Vehicles with door mirror heater> | | |
| E-15 | Remote controlled mirror (RH) | | |
| E-16 | Door speaker (RH) | | |

Remark


Connector numbers enclosed by a frame are newly added connectors.

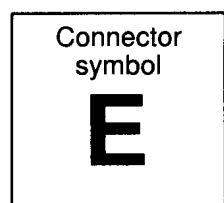DOOR**R.H. drive vehicles**

<Driver's side door>

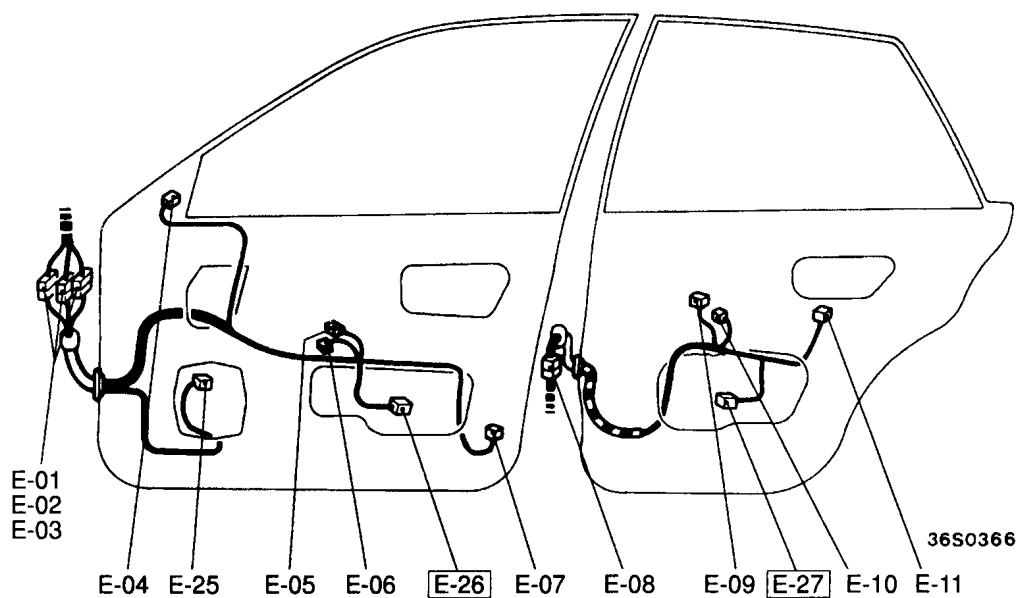

<Passenger's side door>

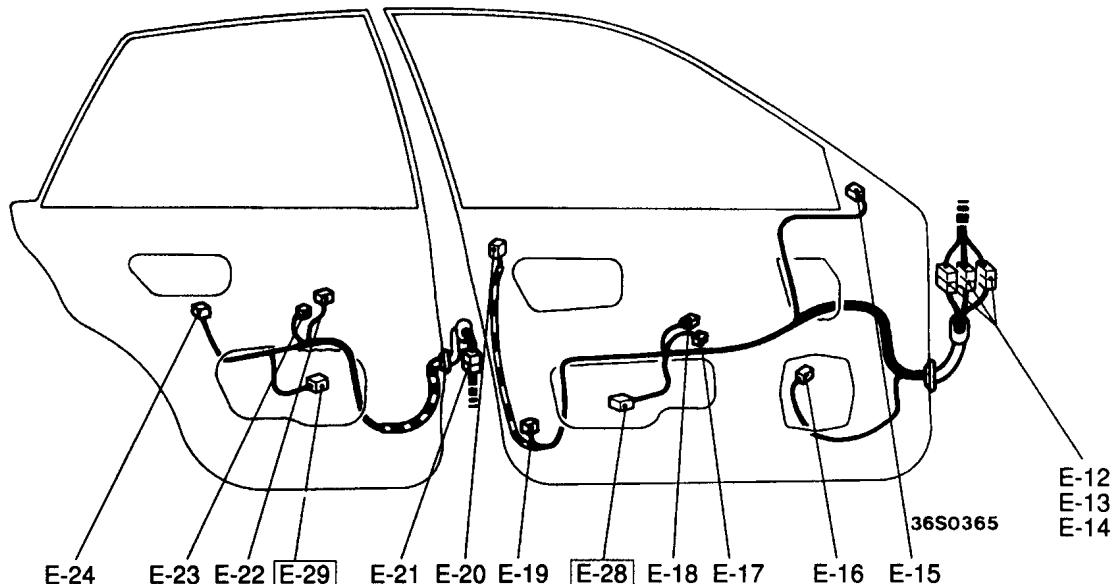

- E-01 } Body wiring harness and front door wiring harness
- E-02 } (RH) combination
- E-03 Body wiring harness and door wiring harness (RH) combination <Vehicles with door mirror heater>
- E-04 Remote controlled mirror (RH)
- E-05 Power window main switch
- E-06 Front power window motor (RH)
- E-07 Front door lock actuator (RH)
- E-08 Body wiring harness and rear door wiring harness (RH) combination
- E-09 Rear power window sub switch (RH)
- E-10 Rear power window motor (RH)
- E-11 Rear door lock actuator (RH)
- E-12 } Body wiring harness and front door wiring harness
- E-13 } (LH) combination
- E-14 Body wiring harness and door wiring harness (LH) combination <Vehicles with door mirror heater>
- E-15 Remote controlled mirror (LH)
- E-16 Door speaker (LH)

- E-17 Front power window motor (LH)
- E-18 Front power window sub switch
- E-19 Front door lock actuator (LH)
- E-20 Door lock key cylinder switch
- E-21 Body wiring harness and rear door wiring harness (LH) combination
- E-22 Rear power window sub switch (LH)
- E-23 Rear power window motor (LH)
- E-24 Rear door lock actuator (LH)
- E-25 Door speaker (RH)
- E-26** Power window limit switch (Front: RH)
- E-27** Power window limit switch (Rear: RH)
- E-28** Power window limit switch (Front: LH)
- E-29** Power window limit switch (Rear: LH)

Remark

Connector numbers enclosed by a frame are newly added connectors.