





Workshop Manual

electrical wiring

SUPPLEMENT

LANCER '97

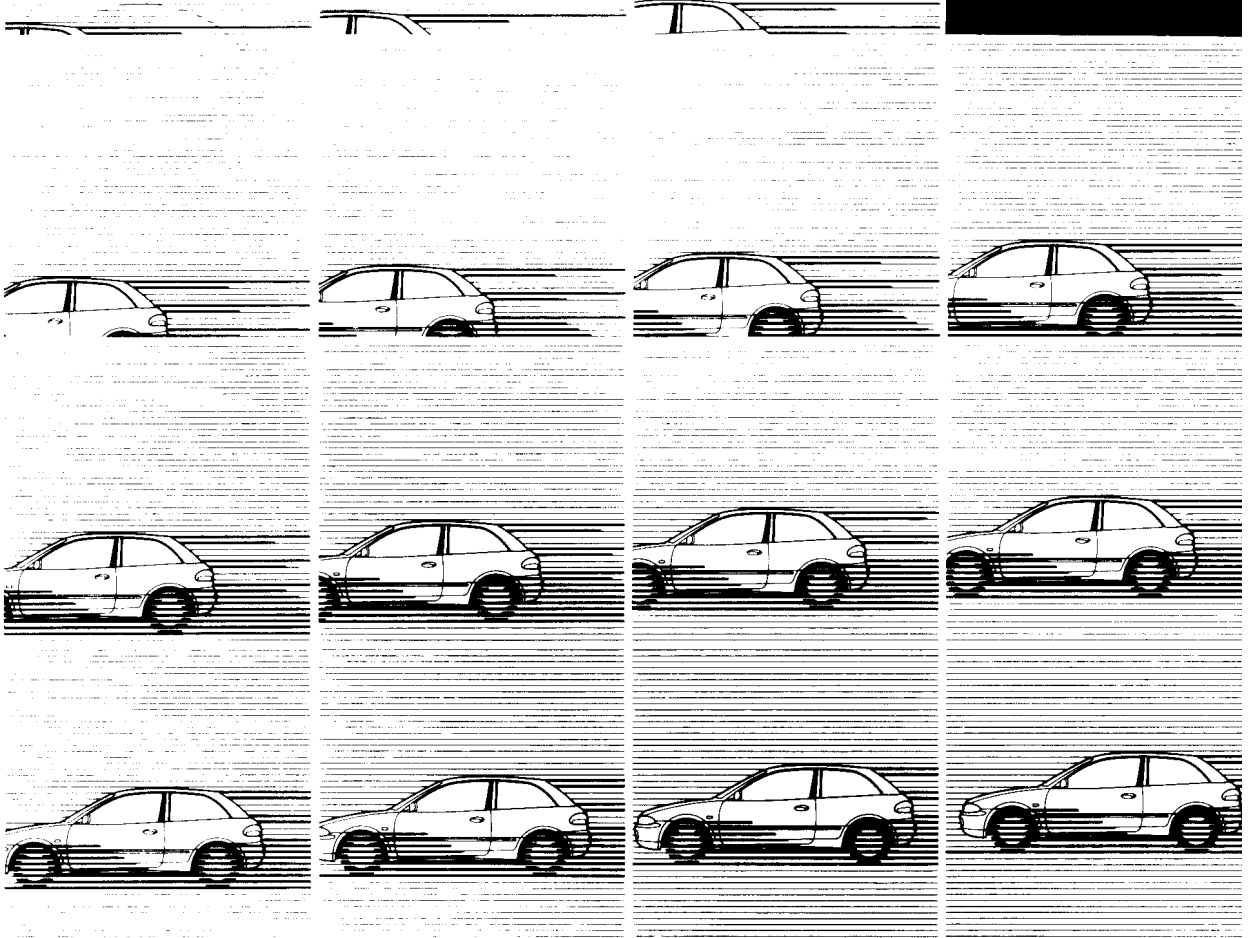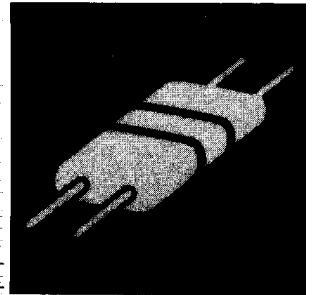

MITSUBISHI LANCER

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring in the Mitsubishi LANCER edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL	PYME9116 PYME9116-1
WORKSHOP MANUAL	
CHASSIS GROUP	PWME9117 (Looseleaf edition)
ENGINE GROUP	PWEE□□□□ (Looseleaf edition)
ELECTRICAL WIRING	PHME9107-D
BODY REPAIR MANUAL	PHME9107-E PBME9107
PARTS CATALOGUE	B606A507A□

All information, illustrations and product descriptions contained in this manual are correct as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

OUTLINE OF CHANGES

HOW TO READ THE
WIRING DIAGRAMS

WIRING HARNESS
CONFIGURATION DIAGRAMS

SINGLE PART INSTALLATION
POSITION

CIRCUIT DIAGRAM

1

2

3

4



HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX which lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page numbers can be found on the top left or right of each page.