




Workshop Manual

electrical wiring

SUPPLEMENT

LANCER 2000

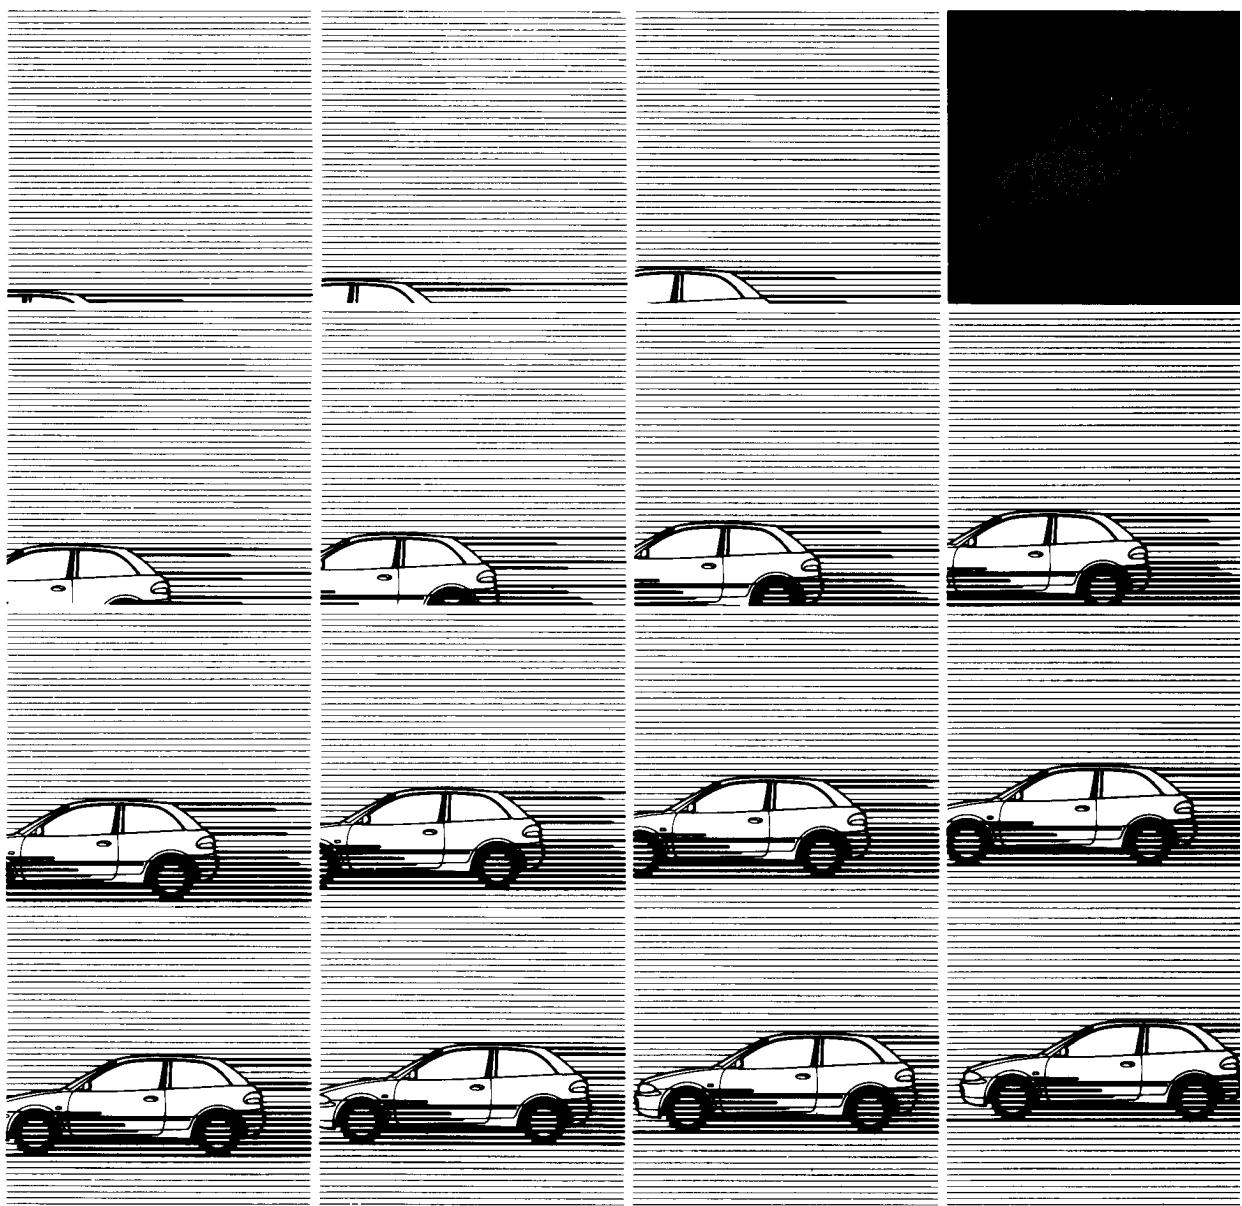

Pub. No. PHME9107-H

MITSUBISHI LANCER

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring in the Mitsubishi LANCER edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.
It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL

PYME9116

PYME9116-1

WORKSHOP MANUAL

CAHSSIS GROUP

PWME9117

(Looseleaf edition)

ENGINE GROUP

PWEE□□□□

(Looseleaf edition)

ELECTRICAL WIRING

PHME9107-D

PHME9107-E

PHME9107-F

PHME9107-G

BODY REPAIR MANUAL

PBME9107

PARTS CATALOGUE

B606A508A□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

OUTLINE OF CHANGES

1

HOW TO READ THE
WIRING DIAGRAMS

4

CIRCUIT DIAGRAM

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX which lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page numbers can be found on the top left or right of each page.

OUTLINE OF CHANGES

CONTENTS

CIRCUIT DIAGRAMS	2	TABLE OF CIRCUIT DIAGRAMS	3
------------------------	---	---------------------------------	---

CIRCUIT DIAGRAMS

Circuit diagrams			Description of changes
Main title	Sub title	Reference page	
IGNITION SYSTEM	4G92 <L.H. drive vehicles>	4-2	The circuit diagram has been changed to correspond to changes in the distributor assembly (A-90).
	4G92 <R.H. drive vehicles>	4-3	
MPI SYSTEM	4G92 <L.H. drive vehicles with immobilizer system>	4-4	
	4G92 <L.H. drive vehicles without immobilizer system>	4-11	
	4G92 <R.H. drive vehicles>	4-18	

TABLE OF CIRCUIT DIAGRAMS

This table of circuit diagrams indicates those circuit in which changes and/or addition, etc. have been made, the circuits are here listed in the sequence in which they are presented in the wiring diagrams. Please use this table for reference when following maintenance or repair procedures.

NOTE

- (1) A (Added) : This circuit has been newly added in this manual.
- (2) R (Revised) : This circuit has been changed, and is included in this manual.
- (3) D (Deleted) : This circuit has been deleted in this manual.
- (4) I (Included) : This circuit is included in this manual.
- (5) N (Not included) : This circuit is not included in this manual.
- (6) P (Previous manual) : This circuit is not included in this manual, because it has not been changed.
Refer to the previous manuals.

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
JUNCTION BLOCK	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
JUMPER CONNECTOR	–	I	P	P	P	P
CENTRALIZED JUNCTION	–	I	P	P	P	P
POWER DISTRIBUTION SYSTEM	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
STARTING SYSTEM	Petrol	I	P	P	P	P
	Diesel	I	D	N	N	N
	Diesel <Vehicles for Europe>	N	A	D	N	N
IGNITION SYSTEM	4G13 <L.H. drive vehicles>	I	P	D	N	N
	4G13 <R.H. drive vehicles>	I	P	D	N	N
	4G92 <L.H. drive vehicles>	I	P	P	P	R
	4G92 <R.H. drive vehicles>	I	P	P	P	R
	4G93 <L.H. drive vehicles>	I	P	D	N	N
	4G93 <R.H. drive vehicles>	I	P	D	N	N
SELF-REGULATING GLOW SYSTEM	L.H. drive vehicles with EGR system	I	P	D	N	N
	L.H. drive vehicles without EGR system	I	D	D	N	N
	R.H. drive vehicles	I	P	D	N	N
	L.H. drive vehicles for Europe without EGR system	N	A	D	N	N
CHARGING SYSTEM	4G13 <L.H. drive vehicles>	I	P	D	N	N
	4G13 <R.H. drive vehicles>	I	P	D	N	N
	4G9 <L.H. drive vehicles>	I	P	P	P	P
	4G9 <R.H. drive vehicles>	I	P	P	P	P
	4D68 <L.H. drive vehicles>	I	P	D	N	N
	4D68 <R.H. drive vehicles>	I	P	D	N	N

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
MPI SYSTEM	4G13 <L.H. drive vehicles>	I	P	D	N	N
	4G13 <R.H. drive vehicles>	I	P	D	N	N
	4G92 <L.H. drive vehicles (MVV)>	I	R	D	N	N
	4G92 <R.H. drive vehicles (MVV)>	I	R	D	N	N
	4G92 <L.H. drive vehicles (except MVV)>	I	P	D	N	N
	4G92 <R.H. drive vehicles (except MVV)>	I	P	D	N	N
	4G93 <L.H. drive vehicles>	I	D	N	N	N
	4G93 <R.H. drive vehicles>	I	D	N	N	N
	4G93 <L.H. drive vehicles for Europe>	N	A	D	N	N
	4G93-DOHC <R.H. drive vehicles for General Export>	N	A	D	N	N
	4G92 <L.H. drive vehicles with immobilizer system>	N	N	A	P	R
	4G92 <L.H. drive vehicles without immobilizer system>	N	N	A	P	R
	4G92 <R.H. drive vehicles>	N	N	A	P	R
COOLING SYSTEM	4G13	I	P	D	N	N
	4G9	I	P	P	P	P
	4D68	I	P	D	N	N
ELC 4-SPEED AUTOMATIC TRANSMISSION	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
HEADLAMP	Vehicles with daytime running lamp	I	P	R	P	P
	L.H. drive vehicles without daytime running lamp	I	P	R	P	P
	R.H. drive vehicles	I	P	R	R	P
HEADLAMP LEVELING SYSTEM	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	P	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	P	R	P	P
	Wagon <R.H. drive vehicles>	I	P	R	P	P
FRONT FOG LAMP	L.H. drive vehicles	I	P	R	P	P
	R.H. drive vehicles	I	P	R	P	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
REAR FOG LAMP	Hatchback and wagon <L.H. drive vehicles>	I	P	D	N	N
	Hatchback and wagon <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	P	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	L.H. drive vehicles	N	N	A	R	P
	R.H. drive vehicles	N	N	A	R	P
ROOM LAMP AND LUGGAGE COMPARTMENT LAMP	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	P	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	P	P	P	P
	Wagon <R.H. drive vehicles>	I	P	P	P	P
TURN-SIGNAL LAMP AND HAZARD LAMP	Hatchback and sedan <L.H. drive vehicles>	I	P	D	N	N
	Hatchback and sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	P	R	P	P
	Wagon <R.H. drive vehicles>	I	P	R	P	P
STOP LAMP	Hatchback <L.H. drive vehicles>	I	R	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	R	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	R	P	P	P
	Wagon <R.H. drive vehicles>	I	P	P	P	P
BACK-UP LAMP	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	P	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	P	P	P	P
	Wagon <R.H. drive vehicles>	I	P	P	P	P
HORN	L.H. drive vehicles with SRS	I	P	P	P	P
	R.H. drive vehicles with SRS	I	P	P	P	P
	L.H. drive vehicles without SRS	I	P	R	P	P
	R.H. drive vehicles without SRS	I	P	R	P	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
METER AND GAUGE	2WD <L.H. drive vehicles>	I	P	P	P	P
	2WD <R.H. drive vehicles>	I	P	P	P	P
	4WD <L.H. drive vehicles>	I	P	P	P	P
	4WD <R.H. drive vehicles>	I	P	P	P	P
FUEL WARNING LAMP	L.H. drive vehicles <2WD>	I	P	P	P	P
	L.H. drive vehicles <4WD>	I	P	P	P	P
BRAKE WARNING LAMP	L.H. drive vehicles	I	P	P	P	P
OIL PRESSURE WARNING LAMP	L.H. drive vehicles	I	P	P	P	P
FUEL FILTER WARNING LAMP	L.H. drive vehicles <Diesel>	I	P	D	N	N
CENTRAL DOOR LOCKING SYSTEM	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan and wagon <L.H. drive vehicles>	I	P	P	P	P
	Sedan and wagon <R.H. drive vehicles>	I	P	P	P	P
POWER WINDOW	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan and wagon <L.H. drive vehicles>	I	P	D	N	N
	Sedan and wagon <R.H. drive vehicles>	I	P	D	N	N
	L.H. drive vehicles	N	N	A	P	P
	R.H. drive vehicles	N	N	A	P	P
HEATER	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
AIR CONDITIONER	4G13 <L.H. drive vehicles>	I	P	D	N	N
	4G13 <R.H. drive vehicles>	I	P	D	N	N
	4G9 <L.H. drive vehicles>	I	P	R	P	P
	4G9 <R.H. drive vehicles>	I	P	R	P	P
	4D68 <L.H. drive vehicles>	I	P	D	N	N
	4D68 <R.H. drive vehicles>	I	P	D	N	N
WINDSHIELD WIPER AND WASHER	L.H. drive vehicles with intermittent wiper	I	P	R	P	P
	L.H. drive vehicles without intermittent wiper	I	P	D	N	N
	R.H. drive vehicles	I	P	R	P	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
REAR WIPER AND WASHER	L.H. drive vehicles with intermittent wiper	I	P	P	P	P
	L.H. drive vehicles without intermittent wiper	I	P	D	N	N
	R.H. drive vehicles with intermittent wiper	I	D	N	N	N
	R.H. drive vehicles without intermittent wiper	I	P	D	N	N
	R.H. drive vehicles for Europe with intermittent wiper	N	A	P	P	P
HEADLAMP WASHER	–	I	R	R	P	P
DEFOGGER AND DOOR MIRROR HEATER	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan and wagon <L.H. drive vehicles>	I	P	P	P	P
	Sedan and wagon <R.H. drive vehicles>	I	P	P	P	P
REMOTE CONTROLLED MIRROR	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
CLOCK	L.H. drive vehicles with daytime running lamp	I	P	P	P	P
	L.H. drive vehicles without daytime running lamp	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
CIGARETTE LIGHTER	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
RADIO AND TAPE PLAYER	Hatchback <L.H. drive vehicles>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	P	D	N	N
	Sedan <L.H. drive vehicles>	I	P	D	N	N
	Sedan <R.H. drive vehicles>	I	P	D	N	N
	Wagon <L.H. drive vehicles>	I	P	R	P	P
	Wagon <R.H. drive vehicles>	I	P	R	P	P
SUNROOF	L.H. drive vehicles	I	P	P	P	P
	R.H. drive vehicles	I	P	P	P	P
HEATED SEAT	–	I	P	P	P	P

OUTLINE OF CHANGES – Table of Circuit Diagrams

Main circuit	Circuit classifications	Previous manual: Pub. No. PHME9107-D (Basic)	Previous manual: Pub. No. PHME9107-E (Supplement)	Previous manual: Pub. No. PHME9107-F (Supplement)	Previous manual: Pub. No. PHME9107-G (Supplement)	This manual: Pub. No. PHME9107-H (Supplement)
ANTI-LOCK BRAKE SYSTEM	Hatchback <L.H. drive vehicles (2WD)>	I	D	N	N	N
	Hatchback <L.H. drive vehicles (4WD)>	I	P	D	N	N
	Hatchback <R.H. drive vehicles>	I	D	N	N	N
	Sedan and wagon <2WD (L.H. drive vehicles)>	I	D	N	N	N
	Sedan and wagon <2WD (R.H. drive vehicles)>	I	D	N	N	N
	Wagon <4WD (L.H. drive vehicles)>	I	P	R	P	P
	Wagon <4WD (R.H. drive vehicles)>	I	P	R	P	P
	Hatchback <L.H. drive vehicles for Europe (2WD)>	N	A	D	N	N
	Hatchback <R.H. drive vehicles for Europe>	N	A	D	N	N
	Sedan and wagon <2WD (L.H. drive vehicles for Europe)>	N	A	D	N	N
	Sedan and wagon <2WD (R.H. drive vehicles for Europe)>	N	A	D	N	N
	2WD <L.H. drive vehicles>	N	N	A	P	P
	2WD <R.H. drive vehicles>	N	N	A	P	P
FUEL LINE HEATER	-	N	A	D	N	N
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	L.H. drive vehicles	I	R	R	P	P
	R.H. drive vehicles	I	R	R	P	P
IMMOBILIZER SYSTEM	L.H. drive vehicles	N	N	A	P	P
	R.H. drive vehicles	N	N	A	P	P

HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS	2
--------------	---


MODELS


Model code		Engine model	Transmission model	Fuel supply system
CB4W	LNDEQL6	4G92 (1,597 mℓ)	F5M22 (2WD-5M/T)	MPI
	LNJEQL6/R6			
	LRJEQL6/R6		F4A22 (2WD-4A/T)	
	LNDGQL6		F5M22 (2WD-5M/T)	
	LNLGQL6			
	LRJGQL6		F4A22 (2WD-4A/T)	
CD4W	LNDEQL6		W5M31 (4WD-5M/T)	
	LNJEQL6/R6			

CIRCUIT DIAGRAM

CONTENTS


IGNITION SYSTEM <4G92 (L.H. drive vehicles)>	2	MPI SYSTEM <4G92 (L.H. drive vehicles without immobilizer system)>	11
IGNITION SYSTEM <4G92 (R.H. drive vehicles)>	3	MPI SYSTEM <4G92 (R.H. drive vehicles)>	18
MPI SYSTEM <4G92 (L.H. drive vehicles with immobilizer system)>	4		

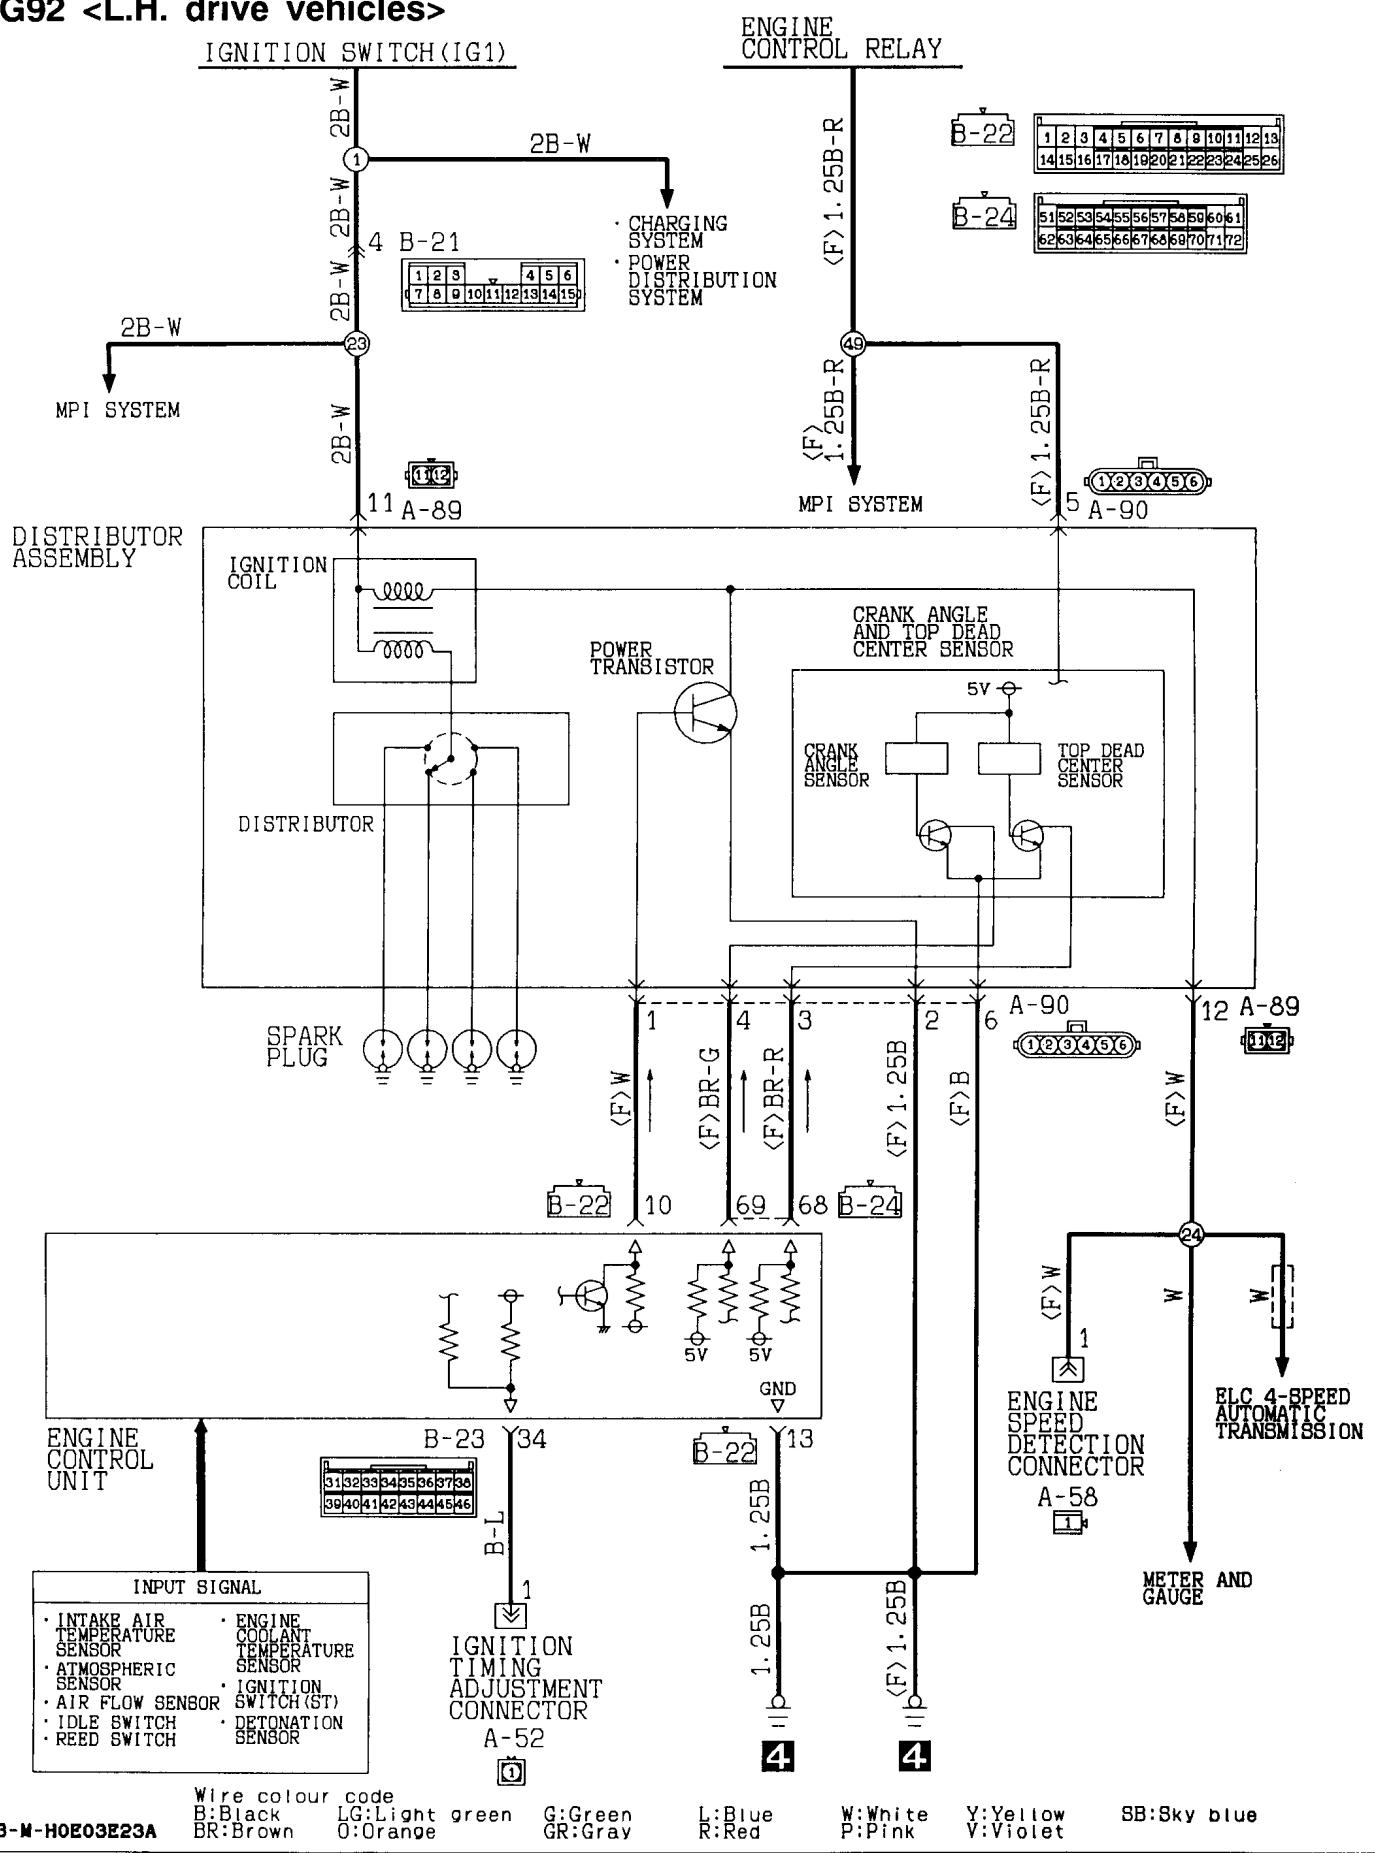IGNITION SYSTEM
4G92 < L.H. drive vehicles >

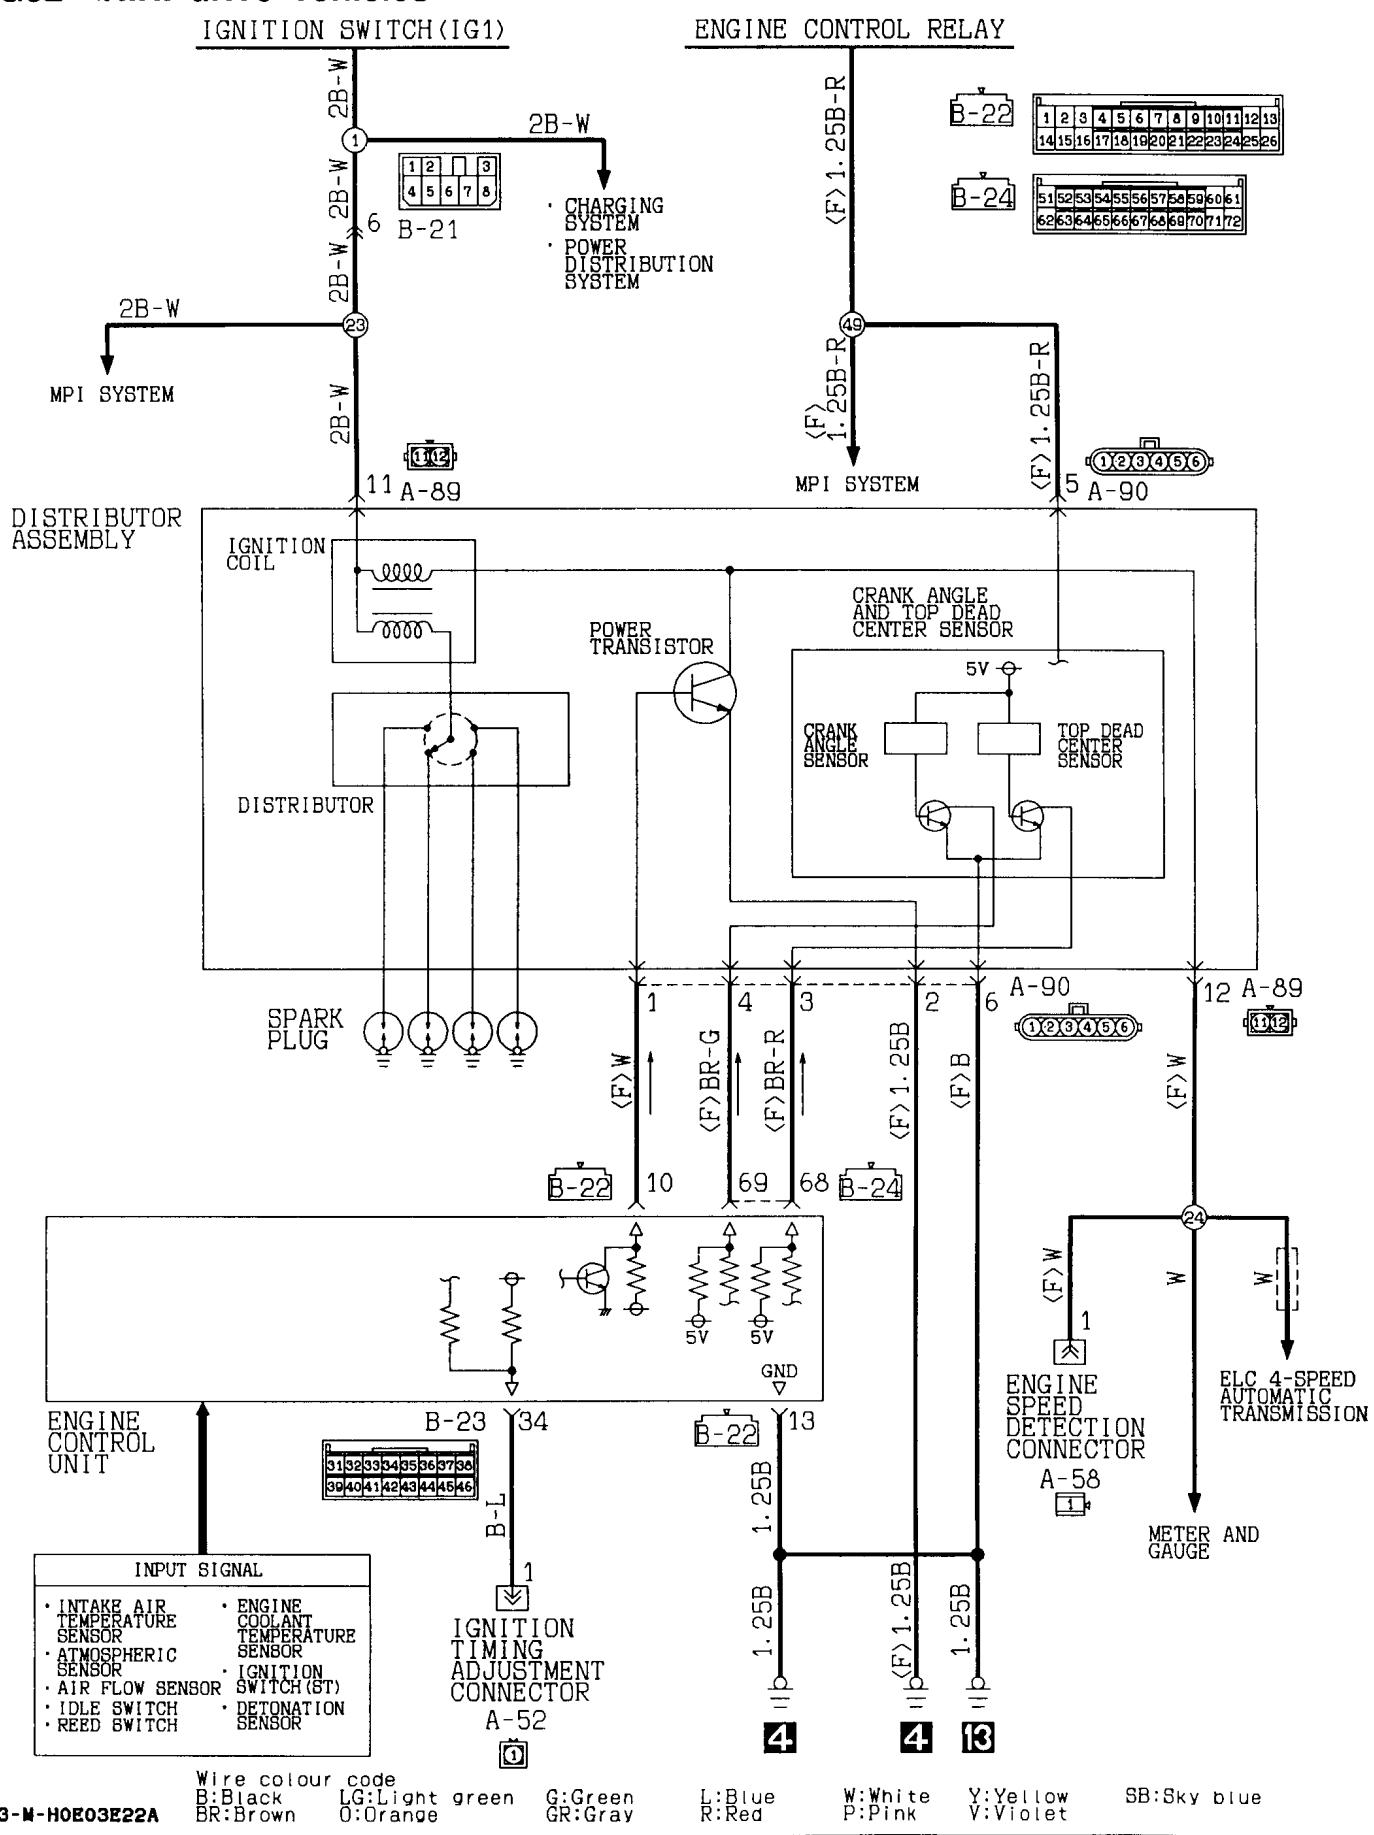
IGNITION SYSTEM
4G92 < R.H. drive vehicles >


MPI SYSTEM

4G92 <L.H. drive vehicles with immobilizer system>

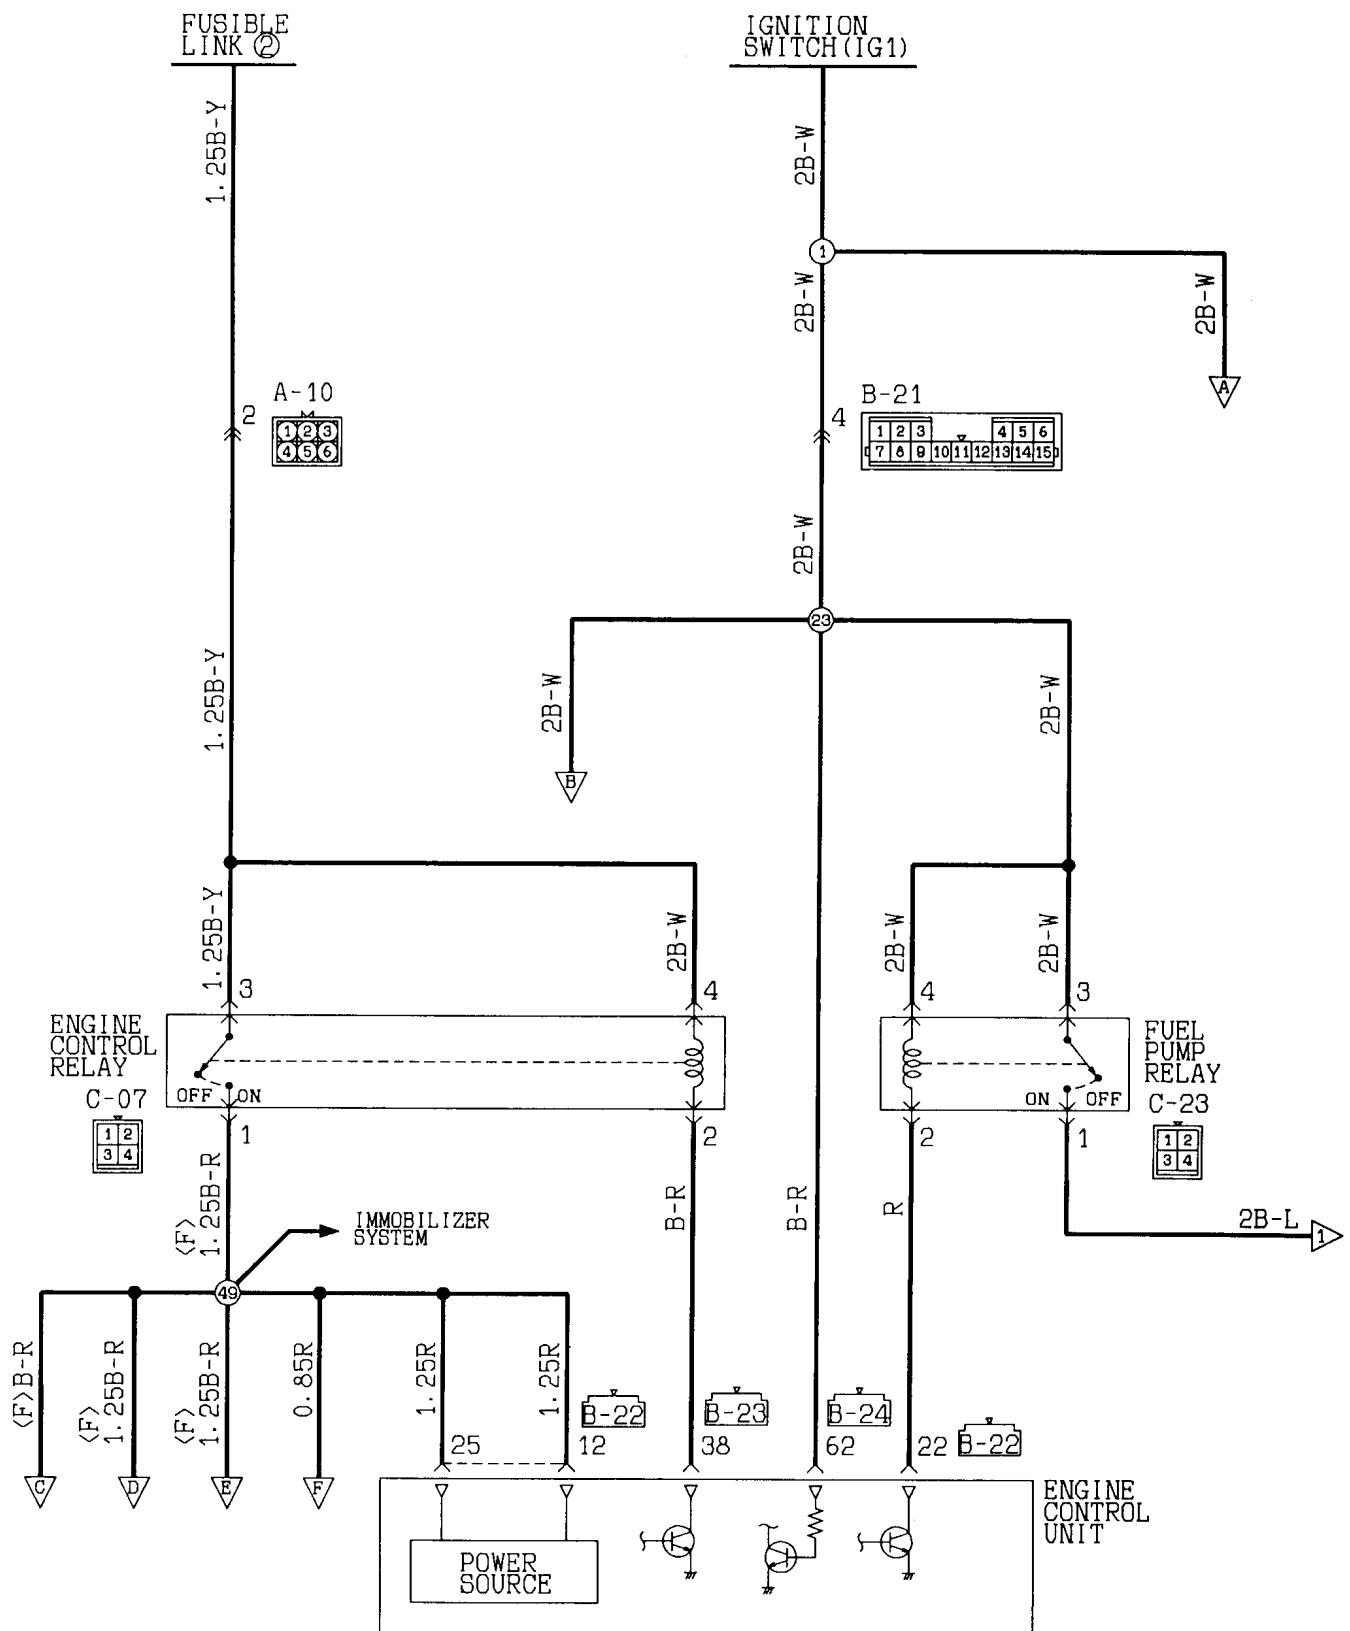


1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26


B-23


B-24


51	52	53	54	55	56	57	58	59	60	61
62	63	64	65	66	67	68	69	70	71	72

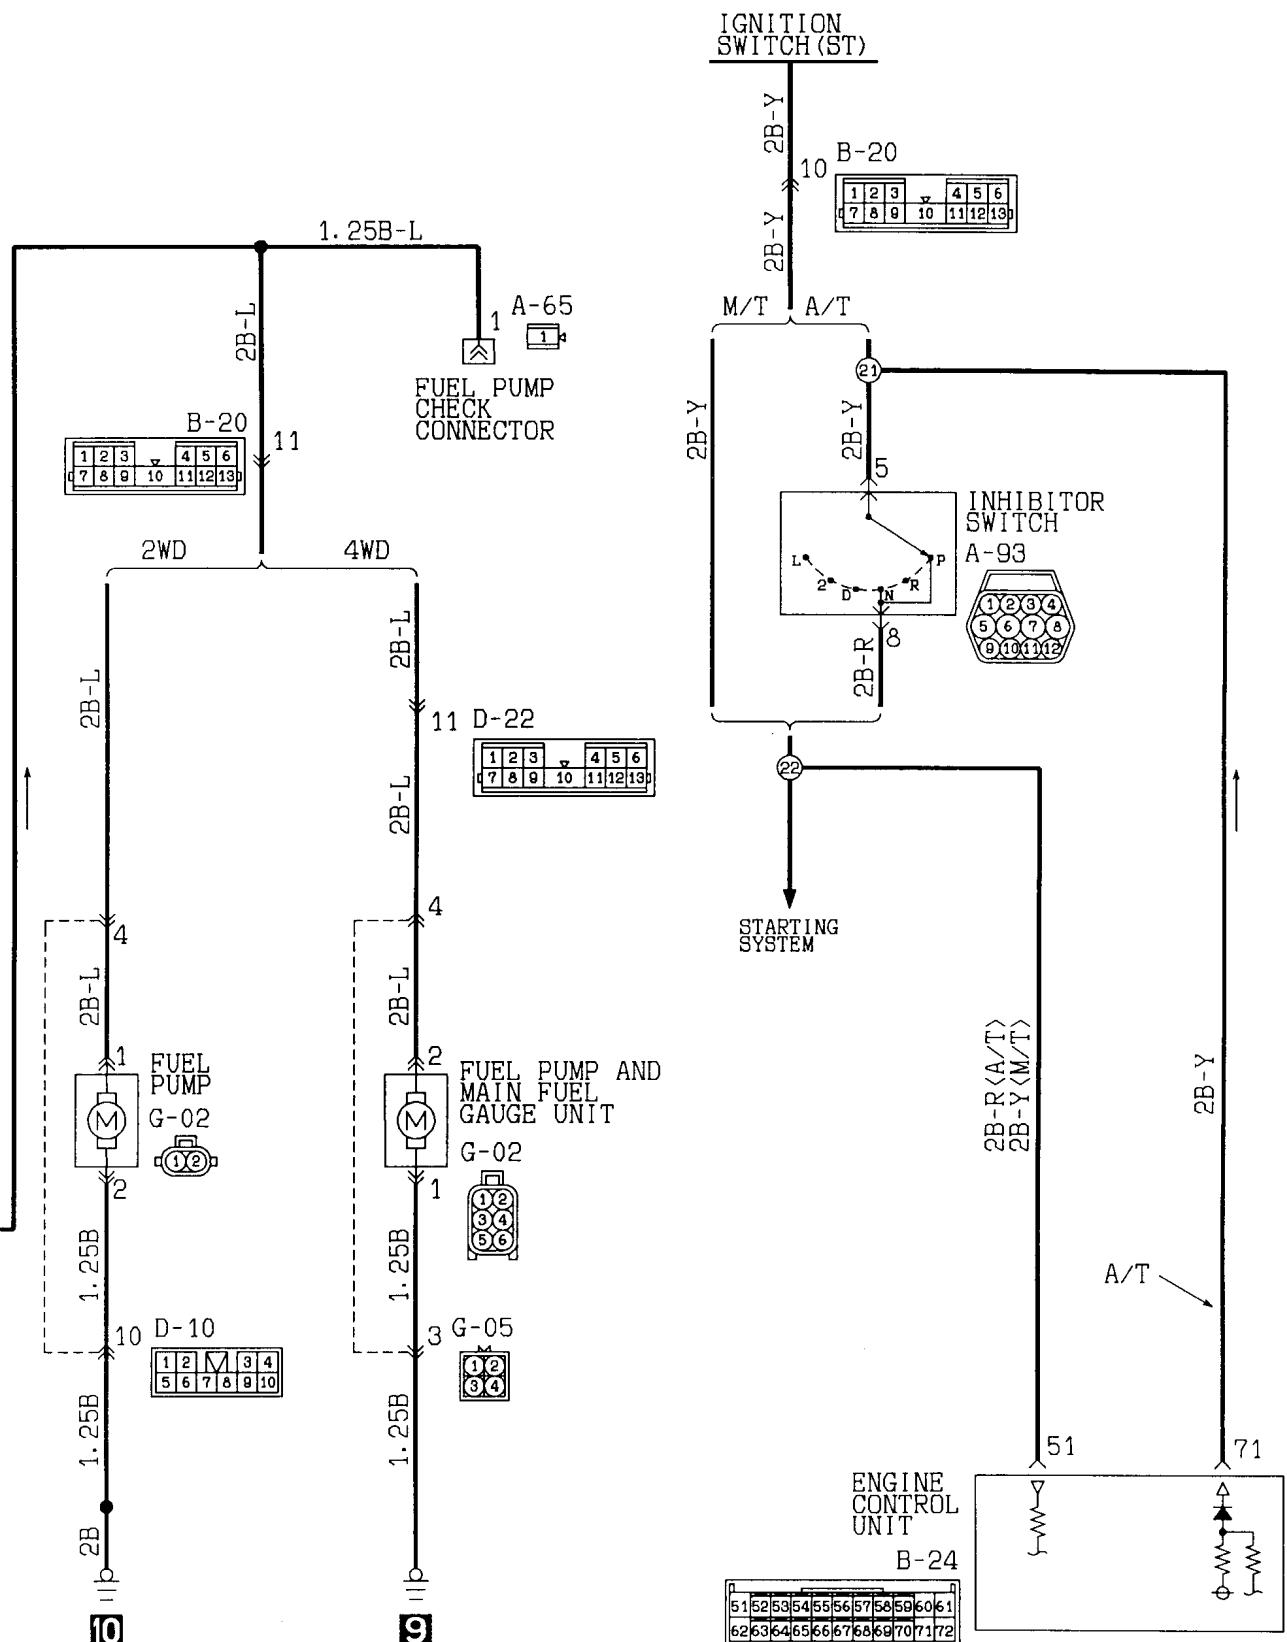


Wire colour code
 B:Black LG:Light green G:Green W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

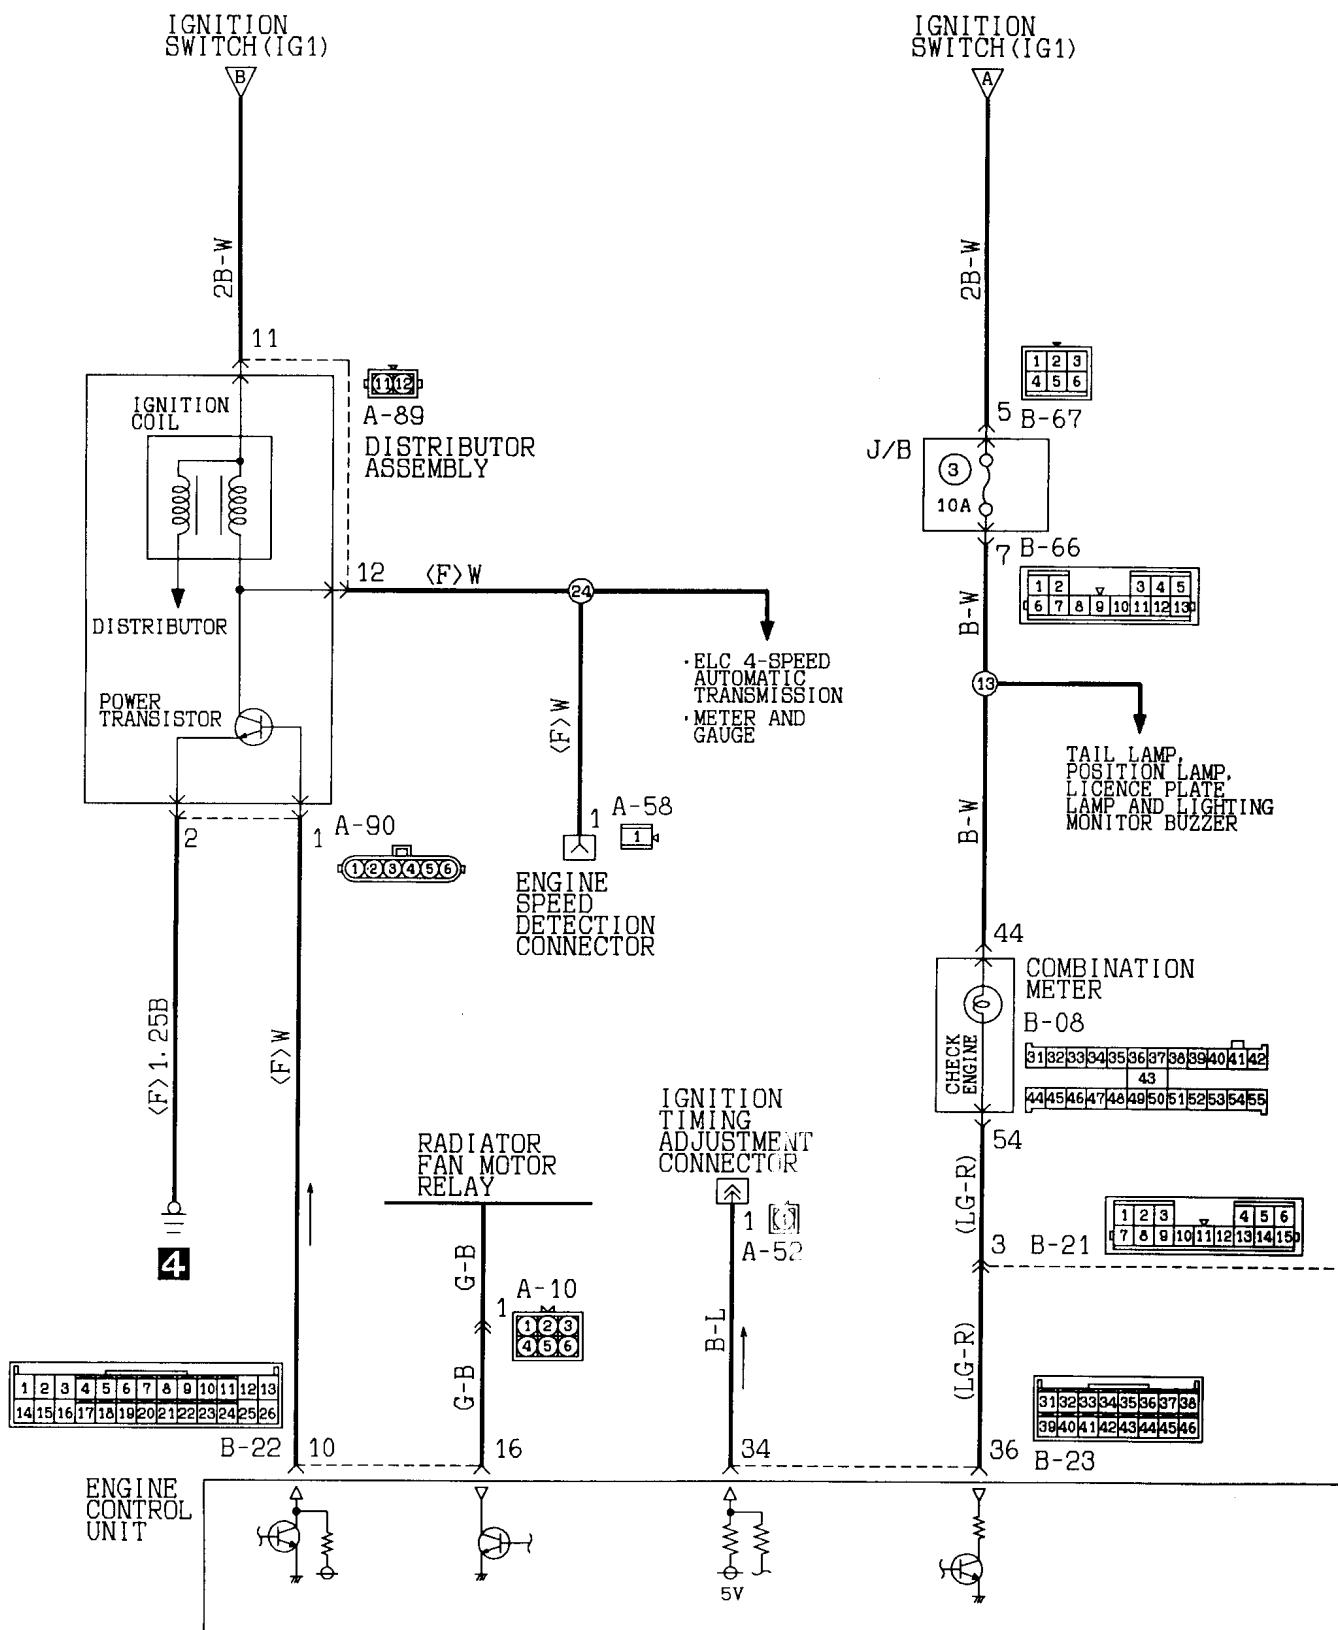

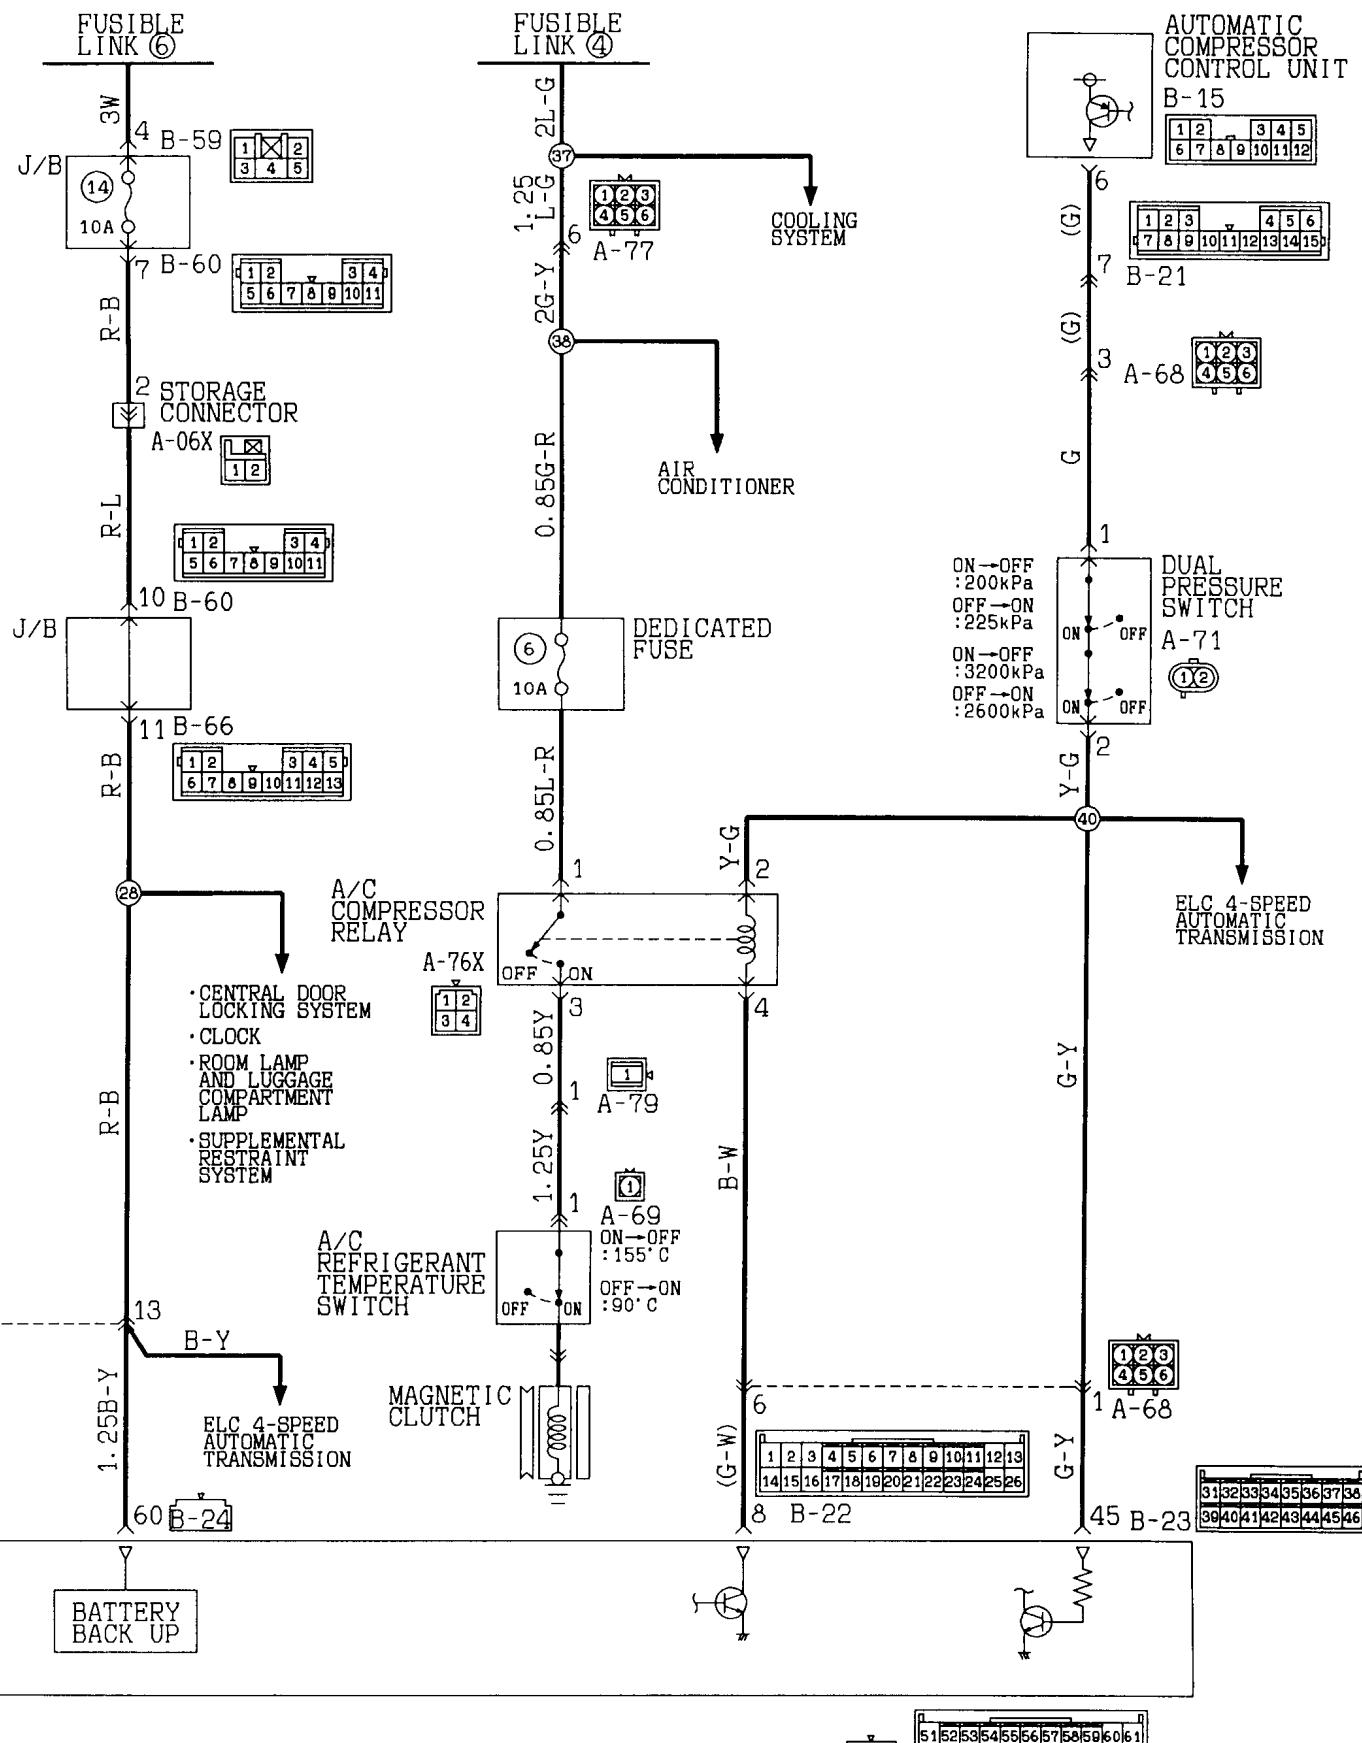

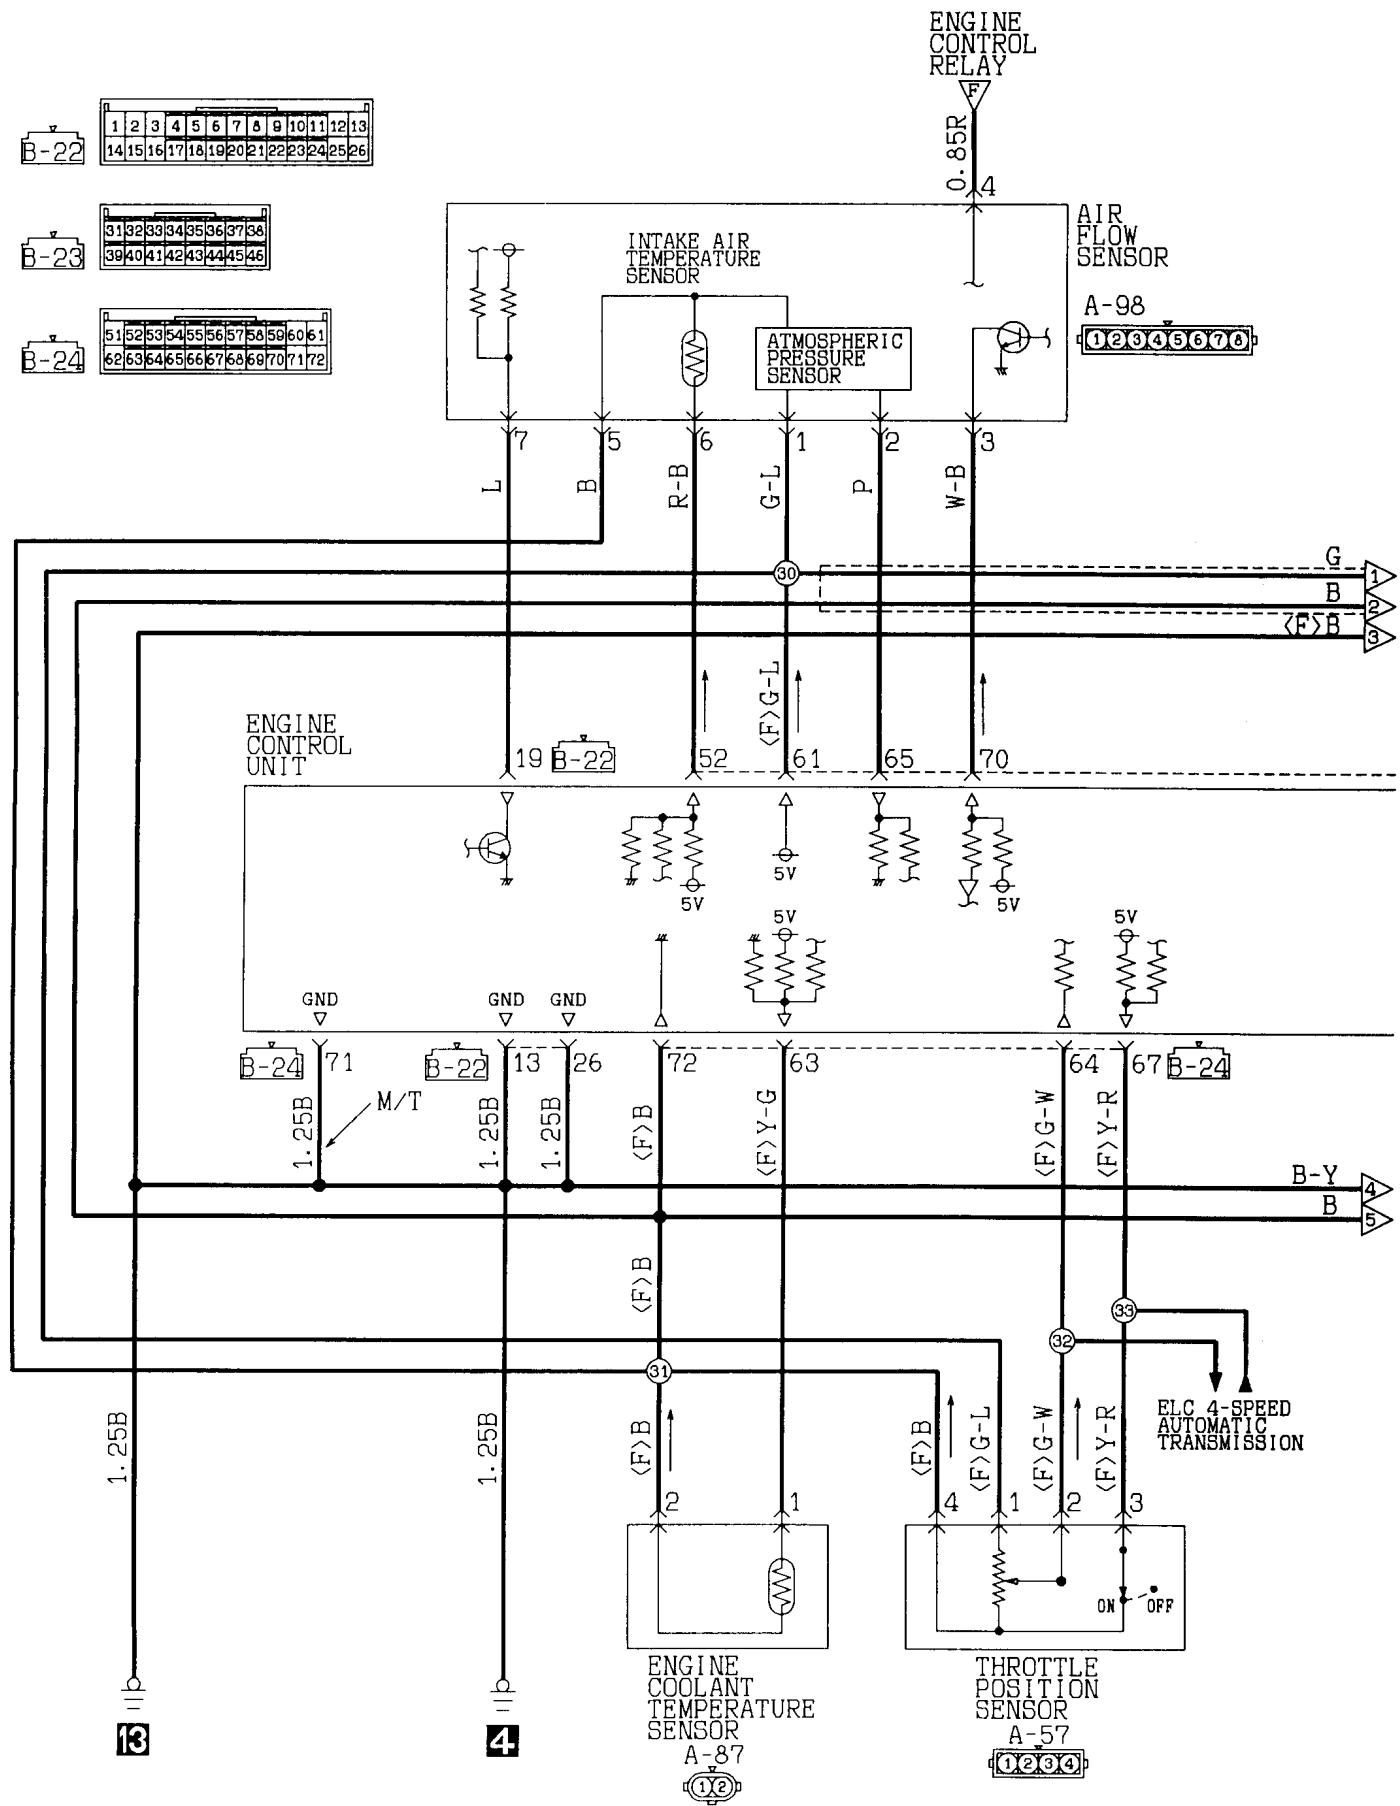

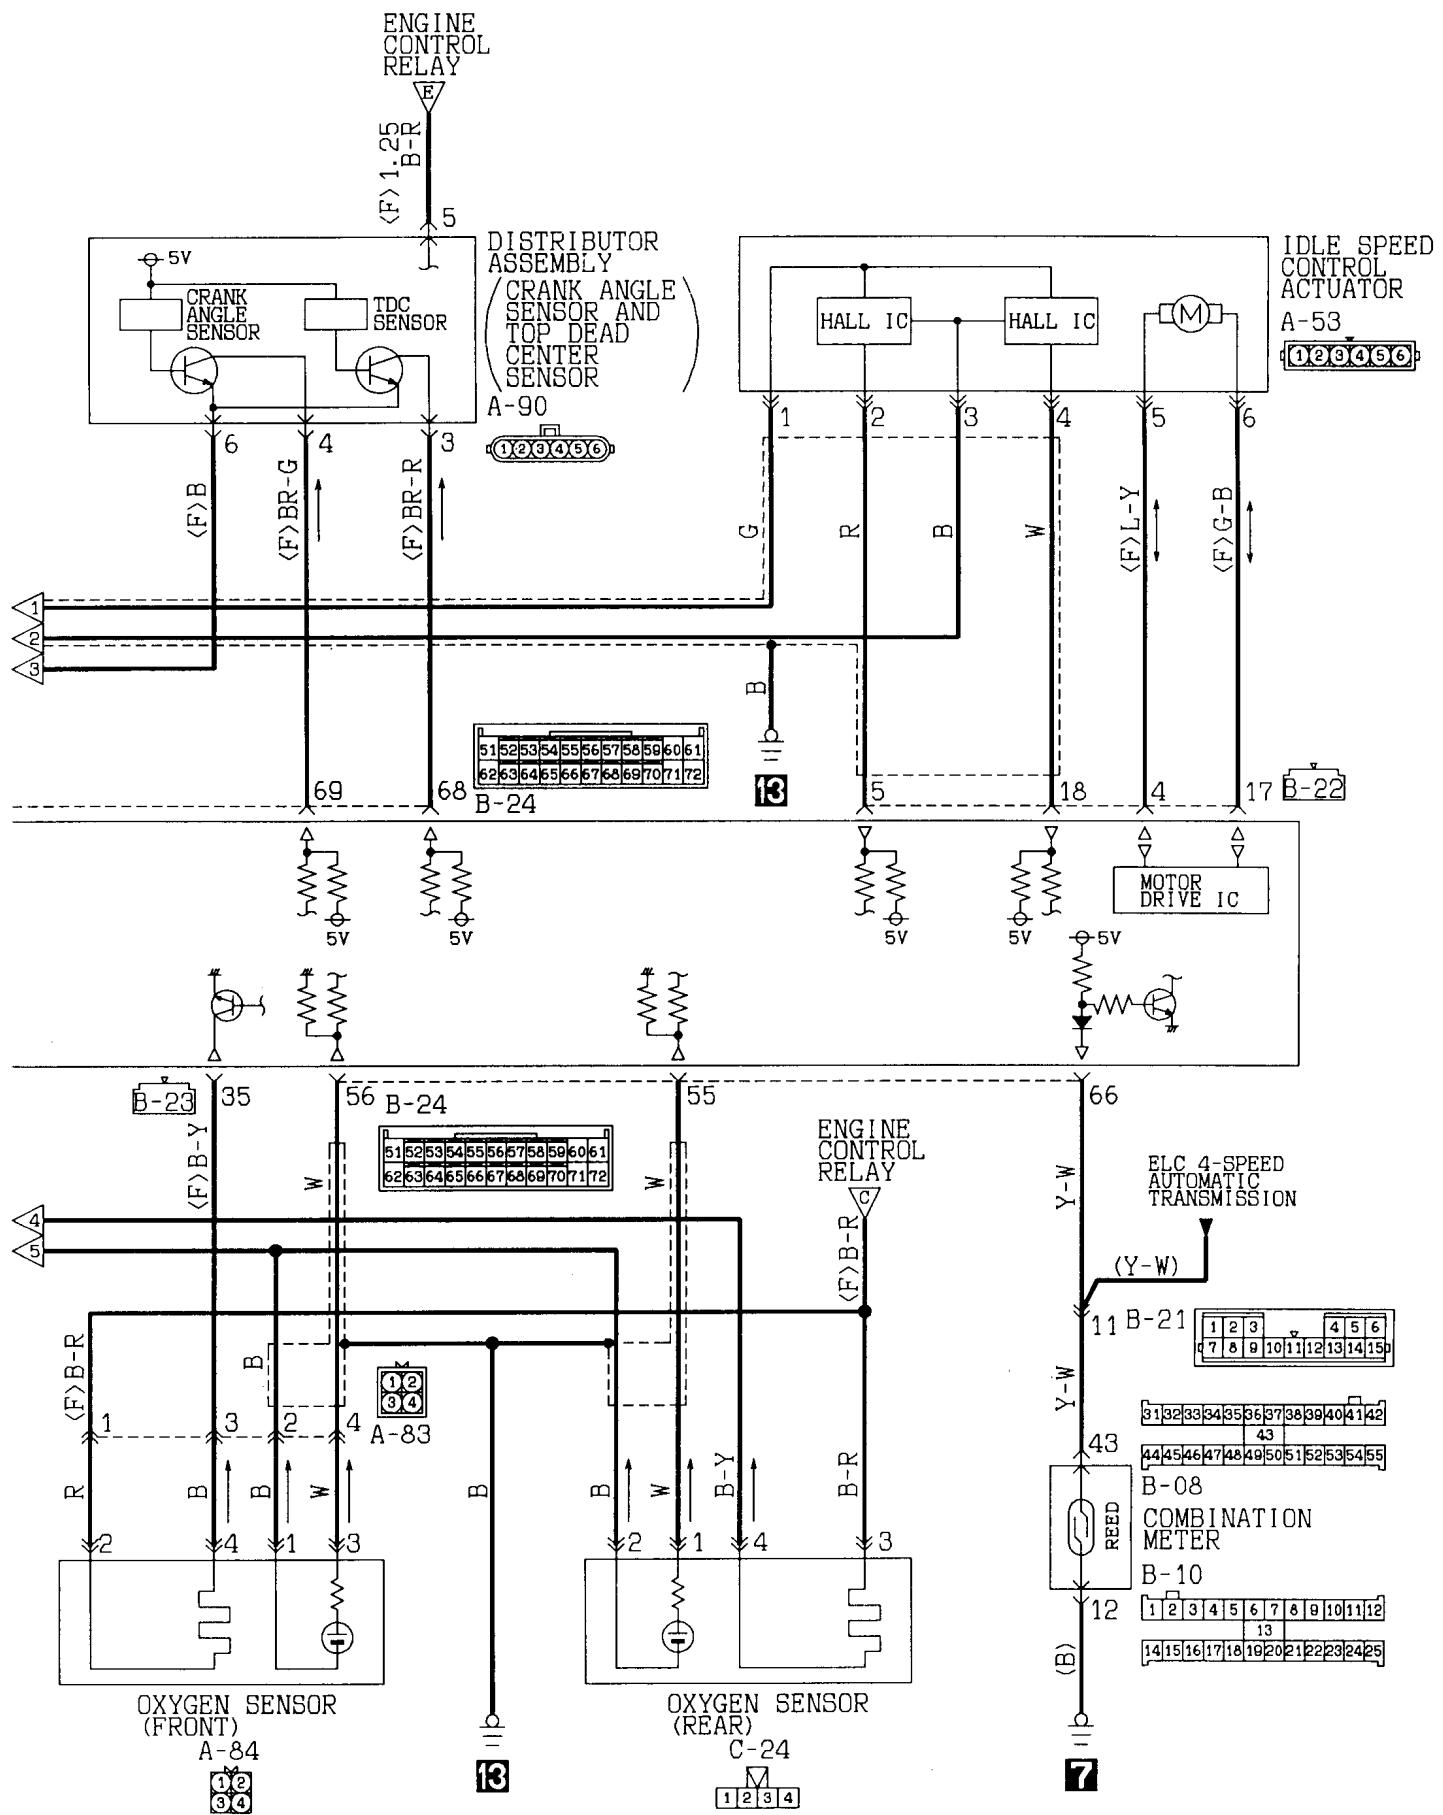

Wire colour code

Wire colour code
B:Black LG:Light green
BR:Brown O:Orange


G:Green
GR:Gray


L:Blue
R:Red


W:White
P:Pink

Y:Yellow
V:Violet


SB:Sky blue

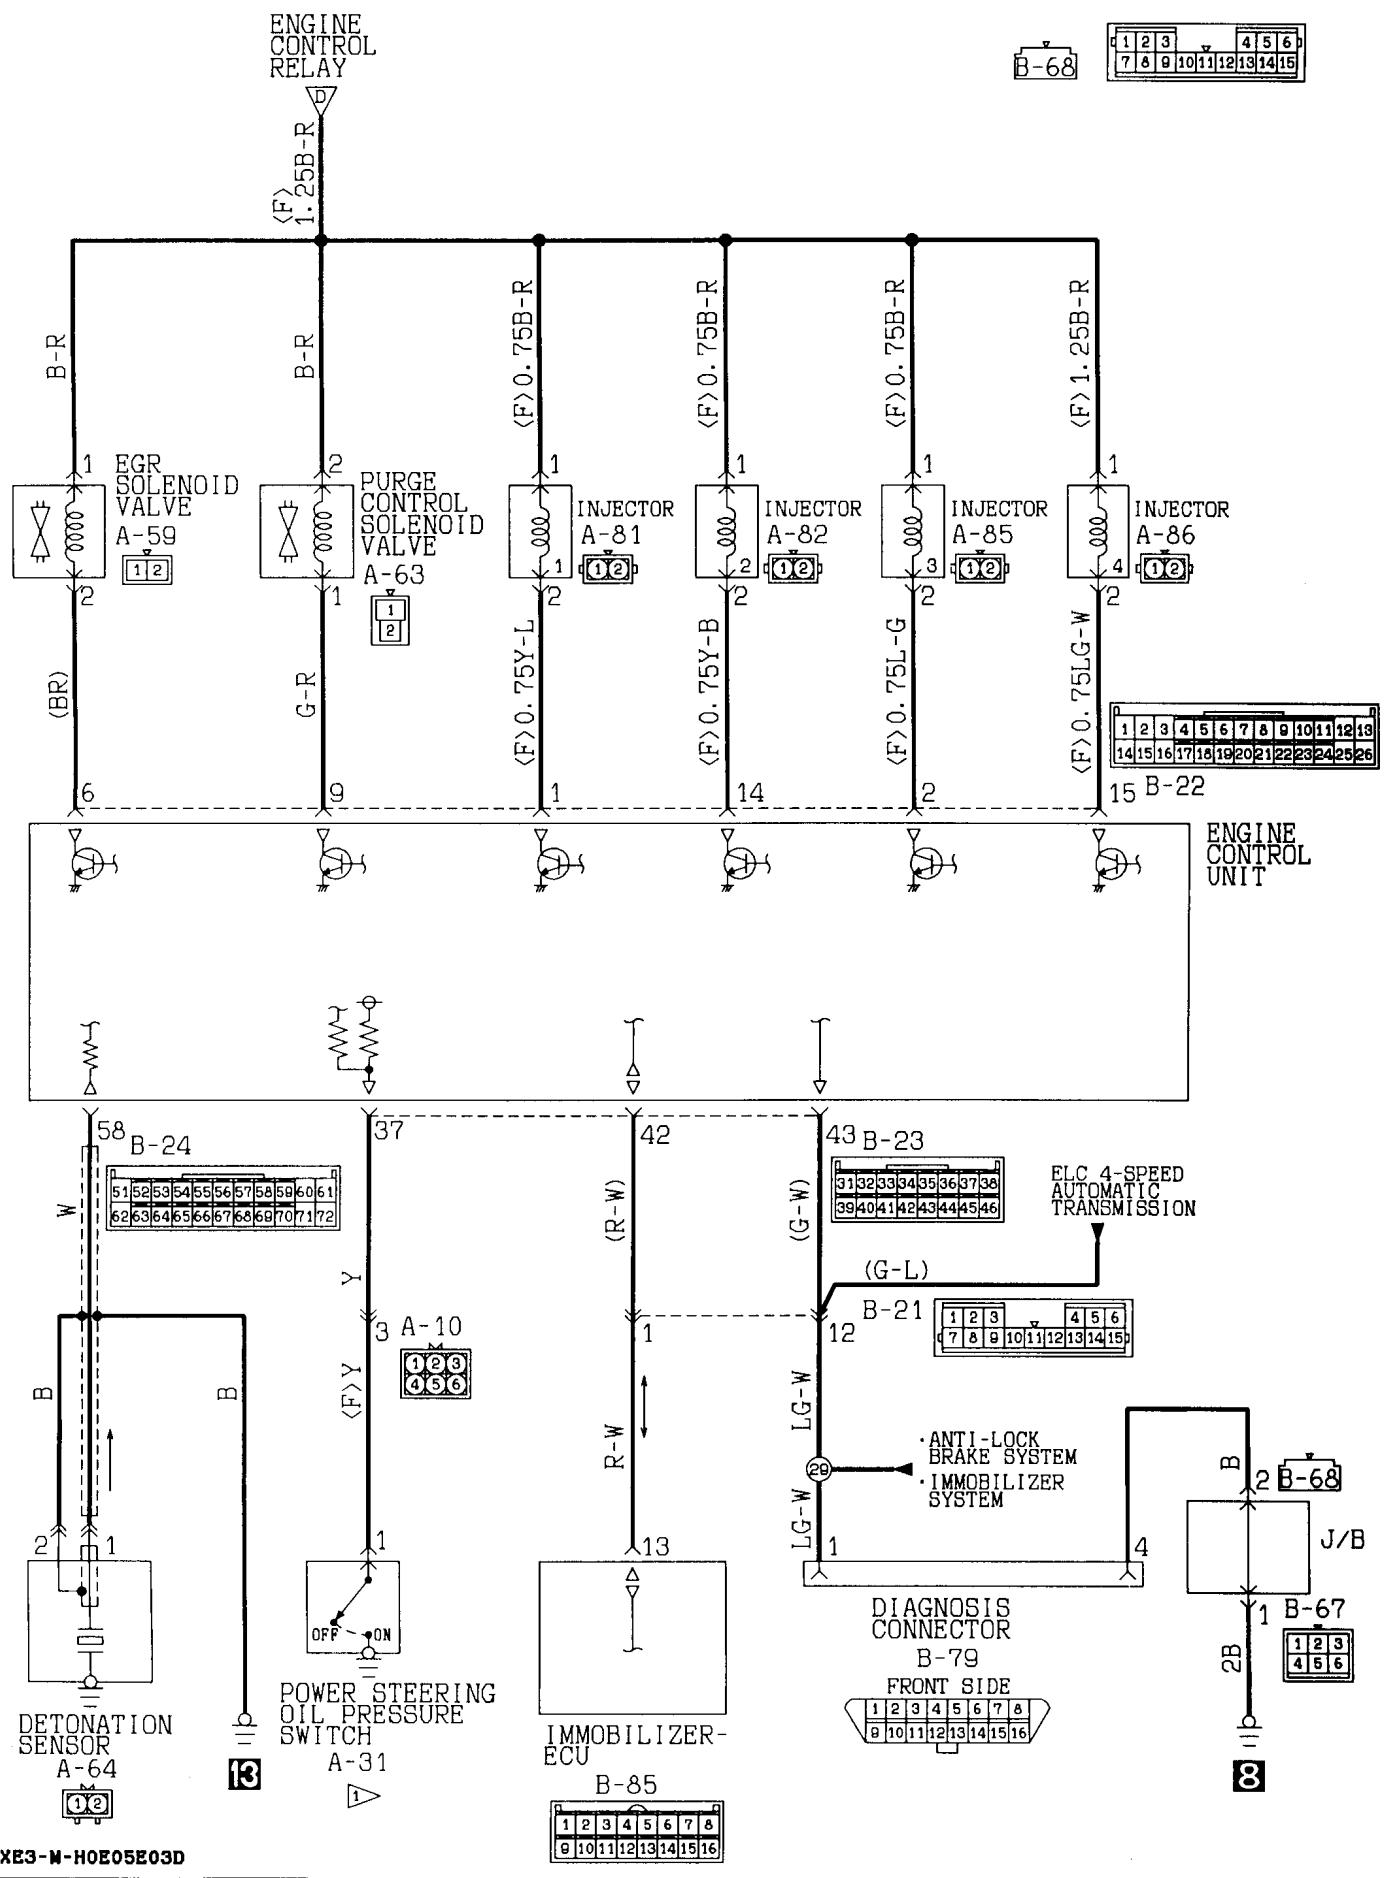

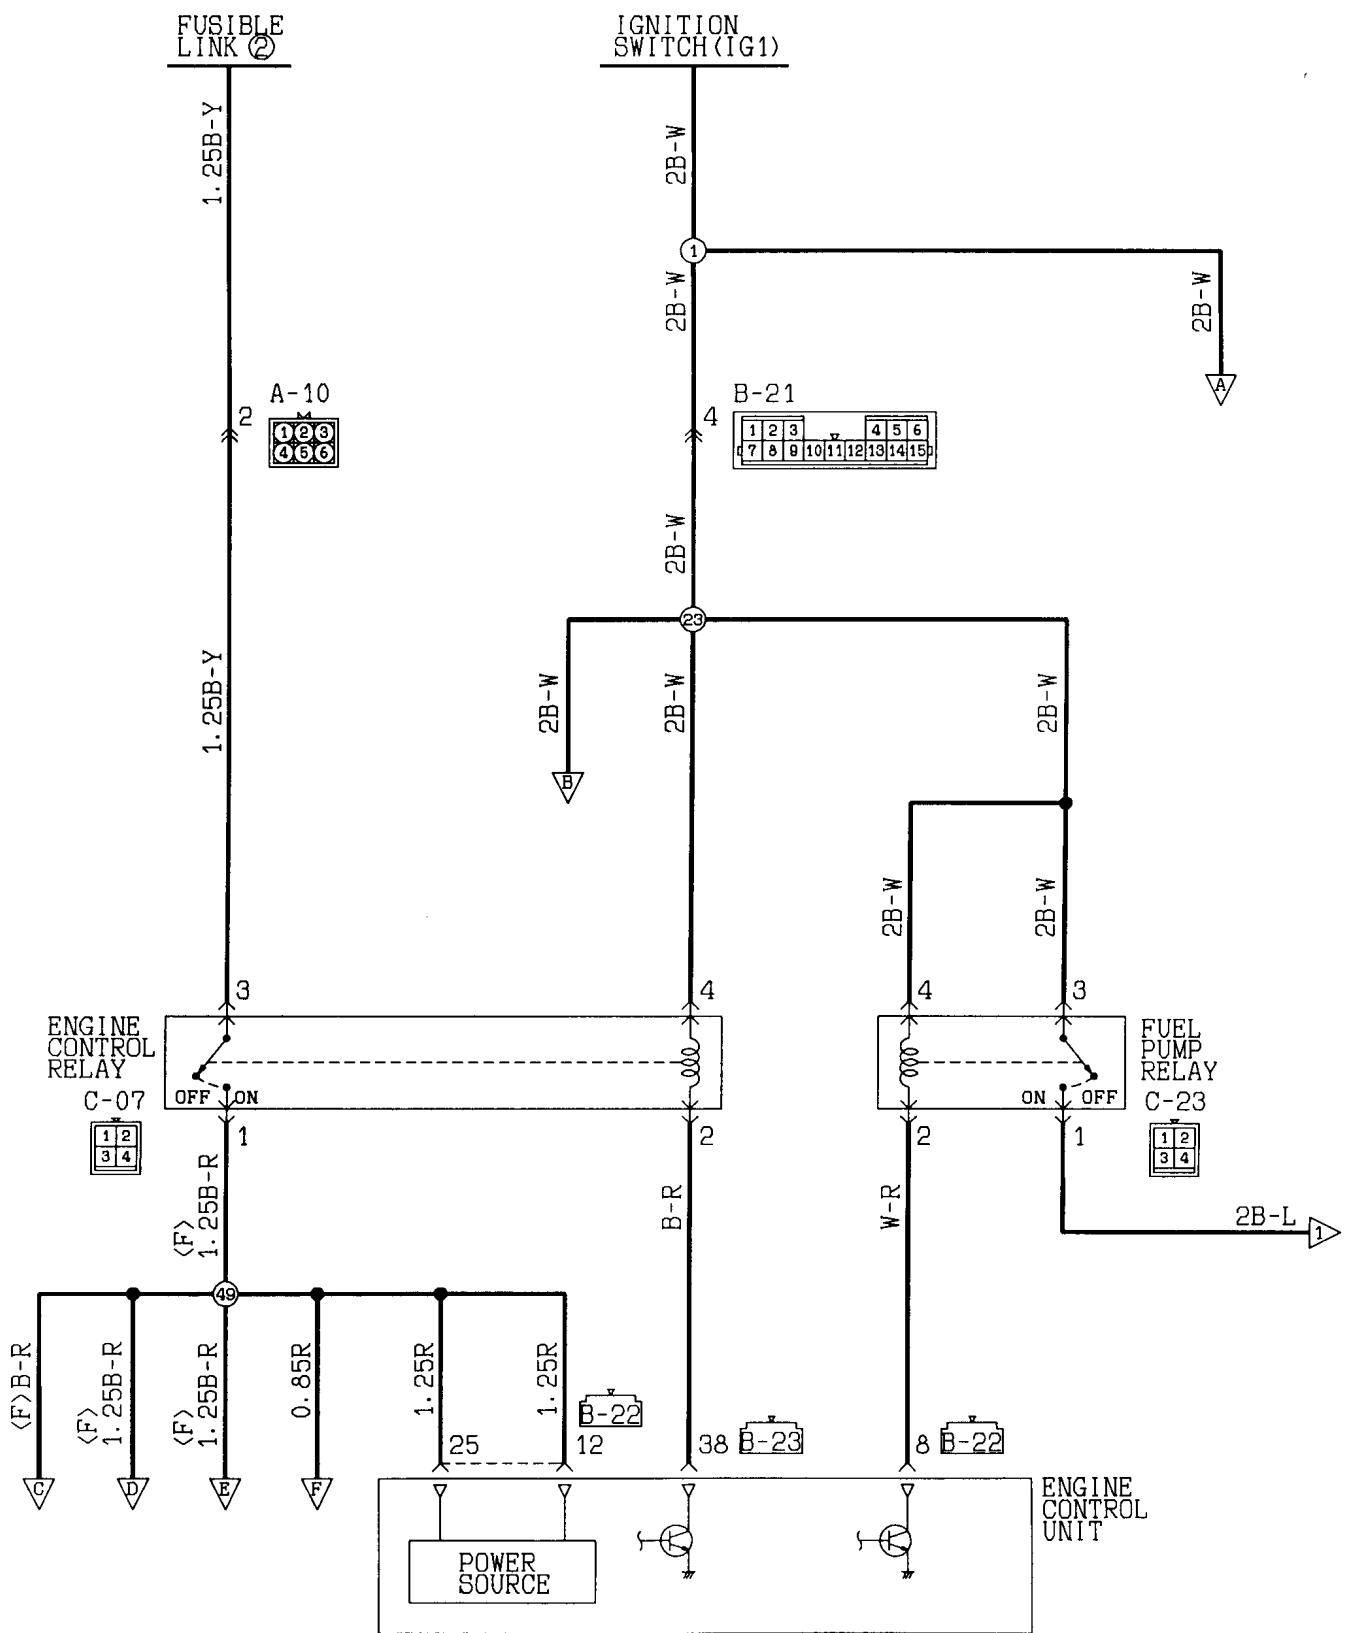
MPI SYSTEM**4G92 <L.H. drive vehicles without immobilizer system>**

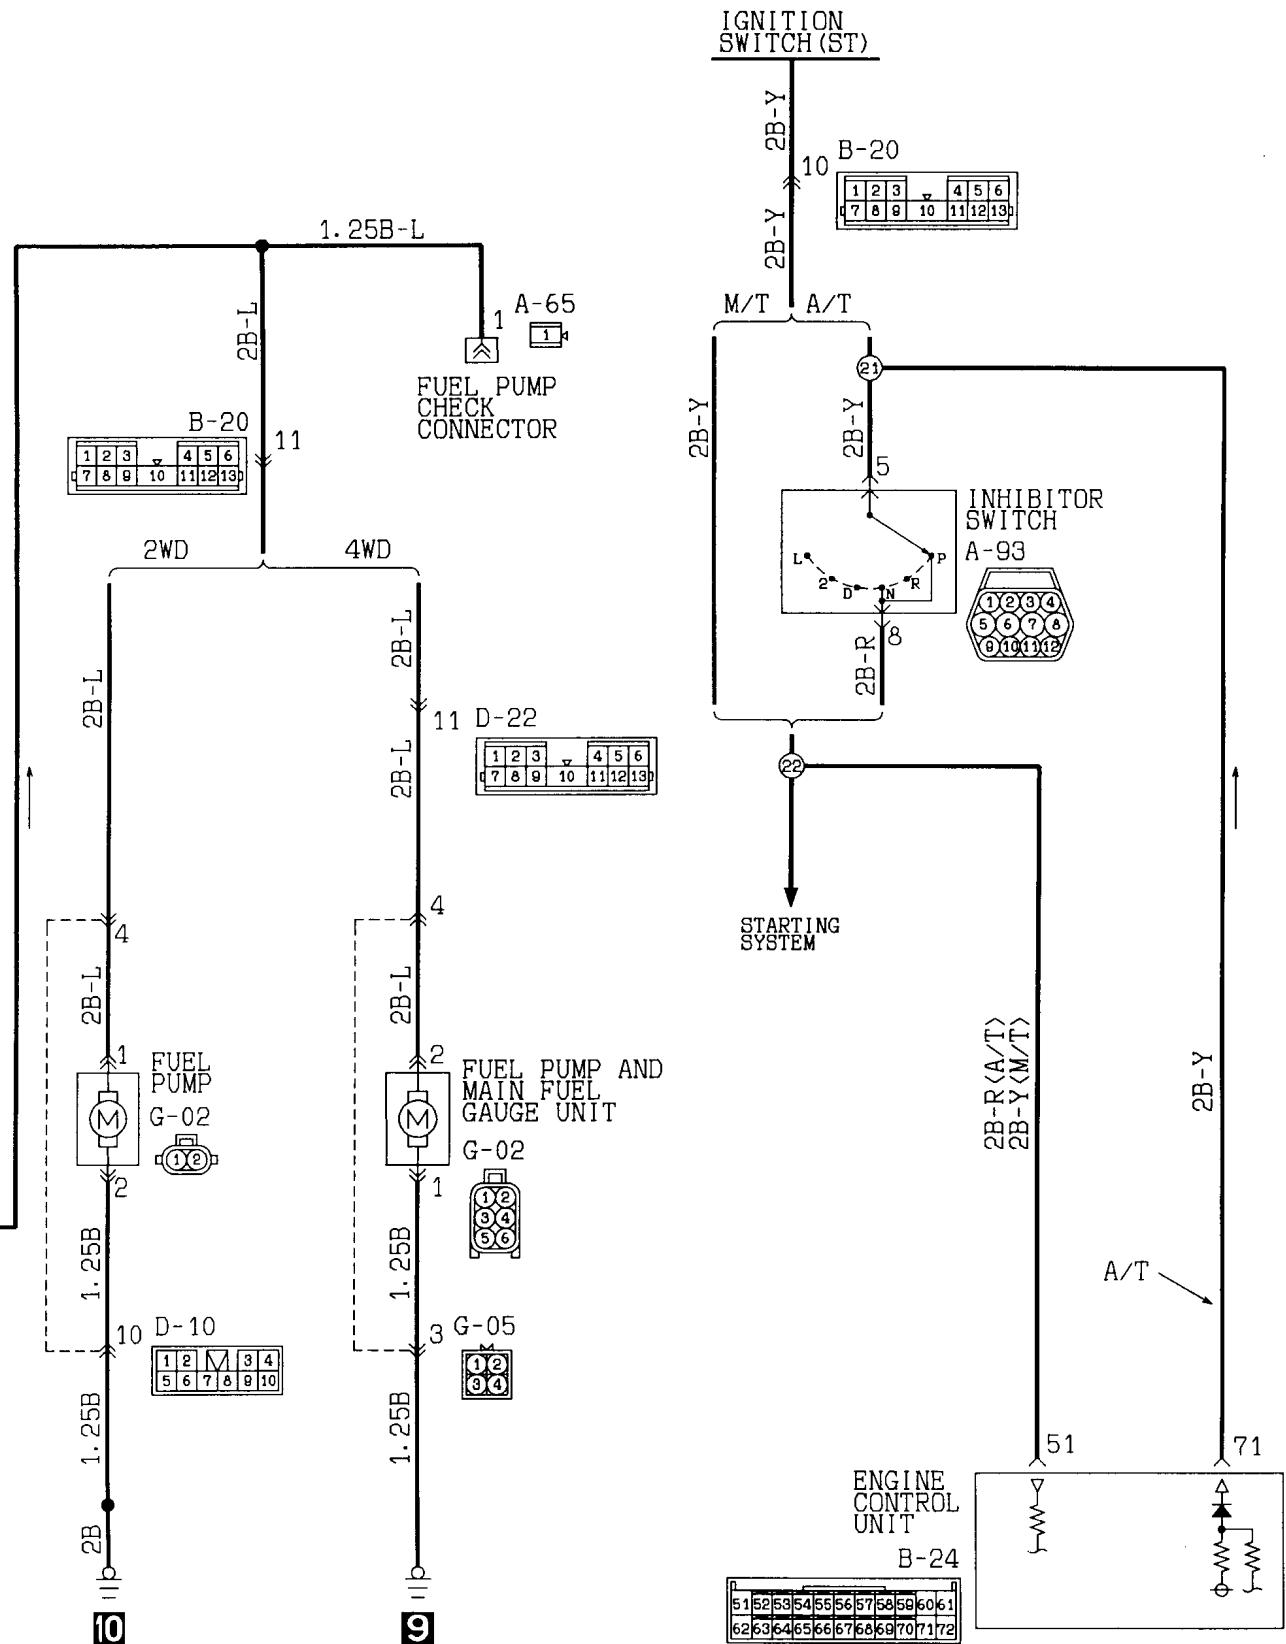



Wire colour code
B:Black L:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

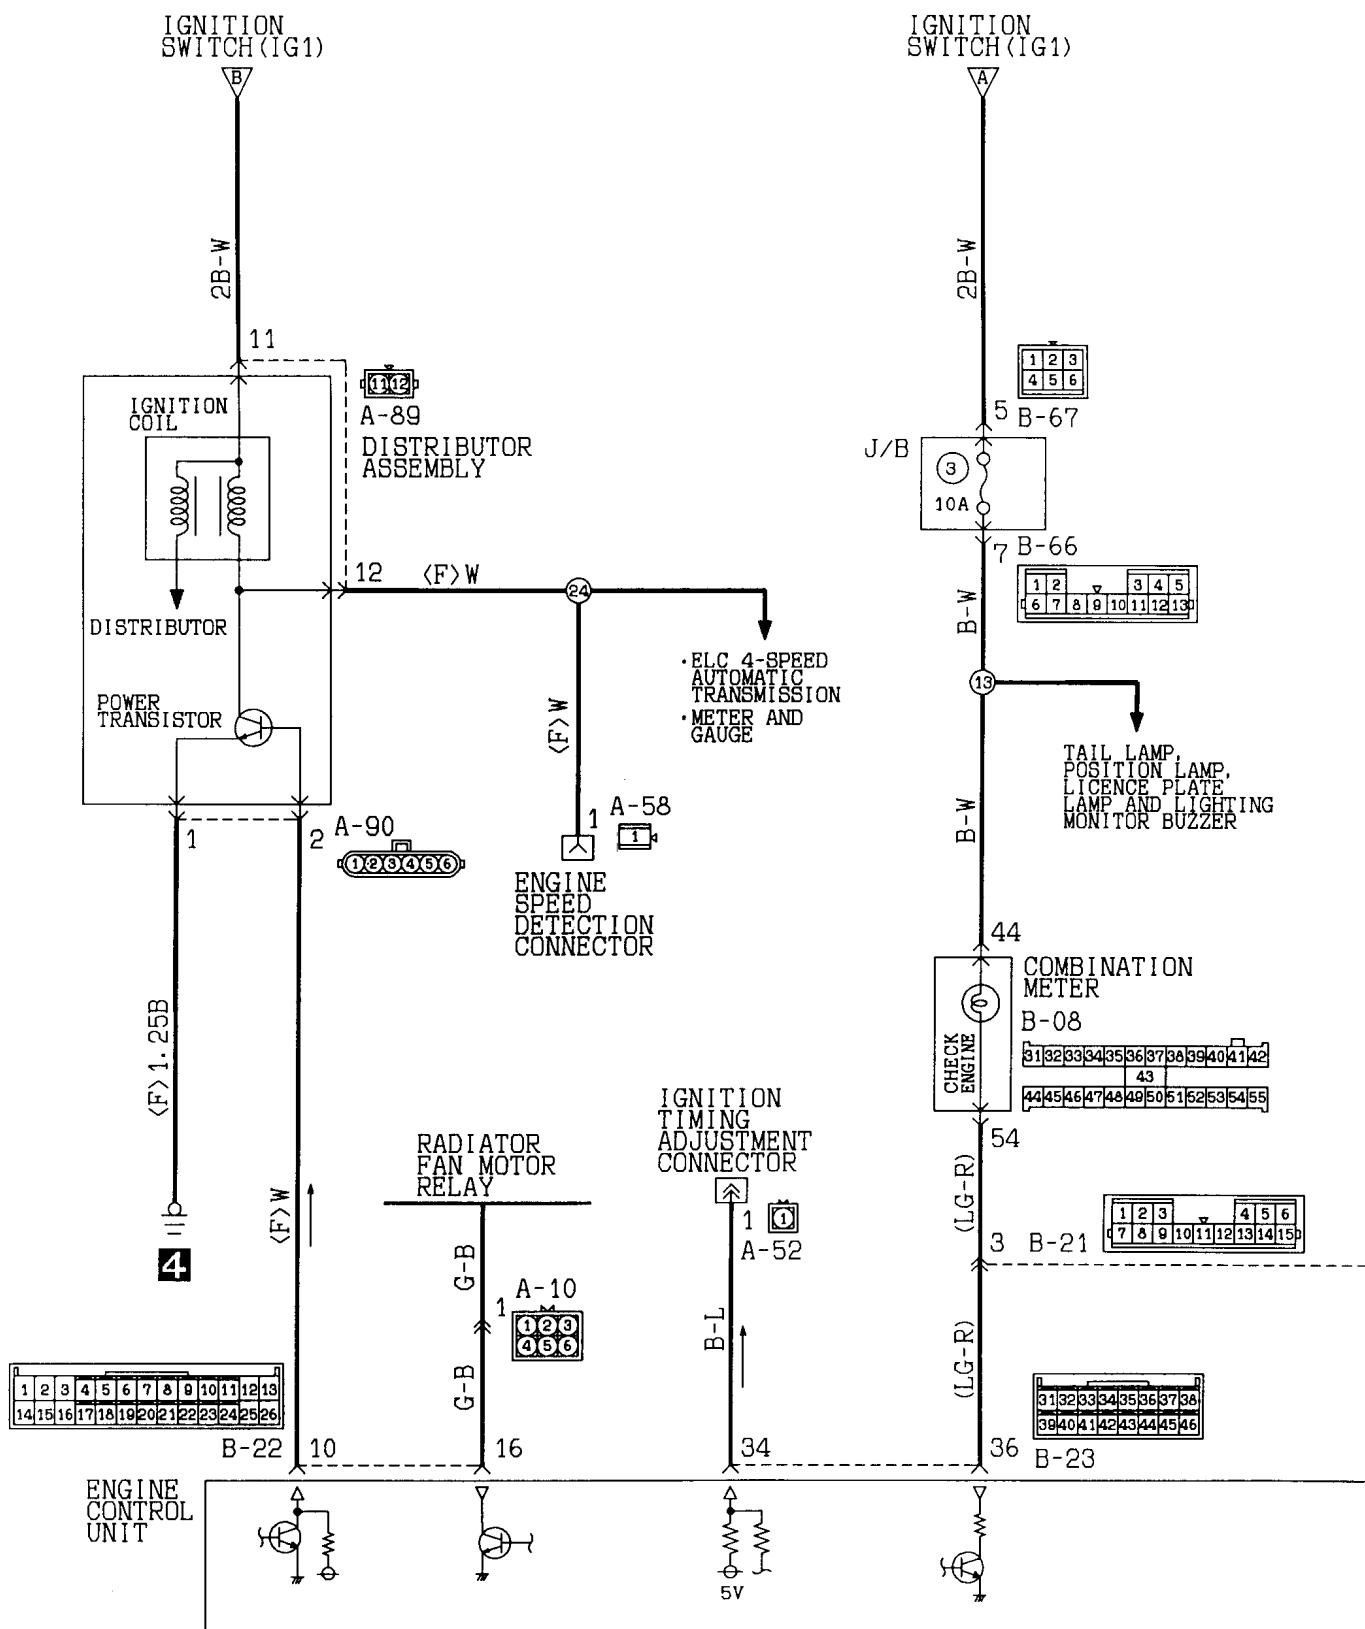


Wire colour code
B:Black L:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

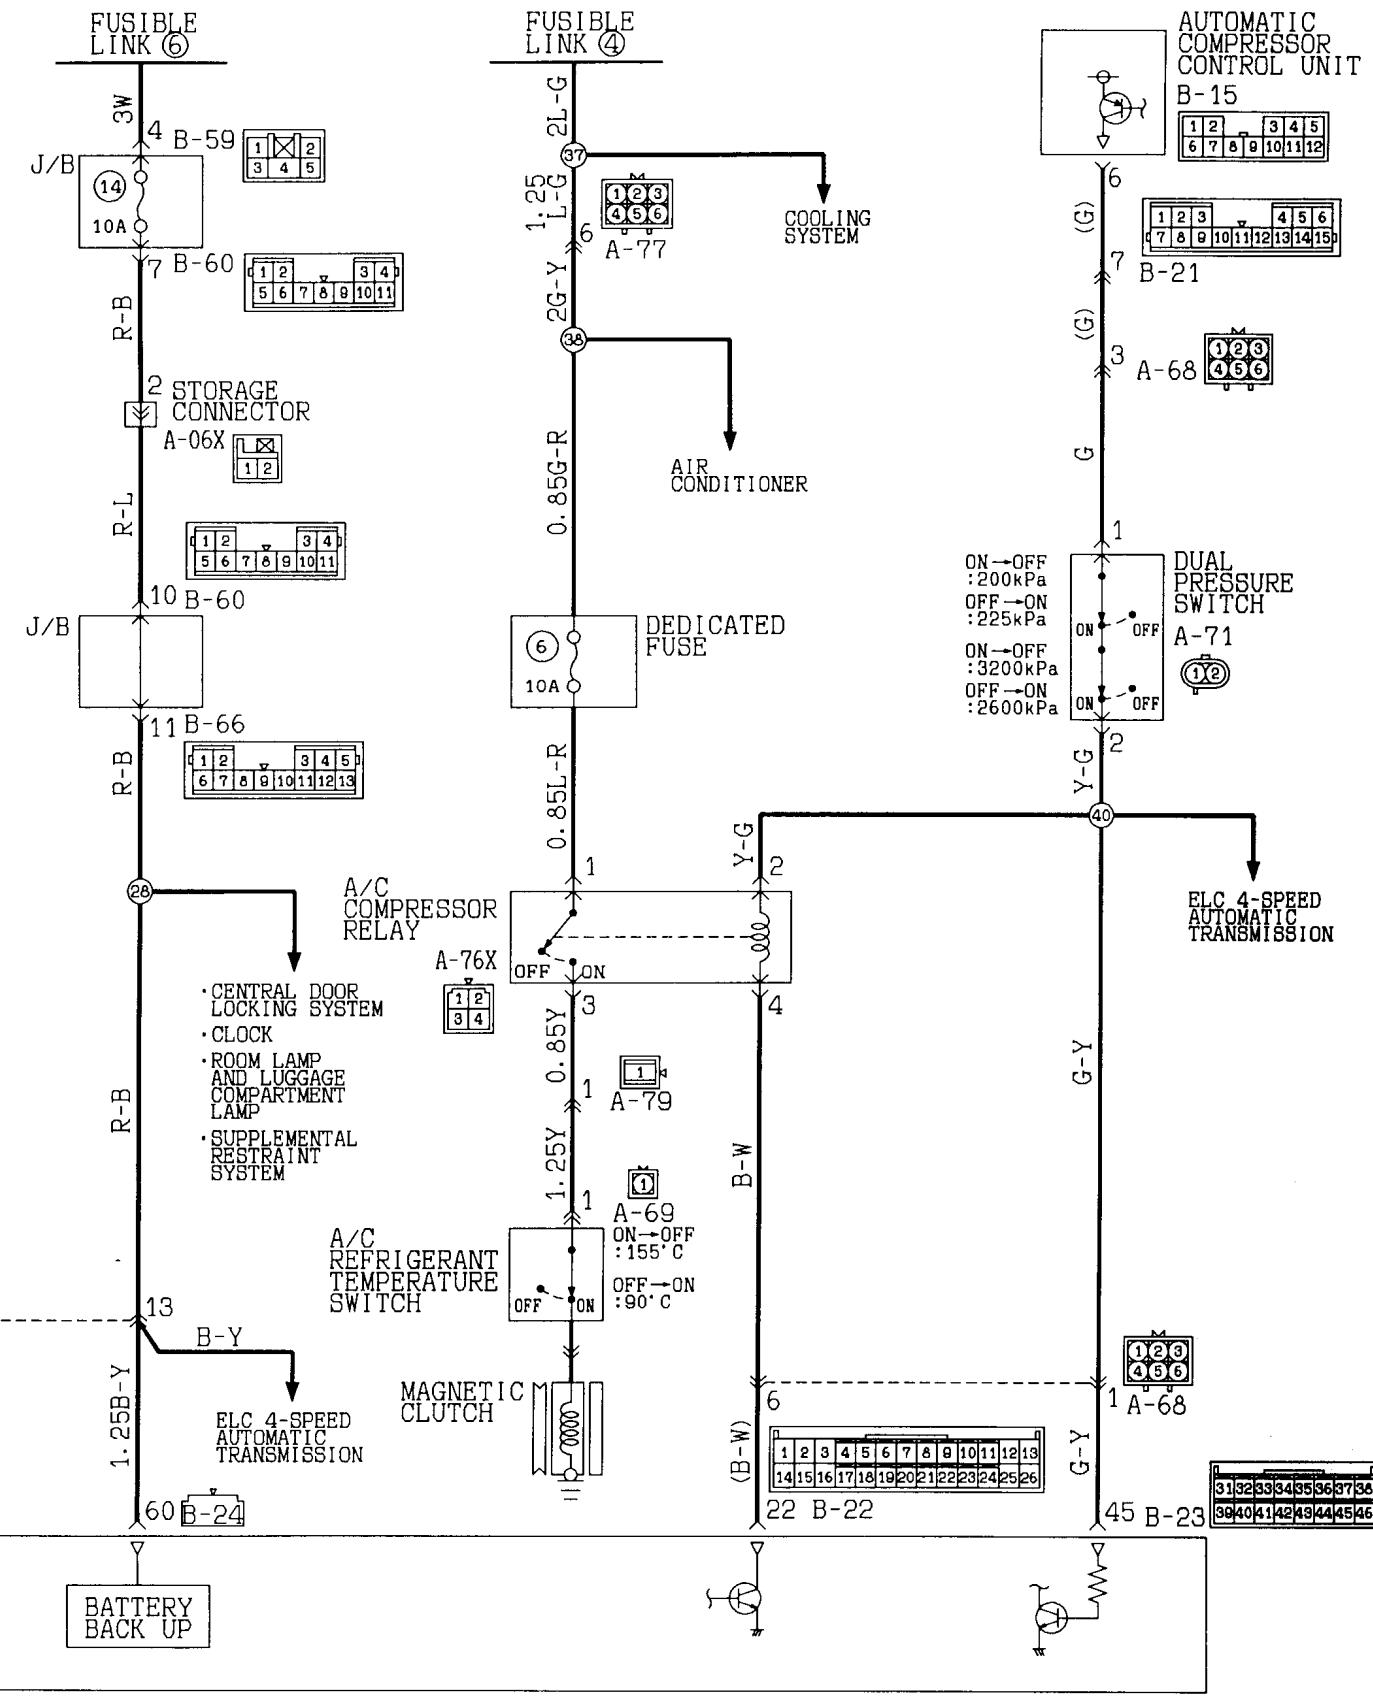


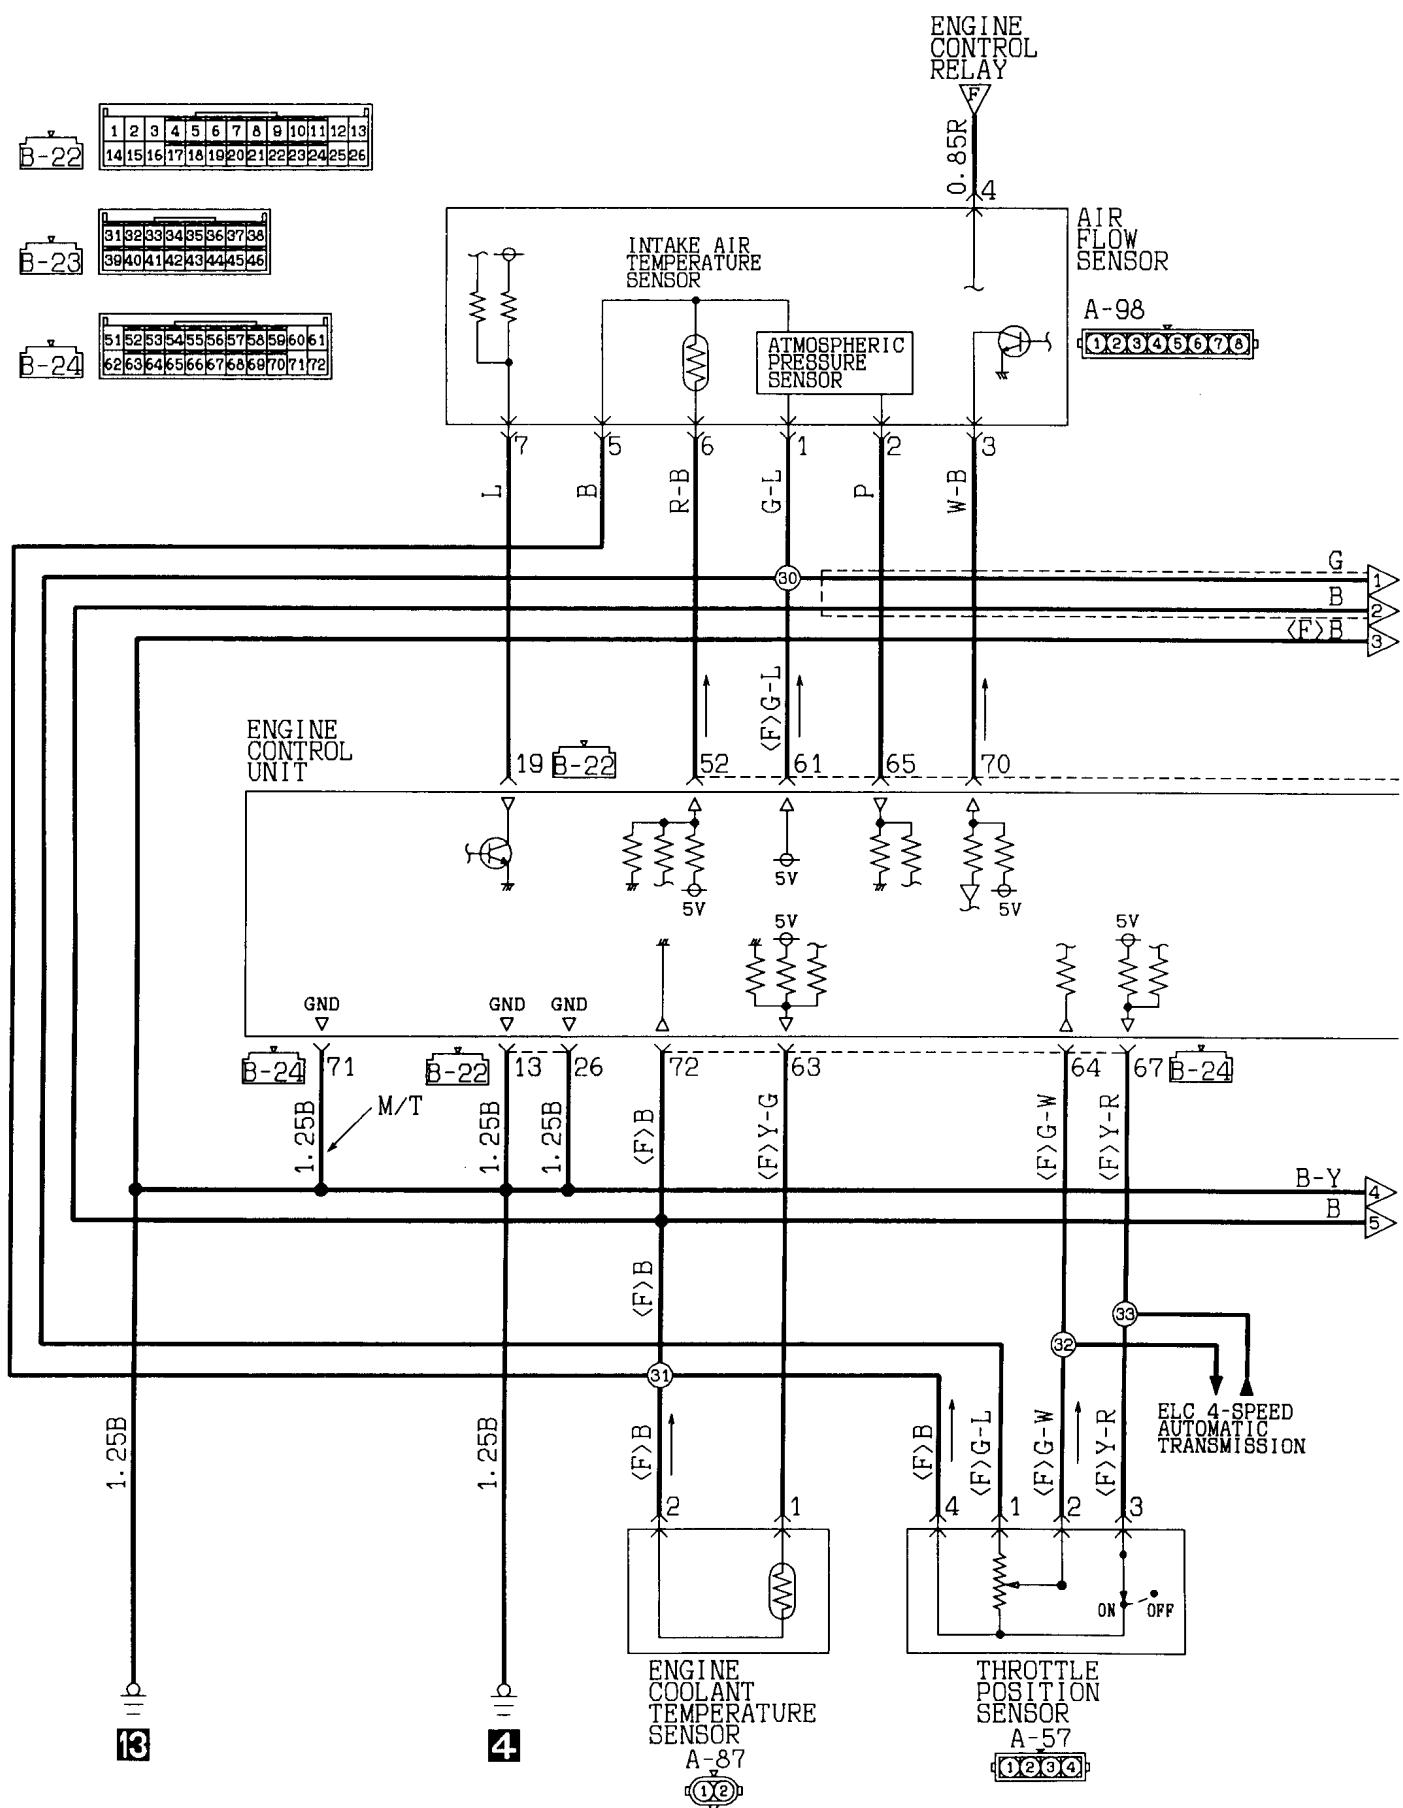


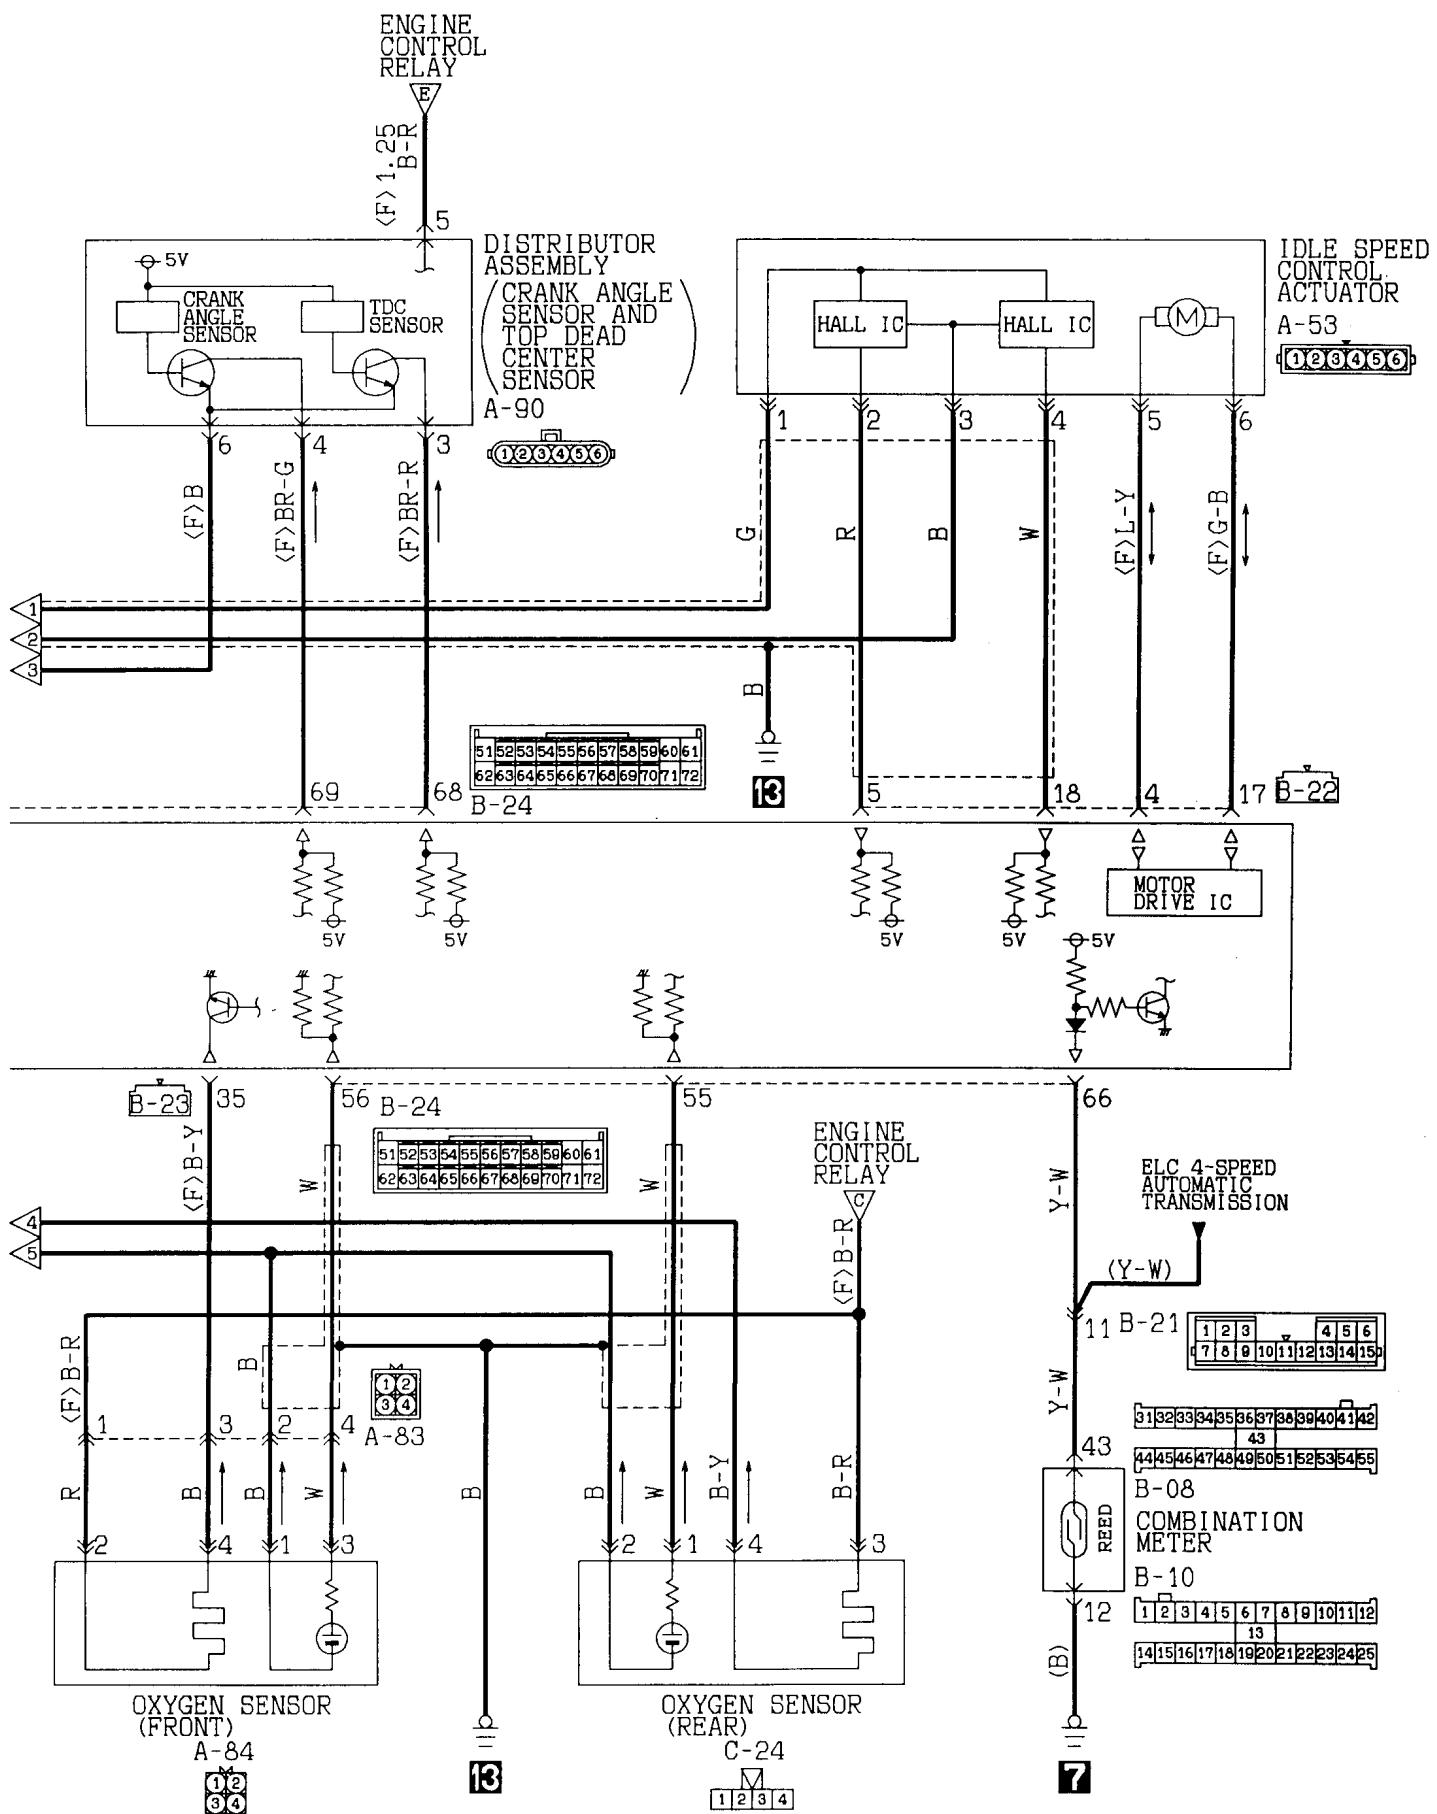



Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown GR:Gray R:Red P:Pink V:Violet

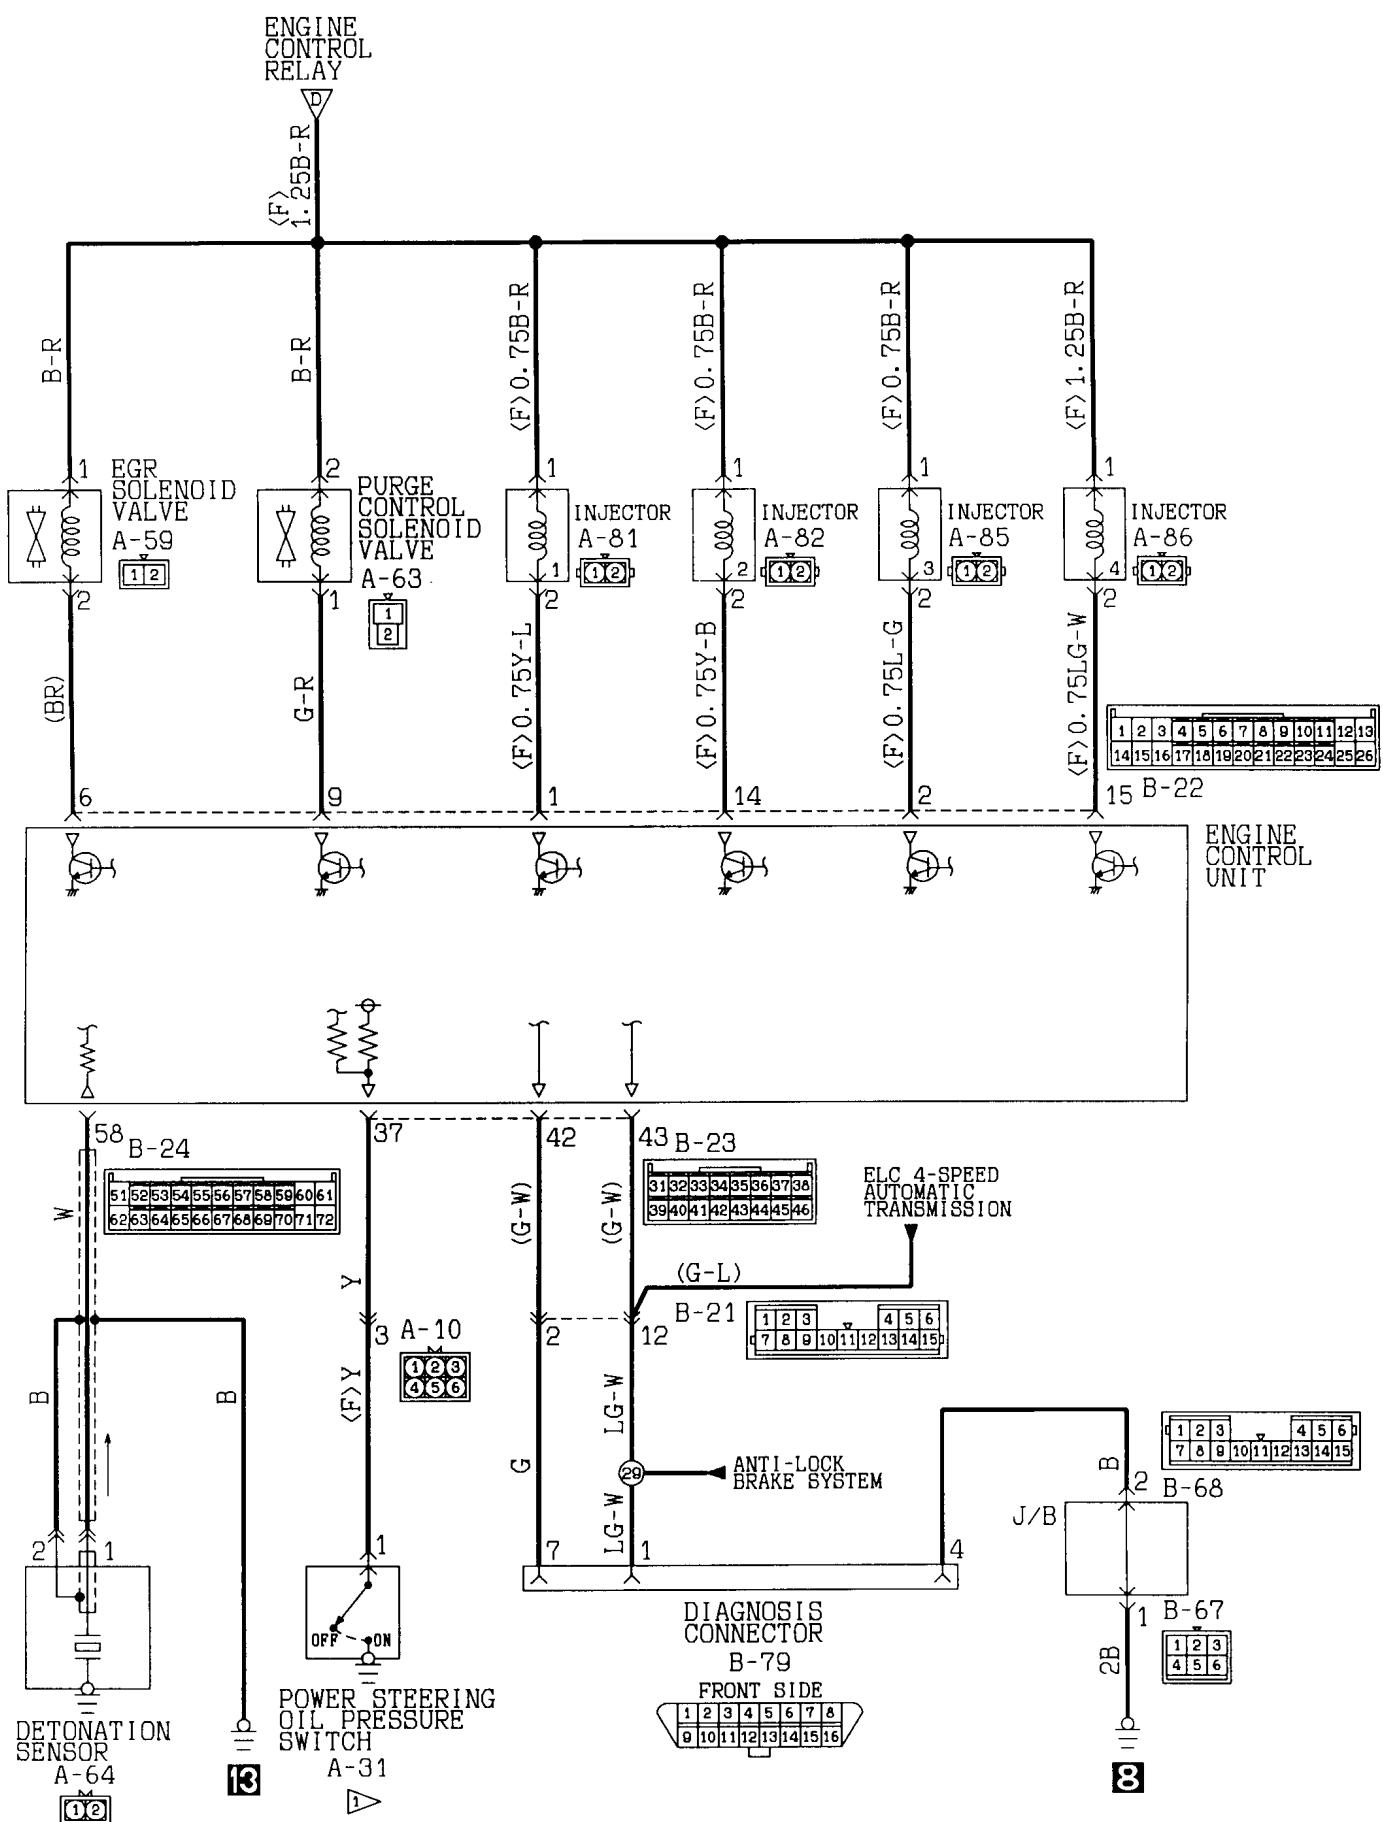


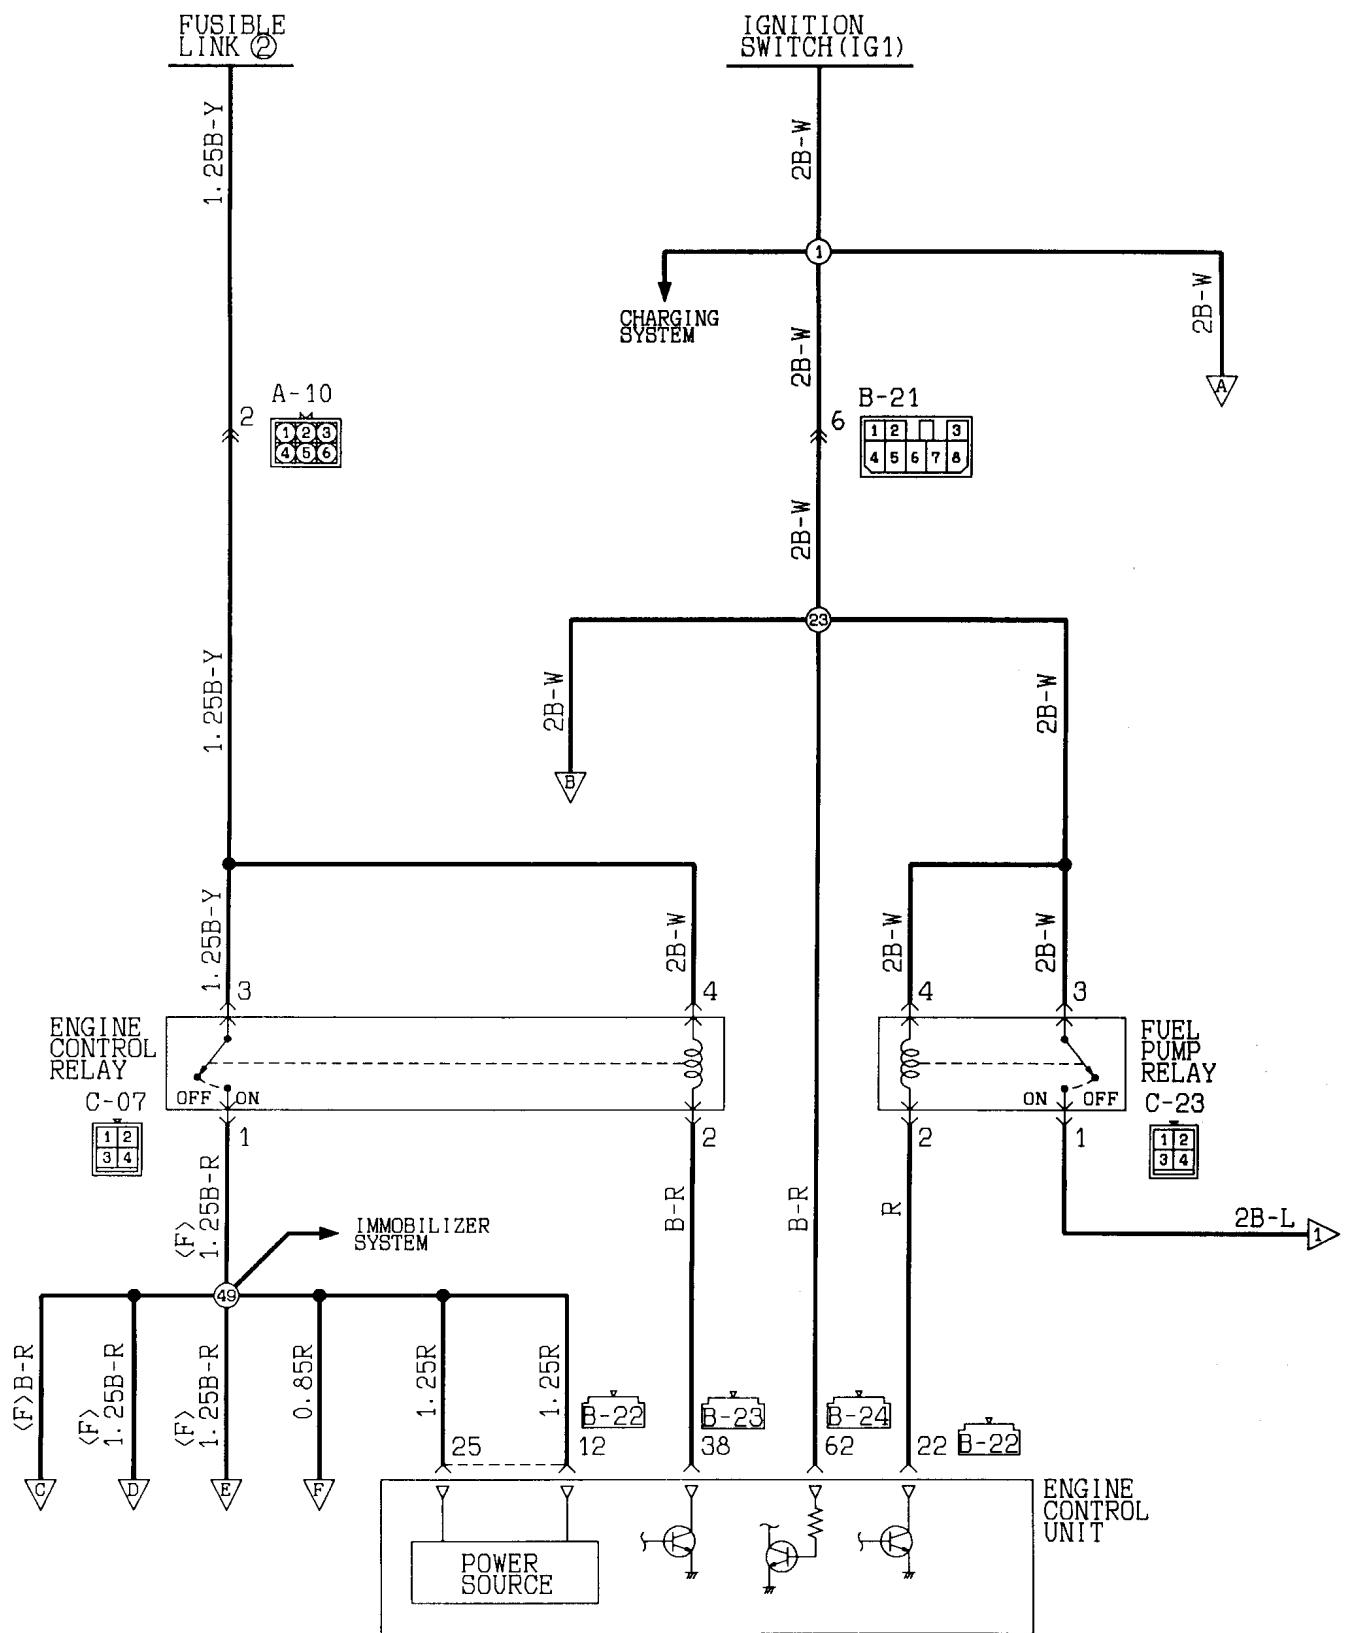
MPI SYSTEM
4G92 < R.H. drive vehicles >

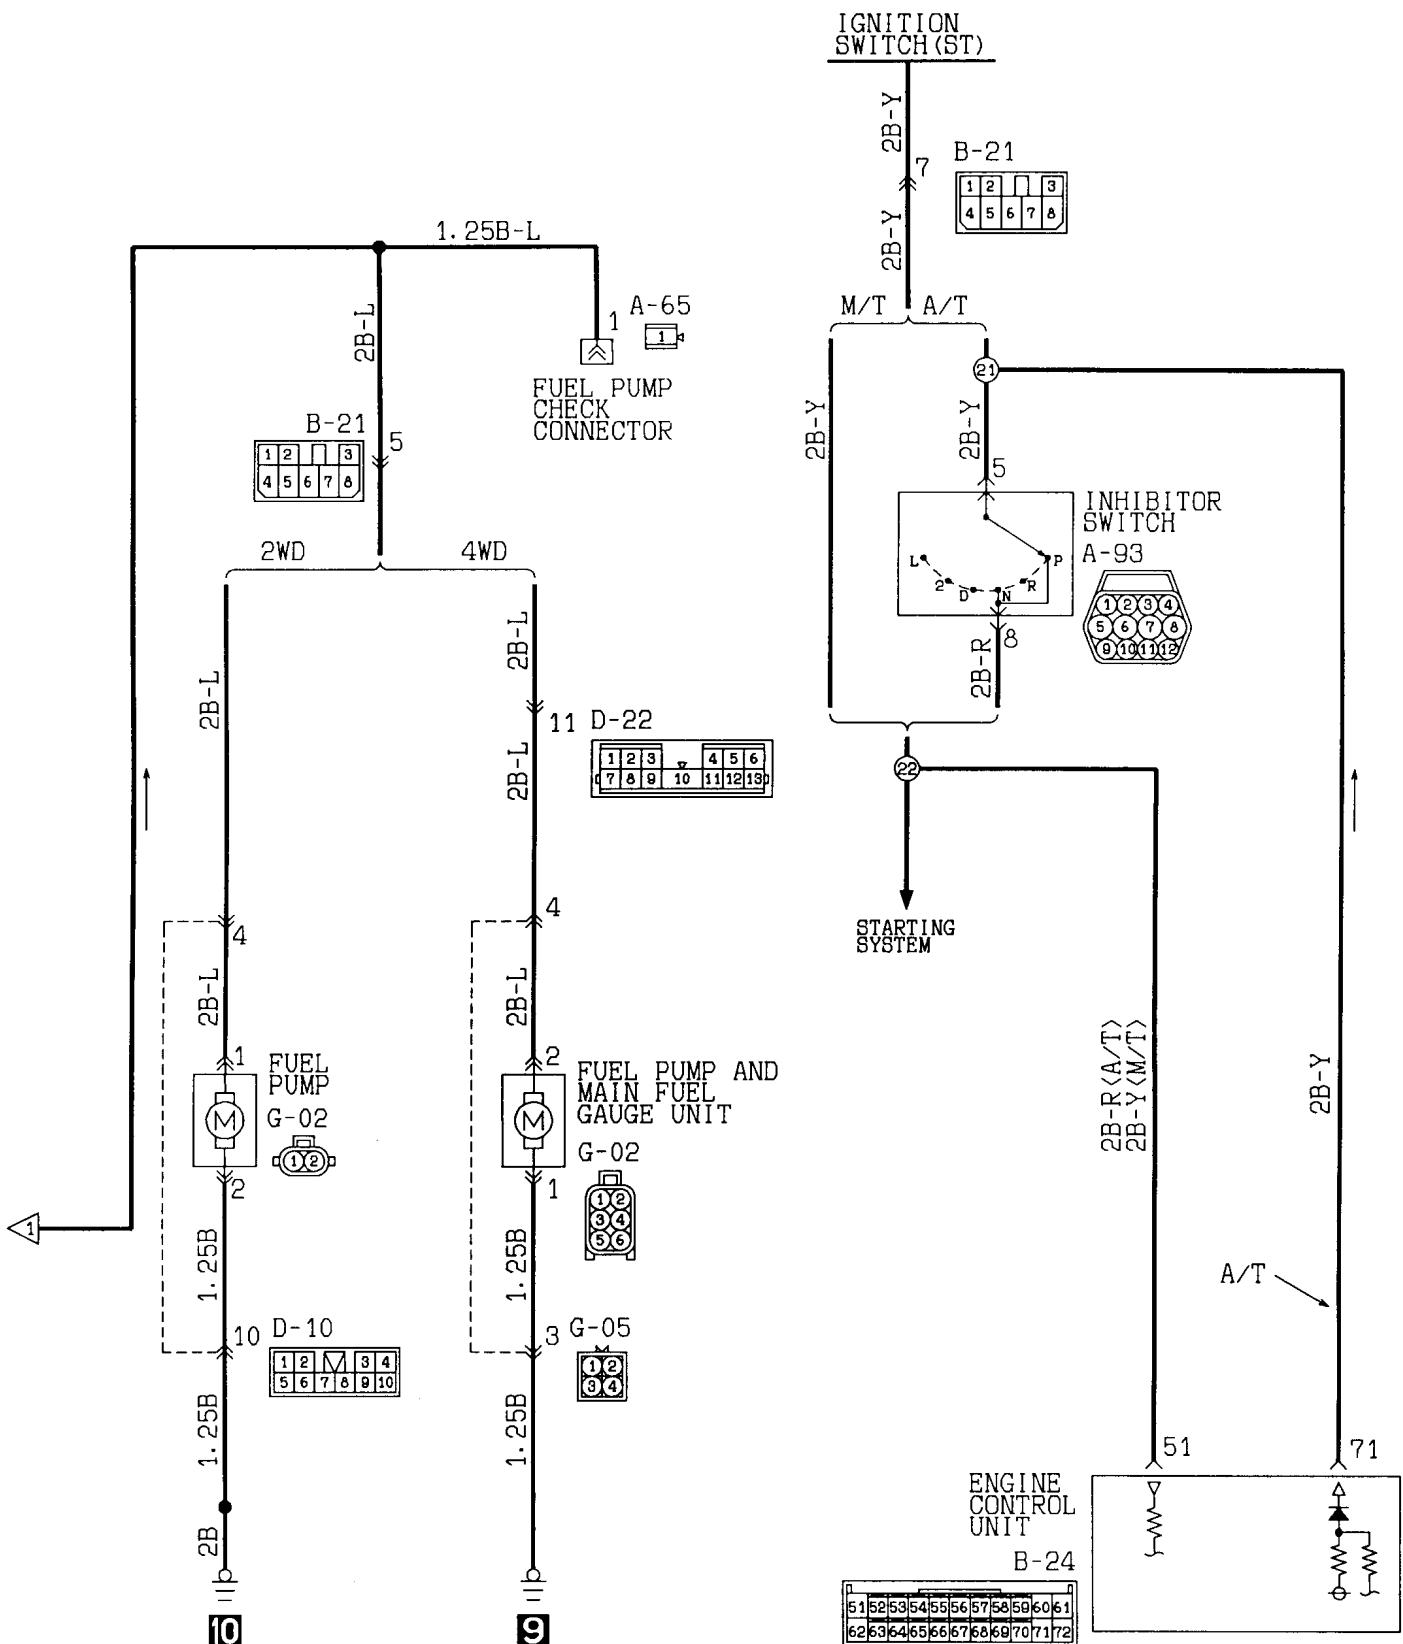

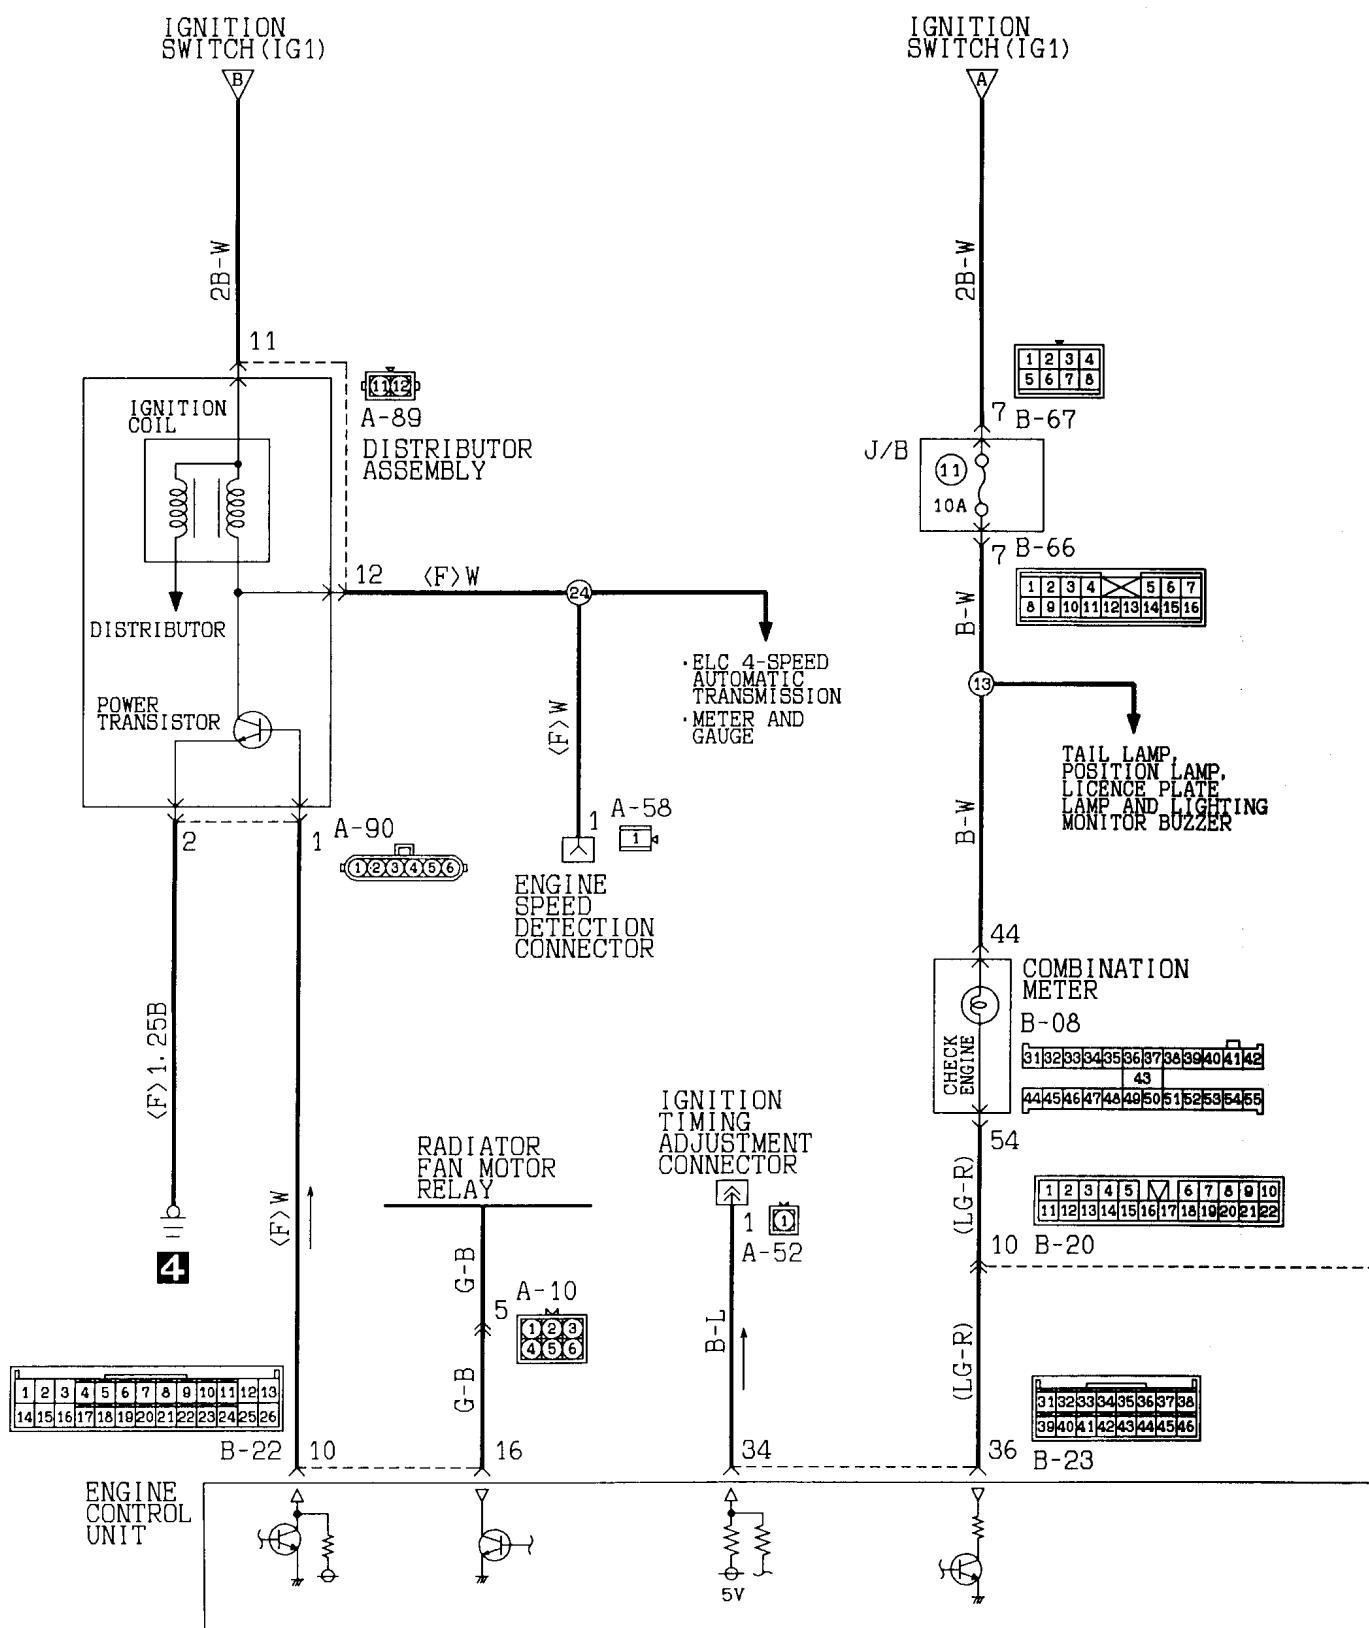

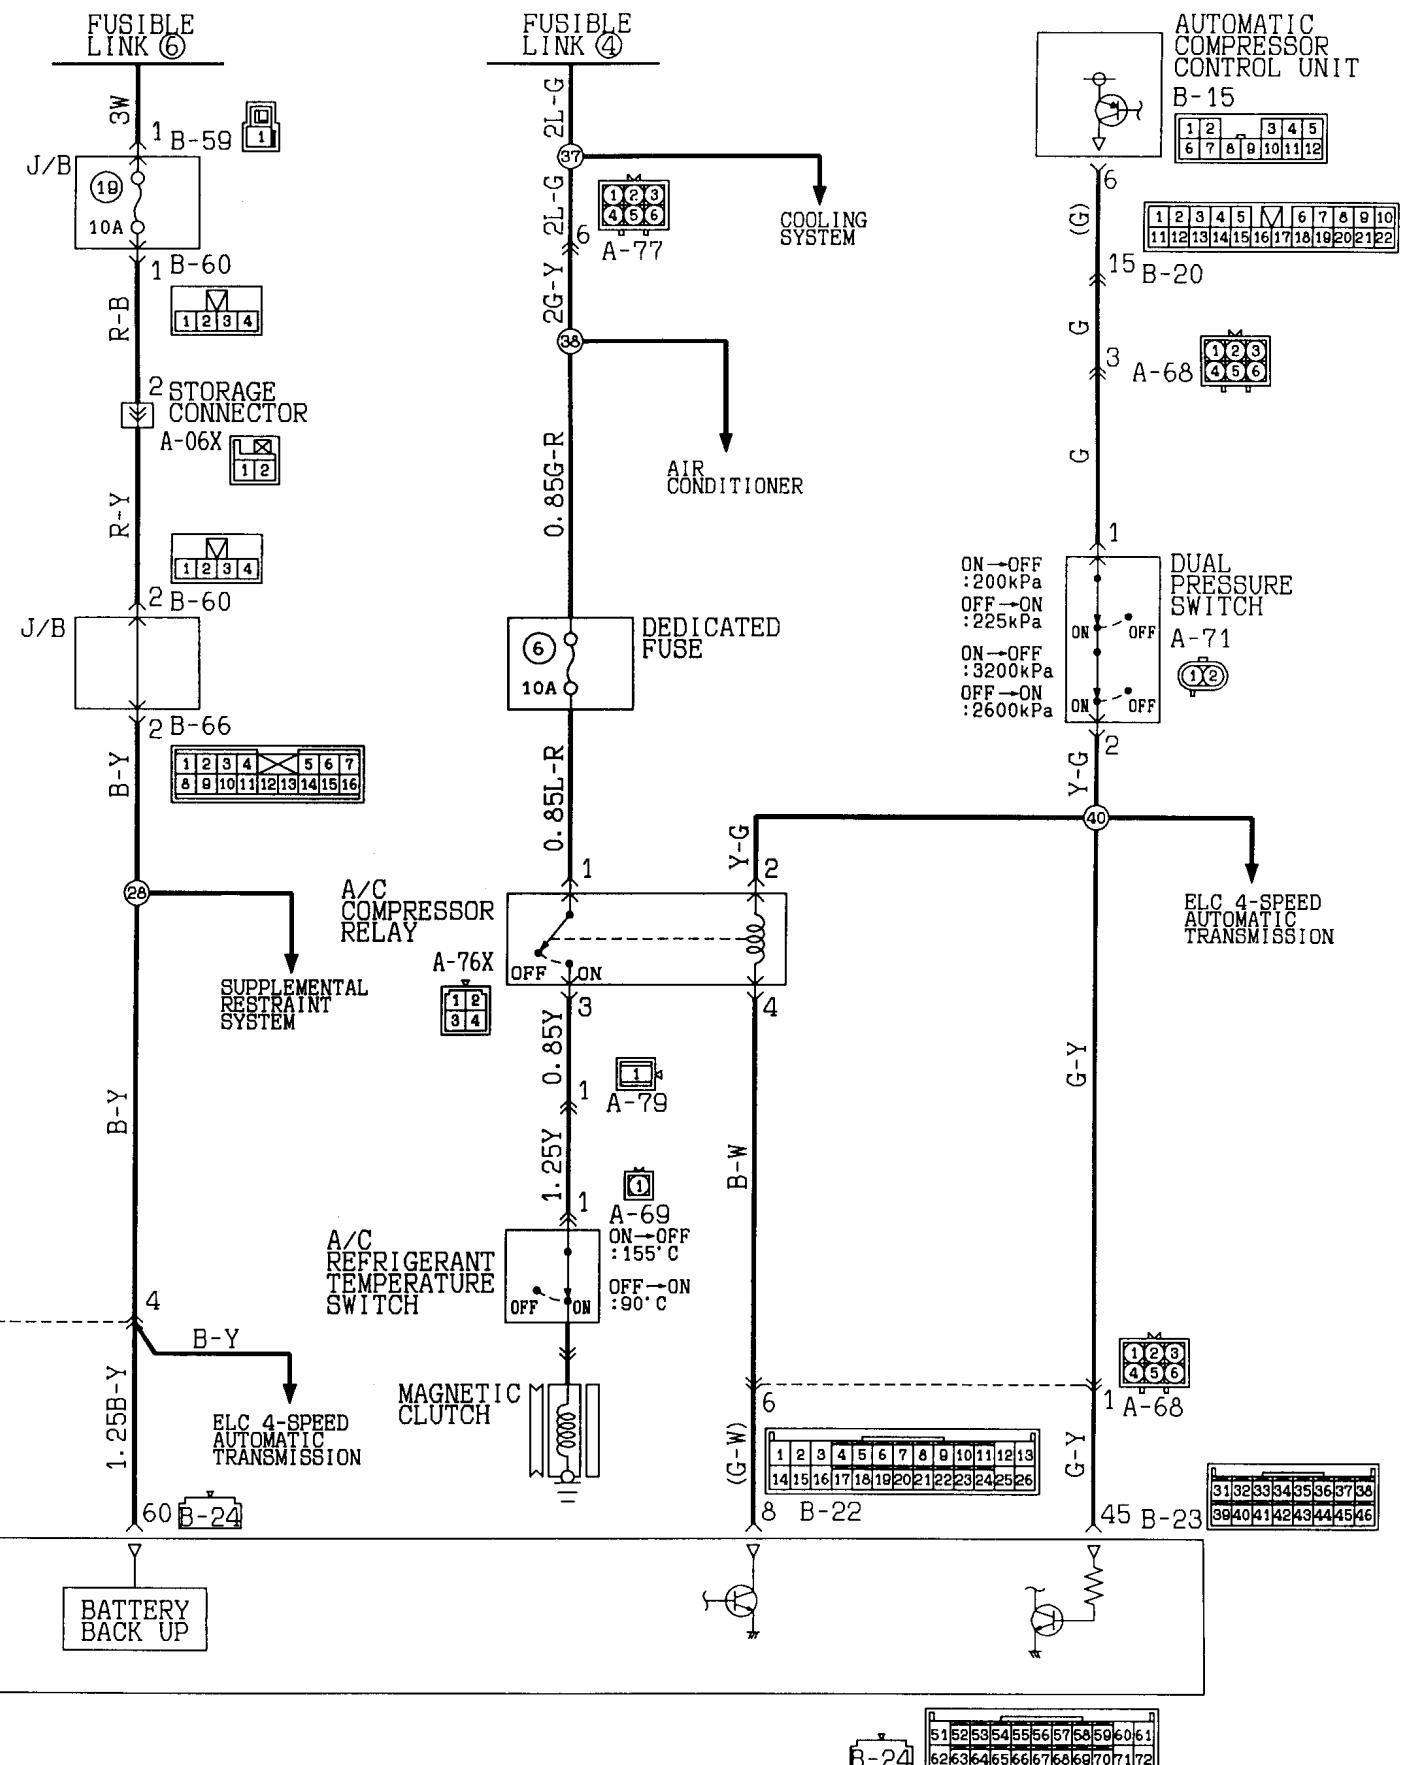

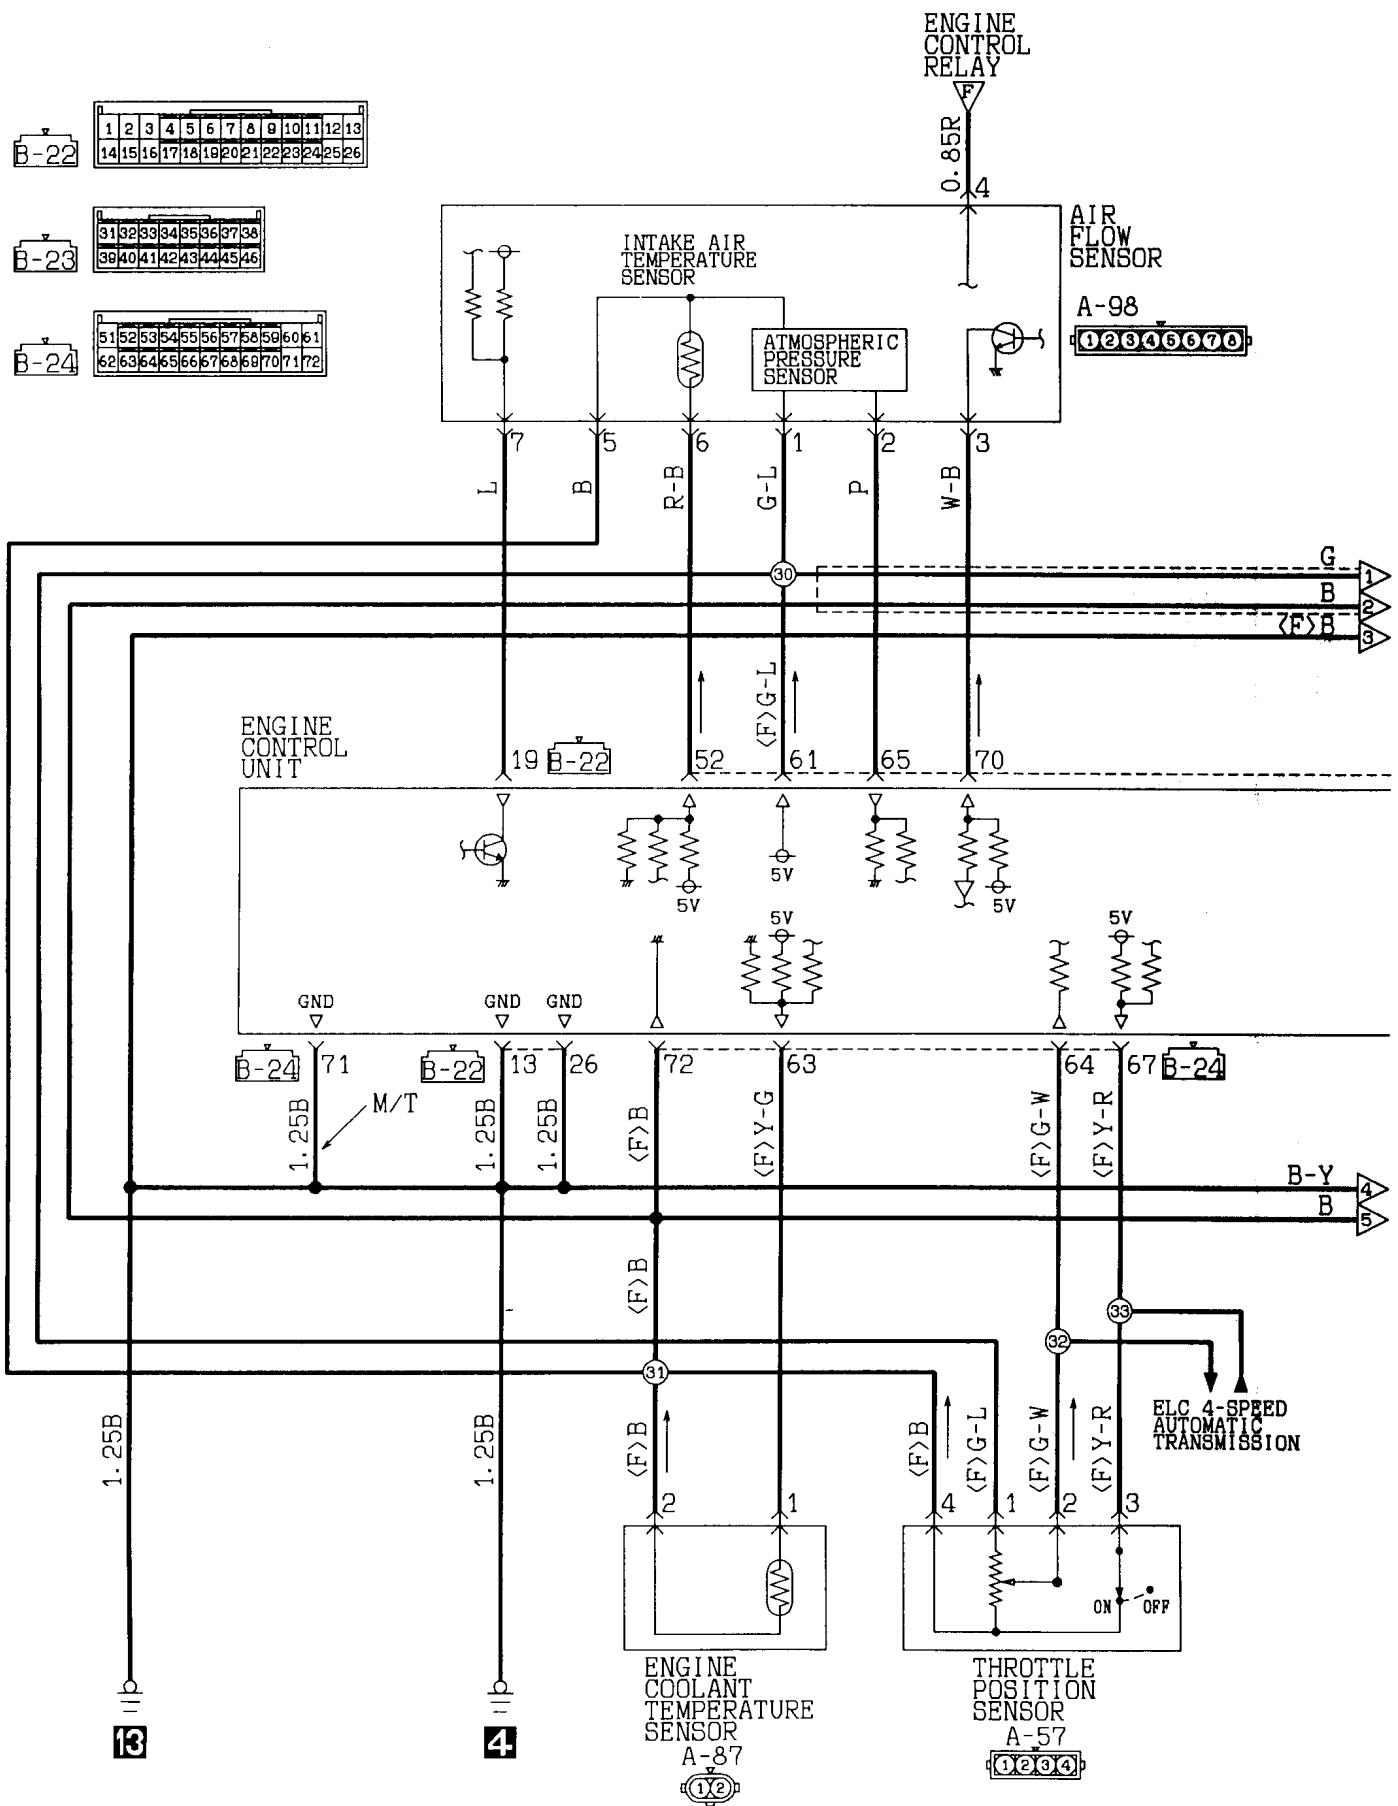

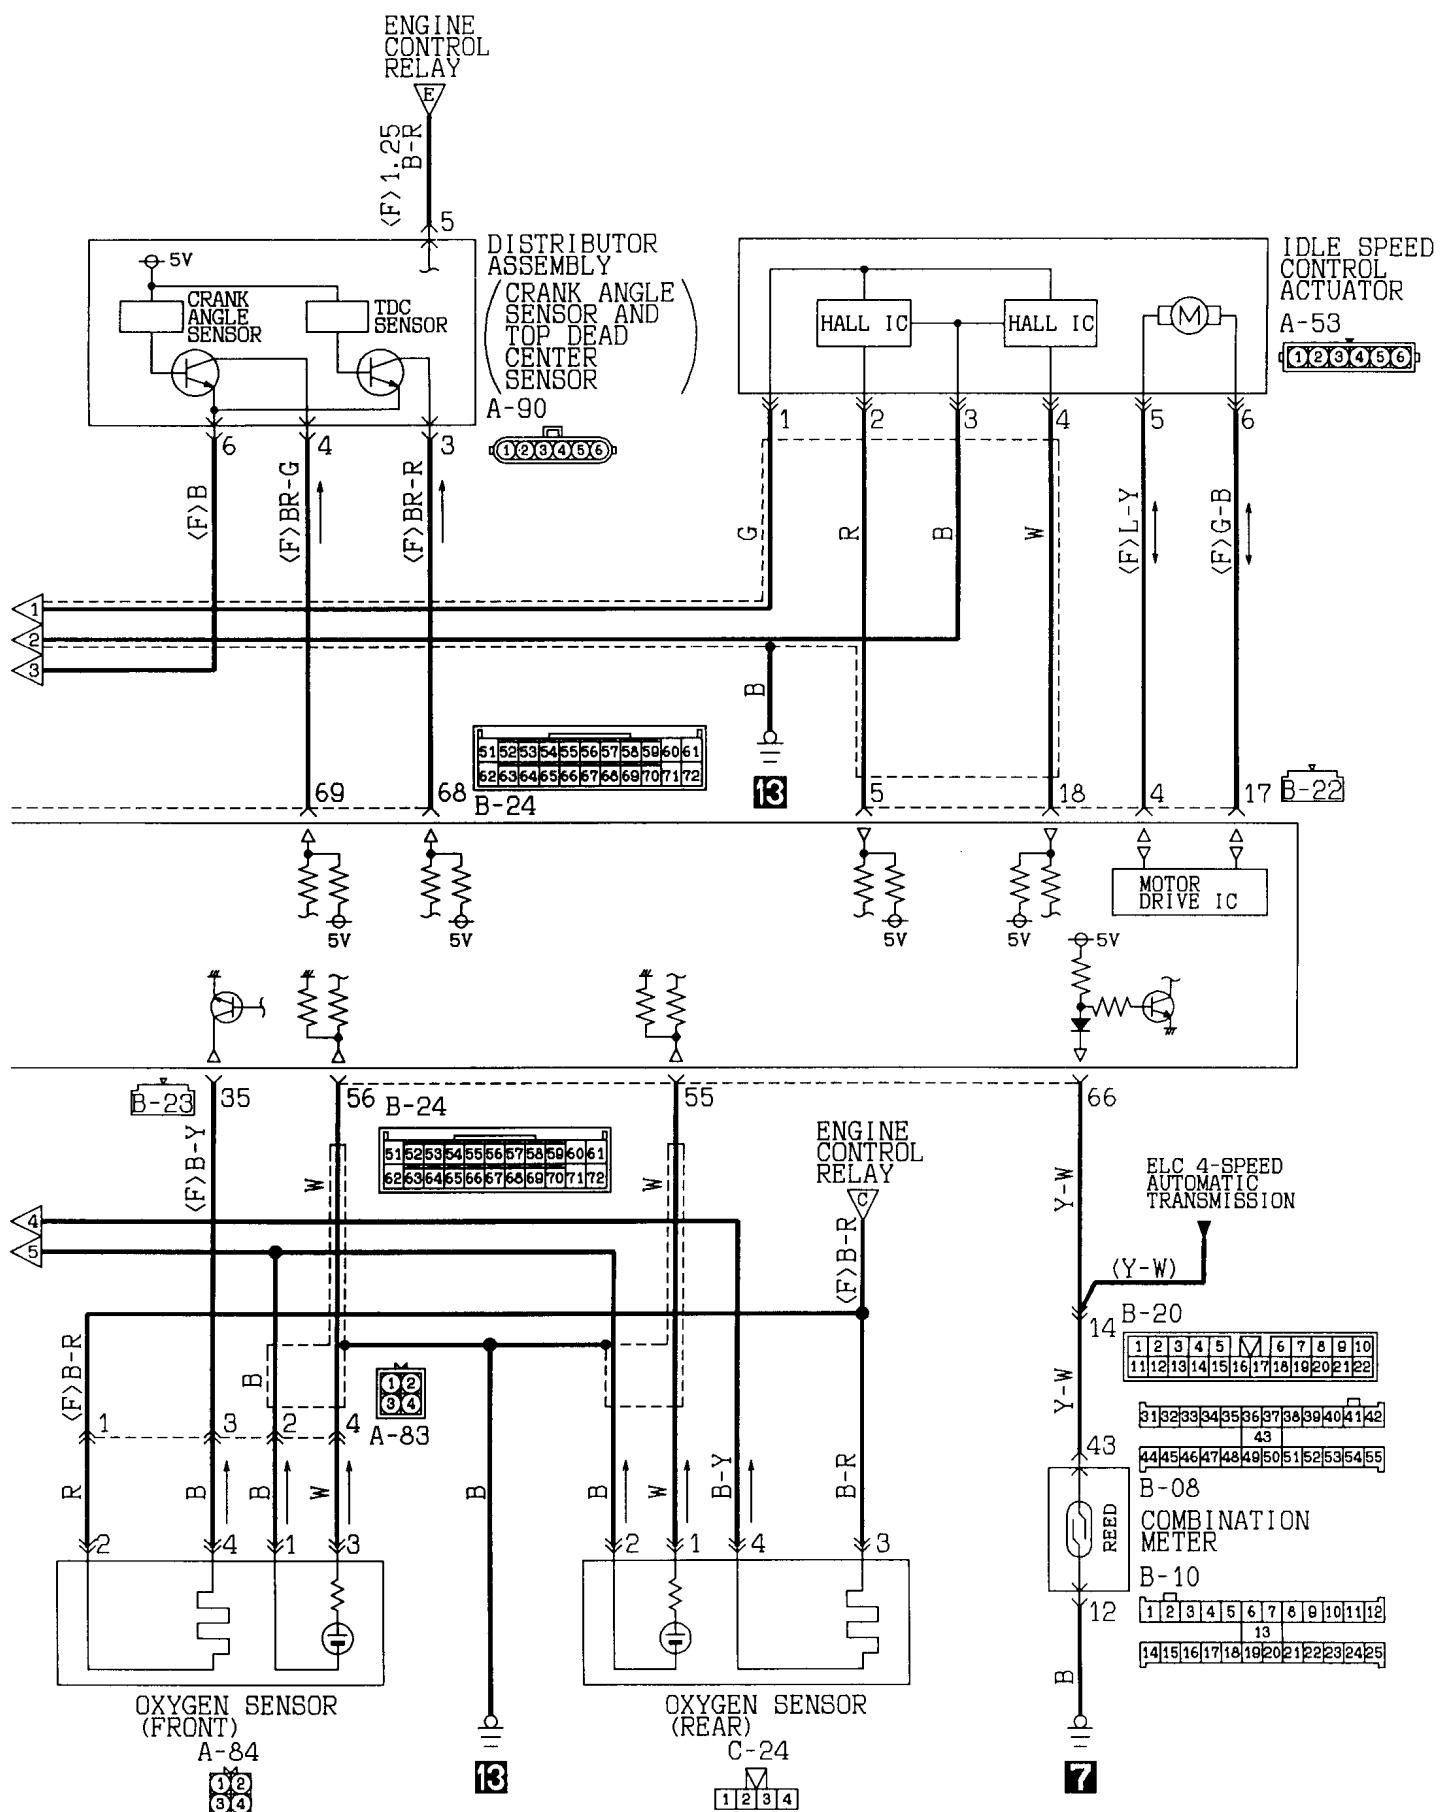


Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

