

# MITSUBISHI COLT/LANCER

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

#### TECHNICAL INFORMATION MANUAL

PYME9501

#### WORKSHOP MANUAL

##### ENGINE GROUP

PWEE□□□□

(Looseleaf edition)

##### ELECTRICAL WIRING

PHME9511

##### BODY REPAIR MANUAL

PBME9501

##### PARTS CATALOGUE

B606F006A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

General .....	00
Engine .....	11
Engine Lubrication .....	12
Fuel .....	13
Engine Cooling .....	14
Intake and Exhaust .....	15
Engine Electrical .....	16
Engine and Emission Control ....	17
Clutch .....	21
Manual Transmission .....	22
Automatic Transmission .....	23
Front Axle .....	26
Rear Axle .....	27
Wheel and Tyre .....	31
Power Plant Mount .....	32
Front Suspension .....	33
Rear Suspension .....	34
Service Brakes .....	35
Parking Brakes .....	36
Steering .....	37
Body .....	42
Exterior .....	51
Interior and Supplemental Restraint System (SRS) .....	52
Chassis Electrical .....	54
Heater, Air Conditioner and Ventilation .....	55

 MITSUBISHI MOTORS CORPORATION