

A

| | |
|---|----------------|
| A/C SWITCH | 55-16-II |
| A/T CONTROL COMPONENT | |
| Check | 23A-56-I |
| Location | 23A-54-I |
| ABS | |
| ECU | 35B-41-II |
| MOTOR, Operation Check | 35B-30-II |
| MOTOR RELAY, Continuity Check | 35B-30-II |
| VALVE RELAY, Continuity Check | 35B-30-II |
| ACCELERATOR | |
| CABLE | 17-5-I |
| CABLE, Check and Adjustment | 17-4-I |
| PEDAL | 17-5-I |
| ADJUSTER, Lash, Check | 11A-16, 11C-13 |
| AERO PARTS | 51-13-II |
| AIR CLEANER ELEMENT, Maintenance | 00-32-I |
| AIR CONDITIONING SWITCH, Check | 17-40-I |
| AIR BAG MODULE | 52B-27-II |
| Deployed Disposal Procedures | 52B-39-II |
| Disposal Procedures | 52B-34-II |
| Undeployed, Disposal | 52B-34-II |
| AIR FILTER | 17-48-I |
| ANTENNA | 54-67-II |
| AUTO-CRUISE CONTROL | 17-27-I |
| COMPONENT, Check | 17-25-I |
| SYSTEM, Operation Check | 17-23-I |
| AUTOMATIC TRANSAXLE | |
| Maintenance | 00-41-I |
| KEY INTERLOCK & SHIFT LOCK MECHANISMS | 23A-76-I |
| AXLE HUB | |
| Front | 26-7-II |
| Rear | 27-5-II |

B

| | |
|---|----------------------|
| BALL JOINT, Tie Rod End, Breakaway Torque Check | 37A-7-II |
| BALL JOINT SEALS, Maintenance | 00-46-I |
| BASIC IDLE SPEED, Adjustment | 13A-143-I |
| <1.8L Engine> | 13B-144-I |
| BATTERY | 54-3-II |
| Charging | 54-3-II |
| Check | 54-3-II, 35B-31-I |
| Testing Procedure | 54-4-II |
| BLOWER | 55-20-II |
| BODY, Valve | 23B-69-I |
| BOOSTER, Brake | 35B-31-I |
| Operating Test | 35A-9-II |
| BOOTS, Drive Shaft, Maintenance | 00-46-I |
| BRAKE | |
| Low-reverse | 23B-60-I |
| Rear Drum | 35B-33-II |
| Second | 23B-61-I |
| BOOSTER | 35B-31-I |
| Operating Test | 35A-9-II |
| DISC, Front | 35A-22-II |
| Run-out Correction | 35A-15-II |
| Run-out Check | 35A-15-II |
| Thickness Check | 35A-14-II |
| DRUM | |
| Inside Diameter Check | |
| <Vehicles with Rear Drum Brake> | 35A-16-II, 35B-27-II |
| FLUID LEVEL SENSOR, Check | 35A-11-II |
| HOSES, Maintenance | 00-46-I |
| LINING, Thickness Check | 35A-16-II, 35B-26-II |
| LINING AND BRAKE DRUM, Contact Check | 35A-17-II, 35B-27-II |
| PAD, Disc, Front, Check and Replacement | 35A-12-II |
| PEDAL | 35A-18-II |

| | |
|---|-----------|
| Check and Adjustment | 35A-8-II |
| ROTOR, Disc, Front, Check | 35A-14-II |
| BREAKAWAY TORQUE, Tie Rod End Ball Joint, Check | 37A-7-II |
| BUMPER | |
| Front | 51-4-II |
| Rear | 51-7-II |

C

| | |
|---|--------------------|
| CAMSHAFT <1.5L Engine> | 11A-23-I, 11B-22-I |
| <1.8L Engine> | 11C-20-I, 11D-24-I |
| OIL SEALS <1.5L Engine> | 11A-23-I |
| <1.8L Engine> | 11C-20-I |
| POSITION SENSOR, Check | 16-38-I |
| CANISTER, Evaporative Emission | 17-48-I |
| CAP, Distributor, Maintenance | 00-34-I |
| CATALYTIC CONVERTER | 17-46-I |
| CENTERMEMBER | 32-7-I |
| CHARGING SYSTEM | 16-2-I |
| CHARGING | 55-9-II |
| CHECK VALVE, Operation Check | 35A-10-II |
| CIGARETTE LIGHTER | 54-50-II |
| CIRCUIT DIAGRAM | 52B-8-II |
| CLOCK SPRING | 52B-27-II |
| CLOCK | 54-51-II |
| CLOSED THROTTLE POSITION SWITCH | |
| Adjustment <1.5L Engine> | 13A-141-I |
| <1.8L Engine> | 13B-142-I |
| Check <1.5L Engine> | 13A-153-I |
| <1.8L Engine> | 13A-149-I |
| CLUTCH HOUSING | 22B-54-I |
| CLUTCH | 21B-3-I |
| Overdrive | 23B-55-I |
| Reverse | 23B-55-I |
| Underdrive | 23B-52-I |
| CONTROL | 21A-9-I |
| PEDAL | 21A-8-I |
| Check and Adjustment | 21A-5-I |
| RELEASE CYLINDER | 21B-7-I |
| COIL, Ignition, Check <1.5L Engine> | 16-35-I |
| <1.8L Engine> | 16-36-I |
| COMBINATION METERS | 54-21-II |
| COMPONENT LOCATION | 52B-10-II |
| COMPRESSION PRESSURE, Check | |
| <1.5L Engine> | 11A-14-I |
| <1.8L Engine> | 11C-11-I |
| COMPRESSOR | 55-24-II |
| DRIVE BELT, Adjustment | 55-8-II |
| NOISE, Check | 55-14-II |
| CONDENSER | 55-31-II |
| FAN MOTOR | 55-31-II |
| CONFIGURATION DIAGRAMS | 52B-7-II |
| CONNECTING ROD <1.5L Engine> | 11B-38-I |
| <1.8L Engine> | 11D-42-I |
| CONSOLE, Floor | 52A-11-II |
| CONSTRUCTION DIAGRAM | 52B-3-II |
| CONTROL HOUSING | 22B-51-I |
| CONTROL LINK | 34-6-II |
| CONTROL SYSTEM | |
| Evaporative Emission | 17-37-I |
| Purge, Check | 17-38-I |
| CONTROL UNIT, SRS AIR BAG (SRS-ECU) | 52B-26-II |
| COOLANT, Engine | |
| Concentration Test | 14-5-I |
| Replacement | 14-5-I |
| Maintenance | 00-44-I |
| Leak Check | 14-5-I |
| CRANKCASE VENTILATION SYSTEM, Check | 17-36-I |

| | |
|--|----------|
| CRANKSHAFT <1.5L Engine> | 11B-46-I |
| <1.8L Engine> | 11D-50-I |
| OIL SEAL <1.5L Engine> | 11A-26-I |
| <1.8L Engine> | 11C-24-I |
| POSITION SENSOR | 16-50-I |
| Check | 16-38-I |
| PULLEY <1.5L Engine> | 11A-22-I |
| <1.8L Engine> | 11C-19-I |
| CROSSMEMBER | 32-8-II |
| CURB IDLE SPEED, Check <1.5L Engine> | 11A-12-I |
| <1.8L Engine> | 11C-9-I |
| CYLINDER BLOCK <1.5L Engine> | 11B-46-I |
| <1.8L Engine> | 11D-50-I |
| CYLINDER HEAD <1.5L Engine> | 11B-27-I |
| <1.8L Engine> | 11D-30-I |
| GASKET <1.5L Engine> | 11A-28-I |
| <1.8L Engine> | 11C-27-I |
| CYLINDER VALVES <1.5L Engine> | 11B-27-I |
| <1.8L Engine> | 11D-30-I |

D

| | |
|---|-----------|
| DEFOGGER, Rear Window | 54-68-II |
| DIFFERENTIAL | 23B-66-I |
| DIFFERENTIAL | 22B-59-I |
| DISC BRAKE | |
| Front | 35A-22-II |
| Front, Thickness Check | 35A-14-II |
| Front, Run-out Correction | 35A-15-II |
| PADS, Maintenance | 00-45-I |
| DISTRIBUTOR | |
| <1.5L Engine> | 16-49-I |
| CAP, Maintenance | 00-34-I |
| ROTOR, Maintenance | 00-34-I |
| DOOR OPENING WEATHERSTRIP | 42-41-II |
| DOOR | 42-30-II |
| GLASS | 42-34-II |
| HANDLE | 42-37-II |
| LATCH | 42-37-II |
| MIRROR | 51-20-II |
| REGULATOR | 42-34-II |
| TRIM | 42-32-II |
| DRIVE BELT | |
| Maintenance | 00-35-I |
| TENSION | |
| Adjustment <1.5L Engine> | 11A-8-I |
| <1.8L Engine> | 11C-6-I |
| Check <1.5L Engine> | 11A-8-I |
| <1.8L Engine> | 11C-6-I |
| Compressor, Adjustment | 55-8-II |
| Power Steering, Check | 37A-8-II |
| OIL SEAL | 23B-74-I |
| DRIVE GEAR, Transfer | 23B-64-I |
| DRIVE SHAFT | 26-12-II |
| BOOTS, Maintenance | 00-46-I |
| DRUM AND LINING, Brake, Contact Check | |
| <Basic Brakes> | 35A-17-II |
| <ABS> | 35B-27-II |
| DRUM BRAKE, Rear <Basic Brakes> | 35A-29-II |
| <ABS> | 35B-33-II |
| DUAL PRESSURE SWITCH, Check | 55-8-II |

E

| | |
|--------------------------|-----------|
| EGR | |
| PORT VACUUM, Check | 17-44-I |
| SOLENOID, Check | 17-44-I |
| <1.5L Engine> | 13A-157-I |
| <1.8L Engine> | 13A-152-I |

| | |
|---|-----------|
| SYSTEM, Check | 17-42-I |
| VALVE, Check | 17-43-I |
| ELEMENT, Air Cleaner, Maintenance | 00-32-I |
| ENGINE <1.5L Engine> | 11A-18-I |
| <1.8L Engine> | 11C-15-I |
| COOLANT | |
| Concentration Test | 14-5-I |
| Leak Check | 14-5-I |
| Maintenance | 00-44-I |
| Replacement | 14-5-I |
| COOLANT TEMPERATURE GAUGE SIMPLE, Check | 54-19-II |
| COOLANT TEMPERATURE GAUGE UNIT, Check | 54-20-II |
| COOLANT TEMPERATURE SENSOR | 17-40-I |
| Check <1.5L Engine> | 13A-152-I |
| <1.8L Engine> | 13B-148-I |
| MOUNTING | 32-4-II |
| OIL | |
| Inspection | 12-3-I |
| Maintenance | 00-39-I |
| Replacement | 12-3-I |
| OIL FILTER, Maintenance | 00-40-I |
| ROLL STOPPER | 32-7-II |
| EVAPORATIVE EMISSION | |
| CANISTER | 17-48-I |
| CONTROL SYSTEM | 17-37-I |
| Maintenance | 00-33-I |
| PURGE SOLENOID, Check | 17-39-I |
| <1.5L Engine> | 13A-157-I |
| <1.8L Engine> | 13B-152-I |
| VENTILATION SOLENOID | 17-48-I |
| EVAPORATOR | 55-22-II |
| EXHAUST | |
| GAS RECIRCULATION (EGR) SYSTEM | 17-41-I |
| MANIFOLD | 15-6-I |
| <1.5L Engine> | 11B-21-I |
| <1.8L Engine> | 11D-19-I |
| PIPE | 15-8-I |
| SYSTEM, Maintenance | 00-51-I |

F

| | |
|---|-----------|
| FAN MOTOR, Condenser | 55-31-II |
| FENDER | 42-8-II |
| FILLER DOOR, Fuel | 42-9-II |
| FILTER, Engine Oil, Maintenance | 00-40-I |
| FIXED SAS, Adjustment <1.5L Engine> | 13A-143-I |
| <1.8L Engine> | 13B-143-I |
| FLOOR CONSOLE | 52A-11-II |
| FOG LIGHT | 54-39-II |
| Aiming | 54-36-II |
| LIGHT BULB, Replacement | 54-38-II |
| FRONT AXLE HUB | 26-7-II |
| FRONT BUMPER | 51-4-II |
| FRONT DISC BRAKE | 35A-22-II |
| Thickness Check | 35A-14-II |
| PAD, Check and Replacement | 35A-12-II |
| ROTOR, Check | 35A-14-II |
| RUN-OUT Check | 35A-15-II |
| RUN-OUT Correction | 35A-15-II |
| FRONT SEAT | 52A-20-II |
| FRONT SEAT BELT | 52A-25-II |
| FRONT TURN-SIGNAL LIGHT | 54-33-II |
| FRONT WHEEL ALIGNMENT, Check and Adjustment | 33A-4-II |
| FUEL | |
| FILLER DOOR | 42-9-II |
| GAUGE SIMPLE, Check | 54-18-II |
| GAUGE UNIT, Check | 54-18-II |
| HOSES | 00-32-I |
| PRESSURE TEST <1.5L Engine> | 13A-144-I |

| | |
|---|-----------|
| <1.8L Engine> | 13B-144-I |
| PUMP CONNECTOR, Disconnection <1.5L Engine> | 13A-147-I |
| <1.8L Engine> | 13B-144-I |
| PUMP, Operation Check <1.5L Engine> | 13A-147-I |
| <1.8L Engine> | 13B-144-I |
| PUMP RELAY, Continuity Check <1.5L Engine> | 13A-152-I |
| <1.8L Engine> | 13B-148-I |
| SYSTEM, Maintenance | 00-32-I |
| TANK | 13C-3-I |
| FUEL AND EMISSION CONTROL SYSTEM | |
| <1.5L Engine> | 11B-17-I |
| <1.8L Engine> | 11D-17-I |

G

| | |
|--------------------------------------|-----------|
| GARNISHES | 51-10-II |
| GEAR BOX, Manual Steering | 37A-15-II |
| GENERATOR | 16-13-I |
| <1.5L Engine> | 11B-10-I |
| <1.8L Engine> | 11D-10-I |
| OUTPUT LINE VOLTAGE DROP, Test | 16-6-I |
| GLASS | |
| Door | 42-34-II |
| Window | 42-11-II |
| GUARD, Stone | 51-12-II |

H

| | |
|---|-----------|
| HANDLE, Door | 42-37-II |
| HAZARD WARNING LIGHT SWITCH | 54-48-II |
| HEADLIGHT | 54-33-II |
| Aiming with Gauges | 54-28-II |
| Aiming with Screen | 54-30-II |
| BULB, Replacement | 54-32-II |
| HEADLINING | 52A-17-II |
| HEATED OXYGEN SENSOR, Check <1.5L Engine> | 13A-154-I |
| <1.8L Engine> | 13B-150-I |

| | |
|--|-----------|
| HEATER | |
| CONTROL | 55-16-II |
| CORE | 55-19-II |
| UNIT | 55-19-II |
| HIGH MOUNTED STOP LIGHT | 54-44-II |
| HOOD | 42-3-II |
| HORN | 54-49-II |
| HOUSING | |
| Control | 22B-51-I |
| Clutch | 22B-54-I |
| HUB BOLT, Replacement <Front Axle> | 26-5-II |
| <Rear Axle> | 27-4-II |
| HUB END PLAY, Check | 26-5-II |
| HYDRAULIC CIRCUIT | 23A-64-I |
| HYDRAULIC PRESSURE, Test | 23A-59-I |
| HYDRAULIC UNIT | 35B-37-II |
| Check | 35B-28-II |

I

| | |
|---|-----------|
| IDLE AIR CONTROL MOTOR (Stepper Motor), Check | |
| <1.5L Engine> | 13A-156-I |
| <1.8L Engine> | 13B-152-I |
| IDLE MIXTURE, Check <1.5L Engine> | 11A-13-I |
| <1.8L Engine> | 11C-10-I |
| IDLE SPEED, Curb, Check <1.5L Engine> | 11A-12-I |
| <1.8L Engine> | 11C-9-I |
| IDLE-UP OPERATION, Check | 55-15-II |
| IGNITION | |
| CABLES, Maintenance | 00-33-I |
| COIL, Check <1.5L Engine> | 16-35-I |

| | |
|---|-------------------|
| <1.8L Engine> | 16-36-I |
| FAILURE SENSOR, Check <1.8L Engine> | 16-37-I |
| POWER TRANSISTOR CONTINUITY, Check | |
| <1.5L Engine> | 16-36-I |
| PRIMARY VOLTAGE WAVEFORM, Check | 16-43-I |
| SECONDARY VOLTAGE WAVEFORM, Check | 16-38-I |
| SWITCH | 54-10-II |
| SYSTEM <1.5L Engine> | 11B-10-I, 16-47-I |
| <1.8L Engine> | 11D-10-I, 16-48-I |
| TIMING, Check <1.5L Engine> | 11A-12-I |
| <1.8L Engine> | 11C-9-I |
| INJECTOR <1.5L Engine> | 13A-158-I |
| <1.8L Engine> | 13B-153-I |
| Check <1.5L Engine> | 13A-155-I |
| <1.8L Engine> | 13B-152-I |
| INPUT SHAFT <A/T> | 23B-52-I |
| <M/T> | 22B-26-I |
| INSIDE REAR VIEW MIRROR | 52A-19-II |
| INSTRUMENT PANEL | 52A-8-II |
| INTAKE | |
| AIR TEMPERATURE SENSOR | 17-40-I |
| Check <1.5L Engine> | 13A-152-I |
| <1.8L Engine> | 13B-148-I |
| MANIFOLD | 15-3-I |
| <1.5L Engine> | 11B-21-I |
| <1.8L Engine> | 11D-19-I |
| Vacuum Check | 15-2-I |
| INTERIOR LIGHT | 54-46-II |
| INTERLOCK SWITCH | |
| Check and Adjustment | 21A-7-I |
| Operating Check | 21A-6-I |

K

| | |
|--------------------------------------|----------|
| KEY INTERLOCK MECHANISM, Check | 23A-71-I |
|--------------------------------------|----------|

L

| | |
|---------------------------------------|--------------------|
| LASH ADJUSTER, Check | 11A-16-I, 11C-13-I |
| LATCH, Door | 42-37-II |
| LID, Trunk | 42-5-II |
| LIGHT | |
| Fog | 54-39-II |
| Front Turn-signal | 54-33-II |
| High Mounted Stop | 54-44-II |
| Interior | 54-46-II |
| Rear Combination | 54-43-II |
| LINE PRESSURE, Adjustment | 23A-70-I |
| LINING AND DRUM, Brake, Contact Check | |
| <Basic Brakes> | 35A-17-II |
| <ABS> | 35B-27-II |
| LOW-REVERSE BRAKE | 23B-60-I |
| LOWER ARM | |
| <Front Suspension> | 33A-9-II |
| <Rear Suspension> | 34-6-II |
| LUMINOUS INTENSITY, Measurement | 54-32-II |

M

| | |
|--------------------------------------|-----------|
| MAGNETIC CLUTCH, Test | 55-7-II |
| MAIN MUFFLER | 15-8-I |
| MAINTENANCE, SRS | 52B-22-II |
| MANUAL TRANSAXLE, Maintenance | 00-41-I |
| MANUAL STEERING GEAR BOX | 37A-15-II |
| MARKS | 51-19-II |
| MASTER CYLINDER <Basic Brakes> | 35A-19-II |
| <ABS> | 35B-31-II |
| METERS, Combination | 54-21-II |
| MIRROR | |

| | | | |
|---|--------------------|---|------------|
| Door | 51-20-II | <ABS> | 35B-33-II |
| Rear View, Inside | 52A-19-II | LININGS, Maintenance | 00-45-I |
| MOLDINGS | 51-11-II | WHEEL CYLINDER | 35A-31-II |
| MUFFLER, Main | 15-8-I | REAR HUB, Rotary-Sliding Resistance Check | 27-3-II |
| MULTIPOINT FUEL INJECTION RELAY, Continuity Check | | REAR SEAT | 52A-22-II |
| <1.5L Engine> | 13A-152-I | REAR SEAT BELT | 52A-26-II |
| <1.8L Engine> | 13B-148-I | REAR VIEW MIRROR, Inside | 52A-19-II |
| O | | REAR WHEEL ALIGNMENT, Check and Adjustment | 34-4-II |
| OIL FILTER | | REAR WHEEL CYLINDERS, Maintenance | 00-45-I |
| Engine, Maintenance | 00-40-I | REAR WINDOW DEFOGGER | 54-68-II |
| Replacement | 12-4-I | SWITCH | 54-69-II |
| OIL LEVEL, Transmission, Check | 22A-7-I | REAR WINDOW GLASS | 42-19-II |
| OIL PAN <1.5L Engine> | 11A-25-I, 11B-34-I | RECEIVER DRIER, Test | 55-7-II |
| <1.8L Engine> | 11C-22-I, 11D-37-I | REFRIGERANT | |
| OIL PUMP <1.5L Engine> | 11B-34-I | Leak Repair | 55-14-II |
| <1.8L Engine> | 11D-37-I | LINE | 55-29-II |
| <A/T> | 23B-51-I | REGULATED VOLTAGE, Test | 16-9-I |
| Power Steering | 37A-33-II | REGULATOR, Door | 42-34-II |
| Pressure Test | 37A-10-II | RELAY | |
| OUTPUT SHAFT <M/T> | 22B-36-I | ABS Motor, Continuity Check | 35B-30-II |
| <A/T> | 23B-62-I | ABS Valve, Continuity Check | 35B-30-II |
| OUTPUT CURRENT, Test | 16-7-I | Fuel Pump, Continuity Check | Refer to F |
| OVERDRIVE CLUTCH | 23B-55-I | Multipoint Fuel Injection, Continuity Check | Refer to M |
| OVERDRIVE PLANETARY CARRIER | 23B-59-I | Power, Check | 55-15-II |
| P | | Starter, Continuity Check | 16-21-I |
| PARKING BRAKE | | RESISTOR | 55-20-II |
| CABLE | 36-6-II | REVERSE CLUTCH | 23B-55-I |
| LEVER | 36-5-II | REVERSE IDLER GEAR <F5M42> | 22B-48-I |
| SWITCH, Check | 36-4-II | RHEOSTAT | 54-47-II |
| LEVER, Stroke Check | 36-3-II | ROCKER ARMS <1.5L Engine> | 11B-22-I |
| PISTON <1.5L Engine> | 11B-38-I | <1.8L Engine> | 11D-24-I |
| <1.8L Engine> | 11D-42-I | ROLL STOPPER, Engine | 32-7-II |
| POSITIVE CRANKCASE VENTILATION | | ROTARY-SLIDING RESISTANCE, Rear Hub, Check | 27-3-II |
| SYSTEM | 17-35-I | ROTOR | |
| VALVE, Check | 17-36-I | Disc Brake, Front Check | 35A-14-II |
| POST-COLLISION DIAGNOSIS | 52B-22-II | Distributor, Maintenance | 00-34-I |
| POWER STEERING | | RUNCHANNEL, Window Glass | 42-41-II |
| FLUID, Level Check | 37A-8-II | S | |
| FLUID, Replacement | 37A-8-II | SCHEMATIC, SRS | 52B-6-II |
| GEAR BOX | 37A-22-II | SEAT | |
| HOSES | 37A-38-II | Front | 52A-20-II |
| OIL PUMP | 37A-33-II | Rear | 52A-22-II |
| PRESSURE SWITCH, Check | 37A-11-II | SEAT BELT | |
| POWER RELAY, A/C, Check | 55-15-II | Front | 52A-25-II |
| PRINTED-HEATER LINE, Check | 54-68-II | Rear | 52A-26-II |
| PROPORTIONING VALVE <ABS> | 35B-36-II | SECOND BRAKE | 23B-61-I |
| <Basic Brakes> | 35A-32-II | SELECT LEVER | 22B-50-I |
| Function Test | 35A-10-II | SELECTOR LEVER, Operation Check | 23A-70-I |
| PURGE CONTROL SYSTEM, Check | 17-38-I | SENSOR | |
| PURGE PORT VACUUM, Check | 17-39-I | Brake Fluid Level, Check | 35A-11-II |
| Q | | Camshaft Position, Check | 16-38-I |
| QUARTER WINDOW GLASS <2-door Models> | 42-17-II | Crankshaft Position | 16-50-I |
| R | | Crankshaft Position, Check | 16-38-I |
| RADIATOR | 14-6-I | Engine Coolant Temperature | 17-40-I |
| CAP VALVE, Opening Pressure Check | 14-5-I | Engine Coolant Temperature, Check | Refer to E |
| GRILLE | 51-9-II | Heated Oxygen, Check | Refer to H |
| RADIO | 54-65-II | Ignition Failure, Check <1.8L Engine> | 16-37-I |
| REAR AXLE HUB | 27-5-II | Intake Air Temperature | 17-40-I |
| REAR BUMPER | 51-7-II | Intake Air Temperature, Check | Refer to I |
| REAR COMBINATION LIGHT | 54-43-I | Throttle Position, Adjustment | Refer to T |
| REAR DRUM BRAKE <Basic Brakes> | 35A-29-II | Throttle Position, Check | Refer to T |
| | | Volume Air Flow | 17-40-I |
| | | Wheel Speed, Output Voltage Check | 35B-27-II |
| | | WHEEL SPEED | 35B-38-II |
| | | SHIFT LOCK MECHANISM, Check | 23A-71-I |
| | | SHIFT LEVER | 22A-10-I |
| | | SIGHT GLASS REFRIGERANT, Level Test | 55-7-II |

| | | | |
|---|--------------------|--|--|
| SOLENOID | | | |
| EGR, Check | Refer to E | | |
| Evaporative Emission Purge, Check | Refer to E | | |
| VALVE, Check | 35B-30-II | | |
| SPARK PLUG | | | |
| Check and Cleaning | 16-37-I | | |
| Maintenance | 00-33-I | | |
| Test | 16-35-I | | |
| CABLE | | | |
| Resistance Check | 16-37-I | | |
| Test | 16-35-I | | |
| SPEAKER | 54-66-II | | |
| SPEEDOMETER | | | |
| Check | 54-17-II | | |
| <M/T> | 22B-49-I | | |
| <A/T> | 23B-73-I | | |
| SRS | | | |
| Maintenance | 00-47-I | | |
| AIR BAG CONTROL UNIT (SRS-ECU) | 52B-26-II | | |
| MAINTENANCE | 52B-22-II | | |
| SERVICE PRECAUTIONS | 52B-10-II | | |
| TEST EQUIPMENT | 52B-12-II | | |
| STABILIZER BAR | 33A-12-II | | |
| STARTER | | | |
| MOTOR | 16-22-I | | |
| RELAY, Continuity Check | 16-21-I | | |
| STARTING SYSTEM | 16-19-I | | |
| STATIONARY STEERING EFFORT, Check | 37A-7-II | | |
| STEERING | | | |
| Stationary Effort Check | 37A-7-II | | |
| ANGLE, Check | 37A-6-II | | |
| SHAFT | 37A-12-II | | |
| LINKAGE SEALS, Maintenance | 00-46-I | | |
| WHEEL | 37A-12-II | | |
| Angle Check | 37A-6-II | | |
| Free Play Check | 37A-6-II | | |
| Return to Center Check | 37A-7-II | | |
| STONE GUARD | 51-12-II | | |
| STOP LIGHT SWITCH, Check | 35A-9-II | | |
| STRUT | 33A-6-II | | |
| <Front Suspension> | 34-11-II | | |
| <Rear Suspension> | 34-11-II | | |
| SUNROOF | 42-48-II | | |
| SWITCH | | | |
| A/C | 55-16-II | | |
| Air Conditioning, Check | 17-40-I | | |
| Closed Throttle Position, Adjustment | Refer to C | | |
| Closed Throttle Position, Check | Refer to C | | |
| Defogger, Rear Window | 54-68-II | | |
| Dual Pressure, Check | 55-8-II | | |
| Hazard Warning Light | 54-48-II | | |
| Ignition | 54-10-II | | |
| Parking Brake, Check | 36-4-II | | |
| Power Steering Pressure, Check | 37A-11-II | | |
| Stop Light, Check | 35A-9-II | | |
| T | | | |
| TACHOMETER, Check | 54-17-II | | |
| TAPE PLAYER | 54-65-II | | |
| TENSION PULLEY | 55-24-II | | |
| THERMOSTAT | 14-9-I | | |
| THROTTLE POSITION SENSOR | | | |
| Adjustment <1.5L Engine> | 13A-141-I | | |
| <1.8L Engine> | 13B-142-I | | |
| Check <1.5L Engine> | 13A-153-I | | |
| <1.8L Engine> | 13B-148-I | | |
| THROTTLE BODY | | | |
| <1.5L Engine> | 13A-160-I | | |
| <1.8L Engine> | 13B-155-I | | |
| THROTTLE BODY (THROTTLE VALVE AREA), Cleaning | | | |
| <1.5L Engine> | 13A-141-I | | |
| <1.8L Engine> | 13B-142-I | | |
| TIE ROD END BALL JOINT, Breakaway Torque Check | 37A-7-II | | |
| TIMING BELT | | | |
| <1.5L Engine> | 11A-32-I, 11B-12-I | | |
| <1.8L Engine> | 11C-31-I, 11D-12-I | | |
| Maintenance | 00-34-I | | |
| TENSION, Adjustment <1.5L Engine> | 11A-15-I | | |
| <1.8L Engine> | 11C-12-I | | |
| TIRE | | | |
| Wear Check | 31-5-II | | |
| INFLATION PRESSURE, Check | 31-5-II | | |
| TORQUE CONVERTER, Stall Test | 23A-58-I | | |
| TRAILING ARM | 34-8-II | | |
| TRANSAXLE | | | |
| Manual, Maintenance | 00-41-I | | |
| Automatic, Maintenance | 00-41-I | | |
| <M/T> | 22A-11-I, 22B-11-I | | |
| <A/T> | 23A-78-I, 23B-16-I | | |
| CASE | 22B-57-I | | |
| CONTROL <M/T> | 22A-8-I | | |
| <A/T> | 23A-73-I | | |
| MOUNTING | 32-5-II | | |
| TRANSFER | | | |
| DRIVE GEAR | 23B-64-I | | |
| TRANSMISSION OIL | | | |
| Replacement | 22A-7-I | | |
| LEVEL, Check | 22A-7-I | | |
| TRIM, Door | 42-32-II | | |
| TRIMS | 52A-13-II | | |
| TRUNK LID | 42-5-II | | |
| U | | | |
| UNDER COVER | 42-55-II | | |
| UNDERDRIVE CLUTCH | 23B-52-I | | |
| UPPER LINK | 34-6-II | | |
| V | | | |
| VACUUM | | | |
| EGR Port, Check | 17-44-I | | |
| Manifold, Check <1.5L Engine> | 11A-15-I | | |
| <1.8L Engine> | 11C-12-I | | |
| Purge Port, Check | 17-39-I | | |
| CIRCUIT DIAGRAM | 17-33-I | | |
| CONTROL VALVE, Check | 17-43-I | | |
| HOSES | | | |
| Check | 17-35-I | | |
| Installation | 17-35-I | | |
| Routing | 17-31-I | | |
| VALVE BODY | 23B-69-I | | |
| VENTILATORS | 55-33-II | | |
| VOLUME AIR FLOW SENSOR | 17-40-I | | |
| W | | | |
| WARNING/CAUTION LABELS | 52B-4-II | | |
| WASHER, Windshield | 51-16-II | | |
| WATER HOSE <1.5L Engine> | 11B-19-I, 14-13-I | | |
| <1.8L Engine> | 11D-21-I, 14-15-I | | |
| WATER PIPE <1.5L Engine> | 14-13-I | | |
| <1.8L Engine> | 14-15-I | | |
| WATER PUMP <1.5L Engine> | 11B-19-I, 14-11-I | | |
| <1.8L Engine> | 11D-21-I, 14-12-I | | |
| WATERPROOF FILM | 42-32-II | | |
| WAVEFORM | | | |
| Check using analyzer | 16-11-I | | |
| Ignition Primary Voltage, Check | 16-43-I | | |

| | | | |
|---|-----------|--------------------------------|-----------|
| Ignition Secondary Voltage, Check | 16-38-I | Drum Brake, Rear | 35A-31-II |
| WEATHERSTRIP, Door Opening | 42-41-II | SPEED SENSOR | 35B-38-II |
| WHEEL | 31-5-II | Output Voltage Check | 35B-27-II |
| Runout Check | 31-5-II | WINDOW GLASS | 42-11-II |
| ALIGNMENT | | RUNCHANNEL | 42-41-II |
| Front, Check and Adjustment | 33A-4-II | WINDSHIELD | 42-13-II |
| Rear, Check and Adjustment | 34-4-II | WASHER | 51-16-II |
| BEARING, End Play Check | 27-3-II | WIPER | 51-16-II |
| CYLINDER | 35B-35-II | WIPER, Windshield | 51-16-II |