

---

# COMPONENT LOCATIONS

## CONTENTS

 
 
70109000143

Control Unit .....	12	Inspection Terminal .....	3
Diode .....	16	Other Devices .....	17
Fusible Link and Fuse .....	2	Relay .....	6
Grounding .....	4	Sensor .....	9
Grounding Cable .....	6	Solenoid and Solenoid Valve .....	14





## FUSIBLE LINK AND FUSE



70100010138

Name	Symbol	Name	Symbol
Dedicated fuses (No. 1 - 11)	C	Fusible links (No. 1 - 7)	C
Dedicated fuse (No. 12)	A	Fusible link (No. 8)	B
Dedicated fuse (No. 16)	D	Multi-purpose fuses	D

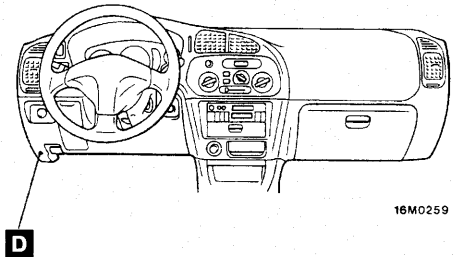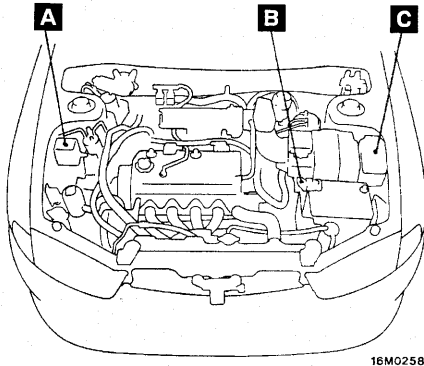

00004640

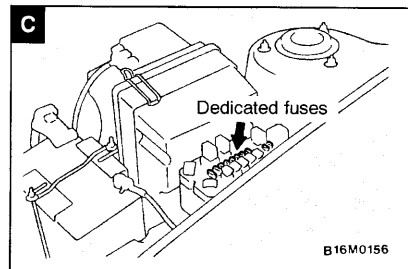
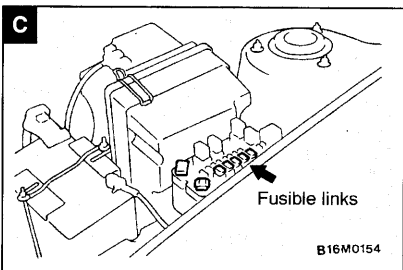
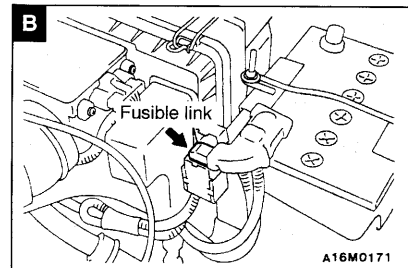
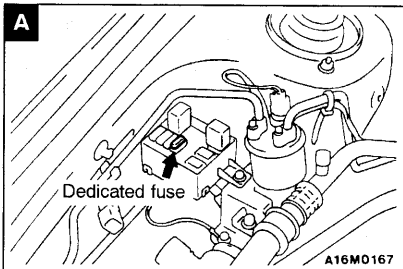


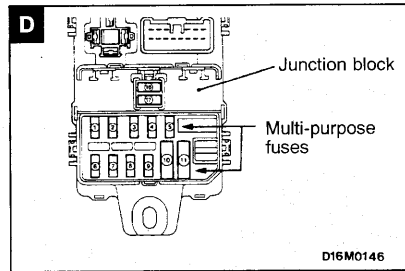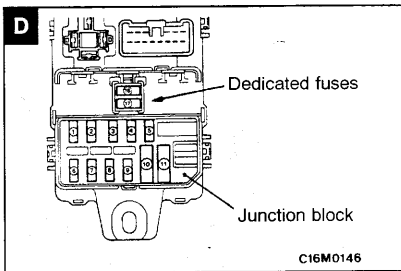

INSPECTION TERMINAL


70100020421

Name	Symbol	Name	Symbol
Data link connector	B	Engine speed detection connector	A

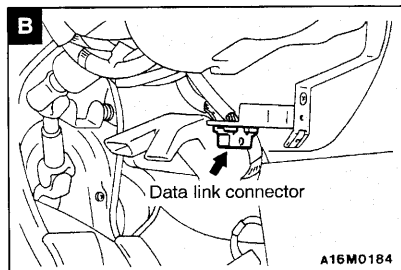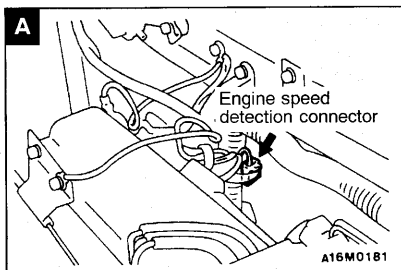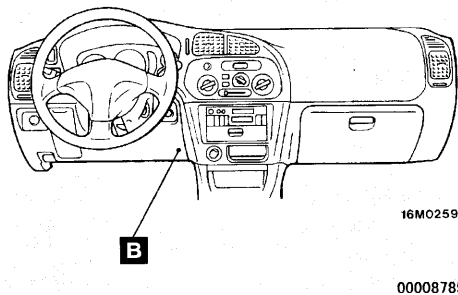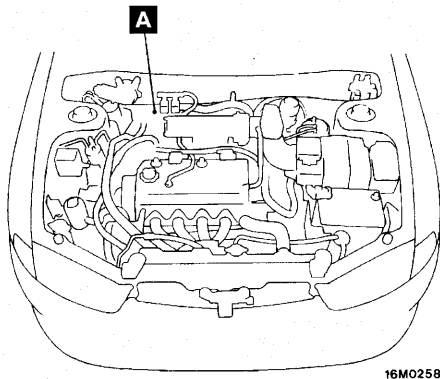





GROUNDING







70100030431

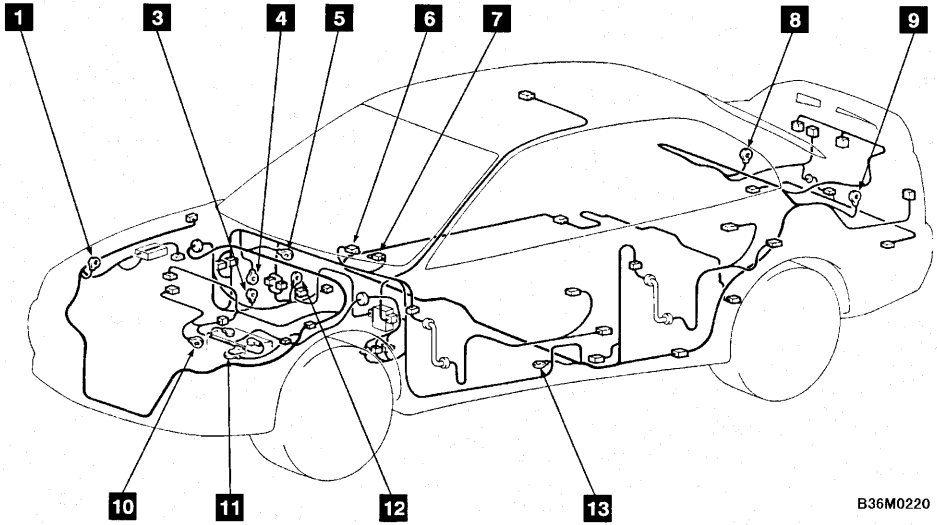

B36M0220


NOTE  
1 - 13 numbers correspond to body ground point No. in CIRCUIT DIAGRAMS.

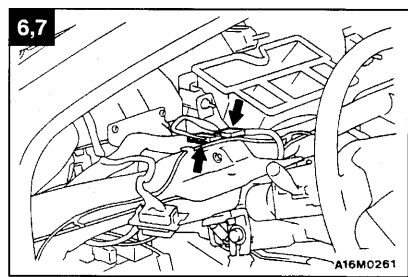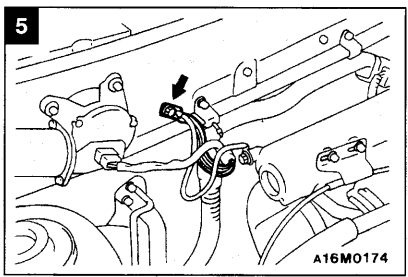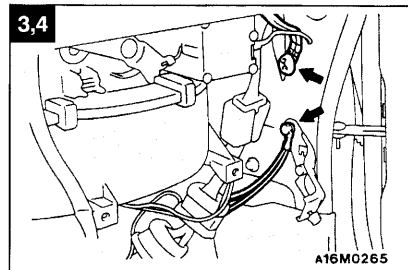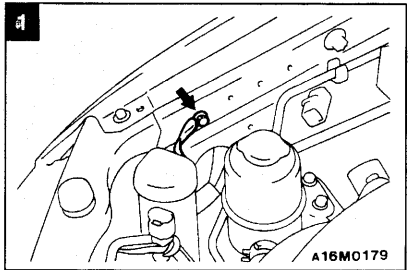

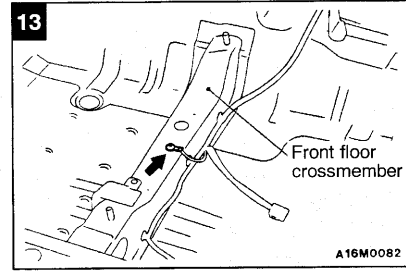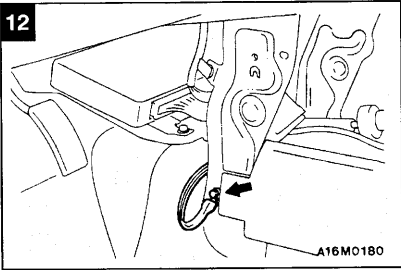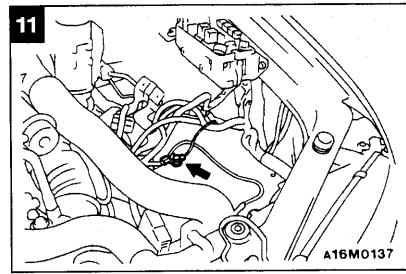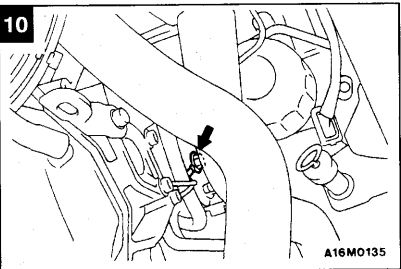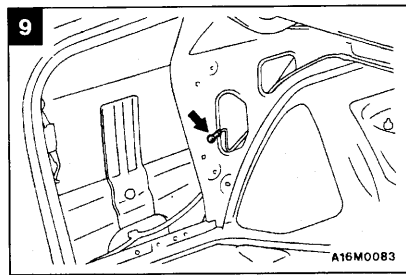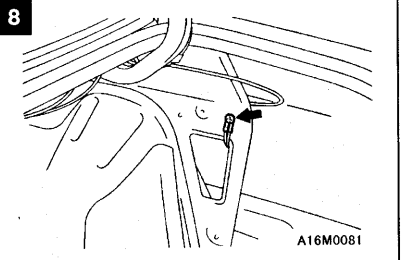

## GROUNDING CABLE


70101213H

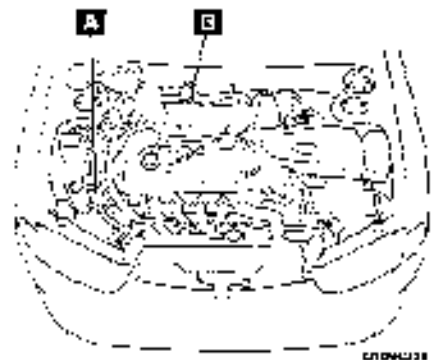

61994213



61994213

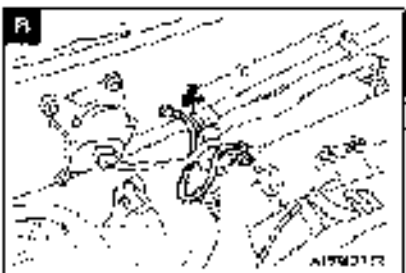


61994213


## RELAY

701002014M

Abbrev	Symbole	Num. s	Symbole
A/C compressor relay	A	Horn relay	C
ABS motor relay	B	Multipoint injection relay	G
ABS solenoid relay	B	Power window relay	F
Blower relay	E	Radiator fan relay	D
Condenser fan relay	A	Starter relay (M/T)	C
Flagger relay	E	Transaxle control relay	H
Fog light relay	F	Turn signal and hazard warning flasher unit	E
Fuel pump relay	G	Wiper relay (intermittent wiper relay)	D
Headlight relay	C		





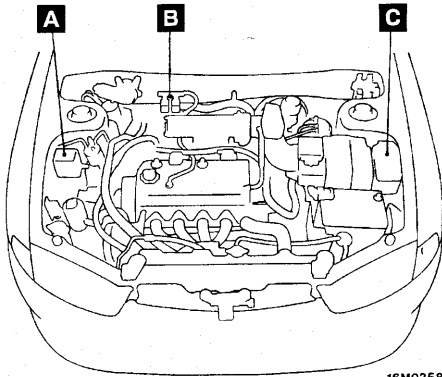





16M0258

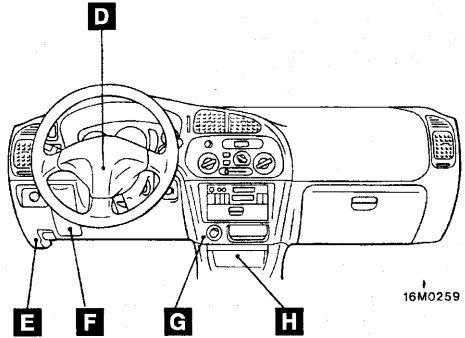

16M0259

00004861

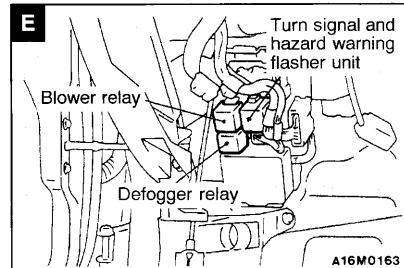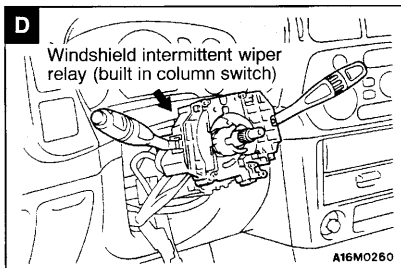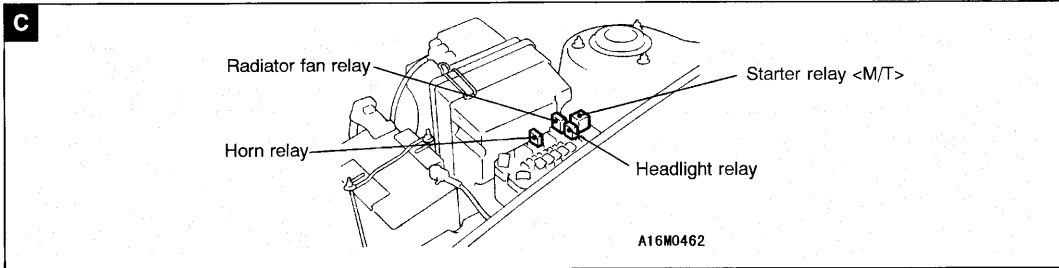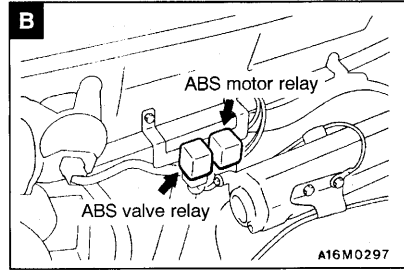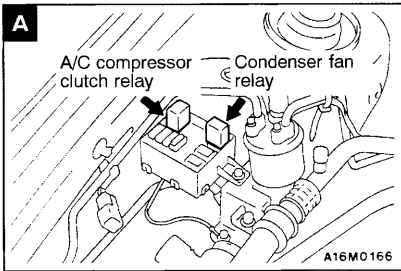

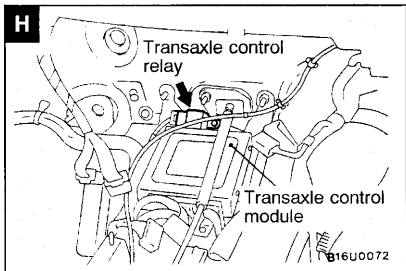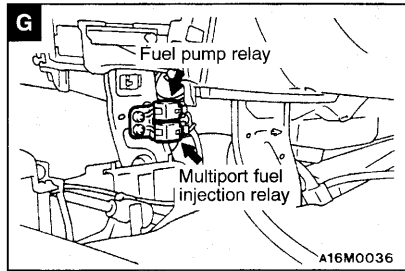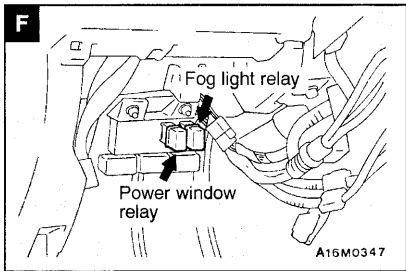




SENSOR

70100060423


Name	Symbol	Name	Symbol
A/T fluid temperature sensor	J	Heated oxygen sensor <Federal>	Front L
ABS speed sensor	Front K		Rear L
	Rear M	Ignition failure sensor <1.8L Engine>	H
Camshaft position sensor <1.5L Engine>	H	Input shaft speed sensor <A/T>	I
Camshaft position sensor <1.8L Engine>	H	Intake air temperature sensor <1.5L Engine>	A
Crankshaft position sensor <1.5L Engine>	G	Manifold absolute pressure sensor <1.5L Engine>	B
Crankshaft position sensor <1.8L Engine>	G	Manifold differential pressure sensor <1.8L Engine>	C
Engine coolant temperature sensor <1.5L Engine>	E	Output shaft speed sensor <A/T>	I
Engine coolant temperature sensor <1.8L Engine>	E	Throttle position sensor <1.5L Engine>	D
Fuel tank differential pressure sensor	N	Throttle position sensor <1.8L Engine>	D
Heated oxygen sensor <California>	Front L	Vehicle speed sensor	I
	Rear L	Volume air flow sensor <1.8L Engine>	F
 
<1.5L Engine>



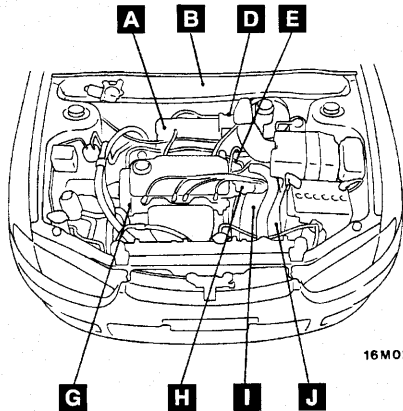












16M0287






<1.8L Engine>

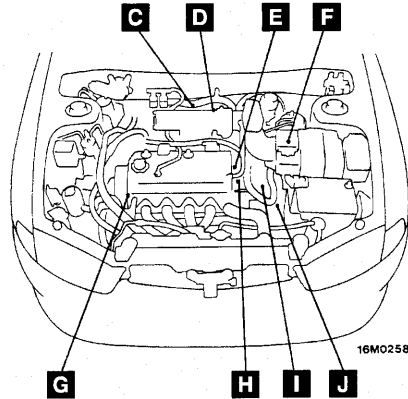

16M0258

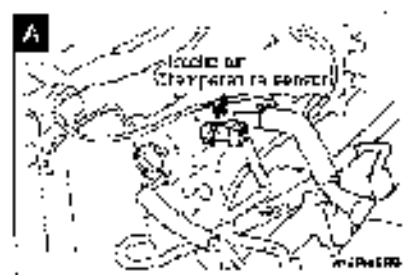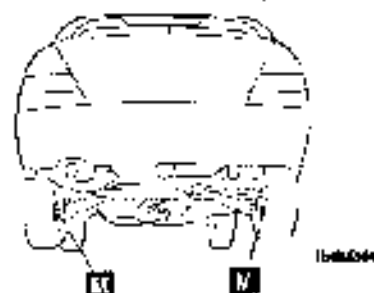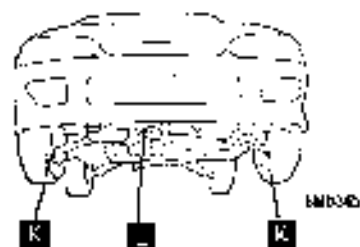

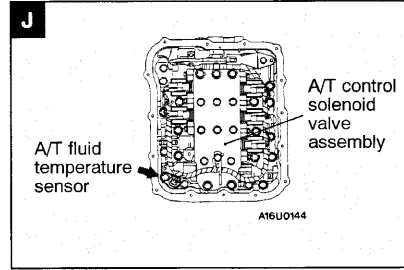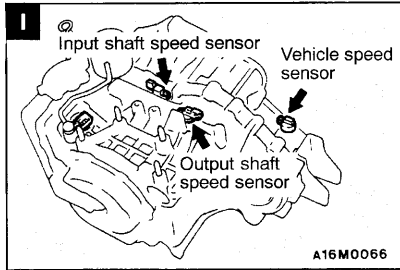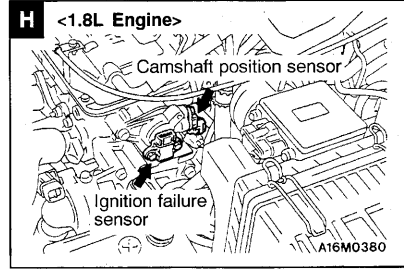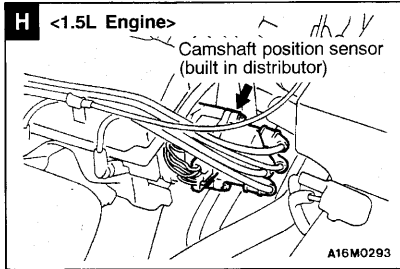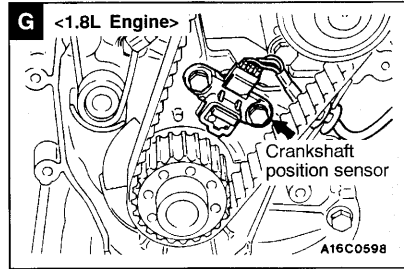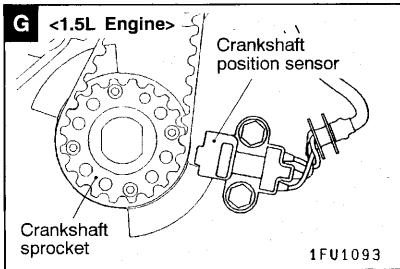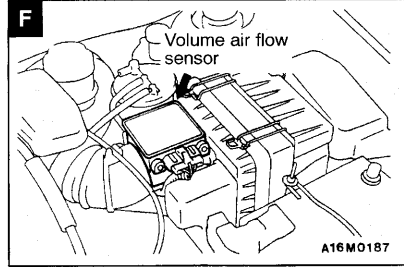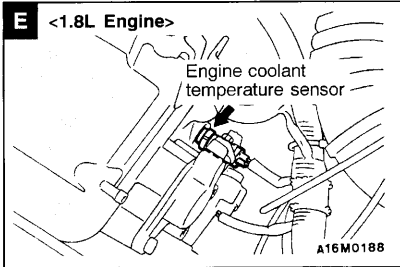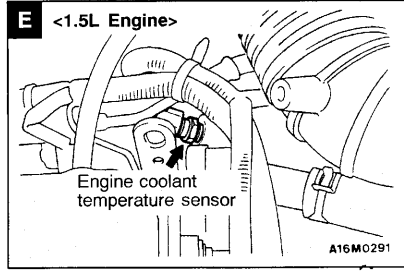
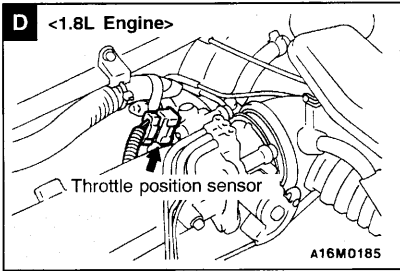


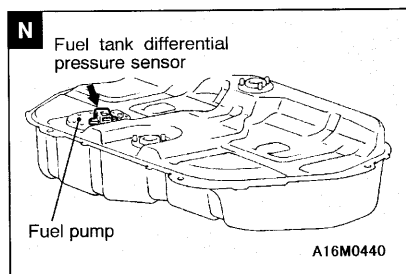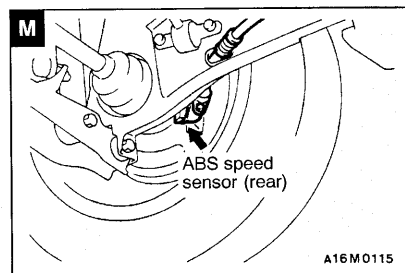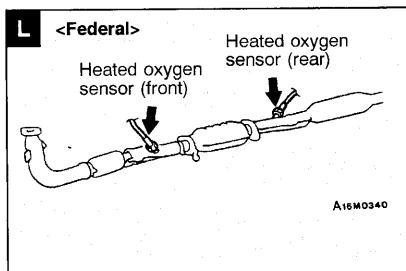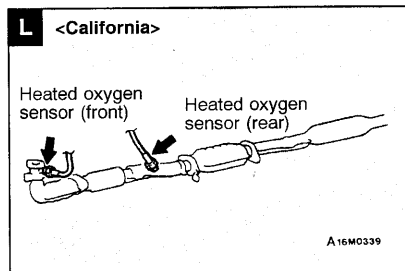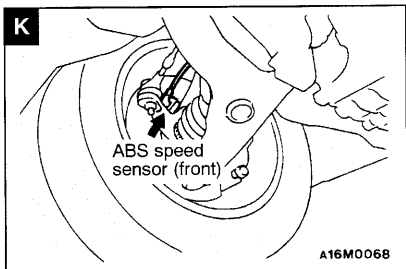

## CONTROL UNIT







70100050079

Name	Symbol	Name	Symbol
ABS-ECU	C	ETACS-ECU	A
Auto-cruise control-ECU	B	SRS-ECU	C
Automatic compressor-ECU <A/C>	E	Sunroof-ECU	G
Buzzer-ECU	A	Transaxle control module	D
Engine control module	F		

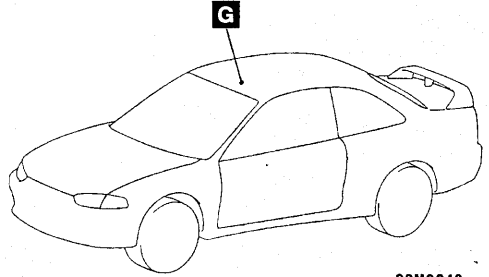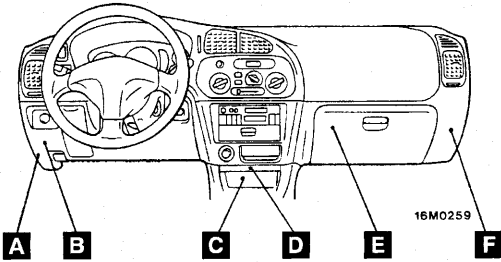


00M0042

00004864

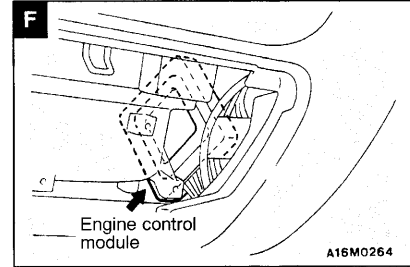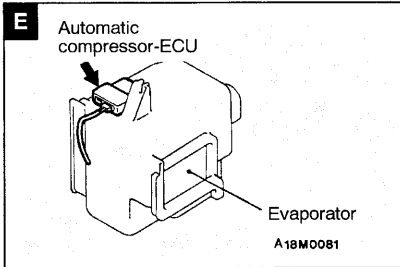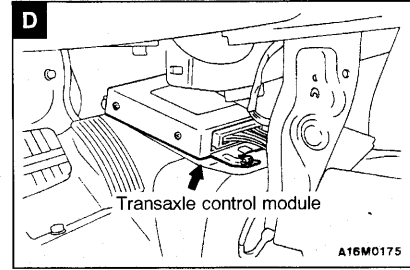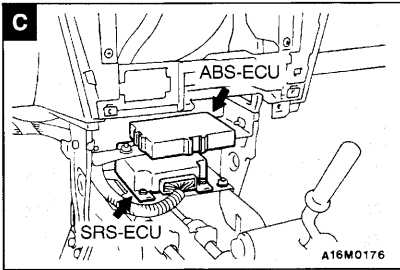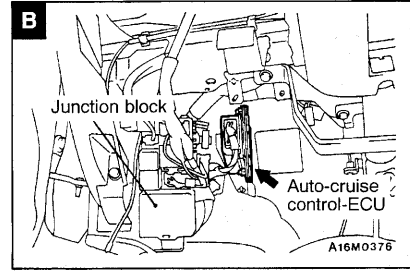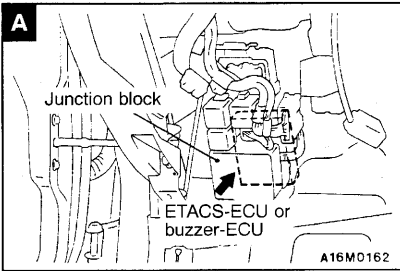


# 70-14 COMPONENT LOCATIONS - Control Unit/Solenoid and Solenoid Valve

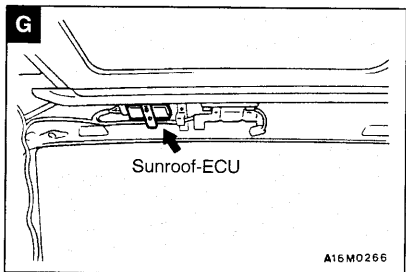 


## SOLENOID AND SOLENOID VALVE

70100080474

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	D	EGR solenoid <1.8L Engine>	C
ABS solenoid valve	B	Evaporative emission purge solenoid <1.5L Engine>	C
Auto-cruise control vacuum pump	A	Evaporative emission purge solenoid <1.8L Engine>	C
ABS solenoid valve (built in hydraulic unit)	C	Evaporative emission ventilation solenoid	E






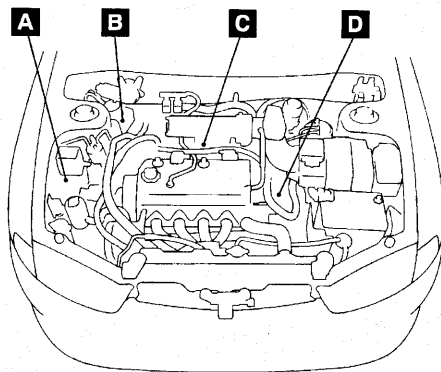


16M0258

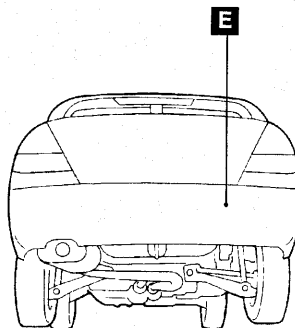

16M0344




00008786

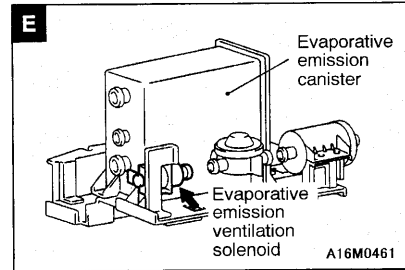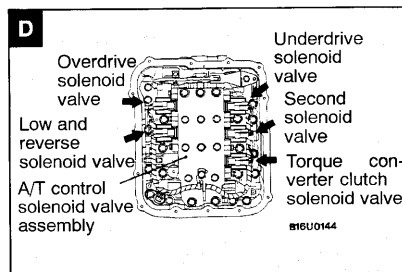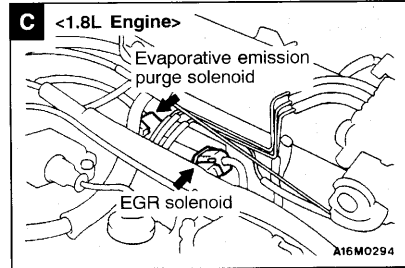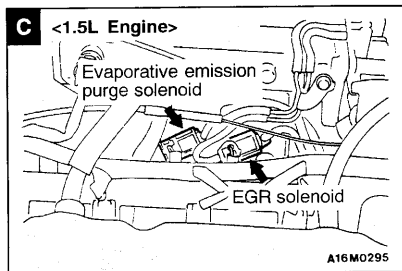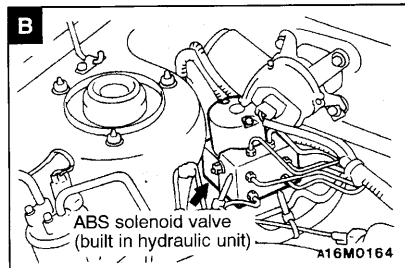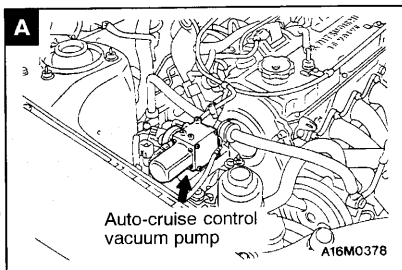

## DIODE

70100090316


Name	Symbol	Name	Symbol
Diode (for ABS circuit)	B	Diode (for fog light circuit)	A

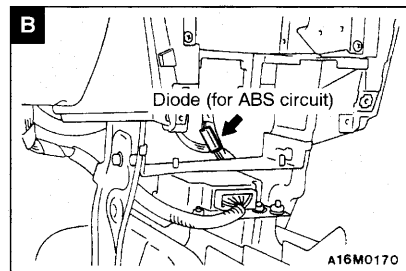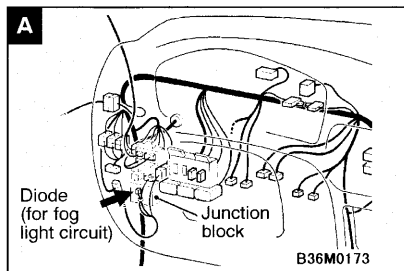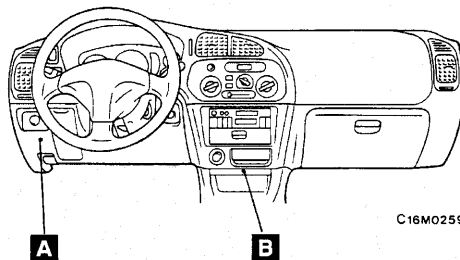








OTHER DEVICES

Name	Symbol	Name	Symbol
A/C refrigerant temperature switch	D	Idle air control motor	1.5L Engine B
			1.8L Engine B
Dual pressure switch	A	Power steering pressure switch	C

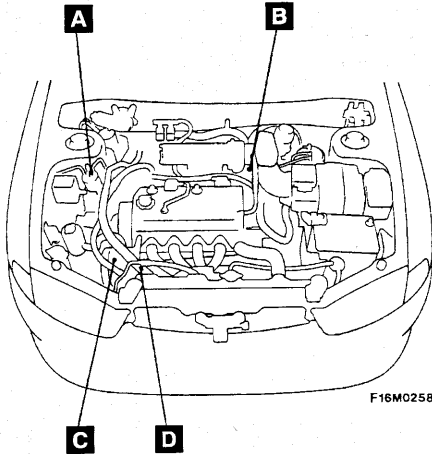

F16M0258

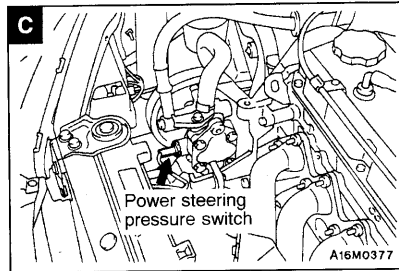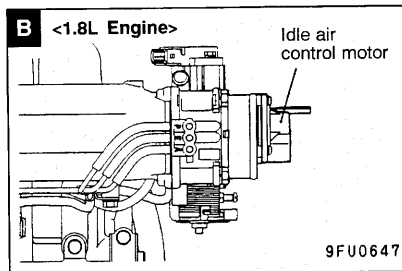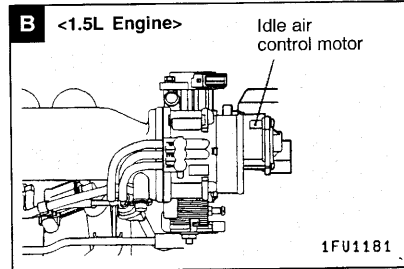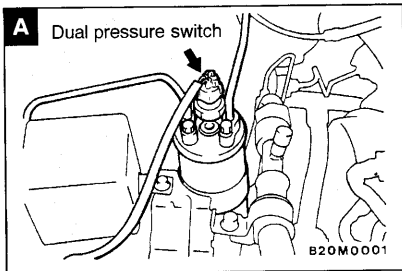

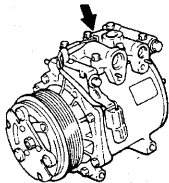**D**A/C refrigerant  
temperature switch

A20R0015