

---

# CONFIGURATION DIAGRAMS AND SPLICE LOCATIONS

## CONTENTS

80109000326

CONFIGURATION DIAGRAMS .....	80A
SPLICE LOCATIONS .....	80B

# CONFIGURATION DIAGRAMS


## CONTENTS

80109000128

<b>Dash Panel</b> .....	14	<b>Interior</b>	
<b>Door</b>		<2-Door Models> .....	20
<2-Door Models> .....	24	<4-Door Models> .....	21
<4-Door Models> .....	25	<b>Luggage Compartment</b>	
<b>Engine Compartment</b>		<2-Door Models> .....	22
<1.5L Engine> .....	6	<4-Door Models> .....	23
<1.8L Engine> .....	10	<b>Overall Configuration Diagram</b> .....	3
<b>How to Read Configuration Diagrams</b> .....	4	<b>Steering Column</b> .....	18
<b>Instrument Panel</b> .....	19		

OVERALL CONFIGURATION DIAGRAM

80100010380

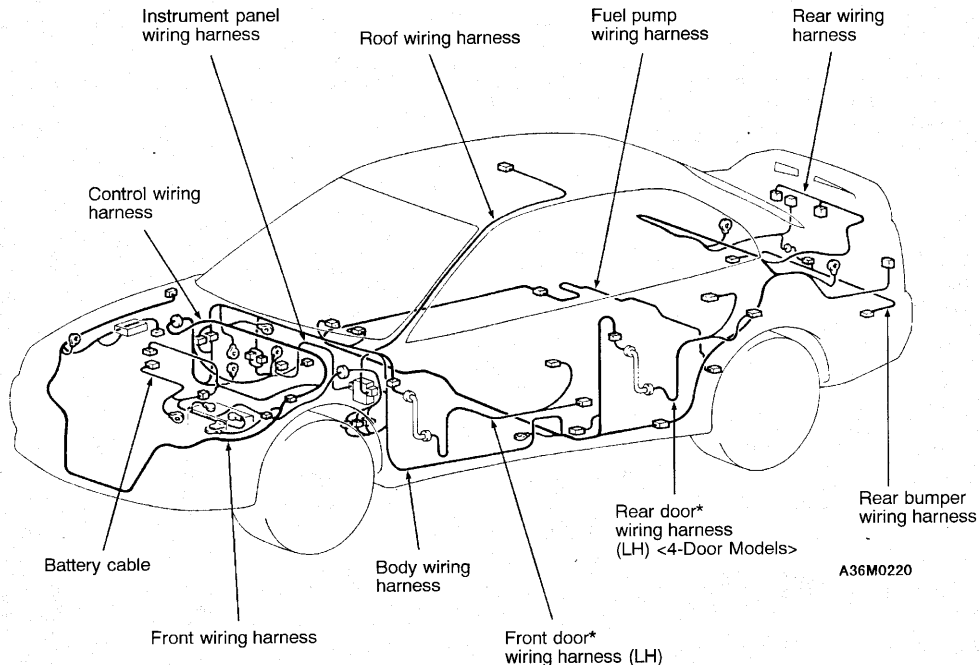

NOTE

- (1) This illustration shows only the major wiring harness.
- (2) The \* symbol indicates also equipped at the right side.

# HOW TO READ CONFIGURATION DIAGRAMS

The wiring harness diagrams clearly show the connector locations and harness routings at each site on actual vehicles.

Denotes connector No.

The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.

The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number.

Numbers are assigned to parts in clockwise order on the diagram.

Example: **A-12**

Number specific to connector (serial number)

Connector location site symbol

A: Engine compartment

B: Dash panel

C: Steering column

D: Instrument panel

E: Interior

F: Luggage compartment

G: Door


Denotes ground point.

Same ground number is used throughout circuit diagrams to facilitate search of ground point. Refer to **GROUNDING LOCATION**.

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Indicates the device to which the connector is connected.

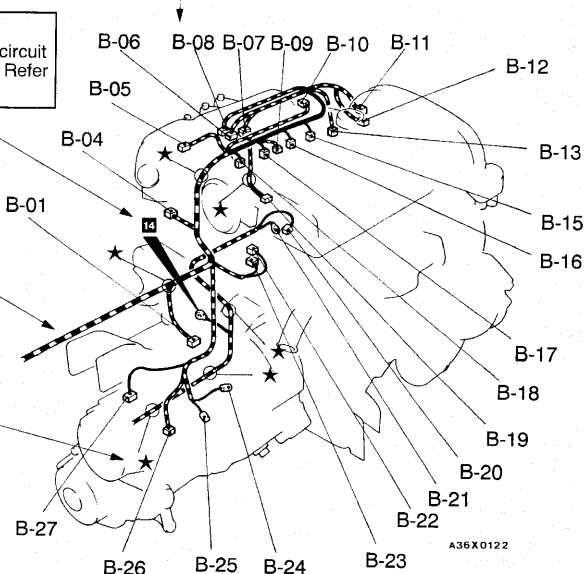

- B-01 (3-B) Vehicle speed sensor
- B-02 (6) Distributor assembly
- B-03 (2) Distributor assembly
- B-04 (6-B) Idle air control motor
- B-05 (4-B) Throttle position sensor

- B-16 (2-GR) Injector No. 2
- B-17 (2-GR) Injector No. 3
- B-18 (2-GR) Injector No. 4
- B-19 (4) Heated oxygen sensor (front)
- B-20 (1-BR) Starter motor

\*Denotes connector No. and connector color (except milk white) to facilitate connector identification

Example: **(2-B)**

Connector color (milk white if no color is indicated)



Number of connector pins

\*: Typical connector colors


- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

ENGINE COMPARTMENT <1.5L Engine>

80100031332

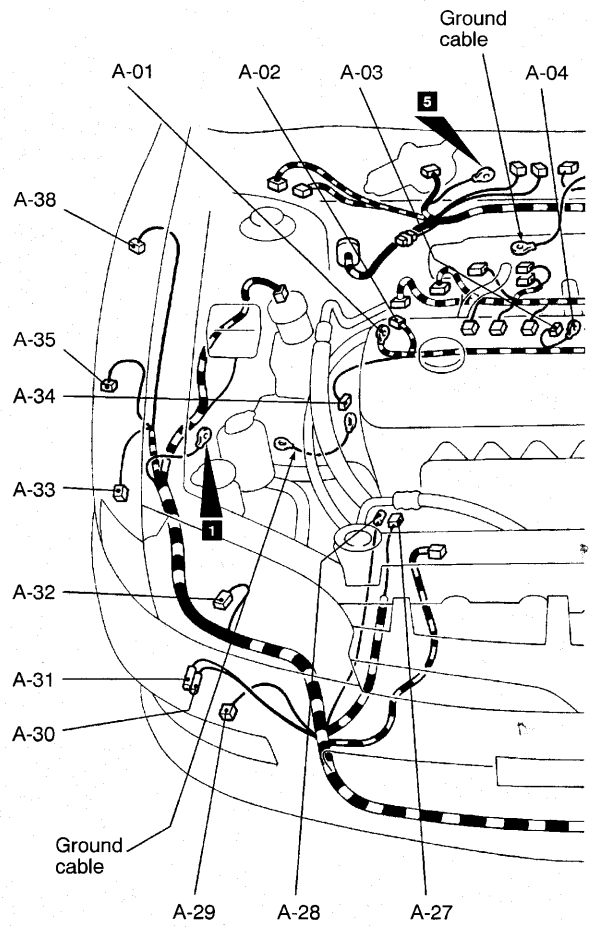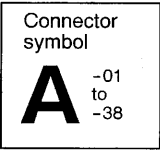

A-01 (1)	Generator	A-15X (5)	Headlight relay
A-02 (4-GR)	Generator	A-16X (5)	Starter relay <M/T>
A-03 (1-B)	Starter	A-18 (2-B)	Front wiring harness and battery cable assembly combination
A-04 (1)	Starter	A-19 (3-GR)	Front turn signal light (LH)
A-05 (8-B)	Front wiring harness and control wiring harness combination	A-20 (3-B)	Headlight (LH)
A-09 (2-B)	ABS speed sensor (Front: LH)	A-21 (1)	Horn (LH)
A-11X (5)	Horn relay	A-22 (1)	Horn (LH)
A-13X (5)	Radiator fan relay	A-23 (2-B)	No connection

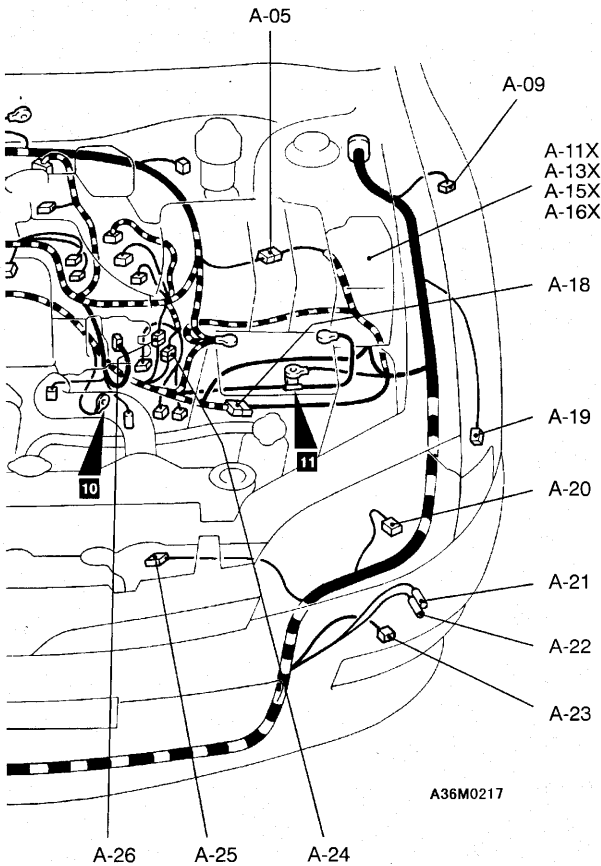


Connector color code  
 B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray


- |             |   |             |                              |
|-------------|---|-------------|------------------------------|
| A-24 (4-GR) | Control wiring harness and battery cable assembly combination <A/T> | A-29 (2-B)  | No connection                |
| A-25 (2-B)  | Radiator fan motor  | A-30 (1)    | Horn (RH)                    |
| A-26 (4-GR) | Control wiring harness and battery cable assembly combination <M/T> | A-31 (1)    | Horn (RH)                    |
| A-27 (1-B)  | Magnetic clutch and refrigerant temperature switch <A/C>            | A-32 (3-B)  | Headlight (RH)               |
| A-28 (1)    | Power steering pressure switch                                      | A-33 (3-GR) | Front turn signal light (RH) |
|             |   | A-34 (1-B)  | Oil pressure switch          |
|             |   | A-35 (2-B)  | Windshield washer motor      |
|             |   | A-38 (2-B)  | ABS speed sensor (Front: RH) |

Connector  
symbol

**A**  
-39  
to  
-83

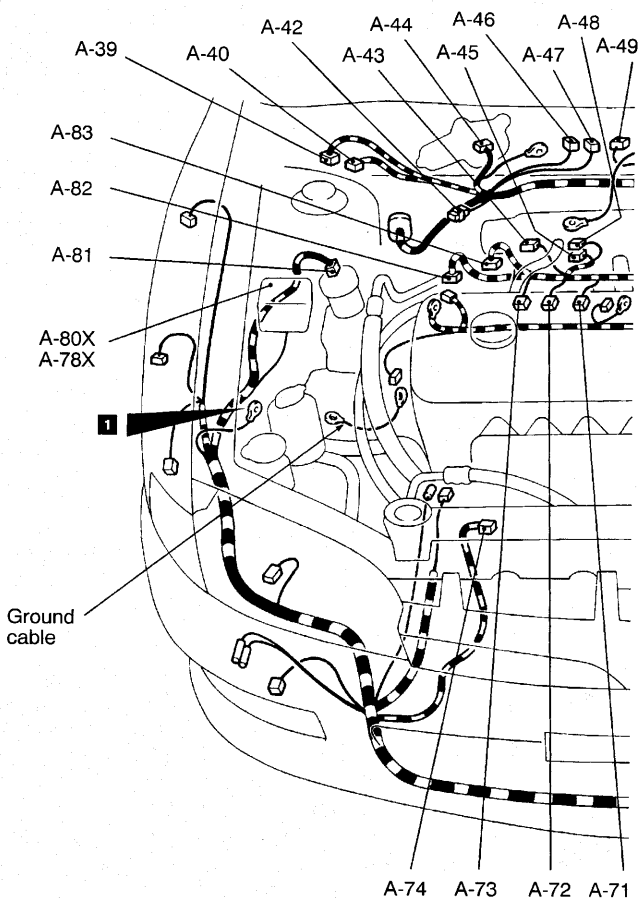

- |             |                                     |             |                                       |
|-------------|-------------------------------------|-------------|---------------------------------------|
| A-39 (2-B)  | ABS hydraulic unit                  | A-51 (6-B)  | Idle air control motor                |
| A-40 (8-B)  | ABS hydraulic unit                  | A-52 (4-B)  | Throttle position sensor              |
| A-42 (1-L)  | Engine speed detection connector    | A-54 (1-B)  | Engine coolant temperature gauge unit |
| A-43 (2-B)  | Intake air temperature sensor       | A-55 (3-B)  | Vehicle speed sensor                  |
| A-44 (4-B)  | Windshield wiper motor              | A-56 (2-B)  | Brake fluid level switch              |
| A-45 (2-B)  | Evaporative emission purge solenoid | A-57 (3-GR) | Output shaft speed sensor <A/T>       |
| A-46 (5-B)  | ABS valve relay                     | A-59 (2-B)  | Back-up light switch <M/T>            |
| A-47 (5-B)  | ABS motor relay                     | A-60 (2-B)  | Engine coolant temperature sensor     |
| A-48 (2-BR) | EGR solenoid                        | A-61 (7-B)  | Distributor assembly                  |
| A-49 (3-B)  | Manifold absolute pressure sensor   |             |                                       |

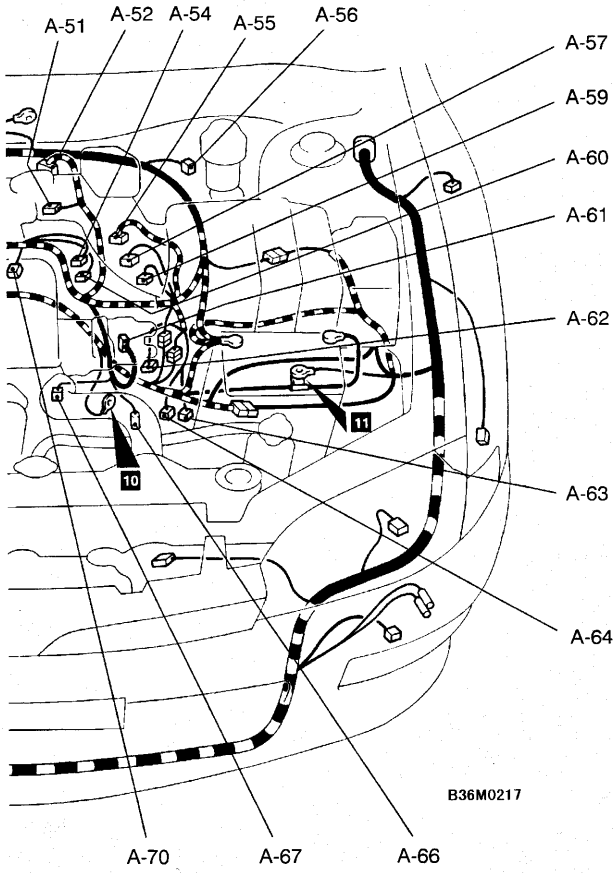

Connector color code



- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

- |              |  |             |   |
|--------------|--|-------------|---|
| A-62 (3-B)   | Input shaft speed sensor <A/T>               | A-73 (2-GR) | Injector No. 1  |
| A-63 (10-B)  | Park/neutral position switch <A/T>           | A-74 (2-B)  | Condenser fan motor   |
| A-64 (10-GR) | A/T control solenoid valve assembly          | A-78X (4)   | Condenser fan relay   |
| A-66 (1-B)   | Capacitor                                    | A-80X (4)   | A/C compressor relay  |
| A-67 (4-B)   | Heated oxygen sensor (Front)<br><California> | A-81 (2)    | Dual pressure switch  |
| A-70 (2-GR)  | Injector No. 4                               | A-82 (3-B)  | Crankshaft position sensor  |
| A-71 (2-GR)  | Injector No. 3                               | A-83 (4-B)  | Heated oxygen sensor (Front) <Federal> or Heated oxygen sensor (Rear)<br><California> |
| A-72 (2-GR)  | Injector No. 2                               |             |   |




ENGINE COMPARTMENT <1.8L Engine>

80100031349

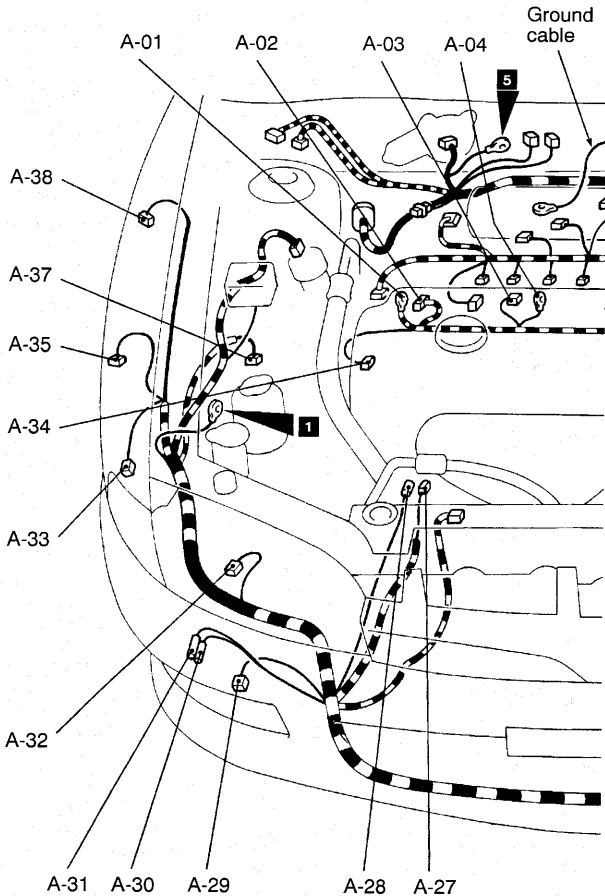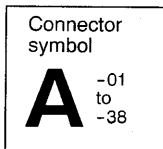

- |             |   |             |   |
|-------------|---|-------------|---|
| A-01 (1)    | Generator   | A-15X (5)   | Headlight relay   |
| A-02 (4-GR) | Generator   | A-16X (5)   | Starter relay <M/T>   |
| A-03 (1-B)  | Starter   | A-18 (2-B)  | Front wiring harness and battery cable assembly combination |
| A-04 (1)    | Starter   | A-19 (3-GR) | Front turn signal light (LH)                                |
| A-05 (8-B)  | Front wiring harness and control wiring harness combination | A-20 (3-B)  | Headlight (LH)  |
| A-09 (2-B)  | ABS speed sensor (Front: LH)                                | A-21 (1)    | Horn (LH)   |
| A-11X (5)   | Horn relay  | A-22 (1)    | Horn (LH)   |
| A-13X (5)   | Radiator fan relay  | A-23 (2-B)  | Fog light (LH)  |

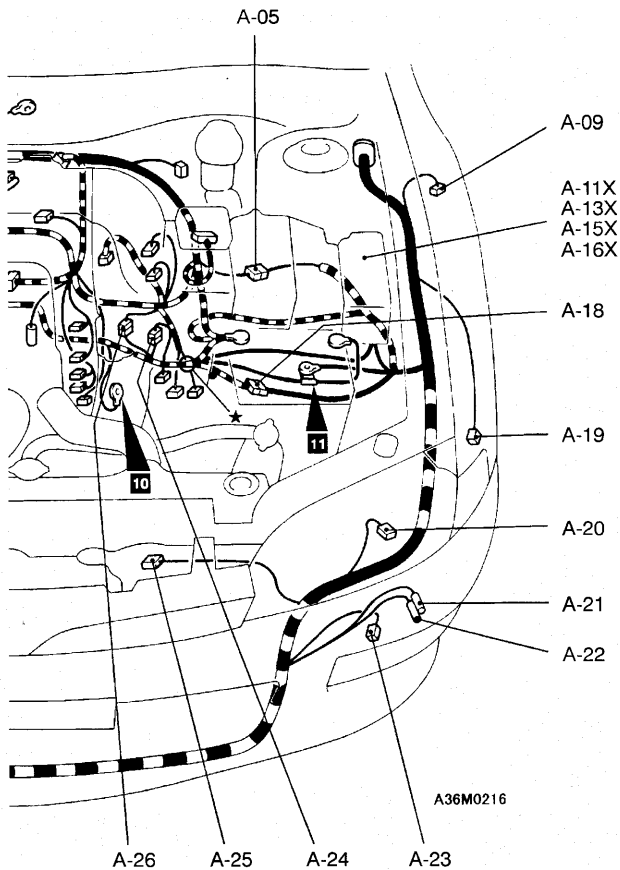

**Connector color code**


- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

- |             |   |             |                                 |
|-------------|---|-------------|---------------------------------|
| A-24 (4-GR) | Control wiring harness and battery cable assembly combination <A/T> | A-30 (1)    | Horn (RH)                       |
| A-25 (2-B)  | Radiator fan motor  | A-31 (1)    | Horn (RH)                       |
| A-26 (4-GR) | Control wiring harness and battery cable assembly combination <M/T> | A-32 (3-B)  | Headlight (RH)                  |
| A-27 (1-B)  | Magnetic clutch and refrigerant temperature switch <A/C>            | A-33 (3-GR) | Front turn signal light (RH)    |
| A-28 (1)    | Power steering pressure switch                                      | A-34 (1-B)  | Oil pressure switch             |
| A-29 (2-B)  | Fog light (RH)  | A-35 (2-B)  | Windshield washer motor         |
|             |   | A-37 (4-B)  | Auto-cruise control vacuum pump |
|             |   | A-38 (2-B)  | ABS speed sensor (Front: RH)    |


# 80A-12 CONFIGURATION DIAGRAMS - Engine Compartment <1.8L Engine>

Connector  
symbol

**A** -39  
to  
-83

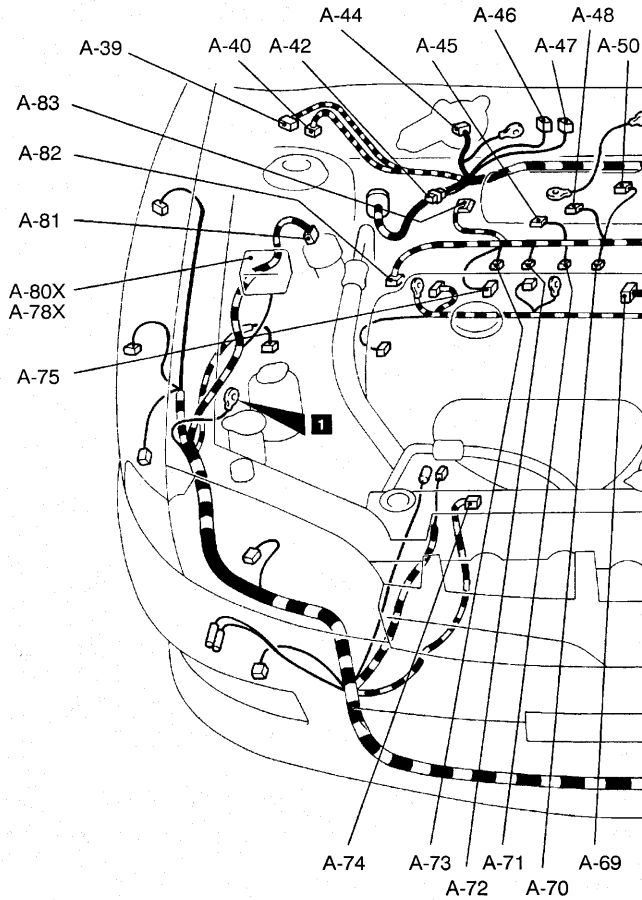

A-39 (2-B)	ABS hydraulic unit	A-52 (4-B)	Throttle position sensor
A-40 (8-B)	ABS hydraulic unit	A-54 (1-B)	Engine coolant temperature gauge unit
A-42 (1-L)	Engine speed detection connector	A-55 (3-B)	Vehicle speed sensor
A-44 (4-B)	Windshield wiper motor	A-56 (2-B)	Brake fluid level switch
A-45 (2-B)	Evaporative emission purge solenoid	A-57 (3-GR)	Output shaft speed sensor <A/T>
A-46 (5-B)	ABS valve relay	A-58 (7-B)	Volume air flow sensor
A-47 (5-B)	ABS motor relay	A-59 (2-B)	Back-up light switch <M/T>
A-48 (2-BR)	EGR solenoid	A-60 (2-B)	Engine coolant temperature sensor
A-50 (3-B)	Manifold differential pressure sensor	A-62 (3-B)	Input shaft speed sensor <A/T>
A-51 (6-B)	Idle air control motor	A-63 (10-B)	Park/neutral position switch <A/T>

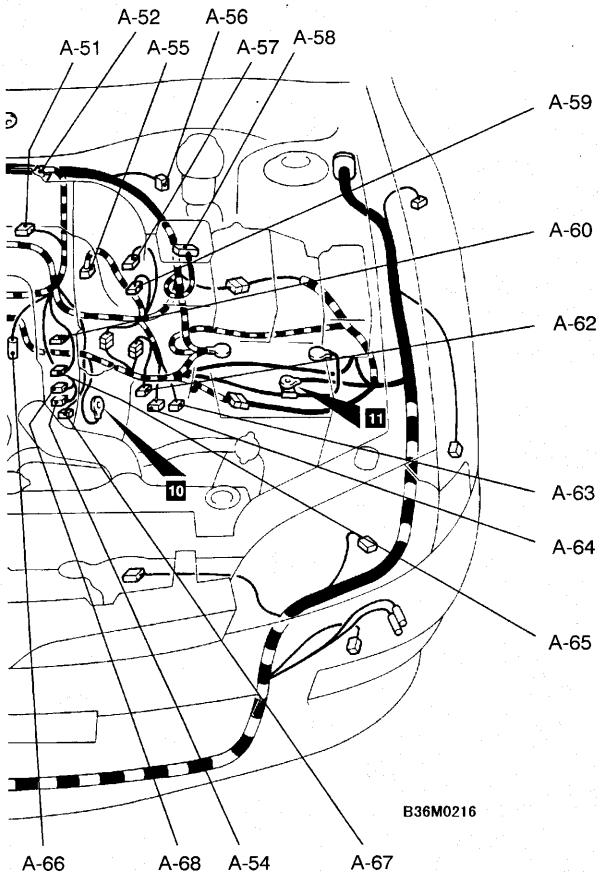

Connector color code  
 B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

- A-64 (10-GR) A/T control solenoid valve assembly
- A-65 (3-B) Camshaft position sensor
- A-66 (1-B) Capacitor
- A-67 (4-B) Heated oxygen sensor (Front)  
<California>
- A-68 (4-B) Ignition failure sensor
- A-69 (3-GR) Ignition coil 1
- A-70 (2-GR) Injector No. 4
- A-71 (2-GR) Injector No. 3
- A-72 (2-GR) Injector No. 2

- A-73 (2-GR)
- A-74 (2-B)
- A-75 (3-GR)
- A-78X (4)
- A-80X (4)
- A-81 (2)
- A-82 (3-B)
- A-83 (4-B)



- Injector No. 1
- Condenser fan motor
- Ignition coil 2
- Condenser fan relay
- A/C compressor relay
- Dual pressure switch
- Crankshaft position sensor
- Heated oxygen sensor (Front) <Federal> or Heated oxygen sensor (Rear)  
<California>

## DASH PANEL


Connector  
symbol

**B** -01X  
to  
-29

<Vehicles without relay box  
in passenger compartment>

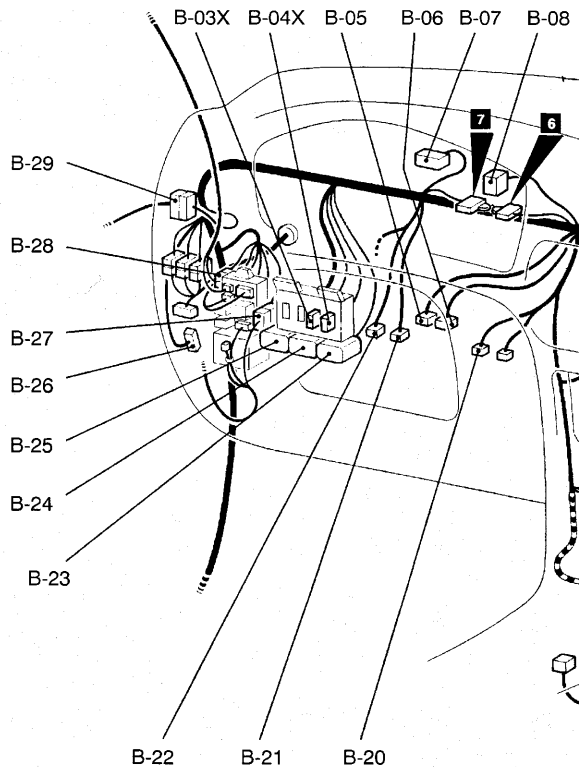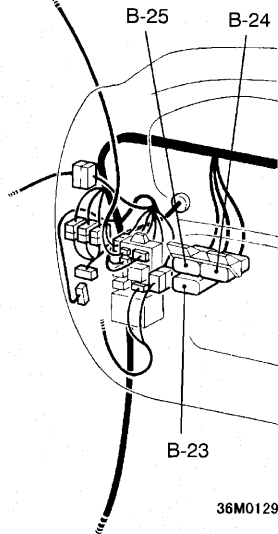

B-03X (5)	Power window relay	B-12 (4)	Heater control panel illumination light and micro switch
B-04X (5)	Fog light relay	B-13 (2-R)	Air bag module (squib) (Passenger's side)
B-05 (2)	Stop light switch <Without auto-cruise>	B-14 (3)	Automatic compressor-ECU
B-06 (4)	Stop light switch <With auto-cruise>	B-15 (22)	Body wiring harness and front door wiring harness (RH) combination
B-07 (25)	Combination meter	B-16 (2)	Blower motor
B-08 (25)	Combination meter	B-17 (4)	Resistor
B-09 (6-B)	Defogger switch		
B-10 (8)	A/C switch		
B-11 (8)	Blower switch		

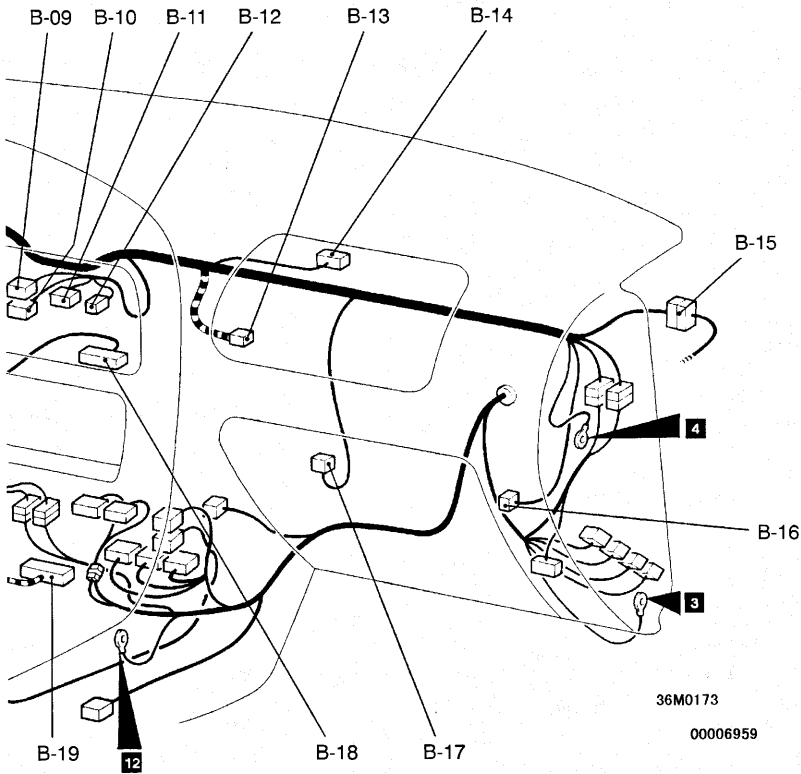

Connector color code


- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

B-18 (14)	Radio and tape player	B-25 (14)	Joint connector (2)
B-19 (21-Y)	SRS-ECU	B-26 (16-B)	Auto-cruise control-ECU
B-20 (16-B)	Data link connector	B-27 (18)	Body wiring harness and instrument panel wiring harness combination
B-21 (2)	Clutch pedal position switch <M/T>	B-28 (6)	Body wiring harness and roof wiring harness combination
B-22 (2)	Clutch pedal position switch <With auto-cruise>	B-29 (22)	Body wiring harness and front door wiring harness (LH) combination
B-23 (14-L)	Joint connector (4)		
B-24 (14)	Joint connector (3)		


Connector  
symbol

**B**


-30  
to  
-70

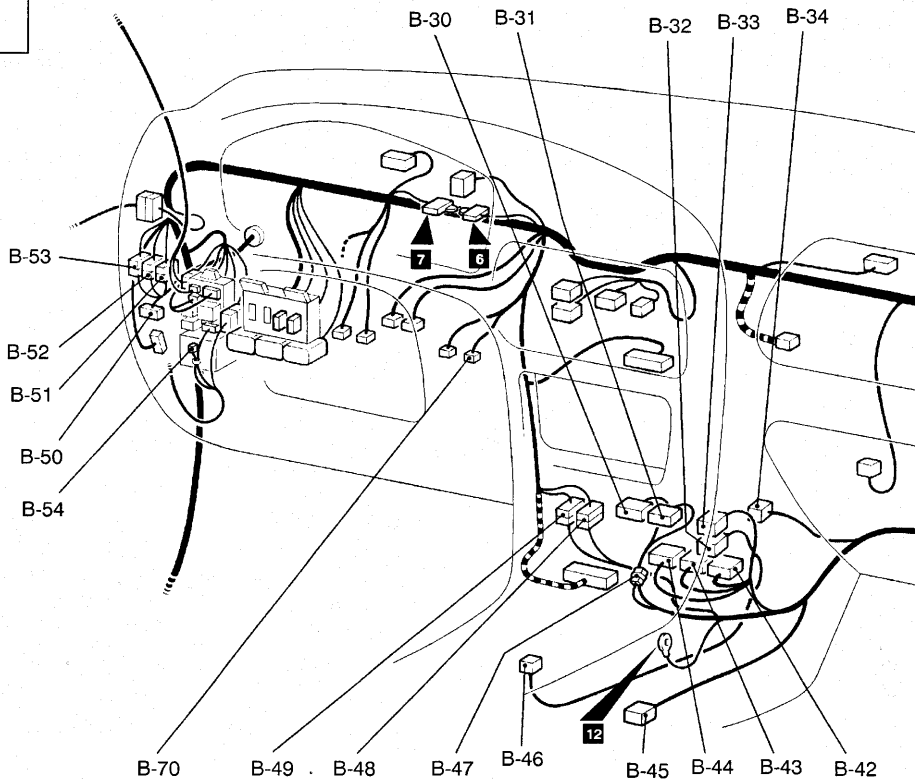

B-30 (16)	ABS-ECU	B-44 (26-L)	Transaxle control module
B-31 (26-Y)	ABS-ECU	B-45 (4)	Heated oxygen sensor (Rear) <Federal>
B-32 (4)	Multiport fuel injection relay	B-46 (2)	A/T selector lever position illumination light
B-33 (4)	Fuel pump relay	B-47 (2-B)	Diode (for ABS circuit)
B-34 (4-B)	Transaxle control relay	B-48 (16-B)	Body wiring harness and control wiring harness combination
B-35 (13)	Body wiring harness and control wiring harness combination	B-49 (14)	Body wiring harness and control wiring harness combination <A/T>
B-36 (16-B)	Body wiring harness and control wiring harness combination	B-50 (19-B)	Joint connector (1)
B-37 (22-Y)	Engine control module	B-51 (20)	Body wiring harness and front wiring harness combination
B-38 (12-Y)	Engine control module	B-52 (6)	Body wiring harness and front wiring harness combination
B-39 (16-Y)	Engine control module		
B-40 (26-Y)	Engine control module		
B-41 (19-B)	Joint connector (5)		
B-42 (22-L)	Transaxle control module		
B-43 (16-L)	Transaxle control module		

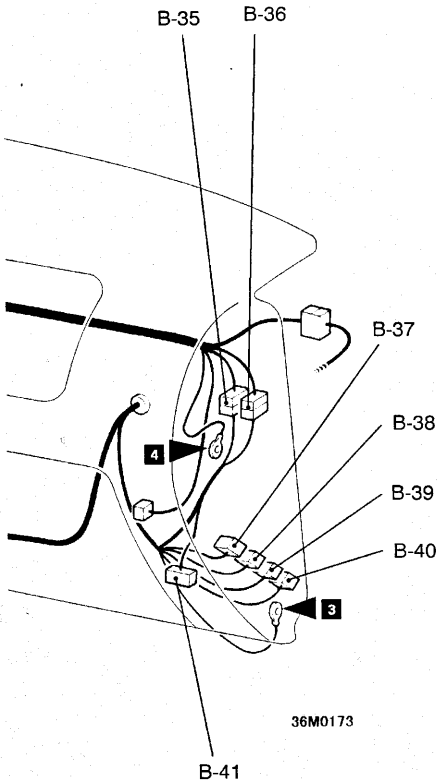


Junction block (Front)

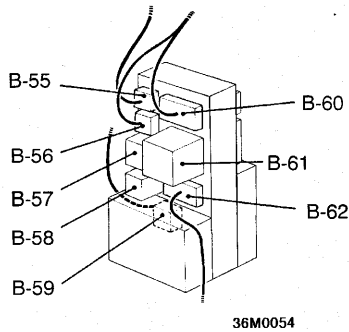

Connector color code  
 B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

(Rear)

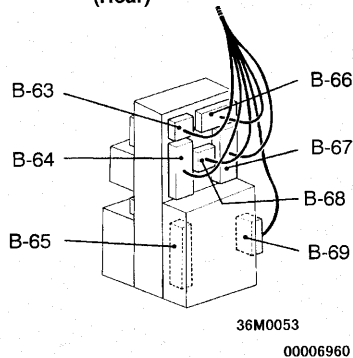


- |            |  |           |   |
|------------|--|-----------|---|
| B-53 (14)  | Body wiring harness and front wiring harness combination       | B-63 (10) | Body wiring harness and junction block combination            |
| B-54 (2-B) | Diode (for fog light circuit)                                  | B-64 (13) | Body wiring harness and junction block combination            |
| B-55 (2)   | Roof wiring harness and junction block combination             | B-65 (12) | Junction block and ETACS-ECU or junction block and Buzzer-ECU |
| B-56 (1)   | Front wiring harness and junction block combination            | B-66 (16) | Body wiring harness and junction block combination            |
| B-57 (5)   | Blower relay   | B-67 (8)  | Body wiring harness and junction block combination            |
| B-58 (5)   | Defogger relay   | B-68 (4)  | Body wiring harness and junction block combination            |
| B-59 (4)   | Dedicated fuse   | B-69 (8)  | ETACS-ECU   |
| B-60 (11)  | Front wiring harness and junction block combination            | B-70 (12) | Data link connector   |
| B-61 (3)   | Turn signal and hazard flasher unit                            |           |   |
| B-62 (14)  | Instrument panel wiring harness and junction block combination |           |   |



## STEERING COLUMN

Connector  
symbol

**C**

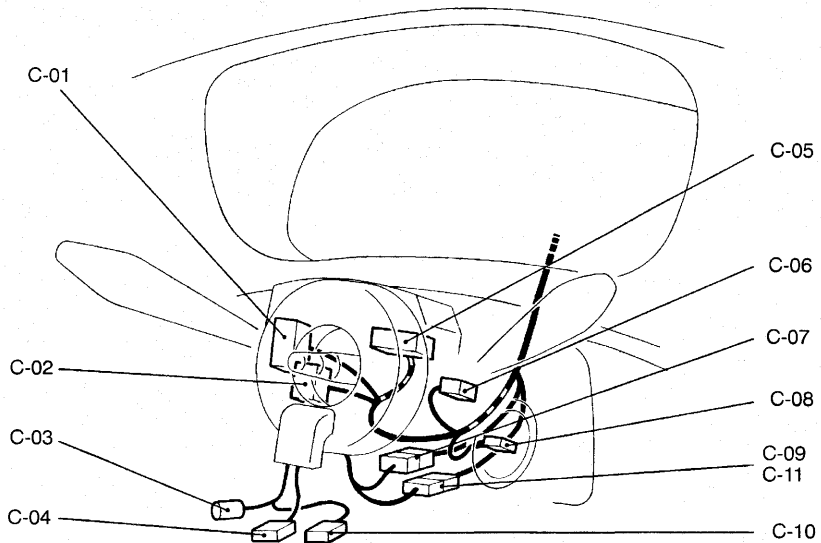



A36M0170

Connector color code

B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

C-01 (6)	Column switch
C-02 (10)	Column switch
C-03 (1)	Horn switch
C-04 (2)	Air bag module (squib) (Driver's side)
C-05 (12)	Column switch
C-06 (6)	Ignition switch
C-07 (2)	Clock spring
C-08 (5)	Steering lock switch
C-09 (3)	Clock spring (without auto-cruise)
C-10 (2)	Auto-cruise control switch
C-11 (4)	Clock spring (with auto-cruise)

INSTRUMENT PANEL

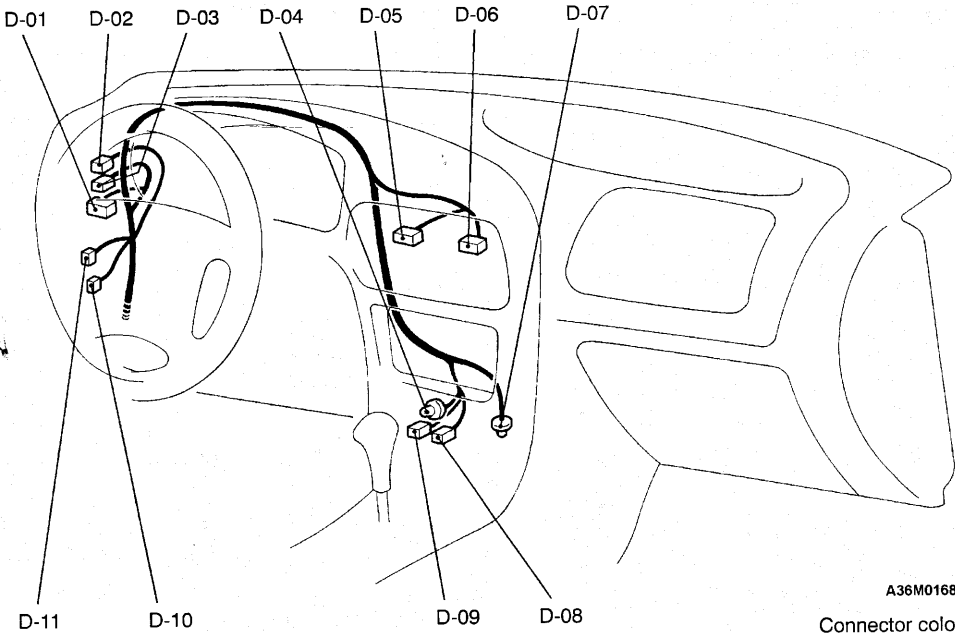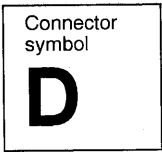


A36M0168

Connector color code  
 B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

- D-01 (9) Remote controlled mirror switch
- D-02 (8) No connection
- D-03 (6) Fog light switch
- D-04 (2) Cigarette lighter illumination light
- D-05 (10) Hazard warning light switch
- D-06 (4) Clock
- D-07 (2) Ashtray illumination light
- D-08 (1) Cigarette lighter
- D-09 (1-B) Cigarette lighter
- D-10 (2) Rheostat <Without auto-cruise>
- D-11 (3) Rheostat <With auto-cruise>

## INTERIOR &lt;2-Door Models&gt;


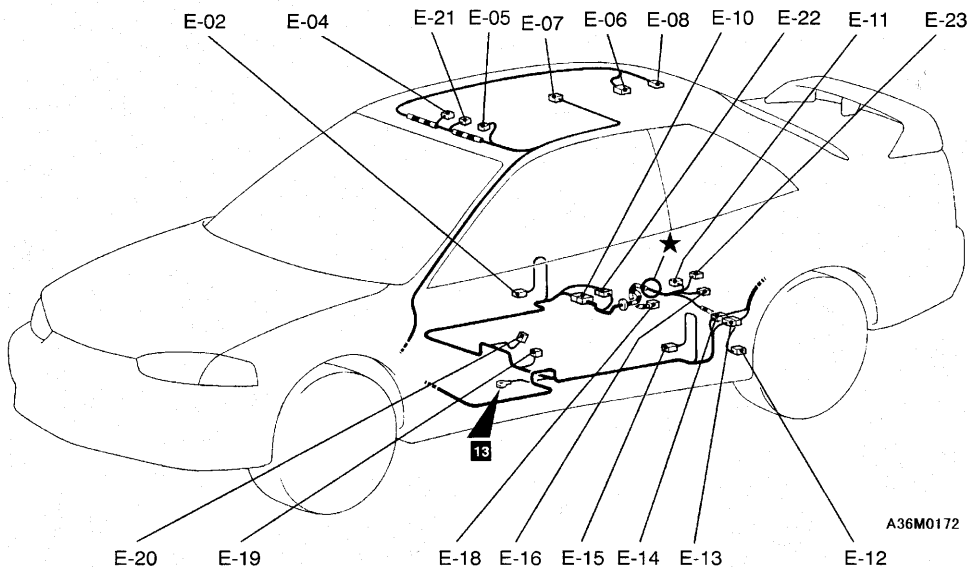
Connector  
symbol**E**

## Connector color code

B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

E-02 (2)	Front door switch (RH)	E-14 (2)	Body wiring harness and rear wiring harness combination
E-04 (2)	Dome light <With sunroof>	E-15 (2)	Front door switch (LH)
E-05 (6)	Sunroof switch	E-16 (3-B)	Fuel gauge unit
E-06 (18)	Sunroof-ECU	E-18 (2-B)	ABS speed sensor (Rear: RH)
E-07 (2)	Dome light <Without sunroof>	E-19 (2)	Seat belt buckle switch
E-08 (8)	Sunroof motor	E-20 (1-B)	Parking brake switch
E-10 (10)	Body wiring harness and fuel pump wiring harness combination	E-21 (1)	Map light <Without sunroof>
E-11 (2)	Fuel pump	E-22 (3)	Body wiring harness and fuel pump wiring harness combination
E-12 (2-B)	ABS speed sensor (Rear: LH)	E-23 (3-B)	Fuel tank differential pressure sensor
E-13 (18)	Body wiring harness and rear wiring harness combination		

INTERIOR <4-Door Models>

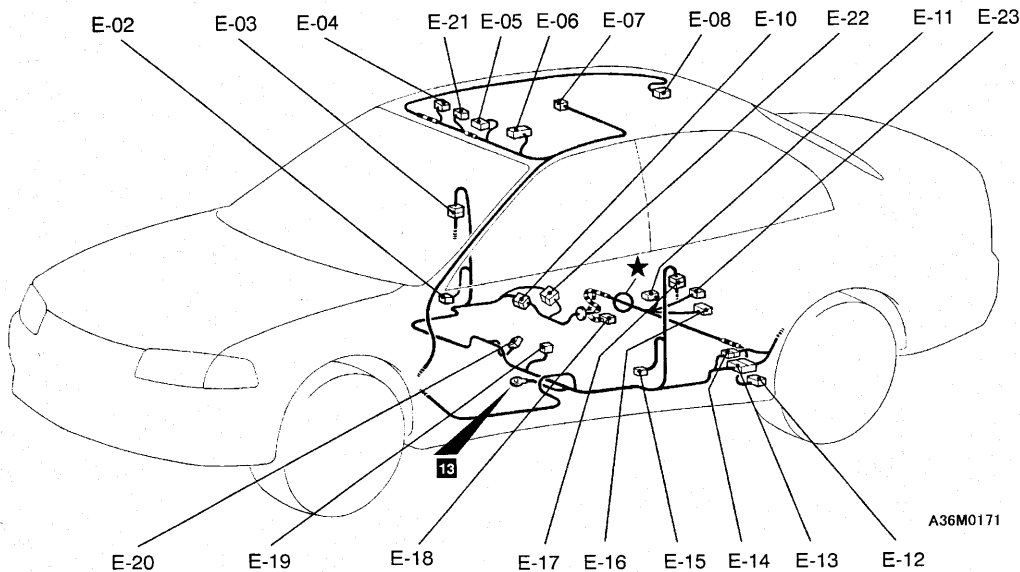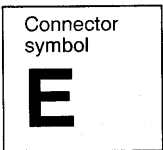


Connector color code

- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

- |            |   |            |   |
|------------|---|------------|---|
| E-02 (2)   | Front door switch (RH)  | E-14 (2)   | Body wiring harness and rear wiring harness combination           |
| E-03 (6)   | Body wiring harness and rear door wiring harness (RH) combination | E-15 (2)   | Front door switch (LH)  |
| E-04 (2)   | Dome light <With sunroof>   | E-16 (3-B) | Fuel gauge unit   |
| E-05 (6)   | Sunroof switch  | E-17 (6)   | Body wiring harness and rear door wiring harness (LH) combination |
| E-06 (18)  | Sunroof-ECU   | E-18 (2-B) | ABS speed sensor (Rear: RH)                                       |
| E-07 (2)   | Dome light <Without sunroof>                                      | E-19 (2)   | Seat belt buckle switch   |
| E-08 (8)   | Sunroof motor   | E-20 (1-B) | Parking brake switch  |
| E-10 (10)  | Body wiring harness and fuel pump wiring harness combination      | E-21 (1)   | Map light <Without sunroof>                                       |
| E-11 (2)   | Fuel pump   | E-22 (3)   | Body wiring harness and fuel pump wiring harness combination      |
| E-12 (2-B) | ABS speed sensor (Rear: LH)                                       | E-23 (3-B) | Fuel tank differential pressure sensor                            |
| E-13 (18)  | Body wiring harness and rear wiring harness combination           |            |   |

## LUGGAGE COMPARTMENT &lt;2-Door Models&gt;

80100150471

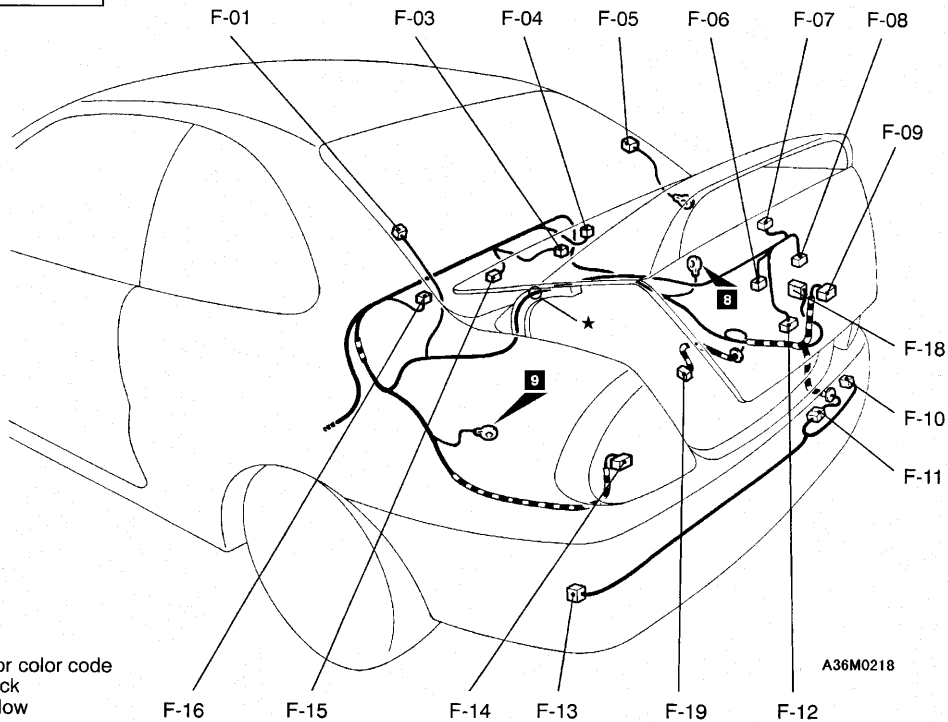Connector  
symbol**F**

## Connector color code


B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

A36M0218

F-01 (1-B)	Defogger (+)	F-11 (4)	Rear wiring harness and rear bumper wiring harness combination
F-03 (2)	High-mounted stop light (on rear shelf)	F-12 (1-B)	Trunk lid latch switch
F-04 (2-B)	Rear speaker (RH)	F-13 (2)	Rear side-marker light (LH)
F-05 (1-B)	Defogger (-)	F-14 (6)	Rear combination light (RH)
F-06 (2-GR)	License plate light (LH)	F-15 (2)	Luggage compartment light
F-07 (2)	High-mounted stop light (on rear spoiler)	F-16 (2-B)	Rear speaker (LH)
F-08 (2-GR)	License plate light (RH)	F-18 (6-B)	CD changer
F-09 (6)	Rear combination light (RH)	F-19 (2-B)	Evaporative emission ventilation solenoid
F-10 (2)	Rear side-marker light (RH)		

**LUGGAGE COMPARTMENT <4-DOOR MODELS>**

Connector symbol  
**F**

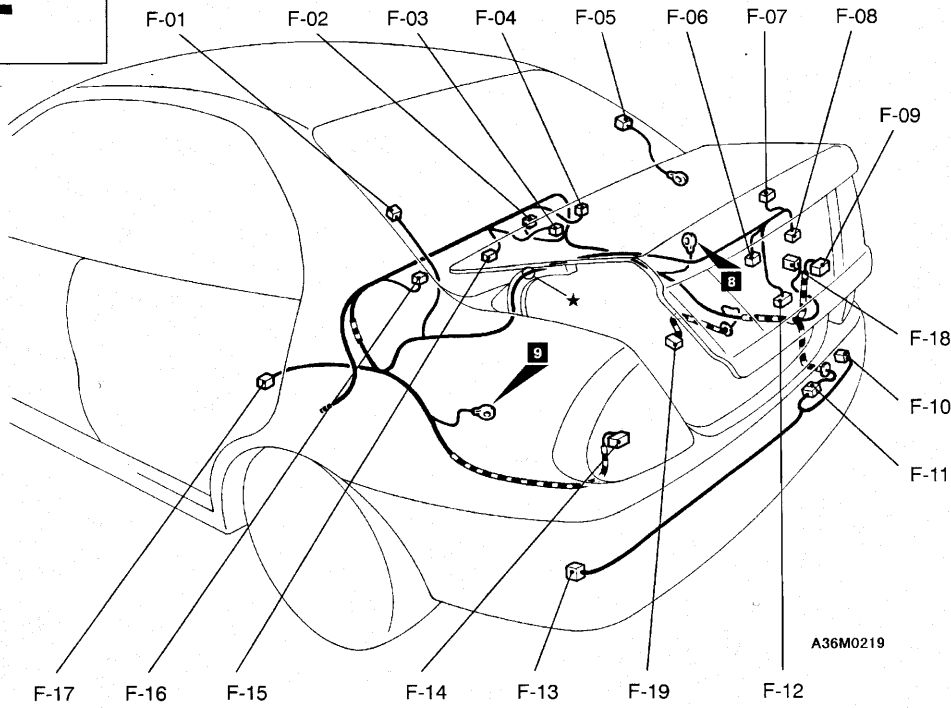

Connector color code


- B : Black
- Y : Yellow
- L : Blue
- G : Green
- R : Red
- BR : Brown
- V : Violet
- O : Orange
- GR : Gray

- |             |   |            |  |
|-------------|---|------------|--|
| F-01 (1-B)  | Defogger (+)                              | F-11 (4)   | Rear wiring harness and rear bumper wiring harness combination |
| F-02 (1-B)  | Rear door switch (RH)                     | F-12 (1-B) | Trunk lid latch switch   |
| F-03 (2)    | High-mounted stop light (on rear shelf)   | F-13 (2)   | Rear side-marker light (LH)                                    |
| F-04 (2-B)  | Rear speaker (RH)                         | F-14 (6)   | Rear combination light (LH)                                    |
| F-05 (1-B)  | Defogger (-)                              | F-15 (2)   | Luggage compartment light                                      |
| F-06 (2-GR) | License plate light (LH)                  | F-16 (2-B) | Rear speaker (LH)  |
| F-07 (2)    | High-mounted stop light (on rear spoiler) | F-17 (1-B) | Rear door switch (LH)  |
| F-08 (2-GR) | License plate light (RH)                  | F-18 (6-B) | CD changer   |
| F-09 (6)    | Rear combination light (RH)               | F-19 (2-B) | Evaporative emission ventilation solenoid                      |
| F-10 (2)    | Rear side-marker light (RH)               |            |  |


## DOOR &lt;2-Door Models&gt;

Connector  
symbol**G**

&lt;Passenger's side door&gt;

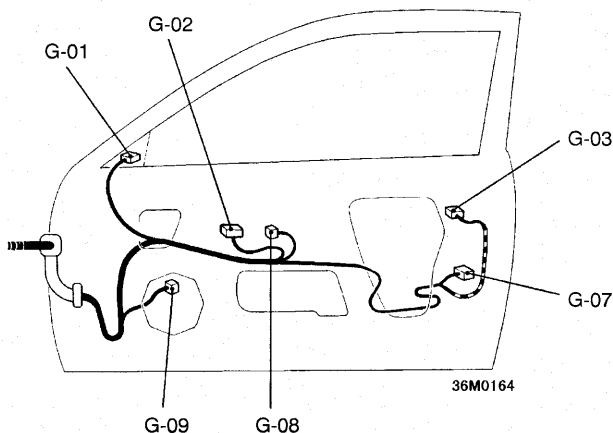

&lt;Driver's side door&gt;

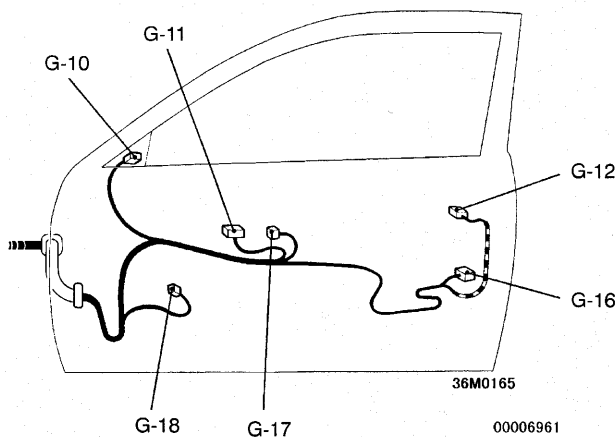




Connector color code

B : Black  
 Y : Yellow  
 L : Blue  
 G : Green  
 R : Red  
 BR : Brown  
 V : Violet  
 O : Orange  
 GR : Gray

G-01 (3)	Remote controlled mirror (RH)	G-10 (3)	Remote controlled mirror (LH)
G-02 (8)	Front power window sub switch	G-11 (10)	Front power window main switch
G-03 (3)	Door lock key cylinder switch (RH)	G-12 (3)	Door lock key cylinder switch (LH)
G-07 (6-B)	Front door lock actuator (RH)	G-16 (6-B)	Front door lock actuator (LH)
G-08 (2)	Front power window motor (RH)	G-17 (2)	Front power window motor (LH)
G-09 (2-B)	Front speaker (RH)	G-18 (2-B)	Front speaker (LH)

DOOR <4-Door Models>

80100140430

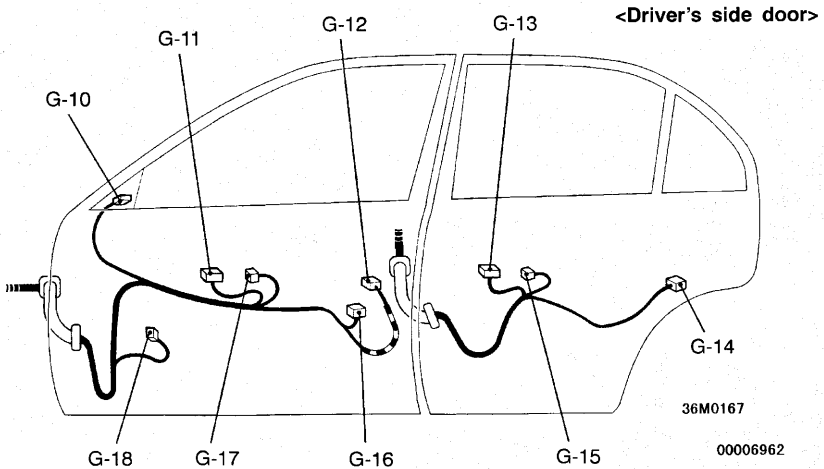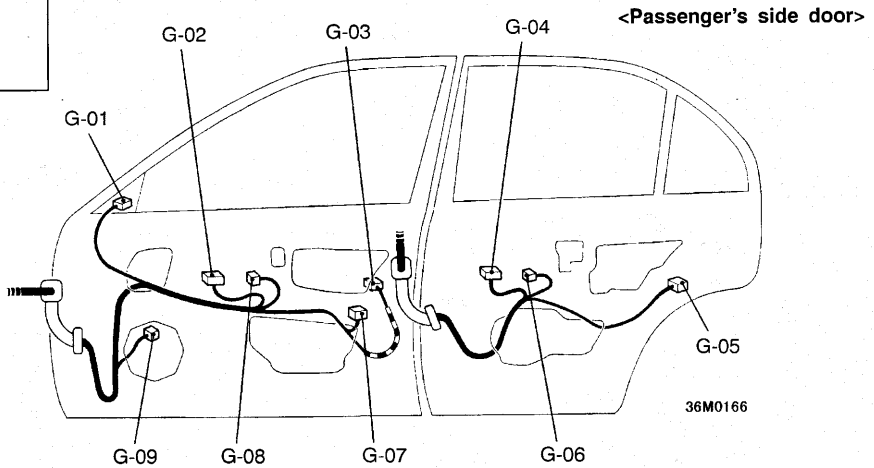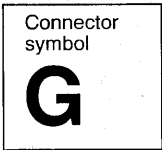

- |            |                                    |            |                                    |
|------------|------------------------------------|------------|------------------------------------|
| G-01 (3)   | Remote controlled mirror (RH)      | G-10 (3)   | Remote controlled mirror (LH)      |
| G-02 (8)   | Front power window sub switch      | G-11 (14)  | Front power window main switch     |
| G-03 (3)   | Door lock key cylinder switch (RH) | G-12 (3)   | Door lock key cylinder switch (LH) |
| G-04 (8)   | Rear power window sub switch (RH)  | G-13 (8)   | Rear power window sub switch (LH)  |
| G-05 (6-B) | Rear door lock actuator (RH)       | G-14 (6-B) | Rear door lock actuator (LH)       |
| G-06 (2)   | Rear power window motor (RH)       | G-15 (2)   | Rear power window motor (LH)       |
| G-07 (6-B) | Front door lock actuator (RH)      | G-16 (6-B) | Front door lock actuator (LH)      |
| G-08 (2)   | Front power window motor (RH)      | G-17 (2)   | Front power window motor (LH)      |
| G-09 (2-B) | Front speaker (RH)                 | G-18 (2-B) | Front speaker (LH)                 |