

SPLICE LOCATIONS

CONTENTS

8020900015


 
Dash Panel	6	Instrument Panel	8
Door		Interior	
<2-door Models>	11	<2-door Models>	9
<4-door Models>	12	<4-door Models>	9
Engine Compartment		Luggage Compartment	
<1.5L Engine>	5	<2-door Models>	10
<1.8L Engine>	5	<4-door Models>	10
How to Read Splice Locations	2	Steering Column	8
Index	3		

HOW TO READ SPLICE LOCATIONS

"Splice locations" describes splice points of each wiring harness on an actual vehicle.

Indicates a splice point number.
 The splice point numbers are identical to those in "Circuit Diagrams", considering easiness to use.
 In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

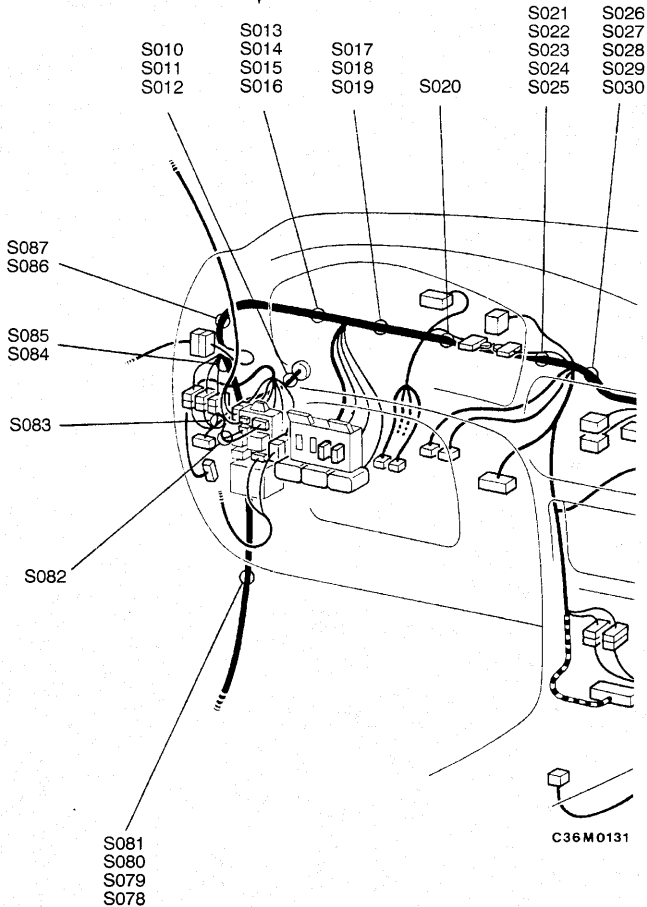


INDEX

This index shows what page each splice location is described on.


Splice location No.	Page	Splice location No.	Page	Splice location No.	Page	Splice location No.	Page
S001	80B-5	S041	80B-6	S081	80B-7	S121	80B-10
S002	80B-5	S042	80B-6	S082	80B-7	S122	80B-10
S003	80B-5	S043	80B-6	S083	80B-6	S123	80B-10
S004	80B-5	S044	80B-6	S084	80B-6	S124	80B-10
S006	80B-5	S045	80B-7	S085	80B-7	S125	80B-10
S008	80B-5	S046	80B-7	S086	80B-6	S126	80B-10
S009	80B-5	S047	80B-7	S087	80B-6	S127	80B-10
S010	80B-5	S048	80B-7	S088	80B-6	S128	80B-10
S011	80B-5	S049	80B-7	S089	80B-6	S129	80B-10
S012	80B-5	S050	80B-7	S090	80B-6	S130	80B-10
S013	80B-5	S051	80B-7	S091	80B-6	S131	80B-10
S014	80B-5	S052	80B-7	S093	80B-6	S132	80B-10
S015	80B-5	S053	80B-7	S094	80B-6	S133	80B-10
S016	80B-5	S054	80B-7	S095	80B-6	S134	80B-10
S017	80B-6	S055	80B-7	S096	80B-6	S135	80B-10
S018	80B-6	S056	80B-7	S097	80B-6	S136	80B-10
S019	80B-6	S057	80B-7	S098	80B-6	S137	80B-10
S020	80B-6	S058	80B-7	S099	80B-6	S138	80B-10
S021	80B-6	S059	80B-7	S100	80B-6	S139	80B-11, 12
S022	80B-6	S060	80B-7	S101	80B-6	S140	80B-11, 12
S023	80B-6	S061	80B-7	S102	80B-6	S141	80B-11, 12
S024	80B-6	S062	80B-7	S103	80B-6	S142	80B-11, 12
S025	80B-6	S063	80B-7	S104	80B-8	S143	80B-9
S026	80B-6	S064	80B-7	S105	80B-8	S144	80B-9
S027	80B-6	S065	80B-7	S106	80B-8		
S028	80B-6	S066	80B-7	S107	80B-8		
S029	80B-6	S067	80B-7	S108	80B-8		
S030	80B-6	S068	80B-7	S109	80B-8		
S031	80B-6	S069	80B-7	S110	80B-8		
S032	80B-6	S070	80B-7	S111	80B-8		
S033	80B-6	S071	80B-7	S112	80B-8		
S034	80B-6	S072	80B-7	S113	80B-8		
S035	80B-6	S073	80B-7	S114	80B-8		
S036	80B-6	S074	80B-7	S115	80B-8		
S037	80B-6	S075	80B-7	S116	80B-8		
S038	80B-6	S076	80B-7	S117	80B-8		
S039	80B-6	S077	80B-7	S118	80B-9		
S040	80B-6	S078	80B-7	S119	80B-9		
		S079	80B-7	S120	80B-9		
		S080	80B-6				

ENGINE COMPARTMENT


<1.5L Engine>

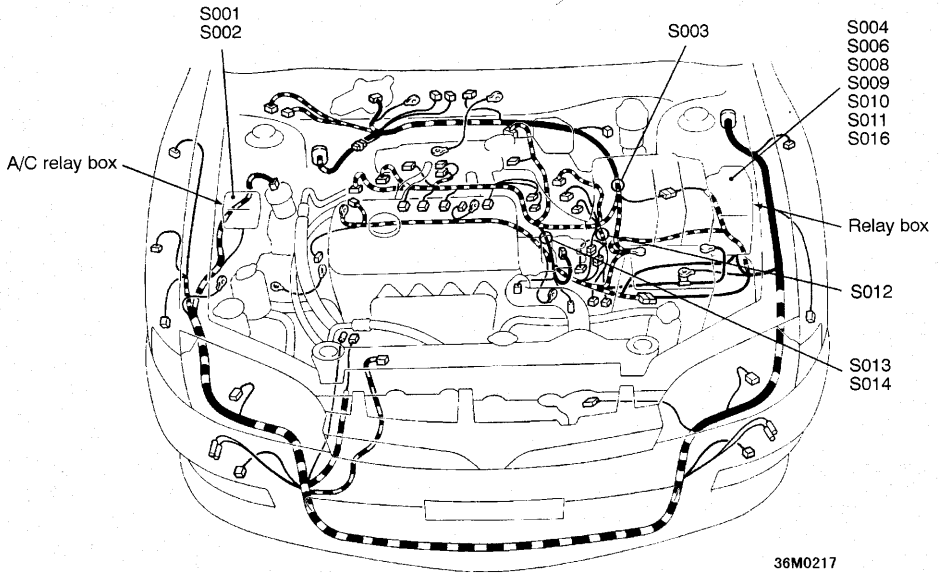


<1.8L Engine>

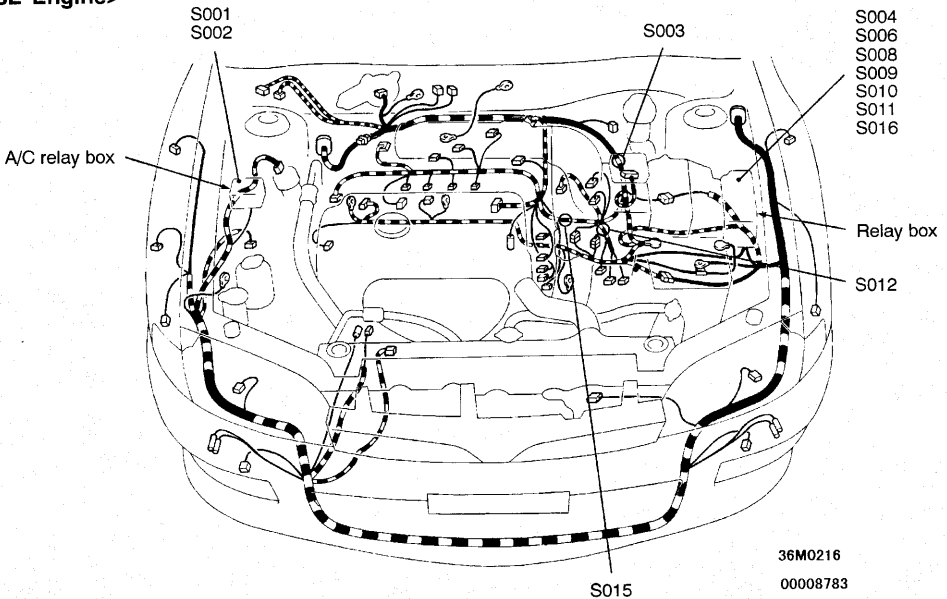


DASH PANEL

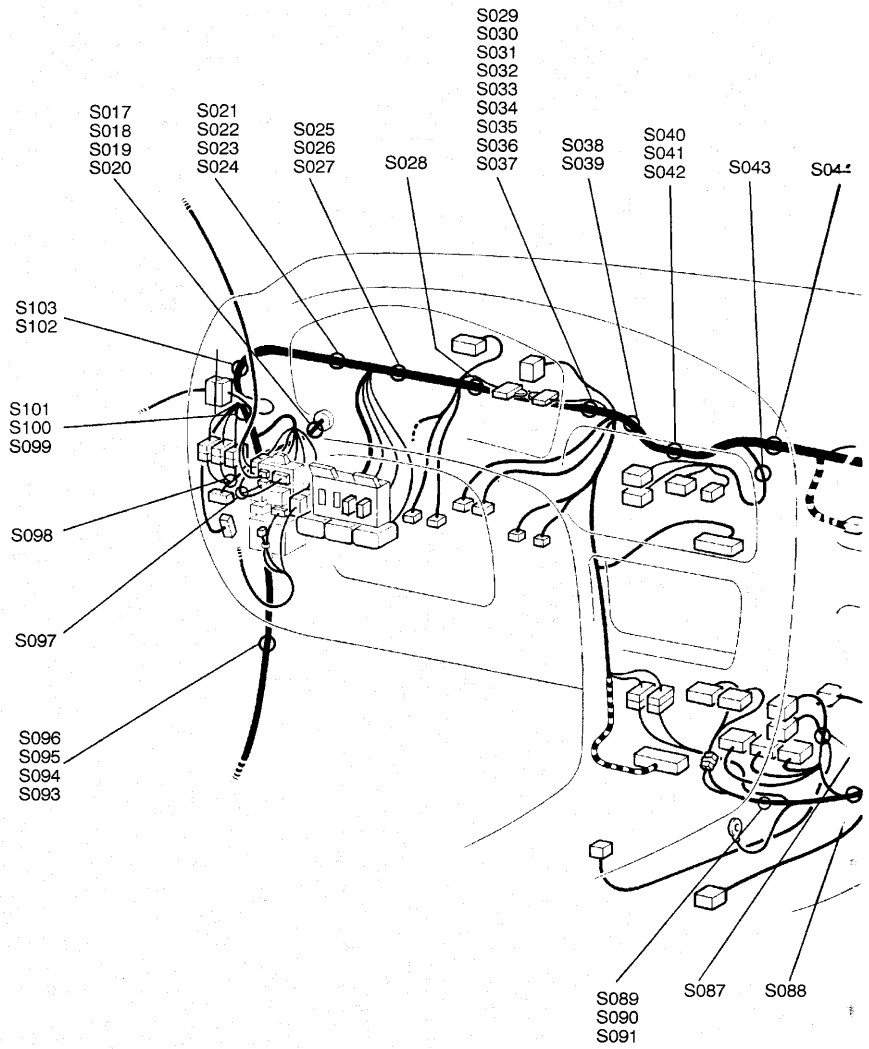

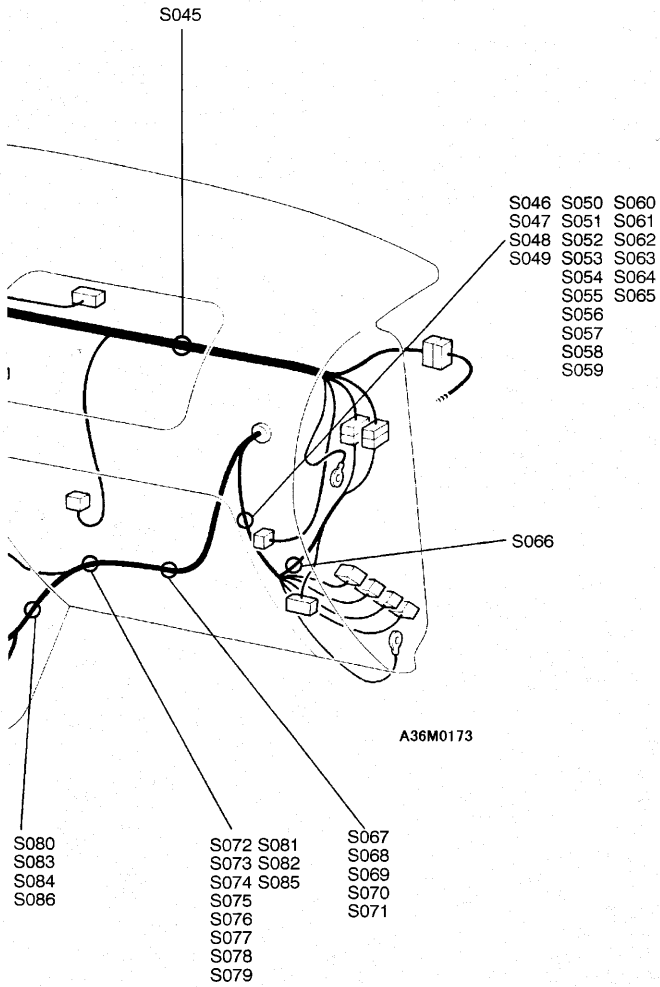


STEERING COLUMN

80200040047

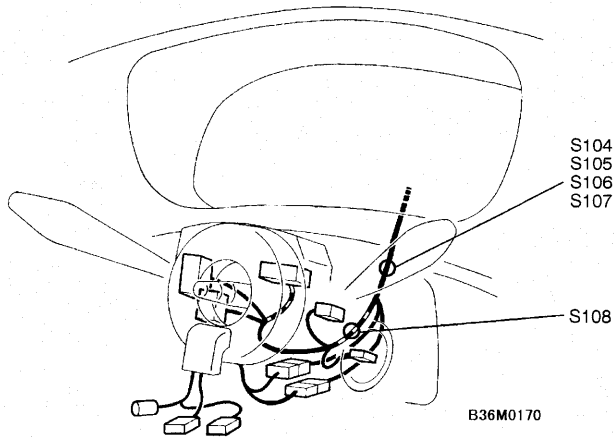


INSTRUMENT PANEL

80200050026

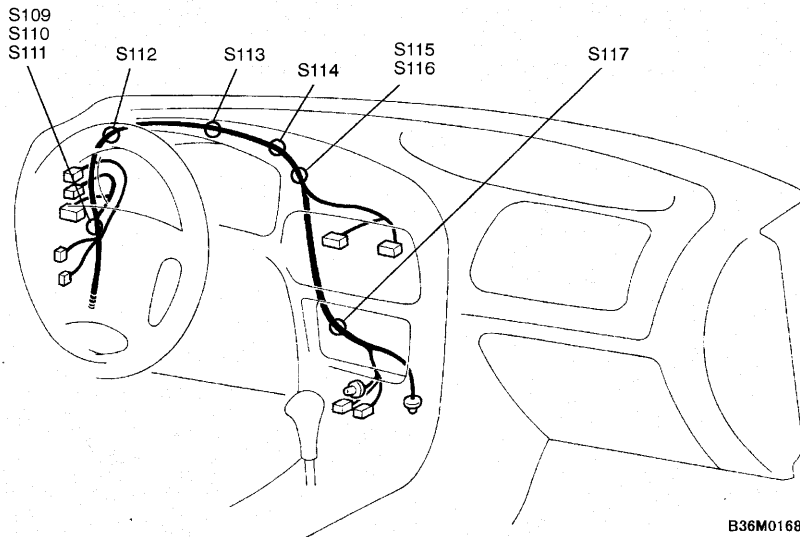


INTERIOR

<2-door Models>

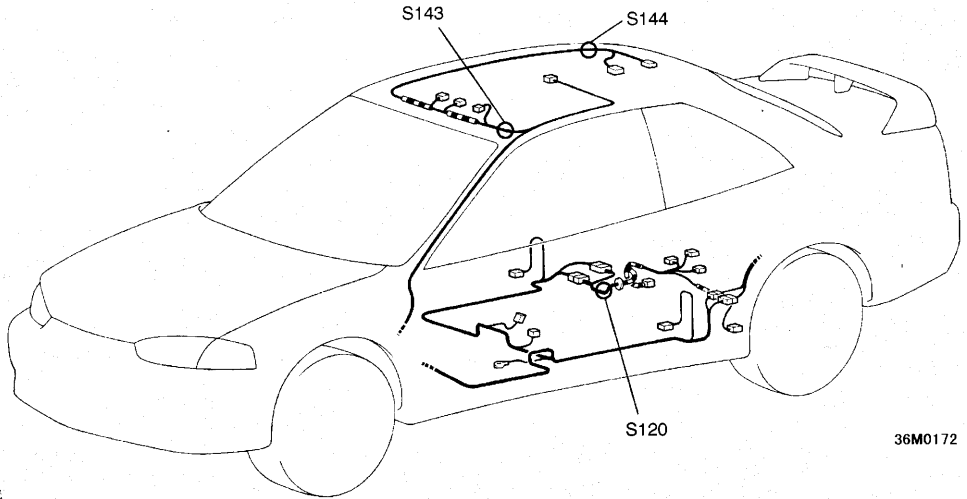

36M0172

<4-door Models>

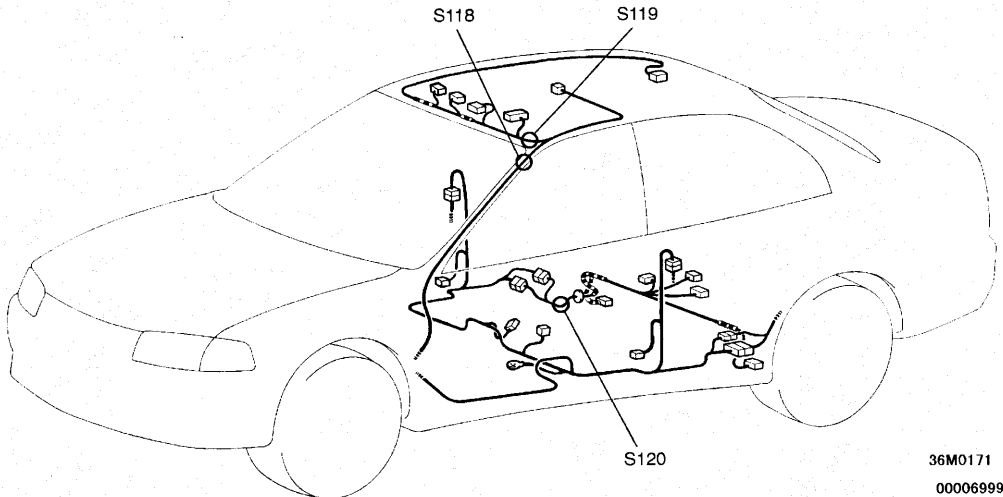


36M0171


00006999

LUGGAGE COMPARTMENT

<2-door Models>

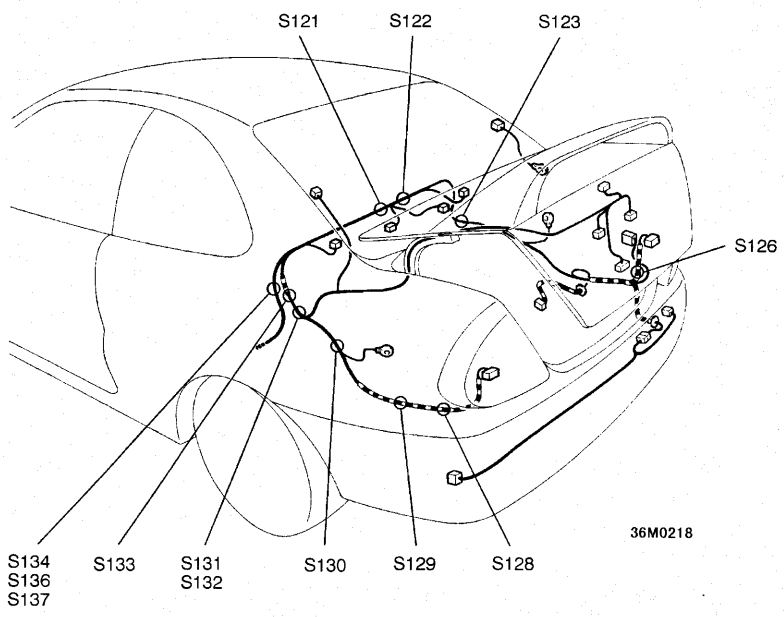


<4-door Models>

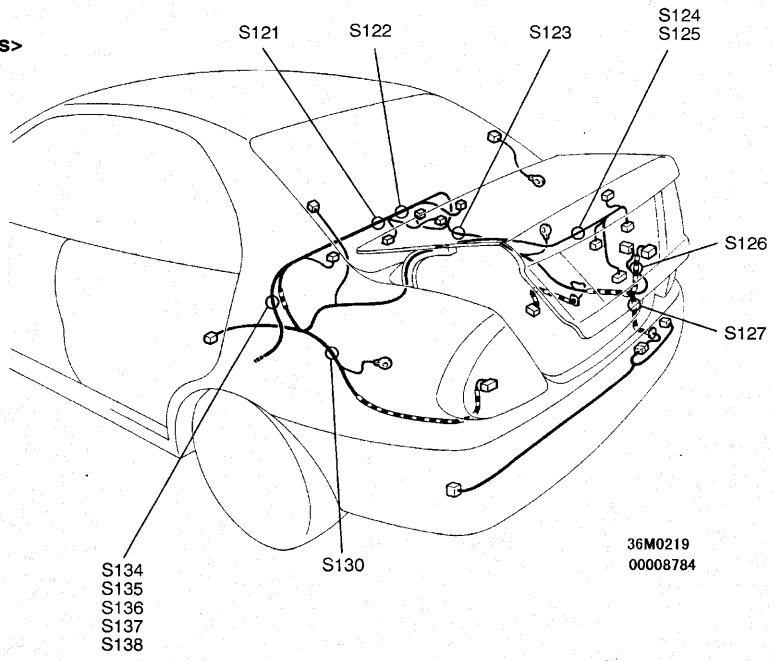

DOOR


<2-door Models>

(Passenger's side door)

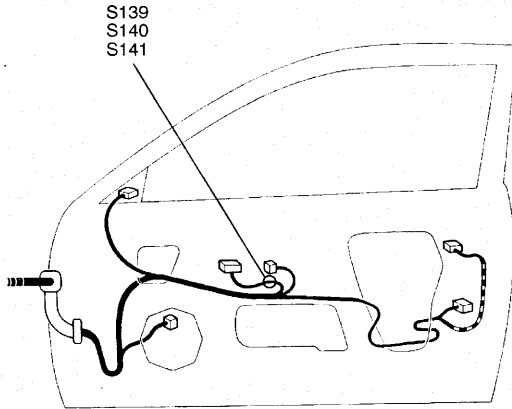

36M0164

(Driver's side door)

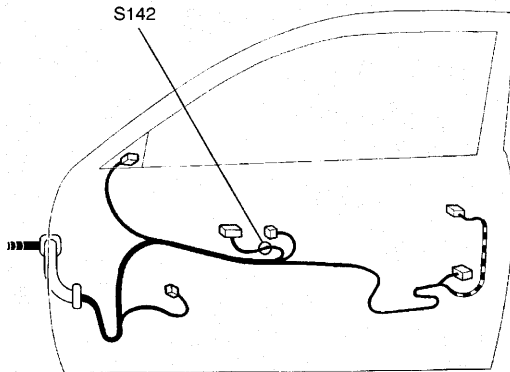


36M0165

00007001


<4-door Models>

(Passenger's side door)

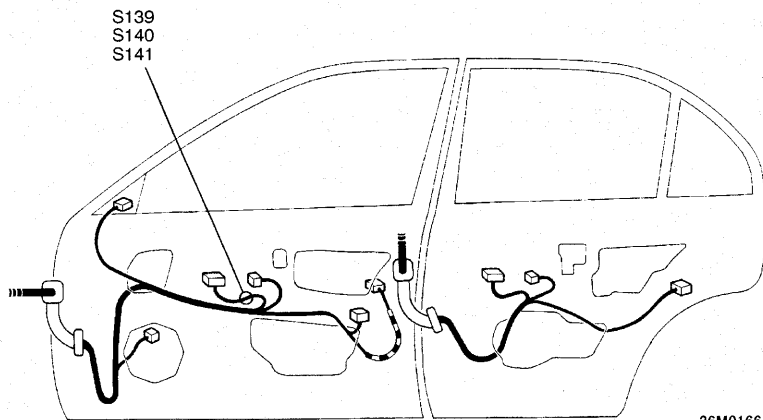

36M0166

(Driver's side door)

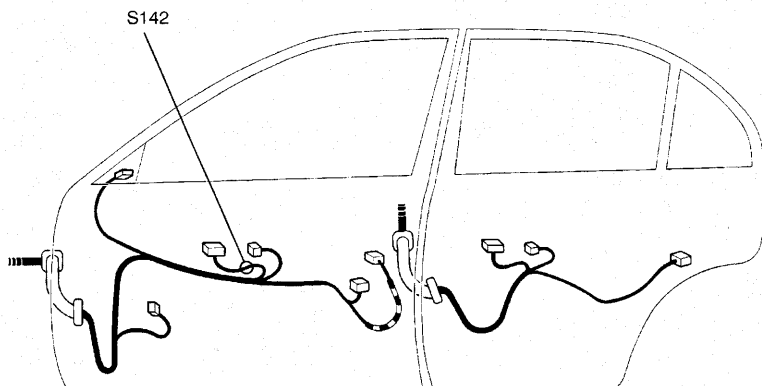

36M0167