

CRANKSHAFT <1.5L Engine>	11B-46-I
<1.8L Engine>	11D-50-I
OIL SEAL <1.5L Engine>	11A-26-I
<1.8L Engine>	11C-24-I
POSITION SENSOR	16-50-I
Check	16-38-I
PULLEY <1.5L Engine>	11A-22-I
<1.8L Engine>	11C-19-I
CROSSMEMBER	32-8-II
CURB IDLE SPEED, Check <1.5L Engine>	11A-12-I
<1.8L Engine>	11C-9-I
CYLINDER BLOCK <1.5L Engine>	11B-46-I
<1.8L Engine>	11D-50-I
CYLINDER HEAD <1.5L Engine>	11B-27-I
<1.8L Engine>	11D-30-I
GASKET <1.5L Engine>	11A-28-I
<1.8L Engine>	11C-27-I
CYLINDER VALVES <1.5L Engine>	11B-27-I
<1.8L Engine>	11D-30-I

D

DEFOGGER, Rear Window	54-68-II
DIFFERENTIAL	23B-66-I
DIFFERENTIAL	22B-59-I
DISC BRAKE	
Front	35A-22-II
Front, Thickness Check	35A-14-II
Front, Run-out Correction	35A-15-II
PADS, Maintenance	00-45-I
DISTRIBUTOR	
<1.5L Engine>	16-49-I
CAP, Maintenance	00-34-I
ROTOR, Maintenance	00-34-I
DOOR OPENING WEATHERSTRIP	42-41-II
DOOR	42-30-II
GLASS	42-34-II
HANDLE	42-37-II
LATCH	42-37-II
MIRROR	51-20-II
REGULATOR	42-34-II
TRIM	42-32-II
DRIVE BELT	
Maintenance	00-35-I
TENSION	
Adjustment <1.5L Engine>	11A-8-I
<1.8L Engine>	11C-6-I
Check <1.5L Engine>	11A-8-I
<1.8L Engine>	11C-6-I
Compressor, Adjustment	55-8-II
Power Steering, Check	37A-8-II
OIL SEAL	23B-74-I
DRIVE GEAR, Transfer	23B-64-I
DRIVE SHAFT	26-12-II
BOOTS, Maintenance	00-46-I
DRUM AND LINING, Brake, Contact Check	
<Basic Brakes>	35A-17-II
<ABS>	35B-27-II
DRUM BRAKE, Rear <Basic Brakes>	35A-29-II
<ABS>	35B-33-II
DUAL PRESSURE SWITCH, Check	55-8-II

E

EGR	
PORT VACUUM, Check	17-44-I
SOLENOID, Check	17-44-I
<1.5L Engine>	13A-157-I
<1.8L Engine>	13A-152-I

SYSTEM, Check	17-42-I
VALVE, Check	17-43-I
ELEMENT, Air Cleaner, Maintenance	00-32-I
ENGINE <1.5L Engine>	11A-18-I
<1.8L Engine>	11C-15-I
COOLANT	
Concentration Test	14-5-I
Leak Check	14-5-I
Maintenance	00-44-I
Replacement	14-5-I
COOLANT TEMPERATURE GAUGE SIMPLE, Check	54-19-II
COOLANT TEMPERATURE GAUGE UNIT, Check	54-20-II
COOLANT TEMPERATURE SENSOR	17-40-I
Check <1.5L Engine>	13A-152-I
<1.8L Engine>	13B-148-I
MOUNTING	32-4-II
OIL	
Inspection	12-3-I
Maintenance	00-39-I
Replacement	12-3-I
OIL FILTER, Maintenance	00-40-I
ROLL STOPPER	32-7-II
EVAPORATIVE EMISSION	
CANISTER	17-48-I
CONTROL SYSTEM	17-37-I
Maintenance	00-33-I
PURGE SOLENOID, Check	17-39-I
<1.5L Engine>	13A-157-I
<1.8L Engine>	13B-152-I
VENTILATION SOLENOID	17-48-I
EVAPORATOR	55-22-II
EXHAUST	
GAS RECIRCULATION (EGR) SYSTEM	17-41-I
MANIFOLD	15-6-I
<1.5L Engine>	11B-21-I
<1.8L Engine>	11D-19-I
PIPE	15-8-I
SYSTEM, Maintenance	00-51-I

F

FAN MOTOR, Condenser	55-31-II
FENDER	42-8-II
FILLER DOOR, Fuel	42-9-II
FILTER, Engine Oil, Maintenance	00-40-I
FIXED SAS, Adjustment <1.5L Engine>	13A-143-I
<1.8L Engine>	13B-143-I
FLOOR CONSOLE	52A-11-II
FOG LIGHT	54-39-II
Aiming	54-36-II
LIGHT BULB, Replacement	54-38-II
FRONT AXLE HUB	26-7-II
FRONT BUMPER	51-4-II
FRONT DISC BRAKE	35A-22-II
Thickness Check	35A-14-II
PAD, Check and Replacement	35A-12-II
ROTOR, Check	35A-14-II
RUN-OUT Check	35A-15-II
RUN-OUT Correction	35A-15-II
FRONT SEAT	52A-20-II
FRONT SEAT BELT	52A-25-II
FRONT TURN-SIGNAL LIGHT	54-33-II
FRONT WHEEL ALIGNMENT, Check and Adjustment	33A-4-II
FUEL	
FILLER DOOR	42-9-II
GAUGE SIMPLE, Check	54-18-II
GAUGE UNIT, Check	54-18-II
HOSES	00-32-I
PRESSURE TEST <1.5L Engine>	13A-144-I

<1.8L Engine>	13B-144-I
PUMP CONNECTOR, Disconnection <1.5L Engine>	13A-147-I
<1.8L Engine>	13B-144-I
PUMP, Operation Check <1.5L Engine>	13A-147-I
<1.8L Engine>	13B-144-I
PUMP RELAY, Continuity Check <1.5L Engine>	13A-152-I
<1.8L Engine>	13B-148-I
SYSTEM, Maintenance	00-32-I
TANK	13C-3-I
FUEL AND EMISSION CONTROL SYSTEM	
<1.5L Engine>	11B-17-I
<1.8L Engine>	11D-17-I

G

GARNISHES	51-10-II
GEAR BOX, Manual Steering	37A-15-II
GENERATOR	16-13-I
<1.5L Engine>	11B-10-I
<1.8L Engine>	11D-10-I
OUTPUT LINE VOLTAGE DROP, Test	16-6-I
GLASS	
Door	42-34-II
Window	42-11-II
GUARD, Stone	51-12-II

H

HANDLE, Door	42-37-II
HAZARD WARNING LIGHT SWITCH	54-48-II
HEADLIGHT	54-33-II
Aiming with Gauges	54-28-II
Aiming with Screen	54-30-II
BULB, Replacement	54-32-II
HEADLINING	52A-17-II
HEATED OXYGEN SENSOR, Check <1.5L Engine>	13A-154-I
<1.8L Engine>	13B-150-I

HEATER	
CONTROL	55-16-II
CORE	55-19-II
UNIT	55-19-II
HIGH MOUNTED STOP LIGHT	54-44-II
HOOD	42-3-II
HORN	54-49-II
HOUSING	
Control	22B-5-I
Clutch	22B-54-I
HUB BOLT, Replacement <Front Axle>	26-5-II
<Rear Axle>	27-4-II
HUB END PLAY, Check	26-5-II
HYDRAULIC CIRCUIT	23A-64-I
HYDRAULIC PRESSURE, Test	23A-59-I
HYDRAULIC UNIT	35B-37-II
Check	35B-28-II

I

IDLE AIR CONTROL MOTOR (Stepper Motor), Check	
<1.5L Engine>	13A-156-I
<1.8L Engine>	13B-152-I
IDLE MIXTURE, Check <1.5L Engine>	11A-13-I
<1.8L Engine>	11C-10-I
IDLE SPEED, Curb, Check <1.5L Engine>	11A-12-I
<1.8L Engine>	11C-9-I
IDLE-UP OPERATION, Check	55-15-II
IGNITION	
CABLES, Maintenance	00-33-I
COIL, Check <1.5L Engine>	16-35-I

<1.8L Engine>	16-36-I
FAILURE SENSOR, Check <1.8L Engine>	16-37-I
POWER TRANSISTOR CONTINUITY, Check	
<1.5L Engine>	16-36-I
PRIMARY VOLTAGE WAVEFORM, Check	16-43-I
SECONDARY VOLTAGE WAVEFORM, Check	16-38-I
SWITCH	54-10-II
SYSTEM <1.5L Engine>	11B-10-I, 16-47-I
<1.8L Engine>	11D-10-I, 16-48-I
TIMING, Check <1.5L Engine>	11A-12-I
<1.8L Engine>	11C-9-I
INJECTOR <1.5L Engine>	13A-158-I
<1.8L Engine>	13B-153-I
Check <1.5L Engine>	13A-155-I
<1.8L Engine>	13B-152-I
INPUT SHAFT <A/T>	23B-52-I
<M/T>	22B-26-I
INSIDE REAR VIEW MIRROR	52A-19-II
INSTRUMENT PANEL	52A-8-II
INTAKE	
AIR TEMPERATURE SENSOR	17-40-I
Check <1.5L Engine>	13A-152-I
<1.8L Engine>	13B-148-I
MANIFOLD	15-3-I
<1.5L Engine>	11B-21-I
<1.8L Engine>	11D-19-I
Vacuum Check	15-2-I
INTERIOR LIGHT	54-46-II
INTERLOCK SWITCH	
Check and Adjustment	21A-7-I
Operating Check	21A-6-I

K

KEY INTERLOCK MECHANISM, Check	23A-71-I
--------------------------------------	----------

L

LASH ADJUSTER, Check	11A-16-I, 11C-13-I
LATCH, Door	42-37-II
LID, Trunk	42-5-II
LIGHT	
Fog	54-39-II
Front Turn-signal	54-33-II
High Mounted Stop	54-44-II
Interior	54-46-II
Rear Combination	54-43-II
LINE PRESSURE, Adjustment	23A-70-I
LINING AND DRUM, Brake, Contact Check	
<Basic Brakes>	35A-17-II
<ABS>	35B-27-II
LOW-REVERSE BRAKE	23B-60-I
LOWER ARM	
<Front Suspension>	33A-9-II
<Rear Suspension>	34-6-II
LUMINOUS INTENSITY, Measurement	54-32-II

M

MAGNETIC CLUTCH, Test	55-7-II
MAIN MUFFLER	15-8-I
MAINTENANCE, SRS	52B-22-II
MANUAL TRANSAXLE, Maintenance	00-41-I
MANUAL STEERING GEAR BOX	37A-15-II
MARKS	51-19-II
MASTER CYLINDER <Basic Brakes>	35A-19-II
<ABS>	35B-31-II
METERS, Combination	54-21-II
MIRROR	

Door	51-20-II
Rear View, Inside	52A-19-II
MOLDINGS	51-11-II
MUFFLER, Main	15-8-I
MULTIPOINT FUEL INJECTION RELAY, Continuity Check	
<1.5L Engine>	13A-152-I
<1.8L Engine>	13B-148-I

O

OIL FILTER	
Engine, Maintenance	00-40-I
Replacement	12-4-I
OIL LEVEL, Transmission, Check	22A-7-I
OIL PAN <1.5L Engine>	11A-25-I, 11B-34-I
<1.8L Engine>	11C-22-I, 11D-37-I
OIL PUMP <1.5L Engine>	11B-34-I
<1.8L Engine>	11D-37-I
<A/T>	23B-51-I
Power Steering	37A-33-II
Pressure Test	37A-10-II
OUTPUT SHAFT <M/T>	22B-36-I
<A/T>	23B-62-I
OUTPUT CURRENT, Test	16-7-I
OVERDRIVE CLUTCH	23B-55-I
OVERDRIVE PLANETARY CARRIER	23B-59-I

P

PARKING BRAKE	
CABLE	36-6-II
LEVER	36-5-II
SWITCH, Check	36-4-II
LEVER, Stroke Check	36-3-II
PISTON <1.5L Engine>	11B-38-I
<1.8L Engine>	11D-42-I
POSITIVE CRANKCASE VENTILATION SYSTEM	17-35-I
VALVE, Check	17-36-I
POST-COLLISION DIAGNOSIS	52B-22-II
POWER STEERING	
FLUID, Level Check	37A-8-II
FLUID, Replacement	37A-8-II
GEAR BOX	37A-22-II
HOSES	37A-38-II
OIL PUMP	37A-33-II
PRESSURE SWITCH, Check	37A-11-II
POWER RELAY, A/C, Check	55-15-II
PRINTED-HEATER LINE, Check	54-68-II
PROPORTIONING VALVE <ABS>	35B-36-II
<Basic Brakes>	35A-32-II
Function Test	35A-10-II
PURGE CONTROL SYSTEM, Check	17-38-I
PURGE PORT VACUUM, Check	17-39-I

Q

QUARTER WINDOW GLASS <2-door Models>	42-17-II
--------------------------------------	----------

R

RADIATOR	14-6-I
CAP VALVE, Opening Pressure Check	14-5-I
GRILLE	51-9-II
RADIO	54-65-II
REAR AXLE HUB	27-5-II
REAR BUMPER	51-7-II
REAR COMBINATION LIGHT	54-43-II
REAR DRUM BRAKE <Basic Brakes>	35A-29-II

<ABS>	35B-33-II
LININGS, Maintenance	00-45-I
WHEEL CYLINDER	35A-31-II
REAR HUB, Rotary-Sliding Resistance Check	27-3-II
REAR SEAT	52A-22-II
REAR SEAT BELT	52A-26-II
REAR VIEW MIRROR, Inside	52A-19-II
REAR WHEEL ALIGNMENT, Check and Adjustment	34-4-II
REAR WHEEL CYLINDERS, Maintenance	00-45-I
REAR WINDOW DEFOGGER	54-68-II
SWITCH	54-69-II
REAR WINDOW GLASS	42-19-II
RECEIVER DRIER, Test	55-7-II
REFRIGERANT	
Leak Repair	55-14-II
LINE	55-29-II
REGULATED VOLTAGE, Test	16-9-I
REGULATOR, Door	42-34-II
RELAY	
ABS Motor, Continuity Check	35B-30-II
ABS Valve, Continuity Check	35B-30-II
Fuel Pump, Continuity Check	Refer to F
Multipoint Fuel Injection, Continuity Check	Refer to M
Power, Check	55-15-II
Starter, Continuity Check	16-21-I
RESISTOR	55-20-II
REVERSE CLUTCH	23B-55-I
REVERSE IDLER GEAR <F5M42>	22B-48-I
RHEOSTAT	54-47-II
ROCKER ARMS <1.5L Engine>	11B-22-I
<1.8L Engine>	11D-24-I
ROLL STOPPER, Engine	32-7-II
ROTARY-SLIDING RESISTANCE, Rear Hub, Check	27-3-II
ROTOR	
Disc Brake, Front Check	35A-14-II
Distributor, Maintenance	00-34-I
RUNCHANNEL, Window Glass	42-41-II

S

SCHEMATIC, SRS	52B-6-II
SEAT	
Front	52A-20-II
Rear	52A-22-II
SEAT BELT	
Front	52A-25-II
Rear	52A-26-II
SECOND BRAKE	23B-61-I
SELECT LEVER	22B-50-I
SELECTOR LEVER, Operation Check	23A-70-I
SENSOR	
Brake Fluid Level, Check	35A-11-II
Camshaft Position, Check	16-38-I
Crankshaft Position	16-50-I
Crankshaft Position, Check	16-38-I
Engine Coolant Temperature	17-40-I
Engine Coolant Temperature, Check	Refer to E
Heated Oxygen, Check	Refer to H
Ignition Failure, Check <1.8L Engine>	16-37-I
Intake Air Temperature	17-40-I
Intake Air Temperature, Check	Refer to I
Throttle Position, Adjustment	Refer to T
Throttle Position, Check	Refer to T
Volume Air Flow	17-40-I
Wheel Speed, Output Voltage Check	35B-27-II
WHEEL SPEED	35B-38-II
SHIFT LOCK MECHANISM, Check	23A-71-I
SHIFT LEVER	22A-10-I
SIGHT GLASS REFRIGERANT, Level Test	55-7-II

ALPHABETICAL INDEX

Ignition Secondary Voltage, Check	16-38-I	Drum Brake, Rear	35A-31-II
WEATHERSTRIP, Door Opening	42-41-II	SPEED SENSOR	35B-38-II
WHEEL	31-5-II	Output Voltage Check	35B-27-II
Runout Check	31-5-II	WINDOW GLASS	42-11-II
ALIGNMENT		RUNCHANNEL	42-41-II
Front, Check and Adjustment	33A-4-II	WINDSHIELD	42-13-II
Rear, Check and Adjustment	34-4-II	WASHER	51-16-II
BEARING, End Play Check	27-3-II	WIPER	51-16-II
CYLINDER	35B-35-II	WIPER, Windshield	51-16-II