



MIRAGE



SERVICE MANUAL

VOLUME 2

Service Manual

MIRAGE

1999

Volume 2

FOREWORD

This Service Manual has been prepared with the latest service information available at the time of publication. It is subdivided into various group categories and each section contains diagnostics, disassembly, repair, and installation procedures along with complete specifications and tightening references. Use of this manual will aid in properly performing any servicing necessary to maintain or restore the high levels of performance and reliability designed into these outstanding vehicles.



Front Axle	26
Rear Axle	27
Wheel and Tire	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioning and Ventilation	55
Component Locations	70
Configuration Diagrams and Splice Locations	80
Circuit Diagrams	90
Alphabetical Index	

NOTE:

For information on all service manual groups not listed above, please refer to Volume 1.

Mitsubishi Motors Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.