

---

**GROUP 80B****SPLICE LOCATIONS****CONTENTS**

HOW TO READ SPLICE LOCATIONS.....	<b>80B-2</b>	DASH PANEL.....	<b>80B-5</b>
INDEX.....	<b>80B-3</b>	FLOOR AND ROOF.....	<b>80B-6</b>
ENGINE COMPARTMENT.....	<b>80B-4</b>	DOOR.....	<b>80B-7</b>
ENGINE AND TRANSAXLE.....	<b>80B-4</b>	LUGGAGE COMPARTMENT.....	<b>80B-7</b>


# HOW TO READ SPLICE LOCATIONS

"Splice locations" describes splice points of each wiring harness on an actual vehicle. Some variations are included in one splice location. Accordingly, some locations may not be applicable for individual vehicles.

Indicates a splice point number.  
The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use.  
In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

- Sequential number
- Prefix meaning splice point

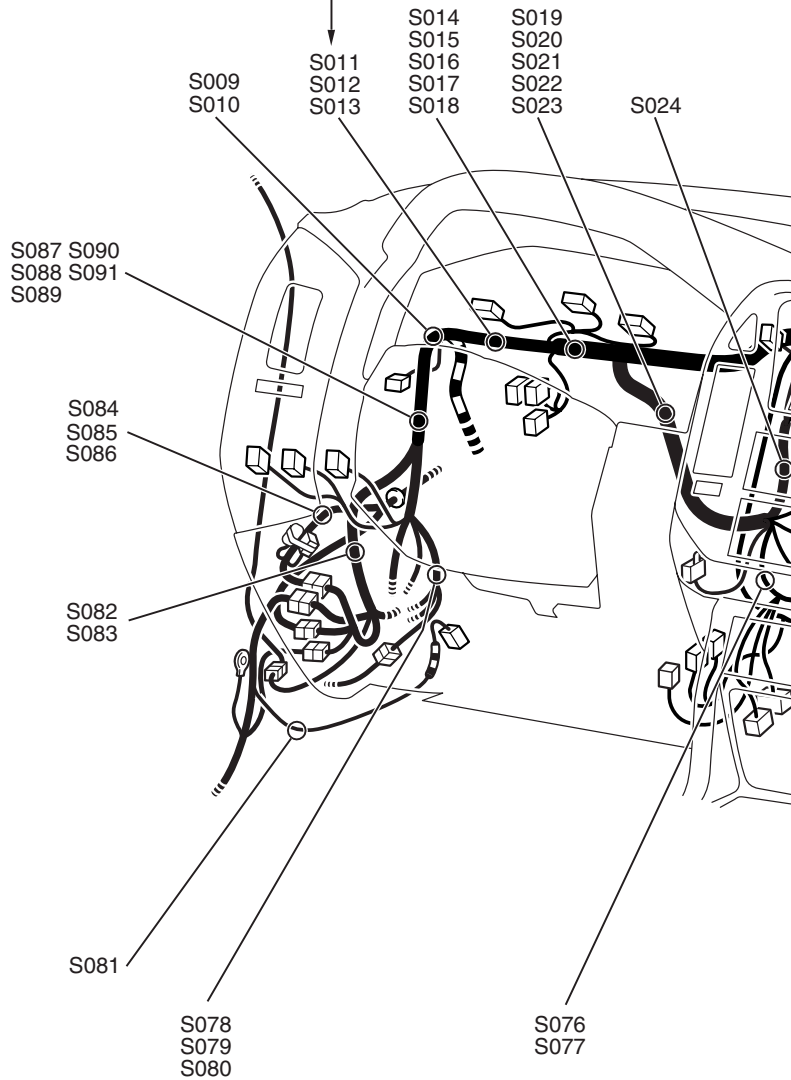

# INDEX


M1802000901259

This index shows the page numbers where the splice locations are.

<b>SPLICE LOCATION NO.</b>	<b>PAGE</b>	<b>SPLICE LOCATION NO.</b>	<b>PAGE</b>	<b>SPLICE LOCATION NO.</b>	<b>PAGE</b>	<b>SPLICE LOCATION NO.</b>	<b>PAGE</b>
S001	P.80B-4	S002	P.80B-4	S003	P.80B-4	S004	P.80B-4
S005	P.80B-4	S006	P.80B-4	S007	P.80B-4	S008	P.80B-4
S009	P.80B-4	S010	P.80B-4	S011	P.80B-4	S012	P.80B-4
S013	P.80B-4	S014	P.80B-4	S015	P.80B-4	S016	P.80B-4
S017	P.80B-4	S018	P.80B-4	S019	P.80B-5	S020	P.80B-5
S021	P.80B-5	S022	P.80B-5	S024	P.80B-5	S025	P.80B-5
S027	P.80B-5	S028	P.80B-5	S029	P.80B-5	S030	P.80B-5
S031	P.80B-5	S032	P.80B-5	S033	P.80B-5	S034	P.80B-5
S035	P.80B-5	S038	P.80B-5	S039	P.80B-5	S040	P.80B-5
S041	P.80B-5	S042	P.80B-5	S043	P.80B-5	S044	P.80B-5
S045	P.80B-5	S046	P.80B-5	S047	P.80B-5	S048	P.80B-5
S049	P.80B-6	S050	P.80B-6	S051	P.80B-6	S052	P.80B-6
S053	P.80B-6	S054	P.80B-6	S055	P.80B-7	S056	P.80B-7
S057	P.80B-7	S058	P.80B-7	S059	P.80B-7	S060	P.80B-7
S061	P.80B-7	S062	P.80B-7	S063	P.80B-7	S064	P.80B-7
S065	P.80B-7	S066	P.80B-7	S067	P.80B-5		

# ENGINE COMPARTMENT


M1802000200860

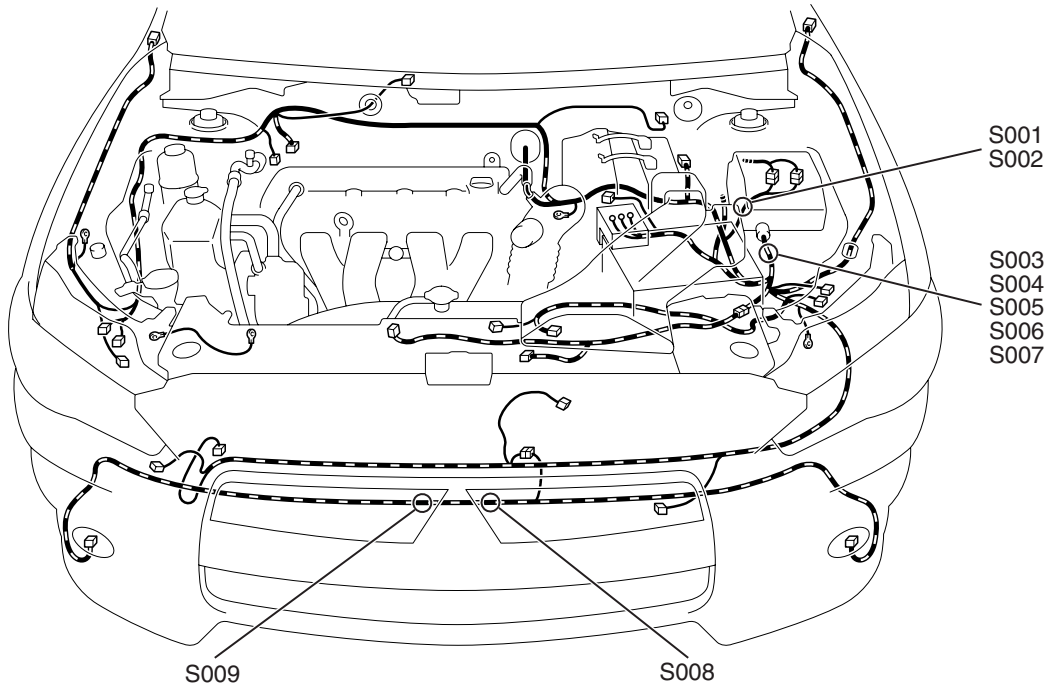

AC608018AB

# ENGINE AND TRANSAXLE


M1802001400793

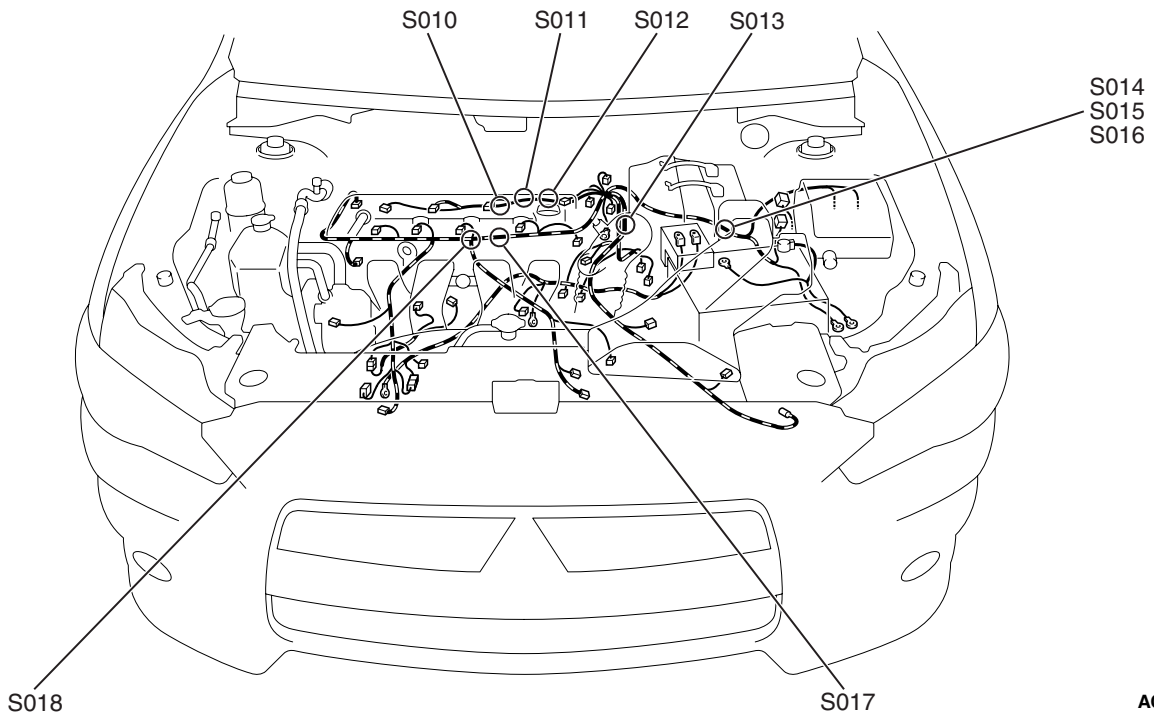

AC608019AB

DASH PANEL


M1802000301086

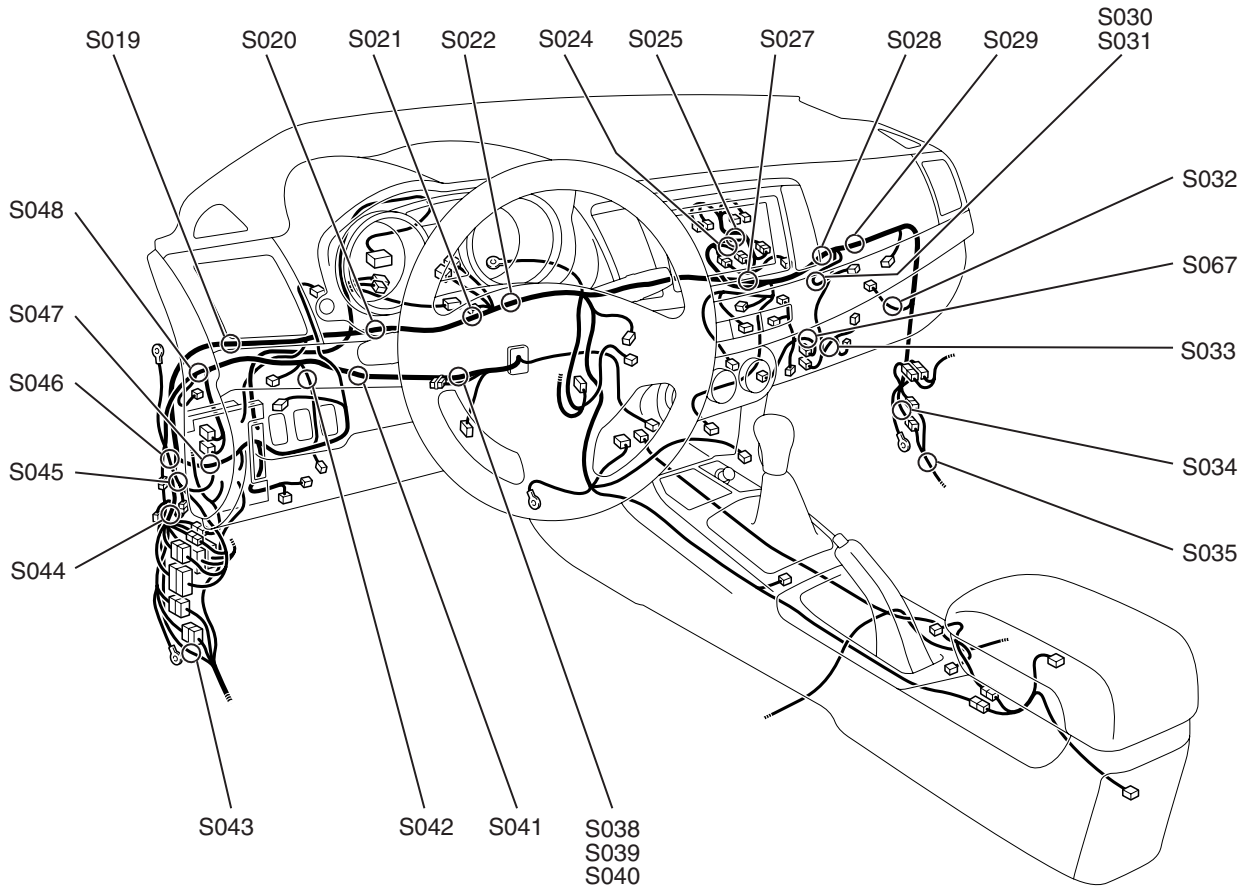

AC607907AB

FLOOR AND ROOF


M1802001200818

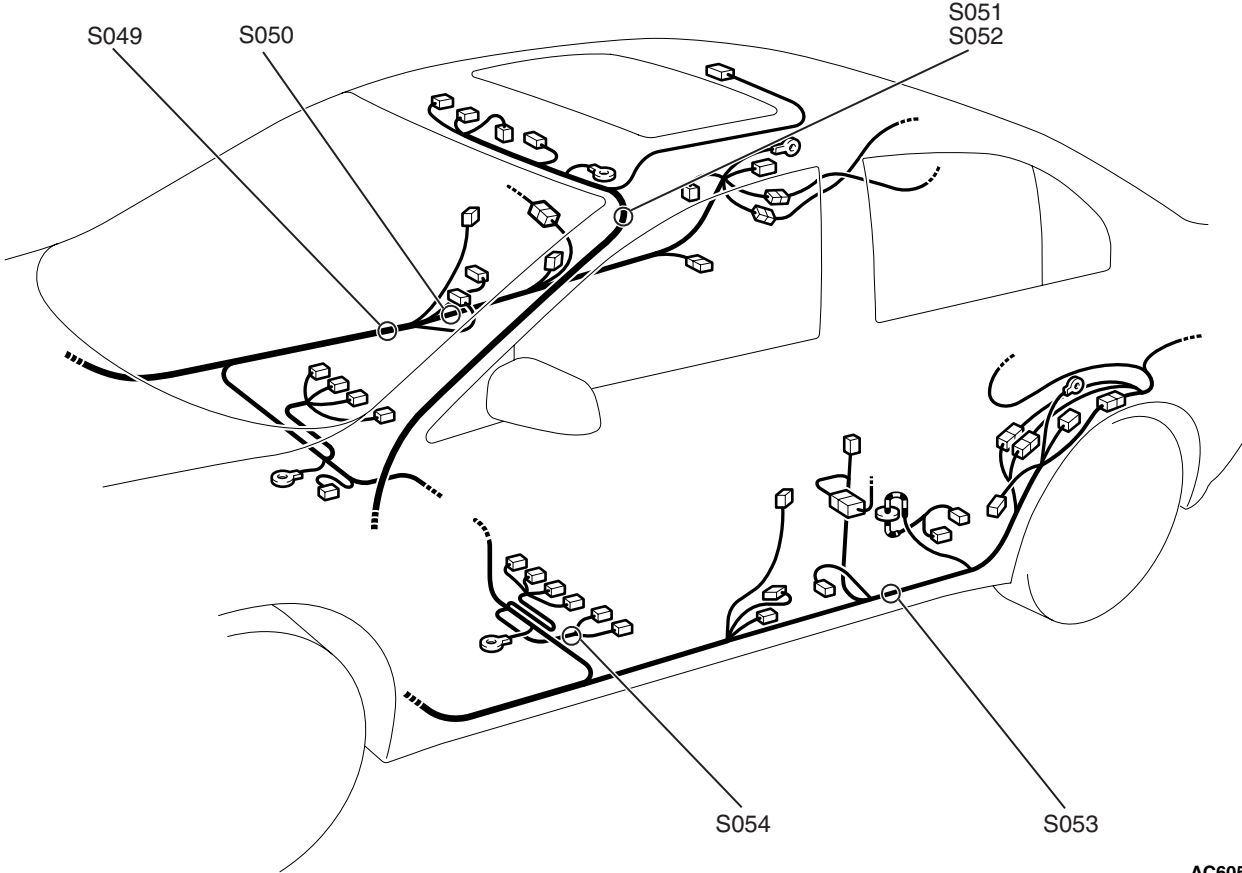

AC605711AB

DOOR


M1802000800710

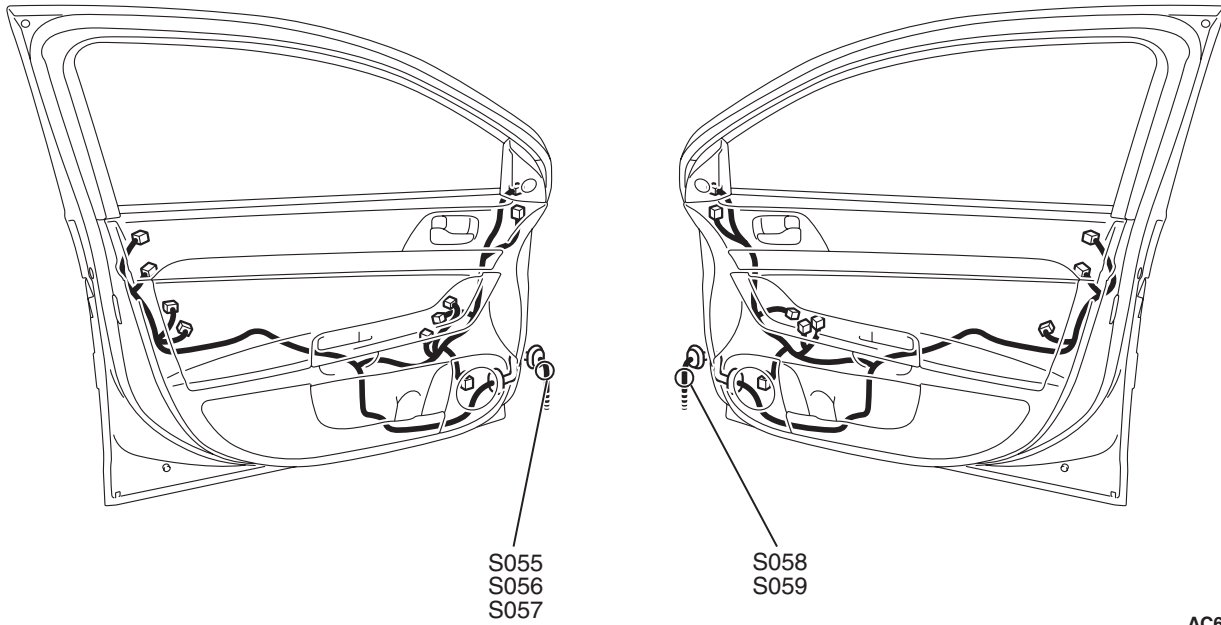

AC607912AB

LUGGAGE COMPARTMENT

M1802000700230

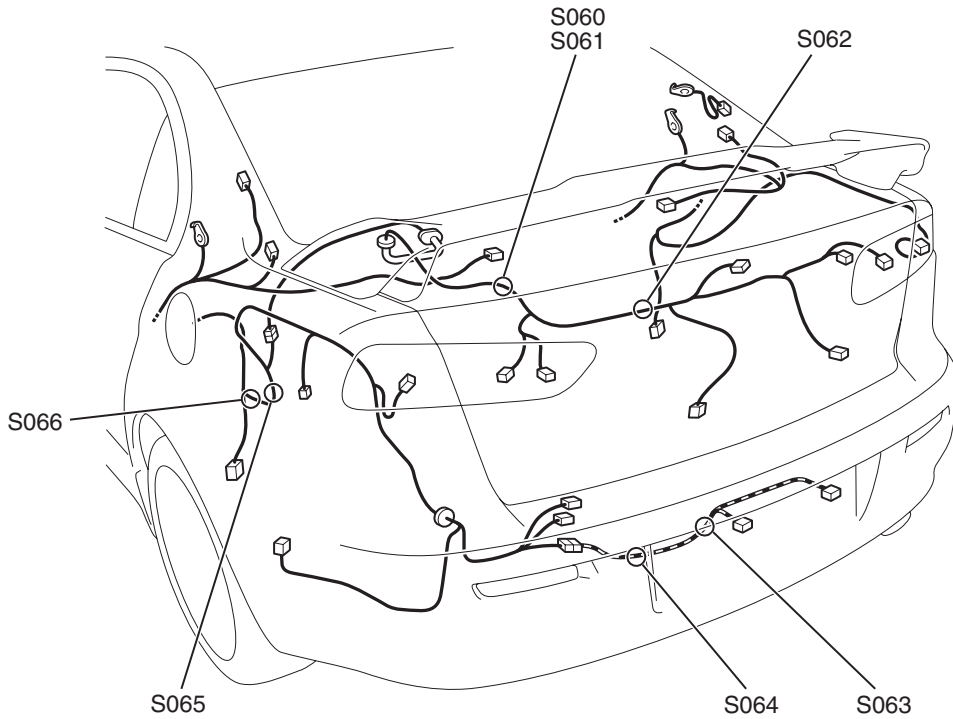

AC607913AB

---

## NOTES