

Maintenance

Every 5.000 km / 6 months

Engine

- change oil
 - ! drain plug torque setting: 35 - 45 Nm
 - ! versions with EGR system

Every 7.500 km / 6 months

Engine

- change oil
 - ! drain plug torque setting: 35 - 45 Nm
 - ! versions without EGR system

Every 15.000 km / 1 year

Engine

- oil filter: renew
- valves: check valve clearance / adjust if necessary
- poly-V-belt(s): check / adjust / renew
- V-belt(s): check / adjust / renew

Fuel system / pre-glow system

- air cleaner(s): check / renew element
- idle speed: check / adjust

- EGR system: check

Driveline

- clutch: free play: check / adjust
- hydraulic operated clutch: check fluid level
- transaxle: check oil level
 - ! filler plug torque setting: 30 - 35 Nm
- automatic transmission/differential: check fluid level

Steering

- power steering: check fluid level

Brakes

- brake fluid level: check
- parking brake: check / adjust
- brake servo: vacuum pump: check
- brake pads, front: clean / check / renew
- brake pads, rear: clean / check / renew
- brake discs, front: check / renew
- brake discs, rear: check / renew

Electrical system, Interior, Body

- body: check for damage and corrosion
- road test

Every 30.000 km / 2 years**Engine**

- cooling system: check for coolant leaks / contamination / jubilee clips / fasteners / check coolant level

Fuel system / pre-glow system

- check for leaks, air leaks, loose connections, poor electrical connections, etc.
- air cleaner(s): renew element
- fuel filter(s): renew

Driveline

- hydraulic operated clutch: change fluid
- drive shaft gaiters: check for damage and leakage

Steering

- steering: check for leakage, damage, tightness, etc.

Brakes

- check for brake fluid leaks
- brake pipes: check for damage / renew
- brake fluid: change
- brake linings, rear: clean / check / renew
- brake drums, rear: check / renew

Suspension

- suspension, shock absorbers, etc.: check for leakage, damage, wear, etc.
- wheel alignment: check / adjust
- tyres incl. spare tyre: condition, pressure and tread depth: check / correct / renew

Electrical system, Interior, Body

- general condition vehicle underside: check

Every 45.000 km / 3 years**Fuel system / pre-glow system**

- injectors: check / renew

Every 60.000 km / 4 years**Engine**

- cooling system: drain / flush / refill

Every 75.000 km / 5 years**Driveline**

- transaxle: change oil
 - ! filler plug torque setting: 30 - 35 Nm; drain plug: 30 - 35 Nm

- automatic transmission/differential: change fluid
- ! drain plug torque setting: no data

Every 90.000 km / 6 years

Engine

- timing belt(s): renew
- drive belt balance shaft(s): renew