

GALANT

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This publication is a supplement to the Electrical Wiring Manual Pub. No. PHDE9608 and contains only additions and changes to the original issue. It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL
PYDE9604

WORKSHOP MANUAL
CHASSIS GROUP
PWDE9611
PWDE9611-A (Supplement)
PWDE9611-B (Supplement)

ELECTRICAL WIRING
PHDE9608
PHDE9608-A (Supplement)
PHDE9608-B (Supplement)

BODY REPAIR MANUAL
PBDE9609

ENGINE GROUP
PWEE□□□□
(Looseleaf edition)

PARTS CATALOGUE
B608S107□□
B608S108□□
B608S109□□
B608T507□□
B608T508□□
B608T509□□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

 **MITSUBISHI MOTORS CORPORATION**

"GDI" is a trade mark which Mitsubishi Motors Corporation holds.

© Mitsubishi Motors Corporation

Mar. 2000

GROUP INDEX

GENERAL	0
WIRING HARNESS CONFIGURATION DIAGRAMS	1
SINGLE PART INSTALLATION POSITION	2
CIRCUIT DIAGRAM	3

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLE

WARNING!

- (1) Improper service or maintenance of any component of the SRS or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).**
- (2) SRS components should not be subjected to heat over 93 °C, so remove the SRS-ECU, air bag module (driver's side and front passenger's side) and clock spring before drying or baking the vehicle after painting.**
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.**
- (4) MITSUBISHI dealer personal must thoroughly review this manual, and especially its GROUP 52B–Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.**

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.