

Brake Lining and Brake Drum					
Contact, Check	35A-28-II				
Brake Pad					
Check and Adjustment	35A-22-II				
Wear Check	00-51-I				
Brake Pedal	35A-30-II				
Brake Pedal					
Check and Adjustment	35A-17-II				
Brake Rotor					
Disc, Check	35A-24-II				
Brake Stoplight Switch Check	35A-18-II				
Bumper					
Front	51-2-II				
Rear	51-4-II				
C					
Cable					
Accelerator	17-5-I				
Accelerator, Check and Adjustment	17-4-I				
Ignition, Replace	00-39-I				
Camshaft					
Overhaul					
2.4L ENGINE	11B-26-I				
3.0L ENGINE	11D-22-I				
Camshaft and Camshaft Oil Seal					
2.4L ENGINE	11A-17-I				
3.0L ENGINE	11C-16-I				
Camshaft Position Sensor					
Check					
2.4L ENGINE	16-36-I				
Removal and Installation	16-49-I				
Canister					
Evaporative Emission	17-95-I				
Catalytic Converter					
2.4L ENGINE	15-18-I				
3.0L ENGINE	15-19-I				
Removal and Installation	17-97-I				
CD Player	54A-86-III				
Removal and Installation	54A-150-III				
Centermember	32-9-II				
Central Door Locking System					
Circuit Diagram	90-96-III				
Charging System	16-3-I				
Circuit Diagram	90-28-III				
Charging System Diagnosis	16-4-I				
Check Valve					
Operating Check	35A-19-II				
Cigarette Lighter	54A-85-III				
Cigarette Lighter					
Circuit Diagram	90-138-III				
Compression Pressure					
Check					
2.4L ENGINE	11A-8-I				
3.0L ENGINE	11C-7-I				
Compressor (A/C)					
Noise Check	55-24-III				
Compressor Assembly	55-33-III				
Connecting Rod					
Overhaul					
2.4L ENGINE	11B-48-I				
3.0L ENGINE	11D-42-I				
Connector Inspection	00E-2-I				
Control Relay					
Check	23A-280-II				
Control Unit Location	70-13-III				
Coolant					
Engine, Change	00-50-I				
Cooling System					
Circuit Diagram	90-50-III				
Crankcase Ventilation System					
Check	17-83-I				
Crankshaft					
Overhaul					
2.4L ENGINE	11B-55-I				
3.0L ENGINE	11D-50-I				
Crankshaft Front Oil Seal					
2.4L ENGINE	11A-22-I				
3.0L ENGINE	11C-24-I				
Crankshaft Position Sensor					
2.4L ENGINE	16-50-I				
3.0L ENGINE	16-51-I				
Crankshaft Position Sensor					
Check	23A-279-II				
Crankshaft Rear Oil Seal					
2.4L ENGINE	11A-24-I				
3.0L ENGINE	11C-25-I				
Crossmember	32-11-II				
Crossmember Bushing					
Replacement	32-12-II				
Cylinder Block					
Overhaul					
2.4L ENGINE	11B-55-I				
3.0L ENGINE	11D-50-I				
Cylinder Head					
Overhaul					
2.4L ENGINE	11D-28-I				
3.0L ENGINE	11B-31-I				
Cylinder Head Gasket					
2.4L ENGINE	11A-25-I				
3.0L ENGINE	11C-27-I				
D					
Defogger and Door Mirror Heater					
Circuit Diagram	90-128-III				
Defogger Switch					
Check	54A-155-III				
Diagnosis					
Auto-cruise Control System	17-7-I				
Charging System	16-4-I				
Emission Control System	17-76-I				
Engine					
2.4L ENGINE	11A-3-I				
3.0L ENGINE	11C-2-I				
Engine Control System	17-3-I				
Engine Cooling	14-2-I				
Fuel Supply	13C-3-I				
Intake and Exhaust	15-2-I				
MFI					
2.4L ENGINE	13B-4-I				
3.0L ENGINE	13A-5-I				
Power Steering	37A-2-II				
Rear Axle	27-2-II				
Starting System	16-21-I				
Trouble Code, ABS	35B-4-II				
Trouble Code, MFI					
2.4L ENGINE	13A-5-I				
3.0L ENGINE	13B-4-I				
Differential	23B-64-II				
Differential					
Disassembly and Assembly	23B-64-II				
Disc Brake					
Pad Wear Check	00-51-I				
Disc Brake Assembly					
Front	35A-35-II				
Rear	35A-42-II				
Disc Brake Rotor					
Check	35A-24-II				

Distributor			Emission Control System Diagnosis.....	17-76-I
Assembly	16-47-I		Emission Control System, Evaporative	
Distributor Assembly	16-47-I		Check for Clogging	00-38-I
Distributor Cap			Check for Leaks.....	00-38-I
Check			Engine	
3.0L ENGINE.....	00-39-I		Adhesive	
Distributor Rotor			2.4L ENGINE	11A-38-I
Check			3.0L ENGINE	11C-36-I
3.0L ENGINE.....	00-39-I		Assembly	
Dome Light			2.4L ENGINE	11A-13-I
Circuit Diagram.....	90-72-III		3.0L ENGINE	11C-11-I
Door.....	42-19-II		Camshaft and Camshaft Oil Seal	
Removal and Installation	42-52-II		2.4L ENGINE	11A-17-I
Door			3.0L ENGINE	11C-16-I
Front and Rear, Fit Adjustment.....	42-48-II		Compression Pressure	
Glass and Regulator.....	42-56-II		2.4L ENGINE	11A-8-I
Handle and Latch	42-58-II		3.0L ENGINE	11C-7-I
Inside Handle Play Adjustment.....	42-50-II		Crankshaft Front Oil Seal	
Mirror	51-18-II		2.4L ENGINE	11A-22-I
Opening Weatherstrip.....	42-61-II		3.0L ENGINE	11C-24-I
Outside Handle Play Adjustment.....	42-50-II		Crankshaft Rear Oil Seal	
Switch Check.....	42-53-II		2.4L ENGINE	11A-24-I
Trim and Waterproof Film	42-54-II		3.0L ENGINE	11C-25-I
Drive Belt			Cylinder Head Gasket	
Overhaul.....	11D-4-I		2.4L ENGINE	11A-25-I
Power Steering, Tension Check	37A-16-II		3.0L ENGINE	11C-27-I
Tension Check and Adjustment			Diagnosis	
2.4L ENGINE	11A-6-I		2.4L ENGINE	11A-3-I
3.0L ENGINE	11C-5-I		3.0L ENGINE	11C-2-I
Water Pump and Generator Drive Belt Check.....	00-39-I		Drive Belt	
Drive Plate			2.4L ENGINE	11A-6-I
Overhaul			3.0L ENGINE	11C-5-I
2.4L ENGINE.....	11B-55-I		Idle Mixture	
3.0L ENGINE.....	11D-50-I		2.4L ENGINE	11A-7-I
Drive Shaft Oil Seal.....	23B-73-II		3.0L ENGINE	11C-6-I
Drive Shaft Oil Seal			Idle Speed	
Disassembly and Assembly.....	23B-73-II		2.4L ENGINE	11A-8-I
Driveshaft			3.0L ENGINE	11C-7-I
BJ Boot Replacement.....	26-21-II		Ignition Timing	
Front Axle	26-11-II		2.4L ENGINE	11A-6-I
Driveshaft Boots			3.0L ENGINE	11C-5-I
Check	00-53-I		Lash Adjuster	
Dual Pressure Switch			2.4L ENGINE	11A-10-I
Check	23A-280-II		3.0L ENGINE	11C-9-I
			Manifold Vacuum	
			2.4L ENGINE	11A-9-I
			3.0L ENGINE	11C-8-I
			Sealant	
			2.4L ENGINE	11A-38-I
			3.0L ENGINE	11C-36-I
			Tightening Specification(s)	
			2.4L ENGINE	11A-36-I
			3.0L ENGINE	11C-35-I
			Timing Belt	
			2.4L ENGINE	11A-30-I
			3.0L ENGINE	11C-29-I
			Engine Control.....	17-3-I
			Engine Control System Diagnosis	17-3-I
			Engine Coolant	
			Change	00-50-I
			Concentration Check	14-15-I
			Leak Check.....	14-14-I
			Replacement.....	14-14-I
			Engine Coolant Temperature Gauge	
			Resistance Check.....	54A-66-III
			Engine Coolant Temperature Sensor	
			Check	
			2.4L ENGINE	13A-443-I
			3.0L ENGINE	13B-524-I
			Engine Cooling Diagnosis	14-2-I

E**ECU**

Check at Terminal		
2.4L ENGINE.....	13A-417-I	
3.0L ENGINE.....	13B-499-I	

EGR

Solenoid Check		
2.4L ENGINE.....	13A-449-I	
3.0L ENGINE.....	13B-526-I	

EGR solenoid

Check		
2.4L ENGINE.....	13A-449-I	
3.0L ENGINE.....	13B-526-I	

EGR System..... 17-88-I**EGR System**

Check	17-91-I	
Port Vacuum Check.....	17-93-I	
Solenoid Check	17-93-I	
Valve Check.....	17-92-I	

Electrical System

Check	00E-13-I	
-------------	----------	--

Element, Air Cleaner

Replace	00-38-I	
---------------	---------	--

Emission Control 17-76-I

Engine Diagnosis				
2.4L ENGINE	11A-3-I			
3.0L ENGINE	11C-2-I			
Engine Lubrication				
Tightening Specification(s)	12-7-I			
Engine Mounting	32-5-II			
Engine Mounting				
Inspection	32-6-II			
Engine Oil				
Change	00-45-I			
Check	12-3-I			
Replacement	12-3-I			
Engine Oil Filter				
Change	00-46-I			
Replacement	12-4-I			
Engine Oil Pressure				
Check	12-6-I			
Engine Overhaul				
Adhesive				
2.4L ENGINE	11B-66-I			
3.0L ENGINE	11D-60-I			
Sealant				
2.4L ENGINE	11B-66-I			
3.0L ENGINE	11D-60-I			
Tightening Specification(s)				
2.4L ENGINE	11B-61-I			
3.0L ENGINE	11D-56-I			
Engine Roll Stopper	32-9-II			
ETACS				
Enabling/Disabling the Answerback Function	42-68-II			
Evaporative Emission Canister	17-95-I			
Evaporative Emission Control System	17-83-I			
Evaporative Emission Control System				
Check for Clogging	00-38-I			
Check for Leaks	00-38-I			
Purge Solenoid Check	17-86-I			
Evaporative Emission Purge Solenoid				
Check				
2.4L ENGINE	13A-449-I			
3.0L ENGINE	13B-526-I			
Evaporator Unit	55-30-III			
Exhaust Manifold				
Overhaul				
2.4L ENGINE	11B-25-I			
3.0L ENGINE	11D-21-I			
Exhaust Manifold				
2.4L ENGINE	15-14-I			
3.0L ENGINE	15-16-I			
Exhaust Pipe				
2.4L ENGINE	15-18-I			
3.0L ENGINE	15-19-I			
Exhaust System				
Check	00-59-I			
Exterior				
Adhesive	51-20-II			
Sealant	51-20-II			
F				
Fan Control Relay				
Continuity Check	14-15-I			
Fan Controller				
Check	14-15-I			
Fender	42-7-II			
Filter				
Air Purifier, Replace	00-60-I			
Engine Oil, Change	00-46-I			
Fluid				
Automatic Transaxle, Fluid Level Check	00-48-I			
Fluid Temperature Sensor				
Check	23A-280-II			
Flywheel				
Overhaul				
2.4L ENGINE	11B-55-I			
3.0L ENGINE	11D-50-I			
Fog Light Switch	54A-81-III			
Forgotten Key Prevention Function				
Circuit Diagram	90-174-III			
Front Axle				
Driveshaft	26-11-II			
Hub	26-7-II			
Knuckle	26-10-II			
Front Axle Hub Assembly	26-7-II			
Front Axle Hub Assembly				
Inspection	26-9-II			
Front Case	11B-37-I			
Front Case				
Inspection				
2.4L ENGINE	11B-46-I			
Front Fog Light				
Circuit Diagram	90-68-III			
Front Seat Assembly				
Inspection (Disassembly and Assembly)	52A-18-III			
Fuel Filler Lid	42-8-II			
Fuel Gauge Unit				
Check	13C-10-I			
Fuel Hose				
Check for Condition	00-37-I			
Fuel Pipe				
Check for Leaks	00-37-I			
Fuel Pressure Test				
2.4L ENGINE	13A-439-I			
3.0L ENGINE	13B-521-I			
Fuel Pump				
Connector Disconnection				
2.4L ENGINE	13A-442-I			
3.0L ENGINE	13B-523-I			
Operation Check				
2.4L ENGINE	13A-442-I			
3.0L ENGINE	13B-523-I			
Fuel Pump Module	13C-10-I			
Fuel Supply Diagnosis	13C-3-I			
Fuel System				
Check for Leaks	00-37-I			
Fuel Tank	13C-6-I			
Fuel Tank				
Check for Leaks	00-37-I			
Fuel Tank Differential Pressure Sensor				
Check	13C-11-I			
Fuel Tank Filler Tube				
Check for Leaks	00-37-I			
Fuel Tank Pressure Relief Valve	17-95-I			
Fuel Tank Pressure Relief Valve				
Inspection	17-96-I			
Fuse				
Check	00E-11-I			
Fuses Location	70-2-III			
Fusible Links Location	70-2-III			
G				
Garnishes	51-7-II			
Gauge				
Circuit Diagram	90-88-III			
Generator	11B-6-I			
Generator				
Assembly	16-14-I			
Output Current Test	16-8-I			
Output Line Voltage Drop Test	16-6-I			

Overhaul.....	11D-4-I	Ignition Failure Sensor	
Regulated Voltage Test.....	16-10-I	Check	
Grilles.....	51-7-II	2.4L ENGINE.....	16-34-I
Ground Location.....	70-4-III	Ignition Key Hole Illumination Light	
Grounding Location.....	70-6-III	Circuit Diagram.....	90-76-III

H

Hazard Warning Light		Ignition Key Reminder Warning Buzzer	
Circuit Diagram.....	90-80-III	Circuit Diagram.....	90-144-III
Headlight		Ignition System.....	16-31-I
Circuit Diagram.....	90-60-III	Removal and Installation.....	11B-6-I
Headlight Relay		Ignition System	
Check.....	54A-73-III	Circuit Diagram	
Heater		2.4L ENGINE.....	90-26-III
Blower.....	55-32-III	3.0L ENGINE.....	90-27-III
Circuit Diagram.....	90-106-III	Overhaul.....	11D-8-I
Resistor.....	55-32-III	Ignition Timing	
Heater Control Assembly.....	55-26-III	Check	
Heater Control Assembly		2.4L ENGINE.....	11A-6-I
Inspection.....	55-29-III	3.0L ENGINE.....	11C-5-I
Heater Core.....	55-30-III	Immobilizer System	
Heater Unit.....	55-30-III	Circuit Diagram.....	90-178-III
Hood.....	42-3-II	Injector	
Removal and Installation.....	42-5-II	2.4L ENGINE.....	13A-449-I
Horn		3.0L ENGINE.....	13B-526-I
Circuit Diagram.....	90-87-III	Check	
Hose		2.4L ENGINE.....	13A-447-I
Vacuum, Routing.....	17-77-I	3.0L ENGINE.....	13B-526-I
Hoses		Input Shaft.....	23B-51-II
Brake, Check.....	00-52-I	Input Shaft	
Hub		Disassembly and Assembly.....	23B-51-II
Front Axle.....	26-7-II	Inspection Terminal Location.....	70-3-III
Rear Axle.....	27-6-II	Instrument Panel Inspection.....	00E-7-I
Hub Bolt		Intake Air Temperature Sensor	
Replacement		Check	
Front Axle.....	26-6-II	2.4L ENGINE.....	13A-443-I
Rear Axle.....	27-4-II	3.0L ENGINE.....	13B-524-I
Hub End Play		Intake and Exhaust Diagnosis.....	15-2-I
Check.....	26-6-II	Intake Manifold	
Hydraulic Unit.....	35B-47-II	2.4L ENGINE.....	15-7-I
Hydraulic Unit		3.0L ENGINE.....	15-10-I
Check.....	35C-37-II	Overhaul	
Hydraulic Unit Check		2.4L ENGINE.....	11B-22-I
ABS.....	35B-43-II	3.0L ENGINE.....	11D-17-I

I

Idle Mixture		Intake Manifold Plenum.....	15-5-I
Check		Intake Manifold Plenum	
2.4L ENGINE.....	11A-7-I	Overhaul.....	11D-6-I
3.0L ENGINE.....	11C-6-I	Intake Manifold Vacuum	
Idle Speed		Check.....	15-3-I
Basic, Adjustment		INVECS-II 4A/T	
2.4L ENGINE.....	13A-438-I	Circuit Diagram.....	90-52-III
3.0L ENGINE.....	13B-520-I		
Check			
2.4L ENGINE.....	11A-8-I		
3.0L ENGINE.....	11C-7-I		
Idle Speed Control Motor			
Check			
2.4L ENGINE.....	13A-447-I		
3.0L ENGINE.....	13B-526-I		
Ignition Cable			
Replace.....	00-39-I		
Ignition Coil.....	16-47-I		
Ignition Coil			
Check			
2.4L ENGINE.....	16-33-I		
3.0L ENGINE.....	16-34-I		

J

Joint Connector.....	90-12-III
Junction Block.....	90-10-III

K

Key Interlock Mechanism	
Check.....	23A-282-II
Keyless Entry System.....	42-67-II
Keyless Entry System	
Secret Code Registration.....	42-70-II
Transmitter Battery Replacement.....	42-68-II
Knock Sensor.....	16-52-I
Knuckle	
Front Axle.....	26-10-II
Inspection	
Front Axle.....	26-10-II
Rear Axle.....	27-9-II
Knuckle.....	26-10-II

Rear Axle.....	27-8-II	3.0L ENGINE.....	13B-498-I
		Adhesive.....	
		2.4L ENGINE.....	13A-456-I
		3.0L ENGINE.....	13A-456-I
		Fail-safe Function Reference Table.....	
		2.4L ENGINE.....	13A-19-I
		3.0L ENGINE.....	13B-18-I
		Relay, Check.....	
		2.4L ENGINE.....	13A-443-I
		3.0L ENGINE.....	13B-523-I
		Sealant.....	
		2.4L ENGINE.....	13A-456-I
		3.0L ENGINE.....	13A-456-I
		Tightening Specification(s).....	
		2.4L ENGINE.....	13A-454-I
		3.0L ENGINE.....	13B-531-I
		MFI Diagnosis.....	
		2.4L ENGINE.....	13A-5-I
		3.0L ENGINE.....	13B-4-I
		MFI System.....	
		Circuit Diagram.....	
		2.4L ENGINE.....	90-30-III
		3.0L ENGINE.....	90-40-III
		Mirror.....	
		Door.....	51-18-II
		Remote Controlled, Circuit Diagram.....	90-131-III
		Module.....	
		Fuel Pump.....	13C-10-I
		Mounting.....	
		Engine.....	32-5-II
		Transaxle.....	32-7-II
		O	
		Oil.....	
		Engine, Change.....	00-45-I
		Engine, Check.....	12-3-I
		Engine, Replacement.....	12-3-I
		Oil Cooler.....	
		Flow Check.....	23A-277-II
		Oil Filter.....	
		Engine, Replacement.....	12-4-I
		Oil Pan.....	
		2.4L ENGINE.....	11A-20-I
		3.0L ENGINE.....	11C-21-I
		Oil Pan.....	
		Inspection.....	
		2.4L ENGINE.....	11A-22-I
		3.0L ENGINE.....	11C-23-I
		Overhaul.....	11D-35-I
		Oil Pressure.....	
		Engine, Check.....	12-6-I
		Oil Pump.....	
		2.4L ENGINE.....	11B-37-I
		A/T.....	23B-50-II
		Oil Pump.....	
		Disassembly and Assembly (A/T).....	23B-50-II
		Overhaul.....	
		2.4L ENGINE.....	11B-46-I
		3.0L ENGINE.....	11D-35-I
		Power Steering.....	37A-37-II
		Power Steering, Pressure Test.....	37A-18-II
		Oil Seal.....	
		Crankshaft Front.....	
		2.4L ENGINE.....	11A-22-I
		3.0L ENGINE.....	11C-24-I
		Crankshaft Rear.....	
		2.4L ENGINE.....	11A-24-I
		3.0L ENGINE.....	11C-25-I

L

Lash Adjuster.....	
Check.....	
2.4L ENGINE.....	11A-10-I
3.0L ENGINE.....	11C-9-I
Lighting Monitor Buzzer.....	
Circuit Diagram.....	90-142-III
Lower Arm.....	
Front Suspension.....	33A-12-II
Rear Suspension.....	34-12-II
Lower Arm.....	
Inspection.....	
Front Suspension.....	33A-13-II
Rear Suspension.....	34-14-II
Lower Arm Bushing.....	
Replacement.....	33A-14-II
Low-Reverse Brake.....	23B-60-II
Low-Reverse Brake.....	
Disassembly and Assembly.....	23B-60-II

M

Magnetic Clutch Test (A/C).....	55-20-III
Main Muffler.....	
2.4L ENGINE.....	15-18-I
3.0L ENGINE.....	15-19-I
Maintenance.....	
Air Cleaner Element.....	00-38-I
Automatic Transaxle Fluid.....	00-48-I
Ball Joint and Steering Linkage Seals.....	00-53-I
Brake Hoses.....	00-52-I
Disc Brake Pads.....	00-51-I
Drive Belt.....	00-39-I
Driveshaft Boots.....	00-53-I
Electrical System.....	00E-13-I
Engine Coolant.....	00-50-I
Engine Oil.....	00-45-I
Engine Oil Filter.....	00-46-I
Evaporative Emission Control System.....	00-38-I
Exhaust System.....	00-59-I
Fuel Hose.....	00-37-I
Fuel System.....	00-37-I
Ignition Cable.....	00-39-I
Spark Plug.....	00-38-I
SRS.....	00-54-I
Timing Belt.....	00-39-I
Manifold Vacuum.....	
Check.....	
2.4L ENGINE.....	11A-9-I
3.0L ENGINE.....	11C-8-I
Mark.....	51-15-II
Master Cylinder.....	35B-46-II
Master Cylinder.....	
Function Check.....	35A-29-II
Master Cylinder Assembly.....	35A-31-II
Master Cylinder Assembly.....	
Disassembly and Assembly (Service Brakes).....	35A-33-II
Disassembly and Assembly (ABS).....	35B-46-II
Inspection (Service Brakes).....	35A-34-II
Inspection (ABS).....	35B-47-II
Meter.....	
Circuit Diagram.....	90-88-III
MFI.....	
Actuator Test Reference Table.....	
2.4L ENGINE.....	13A-416-I

Output Shaft			
Disassembly and Assembly.....	23B-62-II		
Overdrive Clutch.....	23B-53-II		
Overdrive Clutch			
Disassembly and Assembly.....	23B-53-II		
Oxygen Sensor			
Check			
2.4L ENGINE.....	13A-445-I		
3.0L ENGINE.....	13B-524-I		
P			
Park/neutral Position Switch			
Adjustment.....	23A-278-II		
Continuity Check.....	23A-278-II		
Switch Check.....	23A-280-II		
Parking Brake			
Cable.....	36-7-II		
Lever.....	36-6-II		
Lever Stroke Check and Adjustment.....	36-4-II		
Lining and Drum.....	36-11-II		
Lining Running-in.....	36-5-II		
Switch Check.....	36-5-II		
PCV (Positive Crankcase Ventilation) System.....	17-81-I		
PCV (Positive Crankcase Ventilation) System			
Valve Check.....	17-83-I		
Pedal			
Accelerator.....	17-5-I		
Piston			
Overhaul			
2.4L ENGINE.....	11B-48-I		
3.0L ENGINE.....	11D-42-I		
Planetary Gear.....	23B-58-II		
Planetary Gear			
Disassembly and Assembly.....	23B-58-II		
Pop-Up Switch.....	54A-81-III		
Power Distribution System			
Circuit Diagram.....	90-20-III		
Power Seat			
Circuit Diagram.....	90-164-III		
Power Steering			
Bleeding.....	37A-16-II		
Drive Belt Tension Check.....	37A-16-II		
Fluid Level Check.....	37A-16-II		
Fluid Replacement.....	37A-16-II		
Gear Box Assembly.....	37A-23-II		
Hoses.....	37A-41-II		
Oil Pump Assembly.....	37A-37-II		
Oil Pump Pressure Test.....	37A-18-II		
Pressure Switch Check.....	37A-19-II		
Power Steering Diagnosis.....	37A-2-II		
Power Steering Gear Box Assembly			
Inspection (Disassembly and Assembly).....	37A-36-II		
Power Steering Oil Pump Assembly			
Inspection.....	37A-38-II		
Power Transistor			
Check			
3.0L ENGINE.....	16-34-I		
Power Window			
Circuit Breaker Inspection.....	42-51-II		
Circuit Diagram.....	90-92-III		
Switch Continuity Check.....	42-55-II		
Proportioning Valve.....	35A-53-II		
Proportioning Valve			
Function Test.....	35A-20-II		
Purge Control System			
Check.....	17-85-I		
R			
Radiator.....		14-15-I	
Radiator Cap			
Pressure Check.....		14-14-I	
Radio and Tape Player			
Circuit Diagram			
4-SPEAKER SYSTEM.....		90-132-III	
7-SPEAKER SYSTEM.....		90-134-III	
Radio With Tape Player.....		54A-86-III	
Removal and Installation.....		54A-150-III	
Rear Axle			
Hub.....		27-6-II	
Knuckle.....		27-8-II	
Wheel Bearing End Play Check.....		27-4-II	
Rear Axle Diagnosis.....		27-2-II	
Rear Drum Brake.....		35A-49-II	
Rear Drum Brake Lingings			
Wear and Leaks Check.....		00-52-I	
Rear Drum Brake Wheel Cylinder Assembly			
Disassembly and Assembly.....		35A-52-II	
Inspection.....		35A-53-II	
Rear Hub Rotary-Sliding Resistance			
Check.....		27-4-II	
Rear Spoiler.....		51-11-II	
Rear Suspension Assembly.....		34-6-II	
Rear Suspension Assembly			
Inspection.....		34-8-II	
Rear Wheel Cylinder			
Wear and Leaks Check.....		00-52-I	
Rear Wheel Cylinder Assembly.....		35A-51-II	
Rear Window Defogger Switch.....		54A-155-III	
Rear Window Glass.....		42-16-II	
Receiver Drier Test (A/C).....		55-20-III	
Refrigerant Temperature Switch			
Check.....		55-36-III	
Relay			
Check.....		00E-10-I	
Relay Location.....		70-7-III	
Resistive Cord			
Inspection.....		16-35-I	
Reverse Clutch.....		23B-53-II	
Reverse Clutch			
Disassembly and Assembly.....		23B-53-II	
Rheostat			
Circuit Diagram.....		90-177-III	
RKE (Keyless Entry System).....		42-67-II	
RKE (Keyless Entry System)			
Secret Code Registration.....		42-70-II	
Transmitter Battery Replacement.....		42-68-II	
Rocker Arm			
Overhaul			
2.4L ENGINE.....		11B-26-I	
3.0L ENGINE.....		11D-22-I	
S			
Sealant			
Automatic Transaxle.....		23B-80-II	
Engine			
2.4L ENGINE.....		11A-38-I	
3.0L ENGINE.....		11C-36-I	
Engine Lubrication.....		12-7-I	
Engine Overhaul			
2.4L ENGINE.....		11B-66-I	
3.0L ENGINE.....		11D-60-I	
Exterior.....		51-20-II	
MFI			
2.4L ENGINE.....		13A-456-I	
3.0L ENGINE.....		13A-456-I	
Steering.....		37A-48-II	
Sealant Table.....		00-60-I	

Seat Belt Tone Alarm			
Circuit Diagram.....	90-146-III		
Second Brake.....	23B-61-II		
Second Brake			
Disassembly and Assembly.....	23B-61-II		
Selector Lever.....	23A-287-II		
Selector Lever			
Operation Check.....	23A-282-II		
Sensor			
Camshaft Position.....	16-49-I		
Camshaft Position, Check			
2.4L ENGINE.....	16-36-I		
Crankangle, Check			
2.4L ENGINE.....	16-36-I		
3.0L ENGINE.....	16-36-I		
Crankshaft Position			
2.4L ENGINE.....	16-50-I		
3.0L ENGINE.....	16-51-I		
Crankshaft Position, Check.....	23A-279-II		
Engine Coolant Temperature, Check			
2.4L ENGINE.....	13A-443-I		
3.0L ENGINE.....	13B-524-I		
Fluid Temperature, Check.....	23A-280-II		
Fuel Tank Differential Pressure, Check.....	13C-11-I		
Ignition Failure, Check			
2.4L ENGINE.....	16-34-I		
Intake Air Temperature, Check			
2.4L ENGINE.....	13A-443-I		
3.0L ENGINE.....	13B-524-I		
Knock.....	16-52-I		
Oxygen, Check			
2.4L ENGINE.....	13A-445-I		
3.0L ENGINE.....	13B-524-I		
Throttle Position, Adjustment.....	23A-277-II		
Throttle Position, Adjustment			
2.4L ENGINE.....	13A-437-I		
3.0L ENGINE.....	13B-519-I		
Throttle Position, Check.....	23A-279-II		
Throttle Position, Check			
2.4L ENGINE.....	13A-444-I		
3.0L ENGINE.....	13B-524-I		
Vehicle Speed, Check.....	23A-280-II		
Wheel Speed.....	35B-49-II		
Wheel Speed, Output Voltage Check.....	35B-42-II		
Wheel Speed, Output Voltage Measurement.....	35C-37-II		
Sensor Location.....	70-8-III		
Shift Lock Mechanism			
Check.....	23A-283-II		
Shock Absorber Assembly.....	34-16-II		
Shock Absorber Assembly			
Disassembly and Assembly.....	34-17-II		
Inspection.....	34-17-II		
Sight Glass (Refrigerant Level Test).....	55-20-III		
Solenoid			
EGR, Check.....	17-93-I		
EGR, Check			
2.4L ENGINE.....	13A-449-I		
3.0L ENGINE.....	13B-526-I		
Evaporative Emission Purge, Check			
2.4L ENGINE.....	13A-449-I		
3.0L ENGINE.....	13B-526-I		
Solenoid Location.....	70-16-III		
Solenoid Valve			
Check.....	23A-281-II		
Solenoid Valve Location.....	70-16-III		
Spark Plug			
Replace.....	00-38-I		
Test.....	16-35-I		
Spark Plug Cable			
Test.....	16-33-I		
Speedometer Gear.....		23B-72-II	
Speedometer Gear			
Disassembly and Assembly.....		23B-72-II	
SRS			
Circuit Diagram			
Vehicles with Side Air Bag.....		90-162-III	
Vehicles without Side Air Bag.....		90-160-III	
Maintenance.....		00-54-I	
Stabilizer Bar			
Front Suspension.....		33A-15-II	
Rear Suspension.....		34-19-II	
Starter Motor			
Assembly.....		16-23-I	
Starting System.....		16-20-I	
Starting System			
Circuit Diagram.....		90-25-III	
Starting System Diagnosis.....		16-21-I	
Steering			
Adhesive.....		37A-48-II	
Ball Joint Dust Cover Inspection.....		37A-19-II	
Sealant.....		37A-48-II	
Steering Gear Shaft Assembly			
Inspection.....		37A-25-II	
Steering Linkage Seals			
Check.....		00-53-I	
Steering Wheel			
Free Play Check.....		37A-13-II	
Stationary Steering Effort Check.....		37A-15-II	
Steering Angle Check.....		37A-14-II	
Steering Wheel Return to Center Check.....		37A-15-II	
Steering Wheel and Shaft			
Assembly.....		37A-20-II	
Stop Light Switch			
Check.....		23A-280-II	
Stoplight			
Circuit Diagram.....		90-84-III	
Switch Check.....		35A-18-II	
Strut Assembly.....		33A-8-II	
Strut Assembly			
Disassembly and Assembly.....		33A-9-II	
Inspection.....		33A-11-II	
Sunroof.....		42-72-II	
Removal and Installation.....		42-92-II	
Sunroof			
Circuit Diagram.....		90-140-III	
Fit Adjustment.....		42-89-II	
Operation Check.....		42-89-II	
Water Test.....		42-88-II	
Switch			
Check.....		00E-9-I	
SWS			
General Information.....		54B-2-III	
Trouble Code Diagnosis.....		54B-5-III	
T			
Tail Light, Position Light and License Plate Light			
Circuit Diagram.....		90-64-III	
Tension Pulley.....		55-33-III	
Theft-alarm System			
Circuit Diagram.....		90-166-III	
Thermostat.....		14-18-I	
Throttle Body			
Assembly			
2.4L ENGINE.....		13A-451-I	
3.0L ENGINE.....		13B-528-I	
Cleaning			
2.4L ENGINE.....		13A-436-I	
3.0L ENGINE.....		13B-519-I	
Overhaul.....		11D-6-I	

Windshield		Circuit Diagram	90-124-III
Wiper and Washer	51-12-II	Wiper and Washer	
Windshield Wiper and Washer	51-12-II	Windshield	51-12-II
Windshield Wiper and Washer			