

2001 MITSUBISHI GALANT SERVICE MANUAL

FOREWORD

This service manual is subdivided into various group categories. Each section contains diagnostic, disassembly, repair, and installation procedures, along with complete specifications and tightening references. Use of this manual will aid in properly performing any service necessary to maintain or restore the high levels of performance and reliability designed into this Mitsubishi vehicle.

GROUP INDEX

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control ...	17
Automatic Transaxle	23
Front Axle	26
Rear Axle	27
Wheel and Tire	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioning and Ventilation	55
Component Locations	70
Configuration Diagrams and Splice Locations	80
Circuit Diagrams	90
Alphabetical Index	

 **WARNING**

Proper service methods and repair procedures are necessary for the safe, reliable operation of all motor vehicles as well as the personal safety of the person doing the repair. There are many types of procedures, techniques, tools, and parts for servicing vehicles, as well as differences in the skills of the people doing the work. This manual cannot give advice or precautions for every possible situation. Because of this, anyone who does not follow the instructions in this manual must first make sure that the choice of methods, tools, or parts will not cause damage to the vehicle or injury to the person doing the work. The following list contains general precautions that should always be followed while working on a vehicle.

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires work under the vehicle.
- Be sure the ignition switch is always "off" unless otherwise specified by a procedure.
- Set the parking brake when working on a vehicle.
- Operate the engine only in a well-ventilated area.
- Keep clear of moving parts when the engine is running.
- To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.
- Do not smoke while working on or near a vehicle.

CALIFORNIA PROPOSITION 65 WARNING

WARNING

- *This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.*

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING

- *Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- *If it is possible that the SRS components are subjected to heat over 93°C (200°F) in baking or in drying after painting, remove the SRS components [air bag module (driver's side and front passenger's side), SRS-ECU, clock spring, side impact sensor, front seat assembly (side air bag module)] beforehand.*
- *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- *MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B, Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

NOTE

Section titles with the asterisks (*) in the table of contents in each group indicate operations requiring warnings.

