

2

2-4 Shift Rail 23B-133

A

A/C Control Panel
Disassembly and Reassembly 55B-136

A/C Control Unit
Disassembly and Reassembly 55B-136

A/T Key Interlock and Shift Lock Mechanisms
Diagnosis 23Ab-3

A/T Key Interlock and Shift Lock Mechanisms 23Aa-35

ABS
Actuator Test 35B-113
Circuit Diagram 90-234
ECU, Check at Terminal 35B-115
Motor Relay and Valve Relay Check 35B-121
Solenoid Valve Check 35B-123

ABS Control Unit 35B-124

ABS Sensor 35C-206

ABS-ECU
Check 35A-111

Accelerator Cable and Pedal 17-6

Accelerator Pedal Position Sensor
Adjustment 17-5
Adjustment 23Aa-19
Adjustment 13Aa-12
Check 13Aa-18
Check 23Aa-26

Accelerator Pedal Position Switch
Check 13Aa-19
Check 17-5

Accessory Socket 54A-116

Accessory Socket
Circuit Diagram 90-208

Accumulator
Replacement 35A-134

Actuator Test Reference Table
Automatic Transmission 23Ab-38

Adhesive
Automatic Transmission Overhaul 23B-142
Automatic Transmission 23Aa-47
Body 42-68
Engine 11A-42
Engine Overhaul 11B-60
Exterior 51-36
Front Axle 26-63
MFI 13Aa-30
Parking Brake 36-11
Rear Axle 27-42
Steering 37A-54

Adhesive Table 00-54

Adhesives
Equipment 54A-239

Air Bag Module
Disposal Procedures 52Ba-48

Air Bag Module(s) 52Ba-33

Air Cleaner 15-6

Air Cleaner Element
Replace 00-37

Air Conditioning
A/C Switch 55A-126
Actuator Test 55B-130
Automatic Compressor Controller Terminal Check 55A-18
Automatic, Circuit Diagram
VEHICLES WITH REAR AIR CONDITIONING SYSTEM 90-172
VEHICLES WITH REAR COOLER SYSTEM 90-162
Charging <Automatic A/C> 55B-133
Charging <Manual A/C> 55A-119

Compressor 55A-146
Compressor Drive Belt Adjustment 55A-119
Compressor Noise Check 55A-122
Condenser and Condenser Fan Motor 55A-150
Control Assembly 55A-126
Control Panel 55B-136
Control Unit 55B-136
Damper Control Motor 55B-145
ECU Terminal Check, Automatic A/C 55B-130
ECU Terminal Check, Manual A/C 55A-116
Idle-up Operation Check 55A-125
Inside/outside Changeover Switch 55A-126
Magnetic Clutch Test 55A-118
Outside Air Temperature Sensor 55B-152
Photo Sensor 55B-150
Power Relay Check 55A-123
Pressure Switch Check 55A-118
Receiver Drier Test 55A-118
Refrigerant Leak Repair 55A-121
Refrigerant Line 55B-153
Sensors 55A-136
Sensors (Full-auto A/C) 55B-147
Sight Glass Refrigerant Level Test 55A-118
Trouble Code Diagnosis 55B-4
Amplifier 54A-184
Antenna 54A-184
Antenna Pole Replacement 54A-186
Anti-Lock Braking System (ABS)
Diagnosis 35B-3

Audio System
Circuit Diagram
VEHICLES WITH AMPLIFIER 90-202
VEHICLES WITHOUT AMPLIFIER 90-200

Auto A/C
Diagnosis 55B-4

Auto-cruise Control 17-54

Auto-cruise Control System
Circuit Diagram 90-220
Component Check 17-52
Diagnosis 17-8
Main Switch Check 17-50
Trouble Code Diagnosis 17-9

Automatic Transmission
A/T Key Interlock and Shift Lock Mechanisms 23Aa-35
Adhesive 23B-142
Adjusting Plate, Snap Ring and Spacers 23B-137
Center Support 23B-74
Countershaft Gear 23B-118
Direct Clutch 23B-91
Disassembly and Assembly 23B-18
Fluid Level Check 00-41
Front Output Shaft 23B-127
Input Gear 23B-117
Low Reverse Annulus Gear 23B-72
Overhaul 23B-18
Rear Output Shaft 23B-121
Reverse and Overdrive Clutches 23B-67
Sealant 23B-142
Second Brake 23B-71
Transfer Case Adapter 23B-16
Transfer Case Plate 23B-115
Transfer Drive Shaft 23B-130
Underdrive Clutch 23B-76
Valve Body 23B-80
Valve Body Spring Identification 23B-137

Automatic Transmission Fluid
Change 00-42
Level Check 00-41

Automatic Transmission 23Aa-37

Automatic Transmission
Actuator Test Reference Table 23Ab-38

Connector Inspection	00E-2	Seat Belt	52A-2
Control Unit Location	70-17	Seat Belt Warning System	52A-2
Coolant		Side Step Light	54A-80
Engine, Change	00-44	SRS Air Bag	52Bb-2
Cooling Fan	14-10	Starting System	16-19
Crankcase Ventilation System		Sunroof	42-58
Check	17-59	SWS	54Ba-6
Crankshaft		Tire	31-2
Overhaul	11B-48	Transfer <ACTIVE TRAC 4WD II>	23Ab-43
Crankshaft Front Oil Seal	11A-25	Trouble Code, ABS	35B-4
Crankshaft Oil Seal	11A-25	Vehicle Speed Sensor	54A-32
Crankshaft Position Sensor	16-42	Wheel	31-2
Crankshaft Position Sensor		Window Glass	42-11
Check	17-66	Windshield Wiper and Washer	51-20
Check	23Aa-26	Differential	
Crankshaft Rear Oil Seal	11A-27	Oil Level Check	00-47
Cylinder Block		Differential Carrier	26-35
Overhaul	11B-48	Differential Carrier	
Cylinder Head		Rear	27-24
Overhaul	11B-28	Differential Carrier Oil Seal	
Cylinder Head Gasket	11A-29	Replacement	26-15
		Diode Location	70-22
		Direct Annuls Gear	23B-89
		Disc Brake	
		Pad Wear Check	00-45
		Disc Brake Assembly	
		Front	35A-140
		Rear	35A-146
		Disc Brake Pad	
		Check and Adjustment	35A-127
		Disc Brake Rotor	
		Check	35A-129
		Dome Light	54A-79
		Dome Light	
		Circuit Diagram	90-84
		Door	42-28
		Door	
		Back	42-50
		Back, Fit Adjustment	42-49
		Back, Handle and Latch	42-53
		Back, Trim and Waterproof Film	42-52
		Diagnosis	42-20
		Front and Rear, Fit Adjustment	42-26
		Glass and Regulator	42-37
		Handle and Latch	42-40
		Inside Handle Play Adjustment	42-27
		Mirror	51-32
		Opening Weather-strip	42-44
		Outside Handle Play Adjustment	42-27
		Trim and Waterproof Film	42-30
		Door Light	
		Circuit Diagram	90-88
		Door Mirror Heater	
		Circuit Diagram	
		VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM	90-198
		VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM	90-194
		Drive Belt	
		Overhaul	11B-4
		Power Steering, Tension Check	37A-18
		Tension Check and Adjustment	11A-5
		Water Pump and Generator Drive Belt Check	00-39
		Water Pump, Tension Check and Adjustment	14-7
		Drive Plate	
		Overhaul	11B-48
		Driveshaft	
		Front Axle	26-23
		Rear Axle	27-18
		Driveshaft Boots	
		Check	00-46

D

Deflector			
Rear	51-17		
Defogger			
Circuit Diagram			
VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM	90-198		
VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM	90-194		
Diagnosis			
A/T Key Interlock and Shift Lock Mechanisms	23Ab-3		
Anti-Lock Braking System (ABS)	35B-3		
Auto A/C	55B-4		
Auto-cruise Control System	17-8		
Automatic Transmission	23Ab-2		
Back Door	42-47		
Basic Brake System	35A-6		
Central Door Locking System	42-20		
Charging System	16-3		
Combination Meters	54A-32		
Door	42-20		
Emission Control System	17-55		
Engine	11A-2		
Engine Control System	17-3		
Engine Cooling	14-2		
Horn	54A-115		
Ignition Key Reminder Tone Alarm	54A-7		
Front Axle	26-2		
Front Suspension	33A-2		
Fuel Supply	13B-2		
Hood	42-3		
Hydraulic Brake Booster (HBB)	35A-13		
Immobilizer System	54A-7		
Intake and Exhaust	15-2		
Keyless Entry System	42-54		
MFI	13Ab-2		
Mitsubishi Active Skid and Traction Control System (M-ASTC)	35C-3		
Parking Brake	36-2		
Power Steering	37A-3		
Power Windows	42-20		
Propeller Shaft	25-2		
Radio With Tape Player and CD Player, Speaker and Antenna	54A-118		
Rear Air Conditioning	55A-20		
Rear Axle	27-6		
Rear Suspension	34-2		
Rear Wiper and Washer	51-26		
RV Meter	54A-189		

Inner Shaft.....	26-30	Glove Box Light	
Oil Level Check.....	00-47	Circuit Diagram.....	90-90
Sealant.....	26-63	Ground Location.....	70-4
Total Backlash Check.....	26-14	Grounding Location.....	70-7
Front Combination Light.....	54A-71	G-sensor.....	35B-126
Front Differential Mounting.....	26-59		
Front Impact Sensors.....	52Ba-27	H	
Front Rear Fan Switch <Automatic A/C>.....	55B-148	Hazard Warning Light	
Front Rear Fan Switch <Manual A/C>.....	55A-137	Circuit Diagram.....	90-98
Front Seat.....	52A-11	Hazard Warning Switch.....	54A-112
Front Seat Assembly		HBB	
Inspection		Circuit Diagram.....	90-234
HEATED SEAT SWITCH.....	52A-12	Operating Check.....	35A-117
POWER SEAT MANUAL SWITCH.....	52A-16	Headlight, SWS Diagnosis.....	54Bb-298
Front Seat Belt.....	52A-28	Headlight.....	54A-71
Front Side Marker Light.....	54A-68	Headlight	
Front Suspension		Aiming.....	54A-68
Diagnosis.....	33A-2	Circuit Diagram	
Fuel Filler Lid.....	42-8	VEHICLES FOR CANADA.....	90-70
Fuel Gauge Unit		VEHICLES FOR USA.....	90-66
Check.....	54A-63	Headlining.....	52A-10
Check.....	13B-8	Heated Seat	
Replacement.....	13B-8	Circuit Diagram.....	90-252
Fuel Hose		Heater	
Check for Condition.....	00-37	Blower.....	55A-133
Fuel Pipe		Circuit Diagram <Dual A/C>	
Check for Leaks.....	00-36	VEHICLES WITH REAR AIR CONDITIONING	
Fuel Pressure Test.....	13Aa-13	SYSTEM.....	90-152
Fuel Pump		VEHICLES WITH REAR COOLER.....	90-142
Connector Disconnection.....	13Aa-15	VEHICLES WITH REAR HEATER.....	90-132
Operation Check, Overhaul.....	13B-9	Circuit Diagram <Single A/C>.....	90-126
Operation Check.....	13Aa-16	Control.....	55A-129
Fuel Pump Module.....	13B-16	Inside/outside Air Changeover Damper Motor.....	55A-134
Fuel Pump Module		Rear.....	55A-140
Replacement.....	13B-9	Resistor.....	55A-133
Fuel Pump Relay		Unit.....	55A-130
Check.....	13Aa-16	Heater Blower Controller Unit.....	55B-144
Fuel Pump System.....	13Ad-85	Heater Unit.....	55B-143
Fuel Supply		High-Mounted Stoplight.....	54A-79
Diagnosis.....	13B-2	H-L Shift Rail.....	23B-133
Fuel System		Hood.....	42-5
Check for Leaks.....	00-36	Hood	
Fuel Tank.....	13B-11	Diagnosis.....	42-3
Check for Leaks.....	00-36	Horn.....	54A-115
Fuel Tank Differential Pressure Sensor		Horn	
Check.....	13B-10	Circuit Diagram.....	90-105
Check.....	17-63	Hose	
Fuel Tank Filler Tube		Vacuum, Routing.....	17-56
Check for Leaks.....	00-36	Hoses	
Fuel Tank Pressure Relief Valve.....	17-66	Brake, Check.....	00-46
Fuel Tank Pressure Relief Valve		Hub	
Inspection.....	17-69	Disassembly and Assembly.....	26-22
Fuse		Rear Axle.....	27-13
Check.....	00E-11	Hydraulic Brake Booster (HBB)	
Fuses Location.....	70-2	Diagnosis.....	35A-13
Fusible Links Location.....	70-2	Hydraulic Unit Check	
		ABS.....	35B-121
G			
G and Yaw Rate Sensor.....	35C-207	I	
Garnishes.....	51-14	Idle Mixture	
Gauge		Check.....	11A-7
Circuit Diagram.....	90-106	Idle Speed	
Generator		Check.....	11A-7
Assembly.....	16-12	Ignition Cable	
Output Current Test.....	16-6	Replace.....	00-38
Output Line Voltage Drop Test.....	16-5	Ignition Coil.....	16-40
Overhaul.....	11B-4	Ignition Coil	
Regulated Voltage Test.....	16-8	Check.....	16-29

Ignition Key Hole Illumination Light		Lower Arm Bushing	
Circuit Diagram.....	90-92	Replacement.....	34-17
Ignition Switch.....	54A-30	Luminous Intensity	
Ignition System.....	16-27	Measurement.....	54A-70
Ignition System, Diagnosis.....	13Ad-95		
Ignition System		M	
Circuit Diagram.....	90-38	Magnetic Clutch Test (A/C).....	55A-118
Overhaul.....	11B-8	Main Muffler.....	15-13
Ignition Timing		Maintenance	
Check.....	11A-6	Air Cleaner Element.....	00-37
Immobilizer System		Automatic Transmission Fluid.....	00-41
Circuit Diagram.....	90-262	Ball Joint and Steering Linkage Seals.....	00-46
Diagnosis.....	54A-7	Brake Hoses.....	00-46
Injector.....	13Aa-25	Differential Oil.....	00-47
Injector		Disc Brake Pads.....	00-45
Check.....	13Aa-23	Drive Belt.....	00-39
Inner Shaft		Driveshaft Boots.....	00-46
Front Axle.....	26-30	Electrical System.....	00E-13
Inspection Terminal Location.....	70-3	Engine Coolant.....	00-44
Instrument Panel.....	52A-2	Engine Oil.....	00-40
Instrument Panel Inspection.....	00E-8	Engine Oil Filter.....	00-40
Intake Air Temperature Sensor		Evaporative Emission Control System.....	00-37
Check.....	13Aa-17	Exhaust System.....	00-47
Check.....	17-63	Fuel Hose.....	00-37
Intake and Exhaust		Fuel System.....	00-36
Diagnosis.....	15-2	Ignition Cable.....	00-38
Intake Manifold.....	15-7	Propeller Shaft Joints.....	00-47
Intake Manifold		Spark Plug.....	00-37
Overhaul.....	11B-17	SRS.....	00-48
Intake Manifold Plenum		Timing Belt.....	00-38
Overhaul.....	11B-6	Transfer Oil.....	00-43
Interior Light, SWS Diagnosis.....	54Bb-447	Manifold Vacuum	
INVECS-II 5A/T		Check.....	11A-9
Circuit Diagram.....	90-56	Manual A/C	
J		Diagnosis.....	55A-5
Joint Connector.....	90-12	Mark.....	51-30
Joints		M-ASTC	
Propeller Shaft, Lubrication.....	00-47	Circuit Diagram.....	90-234
Junction Block.....	90-10	M-ASTC Control Unit	
		Removal and Installation.....	35C-205
K		Meter	
Keyless Entry System, SWS Diagnosis.....	54Bb-200	Circuit Diagram.....	90-106
Keyless Entry System.....	42-54	MFI	
Keyless Entry System		Adhesive.....	13Aa-30
Diagnosis.....	42-54	Diagnosis.....	90-42
Secret Code Registration.....	42-56	Sealant.....	13Aa-30
Transmitter Battery Replacement.....	42-55	Tightening Specification(s).....	13Aa-29
Knock Sensor.....	16-42	MFI System	
Knuckle		Circuit Diagram.....	90-42
Disassembly and Assembly.....	26-22	Mirror	
Rear Axle.....	27-16	Door.....	51-32
		Remote Controlled, Circuit Diagram.....	90-192
L		Mitsubishi Active Skid and Traction Control System (M-ASTC)	
Lash Adjuster		Diagnosis.....	35C-3
Check.....	11A-10	Module	
Leveling Valve		Fuel Pump.....	13B-16
Check.....	13B-10	Moldings.....	51-9
License Plate Light		Mounting	
Circuit Diagram.....	90-76	Engine.....	32-4
Lighting System		Transmission.....	32-6
Diagnosis, Hazard Warning Light Switch.....	54A-112	Mud Guard.....	51-16
Diagnosis, Rear Combination Light.....	54A-77	Multi Meter.....	54A-235
Lower Arm, Front Suspension.....	33A-15	Multiport Fuel Injection Relay	
Lower Arm, Rear Suspension.....	34-15	Check.....	13Aa-16
Lower Arm Ball Joint		N	
End Play Check.....	33A-7	No.1 Crossmember.....	32-7

Replaceable Bulb			
Replacement, Headlight	54A-70		
Replacement, Side Step Light	54A-109		
Resistive Cord			
Inspection	16-30		
Rheostat	54A-110		
Rheostat			
Circuit Diagram	90-266		
RKE (Keyless Entry System)	42-54		
Secret Code Registration	42-56		
Transmitter Battery Replacement	42-55		
Rocker Arm			
Overhaul	11B-22		
Roof Rail	51-8		
RV Meter	54A-189		
RV Meter			
Circuit Diagram	90-210		
S			
Sealant			
Automatic Transmission	23Aa-47		
Automatic Transmission Overhaul	23B-142		
Body	42-68		
Engine	11A-42		
Engine Overhaul	11B-60		
Equipment	54A-239		
Exterior	51-36		
Front Axle	26-63		
MFI	13Aa-30		
Parking Brake	36-11		
Rear Axle	27-42		
Steering	37A-54		
Sealant Table	00-54		
Seat Belt			
Diagnosis	52A-2		
Seat Belt Pre-Tensioner			
Disposal Procedures	52Ba-48		
Seat Belt Tone Alarm			
Circuit Diagram	90-218		
Seat Belt Warning Light, SWS Diagnosis	54Bb-289		
Seat Belt Warning System			
Diagnosis	52A-2		
Seat Belts With Pre-Tensioner	52Ba-44		
Seat Belts With Pre-Tensioner			
Check	52Ba-47		
Selector Lever	23Aa-33		
Selector Lever			
Operation Check	23Aa-23		
Sensor			
Accelerator Pedal Position, Adjustment	23Aa-19		
Accelerator Pedal Position, Adjustment	13Aa-12		
Accelerator Pedal Position, Adjustment	17-5		
Accelerator Pedal Position, Check	13Aa-18		
Accelerator Pedal Position, Check	23Aa-26		
Automatic Transmission Fluid Temperature, Continuity Check	23Aa-27		
Barometric Pressure, Check	17-62		
Camshaft Position	16-41		
Crankshaft Position	16-42		
Crankshaft Position, Check	17-66		
Engine Coolant Temperature, Check	17-63		
Engine Coolant Temperature, Check	13Aa-17		
Engine Coolant Temperature, Check	17-66		
Fuel Tank Differential Pressure, Check	17-63		
Fuel Tank Differential Pressure, Check	13B-10		
Intake Air Temperature, Check	13Aa-17		
Intake Air Temperature, Check	17-63		
Knock	16-42		
Outside Air Temperature	55B-152		
Oxygen, Check	13Aa-19		
Photo	55B-150		
Throttle Position, Check	13Aa-18		
Volume Air Flow, Check	17-65		
Volume Air Flow, Check	17-62		
Wheel Speed	35B-124		
Wheel Speed, Output Voltage Check	35B-119		
Sensor Location	70-10		
Shiftrail Drive Gear	23B-132		
Shock Absorber	34-15		
Shock Absorber Assembly	33A-11		
Side Impact Sensor	52Ba-42		
Side Marker Light			
Circuit Diagram	90-76		
Side Step	51-18		
Side Step			
Disassembly and Reassembly	51-19		
Side Step Light	54A-80		
Side Step Light			
Circuit Diagram	90-94		
Diagnosis	54A-80		
Side Step Light-ECU Terminal			
Check	54A-108		
Sight Glass (Refrigerant Level Test)	55A-118		
Single Air Conditioning System			
Circuit Diagram	90-126		
Solenoid			
Evaporative Emission Purge, Check	13Aa-24		
Variable Induction Control, Check	13Aa-24		
Solenoid Location	70-20		
Solenoid Valve	26-57		
Solenoid Valve			
ABS, Check	35B-123		
Check	35C-203		
Solenoid Valve Location	70-20		
Spark Plug			
Check and Adjustment	16-30		
Replace	00-37		
Test	16-28		
Spark Plug Cable			
Test	16-28		
Speaker	54A-183		
Speaker			
Test	54A-181		
Speedometer Check			
Check	54A-61		
SRS			
Circuit Diagram	90-244		
Maintenance	00-48		
Maintenance	52Ba-22		
SRS Air Bag			
Diagnosis	52Bb-2		
SRS Control Unit (SRS-ECU)	52Ba-31		
SRS Warning Light Check	52Bb-3		
Stabilizer Bar	33A-18		
Starter Motor			
Assembly	16-20		
Starting System	16-18		
Starting System			
Circuit Diagram	90-36		
Diagnosis	16-19		
Steering			
Adhesive	37A-54		
Ball Joint Dust Cover Inspection	37A-22		
Sealant	37A-54		
Steering Linkage Seals			
Check	00-46		
Steering Wheel			
Free Play Check	37A-15		
Stationary Steering Effort Check	37A-17		
Steering Angle Check	37A-16		
Steering Wheel Return to Center Check	37A-17		

Vacuum Circuit Diagram.....	17-57
Vacuum Hose.....	26-57
Vacuum Hose	
Check.....	17-58
Vacuum Hose Routing.....	17-56
Vacuum Hoses.....	17-56
Vacuum Tank	
Check.....	15-5
Valve	
Fuel Tank Pressure Relief.....	17-66
Valve Body (Automatic Transmission).....	23B-80
Valve Stem Seal.....	11A-15
Vanity Mirror Light	
Circuit Diagram.....	90-91
Variable Induction Control (VIC) Solenoid	
Check.....	15-4
Variable Induction Control Solenoid	
Check.....	13Aa-24
Vehicle Identification.....	00-15
Vehicle Identification Code Plate.....	00-17
Vehicle Speed Sensor.....	54A-32
Vehicle Speed Sensor	
Diagnosis.....	54A-32
Ventilators.....	55A-155
Volume Air Flow Sensor	
Check.....	17-62
Check.....	17-65

W

Warning Light	
Circuit Diagram.....	90-110
Water Hose.....	14-17
Water Pipe.....	14-17
Water Pump.....	14-15
Water Pump Drive Belt	
Tension Check and Adjustment.....	14-7
Waterproof Film.....	42-52
Wheel.....	31-7
Wheel	
Diagnosis.....	31-2
Runout Check.....	31-7
Wheel Bearing	
Play Check, On-vehicle Service.....	26-14
Play Check.....	26-21
Wheel Bearing End Play Check.....	27-12
Wheel Speed Sensor.....	35B-124
Wheel Speed Sensor	
Output Voltage Check.....	35B-119
Wind Noise	
How to Locate.....	42-24
Window Glass.....	42-10
Window Glass	
Back Door.....	42-18
Diagnosis.....	42-11
Door, Adjustment.....	42-26
Quarter.....	42-16
Runchannel.....	42-44
Windshield.....	42-13
Windshield	
Wiper and Washer.....	51-21
Windshield Washer, SWS Diagnosis.....	54Bb-227
Windshield Wiper, SWS Diagnosis.....	54Bb-227
Windshield Wiper and Washer	
Circuit Diagram.....	90-184
Wiper and Washer	
Rear.....	51-27
Rear, Circuit Diagram.....	90-188
Windshield.....	51-21