

## 2

2-4 Shift Rail ..... 23B-133

## A

A/C Control Panel  
Disassembly and Reassembly ..... 55B-136

A/C Control Unit  
Disassembly and Reassembly ..... 55B-136

A/T Key Interlock and Shift Lock Mechanisms  
Diagnosis ..... 23Ab-3

A/T Key Interlock and Shift Lock Mechanisms ..... 23Aa-35

ABS  
Actuator Test ..... 35B-113  
Circuit Diagram ..... 90-234  
ECU, Check at Terminal ..... 35B-115  
Motor Relay and Valve Relay Check ..... 35B-121  
Solenoid Valve Check ..... 35B-123

ABS Control Unit ..... 35B-124

ABS Sensor ..... 35C-206

ABS-ECU  
Check ..... 35A-111

Accelerator Cable and Pedal ..... 17-6

Accelerator Pedal Position Sensor  
Adjustment ..... 17-5  
Adjustment ..... 23Aa-19  
Adjustment ..... 13Aa-12  
Check ..... 13Aa-18  
Check ..... 23Aa-26

Accelerator Pedal Position Switch  
Check ..... 13Aa-19  
Check ..... 17-5

Accessory Socket ..... 54A-116

Accessory Socket  
Circuit Diagram ..... 90-208

Accumulator  
Replacement ..... 35A-134

Actuator Test Reference Table  
Automatic Transmission ..... 23Ab-38

Adhesive  
Automatic Transmission Overhaul ..... 23B-142  
Automatic Transmission ..... 23Aa-47  
Body ..... 42-68  
Engine ..... 11A-42  
Engine Overhaul ..... 11B-60  
Exterior ..... 51-36  
Front Axle ..... 26-63  
MFI ..... 13Aa-30  
Parking Brake ..... 36-11  
Rear Axle ..... 27-42  
Steering ..... 37A-54

Adhesive Table ..... 00-54

Adhesives  
Equipment ..... 54A-239

Air Bag Module  
Disposal Procedures ..... 52Ba-48

Air Bag Module(s) ..... 52Ba-33

Air Cleaner ..... 15-6

Air Cleaner Element  
Replace ..... 00-37

Air Conditioning  
A/C Switch ..... 55A-126  
Actuator Test ..... 55B-130  
Automatic Compressor Controller Terminal Check ..... 55A-18  
Automatic, Circuit Diagram  
VEHICLES WITH REAR AIR CONDITIONING SYSTEM ..... 90-172  
VEHICLES WITH REAR COOLER SYSTEM ..... 90-162  
Charging <Automatic A/C> ..... 55B-133  
Charging <Manual A/C> ..... 55A-119

Compressor ..... 55A-146  
Compressor Drive Belt Adjustment ..... 55A-119  
Compressor Noise Check ..... 55A-122  
Condenser and Condenser Fan Motor ..... 55A-150  
Control Assembly ..... 55A-126  
Control Panel ..... 55B-136  
Control Unit ..... 55B-136  
Damper Control Motor ..... 55B-145  
ECU Terminal Check, Automatic A/C ..... 55B-130  
ECU Terminal Check, Manual A/C ..... 55A-116  
Idle-up Operation Check ..... 55A-125  
Inside/outside Changeover Switch ..... 55A-126  
Magnetic Clutch Test ..... 55A-118  
Outside Air Temperature Sensor ..... 55B-152  
Photo Sensor ..... 55B-150  
Power Relay Check ..... 55A-123  
Pressure Switch Check ..... 55A-118  
Receiver Drier Test ..... 55A-118  
Refrigerant Leak Repair ..... 55A-121  
Refrigerant Line ..... 55B-153  
Sensors ..... 55A-136  
Sensors (Full-auto A/C) ..... 55B-147  
Sight Glass Refrigerant Level Test ..... 55A-118  
Trouble Code Diagnosis ..... 55B-4

Amplifier ..... 54A-184

Antenna ..... 54A-184

Antenna Pole Replacement ..... 54A-186

Anti-Lock Braking System (ABS)  
Diagnosis ..... 35B-3

Audio System  
Circuit Diagram  
VEHICLES WITH AMPLIFIER ..... 90-202  
VEHICLES WITHOUT AMPLIFIER ..... 90-200

Auto A/C  
Diagnosis ..... 55B-4

Auto-cruise Control ..... 17-54

Auto-cruise Control System  
Circuit Diagram ..... 90-220  
Component Check ..... 17-52  
Diagnosis ..... 17-8  
Main Switch Check ..... 17-50  
Trouble Code Diagnosis ..... 17-9

Automatic Transmission  
A/T Key Interlock and Shift Lock Mechanisms ..... 23Aa-35  
Adhesive ..... 23B-142  
Adjusting Plate, Snap Ring and Spacers ..... 23B-137  
Center Support ..... 23B-74  
Countershaft Gear ..... 23B-118  
Direct Clutch ..... 23B-91  
Disassembly and Assembly ..... 23B-18  
Fluid Level Check ..... 00-41  
Front Output Shaft ..... 23B-127  
Input Gear ..... 23B-117  
Low Reverse Annulus Gear ..... 23B-72  
Overhaul ..... 23B-18  
Rear Output Shaft ..... 23B-121  
Reverse and Overdrive Clutches ..... 23B-67  
Sealant ..... 23B-142  
Second Brake ..... 23B-71  
Transfer Case Adapter ..... 23B-16  
Transfer Case Plate ..... 23B-115  
Transfer Drive Shaft ..... 23B-130  
Underdrive Clutch ..... 23B-76  
Valve Body ..... 23B-80  
Valve Body Spring Identification ..... 23B-137

Automatic Transmission Fluid  
Change ..... 00-42  
Level Check ..... 00-41

Automatic Transmission ..... 23Aa-37

Automatic Transmission  
Actuator Test Reference Table ..... 23Ab-38

Adhesive.....	23Aa-47	Boots	
Control Component Check .....	23Aa-26	Driveshaft, Check .....	00-46
Control Component Layout.....	23Aa-11	Brake Booster (Basic Brakes) .....	35A-133
Diagnosis.....	23Ab-2	Brake Disc	
Fail-safe Functions/backup Functions .....	23Ab-5	Pad Wear Check.....	00-45
Fluid Check.....	23Aa-15	Runout Check and Correction .....	35A-130
Fluid Cooler Flow Check .....	23Aa-19	Thickness Check .....	35A-130
Fluid Replacement.....	23Aa-16	Brake Fluid Level Sensor Check .....	35A-127
Flushing Coolers and Tubes.....	23Aa-18	Brake Hoses	
Hydraulic Circuit .....	23Ab-21	Check.....	00-46
Hydraulic Pressure Tests .....	23Ab-15	Brake Pad	
PCM Terminal Voltage Reference Chart.....	23Ab-39	Wear Check.....	00-45
Sealant .....	23Aa-47	Brake Pedal .....	35A-132
Torque Converter Stall Check.....	23Ab-14	Brake Pedal	
Automatic Transmission Fluid Temperature Sensor		Check and Adjustment.....	35A-115
Continuity Check .....	23Aa-27	Removal and installation.....	35A-132
Auto-tensioner		Brake Rotor	
Check .....	11A-6	Disc, Check.....	35A-129
AWD		Brake Stoplight Switch Check.....	35A-116
Active Trac, Circuit Diagram .....	90-226	Brake Warning Light .....	35A-90
		Brake Warning Light	
		Check.....	35A-14
		Bumper	
		Front .....	51-2
		Rear .....	51-5
		Buzzer .....	35A-139
<b>B</b>		<b>C</b>	
Back Door		Cable	
Diagnosis.....	42-47	Accelerator.....	17-6
Back Door Handle		Ignition, Replace .....	00-38
Play Check .....	42-49	Camshaft .....	11A-15
Back Door Trim.....	42-52	Camshaft	
Backup Light		Overhaul .....	11B-22
Circuit Diagram.....	90-104	Camshaft Oil Seal.....	11A-20
Ball Joint Dust Cover		Camshaft Position Sensor .....	16-41
Inspection .....	34-7	Canister	
Replacement, Front Suspension Lower Arm .....	33A-17	Evaporative Emission .....	17-66
Replacement, Front Suspension Stabilizer Link .....	33A-20	Cargo Space Light	
Replacement, Front Suspension Upper Arm .....	33A-10	Circuit Diagram .....	90-84
Replacement, Rear Suspension Lower Arm .....	34-14	Catalytic Converter .....	17-70
Replacement, Rear Suspension Stabilizer Link.....	34-19	CD Player .....	54A-182
Ball Joint Dust Cover Inspection		Central Door Locking System, SWS Diagnosis.....	54Bb-74
Steering .....	37A-22	Central Door Locking System	
Ball Joint Dust Cover Replacement		Circuit Diagram .....	90-116
Steering .....	37A-43	Diagnosis .....	42-20
Ball Joint Seals		Centralized Junction	
Check .....	00-46	Circuit Diagram .....	90-20
Barometric Pressure Sensor		Charging System .....	16-2
Check .....	17-62	Charging System	
Basic Brake System		Circuit Diagram .....	90-40
Diagnosis.....	35A-6	Diagnosis .....	16-3
Battery		Cigarette Lighter .....	54A-117
Check .....	54A-4	Cigarette Lighter	
Handling .....	00E-12	Circuit Diagram .....	90-207
Remedy for a Discharged Battery .....	35B-123	Clock	
Belt		Circuit Diagram .....	90-206
Water Pump and Generator Drive Belt Check.....	00-39	Clock Spring .....	52Ba-33
Belt, Timing		Coil Spring .....	34-15
Replace .....	00-38	Column Switch.....	54A-113
Bleeding		Combination Meters .....	54A-32
Brakes (Basic) .....	35A-122	Combination Meters	
Power Steering .....	37A-19	Diagnosis .....	54A-32
Blower .....	55A-132	Compression Pressure	
Blower		Check.....	11A-8
Inspection .....	55A-133	Compressor (A/C)	
Blower Motor		Noise Check .....	55A-122
Removal and Installation .....	55A-133	Connecting Rod	
Blower Resistor		Overhaul .....	11B-40
Inspection .....	55A-133		
Removal and Installation .....	55A-133		
Body			
Adhesive.....	42-68		
Sealant .....	42-68		

Connector Inspection .....	00E-2	Seat Belt .....	52A-2
Control Unit Location .....	70-17	Seat Belt Warning System .....	52A-2
Coolant		Side Step Light .....	54A-80
Engine, Change .....	00-44	SRS Air Bag .....	52Bb-2
Cooling Fan .....	14-10	Starting System .....	16-19
Crankcase Ventilation System		Sunroof .....	42-58
Check .....	17-59	SWS .....	54Ba-6
Crankshaft		Tire .....	31-2
Overhaul .....	11B-48	Transfer <ACTIVE TRAC 4WD II> .....	23Ab-43
Crankshaft Front Oil Seal .....	11A-25	Trouble Code, ABS .....	35B-4
Crankshaft Oil Seal .....	11A-25	Vehicle Speed Sensor .....	54A-32
Crankshaft Position Sensor .....	16-42	Wheel .....	31-2
Crankshaft Position Sensor		Window Glass .....	42-11
Check .....	17-66	Windshield Wiper and Washer .....	51-20
Check .....	23Aa-26	Differential	
Crankshaft Rear Oil Seal .....	11A-27	Oil Level Check .....	00-47
Cylinder Block		Differential Carrier .....	26-35
Overhaul .....	11B-48	Differential Carrier	
Cylinder Head		Rear .....	27-24
Overhaul .....	11B-28	Differential Carrier Oil Seal	
Cylinder Head Gasket .....	11A-29	Replacement .....	26-15
		Diode Location .....	70-22
		Direct Annuls Gear .....	23B-89
		Disc Brake	
		Pad Wear Check .....	00-45
		Disc Brake Assembly	
		Front .....	35A-140
		Rear .....	35A-146
		Disc Brake Pad	
		Check and Adjustment .....	35A-127
		Disc Brake Rotor	
		Check .....	35A-129
		Dome Light .....	54A-79
		Dome Light	
		Circuit Diagram .....	90-84
		Door .....	42-28
		Door	
		Back .....	42-50
		Back, Fit Adjustment .....	42-49
		Back, Handle and Latch .....	42-53
		Back, Trim and Waterproof Film .....	42-52
		Diagnosis .....	42-20
		Front and Rear, Fit Adjustment .....	42-26
		Glass and Regulator .....	42-37
		Handle and Latch .....	42-40
		Inside Handle Play Adjustment .....	42-27
		Mirror .....	51-32
		Opening Weather-strip .....	42-44
		Outside Handle Play Adjustment .....	42-27
		Trim and Waterproof Film .....	42-30
		Door Light	
		Circuit Diagram .....	90-88
		Door Mirror Heater	
		Circuit Diagram .....	
		VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM .....	90-198
		VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM .....	90-194
		Drive Belt	
		Overhaul .....	11B-4
		Power Steering, Tension Check .....	37A-18
		Tension Check and Adjustment .....	11A-5
		Water Pump and Generator Drive Belt Check .....	00-39
		Water Pump, Tension Check and Adjustment .....	14-7
		Drive Plate	
		Overhaul .....	11B-48
		Driveshaft	
		Front Axle .....	26-23
		Rear Axle .....	27-18
		Driveshaft Boots	
		Check .....	00-46

**D**

Deflector			
Rear .....	51-17		
Defogger			
Circuit Diagram			
VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM .....	90-198		
VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM .....	90-194		
Diagnosis			
A/T Key Interlock and Shift Lock Mechanisms .....	23Ab-3		
Anti-Lock Braking System (ABS) .....	35B-3		
Auto A/C .....	55B-4		
Auto-cruise Control System .....	17-8		
Automatic Transmission .....	23Ab-2		
Back Door .....	42-47		
Basic Brake System .....	35A-6		
Central Door Locking System .....	42-20		
Charging System .....	16-3		
Combination Meters .....	54A-32		
Door .....	42-20		
Emission Control System .....	17-55		
Engine .....	11A-2		
Engine Control System .....	17-3		
Engine Cooling .....	14-2		
Horn .....	54A-115		
Ignition Key Reminder Tone Alarm .....	54A-7		
Front Axle .....	26-2		
Front Suspension .....	33A-2		
Fuel Supply .....	13B-2		
Hood .....	42-3		
Hydraulic Brake Booster (HBB) .....	35A-13		
Immobilizer System .....	54A-7		
Intake and Exhaust .....	15-2		
Keyless Entry System .....	42-54		
MFI .....	13Ab-2		
Mitsubishi Active Skid and Traction Control System (M-ASTC) .....	35C-3		
Parking Brake .....	36-2		
Power Steering .....	37A-3		
Power Windows .....	42-20		
Propeller Shaft .....	25-2		
Radio With Tape Player and CD Player, Speaker and Antenna .....	54A-118		
Rear Air Conditioning .....	55A-20		
Rear Axle .....	27-6		
Rear Suspension .....	34-2		
Rear Wiper and Washer .....	51-26		
RV Meter .....	54A-189		

Drum  
 Inspection ..... 36-10

Dual Manual Air Conditioning System  
 Circuit Diagram  
 VEHICLES WITH REAR AIR CONDITIONING SYSTEM..... 90-152  
 VEHICLES WITH REAR COOLER..... 90-142  
 VEHICLES WITH REAR HEATER ..... 90-132

**E**

EBD  
 Circuit Diagram ..... 90-234

ECU Terminal  
 Check ..... 35C-201  
 Check, SWS Diagnosis ..... 54Ba-19

EGR System..... 17-63

EGR Valve  
 Check ..... 13Aa-24  
 Check ..... 17-64  
 Cleaning ..... 17-65

Electrical System  
 Check ..... 00E-13

Element, Air Cleaner  
 Replace ..... 00-37

Emission Control ..... 17-55

Emission Control System  
 Diagnosis..... 17-55

Emission Control System, Evaporative  
 Check for Clogging ..... 00-37  
 Check for Leaks..... 00-37

Engine  
 Adhesive ..... 11A-42  
 Assembly ..... 11A-12  
 Auto-tensioner ..... 11A-6  
 Camshaft Oil Seal ..... 11A-20  
 Compression Pressure ..... 11A-8  
 Crankshaft Front Oil Seal ..... 11A-25  
 Crankshaft Oil Seal ..... 11A-25  
 Crankshaft Rear Oil Seal ..... 11A-27  
 Cylinder Head Gasket ..... 11A-29  
 Diagnosis ..... 11A-2  
 Drive Belt ..... 11A-5  
 Idle Mixture ..... 11A-7  
 Idle Speed..... 11A-7  
 Ignition Timing ..... 11A-6  
 Lash Adjuster..... 11A-10  
 Manifold Vacuum ..... 11A-9  
 Oil Pan and Oil Screen ..... 11A-23  
 Sealant ..... 11A-42  
 Tightening Specification(s) ..... 11A-40  
 Timing Belt..... 11A-33

Engine Bracket ..... 11B-54

Engine Control ..... 17-3

Engine Control System  
 Diagnosis ..... 17-3

Engine Coolant  
 Change ..... 00-44  
 Concentration Check ..... 14-7  
 Leak Check..... 14-5  
 Replacement ..... 14-5

Engine Coolant Temperature Gauge Unit  
 Check ..... 54A-64

Engine Coolant Temperature Sensor  
 Check ..... 17-66  
 Check ..... 13Aa-17  
 Check ..... 17-63

Engine Cooling  
 Diagnosis..... 14-2

Engine Lubrication  
 Tightening Specification(s) ..... 12-6

Engine Mounting..... 32-4

Engine Oil  
 Change ..... 00-40  
 Check..... 12-2  
 Replacement..... 12-3

Engine Oil Cooler ..... 12-5

Engine Oil Filter  
 Change ..... 00-40  
 Replacement..... 12-3

Engine Oil Pressure  
 Check..... 12-4

Engine Overhaul  
 Adhesive ..... 11B-60  
 Sealant..... 11B-60  
 Tightening Specification(s)..... 11B-55

Equipment  
 Diagnosis, Horn ..... 54A-115  
 Diagnosis, Ignition Switch ..... 54A-7  
 Diagnosis, RV Meter..... 54A-189  
 Sealant..... 54A-239

ETACS  
 Enabling/Disabling the Answerback Function..... 42-55

Evaporative Emission Canister..... 17-66

Evaporative Emission Canister  
 Inspection ..... 17-69

Evaporative Emission Control System ..... 17-59

Evaporative Emission Control System  
 Check for Clogging ..... 00-37  
 Check for Leaks ..... 00-37  
 Purge Solenoid Check..... 17-62

Evaporative Emission Purge Solenoid  
 Check..... 13Aa-24

Evaporative Emission Ventilation Solenoid  
 Check..... 17-63

Exhaust Manifold ..... 15-12

Exhaust Manifold  
 Overhaul ..... 11B-21

Exhaust Pipe ..... 15-13

Exhaust System  
 Check..... 00-47

Exterior  
 Adhesive ..... 51-36  
 Diagnosis, Rear Wiper and Washer..... 51-26  
 Diagnosis, Windshield Wiper and Washer ..... 51-20  
 Sealant..... 51-36

**F**

Fender ..... 42-7

Filter  
 Engine Oil, Change..... 00-40

Flasher Timer, SWS Diagnosis..... 54Bb-389

Floor Console ..... 52A-7

Fluid  
 Automatic Transmission, Fluid Level Check ..... 00-41

Flywheel  
 Overhaul ..... 11B-48

Fog Light, SWS Diagnosis..... 54Bb-425

Fog Light..... 54A-75

Fog Light  
 Circuit Diagram ..... 90-80

Free Wheel Solenoid Valve  
 Operation Check..... 26-16

Free-wheeling Clutch..... 26-35

Front Axle  
 Adhesive ..... 26-63  
 Diagnosis ..... 26-2  
 Driveshaft..... 26-23  
 Free Wheel Solenoid Valve Operation Check ..... 26-16  
 Gear Oil Level Check..... 26-15

Inner Shaft .....	26-30	Glove Box Light	
Oil Level Check .....	00-47	Circuit Diagram .....	90-90
Sealant .....	26-63	Ground Location .....	70-4
Total Backlash Check .....	26-14	Grounding Location .....	70-7
Front Combination Light .....	54A-71	G-sensor .....	35B-126
Front Differential Mounting .....	26-59		
Front Impact Sensors .....	52Ba-27	<b>H</b>	
Front Rear Fan Switch <Automatic A/C> .....	55B-148	Hazard Warning Light	
Front Rear Fan Switch <Manual A/C> .....	55A-137	Circuit Diagram .....	90-98
Front Seat .....	52A-11	Hazard Warning Switch .....	54A-112
Front Seat Assembly		HBB	
Inspection		Circuit Diagram .....	90-234
HEATED SEAT SWITCH .....	52A-12	Operating Check .....	35A-117
POWER SEAT MANUAL SWITCH .....	52A-16	Headlight, SWS Diagnosis .....	54Bb-298
Front Seat Belt .....	52A-28	Headlight .....	54A-71
Front Side Marker Light .....	54A-68	Headlight	
Front Suspension		Aiming .....	54A-68
Diagnosis .....	33A-2	Circuit Diagram	
Fuel Filler Lid .....	42-8	VEHICLES FOR CANADA .....	90-70
Fuel Gauge Unit		VEHICLES FOR USA .....	90-66
Check .....	54A-63	Headlining .....	52A-10
Check .....	13B-8	Heated Seat	
Replacement .....	13B-8	Circuit Diagram .....	90-252
Fuel Hose		Heater	
Check for Condition .....	00-37	Blower .....	55A-133
Fuel Pipe		Circuit Diagram <Dual A/C>	
Check for Leaks .....	00-36	VEHICLES WITH REAR AIR CONDITIONING	
Fuel Pressure Test .....	13Aa-13	SYSTEM .....	90-152
Fuel Pump		VEHICLES WITH REAR COOLER .....	90-142
Connector Disconnection .....	13Aa-15	VEHICLES WITH REAR HEATER .....	90-132
Operation Check, Overhaul .....	13B-9	Circuit Diagram <Single A/C> .....	90-126
Operation Check .....	13Aa-16	Control .....	55A-129
Fuel Pump Module .....	13B-16	Inside/outside Air Changeover Damper Motor .....	55A-134
Fuel Pump Module		Rear .....	55A-140
Replacement .....	13B-9	Resistor .....	55A-133
Fuel Pump Relay		Unit .....	55A-130
Check .....	13Aa-16	Heater Blower Controller Unit .....	55B-144
Fuel Pump System .....	13Ad-85	Heater Unit .....	55B-143
Fuel Supply		High-Mounted Stoplight .....	54A-79
Diagnosis .....	13B-2	H-L Shift Rail .....	23B-133
Fuel System		Hood .....	42-5
Check for Leaks .....	00-36	Hood	
Fuel Tank .....	13B-11	Diagnosis .....	42-3
Check for Leaks .....	00-36	Horn .....	54A-115
Fuel Tank Differential Pressure Sensor		Horn	
Check .....	13B-10	Circuit Diagram .....	90-105
Check .....	17-63	Hose	
Fuel Tank Filler Tube		Vacuum, Routing .....	17-56
Check for Leaks .....	00-36	Hoses	
Fuel Tank Pressure Relief Valve .....	17-66	Brake, Check .....	00-46
Fuel Tank Pressure Relief Valve		Hub	
Inspection .....	17-69	Disassembly and Assembly .....	26-22
Fuse		Rear Axle .....	27-13
Check .....	00E-11	Hydraulic Brake Booster (HBB)	
Fuses Location .....	70-2	Diagnosis .....	35A-13
Fusible Links Location .....	70-2	Hydraulic Unit Check	
		ABS .....	35B-121
<b>G</b>			
G and Yaw Rate Sensor .....	35C-207	<b>I</b>	
Garnishes .....	51-14	Idle Mixture	
Gauge		Check .....	11A-7
Circuit Diagram .....	90-106	Idle Speed	
Generator		Check .....	11A-7
Assembly .....	16-12	Ignition Cable	
Output Current Test .....	16-6	Replace .....	00-38
Output Line Voltage Drop Test .....	16-5	Ignition Coil .....	16-40
Overhaul .....	11B-4	Ignition Coil	
Regulated Voltage Test .....	16-8	Check .....	16-29

Ignition Key Hole Illumination Light		Lower Arm Bushing	
Circuit Diagram.....	90-92	Replacement.....	34-17
Ignition Switch.....	54A-30	Luminous Intensity	
Ignition System.....	16-27	Measurement.....	54A-70
Ignition System, Diagnosis.....	13Ad-95		
Ignition System		<b>M</b>	
Circuit Diagram.....	90-38	Magnetic Clutch Test (A/C).....	55A-118
Overhaul.....	11B-8	Main Muffler.....	15-13
Ignition Timing		Maintenance	
Check.....	11A-6	Air Cleaner Element.....	00-37
Immobilizer System		Automatic Transmission Fluid.....	00-41
Circuit Diagram.....	90-262	Ball Joint and Steering Linkage Seals.....	00-46
Diagnosis.....	54A-7	Brake Hoses.....	00-46
Injector.....	13Aa-25	Differential Oil.....	00-47
Injector		Disc Brake Pads.....	00-45
Check.....	13Aa-23	Drive Belt.....	00-39
Inner Shaft		Driveshaft Boots.....	00-46
Front Axle.....	26-30	Electrical System.....	00E-13
Inspection Terminal Location.....	70-3	Engine Coolant.....	00-44
Instrument Panel.....	52A-2	Engine Oil.....	00-40
Instrument Panel Inspection.....	00E-8	Engine Oil Filter.....	00-40
Intake Air Temperature Sensor		Evaporative Emission Control System.....	00-37
Check.....	13Aa-17	Exhaust System.....	00-47
Check.....	17-63	Fuel Hose.....	00-37
Intake and Exhaust		Fuel System.....	00-36
Diagnosis.....	15-2	Ignition Cable.....	00-38
Intake Manifold.....	15-7	Propeller Shaft Joints.....	00-47
Intake Manifold		Spark Plug.....	00-37
Overhaul.....	11B-17	SRS.....	00-48
Intake Manifold Plenum		Timing Belt.....	00-38
Overhaul.....	11B-6	Transfer Oil.....	00-43
Interior Light, SWS Diagnosis.....	54Bb-447	Manifold Vacuum	
INVECS-II 5A/T		Check.....	11A-9
Circuit Diagram.....	90-56	Manual A/C	
<b>J</b>		Diagnosis.....	55A-5
Joint Connector.....	90-12	Mark.....	51-30
Joints		M-ASTC	
Propeller Shaft, Lubrication.....	00-47	Circuit Diagram.....	90-234
Junction Block.....	90-10	M-ASTC Control Unit	
		Removal and Installation.....	35C-205
<b>K</b>		Meter	
Keyless Entry System, SWS Diagnosis.....	54Bb-200	Circuit Diagram.....	90-106
Keyless Entry System.....	42-54	MFI	
Keyless Entry System		Adhesive.....	13Aa-30
Diagnosis.....	42-54	Diagnosis.....	90-42
Secret Code Registration.....	42-56	Sealant.....	13Aa-30
Transmitter Battery Replacement.....	42-55	Tightening Specification(s).....	13Aa-29
Knock Sensor.....	16-42	MFI System	
Knuckle		Circuit Diagram.....	90-42
Disassembly and Assembly.....	26-22	Mirror	
Rear Axle.....	27-16	Door.....	51-32
		Remote Controlled, Circuit Diagram.....	90-192
<b>L</b>		Mitsubishi Active Skid and Traction Control System (M-ASTC)	
Lash Adjuster		Diagnosis.....	35C-3
Check.....	11A-10	Module	
Leveling Valve		Fuel Pump.....	13B-16
Check.....	13B-10	Moldings.....	51-9
License Plate Light		Mounting	
Circuit Diagram.....	90-76	Engine.....	32-4
Lighting System		Transmission.....	32-6
Diagnosis, Hazard Warning Light Switch.....	54A-112	Mud Guard.....	51-16
Diagnosis, Rear Combination Light.....	54A-77	Multi Meter.....	54A-235
Lower Arm, Front Suspension.....	33A-15	Multiport Fuel Injection Relay	
Lower Arm, Rear Suspension.....	34-15	Check.....	13Aa-16
Lower Arm Ball Joint		<b>N</b>	
End Play Check.....	33A-7	No.1 Crossmember.....	32-7

<b>O</b>		
Oil		
Engine, Change .....	00-40	
Engine, Check .....	12-2	
Engine, Replacement .....	12-3	
Transfer, Change .....	00-43	
Oil Cooler		
Engine .....	12-5	
Oil Filter		
Engine, Replacement .....	12-3	
Oil Pan.....	23Aa-40	
Oil Pan		
Overhaul.....	11B-35	
Oil Pan and Oil Screen.....	11A-23	
Oil Pressure		
Engine, Check .....	12-4	
Oil Pump		
Overhaul.....	11B-35	
Power Steering .....	37A-44	
Power Steering, Pressure Test.....	37A-20	
Oil seal		
Camshaft .....	11A-20	
Oil Seal		
Crankshaft .....	11A-25	
Crankshaft Front.....	11A-25	
Crankshaft Rear .....	11A-27	
Other Parts.....	55B-153	
Outputshaft Support .....	23B-94	
Oxygen Sensor		
Check .....	13Aa-19	
<b>P</b>		
Parking Brake		
Adhesive.....	36-11	
Cable .....	36-7	
Diagnosis.....	36-2	
Lever.....	36-6	
Lever Stroke Check and Adjustment .....	36-4	
Lining and Drum .....	36-8	
Lining Running-in.....	36-5	
Sealant .....	36-11	
Switch Check.....	36-4	
Parking Brake Lining		
Inspection .....	36-10	
PCV (Positive Crankcase Ventilation) System .....	17-58	
PCV (Positive Crankcase Ventilation) System		
Valve Check.....	17-59	
Pedal		
Accelerator .....	17-6	
Piston		
Overhaul.....	11B-40	
Position Indicator Light		
Check .....	23Aa-26	
Position Light.....	54A-68	
Position Light		
Circuit Diagram.....	90-76	
Power Distribution System		
Circuit Diagram.....	90-26	
Power Seat		
Circuit Diagram.....	90-248	
Power Steering		
Bleeding.....	37A-19	
Diagnosis.....	37A-3	
Drive Belt Tension Check .....	37A-18	
Fluid Level Check .....	37A-18	
Fluid Replacement.....	37A-19	
Gear Box Assembly.....	37A-27	
Hoses .....	37A-49	
Oil Pump Assembly .....	37A-44	
Oil Pump Pressure Test.....	37A-20	
Pressure Switch Check.....	37A-21	
Power Steering Diagnosis .....	37A-3	
Power Windows		
Circuit Breaker Inspection.....	42-27	
Circuit Diagram.....	90-112	
Diagnosis.....	42-20	
Power Windows, SWS Diagnosis .....	54Bb-132	
Powertrain Control Module (PCM).....	23Aa-44	
Printed-Heater Lines		
Check.....	54A-187	
Propeller Shaft.....	25-5	
Propeller Shaft		
Diagnosis .....	25-2	
Propeller Shaft Joints		
Lubrication .....	00-47	
Purge Control System		
Check.....	17-61	
<b>R</b>		
Radiator .....	14-8	
Radiator Cap		
Pressure Check .....	14-5	
Radio With Tape Player .....	54A-182	
Radio With Tape Player and CD Player, Speaker and Antenna		
Diagnosis .....	54A-118	
Rear A/C Control Unit.....	55A-139	
Rear A/C Switch .....	55B-148	
Rear Air Conditioning		
Diagnosis.....	55A-20	
Rear Axle		
Adhesive .....	27-42	
Diagnosis .....	27-6	
Driveshaft.....	27-18	
Gear Oil Level Check.....	27-12	
Hub .....	27-13	
Knuckle.....	27-16	
Oil Level Check.....	00-47	
Sealant.....	27-42	
Total Backlash Check .....	27-12	
Wheel Bearing End Play Check.....	27-12	
Rear Blower <Automatic A/C>.....	55B-149	
Rear Blower <Manual A/C>.....	55A-143	
Rear Blower		
Disassembly and Assembly <Automatic A/C>.....	55B-149	
Disassembly and Assembly <Manual A/C>.....	55A-144	
Rear Combination Light.....	54A-77	
Rear Heater Switch .....	55A-137	
Rear Heater Unit <Automatic A/C> .....	55B-149	
Rear Heater Unit <Manual A/C> .....	55A-143	
Rear Heater Unit.....	55B-149	
Rear Personal Light		
Circuit Diagram.....	90-84	
Rear Seat .....	52A-18	
Rear Seat Belt .....	52A-30	
Rear Suspension.....	34-8	
Rear Suspension		
Diagnosis.....	34-2	
Rear Washer, SWS Diagnosis.....	54Bb-265	
Rear Wheel Alignment		
Check and Adjustment.....	34-6	
Rear Window Defogger .....	54A-187	
Rear Window Defogger Switch.....	54A-188	
Rear Wiper, SWS Diagnosis.....	54Bb-265	
Receiver Drier Test (A/C).....	55A-118	
Relay		
Check.....	00E-10	
Relay Location.....	70-8	

Replaceable Bulb			
Replacement, Headlight .....	54A-70		
Replacement, Side Step Light .....	54A-109		
Resistive Cord			
Inspection .....	16-30		
Rheostat .....	54A-110		
Rheostat			
Circuit Diagram .....	90-266		
RKE (Keyless Entry System) .....	42-54		
Secret Code Registration .....	42-56		
Transmitter Battery Replacement .....	42-55		
Rocker Arm			
Overhaul .....	11B-22		
Roof Rail .....	51-8		
RV Meter .....	54A-189		
RV Meter			
Circuit Diagram .....	90-210		
<b>S</b>			
Sealant			
Automatic Transmission .....	23Aa-47		
Automatic Transmission Overhaul .....	23B-142		
Body .....	42-68		
Engine .....	11A-42		
Engine Overhaul .....	11B-60		
Equipment .....	54A-239		
Exterior .....	51-36		
Front Axle .....	26-63		
MFI .....	13Aa-30		
Parking Brake .....	36-11		
Rear Axle .....	27-42		
Steering .....	37A-54		
Sealant Table .....	00-54		
Seat Belt			
Diagnosis .....	52A-2		
Seat Belt Pre-Tensioner			
Disposal Procedures .....	52Ba-48		
Seat Belt Tone Alarm			
Circuit Diagram .....	90-218		
Seat Belt Warning Light, SWS Diagnosis .....	54Bb-289		
Seat Belt Warning System			
Diagnosis .....	52A-2		
Seat Belts With Pre-Tensioner .....	52Ba-44		
Seat Belts With Pre-Tensioner			
Check .....	52Ba-47		
Selector Lever .....	23Aa-33		
Selector Lever			
Operation Check .....	23Aa-23		
Sensor			
Accelerator Pedal Position, Adjustment .....	23Aa-19		
Accelerator Pedal Position, Adjustment .....	13Aa-12		
Accelerator Pedal Position, Adjustment .....	17-5		
Accelerator Pedal Position, Check .....	13Aa-18		
Accelerator Pedal Position, Check .....	23Aa-26		
Automatic Transmission Fluid Temperature, Continuity Check .....	23Aa-27		
Barometric Pressure, Check .....	17-62		
Camshaft Position .....	16-41		
Crankshaft Position .....	16-42		
Crankshaft Position, Check .....	17-66		
Engine Coolant Temperature, Check .....	17-63		
Engine Coolant Temperature, Check .....	13Aa-17		
Engine Coolant Temperature, Check .....	17-66		
Fuel Tank Differential Pressure, Check .....	17-63		
Fuel Tank Differential Pressure, Check .....	13B-10		
Intake Air Temperature, Check .....	13Aa-17		
Intake Air Temperature, Check .....	17-63		
Knock .....	16-42		
Outside Air Temperature .....	55B-152		
Oxygen, Check .....	13Aa-19		
Photo .....	55B-150		
Throttle Position, Check .....	13Aa-18		
Volume Air Flow, Check .....	17-65		
Volume Air Flow, Check .....	17-62		
Wheel Speed .....	35B-124		
Wheel Speed, Output Voltage Check .....	35B-119		
Sensor Location .....	70-10		
Shiftrail Drive Gear .....	23B-132		
Shock Absorber .....	34-15		
Shock Absorber Assembly .....	33A-11		
Side Impact Sensor .....	52Ba-42		
Side Marker Light			
Circuit Diagram .....	90-76		
Side Step .....	51-18		
Side Step			
Disassembly and Reassembly .....	51-19		
Side Step Light .....	54A-80		
Side Step Light			
Circuit Diagram .....	90-94		
Diagnosis .....	54A-80		
Side Step Light-ECU Terminal			
Check .....	54A-108		
Sight Glass (Refrigerant Level Test) .....	55A-118		
Single Air Conditioning System			
Circuit Diagram .....	90-126		
Solenoid			
Evaporative Emission Purge, Check .....	13Aa-24		
Variable Induction Control, Check .....	13Aa-24		
Solenoid Location .....	70-20		
Solenoid Valve .....	26-57		
Solenoid Valve			
ABS, Check .....	35B-123		
Check .....	35C-203		
Solenoid Valve Location .....	70-20		
Spark Plug			
Check and Adjustment .....	16-30		
Replace .....	00-37		
Test .....	16-28		
Spark Plug Cable			
Test .....	16-28		
Speaker .....	54A-183		
Speaker			
Test .....	54A-181		
Speedometer Check			
Check .....	54A-61		
SRS			
Circuit Diagram .....	90-244		
Maintenance .....	00-48		
Maintenance .....	52Ba-22		
SRS Air Bag			
Diagnosis .....	52Bb-2		
SRS Control Unit (SRS-ECU) .....	52Ba-31		
SRS Warning Light Check .....	52Bb-3		
Stabilizer Bar .....	33A-18		
Starter Motor			
Assembly .....	16-20		
Starting System .....	16-18		
Starting System			
Circuit Diagram .....	90-36		
Diagnosis .....	16-19		
Steering			
Adhesive .....	37A-54		
Ball Joint Dust Cover Inspection .....	37A-22		
Sealant .....	37A-54		
Steering Linkage Seals			
Check .....	00-46		
Steering Wheel			
Free Play Check .....	37A-15		
Stationary Steering Effort Check .....	37A-17		
Steering Angle Check .....	37A-16		
Steering Wheel Return to Center Check .....	37A-17		



Steering Wheel and Shaft			
Assembly .....	37A-23	Steering .....	37A-52
Steering Wheel Sensor .....	35C-208	Wheel and Tire .....	31-8
Stop Light Switch		Tightening Torque .....	00-29
Check .....	23Aa-27	Timing Belt .....	11A-33
Stoplight		Timing Belt	
Circuit Diagram .....	90-102	Overhaul .....	11B-10
Switch Check .....	35A-116	Replace .....	00-38
Sunroof, SWS Diagnosis .....	54Bb-210	Tire .....	31-7
Sunroof .....	42-61	Tire	
Sunroof		Diagnosis .....	31-2
Circuit Diagram .....	90-214	Inflation Pressure Check .....	31-7
Diagnosis .....	42-58	Rotation .....	00-54
Fit Adjustment .....	42-59	Wear Check .....	31-7
Operation Check .....	42-59	Toe Control Arm .....	34-20
Water Test .....	42-58	Toe Control Arm Ball Joint Dust Cover	
Switch		Replacement .....	34-22
Check .....	00E-9	Toe Control Tower Bar .....	34-20
SWS		Toe Control Tower Bar	
Diagnosis .....	54Ba-6	Removal and installation .....	34-20
General Description .....	54Ba-2	Tone Alarm, SWS Diagnosis .....	54Bb-58
SWS Monitor		Torque Converter Stall Check .....	23Ab-14
How to Use .....	54Ba-8	Trailing Arm .....	34-23
		Trailing Arm	
<b>T</b>		Bushing, Replacement .....	34-24
Tachometer		Transmission	
Check .....	54A-63	Automatic, Fluid Level Check .....	00-41
Taillight, SWS Diagnosis .....	54Bb-298	Transmission Fluid	
Taillight		Automatic, Change .....	00-42
Circuit Diagram .....	90-76	Transmission Mounting .....	32-6
Theft Alarm .....	54A-236	Transmission Range Switch	
Theft-Alarm System, SWS Diagnosis .....	54Bb-472	Continuity Check .....	23Aa-20
Theft-alarm System		Transfer Overhaul .....	23B-14
Circuit Diagram .....	90-254	Transfer .....	23Aa-37
Thermostat .....	14-13	Transfer	
Third Seat .....	52A-24	Disassembly and Assembly	
Throttle Actuator Control Motor		Active Trac AWD .....	23B-103
Check .....	13Aa-24	PART TIME AWD .....	23B-95
Throttle Actuator Control Motor Relay		Oil Change .....	00-43
Check .....	13Aa-16	Overhaul .....	23B-95
Throttle Body		Transfer <ACTIVE TRAC 4WD II>	
Assembly .....	13Aa-27	Diagnosis .....	23Ab-43
Cleaning .....	13Aa-11	Transfer Case Adapter .....	23B-16
Overhaul .....	11B-6	Transfer Oil	
Throttle Position Sensor		Change .....	00-43
Check .....	13Aa-18	Transfer Shift Lever	
Tie Rod End		Operation Check .....	23Aa-23
Steering, Ball Joint Breakaway Torque Check .....	37A-16	Transfer-ECU .....	23Aa-45
Steering, Ball Joint Dust Cover Replacement .....	37A-43	Transfer-ECU	
Tightening Specification(s)		Check .....	23Aa-26
Automatic Transmission .....	23Aa-46	Transmission .....	23B-14
Automatic Transmission Overhaul .....	23B-134	Transmission Control .....	23Aa-30
Basic Brakes .....	35A-152	Transmission Control Cable	
Charging System .....	16-43	Adjustment .....	23Aa-25
Emission Control .....	17-72	Transmission Fluid Cooler .....	23Aa-42
Engine .....	11A-40	Transmission Fluid Cooler Hose .....	23Aa-42
Engine Cooling .....	14-19	Transmission Fluid Cooler Pipe .....	23Aa-42
Engine Lubrication .....	12-6	Transmission Range Switch .....	13Ad-95
Engine Overhaul .....	11B-55	Trims .....	52A-8
Exterior .....	51-35	Trouble Code, ABS	
Front Axle .....	26-61	Diagnosis .....	35B-4
Front Wheel Alignment .....	33A-20	Turn Signal Light	
Fuel Supply .....	13B-17	Circuit Diagram .....	90-98
Intake and Exhaust .....	15-15		
MFI .....	13Aa-29	<b>U</b>	
Parking Brake .....	36-11	Upper Arm <Front Suspension> .....	33A-8
Power Plant Mount .....	32-10	Upper Arm <Rear Suspension> .....	34-11
Propeller Shaft .....	25-13		
Rear Axle .....	27-40	<b>V</b>	

Vacuum Circuit Diagram.....	17-57
Vacuum Hose.....	26-57
Vacuum Hose	
Check.....	17-58
Vacuum Hose Routing.....	17-56
Vacuum Hoses.....	17-56
Vacuum Tank	
Check.....	15-5
Valve	
Fuel Tank Pressure Relief.....	17-66
Valve Body (Automatic Transmission).....	23B-80
Valve Stem Seal.....	11A-15
Vanity Mirror Light	
Circuit Diagram.....	90-91
Variable Induction Control (VIC) Solenoid	
Check.....	15-4
Variable Induction Control Solenoid	
Check.....	13Aa-24
Vehicle Identification.....	00-15
Vehicle Identification Code Plate.....	00-17
Vehicle Speed Sensor.....	54A-32
Vehicle Speed Sensor	
Diagnosis.....	54A-32
Ventilators.....	55A-155
Volume Air Flow Sensor	
Check.....	17-62
Check.....	17-65

## W

Warning Light	
Circuit Diagram.....	90-110
Water Hose.....	14-17
Water Pipe.....	14-17
Water Pump.....	14-15
Water Pump Drive Belt	
Tension Check and Adjustment.....	14-7
Waterproof Film.....	42-52
Wheel.....	31-7
Wheel	
Diagnosis.....	31-2
Runout Check.....	31-7
Wheel Bearing	
Play Check, On-vehicle Service.....	26-14
Play Check.....	26-21
Wheel Bearing End Play Check.....	27-12
Wheel Speed Sensor.....	35B-124
Wheel Speed Sensor	
Output Voltage Check.....	35B-119
Wind Noise	
How to Locate.....	42-24
Window Glass.....	42-10
Window Glass	
Back Door.....	42-18
Diagnosis.....	42-11
Door, Adjustment.....	42-26
Quarter.....	42-16
Runchannel.....	42-44
Windshield.....	42-13
Windshield	
Wiper and Washer.....	51-21
Windshield Washer, SWS Diagnosis.....	54Bb-227
Windshield Wiper, SWS Diagnosis.....	54Bb-227
Windshield Wiper and Washer	
Circuit Diagram.....	90-184
Wiper and Washer	
Rear.....	51-27
Rear, Circuit Diagram.....	90-188
Windshield.....	51-21