

## 2

2-4 Shift Rail.....	23B-98
2WD/4WD Detection Switch Check .....	23A-550
2WD Detection Switch Check .....	23A-551

## 4

4LLc Detection Switch Check .....	23A-551
4H Detection Switch Check .....	23A-550

## A

A/C Control Panel Disassembly and Reassembly .....	55B-144
A/C Control Unit Disassembly and Reassembly .....	55B-144
A/C system .....	13A-999
A/T Control Relay Check .....	23A-557
A/T Faulty Operation Prevention Mechanism Diagnosis .....	23A-530
A/T Key Interlock and Shift Lock Mechanism .....	23A-564
ABS Actuator Test .....	35B-122
Circuit Diagram .....	90-226
ECU, Check at Terminal .....	35B-124
Motor Relay and Valve Relay Check .....	35B-130
Solenoid Valve Check .....	35B-133
ABS Control Unit .....	35B-133
ABS Sensor .....	35C-209
ABS Sensor Output Voltage Check .....	35C-205
ABS-ECU Check .....	35A-113
Accelerator Cable and Pedal .....	17-7
Accelerator Pedal Position Sensor Adjustment .....	13A-1047
Adjustment .....	23A-549
Adjustment .....	17-6
Check .....	23A-556
Check .....	13A-1054
Accelerator Pedal Position Switch Check .....	17-7
Check .....	13A-1055
Accessory Socket .....	54A-122
Accessory Socket Circuit Diagram .....	90-201
Accumulator Replacement .....	35A-137
Active Stability and Traction Control System (ASTC) Diagnosis .....	35C-3
Actuator Test Reference Table Automatic Transmission .....	23A-395
Adhesive Automatic Transaxle .....	23B-107
Automatic Transmission .....	23A-577
Body .....	42-74
Engine .....	11A-44
Engine Cooling .....	14-21
Engine Overhaul .....	11B-61
Exterior .....	51-39
Front Axle .....	26-67
MFI .....	13A-1068
Parking Brake .....	36-11
Rear Axle .....	27-42

Steering .....	37-54
Adhesive Table .....	00-59
Adhesives Equipment .....	54A-287
Air Bag Module Disposal Procedures .....	52B-233
Air Bag Module(s) .....	52B-217
Air Cleaner .....	15-6
Air Cleaner Element Replace .....	00-42
Air Conditioning A/C Switch .....	55A-122
Actuator Test .....	55B-137
Automatic, Circuit Diagram VEHICLES WITH REAR AIR CONDITIONING SYSTEM .....	90-160
VEHICLES WITH REAR COOLER SYSTEM .....	90-150
Charging .....	55A-115
Charging .....	55B-141
Compressor .....	55A-142
Compressor Drive Belt Adjustment .....	55A-115
Compressor Noise Check .....	55A-118
Condenser and Condenser Fan Motor .....	55A-146
Control Assembly .....	55A-122
Control Panel .....	55B-144
Control Unit .....	55B-144
Damper Control Motor .....	55B-153
ECU Terminal Check .....	55A-113
ECU Terminal Check .....	55A-18
ECU Terminal Check .....	55B-137
Idle-up Operation Check .....	55A-121
Inside/outside Changeover Switch .....	55A-122
Photo Sensor .....	55B-158
Power Relay Check .....	55A-119
Pressure Switch Check .....	55A-115
Receiver Drier Test .....	55A-115
Refrigerant Leak Repair .....	55A-118
Refrigerant Line .....	55A-148
Refrigerant Line .....	55B-160
Sensors .....	55A-132
Sensors (Full-auto A/C) .....	55B-155
Sight Glass Refrigerant Level Test .....	55A-114
Ambient Air Temperature Sensor .....	55B-160
Amplifier .....	54A-190
Antenna .....	54A-190
Antenna Pole Replacement .....	54A-192
Anti-Lock Braking System (ABS) Diagnosis .....	35B-3
ASC Control Unit Removal and Installation .....	35C-207
ASTC Control Unit .....	35C-207
Audio System Circuit Diagram VEHICLES WITH AMPLIFIER .....	90-190
VEHICLES WITHOUT AMPLIFIER .....	90-186
Auto-cruise Control .....	17-8
Auto-cruise Control .....	17-58
Auto-cruise Control System Circuit Diagram .....	90-212
Component Check .....	17-56
Diagnosis .....	17-9
Main Switch Check .....	17-54
Automatic Transaxle A/T Key Interlock and Shift Lock Mechanism .....	23A-564
Adhesive .....	23B-107
Adjusting Plate, Snap Ring and Spacers .....	23B-102
Center Support .....	23B-57
Countershaft Gear .....	23B-90
Direct Clutch .....	23B-71
Disassembly and Assembly .....	23B-14
Fluid Level Check .....	00-46

Front Output Shaft .....	23B-94	Power Steering .....	37-18
Input Gear .....	23B-89	Blower .....	55A-128
Low Reverse Annulus Gear .....	23B-55	Blower Inspection .....	55A-129
Overhaul .....	23B-14	Blower Motor Removal and Installation .....	55A-129
Rear Output Shaft .....	23B-92	Blower Resistor Inspection .....	55A-129
Reverse and Overdrive Clutches .....	23B-50	Removal and Installation .....	55A-129
Sealant .....	23B-107	Body Adhesive .....	42-74
Second Brake .....	23B-54	Sealant .....	42-74
Transfer Case Adapter .....	23B-12	Boots Driveshaft, Check .....	00-51
Transfer Case Plate .....	23B-87	Brake Booster (Basic Brakes) .....	35A-136
Transfer Drive Shaft .....	23B-96	Brake Disc Pad Wear Check .....	00-51
Underdrive Clutch .....	23B-59	Runout Check and Correction .....	35A-133
Valve Body .....	23B-63	Thickness Check .....	35A-132
Valve Body Spring Identification .....	23B-102	Brake Fluid Level Sensor Check .....	35A-130
Automatic Transaxle Fluid Level Check .....	00-46	Brake Hoses Check .....	00-51
Automatic Transmission .....	23A-566	Brake Pad Wear Check .....	00-51
Automatic Transmission Actuator Test Reference Table .....	23A-395	Brake Pedal .....	35A-135
Adhesive .....	23A-577	Brake Pedal Check and Adjustment .....	35A-116
Control Component Check .....	23A-556	Brake Rotor Disc, Check .....	35A-132
Control Component Layout .....	23A-540	Brake Stoplight Switch Check .....	35A-118
Diagnosis .....	23A-11	Brake Warning Light .....	35A-90
Fail-safe Functions/backup Functions .....	23A-15	Brake Warning Light Check .....	35A-12
Fluid Cooler Flow Check .....	23A-548	Bumper Front .....	51-3
Flushing Coolers and Tubes .....	23A-547	Front .....	51-2
Hydraulic Circuit .....	23A-32	Rear .....	51-6
Hydraulic Pressure Tests .....	23A-27	Buzzer .....	35A-141
PCM Terminal Voltage Reference Chart .....	23A-396	Buzzer Check .....	35A-142
Sealant .....	23A-577	Does Not Sound .....	35A-96
Torque Converter Stall Check .....	23A-25	<b>C</b>	
Auto-tensioner Check .....	11A-7	Cable Accelerator .....	17-7
AWD Super Select, Circuit Diagram .....	90-218	Camshaft .....	11A-18
<b>B</b>			
Back Door Diagnosis .....	42-49	Camshaft Overhaul .....	11B-22
Back Door Handle Play Check .....	42-51	Camshaft Oil Seal .....	11A-23
Back Door Trim .....	42-53	Camshaft Position Sensor .....	16-45
Backup Light Circuit Diagram .....	90-94	Camshaft Position Sensor Check .....	16-34
Ball Joint Dust Cover Inspection .....	34-7	Canister Evaporative Emission .....	17-72
Inspection .....	33-7	Evaporative Emission .....	17-72
Replacement .....	33-22	Cargo Space LI Circuit Diagram .....	90-74
Replacement .....	34-20	Catalytic Converter .....	17-75
Ball Joint Dust Cover Inspection Steering .....	37-20	CD Player .....	54A-124
Ball Joint Seals Check .....	00-51	Center Differential Lock Detection Switch Check .....	23A-551
Barometric Pressure Sensor Check .....	17-68	Center Message Display Circuit Diagram .....	90-202
Basic Brake System Diagnosis .....	35A-6	Central Door Locking System .....	54B-87
Battery Charging .....	54A-6	Central Door Locking System Circuit Diagram .....	90-106
Check .....	54A-5	Diagnosis .....	42-20
Handling .....	00E-12	Centralized Junction Circuit Diagram .....	90-16
Remedy for a Discharged Battery .....	35B-133		
Test .....	54A-6		
Belt Water Pump and Generator Drive Belt Check .....	00-43		
Belt, Timing Replace .....	00-43		
Bleeding Brakes (Basic) .....	35A-124		

Charging System.....	16-2	Door.....	42-20
Charging System		Emission Control System.....	17-59
Circuit Diagram.....	90-36	Engine.....	11A-3
Diagnosis.....	16-3	Engine Control System.....	17-3
Cigarette Lighter.....	54A-123	Engine Cooling.....	14-2
Cigarette Lighter		Equipment.....	54A-121
Circuit Diagram.....	90-200	Equipment.....	54A-8
Clock		Equipment.....	54A-236
Circuit Diagram.....	90-185	Exterior.....	51-28
Clock Spring.....	52B-217	Front Axle.....	26-2
Coil Spring.....	34-16	Front Suspension.....	33-2
Column Switch.....	54A-119	Fuel Supply.....	13B-2
Column Switch		Hood.....	42-3
Removal and Installation.....	54A-119	Hydraulic Brake Booster (HBB).....	35A-11
Combination Meters.....	54A-40	Immobilizer System.....	54A-8
Combination Meters.....	54A-74	Intake and Exhaust.....	15-2
Combination Meters		Keyless Entry System.....	42-55
Diagnosis.....	54A-40	MFI.....	13A-4
Compression Pressure		Parking Brake.....	36-2
Check.....	11A-10	Power Steering.....	37-2
Compressor (A/C)		Power Window.....	42-20
Noise Check.....	55A-118	Propeller Shaft.....	25-2
Connecting Rod		Radio With Tape Player and CD Player, Speaker and Antenna.....	54A-124
Overhaul.....	11B-40	Rear Air Conditioning.....	55A-20
Connector Inspection.....	00E-2	Rear Axle.....	27-6
Control Unit Location.....	70-18	Rear Suspension.....	34-3
Coolant		Seat Belt.....	52A-2
Engine, Change.....	00-49	Seat Belt Warning System.....	52A-2
Coolant Hoses		Side Step Light.....	54A-89
Heater Hose Inspect.....	00-50	SRS Air Bag.....	52B-20
Radiator Hose Inspect.....	00-50	Starting System.....	16-21
Cooling Fan.....	14-10	Sunroof.....	42-62
Crankcase Ventilation System		SWS.....	54B-6
Check.....	17-64	Theft Alarm.....	54A-284
Crankshaft		Tire.....	31-10
Overhaul.....	11B-48	Transfer ACTIVE TRAC 4WD II.....	23A-401
Crankshaft Front Oil Seal.....	11A-27	Trouble Code, ABS.....	35B-4
Crankshaft Oil Seal.....	11A-27	Vehicle Speed Sensor.....	54A-40
Crankshaft Position Sensor.....	16-46	Wheel.....	31-10
Crankshaft Position Sensor		Window Glass.....	42-12
Check.....	23A-556	Differential Carrier.....	26-36
Check.....	17-71	Differential Carrier	
Crankshaft Rear Oil Seal.....	11A-29	Rear.....	27-25
Cylinder Block		Differential Carrier Oil Seal	
Overhaul.....	11B-48	Replacement.....	26-16
Cylinder Head		Differential Mounting Insulator	
Overhaul.....	11B-28	Replacement.....	26-63
Cylinder Head Gasket.....	11A-31	Diode Location.....	70-17
		Direct Annuls Gear.....	23B-69
		Disc Brake	
<b>D</b>		Pad Wear Check.....	00-51
Deflector		Disc Brake Assembly	
Rear.....	51-18	Front.....	35A-142
Defogger		Rear.....	35A-148
Circuit Diagram		Disc Brake Pad	
VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM.....	90-180	Check and Adjustment.....	35A-130
VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM.....	90-182	Disc Brake Rotor	
Diagnosis		Check.....	35A-132
A/T Faulty Operation Prevention Mechanism.....	23A-530	Dome Light.....	54A-87
Active Stability and Traction Control System (ASTC)....	35C-3	Dome Light	
Anti-Lock Braking System (ABS).....	35B-3	Circuit Diagram.....	90-74
Auto-cruise Control System.....	17-9	Door.....	42-20
Automatic Transmission.....	23A-11	Door.....	42-30
Back Door.....	42-49	Door	
Basic Brake System.....	35A-6	Back.....	42-51
Central Door Locking System.....	42-20	Back, Fit Adjustment.....	42-50
Charging System.....	16-3	Back, Handle and Latch.....	42-54
Combination Meters.....	54A-40	Back, Trim and Waterproof Film.....	42-53
Door.....	42-20	Diagnosis.....	42-20
		Front and Rear, Fit Adjustment.....	42-26

Glass and Regulator.....	42-38	Crankshaft Rear Oil Seal.....	11A-29
Handle and Latch.....	42-41	Cylinder Head Gasket.....	11A-31
Inside Handle Play Adjustment.....	42-29	Diagnosis.....	11A-3
Opening Weather-strip.....	42-45	Drive Belt.....	11A-7
Outside Handle Play Adjustment.....	42-29	Idle Mixture.....	11A-9
Trim and Waterproof Film.....	42-32	Idle Speed.....	11A-8
Door Light		Ignition Timing.....	11A-7
Circuit Diagram.....	90-78	Lash Adjuster.....	11A-12
Door Mirror Heater		Manifold Vacuum.....	11A-12
Circuit Diagram		Oil Pan and Oil Screen.....	11A-25
VEHICLES WITH AUTOMATIC AIR CONDITIONING SYSTEM.....	90-182	Sealant.....	11A-44
VEHICLES WITH MANUAL AIR CONDITIONING SYSTEM.....	90-180	Tightening Specification(s).....	11A-42
Drive Belt		Timing Belt.....	11A-35
Overhaul.....	11B-4	Engine Bracket.....	11B-55
Power Steering, Tension Check.....	37-17	Engine Control.....	17-3
Tension Check and Adjustment.....	11A-7	Engine Control System	
Water Pump and Generator Drive Belt Check.....	00-43	Diagnosis.....	17-3
Water Pump, Tension Check and Adjustment.....	14-7	Engine Coolant	
Drive Plate		Change.....	00-49
Overhaul.....	11B-48	Concentration Check.....	14-7
Driveshaft		Leak Check.....	14-5
Front Axle.....	26-24	Replacement.....	14-6
Rear Axle.....	27-19	Engine Coolant Temperature Gauge Unit	
Driveshaft Boots		Check.....	54A-73
Check.....	00-51	Engine Coolant Temperature Sensor	
Drum		Check.....	13A-1053
Inspection.....	36-10	Check.....	17-68
Dual Manual Air Conditioning System		Engine Cooling	
Circuit Diagram		Adhesive.....	14-21
VEHICLES WITH REAR AIR CONDITIONING SYSTEM.....	90-132	Diagnosis.....	14-2
VEHICLES WITH REAR COOLER.....	90-132	Sealant.....	14-21
VEHICLES WITH REAR HEATER.....	90-122	Engine Lubrication	
Dual Pressure Switch		Tightening Specification(s).....	12-7
Check.....	23A-557	Engine Mounting.....	32-3
DVD Player.....	54A-232	Engine Oil	
		Change.....	00-45
		Check.....	12-3
		Replacement.....	12-3
		Engine Oil Cooler.....	12-6
		Engine Oil Filter	
		Change.....	00-45
		Replacement.....	12-4
		Engine Oil Pressure	
		Check.....	12-5
		Engine Overhaul	
		Adhesive.....	11B-61
		Sealant.....	11B-61
		Tightening Specification(s).....	11B-56
		Equipment	
		Adhesives.....	54A-287
		Diagnosis.....	54A-236
		Diagnosis.....	54A-8
		Diagnosis.....	54A-121
		Sealant.....	54A-287
		ETACS	
		Enabling/Disabling the Answerback Function.....	42-57
		Evaporative Emission Canister.....	17-72
		Evaporative Emission Canister	
		Inspection.....	17-75
		Evaporative Emission Control System.....	17-65
		Evaporative Emission Control System	
		Check for Clogging.....	00-42
		Check for Leaks.....	00-42
		Purge Solenoid Check.....	17-67
		Evaporative Emission Purge Solenoid	
		Check.....	13A-1061
		Evaporative Emission Ventilation Solenoid	
		Check.....	13A-1061
		Check.....	17-68
		Exhaust Manifold.....	15-12
		Exhaust Manifold	

## E

EBD			
Circuit Diagram.....	90-226		
ECU Terminal			
Check.....	54A-27		
Check.....	54B-615		
Check.....	35C-203		
Check.....	54A-277		
EGR System.....	17-69		
EGR System.....	17-69		
EGR Valve			
Check.....	13A-1061		
Check.....	17-70		
Cleaning.....	17-71		
Electrical System			
Check.....	00E-13		
Element, Air Cleaner			
Replace.....	00-42		
Emission Control.....	17-59		
Emission Control System			
Diagnosis.....	17-59		
Emission Control System, Evaporative			
Check for Clogging.....	00-42		
Check for Leaks.....	00-42		
Engine			
Adhesive.....	11A-44		
Assembly.....	11A-14		
Auto-tensioner.....	11A-7		
Camshaft Oil Seal.....	11A-23		
Compression Pressure.....	11A-10		
Crankshaft Front Oil Seal.....	11A-27		
Crankshaft Oil Seal.....	11A-27		

Overhaul..... 11B-21  
 Exhaust Pipe ..... 15-13  
 Exhaust System  
   Check ..... 00-45  
 Exterior  
   Adhesive..... 51-39  
   Diagnosis..... 51-28  
   Sealant ..... 51-39

**F**

Fastener Tightening Specification(s) ..... 34-25  
 Fender ..... 42-7  
 Filter  
   Engine Oil, Change ..... 00-45  
 Flasher Timer ..... 54B-360  
 Floor Console ..... 52A-7  
 Fluid  
   Automatic Transaxle, Fluid Level Check ..... 00-46  
 Flywheel  
   Overhaul ..... 11B-48  
 Fog Light ..... 54B-393  
 Fog Light ..... 54A-82  
 Fog Light  
   Aiming..... 54A-82  
   Circuit Diagram..... 90-70  
 Free Wheel Solenoid Valve  
   Operation Check..... 26-17  
 Free-wheeling Clutch ..... 26-36  
 Front Axle  
   Adhesive..... 26-67  
   Diagnosis..... 26-2  
   Driveshaft ..... 26-24  
   Free Wheel Solenoid Valve Operation Check ..... 26-17  
   Gear Oil Level Check ..... 26-15  
   Inner Shaft..... 26-31  
   Sealant ..... 26-67  
   Total Backlash Check ..... 26-15  
 Front Combination Light ..... 54A-80  
 Front Differential Mounting ..... 26-62  
 Front Impact Sensors ..... 52B-211  
 Front Rear Fan Switch ..... 55B-156  
 Front Rear Fan Switch ..... 55A-133  
 Front Seat..... 52A-11  
 Front Seat Assembly  
   Inspection  
     POWER SEAT MANUAL SWITCH ..... 52A-17  
 Front Seat Belt ..... 52A-28  
 Front Side Marker Light..... 54A-77  
 Front Suspension  
   Diagnosis..... 33-2  
 Front Wheel Alignment  
   Check and Adjustment ..... 33-5  
 Fuel Filler Lid..... 42-8  
 Fuel Gauge Unit  
   Check ..... 13B-6  
   Replacement ..... 13B-6  
 Fuel Hose  
   Check for Condition ..... 00-42  
 Fuel Level Sensor  
   Check ..... 54A-72  
 Fuel Pipe  
   Check for Leaks..... 00-42  
 Fuel Pressure Test ..... 13A-1048  
 Fuel Pump  
   Connector Disconnection ..... 13A-1051  
   Operation Check..... 13B-6  
   Operation Check..... 13A-1051  
 Fuel Pump Module ..... 13B-13  
 Fuel Pump Module

Replacement..... 13B-6  
 Fuel Pump Relay  
   Check..... 13A-1052  
 Fuel Pump System ..... 13A-976  
 Fuel Supply  
   Diagnosis ..... 13B-2  
 Fuel System  
   Check for Leaks ..... 00-42  
 Fuel Tank ..... 13B-8  
 Fuel Tank  
   Check for Leaks ..... 00-42  
 Fuel Tank Differential Pressure Sensor  
   Check..... 17-68  
   Check..... 13B-7  
 Fuel Tank Filler Tube  
   Check for Leaks..... 00-42  
 Fuel Tank Pressure Relief Valve..... 17-72  
 Fuel Tank Pressure Relief Valve  
   Inspection ..... 17-75  
 Fuse  
   Check..... 00E-9  
 Fuses Location ..... 70-2  
 Fusible Links Location ..... 70-2

**G**

G and Yaw Rate Sensor ..... 35C-209  
 Garnishes ..... 51-15  
 Gauge  
   Circuit Diagram ..... 90-96  
 Gear Oil  
   Replacement..... 27-13  
 Generator  
   Assembly ..... 16-14  
   Output Current Test ..... 16-8  
   Output Line Voltage Drop Test..... 16-7  
   Overhaul ..... 11B-4  
   Regulated Voltage Test..... 16-10  
 Glove Box Light  
   Circuit Diagram ..... 90-80  
 Ground Location ..... 70-4  
 Grounding Location ..... 70-7  
 G-sensor..... 35B-136

<b>H</b>			
Hazard Warning Light			
Circuit Diagram.....	90-88		
Hazard Warning Switch.....	54A-118		
Hazard Warning Switch.....	54A-118		
HBB			
Check.....	35A-121		
Circuit Diagram.....	90-226		
Operating Check.....	35A-119		
HBB Motor Relay			
Check.....	35A-123		
Headlight.....	54A-80		
Headlight.....	54B-284		
Headlight.....	54A-77		
Headlight			
Aiming.....	54A-77		
Circuit Diagram.....	90-62		
Headlining.....	52A-10		
Heated Seat			
Circuit Diagram.....	90-244		
Heater			
Blower.....	55A-129		
Circuit Diagram.....	90-116		
Circuit Diagram			
VEHICLES WITH REAR AIR CONDITIONING SYSTEM	90-140		
VEHICLES WITH REAR COOLER.....	90-132		
VEHICLES WITH REAR HEATER.....	90-122		
Inside/outside Air Changeover Damper Motor.....	55A-130		
Rear.....	55A-136		
Resistor.....	55A-129		
Heater Blower Controller Unit.....	55B-152		
Heater Control.....	55A-125		
Heater Core.....	55A-126		
Heater Unit.....	55B-151		
Heater Unit.....	55A-127		
High-Mounted Stoplight.....	54A-88		
H-L Shift Rail.....	23B-98		
Hood.....	42-5		
Hood			
Diagnosis.....	42-3		
Horn.....	54A-121		
Horn			
Circuit Diagram.....	90-95		
Hose			
Vacuum, Routing.....	17-61		
Hoses			
Brake, Check.....	00-51		
Hub.....	26-19		
Hub			
Disassembly and Assembly.....	26-23		
Rear Axle.....	27-14		
Hydraulic Brake Booster (HBB)			
Diagnosis.....	35A-11		
Hydraulic Unit Check			
ABS.....	35B-131		
<b>I</b>			
Idle Mixture			
Check.....	11A-9		
Idle Speed			
Check.....	11A-8		
Ignition Circuit System.....	13A-991		
Ignition Coil.....	16-44		
Ignition Coil			
Check.....	16-32		
Ignition Key Hole Illumination Light			
Circuit Diagram.....	90-82		
Ignition Switch.....	54A-7		
Ignition Switch.....	54A-38		
Ignition system.....	13A-986		
Ignition System.....	16-30		
Ignition System			
Circuit Diagram.....	90-34		
Overhaul.....	11B-8		
Ignition Timing			
Check.....	11A-7		
Immobilizer System			
Circuit Diagram.....	90-256		
Diagnosis.....	54A-8		
Injector.....	13A-1062		
Injector			
Check.....	13A-1060		
Inner Shaft			
Front Axle.....	26-31		
Inspection Terminal Location.....	70-3		
Instrument Panel.....	52A-3		
Instrument Panel Inspection.....	00E-8		
Intake Air Temperature Sensor			
Check.....	13A-1053		
Check.....	17-68		
Intake and Exhaust			
Diagnosis.....	15-2		
Intake Manifold.....	15-7		
Intake Manifold			
Overhaul.....	11B-17		
Intake Manifold Plenum			
Overhaul.....	11B-6		
Interior Light.....	54B-416		
INVECS-II 5A/T			
Circuit Diagram.....	90-52		
<b>J</b>			
Joint Connector.....	90-12		
Joints			
Propeller Shaft, Lubrication.....	00-52		
Junction Block.....	90-10		
<b>K</b>			
Key Interlock Mechanism			
Check.....	23A-554		
Keyless Entry System.....	42-55		
Keyless Entry System.....	54B-192		
Keyless Entry System			
Diagnosis.....	42-55		
Secret Code Registration.....	42-59		
Transmitter Battery Replacement.....	42-57		
Knock Sensor.....	16-47		
Knock Sensor			
Check.....	16-31		
Knuckle.....	26-19		
Knuckle			
Disassembly and Assembly.....	26-23		
Rear Axle.....	27-17		

<b>L</b>		Multi Meter.....	54A-283
Lash Adjuster		Multiport Fuel Injection Relay	
Check .....	11A-12	Check.....	13A-1052
Leveling Valve		<b>N</b>	
Check .....	13B-7	No.1 Crossmember .....	32-6
Lice		<b>O</b>	
Circuit Diagram.....	90-66	Oil	
Lighting System		Engine, Change .....	00-45
Diagnosis.....	54A-118	Engine, Check .....	12-3
Diagnosis.....	54A-86	Engine, Replacement .....	12-3
Lower Arm.....	33-15	Transfer, Change .....	00-48
Lower Arm.....	34-16	Oil Cooler	
Lower Arm Ball Joint		Engine.....	12-6
End Play Check.....	33-7	Oil Filter	
Lower Arm Bushing		Engine, Replacement .....	12-4
Replacement .....	34-18	Oil Pan.....	23A-569
Luminous Intensity		Oil Pan	
Measurement.....	54A-79	Overhaul .....	11B-35
<b>M</b>		Oil Pan and Oil Screen .....	11A-25
Main Muffler.....	15-13	Oil Pressure	
Maintenance		Engine, Check .....	12-5
Air Cleaner Element .....	00-42	Oil Pump	
Automatic Transaxle Fluid .....	00-46	Overhaul .....	11B-35
Ball Joint and Steering Linkage Seals .....	00-51	Power Steering .....	37-45
Brake Hoses.....	00-51	Power Steering, Pressure Test .....	37-19
Disc Brake Pads.....	00-51	Oil seal	
Drive Belt.....	00-43	Camshaft .....	11A-23
Driveshaft Boots .....	00-51	Oil Seal	
Electrical System.....	00E-13	Crankshaft .....	11A-27
Engine Coolant.....	00-49	Crankshaft Front.....	11A-27
Engine Oil.....	00-45	Crankshaft Rear.....	11A-29
Engine Oil Filter.....	00-45	Other Parts .....	55B-161
Evaporative Emission Control System .....	00-42	Outputshaft Support .....	23B-74
Exhaust System.....	00-45	Outside Mirror.....	51-34
Fuel Hose .....	00-42	Oxygen Sensor	
Fuel System.....	00-42	Check.....	13A-1055
Propeller Shaft Joints .....	00-52	<b>P</b>	
Spark Plug.....	00-43	Park/neutral Position Switch	
SRS .....	00-53	Continuity Check.....	23A-549
Timing Belt.....	00-43	Parking Brake	
Transfer Oil.....	00-48	Adhesive .....	36-11
Manifold Vacuum		Cable .....	36-7
Check .....	11A-12	Diagnosis.....	36-2
Manual A/C		Lever.....	36-6
Diagnosis.....	55A-5	Lever Stroke Check and Adjustment .....	36-4
Mark .....	51-32	Lining and Drum .....	36-8
M-ASTC		Lining Running-in.....	36-5
Circuit Diagram.....	90-226	Sealant.....	36-11
Meter		Switch Check.....	36-5
Circuit Diagram.....	90-96	Parking Brake Lining	
MFI		Inspection .....	36-10
Adhesive .....	13A-1068	PCV (Positive Crankcase Ventilation) System .....	17-63
Diagnosis.....	13A-4	PCV (Positive Crankcase Ventilation) System .....	17-63
Sealant .....	13A-1068	PCV (Positive Crankcase Ventilation) System	
Tightening Specification(s) .....	13A-1067	Valve Check.....	17-64
MFI System		Pedal	
Circuit Diagram.....	90-38	Accelerator.....	17-7
Mirror		Piston	
Remote Controlled, Circuit Diagram.....	90-171	Overhaul .....	11B-40
Module		Position Indicator Light	
Fuel Pump .....	13B-13	Check.....	23A-556
Moldings.....	51-10	Position Light .....	54A-77
Moldings.....	51-9	Position Light	
Mounting		Circuit Diagram.....	90-66
Engine .....	32-3		
Transaxle.....	32-5		
Mud Guard .....	51-17		

Power Distribution System			
Circuit Diagram.....	90-24		
Power Seat			
Circuit Diagram.....	90-240		
Power Steering			
Bleeding.....	37-18		
Diagnosis.....	37-2		
Drive Belt Tension Check.....	37-17		
Fluid Level Check.....	37-17		
Fluid Replacement.....	37-18		
Gear Box Assembly.....	37-27		
Hoses.....	37-49		
Oil Pump Assembly.....	37-45		
Oil Pump Pressure Test.....	37-19		
Pressure Switch Check.....	37-20		
Power Steering Diagnosis.....	37-2		
Power Window			
Circuit Breaker Inspection.....	42-29		
Circuit Diagram.....	90-102		
Diagnosis.....	42-20		
Power Windows.....	54B-137		
Powertrain Control Module.....	13A-1066		
Powertrain Control Module (PCM).....	23A-573		
Printed-Heater Lines			
Check.....	54A-235		
Propeller Shaft.....	25-5		
Propeller Shaft			
Diagnosis.....	25-2		
Propeller Shaft Joints			
Lubrication.....	00-52		
Purge Control System			
Check.....	17-66		
Rear Seat.....		52A-18	
Rear Seat Belt.....		52A-29	
Rear Suspension.....		34-8	
Rear Suspension			
Diagnosis.....		34-3	
Rear Washer.....		54B-253	
Rear Wheel Alignment			
Check and Adjustment.....		34-6	
Rear Window Defogger.....		54A-235	
Rear Window Defogger Switch.....		54A-235	
Rear Wiper.....		54B-253	
Receiver Drier Test (A/C).....		55A-115	
Relay			
Check.....		00E-11	
Relay Location.....		70-8	
Replaceable Bulb			
Replacement.....		54A-115	
Replacement.....		54A-79	
Resistive Cord			
Inspection.....		16-33	
Rheostat.....		54A-117	
Rheostat			
Circuit Diagram.....		90-264	
RKE (Keyless Entry System).....		42-55	
RKE (Keyless Entry System)			
Secret Code Registration.....		42-59	
Transmitter Battery Replacement.....		42-57	
Rocker Arm			
Overhaul.....		11B-22	
Roof Rail.....		51-9	
RV Meter.....		54A-236	

**R**

Radiator.....	14-8
Radiator Cap	
Pressure Check.....	14-5
Radio With Tape Player.....	54A-124
Radio With Tape Player and CD Player, Speaker and Antenna	
Diagnosis.....	54A-124
Rear A/C Control Unit.....	55B-157
Rear A/C Switch.....	55B-156
Rear Air Conditioning	
Diagnosis.....	55A-20
Rear Axle	
Adhesive.....	27-42
Diagnosis.....	27-6
Driveshaft.....	27-19
Gear Oil Level Check.....	27-12
Hub.....	27-14
Knuckle.....	27-17
Sealant.....	27-42
Total Backlash Check.....	27-12
Wheel Bearing End Play Check.....	27-13
Rear axle oil	
Level Check.....	00-52
Rear Blower.....	55B-157
Rear Blower.....	55A-139
Rear Blower	
Disassembly and Assembly.....	55B-157
Disassembly and Assembly.....	55A-140
Rear Combination Light.....	54A-86
Rear Combination Light.....	54A-86
Rear Display.....	54A-234
Rear Heater Switch.....	55A-133
Rear Heater Unit.....	55A-139
Rear Heater Unit.....	55B-157
Rear Personal Light	
Circuit Diagram.....	90-74

**S**

Sealant	
Automatic Transaxle.....	23B-107
Automatic Transmission.....	23A-577
Body.....	42-74
Engine.....	11A-44
Engine Cooling.....	14-21
Engine Overhaul.....	11B-61
Equipment.....	54A-287
Exterior.....	51-39
Front Axle.....	26-67
MFI.....	13A-1068
Parking Brake.....	36-11
Rear Axle.....	27-42
Steering.....	37-54
Sealant Table.....	00-59
Seat Belt	
Diagnosis.....	52A-2
Seat Belt Pre-Tensioner	
Disposal Procedures.....	52B-233
Seat Belt Tone Alarm	
Circuit Diagram.....	90-210
Seat Belt Warning Light.....	54B-274
Seat Belt Warning System	
Diagnosis.....	52A-2
Seat Belts With Pre-Tensioner.....	52B-228
Seat Belts With Pre-Tensioner	
Check.....	52B-232
Selector Lever.....	23A-562
Selector Lever	
Operation Check.....	23A-552
Sensor	
Accelerator Pedal Position, Adjustment.....	17-6
Accelerator Pedal Position, Adjustment.....	13A-1047
Accelerator Pedal Position, Adjustment.....	23A-549
Accelerator Pedal Position, Check.....	23A-556
Accelerator Pedal Position, Check.....	13A-1054



Ambient Air Temperature .....	55B-160	SRS Air Bag	
Barometric Pressure, Check .....	17-68	Diagnosis .....	52B-20
Camshaft Position .....	16-45	SRS Control Unit (SRS-ECU) .....	52B-215
Camshaft Position, Check .....	16-34	SRS Warning Light Check .....	52B-22
Crankangle, Check .....	16-34	Stabilizer Bar .....	33-20
Crankshaft Position .....	16-46	Stabilizer Bar .....	34-18
Crankshaft Position, Check .....	17-71	Starter Motor	
Crankshaft Position, Check .....	23A-556	Assembly .....	16-22
Engine Coolant Temperature, Check .....	17-68	Starting System .....	16-20
Engine Coolant Temperature, Check .....	13A-1053	Starting System	
Fuel Tank Differential Pressure, Check .....	17-68	Circuit Diagram .....	90-33
Fuel Tank Differential Pressure, Check .....	13B-7	Diagnosis .....	16-21
Intake Air Temperature, Check .....	17-68	Steering	
Intake Air Temperature, Check .....	13A-1053	Adhesive .....	37-54
Knock .....	16-47	Ball Joint Dust Cover Inspection .....	37-20
Knock, Check .....	16-31	Sealant .....	37-54
Oxygen, Check .....	13A-1055	Steering Column Shaft Assembly Shock Absorbing Mechanism	
Photo .....	55B-158	Check .....	37-21
Throttle Position, Check .....	13A-1054	Steering Linkage Seals	
Transmission Fluid Temperature, Check .....	23A-556	Check .....	00-51
Volume Air Flow, Check .....	17-68	Steering Wheel	
Volume Air Flow, Check .....	17-71	Free Play Check .....	37-14
Wheel Speed .....	35B-134	Stationary Steering Effort Check .....	37-16
Wheel Speed, Output Voltage Check .....	35B-128	Steering Angle Check .....	37-15
Sensor Location .....	70-10	Steering Wheel Return to Center Check .....	37-17
Shift Lock Mechanism		Steering Wheel and Shaft	
Check .....	23A-554	Assembly .....	37-22
Shiftrail Drive Gear .....	23B-97	Steering Wheel Sensor .....	35C-210
Shock Absorber .....	34-16	Stop Light Switch	
Shock Absorber Assembly .....	33-11	Check .....	23A-557
Side Impact Sensor .....	52B-226	Stoplight	
Side Marker Light		Circuit Diagram .....	90-92
Circuit Diagram .....	90-66	Switch Check .....	35A-118
Side Step .....	51-19	Sunroof .....	42-66
Side Step		Sunroof .....	54B-202
Disassembly and Reassembly .....	51-21	Sunroof	
Side Step Light .....	54A-115	Circuit Diagram .....	90-206
Side Step Light		Diagnosis .....	42-62
Circuit Diagram .....	90-84	Fit Adjustment .....	42-63
Diagnosis .....	54A-89	Operation Check .....	42-63
Side Step Light-ECU Terminal		Water Test .....	42-63
Check .....	54A-114	Suspension System	
Sight Glass (Refrigerant Level Test) .....	55A-114	Inspect for Looseness and Damage .....	00-52
Single Air Conditioning System		Switch	
Circuit Diagram .....	90-116	Check .....	00E-10
Solenoid		SWS	
Evaporative Emission Purge, Check .....	13A-1061	Diagnosis .....	54B-6
Evaporative Emission Ventilation, Check .....	13A-1061	General Information .....	54B-2
Variable Induction Control, Check .....	13A-1061	SWS Monitor	
Solenoid Location .....	70-22	How to Use .....	54B-10
Solenoid Valve .....	26-60		
Solenoid Valve			
ABS, Check .....	35B-133		
Check .....	23A-558		
Check .....	35C-205		
Solenoid Valve Location .....	70-22		
Spark Plug			
Check and Adjustment .....	16-34		
Replace .....	00-43		
Test .....	16-32		
Spark Plug Cable			
Test .....	16-31		
Speaker .....	54A-189		
Speaker			
Test .....	54A-187		
Specifications .....	34-25		
Speedometer Check			
Check .....	54A-70		
SRS			
Circuit Diagram .....	90-236		
Maintenance .....	00-53		

## T

Tachometer			
Check .....	54A-71		
Taillight .....	54B-284		
Taillight			
Circuit Diagram .....	90-66		
Theft Alarm .....	54A-284		
Theft Alarm			
Diagnosis .....	54A-284		
Theft-Alarm System .....	54B-462		
Theft-alarm System			
Circuit Diagram .....	90-248		
Thermostat .....	14-13		
Third Seat .....	52A-25		
Throttle Actuator Control Motor			
Check .....	13A-1060		
Throttle Actuator Control Motor Relay			
Check .....	13A-1052		
Throttle Body			
Assembly .....	13A-1064		
Cleaning .....	13A-1047		
Overhaul .....	11B-6		
Throttle Position Sensor			
Check .....	13A-1054		
Tie Rod End			
Steering, Ball Joint Breakaway Torque Check .....	37-15		
Tightening Specification(s)			
Automatic Transaxle Overhaul .....	23B-100		
Automatic Transmission .....	23A-575		
Basic Brakes .....	35A-154		
Charging System .....	16-48		
Emission Control .....	17-77		
Engine .....	11A-42		
Engine Cooling .....	14-20		
Engine Lubrication .....	12-7		
Engine Overhaul .....	11B-56		
Exterior .....	51-38		
Front Axle .....	26-65		
Front Wheel Alignment .....	33-22		
Fuel Supply .....	13B-14		
Intake and Exhaust .....	15-15		
MFI .....	13A-1067		
Parking Brake .....	36-11		
Power Plant Mount .....	32-9		
Propeller Shaft .....	25-14		
Rear Axle .....	27-41		
SRS Air Bag .....	52B-248		
Steering .....	37-52		
Wheel and Tire .....	31-97		
Tightening Torque .....	00-33		
Timing Belt .....	11A-35		
Timing Belt			
Overhaul .....	11B-10		
Replace .....	00-43		
Tire .....	31-90		
Tire			
Diagnosis .....	31-10		
Inflation Pressure Check .....	31-85		
Replacement .....	31-90		
Rotation .....	00-59		
Wear Check .....	31-85		
Tire Pressure Monitoring System			
Circuit Diagram .....	90-260		
Tire Pressure Sensor			
Check .....	31-89		
ID Check .....	31-88		
ID Registration .....	31-86		
Toe Control Arm .....	34-21		
Toe Control Arm Ball Joint			
End Play Check .....	34-7		
Toe Control Arm Ball Joint Dust Cover			
Replacement .....	34-23		
Toe Control Tower Bar .....	34-21		
Toe Control Tower Bar			
Removal and installation .....	34-21		
Tone Alarm .....	54B-70		
Torque Converter Stall Check .....	23A-25		
TPMS Antenna .....	31-91		
TPMS Receiver .....	31-93		
TPMS Receiver			
Check .....	31-83		
TPMS Transmitter .....	31-94		
TPMS Warning Light			
Check .....	31-18		
Trailing Arm .....	34-24		
Trailing Arm			
Bushing, Replacement .....	34-25		
Transaxle			
Automatic, Fluid Level Check .....	00-46		
Transaxle Mounting .....	32-5		
Transfer .....	23B-10		
Transfer .....	23A-566		
Transfer			
Disassembly and Assembly			
ACTIVE TRAC AWD .....	23B-75		
Oil Change .....	00-48		
Overhaul .....	23B-75		
Transfer ACTIVE TRAC 4WD II			
Diagnosis .....	23A-401		
Transfer Case Adapter .....	23B-12		
Transfer Oil			
Change .....	00-48		
Check .....	23A-552		
Replacement .....	23A-552		
Transfer Shift Lever			
Operation Check .....	23A-553		
Transfer-ECU .....	23A-574		
Transfer-ECU			
Check .....	23A-555		
Transmission .....	23B-10		
Transmission Control .....	23A-559		
Transmission Control Cable			
Adjustment .....	23A-555		
Transmission Fluid			
Change .....	23A-545		
Check .....	23A-544		
Transmission Fluid Cooler .....	23A-571		
Transmission Fluid Cooler Hose .....	23A-571		
Transmission Fluid Cooler Pipe .....	23A-571		
Transmission Fluid Temperature Sensor			
Check .....	23A-556		
Transmission range switch .....	13A-986		
Transmission Range Switch			
Adjustment .....	23A-549		
Check .....	23A-557		
Transmission Range Switch Control Cable			
Adjustment .....	23A-549		
Transponder			
Lock Check .....	54A-36		
Trims .....	52A-8		
Trouble Code, ABS			
Diagnosis .....	35B-4		
Turn Signal Light			
Circuit Diagram .....	90-88		

**U**

UJ Boot	
Replacement .....	26-28
Upper Arm .....	34-11
Upper Arm .....	33-8
Upper Arm Ball Joint	
End Play Check .....	34-7

**V**

Vacuum Circuit Diagram .....	17-62
Vacuum Hose .....	26-60
Vacuum Hose	
Check .....	17-63
Vacuum Hose Routing .....	17-61
Vacuum Hoses .....	17-61
Vacuum Tank	
Check .....	15-5
Valve	
Fuel Tank Pressure Relief .....	17-72
Fuel Tank Pressure Relief .....	17-72
Valve Body (Automatic Transaxle) .....	23B-63
Valve Stem Seal .....	11A-18
Vanity Mirror Light	
Circuit Diagram .....	90-81
Variable Induction Control (VIC) Solenoid	
Check .....	15-4
Variable Induction Control Solenoid	
Check .....	13A-1061
Vehicle Identification .....	00-15
Vehicle Identification Code Plate .....	00-17
Vehicle Speed Sensor .....	54A-74
Vehicle Speed Sensor .....	54A-40
Vehicle Speed Sensor	
Check .....	23A-557
Diagnosis .....	54A-40
Ventilators .....	55A-150
Video Controller Unit .....	54A-233
Video Entertainment System (VES)	
Circuit Diagram .....	90-194
Volume Air Flow Sensor	
Check .....	17-71

**W**

Warning Light	
Circuit Diagram .....	90-100
Water Hose .....	14-18
Water Pipe .....	14-18
Water Pump .....	14-16
Water Pump Drive Belt	
Tension Check and Adjustment .....	14-7
Waterproof Film .....	42-53
Wheel .....	31-90
Wheel	
Balance Accuracy .....	31-11
Diagnosis .....	31-10
Replacement .....	31-90
Runout Check .....	31-85
Wheel Bearing	
Play Check .....	26-14
Wheel Bearing End Play Check .....	27-13
Wheel Speed Sensor .....	35B-134
Wheel Speed Sensor	
Output Voltage Check .....	35B-128
Wind Noise	
How to Locate .....	42-24
Window Glass .....	42-10
Window Glass	

Back Door .....	42-18
Diagnosis .....	42-12
Door, Adjustment .....	42-28
Quarter .....	42-16
Runchannel .....	42-45
Windshield .....	42-13
Windshield	
Wiper and Washer .....	51-23
Windshield Washer .....	54B-218
Windshield Wiper .....	54B-218
Windshield Wiper and Washer	
Circuit Diagram .....	90-172
Wiper and Washer	
Rear .....	51-29
Rear, Circuit Diagram .....	90-176
Windshield .....	51-23

---

## NOTES