


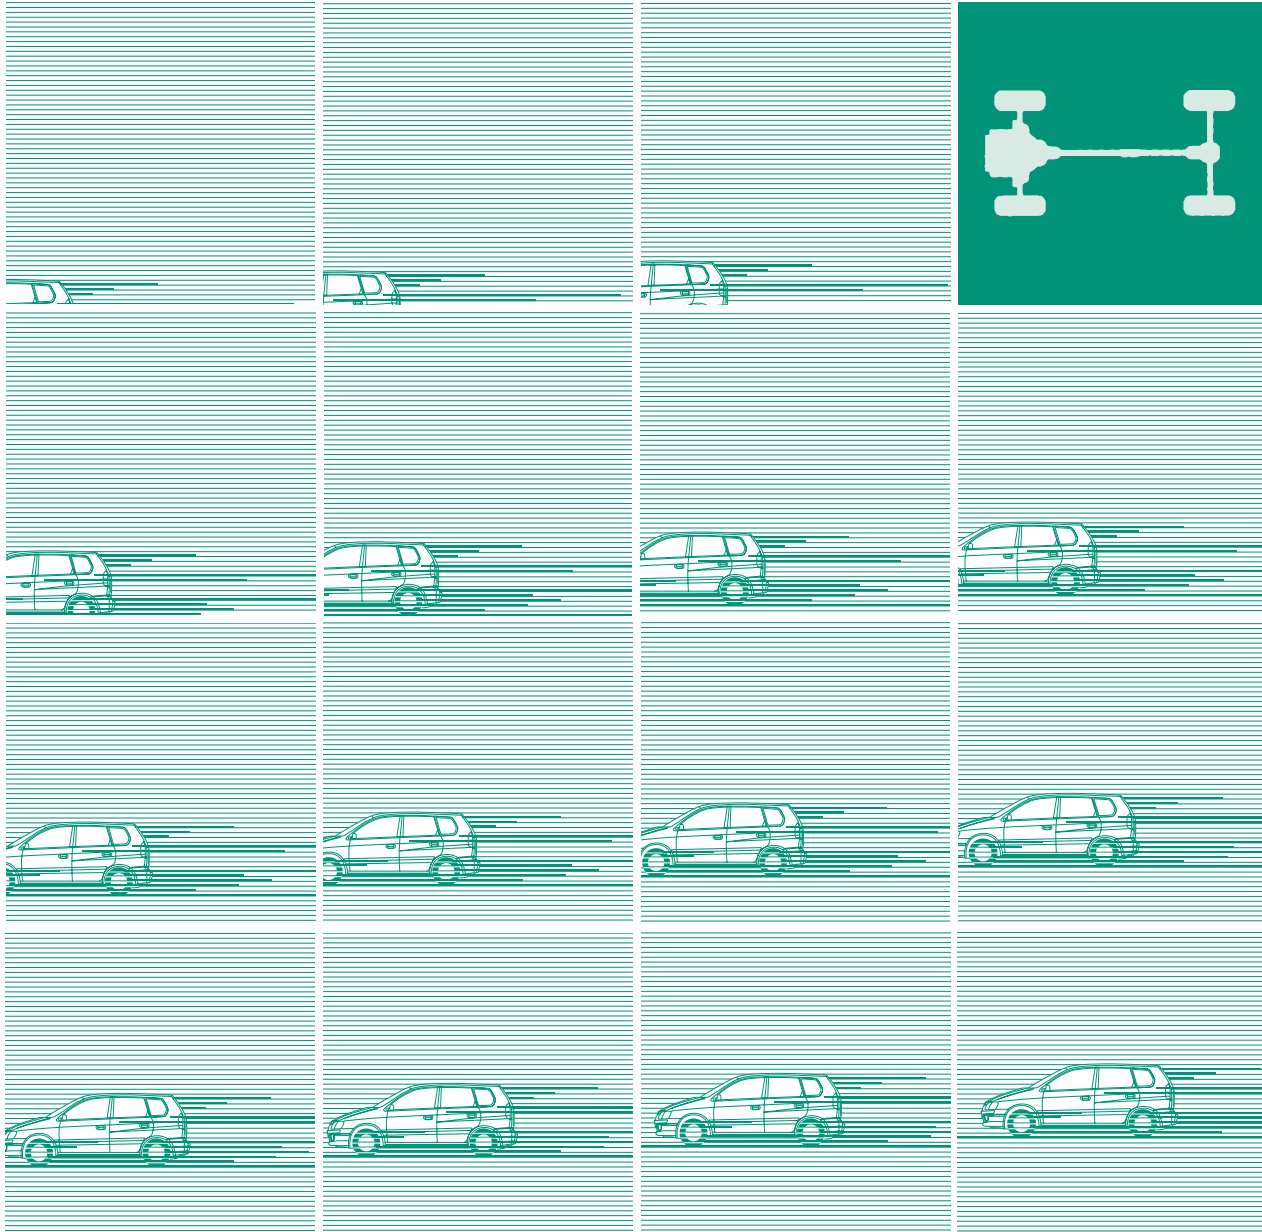

# Workshop Manual

## chassis

# SPACE STAR



# SPACE STAR

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL	IMXE99E1
WORKSHOP MANUAL	
ENGINE GROUP	PWEE□□□□ (Looseleaf edition)
ELECTRICAL WIRING	EMXE99E1
BODY REPAIR MANUAL	BMXE99E1
PARTS	N606H509D□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



"GDI is the trade mark which Mitsubishi Motors Corporation holds.

General .....	00
Engine .....	11
Engine Lubrication .....	12
Fuel .....	13
Engine Cooling .....	14
Intake and Exhaust .....	15
Engine Electrical .....	16
Engine and Emission Control ....	17
Clutch .....	21
Manual Transmission .....	22
Automatic Transmission .....	23
Front Axle .....	26
Rear Axle .....	27
Wheel and Tyre .....	31
Power Plant Mount .....	32
Front Suspension .....	33
Rear Suspension .....	34
Service Brakes .....	35
Parking Brakes .....	36
Steering .....	37
Body .....	42
Exterior .....	51
Interior and Supplemental Restrain System (SRS) .....	52
Chassis Electrical .....	54
Heater, Air Conditioner and Ventilation .....	55

**WARNING!**

- (1) Improper service or maintenance of any component of the SRS and seat belt with pre-tensioner, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag and seat belt with pre-tensioner) or to the driver and passenger (from rendering the SRS inoperative).**
- (2) SRS components and seat belt with pre-tensioner should not be subjected to heat, so remove the SRS-ECU, air bag module, clock spring and seat belt with pre-tensioner before drying or baking the vehicle after painting.  
SRS-ECU, air bag module, clock spring and side impact sensor: 93°C or more  
Seat belt with pre-tensioner: 90°C or more**
- (3) Service or maintenance of any SRS component and seat belt with pre-tensioner or SRS-related component must be performed only at an authorized MITSUBISHI dealer.**
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS and seat belt with pre-tensioner or any SRS-related component.**

**NOTE**

Section titles with asterisks (\*) in the table of contents in each group indicate operations requiring warnings.

# ENGINE



## CONTENTS

ENGINE <4G9> .....	11A
ENGINE <4G1> .....	11B
ENGINE <F9Q1> .....	11C



# FUEL

## CONTENTS

GASOLINE DIRECT INJECTION (GDI) .....	13A
MULTIPOINT FUEL INJECTION (MPI) .....	13B
FUEL SUPPLY .....	13C
DIESEL FUEL .....	13D

---

# SERVICE BRAKES

## CONTENTS

3510900081

BASIC BRAKE SYSTEM .....	35A
ANTI-SKID BRAKING SYSTEM (ABS) .....	35B



# INTERIOR AND SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## CONTENTS

5210900057

INTERIOR .....	52A
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) .....	52B

