
SINGLE PART INSTALLATION POSITION


CONTENTS

RELAY	3-2	DIODE	3-8
ECU	3-3	EARTH CABLE	3-8
SENSOR	3-4	EARTH	3-9
SOLENOID AND SOLENOID VALVE	3-7		




RELAY


Name	Symbol	Name	Symbol
A/T relay	C	Fuel line heater relay	B
Additional heater relay 1 <F9Q1>	B	Glow plug relay box	A
Additional heater relay 2 <F9Q1>	B	Main relay <F9Q1>	D
Condenser fan relay (LO) <F9Q1>	B		

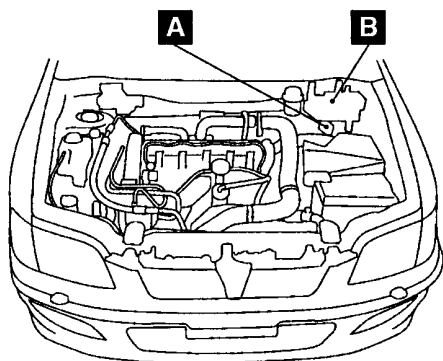


AY0031AJ

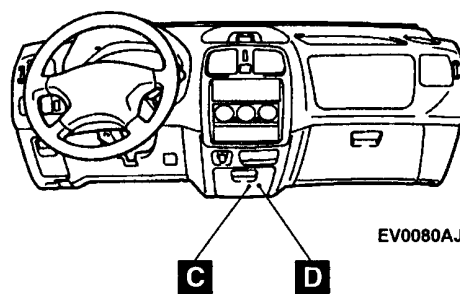


EV0080AJ

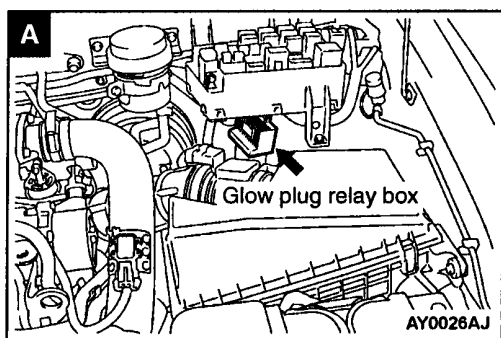


AY0026AJ

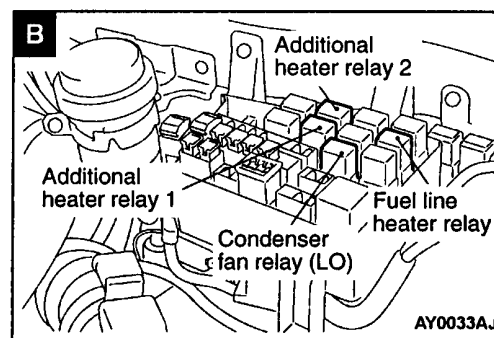

AY0033AJ

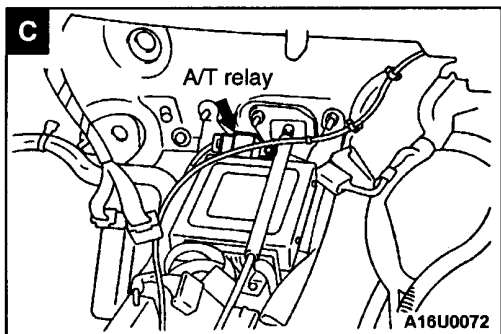





A16U0072

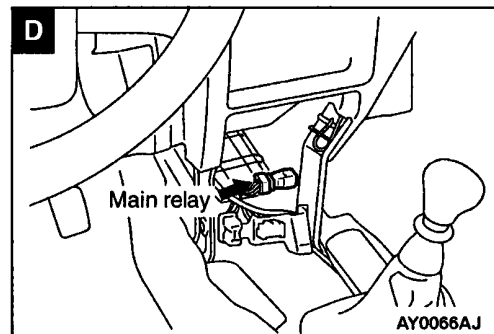

AY0066AJ




ECU











Name	Symbol	Name	Symbol
Engine-A/T-ECU	B	Engine-ECU <F9Q1>	A






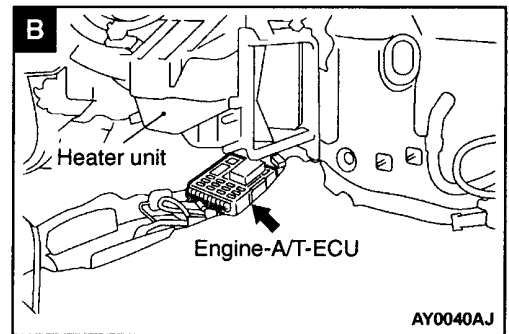
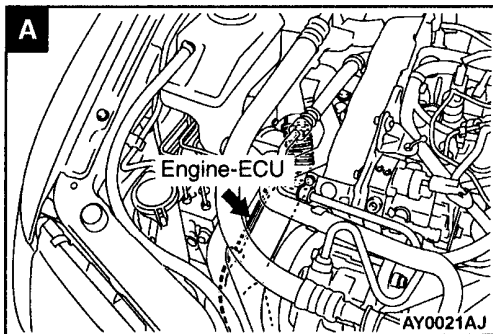
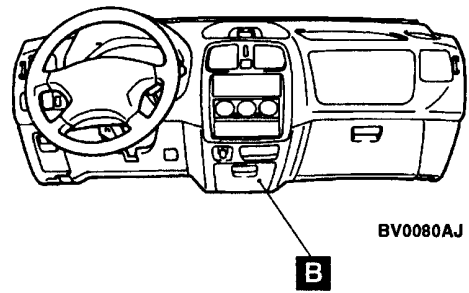
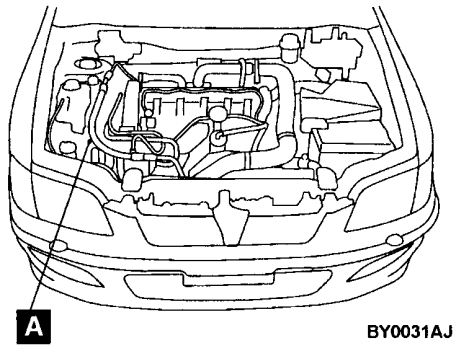


SENSOR

Name	Symbol	Name	Symbol
Accelerator pedal position sensor <4G93, F9Q1>	N	Fuel temperature sensor <F9Q1>	I
		Ignition failure sensor	4G13 E 4G93 F
Air flow sensor <F9Q1>	G	Input shaft speed sensor <A/T>	L
Advance actuator <F9Q1>	A	Output shaft speed sensor <A/T>	L
A/T control solenoid valve assembly (incorporating A/T fluid temperature sensor)	L	Oxygen sensor (Front)	<4G13> J <4G93> O
		Oxygen sensor (Rear)	<4G13> P <4G93> Q
Boost sensor	4G13 C F9Q1 G	Rail pressure sensor <F9Q1>	I
Camshaft position sensor <4G13>	E	Top dead center and engine speed sensor <F9Q1>	K
Crank angle sensor <4G13>	H	Vehicle speed sensor <F9Q1>	M



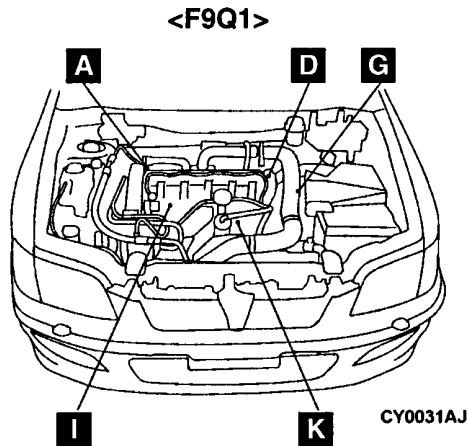
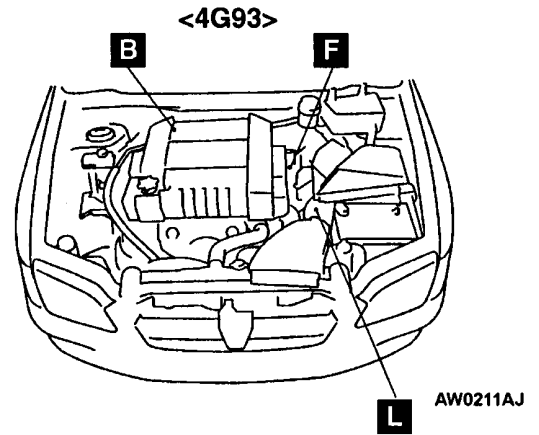
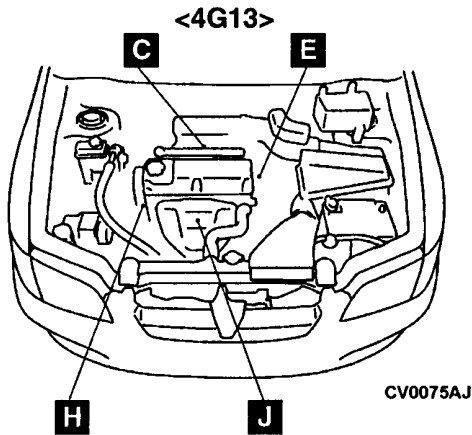


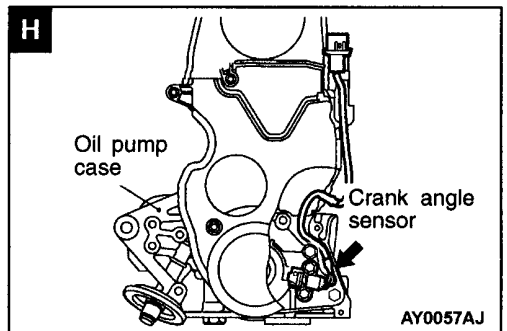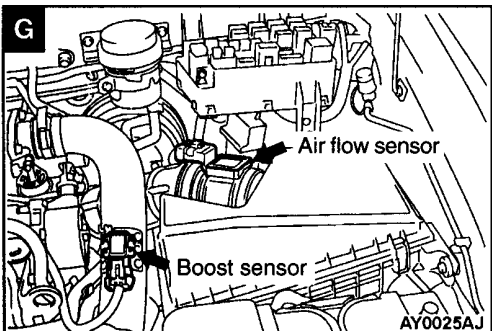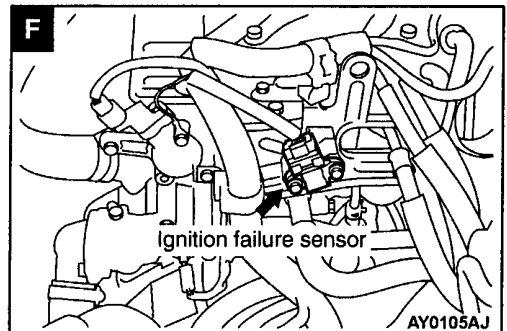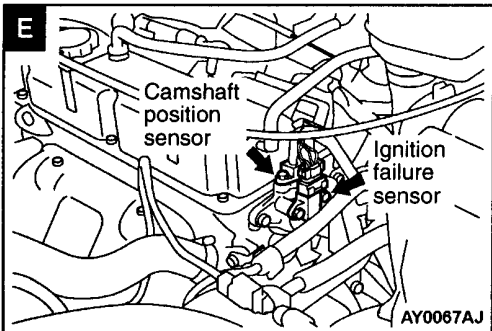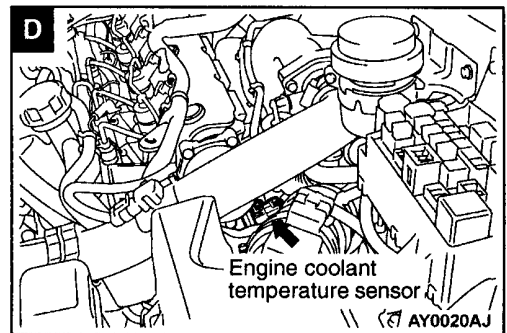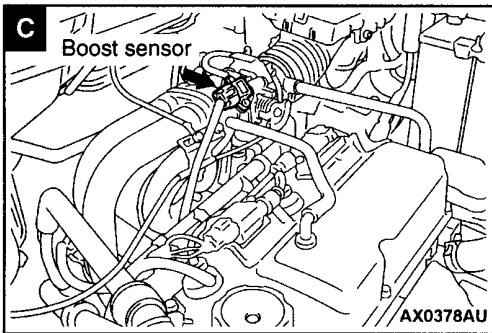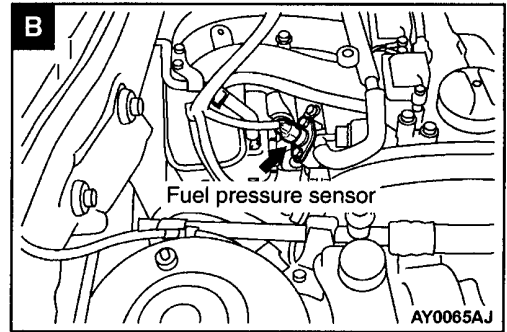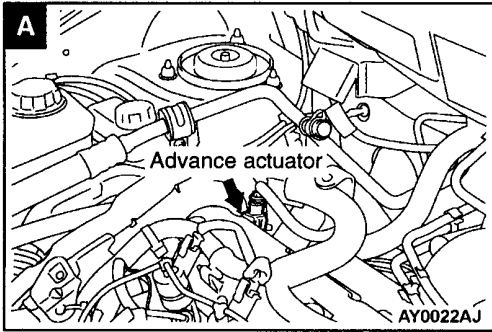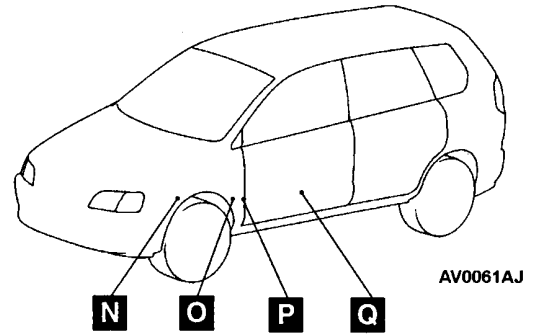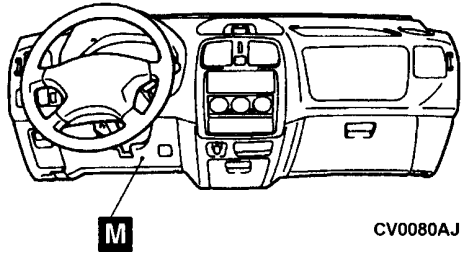

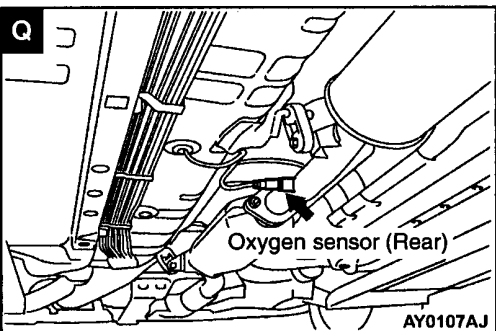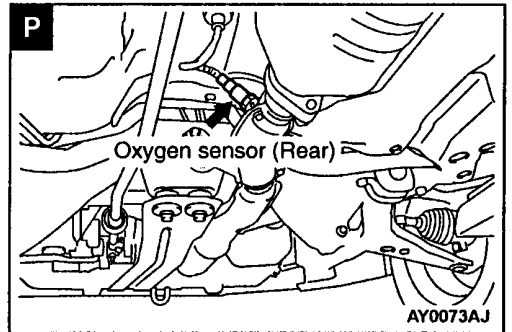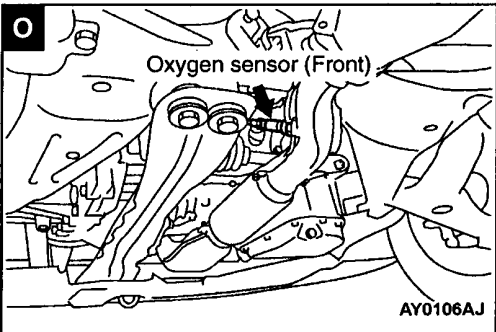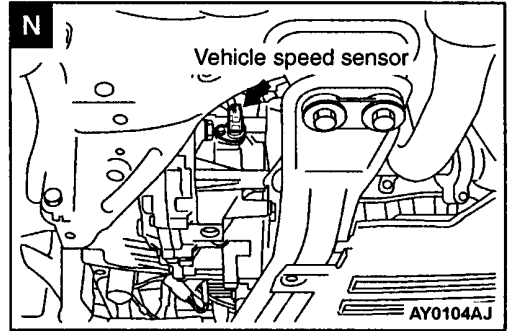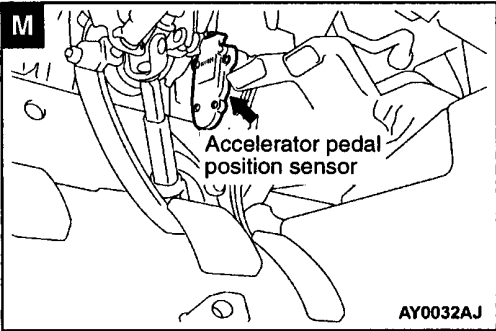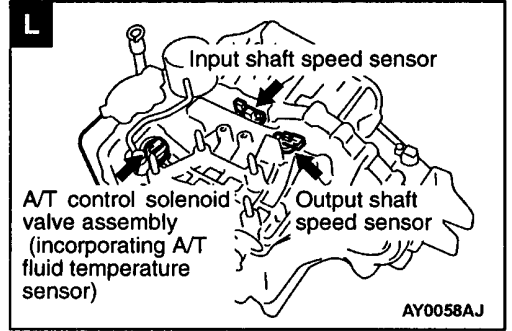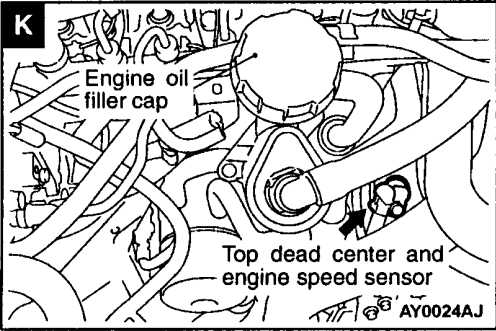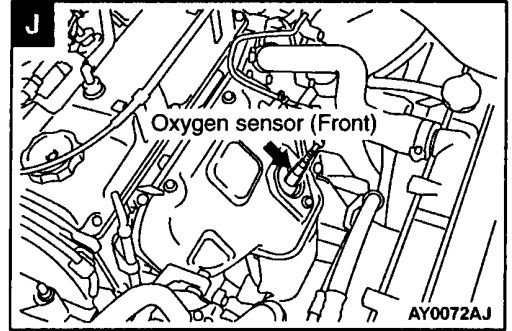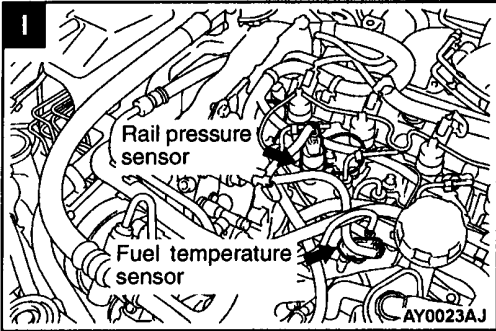


SOLENOID AND SOLENOID VALVE


Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	D	Throttle solenoid <F9Q1>	B
Purge control solenoid valve <4G13>	C	Turbocharger solenoid <F9Q1>	A

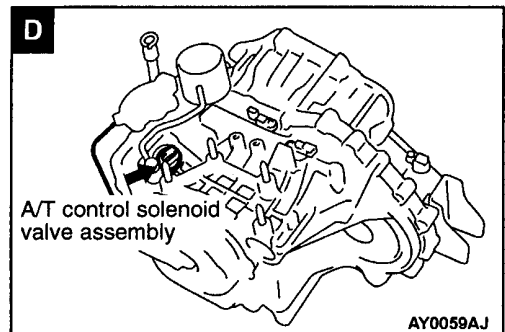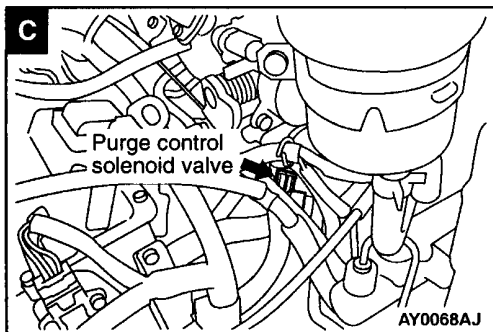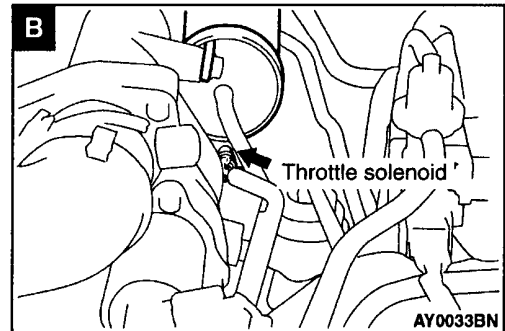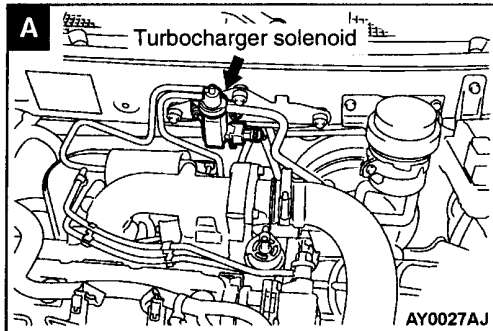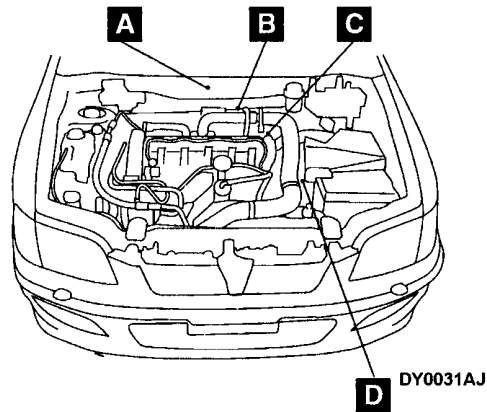


DIODE

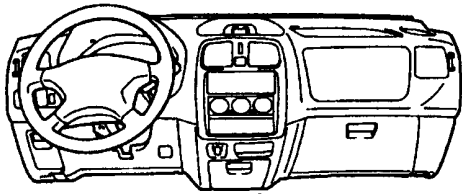


DV0080AJ

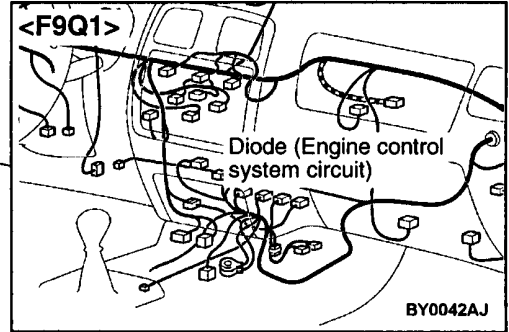


EARTH CABLE

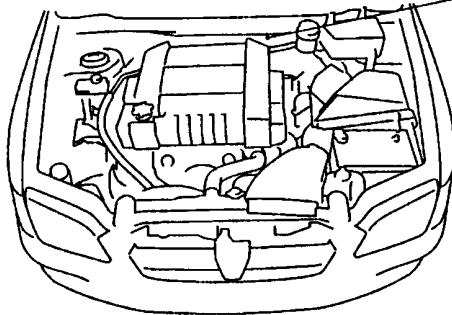

BW0211AJ

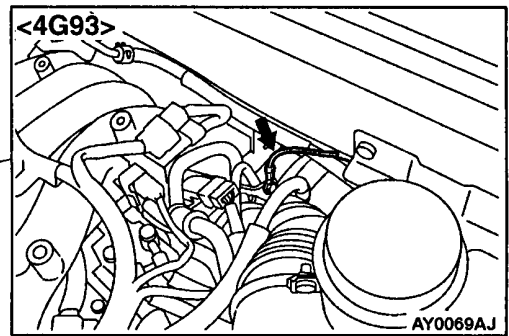

EARTH

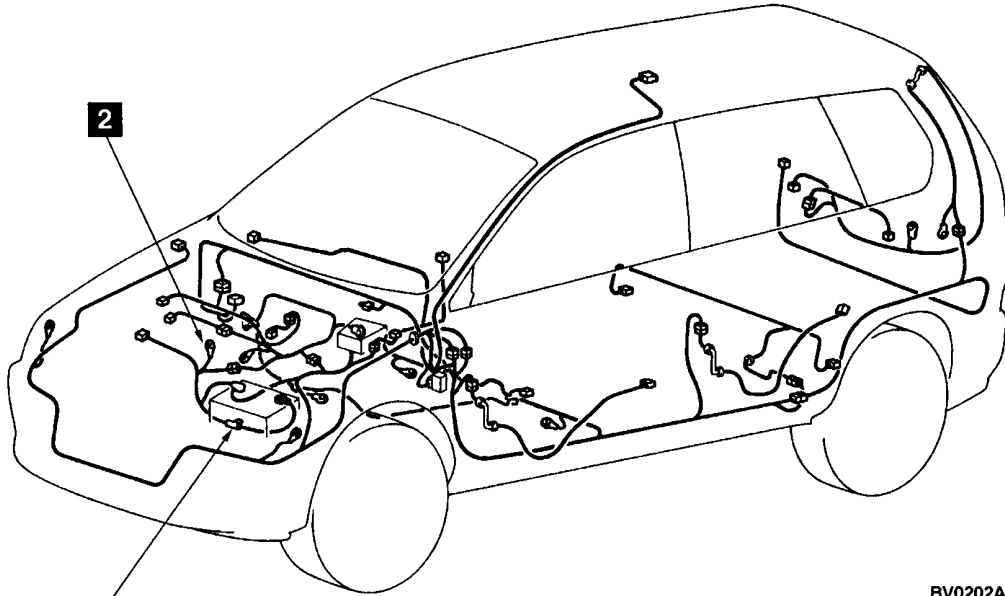

BV0202AJ

