

---

# HOW TO READ THE WIRING DIAGRAMS

## CONTENTS

MODELS ..... 1-2



**MODELS**

Model code		Engine model	Transmission model	Fuel supply system
DG1A	LNDEL6/R6	4G13-SOHC (1,299 mL)	F5MR1 (2WD-5M/T)	MPI
	LNJEL6/R6			
DG3A	LNDEL6/R6	4G18-SOHC (1,584 mL)		
	LNJEL6/R6			
	LNPEL6			
	LRJEL6/R6		F4A41 (2WD-4A/T)	
DG4A	LNDFL6	F9Q1 (1,870 mL)	F5MV1 (2WD-5M/T)	Fuel injection pump
	LNJFL6/R6			
DG5A	LNJCL6/R6	4G93-DOHC-GDI (1,834 mL)	F5M42 (2WD-5M/T)	GDI
	LNPCL6/R6			
	LRJCL6/R6		F4A42 (2WD-4A/T)	