
HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS 1-2



MODELS

Model code		Engine model	Transmission model	Fuel supply system
DG1A	LNDEL6/R6	4G13 MPI (1,299 mL)	F5MR1 <5M/T>	MPI (Multi Point Fuel Injection)
	LNJEL6/R6			
DG3A	LNDEL6/R6	4G18 MPI (1,584 mL)	F5MR1 <5M/T>	
	LNJEL6/R6			
	LNPEL6			
	LRDER6		F4A42 <4A/T>	
	LRJEL6/R6			
DG4A	LNDFL6/R6	F9Q1 (1,870 mL)	F5MV1 <5M/T>	DI-D (Direct Injection Diesel)
	LNJFL6/R6			