
HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS 1-2



MODELS

The following models have been added.

Model code		Engine model	Transmission model	Fuel supply system
DG4A	LNJVL6/R6	F9Q2 (1,870 mL)	F5MV1 <5M/T>	DI-D (Direct Injection Diesel)
	LNPVL6			
DG5A	LNJEL6/R6	4G93 MPI (1,834 mL)	F5MR1 <5M/T>	MPI (Multi Point Fuel Injection)
	LNPEL6/R6			
	LRJEL6/R6		F4A42 <4A/T>	