
CIRCUIT DIAGRAMS

CONTENTS

IGNITION SYSTEM	COOLING SYSTEM	
4G93 engine 4-2	Petrol-powered vehicles 4-16	
CHARGING SYSTEM	INVECS-II 4A/T	
4G93 engine 4-3	4G93 engine 4-18	
ENGINE CONTROL SYSTEM	MANUAL AIR CONDITIONER	
4G93 engine-M/T 4-4	Petrol-powered vehicles 4-26	
4G93 engine-A/T	IMMOBILIZER SYSTEM	
	Petrol-powered vehicles 4-30	


IGNITION SYSTEM

4G93 engine

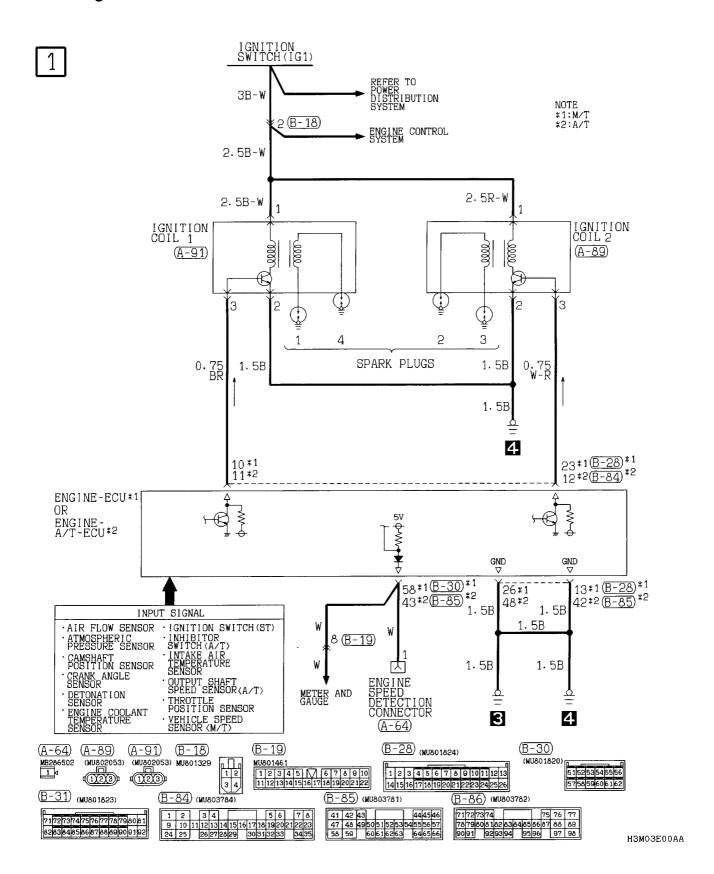


CHARGING SYSTEM


4G93 engine

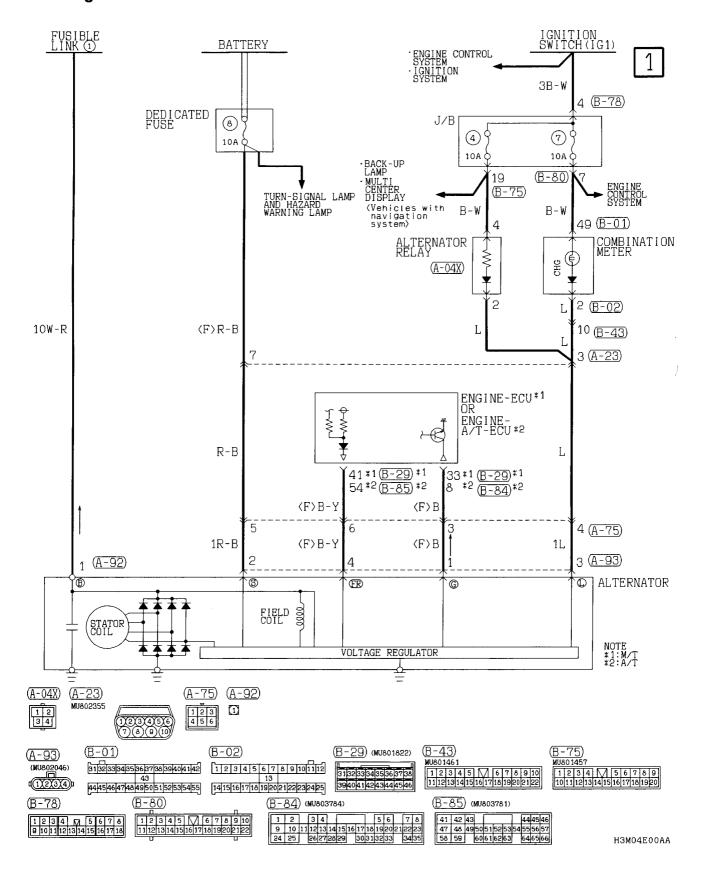


ENGINE CONTROL SYSTEM

4G93 engine-M/T

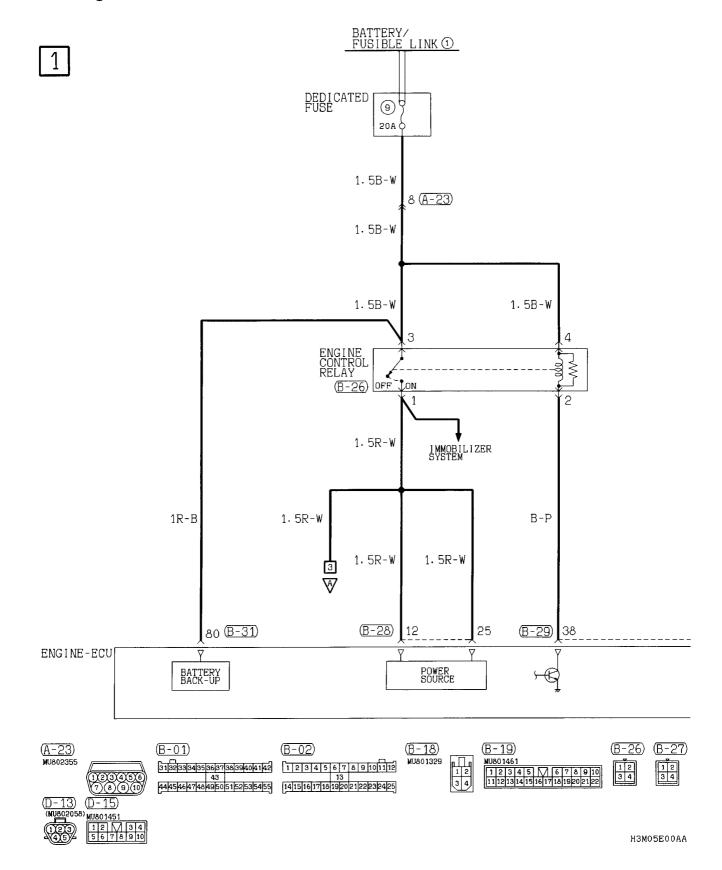


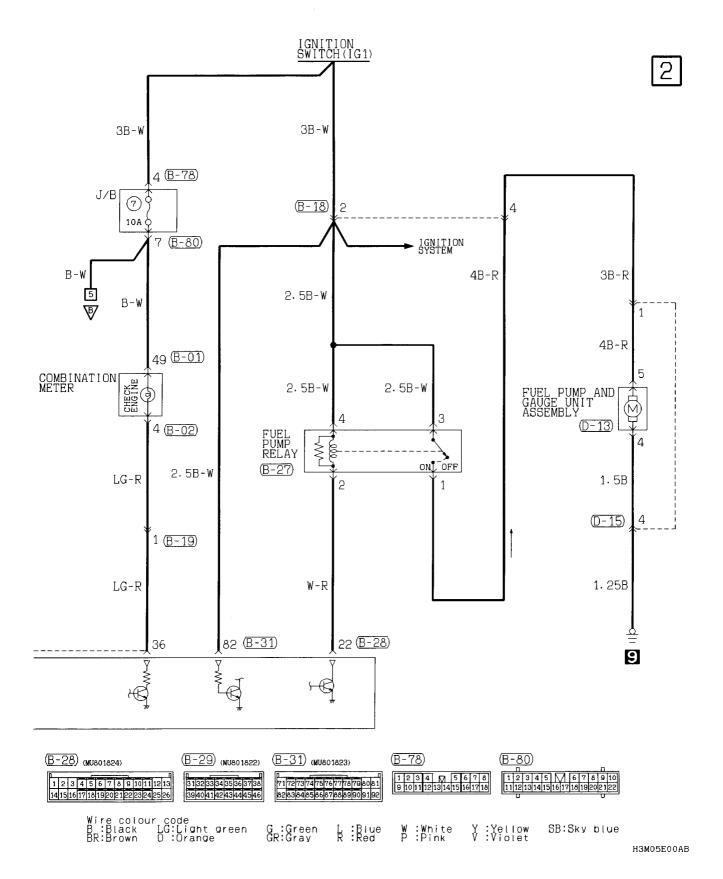

ENGINE CONTROL SYSTEM <4G93 engine-M/T> (CONTINUED)

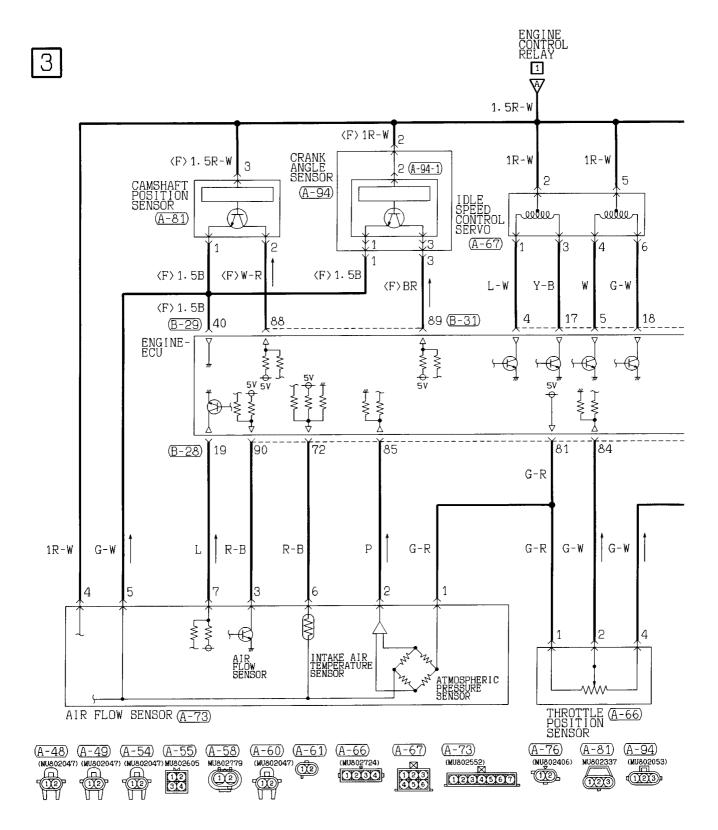



4

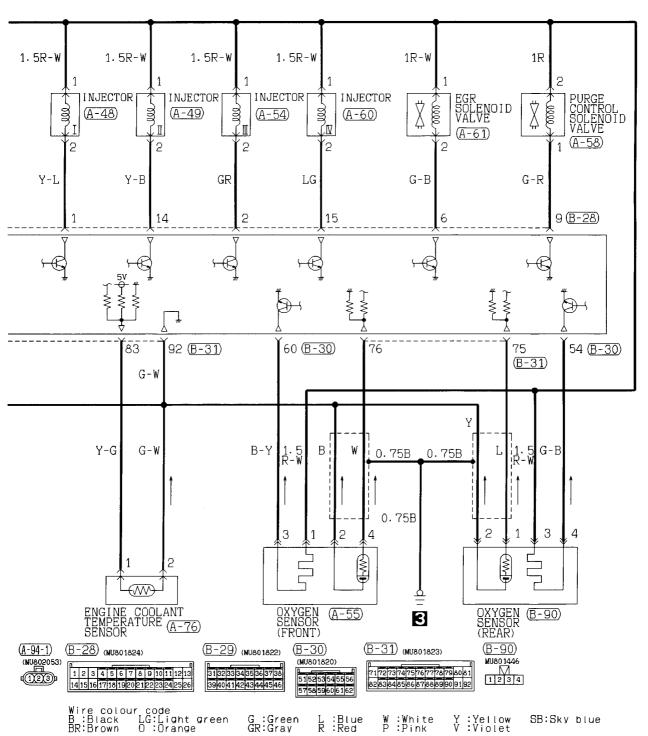

H3M05E00BB


ENGINE CONTROL SYSTEM <4G93 engine-M/T> (CONTINUED)

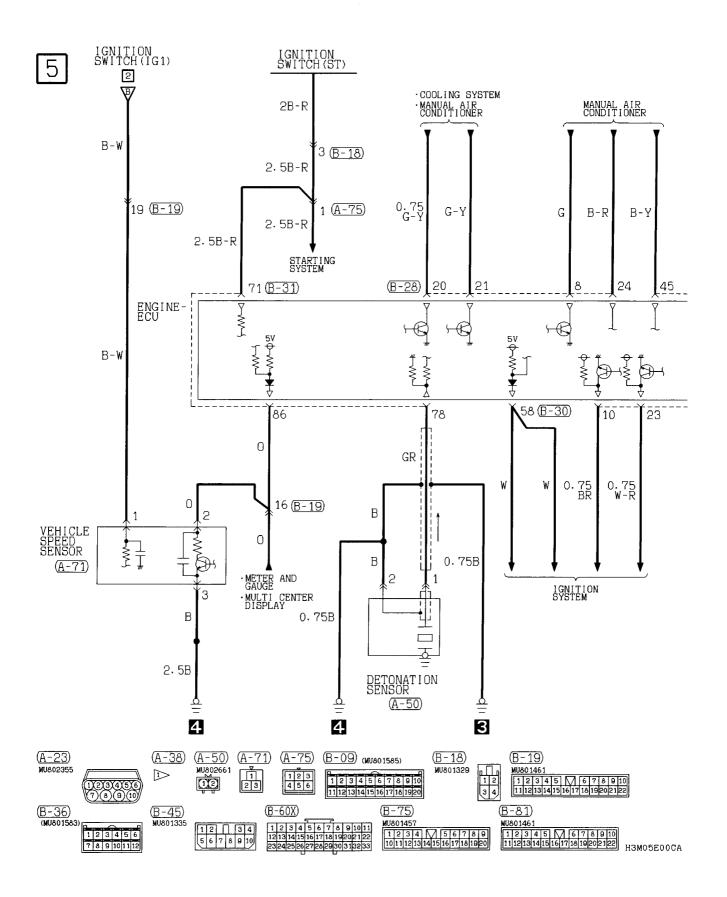


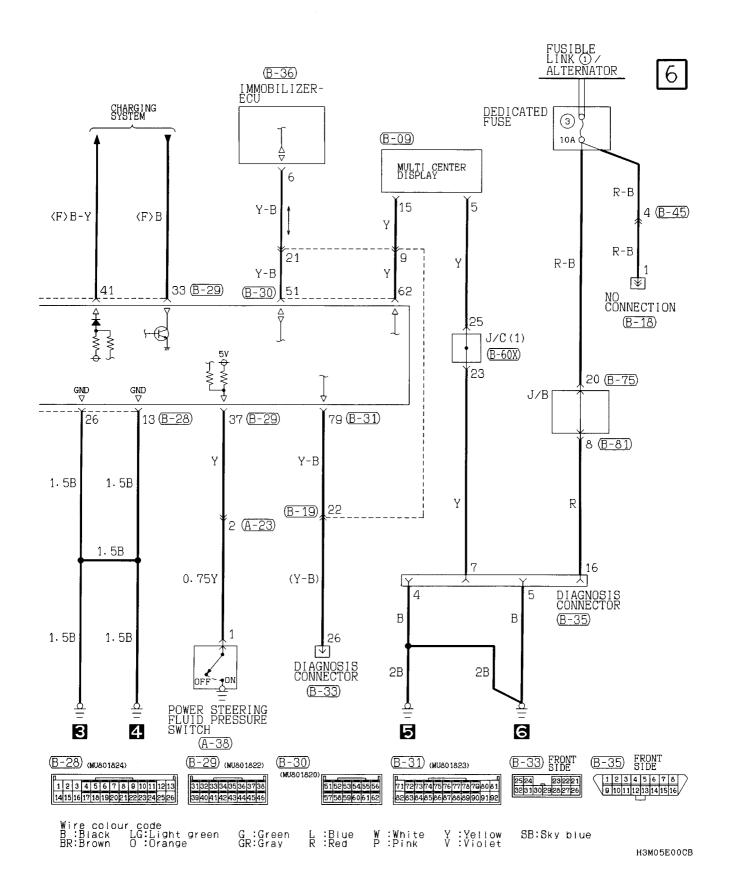


ENGINE CONTROL SYSTEM

4G93 engine-A/T

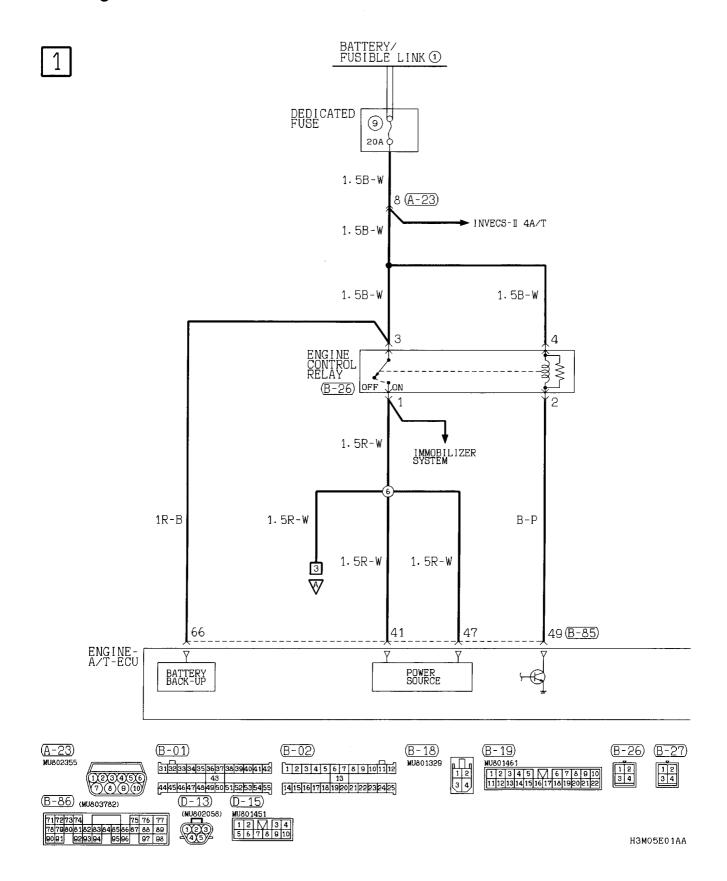


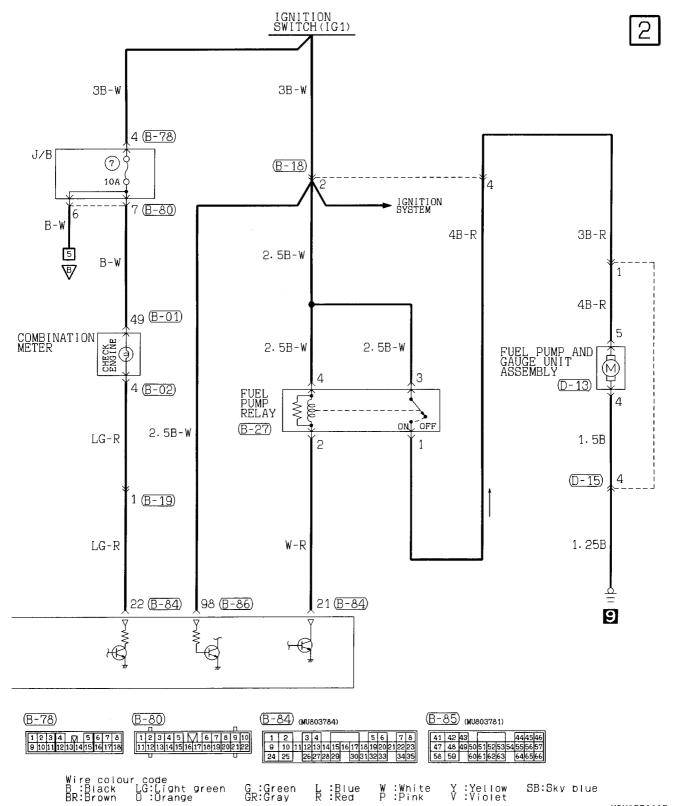

ENGINE CONTROL SYSTEM <4G93 engine-A/T> (CONTINUED)

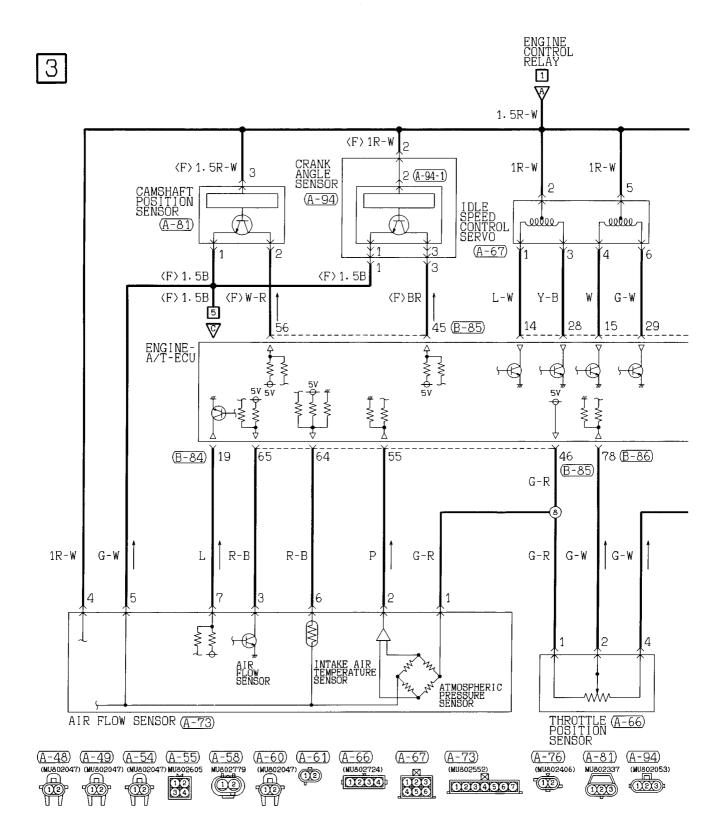



4

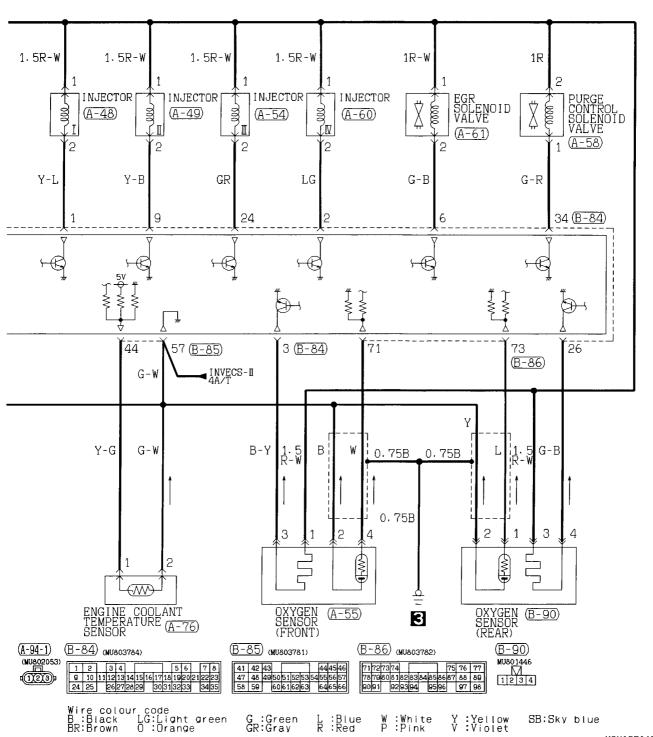

H3M05E01BB


ENGINE CONTROL SYSTEM <4G93 engine-A/T> (CONTINUED)

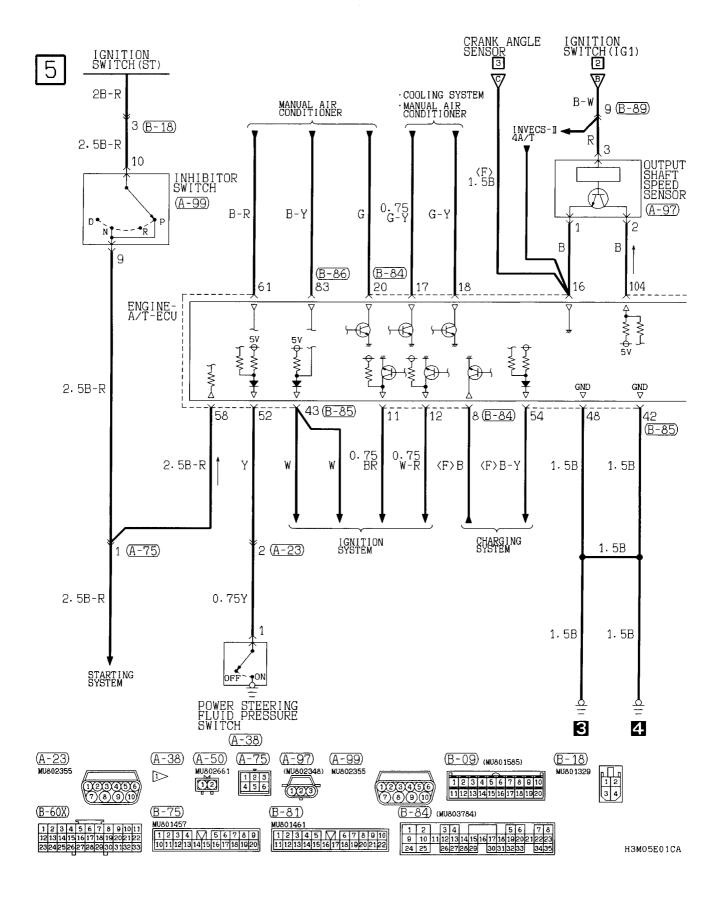


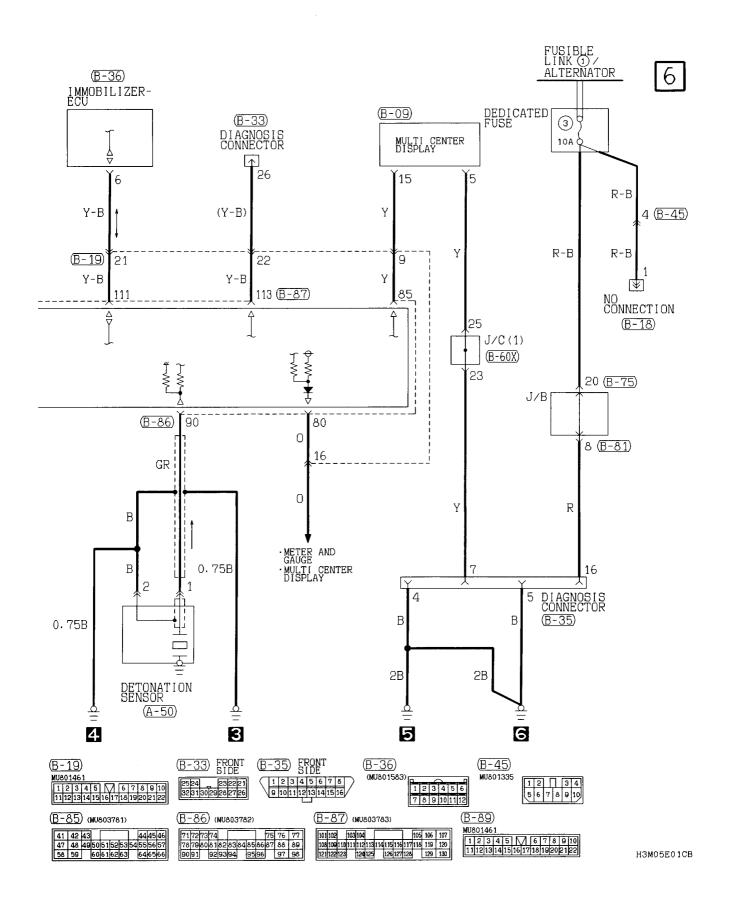

COOLING SYSTEM

Petrol-powered vehicles

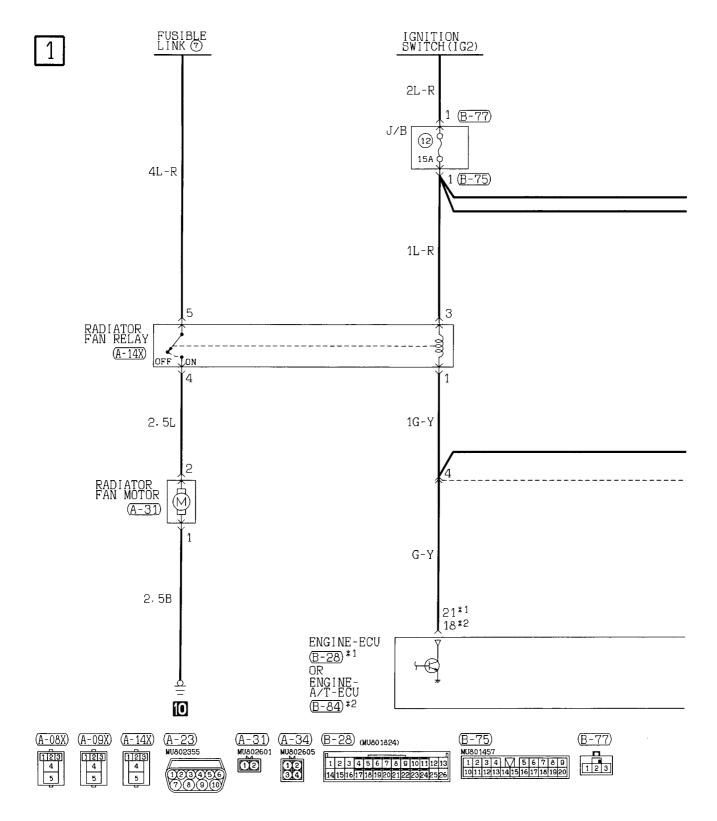


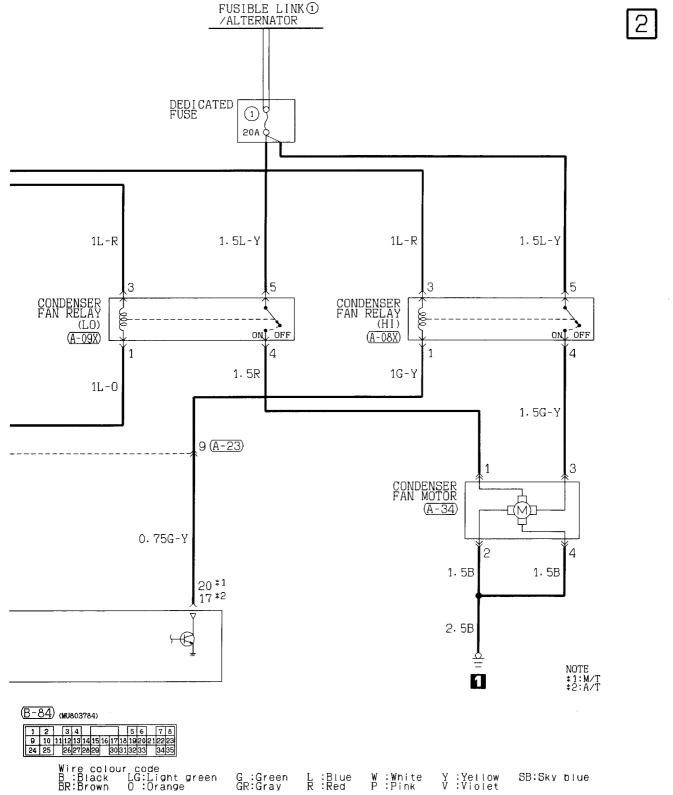


H3M06E00AB

INVECS-II 4A/T


4G93 engine

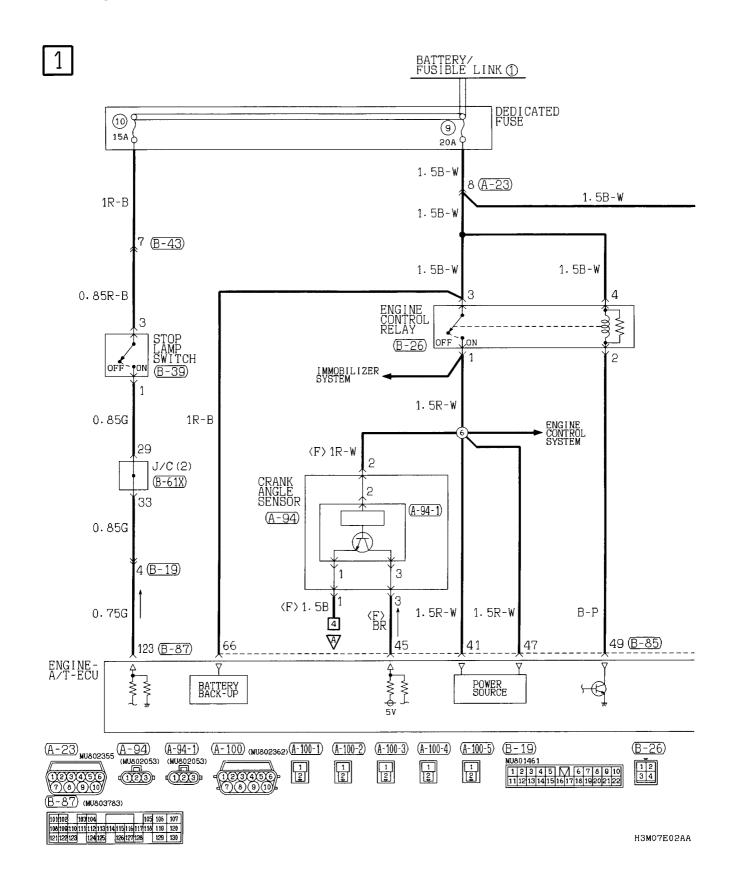


2

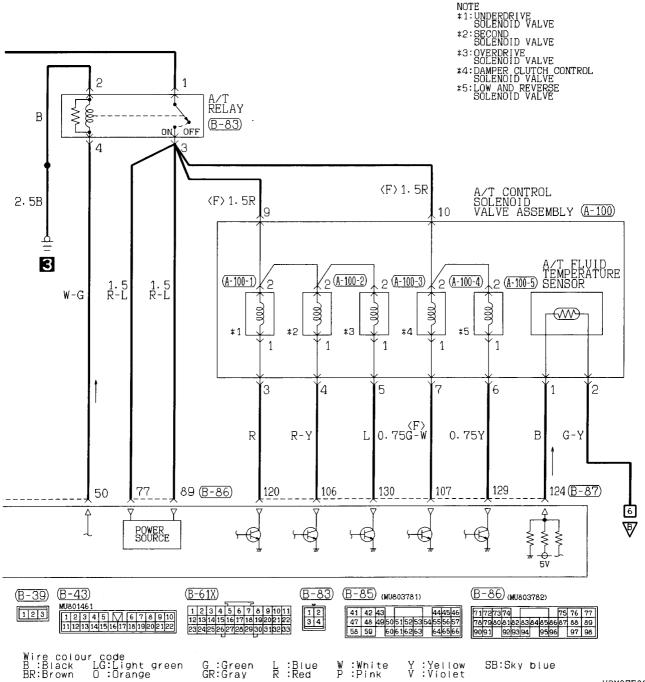

INVECS-II 4A/T <4G93 engine> (CONTINUED)

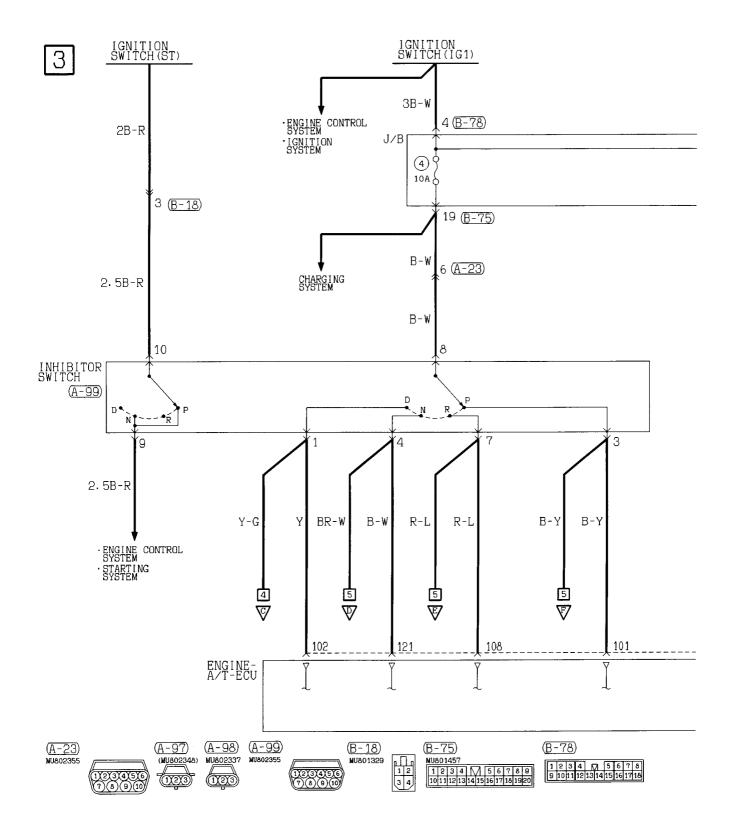



4

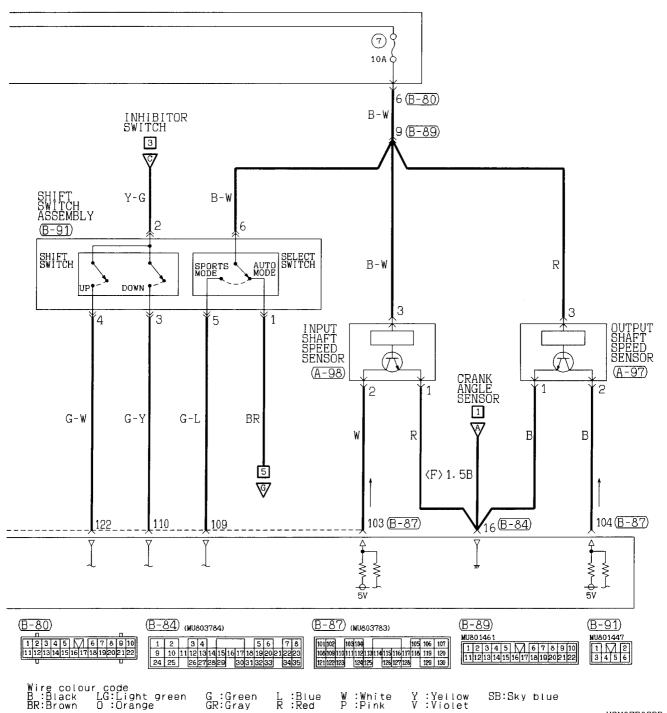


H3M07E02BB


INVECS-II 4A/T <4G93 engine> (CONTINUED)

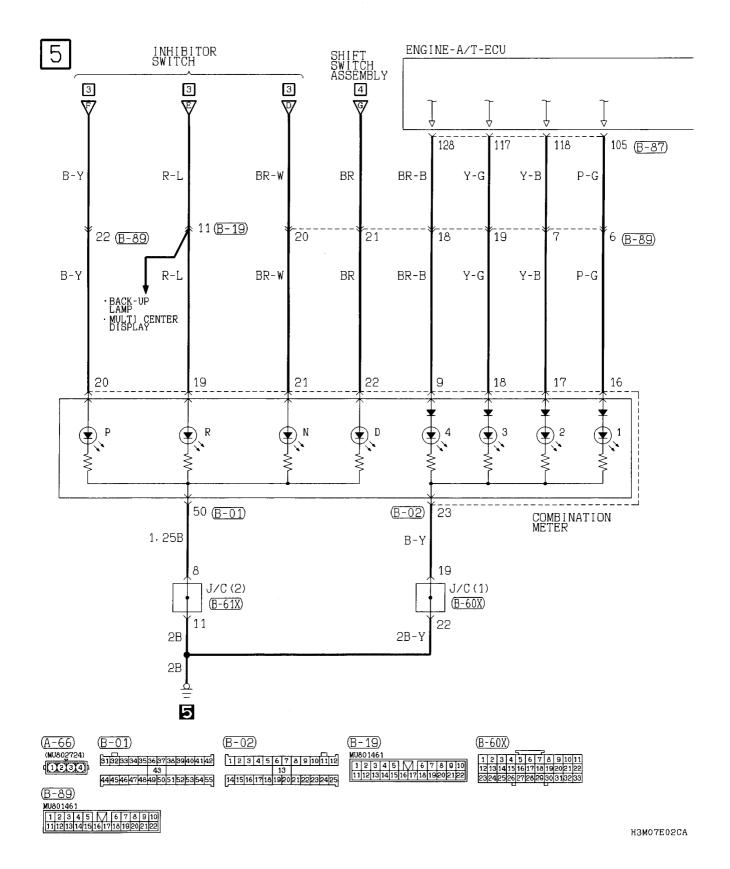

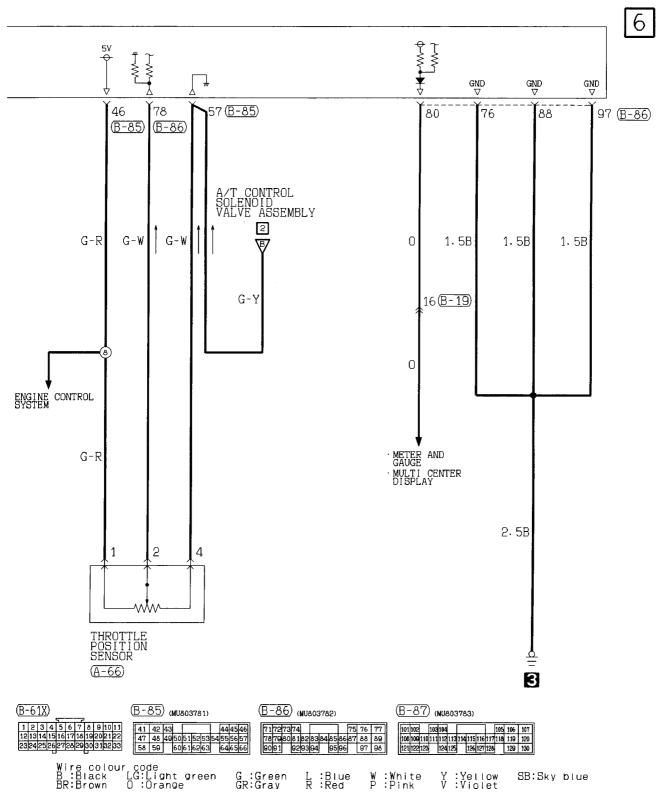


INVECS-II 4A/T <4G93 engine> (CONTINUED)

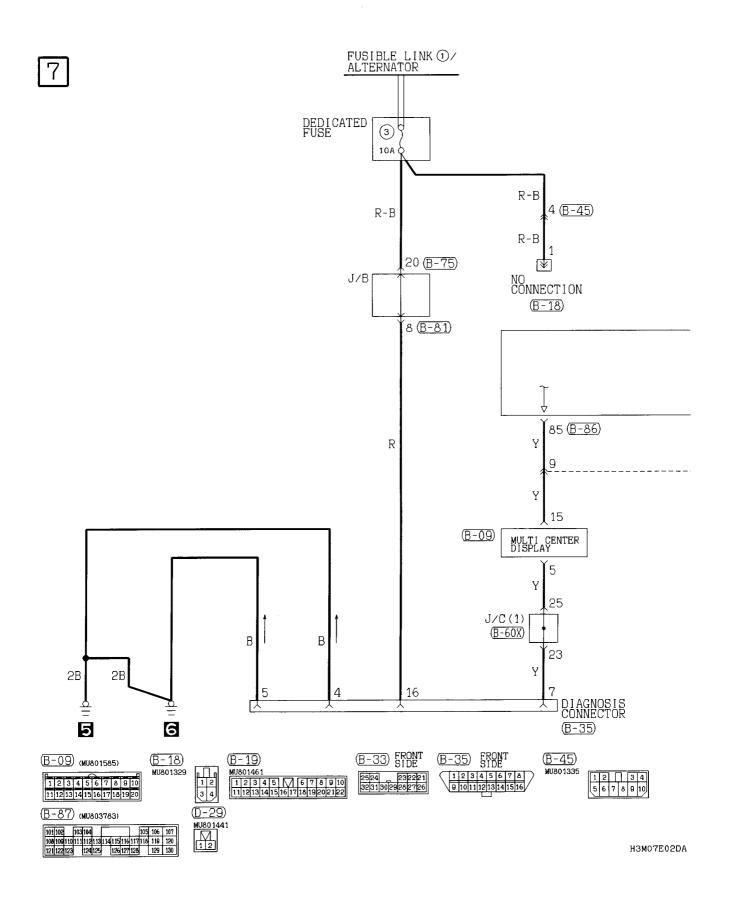


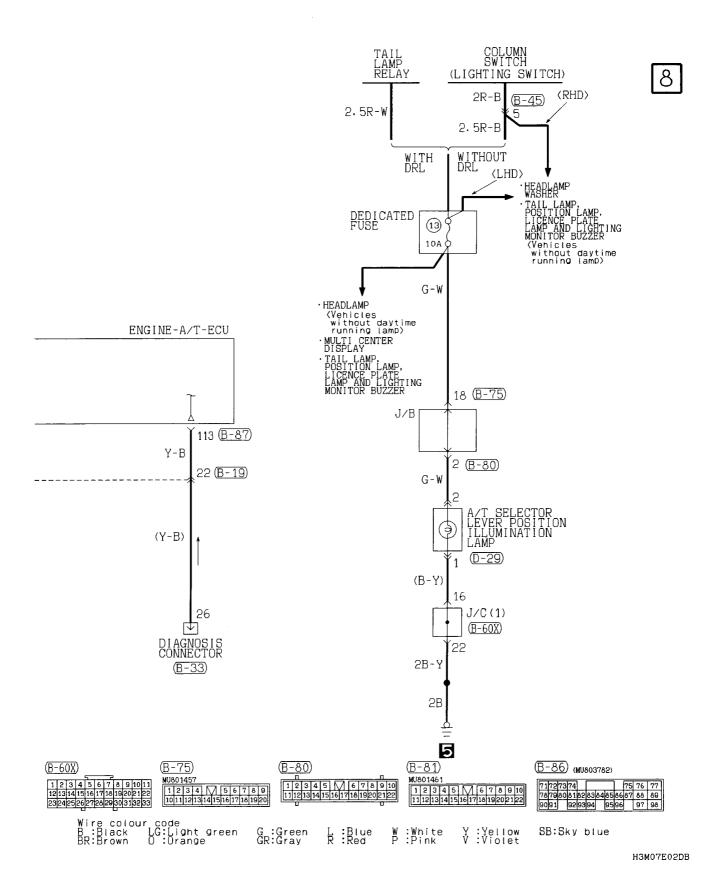


MANUAL AIR CONDITIONER


Petrol-powered vehicles

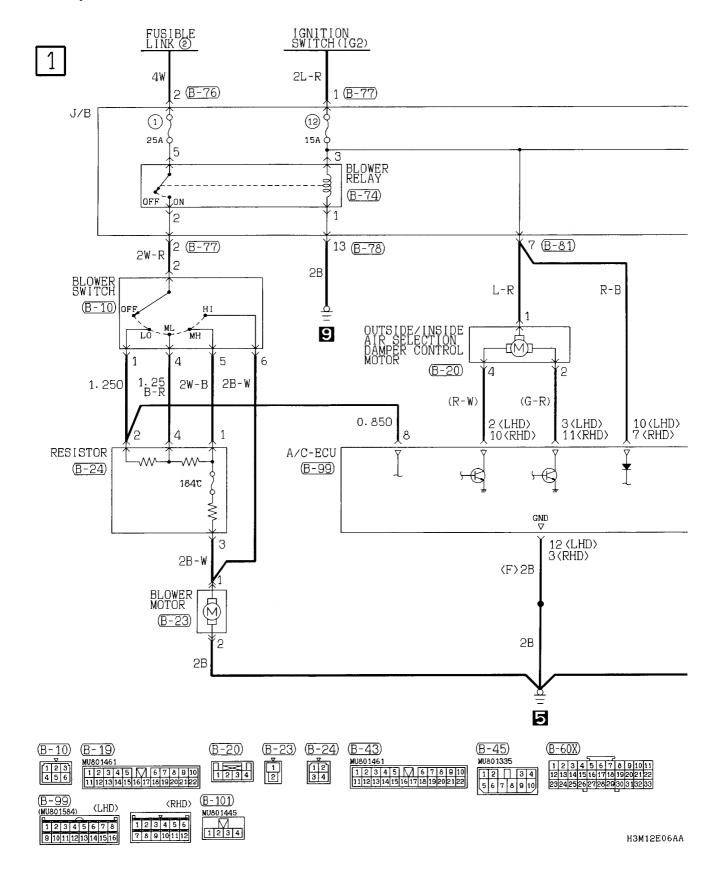

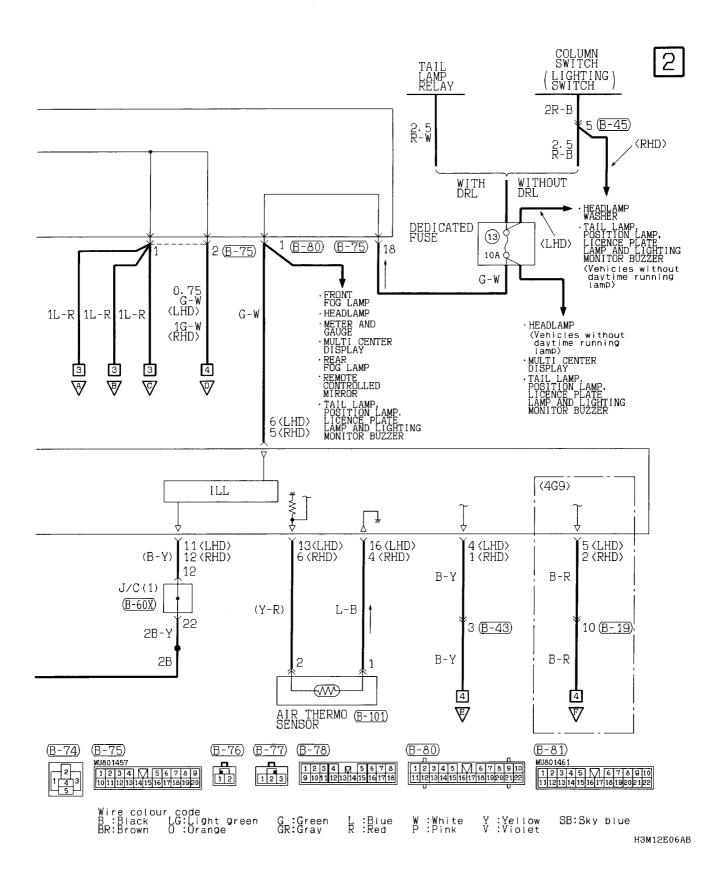

MANUAL AIR CONDITIONER <Petrol-powered vehicles> (CONTINUED)

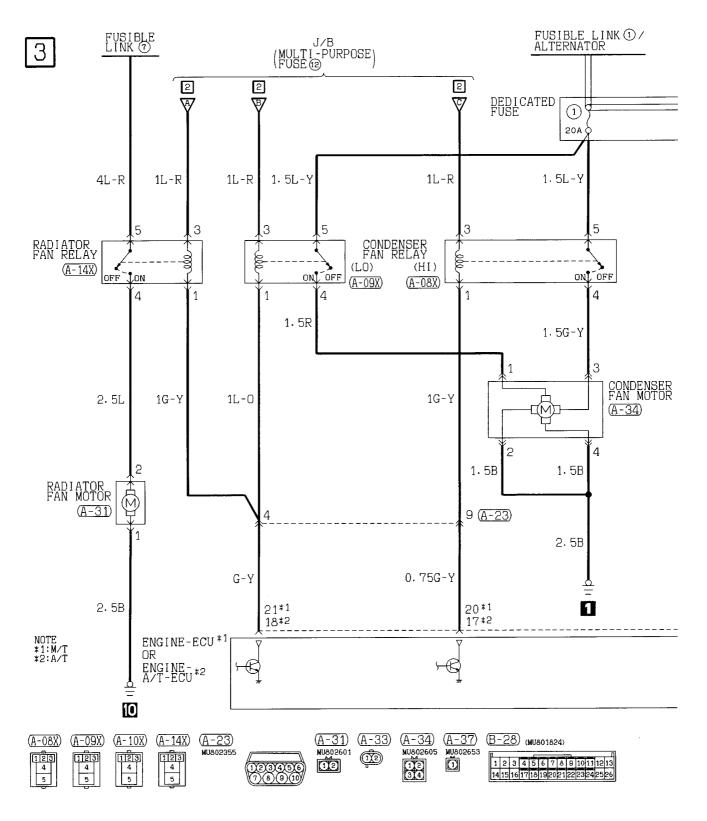

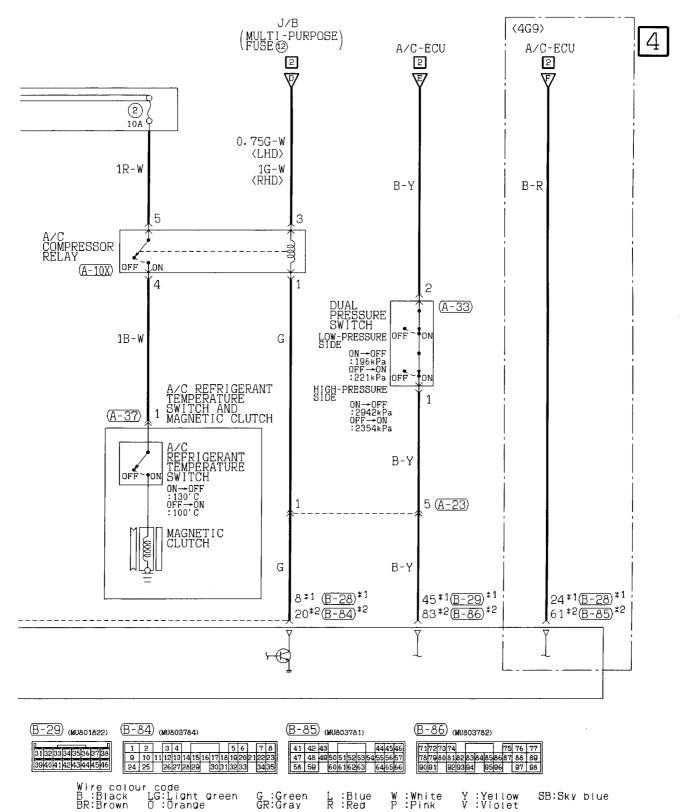

IMMOBILIZER SYSTEM

Petrol-powered vehicles

