

# CLUTCH

## CONTENTS

21109000190

GENERAL INFORMATION .....	2	CLUTCH PEDAL .....	4
SERVICE SPECIFICATIONS .....	2	CLUTCH CONTROL .....	5
LUBRICANTS .....	2	Clutch Master Cylinder .....	7
ON-VEHICLE SERVICE .....	2		
Clutch Pedal Inspection and Adjustment .....	2		
Bleeding .....	3		

## GENERAL INFORMATION

21100010093

The clutch is a dry single-disc, diaphragm type; hydraulic pressure is used for the clutch control.

## SERVICE SPECIFICATIONS


21100030150

Items	Standard value
Clutch pedal height mm	224 - 227 <L.H. drive vehicles> 211 - 214 <R.H. drive vehicles>
Clutch pedal clevis pin play mm	1 - 3
Clutch pedal free play mm	6 - 13
Distance between the clutch pedal and the toeboard when the clutch is disengaged mm	125 or more

## LUBRICANTS

21100040078

Items	Specified lubricants	Quantity
Clutch fluid	Brake fluid DOT3 or DOT4	As required
Push rod assembly	Rubber grease	
Boot		
Release cylinder push rod	MITSUBISHI genuine grease Part No. 0101011	

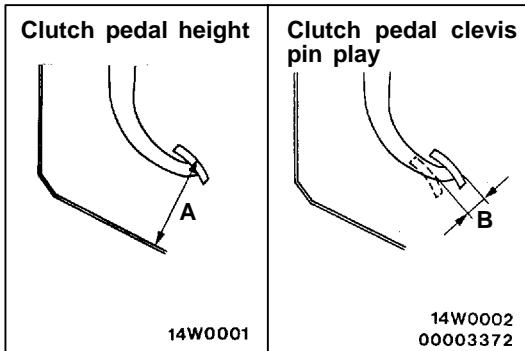

## ON-VEHICLE SERVICE

21100090158

### CLUTCH PEDAL INSPECTION AND ADJUSTMENT


1. Turn up the carpet, etc. under the clutch pedal.
2. Measure the clutch pedal height and the clutch pedal clevis pin play.

**Standard value (A):**

224 - 227 <L.H. drive vehicles>

211 - 214 <R.H. drive vehicles>


**Standard value (B): 1 - 3 mm**

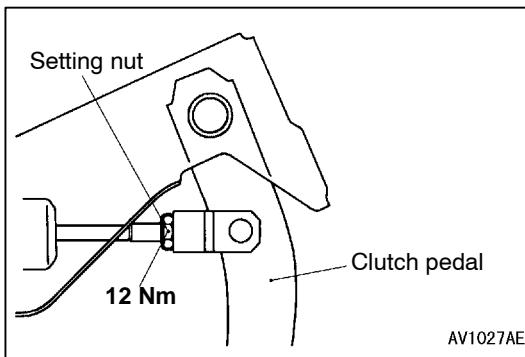

3. If the clutch pedal height and the clutch pedal clevis pin play are outside the standard value, turn the setting nut to adjust them to the standard value.

**Caution**

**Do not push in the master cylinder push rod at this time, otherwise the clutch will not operate properly.**

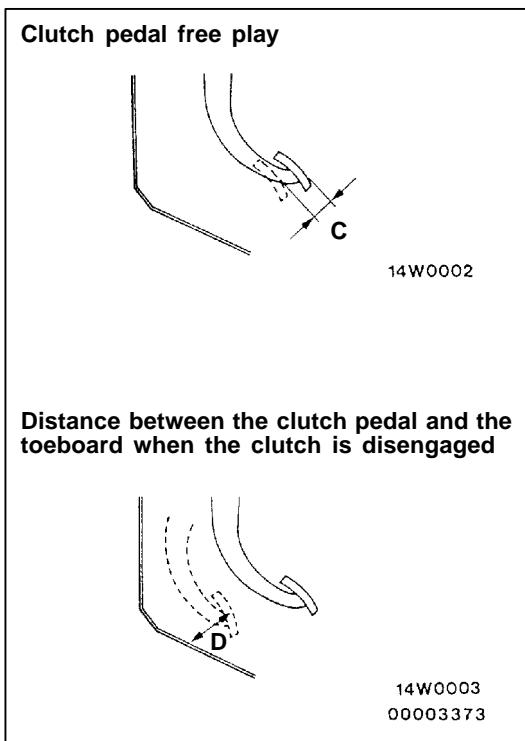


4. After completing the adjustments, confirm that the clutch pedal free play (measured at the face of the pedal pad) and the distance between the clutch pedal (the face of the pedal pad) and the toeboard when the clutch is disengaged are within the standard value ranges.

**Standard value (C): 6 - 13 mm**

**Standard value (D): 125 mm or more**

5. If the clutch pedal free play and the distance between the clutch pedal and the toeboard when the clutch is disengaged do not agree with the standard values, it is probably the result of either air in the hydraulic system or a faulty master cylinder or clutch. Bleed the air, or disassemble and inspect the master cylinder or clutch.
6. Turn back the carpet, etc.

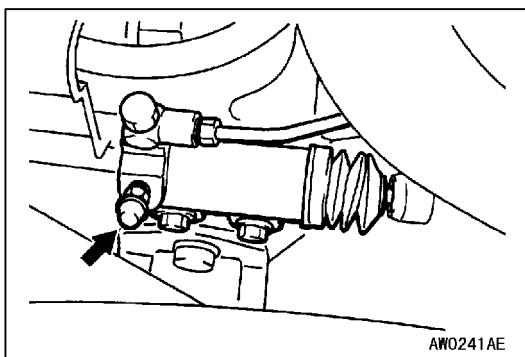

## BLEEDING

21100140143

**Specified fluid: Brake fluid DOT 3 or DOT 4**

**Caution**


**Use the specified brake fluid. Avoid using a mixture of the specified fluid and other fluid.**

**CLUTCH PEDAL**

21100160224

**REMOVAL AND INSTALLATION**

**Post-installation Operation**  
Clutch Pedal Adjustment (Refer to P.21-2)

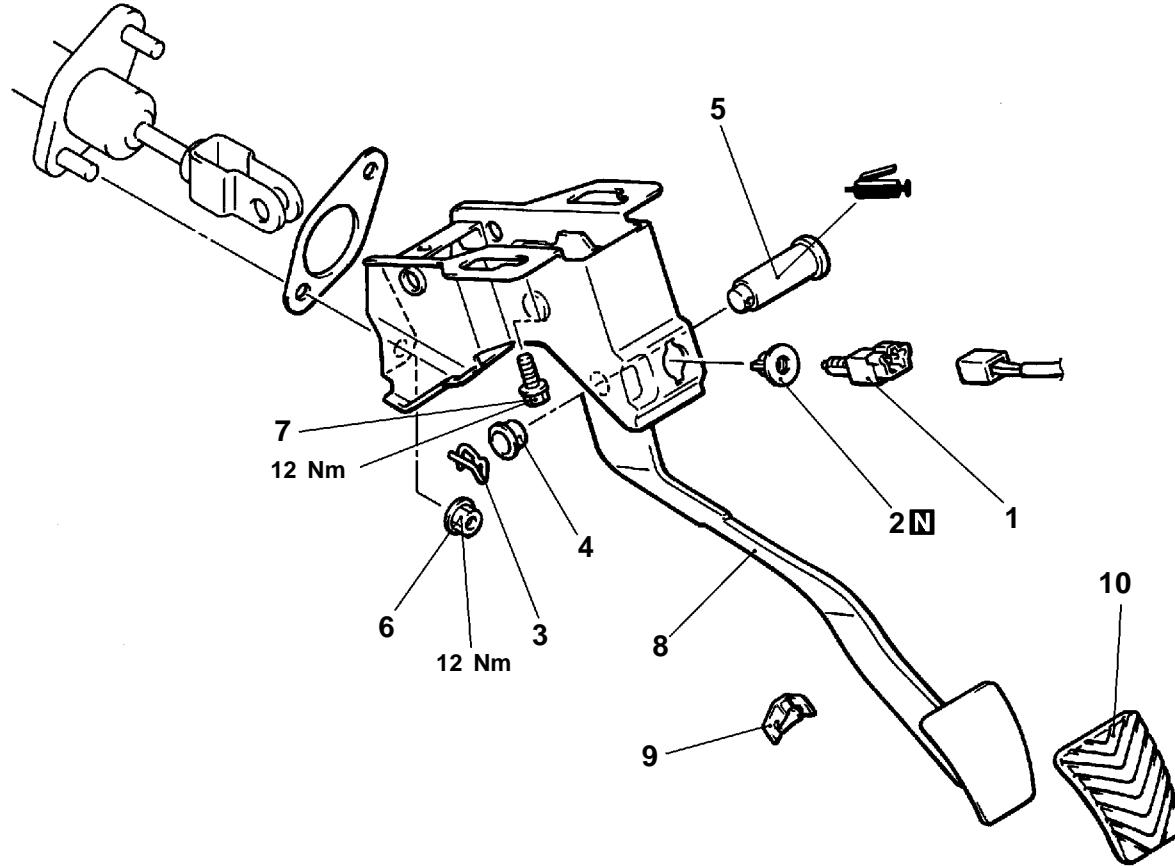

AW0242AE

**Removal steps**

- |                  |   |
|------------------|---|
| 1. Clutch switch | 6. Clutch master cylinder mounting nut  |
| 2. Clip          | 7. Master cylinder member mounting bolt |
| 3. Snap pin      | 8. Clutch pedal                         |
| 4. Bushing       | 9. Stopper <R.H. drive vehicles>        |
| 5. Pin assembly  | 10. Pedal pad                           |

# CLUTCH CONTROL

## REMOVAL AND INSTALLATION




21100190216

**Pre-removal Operation**  
 Clutch Fluid Draining

**Post-installation Operation**

- Clutch Fluid Supplying
- Clutch Line Bleeding (Refer to P.21-3)
- Clutch Pedal Adjustment (Refer to P.21-2)

&lt;L.H. drive vehicles&gt;

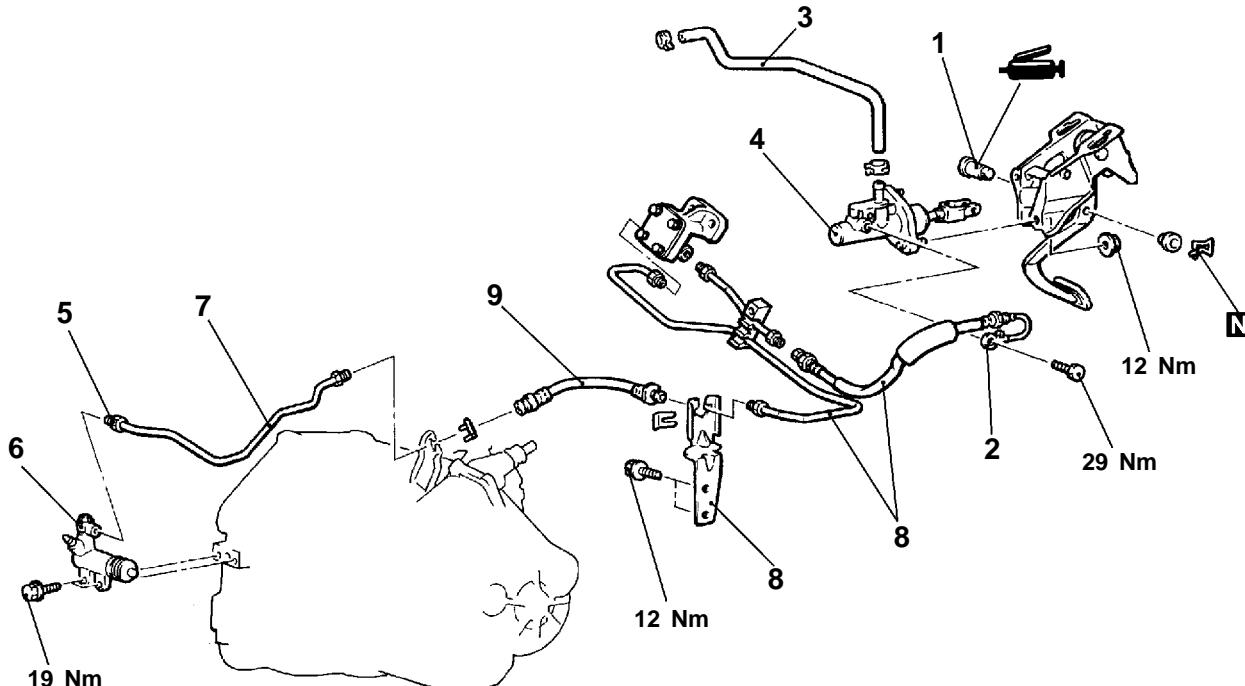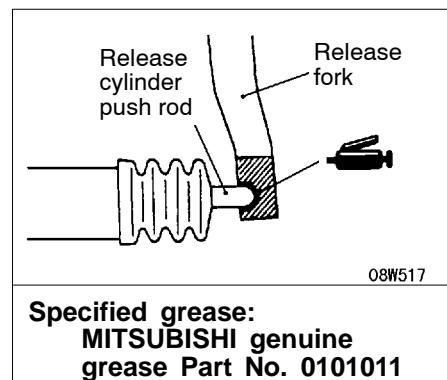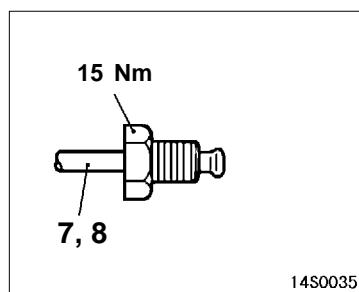W0243AE  
00009433
**Clutch master cylinder removal steps**

1. Clevis pin assembly
2. Clutch pipe connection
3. Reservoir hose
4. Clutch master cylinder




**Clutch release cylinder removal steps**

5. Clutch pipe connection
6. Clutch release cylinder

**Clutch line removal steps**

7. Clutch pipe
8. Clutch hose
9. Bracket
10. Clutch hose

&lt;R.H. drive vehicles&gt;

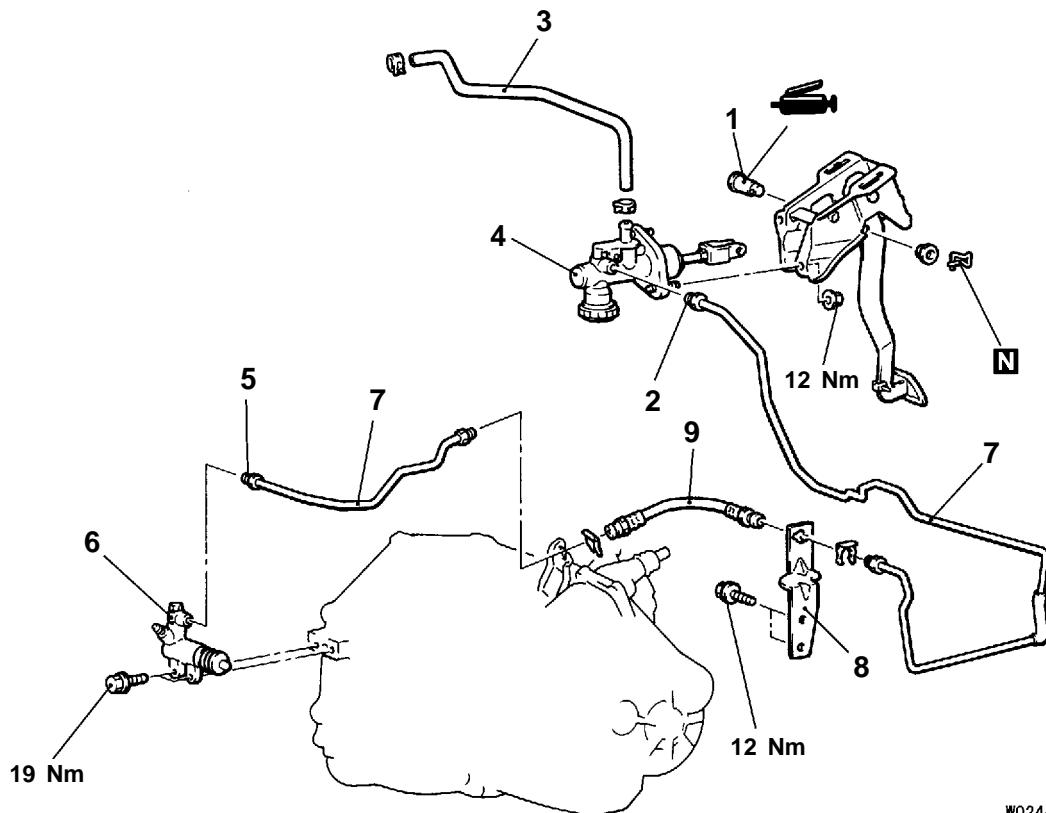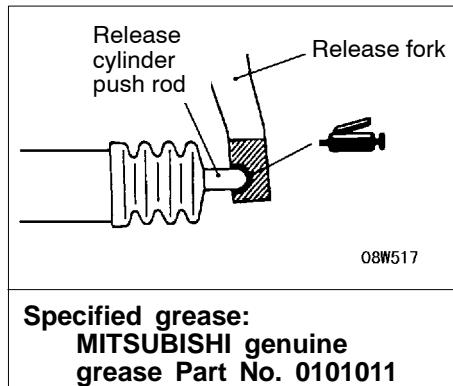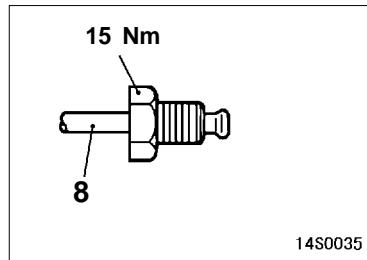W0244AE  
00009434

#### Clutch master cylinder removal steps

1. Clevis pin assembly
2. Clutch pipe connection
3. Reservoir hose
4. Clutch master cylinder

#### Clutch release cylinder removal steps

5. Clutch pipe connection
6. Clutch release cylinder

#### Clutch line removal steps


7. Clutch pipe
8. Bracket
9. Clutch hose

**DISASSEMBLY AND REASSEMBLY**

21100210172


**CLUTCH MASTER CYLINDER****Caution****Do not disassemble piston assembly.**

&lt;L.H. drive vehicles&gt;

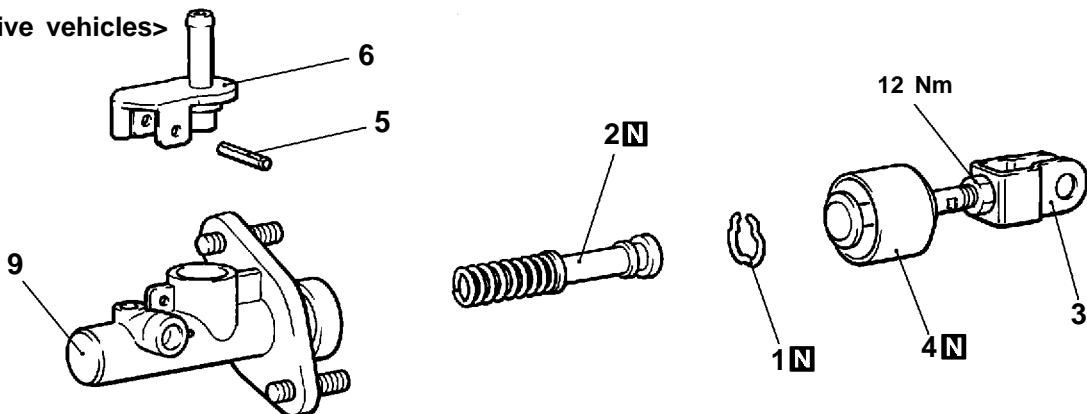


W0245AE

&lt;R.H. drive vehicles&gt;


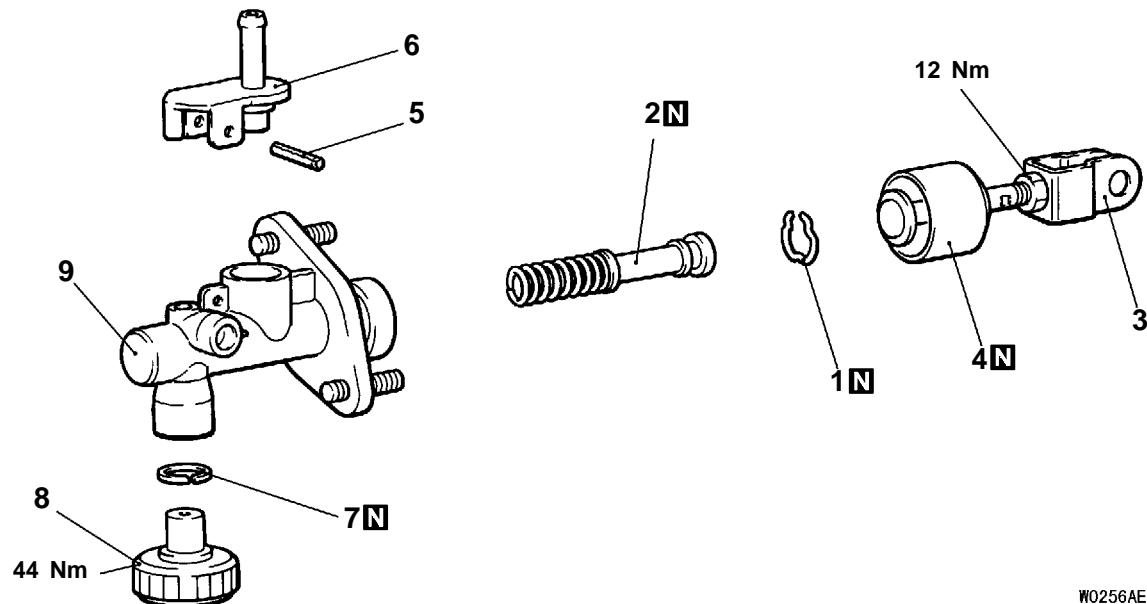


W0256AE

00009435

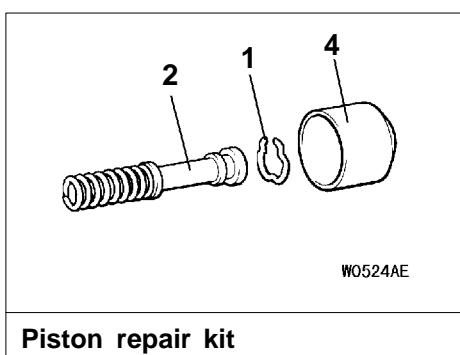

Piston repair kit

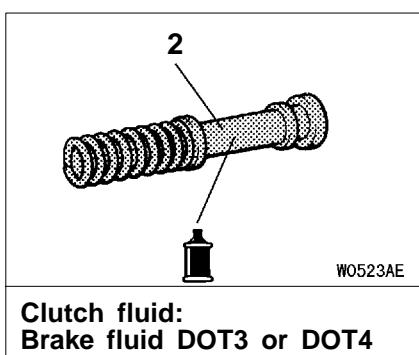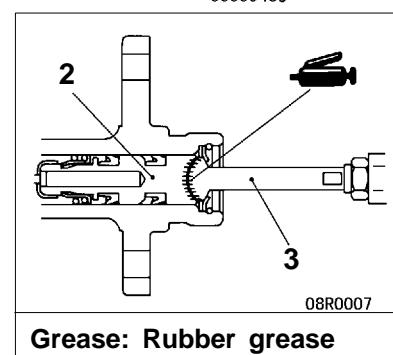Clutch fluid:  
Brake fluid DOT3 or DOT4


Grease: Rubber grease

**Disassembly steps**

- 1. Piston stopper ring
- 2. Piston assembly
- 3. Push rod assembly
- 4. Boot
- 5. Spring pin



- 6. Nipple
- 7. Gasket
- 8. Damper assembly
- 9. Master cylinder body

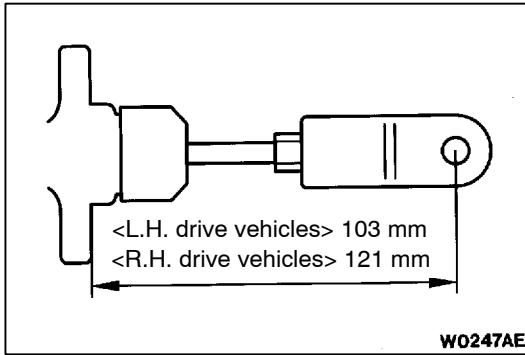

W0247AE

**INSTALLATION SERVICE POINT****►A◀PUSH ROD ASSEMBLY INSTALLATION**

Set the length of the push rod assembly to the shown dimension to make the adjustment of clutch pedal easier.