



# Workshop Manual

---

**chassis**

SUPPLEMENT

**SPACE RUNNER 2001**  
**SPACE WAGON 2001**

# SPACE RUNNER SPACE WAGON

## WORKSHOP MANUAL SUPPLEMENT

### FOREWORD

This manual outlines changes in servicing procedures related to the chassis including vehicle inspections, adjustments, and improvements in the newly equipped models. Use the following manuals in combination with this manual required.

|                              |                     |
|------------------------------|---------------------|
| TECHNICAL INFORMATION MANUAL |                     |
|                              | PYDE9802            |
|                              | PYDE9802-A          |
| WORKSHOP MANUAL              |                     |
| CHASSIS GROUP                |                     |
| SPACE RUNNER/SPACE WAGON     |                     |
|                              | PWDE9803            |
| SPACE RUNNER                 | PWDE9803-A          |
| SPACE WAGON                  | PWDE9803-B          |
| ENGINE GROUP                 | PWEE□□□□            |
|                              | (Looseleaf edition) |
| ELECTRICAL WIRING            |                     |
| SPACE RUNNER/SPACE WAGON     |                     |
|                              | PHDE9802            |
| SPACE RUNNER                 | PHDE9802-A          |
| SPACE WAGON                  | PHDE9802-B          |
| SPACE RUNNER/SPACE WAGON     |                     |
|                              | PHDE9802-C          |
| PBDE9802                     |                     |
| BODY REPAIR MANUAL           |                     |
| PARTS CATALOGUE              |                     |
| SPACE RUNNER                 | B608V501A□          |
| SPACE WAGON                  | B608W501A□          |

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

 **MITSUBISHI MOTORS CORPORATION**

|                                   |           |
|-----------------------------------|-----------|
| General .....                     | <b>00</b> |
| Engine .....                      | <b>11</b> |
| Engine Lubrication .....          | <b>12</b> |
| Fuel .....                        | <b>13</b> |
| Engine Cooling .....              | <b>14</b> |
| Intake and Exhaust .....          | <b>15</b> |
| Engine Electrical .....           | <b>16</b> |
| Engine and Emission Control ..... | <b>17</b> |
| Clutch .....                      | <b>21</b> |
| Automatic Transmission .....      | <b>23</b> |
| Front Suspension .....            | <b>33</b> |
| Service Brakes .....              | <b>35</b> |
| Steering .....                    | <b>37</b> |
| Exterior .....                    | <b>51</b> |
| Chassis Electrical .....          | <b>54</b> |