


SUPER MULTIPLE JUNCTION (SMJ)

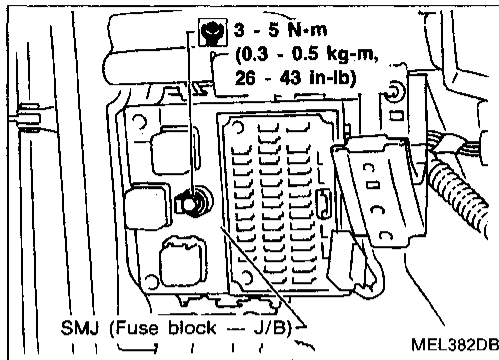


INSTALLATION

To install FUSE BLOCK (J/B) and SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.




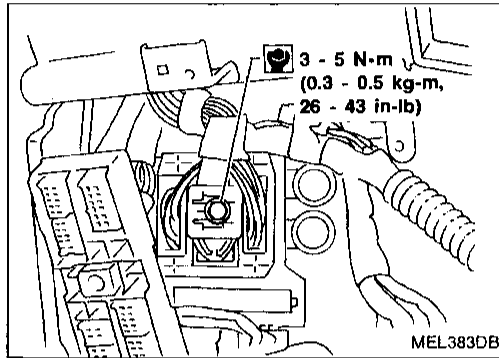


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement



MAIN HARNESS

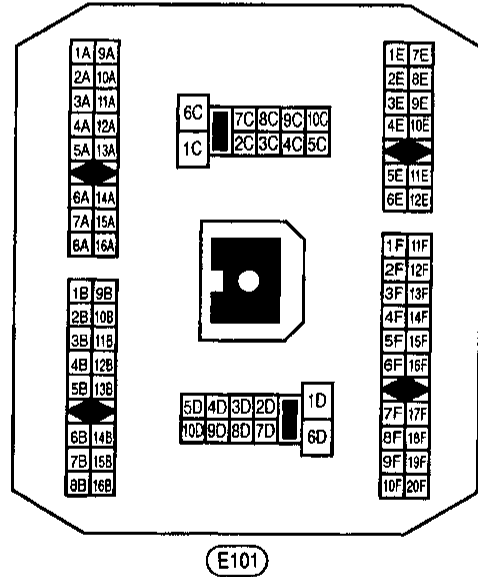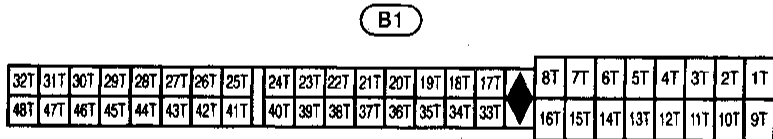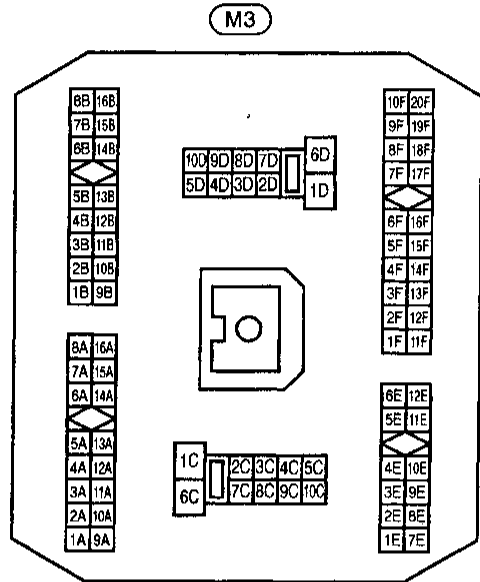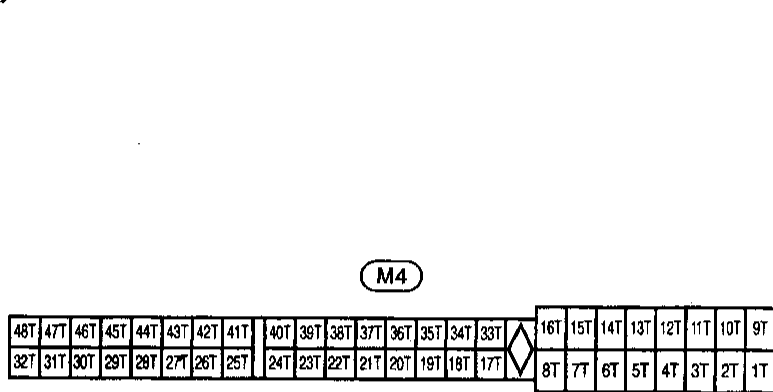


BODY HARNESS

ENGINE ROOM HARNESS


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

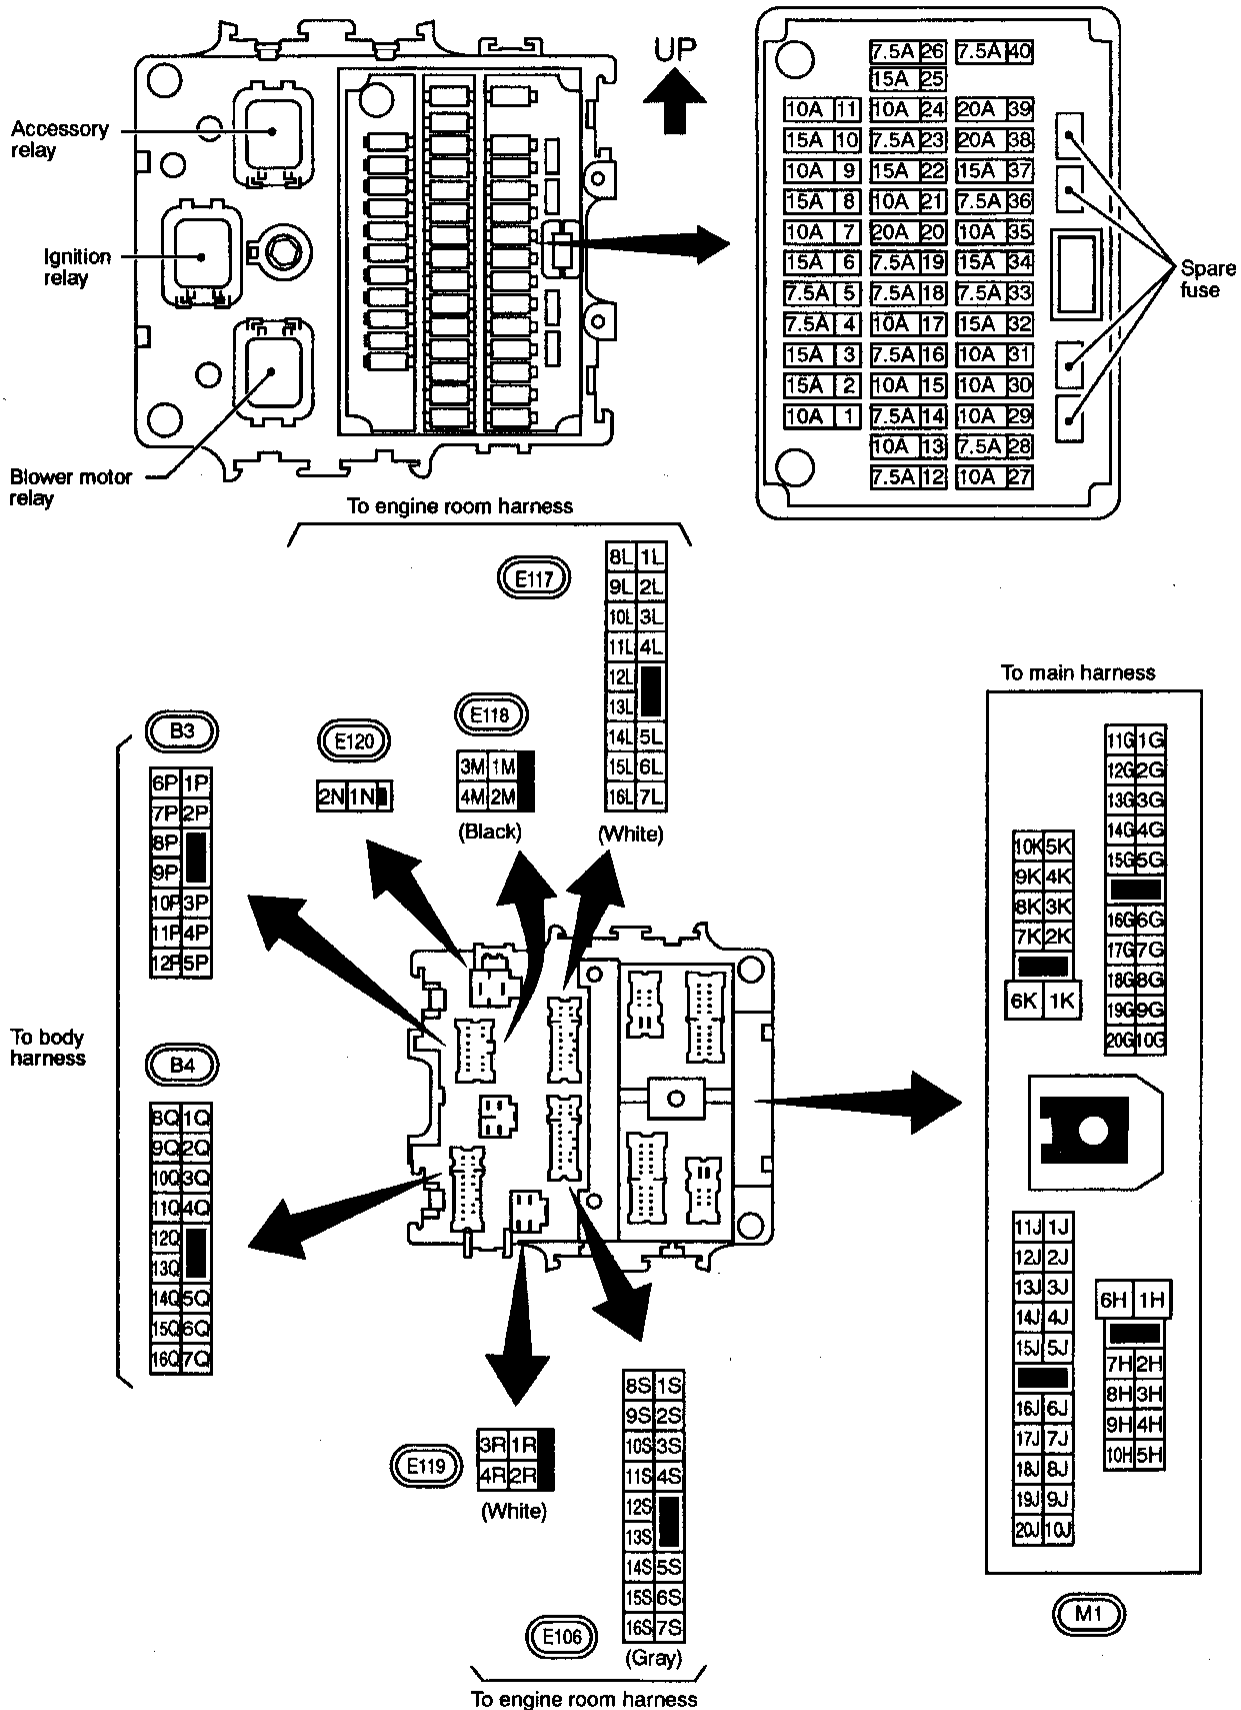

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

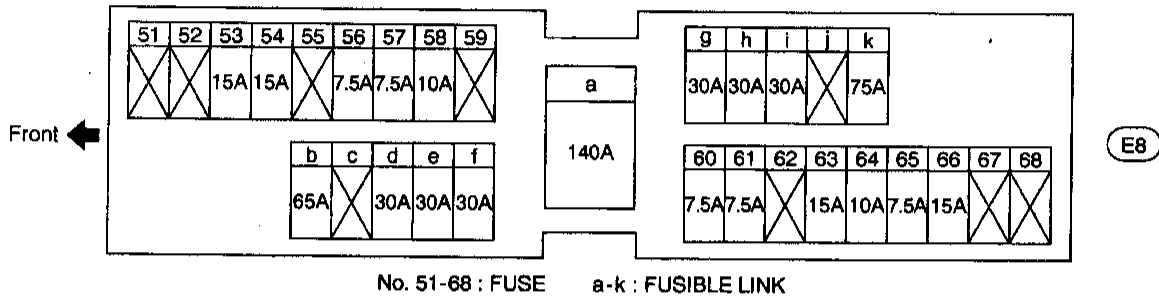

ELECTRICAL UNITS

Terminal Arrangement

ECM (ECCS CONTROL MODULE) (F101)

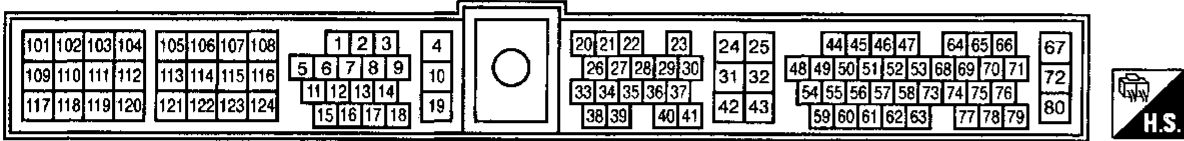

A/T CONTROL UNIT (F103)



ABS CONTROL UNIT (E114)



BCM (BODY CONTROL MODULE) (M48)



A/C AUTO AMP. (In BCM)



AIR BAG DIAGNOSIS SENSOR UNIT (Z4)



JOINT CONNECTOR (J/C)

Terminal Arrangement

