

# ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

## A

Abs (anti-lock brake system) .....	BR-23
ABS - Wiring diagram .....	BR-32
A/C air flow.....	HA-17
A/C component layout.....	HA-16
A/C compressor clutch removal and installation.....	HA-101
A/C compressor description.....	HA-12
A/C compressor mounting .....	HA-100
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment .....	HA-79
A/C control operation .....	HA-19
A/C diagnostic work flow .....	HA-22
A/C harness layout.....	HA-53
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-92
A/C HFC134a (R134a) system service tools .....	HA-7
A/C HFC134a system service equip- ment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-94
A/C operational check .....	HA-23
A/C performance chart .....	HA-48
A/C performance test diagnoses .....	HA-46
A/C relay .....	HA-78
A/C self-diagnoses .....	HA-28
A/C service data specification .....	HA-104
A/C symptom chart .....	HA-26
A/C system description .....	HA-80
A/C trouble diagnoses.....	HA-22
A/C, A - Wiring diagram .....	HA-56
Absolute pressure sensor .....	EC-109
Accelerator control system .....	FE-2
Accelerator wire adjustment .....	FE-2
Air bag.....	RS-5
Air bag disposal .....	RS-13
Air bleeding (hydraulic clutch) .....	CL-5
Air bleeding for brake system .....	BR-5
Air cleaner filter replacement .....	MA-13
Air conditioner cut control .....	EC-19
Air flow meter - See Mass air flow sensor .....	EC-103
Air mix door control linkage adjustment .....	HA-79
Air mix. door motor .....	HA-85
Air spoiler, rear .....	BT-20
Alternator .....	EL-39
Ambient sensor .....	HA-82
Angular tightening application .....	EM-2
Antenna.....	EL-132
Anti-lock brake system - See ABS .....	BR-23
Anti-lock brake system - Wiring diagram .....	BR-32
ASCD (automatic speed control device) .....	EL-148
ASCD - Wiring diagram .....	EL-153
A/T control.....	EC-264

AT control unit .....	AT-55
AT diagnosis communication line .....	EC-336
AT fluid temperature sensor .....	AT-67
AT removal and installation .....	AT-141
AT self-diagnoses .....	AT-26
AT shift lock system .....	AT-131
A/T shift lock system - Wiring diagram .....	AT-132
A/T - Wiring diagram .....	AT-11
AUDIO - Wiring diagram .....	EL-129
Audio .....	EL-127
Audio and A/C control removal and installation - See Instrument panel .....	BT-12
Auto air conditioner - Wiring diagram .....	HA-56
Auto anti-dazzling inside mirror .....	EL-146
Automatic amplifier .....	HA-83
Automatic speed control system - See ASCD .....	EL-148
Automatic transaxle number .....	GI-37
Automatic transmission fluid replacement .....	MA-18
Auxiliary air control (AAC) .....	EC-254

## B

Back-up lamp .....	EL-65
Back-up lamp switch (MT) .....	MT-7
BACK/L - Wiring diagram .....	EL-65
Battery .....	EL-25
Baulk ring (MT) .....	MT-11
Blower motor .....	HA-78
Board-on lift .....	GI-39
Body alignment .....	BT-35
BPT valve .....	EC-220
Brake booster .....	BR-9
Brake control valve (Proportioning valve) .....	BR-4
Brake fluid change .....	BR-5
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-5
Brake hydraulic line .....	BR-3
Brake inspection .....	MA-19
Brake lines and cables inspection .....	MA-19
Brake master cylinder .....	BR-7
Brake pedal .....	BR-6
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BUZZER - Wiring diagram .....	EL-96

## C

Camshaft inspection .....	EM-37
Camshaft position sensor (CMPS) .....	EC-204
Camshaft position sensor (PHASE) .....	EC-204
Canister-See EVAP canister .....	EC-21
CHARGE - Wiring diagram .....	EL-36
Charging system .....	EL-35
Chassis and body maintenance .....	MA-17
Cigarette lighter .....	EL-116

# ALPHABETICAL INDEX

Circuit breaker .....	EL-19
Clock .....	EL-116
Closed loop control .....	EC-137
Closed throttle position switch .....	EC-260
Clutch cover.....	CL-9
Clutch disc .....	CL-9
Clutch fluid level .....	MA-17
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-4
Clutch release bearing .....	CL-8
Clutch withdrawal lever .....	CL-8
Coil spring (front) .....	FA-21
Coil spring (rear) .....	RA-10
Collision diagnosis .....	RS-36
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-20
Combination meter .....	EL-82
Combination meter removal and instal- lation - See Instrument panel.....	BT-12
Combination switch.....	EL-40
COMM - Wiring diagram.....	EL-199
Compression pressure.....	EM-10
Compressor clutch removal and installation.....	HA-101
Compressor descriptioin .....	HA-12
Compressor mounting.....	HA-100
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-6
Connecting rod .....	EM-56
Connecting rod bearing clearance .....	EM-60
Connecting rod bushing clearance.....	EM-61
Console box - See Instrument panel.....	BT-12
CONSULT for ABS .....	BR-39
CONSULT for ECCS .....	EC-59
CONSULT general information.....	GI-34
Control lever (MT) .....	MT-9
Control valve (AT) .....	AT-168
Converter housing installation.....	AT-142
Coolant mixture ratio .....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan control .....	EC-339
Cooling fan control system.....	LC-15
Cooling fan motor.....	EC-351
Cooling fan relay .....	EC-351
CORNER - Wiring diagram .....	EL-70
Cornering lamp .....	EL-69
Coupling sleeve (MT) .....	MT-11
Crankshaft.....	EM-58
Crankshaft position sensor (POS) .....	EC-198
Crankshaft position sensor (POS) chipping .....	EC-301
Crankshaft position sensor (REF).....	EC-296
Cruise control - See ASCD.....	EL-148
Cylinder block .....	EM-54
Cylinder head.....	EM-34
Cylinder head bolt tightening.....	EM-43

**D**

Daytime light system .....	EL-46
Daytime running light - See Daytime light system .....	EL-46
DEF - Wiring diagram .....	EL-119
Detonation sensor - See Knock sensor.....	EC-195
Diagnosis sensor unit.....	RS-8
Differential gear (FF AT).....	AT-211, 215
Differential gear (FF MT).....	MT-11, 25
Dimensions .....	GI-38
Direct ignition system.....	EC-29
Distributor ignition (DI) system.....	EC-18
D/LOCK - Wiring diagram.....	EL-221
Door mirror.....	BT-34
Door trim .....	BT-17
Door, front .....	BT-10
Door, rear .....	BT-11
Drive belt inspection .....	MA-10
Drive plate runout .....	EM-61
Drive shaft (front) .....	FA-12
Dropping resistor (AT) .....	AT-96
DTRL - Wiring diagram.....	EL-48

**E**

ECCS basic inspection .....	EC-78
ECCS circuit diagram.....	EC-9
ECCS component parts location .....	EC-11
ECCS on board diagnostic system.....	EC-38
ECCS system diagram and chart .....	EC-10
ECM input/output signal.....	EC-90
EGR control (EGRC) - BPT valve .....	EC-219
EGR control (EGRC) - solenoid valve .....	EC-307
EGR control valve .....	EC-218
EGR temperature sensor .....	EC-312
EGR valve & EVAP canister purge control solenoid valve .....	EC-311
Electric sun roof.....	EL-141
Electrical load signal circuit .....	EC-375
Electrical unit .....	Foldout
Electronic ignition system .....	EC-18
Engine compartment.....	BT-35
Engine control module (ECM) .....	EC-268
Engine coolant temperature sensor (ECTS).....	EC-122, 132
Engine mounting control (Front) .....	EC-364
Engine oil filter replacement .....	MA-14
Engine oil replacement .....	MA-14
Engine outer component parts .....	EM-6
Engine removal .....	EM-51
Engine room - See Engine compartment .....	BT-35
Engine serial number .....	GI-37
EVAP canister .....	EC-21
EVAP canister purge control valve .....	EC-232
EVAP canister purge control valve inspection .....	EC-322

**GI**

**MA**

**EM**

**LC**

**EC**

**FE**

**CL**

**MT**

**AT**

**FA**

**RA**

**BR**

**ST**

**RS**

**BT**

**HA**

**EL**

**IDX**

## ALPHABETICAL INDEX

EVAP canister vent control valve.....	EC-240
EVAP control system (small leak) diagnosis.....	EC-224
EVAP control system purge flow moni- toring diagnosis .....	EC-329
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-21
Exhaust system .....	FE-4
Exhaust system inspection .....	MA-17
Exterior.....	BT-20
Exterior lamp.....	EL-55

### F

Fan control amp.....	HA-91
Fast idle cam (FIC) inspection and adjustment .....	EC-28
F/FOG - Wiring diagram .....	EL-67
Final drive (FF AT) .....	AT-211, 215
Final drive (FF MT) .....	MT-11, 25
Floor trim.....	BT-15
Fluid temperature sensor (AT) .....	AT-67
Fluids .....	MA-8
Flywheel (clutch).....	CL-10
Flywheel runout .....	EM-61
Fog lamp, front .....	EL-66
Fog lamp, front, removal and installation .....	BT-5
Fork rod (MT) .....	MT-12
Forward clutch.....	AT-189
Freeze frame data.....	EC-40
Front axle.....	FA-8
Front bumper .....	BT-5
Front combination lamp removal and installation .....	BT-5
Front disc brake.....	BR-11
Front door .....	BT-10
Front engine mounting control .....	EC-364
Front fog lamp .....	EL-66
Front fog lamp removal and installation .....	BT-5
Front heated oxygen sensor (HO2S) (Left bank) .....	EC-158
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-139
Front heated oxygen sensor (HO2S).....	EC-139
Front heated oxygen sensor (HO2S) monitor.....	EC-50, 53
Front heated oxygen sensor heater (Left bank) .....	EC-164
Front heated oxygen sensor heater (Right bank) .....	EC-144
Front passenger air bag.....	RS-5
Front seat.....	BT-26
Front seat belt .....	RS-3
Front suspension .....	FA-20
Front washer.....	EL-104
Front wiper .....	EL-104
Fuel cut control (at no load & high engine speed).....	EC-20
Fuel filler lid .....	BT-8

Fuel filter replacement .....	MA-12
Fuel gauge .....	EL-83
Fuel injection system (Left bank).....	EC-178, 183
Fuel injection system (Right bank) .....	EC-168, 173
Fuel lid opener, electric .....	EL-147
Fuel line inspection .....	MA-12
Fuel pressure check.....	EC-26
Fuel pressure release .....	EC-26
Fuel pump .....	EC-363
Fuel pump control module .....	EC-281, 359
Fuel pump relay .....	EC-363
Fuel system .....	FE-3
Fuse .....	EL-19
Fusible link .....	EL-19

### G

Garage jack and safety stand .....	GI-40
Gears (MT) .....	MT-11
Generic scan tool (GST) .....	EC-72
Grille - See Exterior .....	BT-20
Ground distribution .....	EL-20

### H

Harness connector.....	EL-3
Harness layout.....	EL-307
Hazard warning lamp .....	EL-57
Headlamp.....	EL-43
Headlamp removal and installation .....	BT-5
Headlining - See Roof trim .....	BT-18
Heated oxygen sensor (HO2S) (Front) (Left bank) .....	EC-158
Heated oxygen sensor (HO2S) (Front) (Right bank) .....	EC-139
Heated oxygen sensor (HO2S) (front) .....	EC-139
Heated oxygen sensor (HO2S) monitor .....	EC-53
Heated oxygen sensor (rear) .....	EC-148
Heated oxygen sensor heater (Front)(Left bank).....	EC-164
Heated oxygen sensor heater (Front)(Right bank) .....	EC-144
Heated oxygen sensor monitor (HO2S) (front) .....	EC-53
Heated seat.....	BT-27, EL-144
Height (Dimensions) .....	GI-38
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-92
HFC134a (R134a) system service tools .....	HA-7
HFC134a system service equipment precaution .....	HA-9
High clutch.....	AT-185
H/LAMP - Wiring diagram.....	EL-44
Hood .....	BT-5
HORN - Wiring diagram.....	EL-116
Horn.....	EL-116

# ALPHABETICAL INDEX

How to erase DTC for ECCS OBD system .....	EC-48
H/PHON - Wiring diagram .....	EL-139
HSEAT - Wiring diagram .....	EL-144

I

IACV - FICD solenoid valve .....	EC-374
IACV - AAC valve inspection .....	EC-259
IACV - FICD solenoid valve .....	EC-372
Identification plate .....	GI-37
Idle air control valve (IACV) .....	EC-254
Idle mixture ratio .....	EC-31
Idle speed .....	EC-31
Ignition coil .....	EC-295
Ignition timing .....	EC-31
ILL - Wiring diagram .....	EL-75
Illumination .....	EL-73, 284
I/MIRR - Wiring diagram .....	EL-146
In vehicle sensor .....	HA-81
Inhibitor switch .....	AT-63
Injector .....	EC-356
Injector removal and installation .....	EC-27
Input shaft .....	MT-11, 16
Instrument panel .....	BT-12
INT/L - Wiring diagram .....	EL-79
Intake air temperature sensor .....	EC-116
Intake door control linkage adjustment .....	HA-79
Intake door motor .....	HA-89
Intake manifold .....	EM-8
Intake sensor .....	HA-83
Integrated homelink transmitter .....	EL-302
Interior .....	BT-15
Interior lamp .....	EL-73
Interior lamp on-off control .....	EL-288
IVMS (In-Vehicle Multiplexing System) .....	EL-172
IVMS-System description .....	EL-172
IVMS-Trouble diagnoses .....	EL-188
IVMS-Trouble diagnoses system .....	EL-177

J

Jacking points .....	GI-40
Junction box (J/B) .....	Foldout

K

Key illumination .....	EL-288
Keyless entry system - See Multi-remote control system .....	EL-238
Knock sensor (KS) .....	EC-195

L

Length (Dimensions) .....	GI-38
---------------------------	-------

License lamp .....	EL-55
Lifting points .....	GI-41
Line pressure solenoid valve .....	AT-85, 93, 96
Line pressure test (AT) .....	AT-129
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-304
Low and reverse brake .....	AT-195
Lubricant (R134a) A/C .....	HA-94
Lubricants .....	MA-8
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches .....	MA-21

M

Magnet clutch .....	HA-101
Main drive gear (MT) .....	MT-11
Mainshaft (MT) .....	MT-11, 21
Maintenance (engine) .....	MA-10
Maintenance .....	MA-1
Malfunction indicator lamp (MIL) .....	EC-50
Manual transaxle number .....	GI-37
Manual transmission oil replacement .....	MA-17
MAP/BARO switch solenoid valve .....	EC-275
Mass air flow sensor (MAFS) .....	EC-103
Master cylinder (brake) .....	BR-7
Master cylinder (clutch) .....	CL-6
METER - Wiring diagram .....	EL-83
Meter .....	EL-81
MIL & Data link connectors circuit .....	EC-378
MIRROR - Wiring diagram .....	EL-145
Mirror, door .....	BT-34
Mirror, out side .....	BT-34
Misfire .....	EC-191
Mode door control linkage adjustment .....	HA-79
Mode door motor .....	HA-87
Model variation .....	GI-35
Molding - See Exterior .....	BT-20
MT removal and installation .....	MT-7
MULTI - Wiring diagram .....	EL-241
Multi-remote control system .....	EL-238
Multiport fuel injection (MFI) system .....	EC-16

N

Neutral position switch (MT) .....	MT-7
------------------------------------	------

O

Oil pan (engine) .....	EM-11
Oil pressure (engine) .....	LC-5
Oil pump (AT) .....	AT-164
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-31
Operating cylinder (clutch) .....	CL-7
Out side mirror .....	BT-34

## ALPHABETICAL INDEX

Overdrive control switch.....	AT-63
Overrun clutch.....	AT-189
Overrun clutch solenoid valve .....	AT-85, 93, 107
Oxygen sensor monitor (O2S) (front) .....	EC-53

**P**

P/ANT - Wiring diagram.....	EL-133
Park/Neutral position switch.....	EC-270
Parking brake control .....	BR-21
Parking lamp .....	EL-55
PCV (positive crankcase ventilation) .....	EC-25
PHONE - Wiring diagram .....	EL-138
Piston assembly.....	EM-62
Piston pin inspection.....	EM-55
Piston ring inspection .....	EM-56
Piston to bore clearance.....	EM-57
POWER - Wiring diagram .....	EL-7
Power antenna.....	EL-132
Power door lock .....	EL-219
Power door mirror.....	EL-145
Power seat.....	EL-142
Power steering fluid level.....	MA-20, ST-5
Power steering gear .....	ST-12
Power steering hydraulic pressure .....	ST-7
Power steering oil pressure switch....	EC-367, 371
Power steering oil pump.....	ST-22
Power steering system bleeding .....	ST-5
Power supply routing .....	EL-6
Power transistor & ignition coil .....	EC-288
Power transistor .....	EC-295
Power window.....	EL-205
Pressure plate - See Clutch cover .....	CL-9
Pressure test (AT).....	AT-129

**R**

Radiator .....	LC-15
Radio - See Audio .....	EL-127
Rear air spoiler .....	BT-20
Rear axle .....	RA-6
Rear bumper .....	BT-8
Rear combination lamp removal and installation .....	BT-20
Rear disc brake.....	BR-15
Rear door .....	BT-11
Rear heated oxygen sensor (HO2S) .....	EC-148
Rear heated oxygen sensor (HO2S) heater .....	EC-153
Rear seat .....	BT-28
Rear seat belt.....	RS-4
Rear suspension .....	RA-9
Rear window .....	BT-33
Rear window defogger.....	EL-118
Refrigerant connection precaution .....	HA-3
Refrigerant general precaution .....	HA-2
Refrigerant lines .....	HA-96
Refrigeration cycle.....	HA-11

Release bearing (clutch) .....	CL-8
Reverse clutch.....	AT-182
Reverse gear (MT) .....	MT-11
Reverse idler shaft (MT).....	MT-11
Reverse lamp switch (MT) - See Back-up lamp switch (MT).....	MT-7
Revolution sensor (AT).....	AT-69
Road wheel size .....	GI-38
Roof trim .....	BT-18
ROOM/L - Wiring diagram .....	EL-289

**S**

SAE J1979 - Mode 1 ~ 7 .....	EC-38, 73
Seal - See Exterior .....	BT-20
SEAT - Wiring diagram .....	EL-142
Seat belt inspection .....	MA-21
Seat belt, front .....	RS-3
Seat belt, rear .....	RS-4
Seat, front .....	BT-26
Seat, rear .....	BT-28
Self-diagnostic results .....	EC-50
SHIFT - Wiring diagram .....	AT-132
Shift control (MT) .....	MT-12
Shift fork (MT) .....	MT-12
Shift lock system .....	AT-131
Shift schedule .....	AT-49
Shift solenoid valve (AT) .....	AT-73, 76, 79, 85, 93, 99, 102
Shock absorber (rear) .....	RA-10
Side trim .....	BT-15
SMJ (super multiple junction) .....	Foldout
Spark plug replacement .....	MA-15
Speedometer .....	EL-83
Spiral cable .....	RS-8
Spot lamp .....	EL-79
Spring (Wheelarch) height .....	FA-5
SROOF - Wiring diagram .....	EL-141
SRS - See Supplemental Restraint System .....	RS-5

SRS - Wiring diagram .....	RS-20
SRS Trouble diagnoses .....	RS-17
Stabilizer bar (front) .....	FA-22
Stall test (AT).....	AT-126
Standardized relay .....	EL-4
START - Wiring diagram .....	EL-30
Starter .....	EL-34
Starting system .....	EL-29
Steering gear and linkage inspection .....	MA-20
Steering linkage .....	ST-12
Steering switch .....	EL-42
Steering wheel and column .....	ST-8
Steering wheel play .....	ST-4
Steering wheel turning force .....	ST-6
Step lamp .....	EL-296
STEP/L - Wiring diagram .....	EL-297
Stop lamp .....	EL-63
STOP/L - Wiring diagram .....	EL-63
Striking rod (MT) .....	MT-12
Strut (front) .....	FA-21

# ALPHABETICAL INDEX

Sunload sensor .....	HA-82
Sunroof .....	BT-29
Supplemental Restraint System.....	RS-5
SW/ILL - Wiring diagram .....	EL-285
Synchronizer (MT).....	MT-11
System readiness test (SRT) code .....	EC-40

## T

Tachometer .....	EL-83
Tail lamp.....	EL-55
TAIL/L - Wiring diagram .....	EL-55
Tank fuel temperature sensor .....	EC-188
Telephone .....	EL-138
THEFT - Wiring diagram.....	EL-264
Theft warning system .....	EL-258
Thermostat.....	LC-14
Three way catalyst .....	EC-221
Three way catalyst function (Left bank) .....	EC-221
Three way catalyst function (Right bank) .....	EC-221
Throttle bodies .....	EM-8
Throttle position sensor (TPS) .....	EC-126
Throttle position switch.....	AT-64
Throwout bearing - See Clutch release bearing .....	CL-8
Tie-rod.....	ST-16
Tie-rod ball joints .....	ST-16
Timing chain.....	EM-17
Tire rotation.....	MA-19
Tire size .....	GI-38
TLID - Wiring diagram .....	EL-147
Torque converter clutch solenoid valve .....	AT-85, 88, 93
Torque converter installation .....	AT-141
Tow truck towing.....	GI-42
Transmission case (MT).....	MT-10
TRANSMT - Wiring diagram.....	EL-302
Transverse link (front).....	FA-23
Tread-FR&RR (Dimensions) .....	GI-38
Trim .....	BT-15
Triple pressure switch .....	HA-11, 78
Trunk lid .....	BT-8
Trunk lid opener - See Trunk lid .....	BT-8
Trunk lid opener, electric .....	EL-147
Trunk lid trim .....	BT-19
Trunk room lamp.....	EL-79
Trunk room trim .....	BT-19
TURN - Wiring diagram .....	EL-59
Turn signal lamp .....	EL-57
Two trip detection logic .....	EC-38
Two-pole lift .....	GI-41

## U

Under body .....	BT-37
------------------	-------

## V

Vacuum cut valve .....	EC-321
Vacuum cut valve bypass valve.....	EC-316
Vacuum hose (brake system) .....	BR-10
Vacuum hose drawing (ECCS) .....	EC-14
Valve clearance.....	EM-47
Valve guide .....	EM-38
Valve seat .....	EM-40
Valve spring .....	EM-40
Vehicle identification number .....	GI-36
Vehicle Recovery. (Freeing a stuck vehicle).....	GI-42
Vehicle speed sensor (VSS) .....	EC-250
Viscosity number (SAE).....	MA-8
Viscous coupling (FF AT) .....	AT-215
Viscous coupling (FF MT) .....	MT-7, 11

## W

WARN - Wiring diagram .....	EL-90
Warning buzzer.....	EL-95
Warning lamps .....	EL-89
Washer, front.....	EL-104
Water pump .....	LC-9
Water temperature gauge .....	EL-83
Weatherstrip - See Exterior .....	BT-20
Wheel alignment (front) .....	FA-6
Wheel alignment (rear) .....	RA-5
Wheel balance .....	MA-19
Wheel bearing (front axle) .....	FA-6
Wheel bearing (rear) .....	RA-4
Wheel hub (rear) .....	RA-6
Wheel hub and steering knuckle .....	FA-8
Wheel sensors (ABS).....	BR-26
Wheel size .....	GI-38
Wheelarch height .....	FA-5
Wheelbase (Dimensions) .....	GI-38
Wide open & closed throttle position switch.....	EC-126
Width (Dimensions) .....	GI-38
WINDOW - Wiring diagram .....	EL-207
Window antenna .....	EL-135
Window, rear .....	BT-33
Windshield .....	BT-33
Windshield washer - See Front washer .....	EL-104
Windshield wiper - See Front wiper .....	EL-104
WIPER - Wiring diagram .....	EL-106
Wiper and washer .....	EL-104
Wiper, front .....	EL-104
Withdrawal lever (clutch) .....	CL-8
Wrist pin - See Piston pin inspection .....	EM-55