

# ALPHABETICAL INDEX

SECTION **IDX**

GI  
MA  
EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

---

## A

AAC/V - Wiring diagram.....	EC-432
ABS (anti-lock brake system).....	BR-39
ABS - Wiring diagram .....	BR-44
ABS sensor rotor .....	AX-19
ABS/TCS C/U signal .....	EC-484
Absolute pressure sensor .....	EC-160
A/C air flow.....	HA-26
A/C component layout.....	HA-20
A/C compressor clutch removal and installation .....	HA-112
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-10
A/C control operation (auto A/C) .....	HA-24
A/C diagnostic work flow (auto A/C) .....	HA-46
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-107
A/C HFC134a (R134a) system service tools.....	HA-11
A/C HFC134a system service equip- ment precaution.....	HA-7
A/C lubricant (R134a).....	HA-109
A/C operational check .....	HA-47
A/C performance chart .....	HA-84
A/C performance test diagnoses.....	HA-82
A/C relay.....	HA-80
A/C self-diagnoses (auto A/C).....	HA-36
A/C service data specification.....	HA-125
A/C system description (auto A/C) .....	HA-24
A/C trouble diagnoses (auto A/C) .....	HA-28
A/C, A - Wiring diagram .....	HA-31
Accelerator control system .....	FE-3
Air bag .....	RS-14
Air bag disposal.....	RS-28
Air bag precautions .....	GI-3
Air bleeding for brake system .....	BR-9
Air cleaner filter replacement.....	MA-17
Air conditioner cut control .....	EC-31
Air flow meter - See Mass air flow sensor .....	EC-152
Air mix door control linkage adjustment.....	HA-62
Air mix. door motor .....	HA-60, 106
Air spoiler, rear.....	BT-40
Alternator .....	SC-29
Ambient sensor .....	HA-93
Angular tightening application.....	EM-3
Antenna - See Power antenna .....	EL-218
Anti-lock brake system - See ABS .....	BR-39
Anti-lock brake system - Wiring diagram .....	BR-44
AP/SEN - Wiring diagram .....	EC-162
ASCD (automatic speed control device) .....	EL-276
ASCD - Wiring diagram .....	EL-280
A/T - Wiring diagram .....	AT-16
A/T - Wiring diagram - AT - FTS .....	AT-110
A/T - Wiring diagram - AT - MAIN.....	AT-99

A/T - Wiring diagram - AT - PNP/SW.....	AT-104
A/T - Wiring diagram - AT - VSS A/T .....	AT-116
A/T control .....	EC-446
A/T diagnosis communication line.....	EC-594
A/T fluid temperature sensor.....	AT-108
A/T IND - Wiring diagram .....	EL-173
AT indicator lamp .....	EL-173
A/T self-diagnoses .....	AT-41, 49, 50
A/T shift lock system .....	AT-270
A/T shift lock system - Wiring diagram .....	AT-271
A/T trouble diagnoses .....	AT-55
A/T Wiring diagram - AT - ENG SS .....	AT-121
A/T Wiring diagram AT - 1ST .....	AT-127
A/T Wiring diagram AT - 2ND .....	AT-133
A/T Wiring diagram AT - 3RD .....	AT-139
A/T Wiring diagram AT - 4TH.....	AT-146
A/T Wiring diagram AT - BA/FTS .....	AT-198
A/T Wiring diagram AT - LPSV .....	AT-168
A/T Wiring diagram AT - NONDTC .....	AT-216
A/T Wiring diagram AT - OVRCCSV .....	AT-193
A/T Wiring diagram AT - SSV/A .....	AT-174
A/T Wiring diagram AT - SSV/B .....	AT-179
A/T Wiring diagram AT - TCCSIG .....	AT-159
A/T Wiring diagram AT - TCV .....	AT-153
A/T Wiring diagram AT - TPS.....	AT-185
A/T Wiring diagram AT - VSSMTR .....	AT-205
AT/C - Wiring diagram.....	EC-447
ATDIAG - Wiring diagram.....	EC-595
Audio .....	EL-209
AUDIO - Wiring diagram .....	EL-211
Audio and A/C control removal and installation - See Instrument panel .....	BT-28
AUT/DP - Wiring diagram .....	EL-235
Auto air conditioner - Wiring diagram .....	HA-31
Auto anti-dazzling inside mirror .....	EL-227
Automatic amplifier.....	HA-34, 50
Automatic drive positioner .....	EL-230
Automatic speed control system - See ASCD .....	EL-276
Automatic transmission fluid replacement.....	MA-22
Automatic transmission number .....	GI-44
Auxiliary air control (AAC) valve .....	EC-429

## B

Back-up lamp .....	EL-94
BACK/L - Wiring diagram.....	EL-94
Ball joint (front) .....	SU-13
Base idle air volume initialiging.....	EC-66
Basic inspection .....	EC-109
Battery .....	SC-4
Battery/Starting/Charging System Tester.....	SC-7, 12, 22
Blower and cooling unit .....	HA-117
Blower motor .....	HA-66
Board-on lift .....	GI-46
Body alignment .....	BT-62
Brake booster .....	BR-21

# ALPHABETICAL INDEX

---

Brake control valve (Proportioning valve) .....	BR-12
Brake fluid change .....	BR-8
Brake fluid level .....	MA-24
Brake fluid level and line check .....	BR-8
Brake hydraulic line .....	BR-10
Brake inspection .....	MA-24
Brake lines and cables inspection .....	MA-24
Brake master cylinder .....	BR-15
Brake pedal .....	BR-13
Bulb specifications .....	EL-548
Bumper, front .....	BT-13
Bumper, rear .....	BT-16
BYPS/V - Wiring diagram .....	EC-578, 585

## C

Camshaft inspection .....	EM-41
Camshaft position sensor (PHASE) .....	EC-351
Canister-See EVAP canister .....	EC-32
CHARGE - Wiring diagram .....	SC-21
Charging system .....	SC-20
Chassis and body maintenance .....	MA-21
CHIME - Wiring diagram .....	EL-177
CIGAR - Wiring diagram .....	EL-196
Cigarette lighter.....	EL-196
Circuit breaker.....	EL-18
Clock .....	EL-197
CLOCK - Wiring diagram.....	EL-197
Closed loop control (Left bank) .....	EC-476
Closed loop control (Right bank) .....	EC-476
Closed throttle position switch .....	EC-438
Coil spring (front).....	SU-9
Coil spring (rear) .....	SU-23
Collision diagnosis.....	RS-65
Combination lamp, rear, removal and installation .....	BT-40
Combination meter.....	EL-147
Combination meter removal and installation - See Instrument panel.....	BT-28
Combination switch .....	EL-31
COMPAS - Wiring diagram .....	EL-166
Compass .....	EL-164
Component Location (auto A/C).....	HA-28
Compression pressure.....	EM-12
Compressor clutch removal and installation .....	HA-112
Compressor precaution .....	HA-7
Compressor special service tool .....	HA-10
Connecting rod.....	EM-62
Connecting rod bearing clearance .....	EM-67
Connecting rod bushing clearance .....	EM-67
Connector inspection .....	GI-21
Console box - See Instrument panel.....	BT-28
CONSULT for ABS .....	BR-50
CONSULT for engine .....	EC-89
CONSULT for TCS .....	BR-93
Control valve (A/T) .....	AT-312
Converter housing installation.....	AT-375
COOL/F - Wiring diagram .....	EC-316, 492

Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine) .....	LC-9
Cooling fan control .....	EC-489
Cooling fan control system .....	LC-18
CORNER - Wiring diagram .....	EL-110
Cornering lamp .....	EL-108
"Crankcase emission control system - See positive crankcase ventilation".....	EC-47
Crankshaft .....	EM-64
Crankshaft position sensor (POS) .....	EC-343
Crankshaft position sensor (POS) chipping .....	EC-523
Crankshaft position sensor (REF) .....	EC-517
Crash zone sensor .....	RS-21
Cruise control - See ASCD .....	EL-276
Cylinder block .....	EM-59
Cylinder head .....	EM-38
Cylinder head bolt tightening .....	EM-48

## D

Data link connector for Consult.....	EC-89
Daytime light system .....	EL-60, 72
Daytime running light - See Daytime light system .....	EL-60, 72
DEF - Wiring diagram .....	EL-199
Detonation sensor - See Knock sensor .....	EC-338
Diagnosis sensor unit .....	RS-20
Diagnostic trouble code (DTC) for OBD system .....	EC-8, 69
Diagnostic trouble code (DTC) inspection priority chart .....	EC-121
Differential gear (FF A/T) .....	AT-356
Dimensions .....	GI-45
D/LOCK - Wiring diagram .....	EL-320
Dome light - See Interior lamp .....	EL-122
Door glass .....	BT-20
Door lock.....	BT-24
Door mirror .....	BT-60
Door trim .....	BT-35
Door, front .....	BT-19
Door, rear .....	BT-19
Drive plate runout .....	EM-68
Drive shaft (front) .....	AX-9
Dropping resistor (A/T) .....	AT-166
DTC work support .....	EC-101
DTRL - Wiring diagram .....	EL-64, 76

## E

ECM input/output signal .....	EC-132
ECTS - Wiring diagram .....	EC-173, 189
Electric sun roof .....	EL-221
Electrical diagnoses .....	GI-24
Electrical ignition system .....	EC-30
Electrical unit .....	Foldout
Electrical units location .....	EL-520

## ALPHABETICAL INDEX

---

EMNT - Wiring diagram.....	EC-625
Engine compartment.....	BT-63
Engine control circuit diagram.....	EC-24
Engine control component parts location .....	EC-20
Engine control module (ECM).....	EC-449
Engine control system diagram and chart.....	EC-25
Engine coolant temperature sensor (ECTS).....	EC-171, 187
Engine fail-safe system .....	EC-122
Engine mounting control (Front) .....	EC-624
Engine oil filter replacement .....	MA-18
Engine oil precautions .....	GI-7
Engine oil replacement .....	MA-17
Engine outer component parts .....	EM-9
Engine removal.....	EM-56
Engine room - See Engine compartment.....	BT-63
Engine serial number .....	GI-44
EVAP canister.....	EC-33
EVAP canister purge volume control solenoid valve.....	EC-32, 377, 533
EVAP canister vent control valve .....	EC-383, 545, 564
EVAP control system (small leak) diagnosis .....	EC-362, 402, 531
EVAP control system pressure sensor.....	EC-390
EVAP control system purge flow moni- toring diagnosis.....	EC-553
EVAP vapor lines inspection .....	MA-20
Evaporative emission (EVAP) system.....	EC-32
Exhaust system .....	FE-10
Exhaust system inspection .....	MA-21
Exterior.....	BT-40

### F

Fan control amp. ....	HA-68
F/FOG - Wiring diagram .....	EL-96
Final drive (FF A/T) .....	AT-356
Finisher, interior - See Trim .....	BT-32
Finisher, trunk lid.....	BT-39
F/LID - Wiring diagram .....	EL-228
Floor trim .....	BT-32
Fluid temperature sensor (A/T) .....	AT-108
Fluids.....	MA-11
FO2H-L - Wiring diagram .....	EC-242
FO2H-R - Wiring diagram .....	EC-241
Fog lamp, front.....	EL-95
Fog lamp, front, removal and installation .....	BT-13
Forward clutch.....	AT-334
F/PUMP - Wiring diagram .....	EC-619
Freeze frame data.....	EC-69
FRO2LH - Wiring diagram .....	EC-196, 222, 234
FRO2RH - Wiring diagram.....	EC-195, 221, 233
Front axle.....	AX-2
Front bumper .....	BT-13

Front combination lamp removal and installation .....	BT-13
Front disc brake .....	BR-24
Front door .....	BT-19
Front fog lamp.....	EL-95
Front fog lamp removal and installation .....	BT-13
Front heated oxygen sensor (HO2S) (Left bank).....	EC-192, 202, 210, 218, 231
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-192, 202, 210, 218, 231
Front heated oxygen sensor heater (Left bank).....	EC-239
Front heated oxygen sensor heater (Right bank) .....	EC-239
Front seat.....	BT-46
Front seat belt .....	RS-5
Front suspension.....	SU-2
Front washer .....	EL-190
Front wiper .....	EL-190
Fuel cut control (at no load & high engine speed) .....	EC-32
Fuel gauge .....	EL-147
Fuel injection system (Left bank) .....	EC-292, 300
Fuel injection system (Right bank) .....	EC-292, 300
Fuel lid opener, electric.....	EL-228
Fuel line inspection .....	MA-16
Fuel precautions .....	GI-8
Fuel pressure check.....	EC-49
Fuel pressure regulator .....	EC-50
Fuel pressure release .....	EC-49
Fuel pump .....	EC-618
Fuel system .....	FE-4
Fuel tank temperature sensor .....	EC-307
Fuel tank vacuum relief valve .....	EC-33
FUELLH - Wiring diagram.....	EC-295, 303
FUELRH - Wiring diagram .....	EC-294, 302
Fuse .....	EL-18
Fuse block .....	Foldout
Fusible link .....	EL-18

### G

Garage jack and safety stand .....	GI-47
Gauges.....	EL-147
Generator - See Alternator .....	SC-29
Generic scan tool (GST) .....	EC-103
Glass .....	BT-20
Grease.....	MA-11
Ground distribution.....	EL-19

### H

Harness connector .....	EL-6
Harness connector inspection .....	GI-21
Harness layout .....	EL-525
Hazard warning lamp .....	EL-103
Headlamp.....	EL-34, 46
Headlamp removal and installation .....	BT-13

# ALPHABETICAL INDEX

---

Headlining - See Roof trim .....	BT-37
Heated seat.....	BT-48, EL-268
Heater unit (heater core) .....	HA-116
Height (Dimensions) .....	GI-45
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-107
HFC134a (R134a) system service tools .....	HA-11
HFC134a system service equipment precaution .....	HA-7
High clutch.....	AT-329
H/LAMP - Wiring diagram.....	EL-38, 51
Hood.....	BT-13
Horn .....	EL-195
HORN - Wiring diagram.....	EL-195
How to erase DTC for OBD system.....	EC-80
HSEAT - Wiring diagram.....	EL-268

## I

IACV-AAC valve .....	EC-429
IATS - Wiring diagram .....	EC-168
Identification plate .....	GI-44
Idle air control valve (IACV) .....	EC-429
Idle mixture ratio.....	EC-53
Idle speed.....	EC-53
IGN/SG - Wiring diagram .....	EC-508
Ignition control system .....	EC-506
Ignition timing .....	EC-53
ILL - Wiring diagram.....	EL-115
Illumination .....	EL-113
I/MIRR - Wiring diagram .....	EL-227
In vehicle sensor .....	HA-97
INFINITI COMMUNICATOR.....	EL-432
Infiniti communicator (IVCS) .....	EL-432
INJECT - Wiring diagram .....	EC-609
Injector.....	EC-608
Injector removal and installation .....	EC-51
Instrument panel .....	BT-28
INT/L - Wiring diagram.....	EL-126
Intake air temperature sensor .....	EC-166
Intake door control linkage adjustment .....	HA-65
Intake door motor .....	HA-63
Intake manifold .....	EM-11
Intake sensor.....	HA-104
Integrated homelink transmitter .....	EL-409
Interior .....	BT-32
Interior lamp .....	EL-122
Interior lamp on-off control.....	EL-124
IVCS - Wiring diagram.....	EL-441
IVIS (Infiniti vehicle immobilizer system) .....	EL-412

## J

Jacking points .....	GI-47
Joint connector (J/C) .....	Foldout

Junction box (J/B).....	Foldout
-------------------------	---------

## K

Keyless entry system - See Multi-re- mote control system .....	EL-337
Knock sensor (KS) .....	EC-338
Knuckle spindle .....	AX-5
KS - Wiring diagram.....	EC-339

## L

Length (Dimensions) .....	GI-45
License lamp .....	EL-83
Lifting points .....	GI-48
Line pressure solenoid valve .....	AT-166
Line pressure test (A/T) .....	AT-65
Liquid gasket application .....	EM-3
LOAD - Wiring diagram .....	EC-637
Location of electrical units .....	EL-520
Lock, door .....	BT-24
Low and reverse brake .....	AT-339
Lubricant (R134a) A/C.....	HA-109
Lubricants .....	MA-11
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches .....	MA-26

## M

MAFS - Wiring diagram .....	EC-156
Magnet clutch .....	HA-75, 112
MAIN - Wiring diagram.....	EC-145
Maintenance (engine) .....	MA-13
MAJOR OVERHALL.....	AT-286
Malfunction indicator lamp (MIL) .....	EC-82
Mass air flow sensor (MAFS).....	EC-152
Master cylinder (brake) .....	BR-15
Meter .....	EL-147
METER - Wiring diagram.....	EL-152
MIL & Data link connectors circuit .....	EC-643
MIL/DL - Wiring diagram .....	EC-643
MIRROR - Wiring diagram.....	EL-226
Mirror defogger .....	EL-198
Mirror, door.....	BT-60
Misfire .....	EC-330
Mode door control linkage adjustment .....	HA-58
Mode door motor .....	HA-53
Model variation .....	GI-42
Molding - See Exterior .....	BT-40
MULTI - Wiring diagram.....	EL-341
Multi-remote control system.....	EL-337
Multiport fuel injection (MFI) system .....	EC-28
Multiport fuel injection precautions .....	GI-6

## ALPHABETICAL INDEX

---

### N

NATS (Nissan anti-theft system) .....	GI-3
precautions .....	GI-3
NATS - Wiring diagram .....	EL-414
NAVI - wiring diagram .....	EL-477
Navigation System .....	EL-467
NVH troubleshooting (AX) .....	AX-3
NVH troubleshooting (BR) .....	BR-7
NVH troubleshooting (ST) .....	ST-5
NVH troubleshooting (SU) .....	SU-17
NVIS (Nissan vehicle immobilizer system) .....	EL-412
NVIS (Nissan vehicle immobilizer system) precautions .....	GI-3

### O

Oil change (capacity) .....	MA-11
Oil pan (engine) .....	EM-13
Oil pressure (engine) .....	LC-5
Oil pump (A/T) .....	AT-308
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-35
On board diagnostic system .....	EC-68
ORVR (On-board Refueling Vapor Recovery) .....	EC-38
Overdrive control switch .....	AT-260
Overrun clutch .....	AT-334
Overrun clutch solenoid valve .....	AT-191

### P

P/ANT - Wiring diagram .....	EL-218
Park/Neutral position switch .....	EC-597
Park/neutral position switch (A/T) .....	AT-102
Parking brake control .....	BR-37
Parking lamp .....	EL-83
PCV (positive crankcase ventilation) .....	EC-47
PGC/V - Wiring diagram .....	EC-379, 536
PHASE - Wiring diagram .....	EC-353
PHONE - Wiring diagram .....	EL-229
Piston assembly .....	EM-68
Piston pin inspection .....	EM-61
Piston ring inspection .....	EM-61
Piston to bore clearance .....	EM-63
PNP/SW - Wiring diagram .....	EC-599
POS - Wiring diagram .....	EC-345, 525
POWER - Wiring diagram .....	EL-11
Power antenna .....	EL-218
Power door lock .....	EL-318
Power door mirror .....	EL-226
Power seat .....	EL-264
Power steering fluid level .....	MA-25, ST-7
Power steering gear .....	ST-15
Power steering hydraulic pressure .....	ST-9

Power steering oil pressure switch .....	EC-628
Power steering oil pump .....	ST-25
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-10
Power transistor & ignition coil .....	EC-506
Power window .....	EL-300
PRE/SE - Wiring diagram .....	EC-392
Precautions (General) .....	GI-4
Pressure test (A/T) .....	AT-65
PST/SW - Wiring diagram .....	EC-629

### R

Radiator .....	LC-17, 18
Radio - See Audio .....	EL-209
Rear air spoiler .....	BT-40
Rear axle .....	AX-17
Rear axle (disc brake type) .....	AX-19
Rear bumper .....	BT-16
Rear combination lamp removal and installation .....	BT-40
Rear disc brake .....	BR-28
Rear door .....	BT-19
Rear heated oxygen sensor (HO2S) .....	EC-246, 256, 266, 276
Rear heated oxygen sensor (HO2S) heater .....	EC-285
Rear seat .....	BT-49
Rear seat belt .....	RS-7
Rear sunshade .....	EL-270
Rear suspension .....	SU-17
Rear window .....	BT-58
Rear window defogger .....	EL-198
REF - Wiring diagram .....	EC-519
Refrigerant pressure sensor .....	HA-80
Refrigerant connection precaution .....	HA-4
Refrigerant discharging evacuating charging .....	HA-107
Refrigerant general precaution .....	HA-3
Refrigerant lines .....	HA-118
Refrigerant pressure sensor .....	EC-633
Refrigeration cycle .....	HA-14
Removal and installation (A/T) .....	AT-283
Reverse clutch .....	AT-326
Revolution sensor (A/T) .....	AT-114
RO2H-L - Wiring diagram .....	EC-288
RO2H-R - Wiring diagram .....	EC-287
Road wheel size .....	GI-45
Roof trim .....	BT-37
Room lamp - See Interior lamp .....	EL-122
RRO2LH - Wiring diagram .....	EC-250, 260, 270, 280
RRO2RH - Wiring diagram .....	EC-249, 259, 269, 279

### S

SAE J1930 terminology list .....	GI-51
----------------------------------	-------

# ALPHABETICAL INDEX

---

Seal - See Exterior .....	BT-40	
SEAT - Wiring diagram .....	EL-265	
Seat belt inspection .....	MA-26, RS-9	
Seat belt pre-tensioner .....	RS-3	
Seat belt pre-tensioner disposal .....	RS-28	
Seat belt, front .....	RS-5	
Seat belt, rear .....	RS-7	
Seat, front .....	BT-46	
Seat, rear .....	BT-49	
SHADE - Wiring diagram .....	EL-272	
SHIFT - Wiring diagram .....	AT-271	
Shift lock system .....	AT-270	
Shift schedule .....	AT-382	
Shift solenoid valve A (A/T) .....	AT-172	
Shift solenoid valve B (A/T) .....	AT-177	
Shock absorber (front) .....	SU-10	
Shock absorber (rear) .....	SU-23	
Side air bag .....	RS-27	
Side trim .....	BT-32	
Smart entrance control unit .....	EL-400	
SMJ (super multiple junction) .....	Foldout	
Spare tire size .....	GI-45	
Spark plug replacement .....	MA-18	
Speedometer .....	EL-147	
Spiral cable .....	RS-23	
Spot lamp .....	EL-122	
Spring (Wheelarch) height .....	SU-6	
SROOF - Wiring diagram .....	EL-222	
SRS - See Supplemental Restraint System .....	RS-14	
SRS - Wiring diagram .....	RS-41	
S/SIG - Wiring diagram .....	EC-615	
Stabilizer bar (front) .....	SU-11	
Stall test (A/T) .....	AT-61	
Standardized relay .....	EL-8	
START - Wiring diagram .....	SC-11	
Start signal .....	EC-614	
Starter .....	SC-18	
Starting system .....	SC-10	
Steering gear and linkage inspection .....	MA-25	
Steering linkage .....	ST-15	
Steering switch .....	EL-33	
Steering wheel and column .....	ST-10	
Steering wheel play .....	ST-6	
Steering wheel turning force .....	ST-8	
Step lamp .....	EL-122	
STEP/L - Wiring diagram .....	EL-126	
Stop lamp .....	EL-92	
STOP/L - Wiring diagram .....	EL-92	
Strut (front) .....	SU-9	
Strut (rear) .....	SU-21	
Sun roof, electric .....	EL-221	
Sunload sensor .....	HA-100	
Sunroof .....	BT-50	
Supplemental Restraint System .....	RS-14	
Supplemental restraint system - Wiring diagram .....	RS-41	
S/VCSW - Wiring diagram .....	EC-480	
Swirl control valve control solenoid valve .....	EC-453	
Swirl control valve control vacuum check switch .....	EC-478	
SWL/V - Wiring diagram .....	EC-457	
Symbols and abbreviations .....	GI-9	
Symptom matrix chart .....	EC-123	
System readiness test (SRT) code .....	EC-70	
T		
Tachometer .....	EL-147	
Tail lamp .....	EL-83	
TAIL/L - Wiring diagram .....	EL-85	
TCM circuit diagram .....	AT-16	
TCM inspection table .....	AT-95	
TCS (traction control system) .....	BR-81	
TCS - Wiring diagram .....	BR-85	
TCS component parts and connector location .....	BR-84	
TCS control unit .....	BR-83	
TCS self-diagnosis .....	BR-91	
TCS system components .....	BR-82	
TCS trouble diagnoses .....	BR-101	
TCS wheel sensors .....	BR-84	
Telephone .....	EL-229	
TFTS - Wiring diagram .....	EC-309	
THEFT - Wiring diagram .....	EL-374	
Theft warning system .....	EL-366	
Thermometer .....	EL-164	
Thermostat .....	LC-15	
Three way catalyst function (Left bank) .....	EC-357	
Three way catalyst function (Right bank) .....	EC-357	
Three way catalyst precautions .....	GI-6	
Throttle bodies .....	EM-11	
Throttle position sensor (TPS) .....	EC-176	
Throttle position sensor adjustment .....	EC-109	
Throttle position switch .....	EC-438, AT-182, 260	
Tie-rod .....	ST-15	
Tie-rod ball joints .....	ST-19	
Tightening torque of standard bolts .....	GI-50	
Timing chain .....	EM-19	
Tire rotation .....	MA-24	
Tire size .....	GI-45	
TLID - Wiring diagram .....	EL-228	
Torque converter installation .....	AT-284, 375	
Torque convertor clutch solenoid valve .....	AT-151	
Tow truck towing .....	GI-49	
TP/SW - Wiring diagram .....	EC-441	
TPS - Wiring diagram .....	EC-181	
Traction control system - See TCS .....	BR-81	
Traction control system - Wiring diagram .....	BR-85	
TRANSMT - Wiring diagram .....	EL-409	
Tread-FR&RR (Dimensions) .....	GI-45	
Trim .....	BT-32	
Trouble diagnoses .....	GI-34	
Trunk lid .....	BT-16	
Trunk lid finisher .....	BT-39	
Trunk lid opener - See Trunk lid .....	BT-16	
Trunk lid opener, electric .....	EL-228	

## ALPHABETICAL INDEX

Trunk lid trim .....	BT-39
Trunk room lamp.....	EL-122
Trunk room trim.....	BT-39
TURN - Wiring diagram .....	EL-105
Turn signal lamp .....	EL-103
Two trip detection logic .....	EC-68
Two-pole lift .....	GI-48

### U

Under body .....	BT-65
------------------	-------

### V

Vacuum cut valve .....	EC-32
Vacuum cut valve bypass valve.....	EC-32, 576, 582
Vacuum hose (brake system).....	BR-23
Vacuum hose drawing (Engine control) .....	EC-26
Valve clearance.....	EM-51
Valve guide.....	EM-43
Valve seat.....	EM-44
Valve spring.....	EM-45
Vanity mirror lamp .....	EL-122
Vehicle recovery (freeing a stuck vehicle).....	GI-49
VEHICLE SECURITY (THEFT WARNING) SYSTEM .....	EL-366
Vehicle speed sensor (VSS) .....	EC-425
VENT/V - Wiring diagram .....	EC-385, 547, 567
Ventilation air filter .....	HA-123
VIAS .....	EC-602
VIAS - Wiring diagram .....	EC-604
Viscosity number (SAE) .....	MA-11
Viscous coupling (FF A/T).....	AT-356
VSS - Wiring diagram .....	EC-427

### W

WARN - Wiring diagram .....	EL-168
Warning chime .....	EL-175
Warning lamps .....	EL-167
Washer, front.....	EL-190
Water pump.....	LC-11
Water temperature gauge .....	EL-147
Weatherstrip - See Exterior .....	BT-40
Wheel alignment (front) .....	SU-6
Wheel alignment (rear).....	SU-19
Wheel balance .....	MA-22
Wheel bearing (front).....	AX-3
Wheel bearing (rear) .....	AX-18
Wheel hub (front).....	AX-5
Wheel hub (rear) .....	AX-19
Wheel sensors (ABS).....	BR-155
Wheel sensors (TCS).....	BR-155
Wheelarch height .....	SU-6
Wheelbase (Dimensions) .....	GI-45
Wide open & closed throttle position switch .....	EC-176
Width (Dimensions) .....	GI-45
WINDOW - Wiring diagram .....	EL-304
Window, rear .....	BT-58
Windshield.....	BT-58
WIPER - Wiring diagram .....	EL-192
Wiper, front.....	EL-190
Wiring Diagram (Cell code) list .....	EL-549
Wiring diagram - AT - LAN .....	AT-210
Wiring Diagram - VEHSEC - .....	EL-374
Wiring diagrams .....	GI-11
Wrist pin - See Piston pin inspection.....	EM-61