

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

Abs	A
ABS (anti-lock brake system)	BR-24	
ABS - Wiring diagram	BR-33	
Absolute pressure sensor.....	EC-117	
A/C air flow.....	HA-18	
A/C component layout.....	HA-17	
A/C compressor clutch removal and installation.....	HA-129	
A/C compressor description	HA-13	
A/C compressor mounting	HA-128	
A/C compressor precaution	HA-7	
A/C compressor special service tool	HA-7	
A/C control linkage adjustment (auto A/C).....	HA-108	
A/C control operation (auto A/C).....	HA-61	
A/C control operation (manual A/C)	HA-19	
A/C diagnostic work flow (auto A/C)	HA-64	
A/C diagnostic work flow (manual A/C)	HA-21	
A/C harness layout (auto A/C)	HA-88	
A/C harness layout (manual A/C)	HA-37	
A/C HFC134a (R134a) system precaution	HA-3	
A/C HFC134a (R134a) system service procedure.....	HA-121	
A/C HFC134a (R134a) system service tools	HA-8	
A/C HFC134a system service equip- ment precaution.....	HA-10	
A/C lubricant (R134a)	HA-123	
A/C operational check.....	HA-22, 65	
A/C performance chart.....	HA-33	
A/C performance test diagnoses	HA-31	
A/C relay	HA-56, 107	
A/C self-diagnoses (auto A/C)	HA-70	
A/C service data specification.....	HA-133	
A/C switch	HA-55	
A/C symptom chart (auto A/C)	HA-68	
A/C symptom chart (manual A/C)	HA-24	
A/C system description (auto A/C).....	HA-109	
A/C trouble diagnoses (auto A/C)	HA-64	
A/C trouble diagnoses (manual A/C)	HA-21	
A/C, A - Wiring diagram	HA-91	
A/C, M - Wiring diagram	HA-40	
Accelerator control system	FE-2	
Accelerator wire adjustment	FE-2	
Air bag	RS-8	
Air bag disposal	RS-19	
Air bag precautions	GI-2	
Air bleeding (hydraulic clutch)	CL-6	
Air bleeding for brake system	BR-4	
Air cleaner filter replacement.....	MA-13	
Air conditioner cut control	EC-21	
Air flow meter - See Mass air flow sensor	EC-110	
Air mix door control linkage adjustment	HA-57, 108	
Air mix, door motor.....	HA-114	
Air spoiler, rear	BT-22	

Alternator	EL-33
Ambient sensor	HA-111
Angular tightening application	EM-2
Antenna.....	EL-128
Anti-lock brake system - See ABS.....	BR-24
Anti-lock brake system - Wiring diagram.....	BR-33
ASCD (automatic speed control device)	EL-140
ASCD - Wiring diagram	EL-145
A/T - Wiring diagram	AT-13
A/T control.....	EC-314
A/T diagnosis communication line	EC-422
A/T fluid temperature sensor	AT-89, 155
A/T self-diagnoses.....	AT-43
A/T shift lock system	AT-180
A/T shift lock system - Wiring diagram	AT-181
A/T trouble diagnoses	AT-54
Audio	EL-119
AUDIO - Wiring diagram.....	EL-121
Audio and A/C control removal and installation - See Instrument panel	BT-13
Auto air conditioner - Wiring diagram	HA-91
Automatic speed control system - See ASCD	EL-140
Automatic transaxle number	GI-38
Automatic transmission fluid replacement.....	MA-18
Auxiliary air control (AAC) valve	EC-303

B

Back-up lamp	EL-53
Back-up lamp switch (M/T)	MT-8
BACK/L - Wiring diagram	EL-53
Battery.....	EL-19
Baulk ring (M/T)	MT-12
Blower motor	HA-55, 107
Blower resistor	HA-55
Board-on lift	GI-40
Body alignment	BT-44
BPT valve	EC-267
Brake booster	BR-10
Brake control valve (Proportioning valve)	BR-6
Brake fluid change	BR-4
Brake fluid level	MA-19
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-5
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake master cylinder	BR-8
Brake pedal	BR-7
Bulb specifications	EL-316
Bumper, front	BT-6
Bumper, rear	BT-9
BUZZER - Wiring diagram	EL-87
BYPS/V - Wiring diagram	EC-399, 404

ALPHABETICAL INDEX

C

- Camshaft inspection EM-39
 Camshaft position sensor (CMPS) EC-249
 Camshaft position sensor (PHASE) EC-249
 Canister - See EVAP canister EC-23
 CHARGE - Wiring diagram EL-30
 Charging system EL-29
 Chassis and body maintenance MA-17
 CIGAR - Wiring diagram EL-108
 Cigarette lighter EL-108
 Circuit breaker EL-14
 Clock EL-109
 CLOCK - Wiring diagram EL-109
 Closed loop control EC-327
 Closed throttle position switch EC-309
 Clutch cover CL-10
 Clutch disc CL-10
 Clutch fluid level MA-17
 Clutch master cylinder CL-7
 Clutch operating cylinder CL-8
 Clutch pedal CL-5
 Clutch release bearing CL-9
 Clutch release mechanism CL-9
 Clutch withdrawal lever CL-9
 Coil spring (front) FA-22
 Coil spring (rear) RA-11
 Collision diagnosis RS-53
 Combination lamp, front, removal and installation BT-6
 Combination lamp, rear, removal and installation BT-22
 Combination meter EL-68
 Combination meter removal and installation - See Instrument panel BT-13
 Combination switch EL-34
 COMM - Wiring diagram EL-180
 Compression pressure EM-12
 Compressor clutch removal and installation HA-129
 Compressor description HA-13
 Compressor mounting HA-128
 Compressor precaution HA-7
 Compressor special service tool HA-7
 Connecting rod EM-58
 Connecting rod bearing clearance EM-62
 Connecting rod bushing clearance EM-63
 Console box - See Instrument panel BT-13
 CONSULT for ABS BR-39
 CONSULT for ECCS EC-63
 CONSULT general information GI-34
 Control lever (M/T) MT-10
 Control valve (A/T) AT-218
 Converter housing installation AT-191
 Coolant mixture ratio MA-9
 Coolant replacement MA-11
 Cooling circuit (engine) LC-8
 Cooling fan control EC-430
 Cooling fan control system LC-15

- Cooling fan motor EC-442
 Cooling fan relay EC-442
 Coupling sleeve (M/T) MT-12
 Crankshaft EM-60
 Crankshaft position sensor (POS) EC-243
 Crankshaft position sensor (POS) chipping EC-341
 Crankshaft position sensor (REF) EC-336
 Cruise control - See ASCD EL-140
 Cylinder block EM-56
 Cylinder head EM-36
 Cylinder head bolt tightening EM-45

D

- Daytime light system EL-42
 Daytime running light - See Daytime light system EL-42
 DEF - Wiring diagram EL-111
 Detonation sensor - See Knock sensor EC-240
 Diagnosis sensor unit RS-12
 Differential gear (FF A/T) AT-261
 Differential gear (FF M/T) MT-12, 26
 Dimensions GI-39
 Direct ignition system EC-32
 Distributor ignition (DI) system EC-20
 D/LOCK - Wiring diagram EL-215
 Door lock BT-11
 Door mirror BT-43
 Door trim BT-19
 Door, front BT-11
 Door, rear BT-12
 Drive belt inspection MA-10
 Drive plate runout EM-63
 Drive shaft (front) FA-13
 Dropping resistor (A/T) AT-133
 DTRL - Wiring diagram EL-44

E

- ECCS basic inspection EC-82
 ECCS circuit diagram EC-11
 ECCS component parts location EC-13
 ECCS on board diagnostic system EC-41
 ECCS system diagram and chart EC-12
 ECM input/output signal EC-95
 EGR control (EGRC) - BPT valve EC-263
 EGR control (EGRC) - solenoid valve EC-347
 EGR control valve EC-261, 362
 EGR temperature sensor EC-352
 Electric sun roof EL-134
 Electrical diagnoses GI-21
 Electrical ignition system EC-20
 Electrical load signal circuit EC-465
 Electrical unit Foldout
 Engine compartment BT-44
 Engine control module (ECM) EC-318

ALPHABETICAL INDEX

Engine coolant temperature sensor
 (ECTS)..... EC-132, 145
 Engine mounting control (Front) EC-454
 Engine oil filter replacement MA-14
 Engine oil precautions GI-5
 Engine oil replacement MA-14
 Engine outer component parts EM-8
 Engine removal EM-53
 Engine room - See Engine
 compartment BT-44
 Engine serial number GI-38
 EVAP canister EC-23
 EVAP canister purge control solenoid
 valve EC-415
 EVAP canister purge control valve EC-409
 EVAP canister purge volume control
 valve EC-282, 374
 EVAP canister vent control valve EC-288, 381
 EVAP control system purge flow moni-
 toring diagnosis EC-386
 EVAP vapor lines inspection MA-16
 Evaporative emission (EVAP) system EC-23
 Exhaust system FE-4
 Exhaust system inspection MA-17
 Exterior BT-22

F

Fan control amp HA-119
 Fan switch HA-55
 Fast idle cam (FIC) inspection and
 adjustment EC-31
 F/FOG - Wiring diagram EL-55
 Final drive (FF A/T) AT-261
 Final drive (FF M/T) MT-12, 26
 Finisher, interior - See Trim BT-16
 Floor trim BT-16
 Flow charts GI-31
 Fluid temperature sensor (A/T) AT-89, 155
 Fluids MA-8
 Flywheel (clutch) CL-11
 Flywheel runout EM-63
 FO2H-L - Wiring
 diagram EC-150, 157, 163, 169, 178
 Fog lamp, front EL-54
 Fog lamp, front, removal and
 installation BT-6
 Fork rod (M/T) MT-13
 Forward clutch AT-239
 Freeze frame data EC-43
 FRO2LH - Wiring diagram EC-184
 Front axle FA-9
 Front bumper BT-6
 Front combination lamp removal and
 installation BT-6
 Front disc brake BR-12
 Front door BT-11
 Front engine mounting control EC-454
 Front fog lamp EL-54
 Front fog lamp removal and installation BT-6

Front heated oxygen sensor
 (HO2S)..... EC-150, 157, 163, 169, 178
 Front heated oxygen sensor (HO2S)
 (Left bank)..... EC-150, 157, 163, 169, 178
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-150, 157, 163, 169, 178
 Front heated oxygen sensor (HO2S)
 monitor EC-57
 Front heated oxygen sensor heater
 (Left bank) EC-184
 Front heated oxygen sensor heater
 (Right bank) EC-184
 Front passenger air bag RS-8
 Front seat BT-27
 Front seat belt RS-3
 Front suspension FA-21
 Front washer EL-95
 Front wiper EL-95
 Fuel cut control (at no load & high
 engine speed) EC-22
 Fuel filler lid BT-9
 Fuel filter replacement MA-12
 Fuel gauge EL-68
 Fuel injection system (Left bank) EC-219, 225
 Fuel injection system (Right bank) EC-219, 225
 Fuel line inspection MA-12
 Fuel precautions GI-6
 Fuel pressure check EC-29
 Fuel pressure release EC-29
 Fuel pump EC-453
 Fuel pump relay EC-453
 Fuel system FE-3
 FUELLH - Wiring diagram EC-219, 225
 Fuse EL-14
 Fuse block Foldout
 Fusible link EL-14

G

Garage jack and safety stand GI-41
 Gauges EL-68
 Gear components (M/T) MT-12
 Generic scan tool (GST) EC-76
 Ground distribution EL-15

H

Harness connector EL-3
 Harness layout EL-301
 Hazard warning lamp EL-57
 Headlamp EL-37
 Headlamp removal and installation BT-6
 Headlining - See Roof trim BT-20
 Heated oxygen sensor (HO2S)
 (front) EC-150, 157, 163, 169, 178
 Heated oxygen sensor (HO2S) (Front)
 (Left bank) EC-150, 157, 163, 169, 178

ALPHABETICAL INDEX

- Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-150, 157, 163, 169, 178
 Heated oxygen sensor (HO2S) monitor EC-57
 Heated oxygen sensor heater
 (Front)(Left bank) EC-184
 Heated oxygen sensor heater
 (Front)(Right bank) EC-184
 Heated oxygen sensor monitor (HO2S)
 (front) EC-57
 Heated seat BT-31, EL-137
 Height (Dimensions) GI-39
 HFC134a (R134a) system precaution HA-3
 HFC134a (R134a) system service
 procedure HA-121
 HFC134a (R134a) system service tools HA-8
 HFC134a system service equipment
 precaution HA-10
 High clutch AT-235
 H/LAMP - Wiring diagram EL-38
 Hood BT-6
 Horn EL-107
 HORN - Wiring diagram EL-107
 How to erase DTC for ECCS OBD
 system EC-52
 HSEAT - Wiring diagram EL-137

I

- IACV - FICD solenoid valve EC-464
 IACV-AAC valve EC-308
 IACV-FICD solenoid valve EC-462
 Identification plate GI-38
 Idle air control valve (IACV) EC-303
 Idle mixture ratio EC-34
 Idle speed EC-34
 Ignition coil EC-335
 Ignition timing EC-34
 ILL - Wiring diagram EL-63
 Illumination EL-61, 278
 In vehicle sensor HA-110
 Inhibitor switch AT-82, 85
 Injector EC-447
 Injector removal and installation EC-30
 Input shaft (FF M/T) MT-12, 17
 Instrument panel BT-13
 INT/L - Wiring diagram EL-67
 Intake air temperature sensor EC-126
 Intake door control linkage
 adjustment HA-57, 108
 Intake door motor HA-118
 Intake manifold EM-10
 Intake sensor HA-112
 Integrated homelink transmitter EL-296
 Interior BT-16
 Interior lamp on-off control EL-282
 IVMS (In-Vehicle Multiplexing System) EL-164
 IVMS-System description EL-164
 IVMS-Trouble diagnoses EL-183

J

- Jacking points GI-41
 Junction box (J/B) Foldout

K

- Key illumination EL-282
 Keyless entry system - See Multi-re-
 mote control system EL-232
 Knock sensor (KS) EC-240

L

- Length (Dimensions) GI-39
 License lamp EL-49
 Lifting points GI-42
 Line pressure solenoid valve AT-118, 129, 133
 Line pressure test (A/T) AT-62
 Liquid gasket application EM-2
 Location of electrical units EL-298
 Lock, door BT-11
 Low and reverse brake AT-245
 Lubricant (R134a) A/C HA-123
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches MA-21

M

- Magnet clutch HA-129
 Main drive gear (M/T) MT-12
 Mainshaft (M/T) MT-12, 22
 Maintenance MA-1
 Maintenance (engine) MA-10
 MAJOR OVERHALL AT-193
 Malfunction indicator lamp (MIL) EC-54
 Manual air conditioner - Wiring diagram HA-40
 Manual transaxle number GI-38
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-320
 Mass air flow sensor (MAFS) EC-110
 Master cylinder (brake) BR-8
 Master cylinder (clutch) CL-7
 Meter EL-68
 METER - Wiring diagram EL-71
 MIL & Data link connectors circuit EC-468
 MIRROR - Wiring diagram EL-138
 Mirror defogger EL-110
 Mirror, door BT-43
 Mirror, out side BT-43
 Mistire EC-235
 Mode door control linkage
 adjustment HA-56, 108

ALPHABETICAL INDEX

Mode door motor	HA-116
Model variation	GI-36
Molding - See Exterior	BT-22
M/T major overhaul	MT-11
M/T removal and installation	MT-8
Mud guard - See Exterior	BT-22
MULTI - Wiring diagram.....	EL-235
Multi-remote control system	EL-232
Multiport fuel injection (MFI) system.....	EC-18
Multiport fuel injection precautions.....	GI-4

N

Neutral position switch (M/T)	MT-8
NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-5

O

Oil pan (engine)	EM-13
Oil pressure (engine)	LC-5
Oil pump (A/T).....	AT-214
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-33
Operating cylinder (clutch)	CL-8
Out side mirror.....	BT-43
Overdrive control switch.....	AT-178
Overrun clutch	AT-239
Overrun clutch solenoid valve.....	AT-118, 129, 151
Oxygen sensor monitor (O2S) (front)	EC-57

P

P/ANT - Wiring diagram.....	EL-129
Park/Neutral position switch.....	EC-425
Parking brake control	BR-22
Parking lamp	EL-49
PCV (positive crankcase ventilation)	EC-28
PGC/V - Wiring diagram	EC-282
PHONE - Wiring diagram	EL-133
Piston assembly.....	EM-64
Piston pin inspection.....	EM-57
Piston ring inspection	EM-58
Piston to bore clearance.....	EM-59
POWER - Wiring diagram	EL-7
Power antenna.....	EL-128
Power door lock	EL-213
Power door mirror	EL-138
Power seat	EL-135
Power steering fluid level.....	MA-20, ST-7
Power steering gear	ST-14
Power steering hydraulic pressure	ST-9

Power steering oil pressure switch.....	EC-457, 461
Power steering oil pump.....	ST-24
Power steering system bleeding	ST-7
Power supply routing	EL-6
Power transistor	EC-335
Power transistor & ignition coil	EC-329
Power window.....	EL-198
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-10
Pressure test (A/T)	AT-62

R

Radiator	LC-15
Radio - See Audio.....	EL-119
Rear air spoiler	BT-22
Rear axle.....	RA-7
Rear bumper	BT-9
Rear disc brake	BR-16
Rear door	BT-12
Rear heated oxygen sensor (HO2S) heater	EC-214
Rear seat	BT-32
Rear seat belt.....	RS-4
Rear suspension	RA-10
Rear window defogger	EL-110
Refrigerant connection precaution	HA-4
Refrigerant general precaution	HA-3
Refrigerant lines	HA-125
Release bearing (clutch)	CL-9
Removal and installation (A/T).....	AT-190
Reverse clutch.....	AT-232
Reverse idler shaft (M/T)	MT-12
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-8
Reverse main gear (M/T)	MT-12
Revolution sensor (A/T)	AT-92
Road wheel size	GI-39
Roof trim	BT-20
ROOM/L - Wiring diagram	EL-283
RRO2LH - Wiring diagram	EC-196
RRO2RH - Wiring diagram	EC-189

S

SAE J1930 terminology list	GI-45
SAE J1979 - Mode 1 - 7	EC-41
Seal - See Exterior	BT-22
SEAT - Wiring diagram	EL-135
Seat belt inspection	MA-21, RS-5
Seat belt, front	RS-3
Seat belt, rear	RS-4
Seat, front	BT-27
Seat, rear	BT-32
Self-diagnostic results	EC-54
SHIFT - Wiring diagram	AT-181
Shift control components (M/T)	MT-13
Shift fork (M/T)	MT-13

ALPHABETICAL INDEX

Shift lever	MT-10	
Shift schedule.....	AT-284	
Shift solenoid valve A (A/T)	AT-99, 109, 118, 129, 137	
Shift solenoid valve B (A/T)	AT-99, 104, 118, 129, 141	G
Shock absorber (rear)	RA-11	
Side trim.....	BT-16	
SMJ (super multiple junction).....	Foldout	M
Spark plug replacement.....	MA-15	
Speedometer	EL-68	
Spiral cable	RS-14	E
Spot lamp.....	EL-67	L
Spring (Wheelarch) height.....	FA-6	C
SROOF - Wiring diagram	EL-134	E
SRS - See Supplemental Restraint System.....	RS-8	
SRS - Wiring diagram	RS-30	
SRS Trouble diagnoses	RS-25	C
Stabilizer bar (front)	FA-23	
Stall test (A/T)	AT-59	
Standardized relay.....	EL-4	
START - Wiring diagram.....	EL-25	
Starter	EL-28	
Starting system	EL-23	
Steering gear and linkage inspection	MA-20	
Steering linkage	ST-14	
Steering switch	EL-36	
Steering wheel and column	ST-10	
Steering wheel play	ST-6	
Steering wheel turning force.....	ST-8	
Step lamp.....	EL-290	
STEP/L - Wiring diagram.....	EL-291	
Stop lamp.....	EL-51	
STOP/L - Wiring diagram	EL-51	
Striking rod (M/T)	MT-13	
Strut (front).....	FA-22	
Sunload sensor.....	HA-111	
Sunroof	BT-33	
Supplemental Restraint System.....	RS-8	
Supplemental restraint system - Wiring diagram.....	RS-30	
SW/ILL - Wiring diagram	EL-279	R
Symbols and abbreviations	GI-7	
Synchronizer (M/T).....	MT-12	A
System readiness test (SRT) code	EC-43	B

T

Tachometer	EL-68	
Tail lamp.....	EL-49	
TAIL/L - Wiring diagram	EL-49	
Tank fuel temperature sensor	EC-231	
TCM circuit diagram	AT-12	
TCM inspection table	AT-77	
Telephone	EL-133	
THEFT - Wiring diagram.....	EL-256	
Theft warning system	EL-250	
Thermostat.....	LC-14	
Three way catalyst	EC-268	

Three way catalyst function (Left bank).....	EC-268	
Three way catalyst function (Right bank).....	EC-268	G
Three way catalyst precautions	GI-5	
Throttle bodies	EM-10	
Throttle position sensor (TPS)	EC-137	
Throttle position sensor adjustment	EC-82	
Throttle position switch	AT-147, 179	M
Throwout bearing - See Clutch release bearing	CL-9	
Tie-rod.....	ST-18	E
Tie-rod ball joints	ST-18	L
Tightening torque of standard bolts	GI-44	C
Timing chain.....	EM-19	E
Tire rotation.....	MA-19	
Tire size	GI-39	
TLID - Wiring diagram	EL-139	
Torque converter installation.....	AT-191	
Torque convertor clutch solenoid valve	AT-118, 122, 129	F
Tow truck towing.....	GI-43	
Transmission case (M/T)	MT-11	C
TRANSMT - Wiring diagram.....	EL-296	
Transverse link (front)	FA-24	
Tread-FR&RR (Dimensions)	GI-39	M
Trim	BT-16	
Triple pressure switch.....	HA-12, 56, 107	A
Trunk lid	BT-9	F
Trunk lid opener - See Trunk lid	BT-9	
Trunk lid opener, electric	EL-139	
Trunk room lamp.....	EL-67	
Trunk room trim	BT-21	
TURN - Wiring diagram	EL-58	R
Turn signal lamp	EL-57	A
Two trip detection logic	EC-41	
Two-pole lift	GI-42	B

U

Under body	BT-46	
------------------	-------	--

V

Vacuum cut valve.....	EC-408	
Vacuum hose (brake system).....	BR-11	H
Vacuum hose drawing (ECCS)	EC-16	A
Valve clearance.....	EM-49	E
Valve guide	EM-40	L
Valve seat	EM-42	
Valve spring	EM-43	I
Vehicle identification number	GI-37	D
Vehicle recovery (freeing a stuck vehicle).....	GI-43	X
Vehicle speed sensor (VSS)	EC-299	
Viscosity number (SAE)	MA-8	
Viscous coupling (FF M/T)	MT-8, 12	

ALPHABETICAL INDEX

W

- WARN - Wiring diagram EL-81
Warning buzzer EL-86
Warning lamps EL-80
Washer, front EL-95
Water pump LC-9
Water temperature gauge EL-68
Weatherstrip - See Exterior BT-22
Wheel alignment (front) FA-7
Wheel alignment (rear) RA-6
Wheel balance MA-19
Wheel bearing (front axle) FA-7
Wheel bearing (rear) RA-5
Wheel hub (rear) RA-7
Wheel sensors (ABS) BR-27
Wheel size GI-39
Wheelarch height FA-6
Wheelbase (Dimensions) GI-39
Wide open & closed throttle position
 switch EC-137
Width (Dimensions) GI-39
WINDOW - Wiring diagram EL-200
Window antenna EL-130
WIPER - Wiring diagram EL-97
Wiper, front EL-95
Wiring Diagram (Cell code) list EL-317
Wiring diagrams GI-9
Withdrawal lever (clutch) CL-9
Wrist pin - See Piston pin inspection EM-57