

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-272
2nd coast brake	AT-272
2nd coast brake hub	AT-278
A	
A/C air flow	ATC-27
A/C compressor clutch removal and installation ..	ATC-122
A/C compressor mounting	ATC-122
A/C compressor precaution	ATC-9
A/C compressor special service tool	ATC-12
A/C control operation (auto A/C)	ATC-25
A/C diagnostic work flow (auto A/C)	ATC-89
A/C evaporator	ATC-127
A/C HFC134a (R134a) system identification	ATC-6
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	ATC-119
A/C HFC134a (R134a) system service tools ...	ATC-12
A/C HFC134a system service equipment precaution ...	ATC-9
A/C lubricant (R134a)	ATC-18
A/C lubrication oil	ATC-18
A/C operational check	ATC-50
A/C self-diagnoses (auto A/C)	ATC-42 , ATC-89
A/C service data specification	ATC-133
A/C system description (auto A/C)	ATC-21
A/C trouble diagnoses (auto A/C)	ATC-30
A/C, A - Wiring diagram	ATC-36
A/T fluid checking	AT-15 , AT-54
A/T fluid replacement	AT-15
A/T fluid temperature sensor	AT-95 , AT-100
A/T IND - Wiring diagram	DI-50
A/T indicator	DI-50
A/T self-diagnoses	AT-75 , AT-80
A/T shift lock system	AT-233
A/T shift lock system - Wiring diagram	AT-234
A/T trouble diagnoses	AT-44
A/T Wiring diagram AT - 1ST	AT-116
A/T Wiring diagram AT - 2ND	AT-120
A/T Wiring diagram AT - 3RD	AT-126
A/T Wiring diagram AT - 4TH	AT-132
A/T Wiring diagram AT - 5TH	AT-137
A/T Wiring diagram AT - CAN	AT-84
A/T Wiring diagram AT - FTS	AT-96
A/T Wiring diagram AT - FTSP	AT-101
A/T Wiring diagram AT - MMSW	AT-199
A/T Wiring diagram AT - PC/A	AT-145
A/T Wiring diagram AT - PC/B	AT-180
A/T Wiring diagram AT - PC/C	AT-189
A/T Wiring diagram AT - PC/CS	AT-194
A/T Wiring diagram AT - PNP/SW	AT-91
A/T Wiring diagram AT - PWR/IN	AT-205
A/T Wiring diagram AT - SFTFNC	AT-185
A/T Wiring diagram AT - SSV/A	AT-150
A/T Wiring diagram AT - SSV/B	AT-155
A/T Wiring diagram AT - SSV/C	AT-160
A/T Wiring diagram AT - SSV/CS	AT-165
A/T Wiring diagram AT - SSV/D	AT-170
A/T Wiring diagram AT - SSV/E	AT-175
A/T Wiring diagram AT - TCCSIG	AT-142
A/T Wiring diagram AT - TRSC	AT-106
A/T Wiring diagram AT - VSSATC	AT-110
ABS - Wiring diagram	BRC-17 , BRC-58 , BRC-101
ABS (anti-lock brake system)	BRC-8 , BRC-49 , BRC-91
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-637 , EC-644 , EC-658
Accelerator pedal released position learning	EC-90
Active damper suspension system - Wiring diagram ...	FSU-4
AF1B1-Wiring diagram	EC-514 , EC-522 , EC-530 , EC-539 , EC-549 , EC-558 , EC-570
AF1B2-Wiring diagram	EC-516 , EC-524 , EC-532 , EC-541 , EC-551 , EC-560 , EC-572
AF1HB1-Wiring diagram	EC-429
AF1HB2-Wiring diagram	EC-431
Aiming adjustment	LT-39
Air bag	SRS-3
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-8
Air cleaner and air duct	EM-16
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-189 , EC-198
Air fuel ratio sensor 1 ..	EC-512 , EC-520 , EC-528 , EC-537 , EC-546 , EC-555 , EC-567
Air fuel ratio sensor 1 heater	EC-428
Air mix. door motor	ATC-62
Ambient sensor	ATC-91 , ATC-103
Angular tightening application	EM-4
Anti-lock brake system - See ABS	BRC-8 , BRC-49 , BRC-91
Anti-lock brake system - Wiring diagram	BRC-17 , BRC-58 , BRC-101
APPS1 - Wiring diagram	EC-639
APPS2 - Wiring diagram	EC-646
APPS3 - Wiring diagram	EC-660
ASC/BS - Wiring diagram	EC-610
ASC/SW - Wiring diagram	EC-603
ASCSOF - Wiring diagram	EC-713
ASCD	EC-30
ASCD brake switch	EC-608 , EC-712
ASCD clutch switch	EC-608 , EC-712
ASCD indicator lamp	EC-722
ASCD steering switch	EC-601
ASCIND - Wiring diagram	EC-723
AUDIO - Wiring diagram	AV-12
AUT/DP - Wiring diagram	SE-19
Auto air conditioner - Wiring diagram	ATC-36
Auto anti-dazzling inside mirror	GW-94 , GW-95

ALPHABETICAL INDEX

<p>Autolamp LT-60</p> <p>Automatic amplifier ATC-40, ATC-52</p> <p>Automatic transaxle number GI-44</p> <p>Automatic transmission fluid replacement MA-22</p> <p>AV and NAVI control unit AV-96</p> <p>AV communication line AV-76, AV-120</p>	<p>341, LAN-369, LAN-398</p> <p>CAN (Controller Area Network) LAN-23, LAN-43, LAN-66, LAN-89, LAN-109, LAN-132, LAN-155, LAN-180, LAN-208, LAN-233, LAN-261, LAN-286, LAN-314, LAN-339, LAN-367, LAN-396</p> <p>CAN communication ... EC-32, EC-172, AT-35, AT-83, LAN-23, LAN-43, LAN-66, LAN-89, LAN-109, LAN-132, LAN-155, LAN-180, LAN-208, LAN-233, LAN-261, LAN-286, LAN-314, LAN-339, LAN-367, LAN-396</p> <p>Canister-See EVAP canister EC-36</p> <p>CHARGE - Wiring diagram SC-22</p> <p>Charging system SC-21</p> <p>Chassis and body maintenance MA-20</p> <p>Chassis and body maintenanceSchedule 1 MA-7</p> <p>Chassis and body maintenanceSchedule 2 MA-8</p> <p>CHIME - Wiring diagram DI-55</p> <p>Circuit breaker PG-61</p> <p>Closed loop control EC-26</p> <p>Closed loop control (Bank 1) EC-488</p> <p>Closed loop control (Bank 2) EC-488</p> <p>Clutch coverClutch cover CL-16</p> <p>Clutch discClutch disc CL-16</p> <p>Clutch fluid level MA-20</p> <p>Clutch master cylinderClutch master cylinder CL-8</p> <p>Clutch operating cylinderClutch operating cylinder CL-11</p> <p>Clutch pedalClutch pedal CL-5</p> <p>Clutch release mechanismClutch release mechanism CL-14</p> <p>Coil spring (front) FSU-9</p> <p>Coil spring (rear)Coil spring RSU-10</p> <p>Collision diagnosis SRS-55</p> <p>Combination lamp, front, removal and installation .. LT-41</p> <p>Combination lamp, rear, removal and installation .. LT-148</p> <p>Combination meter DI-5</p> <p>Combination switch LT-123</p> <p>COMBSW - Wiring diagram LT-123</p> <p>COMM - Wiring diagram AV-76, AV-120</p> <p>COMPAS - Wiring diagram DI-38</p> <p>Component Location (auto A/C) ATC-33</p> <p>Compressor clutch removal and installation .. ATC-122</p> <p>Compressor mounting ATC-122</p> <p>Compressor precaution ATC-9</p> <p>Compressor special service tool ATC-12</p> <p>Condenser ATC-127</p> <p>Connector inspection GI-22</p> <p>Console box - See Instrument panel IP-10</p> <p>Console box lamp LT-174</p> <p>CONSULT for ABS BRC-24, BRC-65, BRC-111</p> <p>CONSULT for TCS BRC-65, BRC-111</p> <p>CONSULT for VDC BRC-111</p> <p>CONSULT general information GI-35</p> <p>CONSULT-II for engine EC-130</p> <p>Control units (terminal arrangement) PG-65</p> <p>Controller Area Network (CAN) LAN-23, LAN-43, LAN-66, LAN-89, LAN-109, LAN-132, LAN-155, LAN-180, LAN-208, LAN-233, LAN-261, LAN-286, LAN-314, LAN-</p>	<p>A</p> <p>B</p> <p>C</p> <p>D</p> <p>E</p> <p>F</p> <p>G</p> <p>H</p> <p>I</p> <p>J</p> <p>K</p> <p>L</p> <p>INDEX</p>
B		
<p>B5 brake AT-280</p> <p>Back door trim EI-30</p> <p>BACK/L - Wiring diagram LT-132</p> <p>Back-up lamp LT-132</p> <p>Back-up lamp switch (M/T)Back-up lamp switch MT-12</p> <p>Basic inspection EC-72</p> <p>Battery SC-4</p> <p>Battery/Starting/Charging System Tester SC-6, SC-13, SC-23</p> <p>Baulk ring (M/T) MT-20</p> <p>BCM (Body control module) BCS-3</p> <p>Block heater EM-122</p> <p>Blower motor ATC-68, ATC-108</p> <p>Blower unit ATC-107</p> <p>Board computer AV-66</p> <p>Board-on lift GI-38</p> <p>Body alignment BL-134</p> <p>Body component parts BL-123</p> <p>Body construction BL-133</p> <p>Body exterior paint color BL-121</p> <p>Body repair BL-121</p> <p>Body sealing BL-130</p> <p>Bose speaker amp. AV-7</p> <p>Brake boosterBrake booster BR-18</p> <p>Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) BR-36</p> <p>Brake fluid changeBrake fluid change BR-8</p> <p>Brake fluid level MA-25</p> <p>Brake fluid level and line checkBrake fluid level and line check BR-8</p> <p>Brake hydraulic lineBake hydraulic line BR-9</p> <p>Brake inspection MA-26</p> <p>Brake lines and cables inspection MA-25</p> <p>Brake master cylinderBrake master cylinder BR-12</p> <p>Brake pedalBrake pedal BR-6</p> <p>Brake switch EC-608, EC-632, EC-712</p> <p>BRK/SW - Wiring diagram EC-633</p> <p>Bulb specifications LT-189</p> <p>Bumper, front EI-14</p> <p>Bumper, rear EI-16</p>	<p>AT-280</p> <p>EI-30</p> <p>LT-132</p> <p>LT-132</p> <p>MT-12</p> <p>EC-72</p> <p>SC-4</p> <p>SC-6, SC-13, SC-23</p> <p>MT-20</p> <p>BCS-3</p> <p>EM-122</p> <p>ATC-68, ATC-108</p> <p>ATC-107</p> <p>AV-66</p> <p>GI-38</p> <p>BL-134</p> <p>BL-123</p> <p>BL-133</p> <p>BL-121</p> <p>BL-121</p> <p>BL-130</p> <p>AV-7</p> <p>BR-18</p> <p>BR-36</p> <p>BR-8</p> <p>MA-25</p> <p>BR-8</p> <p>BR-9</p> <p>MA-26</p> <p>MA-25</p> <p>BR-12</p> <p>BR-6</p> <p>EC-608, EC-632, EC-712</p> <p>EC-633</p> <p>LT-189</p> <p>EI-14</p> <p>EI-16</p>	C
<p>Cabin air filter MA-20</p> <p>Camshaft EM-83</p> <p>Camshaft inspection EM-86</p> <p>Camshaft position sensor (PHASE) EC-307</p> <p>CAN - Wiring diagram EC-173, LAN-25, LAN-45, LAN-68, LAN-91, LAN-111, LAN-134, LAN-157, LAN-182, LAN-210, LAN-235, LAN-263, LAN-288, LAN-316, LAN-</p>	<p>MA-20</p> <p>EM-83</p> <p>EM-86</p> <p>EC-307</p> <p>EC-173, LAN-25, LAN-45, LAN-68, LAN-91, LAN-111, LAN-134, LAN-157, LAN-182, LAN-210, LAN-235, LAN-263, LAN-288, LAN-316, LAN-</p>	C

ALPHABETICAL INDEX

339 , LAN-367 , LAN-396		EGR temperature sensor	EC-331
COOL/F - Wiring diagram	EC-495	EGR volume control valve	EC-324
Coolant mixture ratio	MA-10	EGR/TS - Wiring diagram	EC-334
Coolant replacementVQ35DE	MA-14	EGRC1 - Wiring diagram	EC-320 , EC-583
Cooling fan	CO-18	EGVC/V - Wiring diagram	EC-326
Cooling fan control	EC-491	Electric sunroof	RF-10
Cooling fan motor	EC-491	Electric throttle control actuator	EC-446 , EC-448
Cooling unit (A/C evaporator)	ATC-111 , ATC-127	Electrical diagnoses	GI-22
CORNER - Wiring diagram	LT-111	Electrical load signal circuit	EC-711
Cornering lamp	LT-108	Electronic ignition (EI) system	EC-27
Corrosion protection	BL-127	EMNT - Wiring diagram	EC-702
Coupling sleeve (M/T)	MT-20	Engine control circuit diagram	EC-118
Courtesy lamp	LT-149	Engine control component parts location	EC-109
Crankcase ventilation system - See Positive crankcase ventilation	EC-46	Engine control module (ECM)	EC-425
Crankshaft position sensor (POS)	EC-300	Engine control system diagram and chart	EC-24
Crash zone sensor	SRS-50	Engine coolant temperature sensor (ECTS) ..	EC-210 , EC-222
Cylinder block	EM-122	Engine fail-safe system	EC-103
Cylinder head	EM-101	Engine mounting control (Front)	EC-701
D			
D/LOCK - Wiring diagram	BL-21	Engine oil	LU-7
Daytime light system	LT-44	Engine oil filter replacementQR25DE	MA-17
Daytime running light - See Daytime light system ..	LT-44	Engine oil precautions	GI-3 , GI-7
DEF - Wiring diagram	GW-99	Engine oil replacementQR25DE	MA-16
Diagnosis sensor unit	SRS-53	Engine removal	EM-117
Diagnostic trouble code (DTC)	EC-53	Engine serial number	GI-44
Diagnostic trouble code (DTC) for OBD system ..	EC-9	ETC1 - Wiring diagram	EC-449
Diagnostic trouble code (DTC) inspection priority chart	EC-101	ETC2 - Wiring diagram	EC-456
Differential gear (FF A/T)	AT-285	ETC3 - Wiring diagram	EC-460
Differential gear (FF M/T)	MT-24	EVAP canister	EC-36
Dimensions	GI-44	EVAP canister purge volume control solenoid valve	EC-359 , EC-586
Display and amp. assembly	ATC-40 , ATC-52	EVAP canister vent control valve	EC-366 , EC-594
Display Control Unit	AV-190	EVAP control system (small leak) diagnosis ..	EC-350 , EC-390 , EC-398
Display Unit	AV-93 , AV-190	EVAP control system pressure sensor ...	EC-373 , EC-376 , EC-382
Dome light - See Interior lamp	LT-149	EVAP control system purge flow monitoring diagnosis .	EC-344
Door glass	GW-88 , GW-91	EVAP vapor lines inspection	MA-19
Door glass Fitting Adjustment(Front)	GW-89	Evaporative emission (EVAP) system	EC-33
Door glass Fitting Adjustment(Rear)	GW-92	Evaporator	ATC-127
Door lock	BL-68	Exhaust manifold	EM-27
Door trim	EI-30	Exhaust system inspection	EX-3 , MA-20
Door, front	BL-65 , GW-88	Expansion valve	ATC-129
Door, rear	BL-65 , GW-91	F	
Drive shaft (front)	FAX-11	F/FOG - Wiring diagram	LT-81
Driver air bag	SRS-43	F/PUMP - Wiring diagram	EC-696
DTC work support	EC-141	Fan control amp.	ATC-115
DTRL - Wiring diagram	LT-47	Final drive (FF M/T)	MT-24
Duct and grilles	ATC-116	Flow charts	GI-25
E			
ECM input/output signal	EC-120	Fluid temperature sensor (A/T)	AT-95 , AT-100
ECM power supply	EC-163 , EC-435	Fluids	MA-9
ECM/PW - Wiring diagram	EC-436	Fluorescent leak detector	ATC-129
ECTS - Wiring diagram	EC-212	Flywheel (clutch)Flywheel (clutch)	CL-16
EGR function	EC-316 , EC-579	Fog lamp, front	LT-79
		Foot lamp	LT-149
		Fork rod (M/T)	MT-22

ALPHABETICAL INDEX

Interior [EI-33](#)
Interior lamp [LT-149](#)
Interior lamp on-off control [LT-149](#)
IPDM (Intelligent power distribution module engine room) [PG-15](#)
IVCB1 - Wiring diagram [EC-440](#)
IVCB2 - Wiring diagram [EC-442](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-38](#)
Junction box (J/B) [PG-68](#)

K

Key illumination [LT-149](#)
KEYLES - Wiring diagram [BL-43](#)
Keyless entry system - See Multi-remote control system [BL-38](#)
Knock sensor (KS) [EC-295](#)
KS - Wiring diagram [EC-296](#)

L

LAN system circuit [ATC-55](#)
Length (Dimensions) [GI-44](#)
License lamp [LT-134](#)
Lifting points [GI-38](#)
Line pressure test (A/T) [AT-56](#)
Liquid gasket application [EM-4](#), [LU-2](#)
Location of electrical units [PG-58](#)
Lubricant (R134a) A/C [ATC-18](#)
Lubricants [MA-9](#)
Lubrication circuit (engine) [LU-5](#)
Lubrication oil A/C [ATC-18](#)
Lubrication-locks, hinges and hood latches [MA-30](#)
Luggage compartment trim [EI-44](#)
Luggage room lamp [LT-149](#)

M

M/T major overhaul [MT-24](#)
M/T oil replacementM/T oil replacement [MT-10](#)
MAFS - Wiring diagram [EC-192](#), [EC-200](#)
Magnet clutch [ATC-74](#), [ATC-122](#)
MAIN - Wiring diagram [EC-163](#)
Mainshaft (M/T) [MT-20](#)
Maintenance [MA-4](#)
Malfunction indicator lamp (MIL) [EC-64](#)
Manual transaxle number [GI-44](#)
Manual transmission oil replacement [MA-21](#)
Map lamp [LT-149](#)
Mass air flow sensor (MAFS) [EC-189](#), [EC-198](#)
Master cylinder (brake)Master cylinder (brake) . [BR-12](#)
Master cylinder (clutch)Master cylinder (clutch) .. [CL-8](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-11](#)

MIL data link connectors circuit [EC-725](#)
MIL/DL - Wiring diagram [EC-725](#)
MIRROR - Wiring diagram [GW-122](#)
Misfire [EC-287](#)
Mode door control linkage adjustment [ATC-61](#)
Mode door motor [ATC-59](#), [ATC-113](#)
Model variation [GI-44](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-3](#), [GI-6](#)
Multi-remote control system [BL-38](#)

N

NATS - Wiring diagram [BL-102](#)
NAVI - Wiring diagram [AV-112](#)
NAVI Control Unit [AV-190](#)
Navigation system [AV-94](#)
NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)
NVH troubleshooting (EM) [EM-10](#)
NVH troubleshooting (FA) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)
NVIS (Nissan vehicle immobilizer system) [BL-99](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-182](#)
O2H2B2 - Wiring diagram [EC-184](#)
O2S2B1 - Wiring diagram .. [EC-232](#), [EC-243](#), [EC-467](#), [EC-479](#)
O2S2B2 - Wiring diagram .. [EC-234](#), [EC-245](#), [EC-469](#), [EC-481](#)
Oil filter [LU-9](#)
Oil pump (A/T) [AT-272](#)
Oil pump (engine) [LU-10](#)
Oil seal replacement (engine) [EM-97](#)
On board diagnostic system [EC-49](#)
One-way clutch No.1 [AT-278](#)
One-way clutch outer race sub assembly [AT-278](#)
Operating cylinder (clutch)Operating cylinder (clutch) .. [CL-11](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-40](#)
Overheat [EC-491](#)

P

P/SCKT - Wiring diagram [WW-26](#)
Park/Neutral position switch [EC-621](#)
Park/neutral position switch (A/T) [AT-90](#)
Park/neutral position switch (M/T)Park/neutral position

ALPHABETICAL INDEX

switch (M/T)	MT-12
Parking brake control	PB-2
Parking drum brake	PB-5
Parking lamp	LT-134
PCV (positive crankcase ventilation)	EC-46
Periodic maintenance	MA-6
Personal lamp	LT-149
PGC/V - Wiring diagram	EC-361 , EC-588
PHSB1 - Wiring diagram	EC-309
PHSB2 - Wiring diagram	EC-311
Piston ring inspection	EM-140
PNP/SW - Wiring diagram	EC-623
POS - Wiring diagram	EC-302
POWER - Wiring diagram	PG-6
Power door lock	BL-17
Power seat	SE-95
Power socket	WW-26
Power steering fluid level	MA-27
Power steering pressure (PSP) sensor	EC-420
Power supply routing	PG-4
Power transistor	EC-666
Power window	GW-20
PRE/SE - Wiring diagram	EC-378 , EC-384
Precautions (General)	GI-3 , GI-4
Precautions in repairing high strength steel	BL-148
Pressure control solenoid valve A	AT-144
Pressure control solenoid valve B	AT-179
Pressure control solenoid valve C	AT-188
Pressure test (A/T)	AT-56
PS/SEN - Wiring diagram	EC-421

R

Radiator fan - See Cooling fan	CO-18
Rear bumper	EI-16
Rear combination lamp removal and installation ...	LT-148
Rear disc brake	BR-29
Rear door	BL-65 , GW-91
Rear seat	SE-115
Rear seat belt	SB-5
Rear suspension	RSU-5
Rear window	GW-15
Rear window defogger	GW-96
Refrigerant connection precaution	ATC-6
Refrigerant discharging evacuating charging	ATC-119
Refrigerant general precaution	ATC-5
Refrigerant lines	ATC-119
Refrigerant pressure sensor	EC-706 , ATC-126
REMOTE - Wiring diagram	BL-43
Remote keyless entry system	BL-38
Reverse idler shaft (M/T)	MT-20
Reverse main gear (M/T)	MT-20
Revolution sensor (A/T)	AT-109
Road wheel size	GI-44
Rocker cover	EM-43
Room lamp	LT-149
Room lamp - See Interior lamp	LT-149
ROOM/L - Wiring diagram	LT-155

RP/SEN - Wiring diagram	EC-707
-------------------------------	------------------------

S

SAE J1930 terminology list	GI-48
SEAT - Wiring diagram	SE-95 , SE-96
Seat belt inspection	SB-6 , MA-30
Seat belt, front	SB-4
Seat belt, rear	SB-5
Seat, front	SE-110
Seat, rear	SE-115
SEN/PW - Wiring diagram	EC-508
SHADE - Wiring diagram	EI-37
SHIFT - Wiring diagram	AT-234
Shift control components (M/T)	MT-22
Shift control components (M/T)	MT-13
Shift fork (M/T)	MT-22
Shift lock system	AT-233
Shift schedule	AT-63
Shift solenoid valve A (A/T)	AT-149
Shift solenoid valve B (A/T)	AT-154
Shift solenoid valve C (A/T)	AT-159
Shift solenoid valve D (A/T)	AT-169
Shift solenoid valve E (A/T)	AT-174
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-51
Side curtain air bag	SRS-48
Side trim	EI-33
Spare tire size	GI-44
Spark plug	EM-38
Spark plug replacement	MA-18
Specification value	EC-152
Speedometer	DI-5
Spiral cable	SRS-45
SROOF - Wiring diagram	RF-12
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-13
SRS Trouble diagnoses	SRS-9
Stabilizer bar (front)	FSU-11
Stall test (A/T)	AT-54
Standardized relay	PG-66
START - Wiring diagram	SC-11
Starting system	SC-10
Steering gear and linkage inspection	MA-27
Steering knuckle	FAX-6
Step lamp	LT-149
Stop lamp	LT-129
Stop lamp switch	EC-608 , EC-632 , EC-712
STOP/L - Wiring diagram	LT-130
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-97 , ATC-105
Sunroof	RF-21
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-13
Symbols and abbreviations	GI-8 , GI-9 , GI-20

A
B
C
D
E
F
G
H
I
J
K
L

I DX

ALPHABETICAL INDEX

Symptom matrix chart [EC-104](#)
 Synchronizer (M/T) [MT-20](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-134](#)
 TAIL/L - Wiring diagram [LT-137](#)
 TCM circuit diagram [AT-53](#)
 TCM inspection table [AT-72](#)
 TCS - Wiring diagram [BRC-58](#), [BRC-101](#)
 TCS (traction control system) [BRC-49](#), [BRC-91](#)
 TCS system components [BRC-56](#), [BRC-99](#)
 TCS wheel sensors [BRC-50](#), [BRC-93](#)
 Theft warning system - See Vehicle security (Theft warning) system [BL-79](#)
 Three way catalyst [EM-27](#)
 Three way catalyst function (Bank 1) [EC-338](#)
 Three way catalyst function (Bank 2) [EC-338](#)
 Three way catalyst precautions [GI-3](#), [GI-5](#)
 Throttle control motor [EC-459](#)
 Throttle control motor relay [EC-454](#)
 Throttle position sensor (TPS) .. [EC-215](#), [EC-280](#), [EC-503](#), [EC-505](#), [EC-651](#)
 Throttle valve closed position learning [EC-90](#)
 Tightening torque of standard bolts [GI-42](#)
 Time lag test [AT-55](#)
 Timing chain [EM-58](#)
 Tire rotation [MA-25](#)
 Tire size [GI-44](#)
 Torque converter installation [AT-243](#)
 Torque convertor clutch solenoid valve [AT-141](#)
 Tow truck towing [GI-41](#)
 Towing point [GI-41](#)
 TPS1 - Wiring diagram [EC-282](#)
 TPS2 - Wiring diagram [EC-217](#)
 TPS3 - Wiring diagram [EC-653](#)
 Traction control system - See TCS .. [BRC-49](#), [BRC-91](#)
 Traction control system - Wiring diagram [BRC-58](#), [BRC-101](#)
 Transaxle case cover [AT-280](#)
 Transaxle serial number [GI-44](#)
 Transmission case (M/T) [MT-19](#)
 TRANSMT - Wiring diagram [BL-118](#)
 Tread-FR&RR (Dimensions) [GI-44](#)
 Trim [EI-33](#)
 Trouble diagnoses [GI-9](#)
 Trunk lid trim [EI-44](#)
 Trunk room lamp [LT-149](#)
 Trunk room trim [EI-44](#)
 Turbine revolution sensor [AT-105](#)
 TURN - Wiring diagram [LT-95](#)
 Turn signal lamp [LT-91](#)
 Two trip detection logic [EC-49](#)
 Two-pole lift [GI-38](#)

U

Unified meter and A/C amp. [DI-30](#)

V

Vacuum hose (brake system)Vacuum hose (brake system) [BR-21](#)
 Vacuum hose drawing (Engine control) [EC-117](#)
 Valve clearance [EM-93](#)
 Valve guide [EM-112](#), [EM-113](#)
 Valve seat [EM-114](#)
 Valve spring [EM-115](#)
 Vanity mirror lamp [LT-149](#)
 Variable induction air control system (VIAS) .. [EC-627](#), [EC-679](#)
 VDC (vehicle dynamics control) [BRC-91](#)
 VDC -Wiring diagram [BRC-101](#)
 Vehicle identification number [GI-44](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-41](#)
 Vehicle security (theft warning) system [BL-79](#)
 Vehicle speed sensor (VSS) [EC-414](#)
 VEHSEC - Wiring diagram [BL-84](#)
 VENT/V - Wiring diagram [EC-368](#), [EC-596](#)
 VIAS - Wiring diagram [EC-681](#)
 VIAS/V - Wiring diagram [EC-628](#)
 VIN registration [EC-90](#)
 Viscosity number (SAE) [MA-10](#)

W

W/ANT - Wiring diagram [AV-62](#)
 WARN - Wiring diagram [DI-42](#)
 Warning chime [DI-53](#)
 Warning lamps [DI-41](#)
 Washer, front [WW-3](#)
 Water temperature gauge [DI-5](#)
 Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
 Wheel balance [MA-23](#)
 Wheel bearing (front axle) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-5](#), [FAX-6](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel sensor (VDC) [BRC-93](#)
 Wheel sensors (ABS) [BRC-9](#), [BRC-50](#), [BRC-93](#)
 Wheel sensors (TCS) [BRC-50](#), [BRC-93](#)
 Wheel size [GI-44](#)
 Wheelarch heightWheelarch height [RSU-14](#)
 Wheelbase (Dimensions) [GI-44](#)
 Width (Dimensions) [GI-44](#)
 WINDOW - Wiring diagram [GW-29](#)
 Window, door [GW-88](#), [GW-91](#)
 Window, rear [GW-15](#)
 Windshield [GW-12](#)
 Windshield washer - See Front washer [WW-3](#)
 Windshield wiper - See Front wiper [WW-3](#)
 WIPER - Wiring diagram [WW-6](#)
 Wiper and washer [WW-3](#)
 Wiper, front [WW-3](#)
 Wiring Diagram (Cell code) list [PG-55](#)
 Wiring diagrams [GI-8](#), [GI-13](#)