



SUPER MULTIPLE JUNCTION (SMJ)

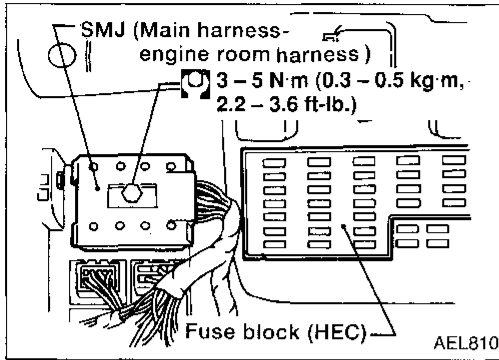

INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg·m, 2.2 - 3.6 ft·lb)



CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

SUPER MULTIPLE JUNCTION (SMJ)


Terminal Arrangement

MAIN ROOM HARNESS

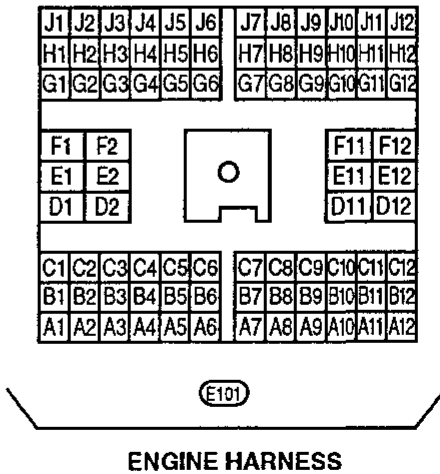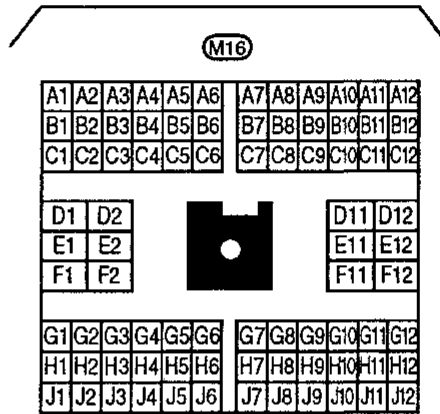


JOINT CONNECTOR (J/C)

Location



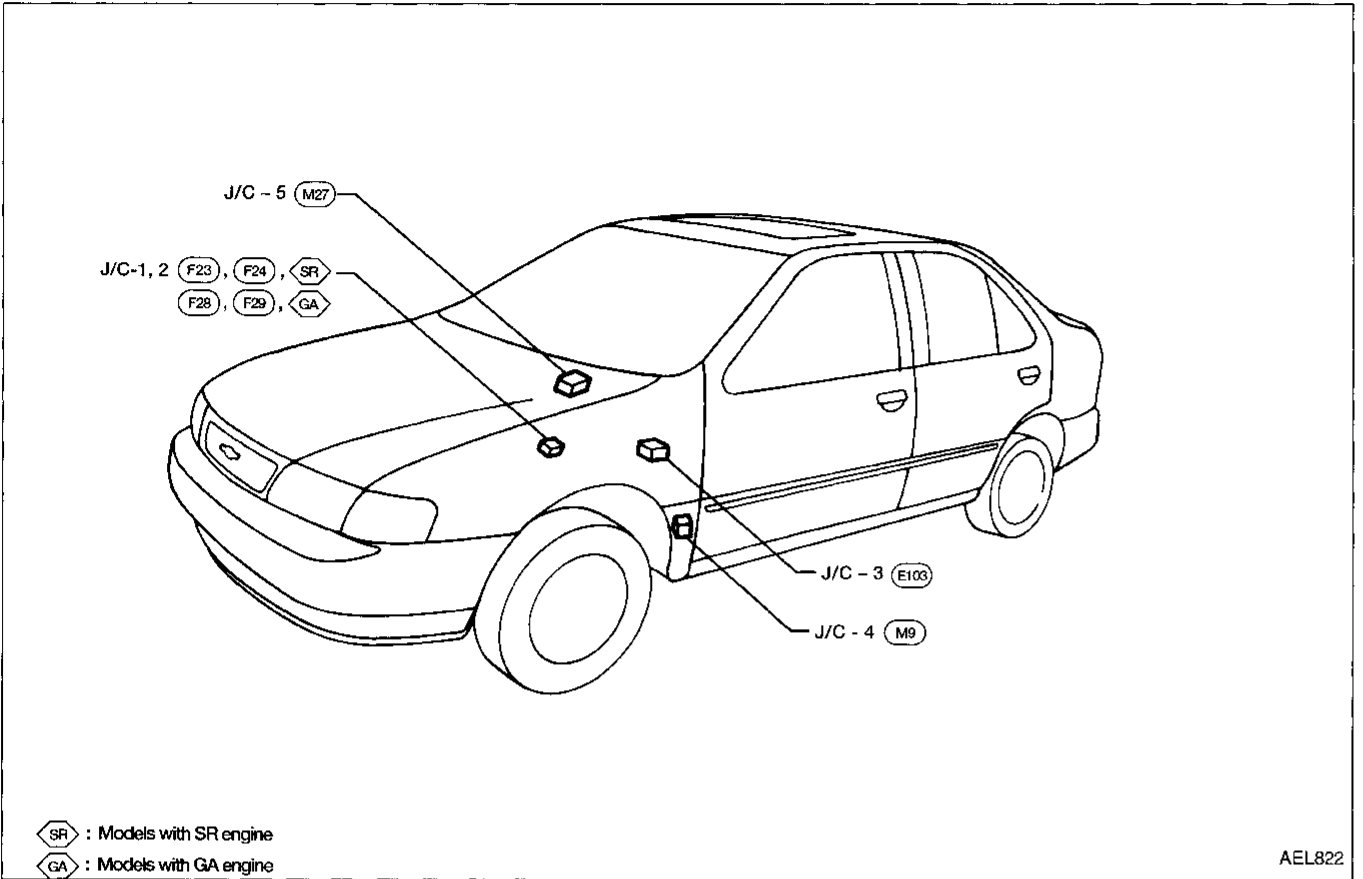


Terminal Arrangement

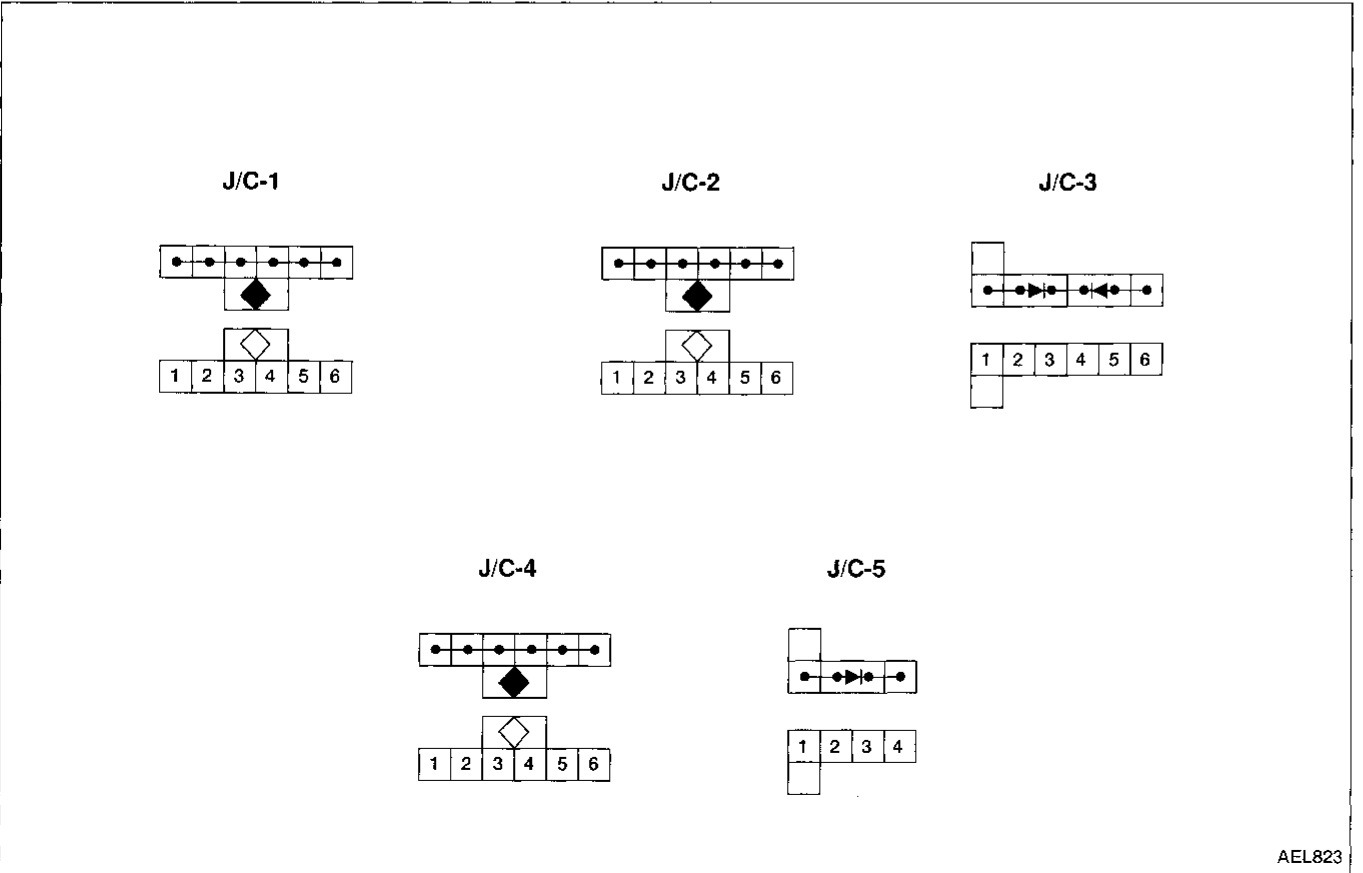

HYBRID ELECTRIC CONTROL UNIT (HEC)


Construction and Terminal Arrangement

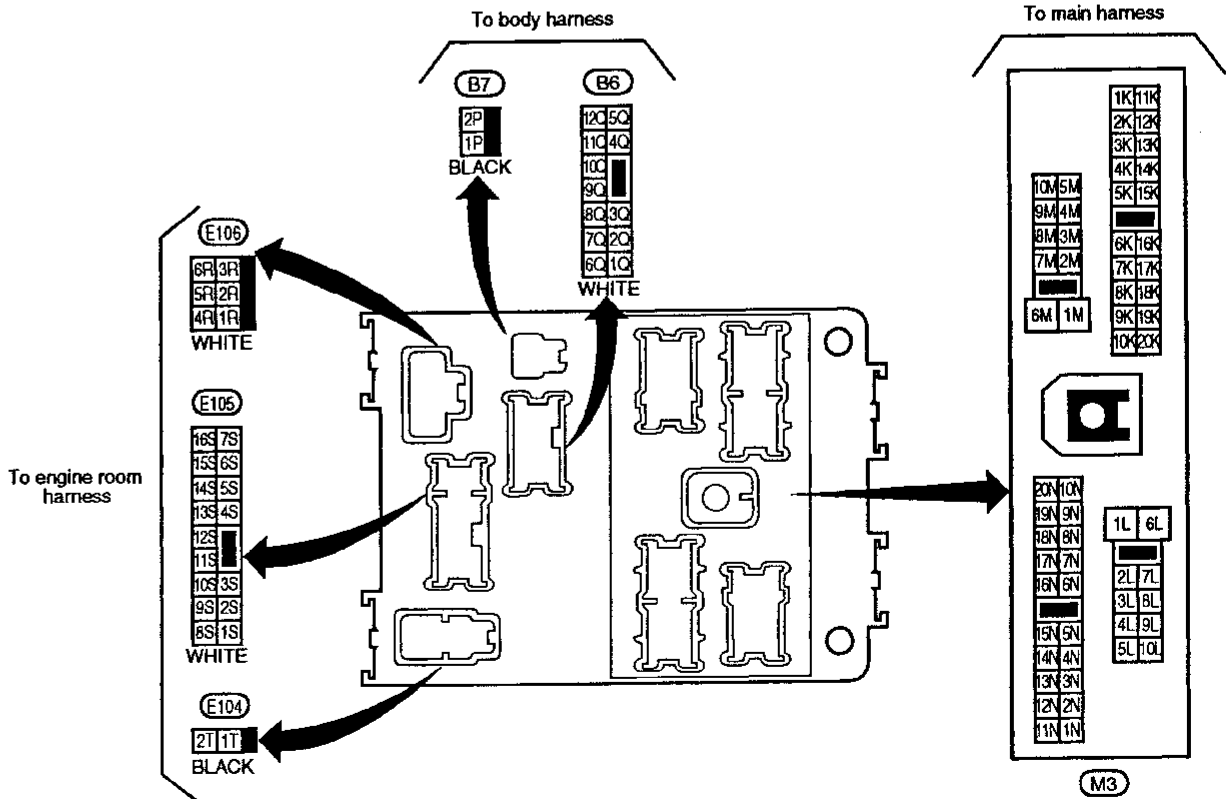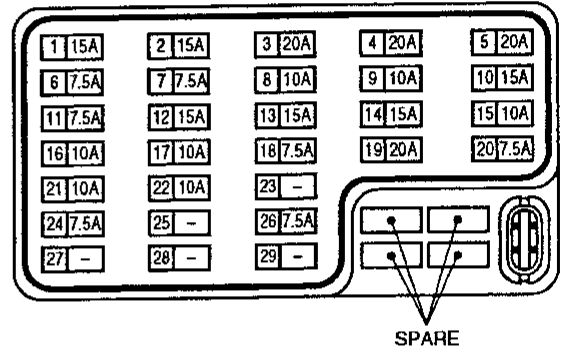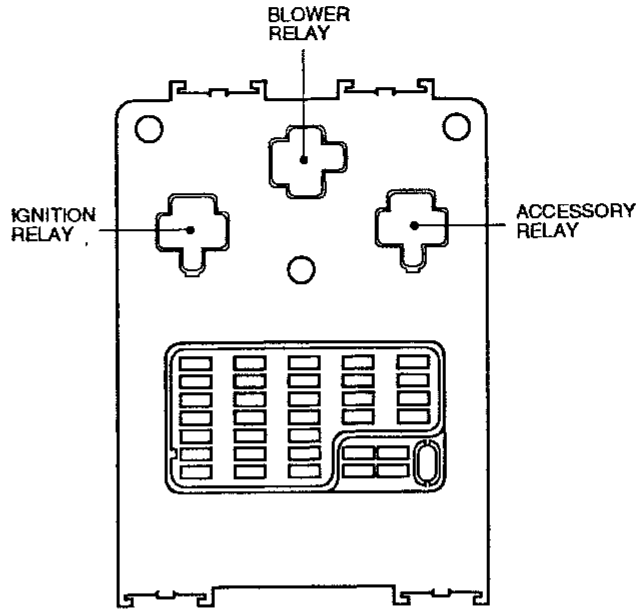


FUSE BLOCK/FUSIBLE LINK AND FUSE BOX

Fuse Arrangement

Fusible link box (E15)

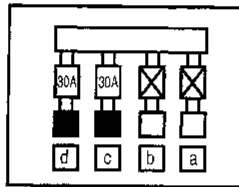


Fusible link box (E17)

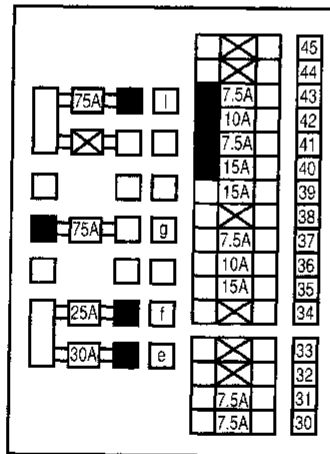


CONTROL UNITS

 
SMART ENTRANCE CONTROL UNIT




AIRBAG DIAGNOSIS SENSOR UNIT

 


ABS CONTROL UNIT

 

A/T CONTROL UNIT

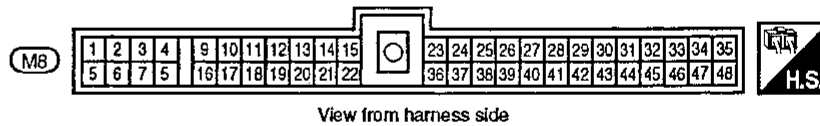

ECM (ECCS CONTROL MODULE)

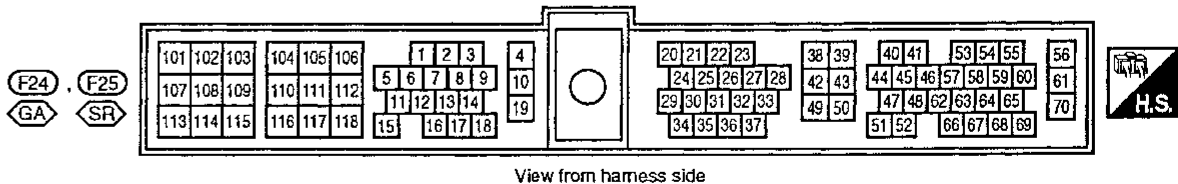

- : Models with GA engines
- : Models with SR engines