

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

- AAC/V - Wiring diagram.....EC-458, 1111, 1779
- ABS - Wiring diagram.....BR-43
- ABS sensor rotorAX-23
- Absolute pressure
sensorEC-185, 859, 1130, 1524
- A/C - Wiring diagramHA-23
- A/C air flowHA-17
- A/C component layoutHA-15
- A/C compressor clutch removal and
installationHA-67
- A/C compressor mountingHA-66
- A/C compressor precautionHA-6
- A/C compressor special service toolHA-10
- A/C control linkage adjustment (manual
A/C)HA-32
- A/C control operation (manual A/C)HA-16
- A/C diagnostic work flow (manual A/C).....HA-25
- A/C HFC134a (R134a) system
identificationHA-6
- A/C HFC134a (R134a) system
introduction.....HA-14
- A/C HFC134a (R134a) system
precaution.....HA-2
- A/C HFC134a (R134a) system service
procedureHA-61
- A/C HFC134a (R134a) system service
toolsHA-11
- A/C HFC134a system service equipment
precaution.....HA-7
- A/C lubricant (R134a)HA-63
- A/C lubrication oil.....HA-63
- A/C operational checkHA-26
- A/C performance chartHA-52
- A/C performance test diagnosesHA-52
- A/C pressure switch.....HA-14
- A/C push control.....HA-16
- A/C relayHA-49
- A/C service data specificationHA-81
- A/C switch.....HA-16
- A/C trouble diagnoses (manual A/C).....HA-19
- A/C, M - Wiring diagram.....HA-23
- Accelerator control system.....FE-3
- Accelerator wire adjustment.....FE-3
- Air bagRS-13
- Air bag disposalRS-25
- Air bag precautionsGI-3
- Air bleeding (hydraulic clutch).....CL-7
- Air bleeding for brake system.....BR-8
- Air cleaner filter replacementMA-20, 29
- Air conditioner - Wiring diagram.....HA-23
- Air conditioner cut controlEC-48, 725, 1389
- Air control cable adjustmentHA-34
- Air flow meter - See Mass air flow
sensorEC-176, 850, 1515
- Air mix door control linkage
adjustment.....HA-35
- Air spoiler, rearBT-31
- AlternatorSC-17
- Angular tightening application.....EM-4, 77
- AntennaEL-166
- Anti-lock brake system - Wiring
diagramBR-43
- AP/SEN - Wiring
diagramEC-186, 860, 1132, 1525
- ASCD (automatic speed control
device)EL-173
- ASCD - Wiring diagram.....EL-178
- A/T - Wiring diagram - AT - FTSAT-122, 282
- A/T - Wiring diagram - AT -
MAINAT-112, 272
- A/T - Wiring diagram - AT -
PNP/SWAT-116, 276
- A/T - Wiring diagram - AT - VSS
A/TAT-128, 288
- A/T controlEC-472, 1125, 1793
- A/T diagnosis communication
lineEC-657, 1322, 1909
- A/T fluid temperature sensor.....AT-125, 285
- A/T shift lock systemAT-425
- A/T shift lock system - Wiring
diagramAT-426
- A/T trouble diagnosesAT-59
- A/T Wiring diagram - AT -
ENG SSAT-132, 292
- A/T Wiring diagram AT - 1STAT-138, 298
- A/T Wiring diagram AT - 2NDAT-145, 305
- A/T Wiring diagram AT - 3RD.....AT-151, 311
- A/T Wiring diagram AT - 4TH.....AT-157, 317
- A/T Wiring diagram AT - BA/FTSAT-205, 365
- A/T Wiring diagram AT - LPSVAT-179, 339
- A/T Wiring diagram AT -
NONDTC.....AT-218, 377
- A/T Wiring diagram AT -
OVRCSV.....AT-200, 360
- A/T Wiring diagram AT - SSV/AAT-184, 344
- A/T Wiring diagram AT - SSV/BAT-188, 348
- A/T Wiring diagram AT -
TCCSIGAT-170, 330
- A/T Wiring diagram AT - TCVAT-164, 324
- A/T Wiring diagram AT - TPS.....AT-193, 353
- A/T Wiring diagram AT -
VSSMTRAT-212, 371
- AT/C - Wiring diagramEC-1126, 1794
- ATDIAG - Wiring diagram.....EC-1323, 1910
- AudioEL-161
- AUDIO - Wiring diagramEL-162
- Audio and A/C control removal and installation -
See Instrument panelBT-21
- Automatic speed control system - See
ASCDEL-173
- Automatic transaxle numberGI-45

ALPHABETICAL INDEX

Automatic transmission fluid replacementMA-36
 Auxiliary air control (AAC) valve.....EC-455, 1108, 1776

B

Back-up lampEL-52
 Back-up lamp switch (M/T).....MT-10
 BACK/L - Wiring diagram.....EL-52
 Ball joint (front)SU-12
 Base idle air volume initialingEC-83, 756, 1424
 Basic inspectionEC-131, 802, 1470
 Battery.....SC-3
 Baulk ring (M/T).....MT-18
 Bi-level door control linkage adjustment.....HA-34
 Blower motor.....HA-41
 Blower resistor.....HA-41
 Blower unit.....HA-72
 Board-on lift.....GI-46
 Body alignment.....BT-51
 Boring/honing cylinder blockEM-134
 Brake boosterBR-17
 Brake control valve (Proportioning valve).....BR-11
 Brake fluid change.....BR-7
 Brake fluid level.....MA-37
 Brake fluid level and line check.....BR-7
 Brake hydraulic lineBR-9
 Brake inspection.....MA-37
 Brake lines and cables inspectionMA-37
 Brake pedal.....BR-12
 Bulb specifications.....EL-348
 Bumper, front.....BT-13
 Bumper, rear.....BT-16
 BYPS/V - Wiring diagram.....EC-643, 1306, 1313, 1893, 1900

C

Camshaft inspectionEM-35, 111
 Camshaft position sensor (CMPS)EC-363, 1014, 1683
 Canister-See EVAP canisterEC-49, 726, 1390
 CHARGE - Wiring diagram.....SC-15
 Charging system.....SC-14
 Chassis and body maintenance.....MA-35
 CHIME - Wiring diagramEL-118
 CIGAR - Wiring diagramEL-144
 Cigarette lighter.....EL-144
 Circuit breaker.....EL-19
 CKPS - Wiring diagram.....EC-359, 561, 1010, 1679, 1827

Closed loop control.....EC-523, 1175, 1800
 Closed throttle position switchEC-464, 1117, 1785
 Clutch coverCL-17
 Clutch disc.....CL-17
 Clutch fluid levelMA-35
 Clutch master cylinderCL-8
 Clutch operating cylinder.....CL-11
 Clutch pedalCL-6
 Clutch release bearing.....CL-14
 Clutch release mechanism.....CL-14
 Clutch withdrawal lever.....CL-14
 CMPS - Wiring diagramEC-364, 1015, 1685
 Coil spring (front)SU-9
 Coil spring (rear).....SU-21
 Collision diagnosisRS-65
 Combination lamp, front, removal and installationBT-13
 Combination lamp, rear, removal and installationBT-31
 Combination meterEL-85
 Combination meter removal and installation - See Instrument panelBT-21
 Combination switchEL-32
 Component Location (manual A/C)HA-19
 Compression pressureEM-16, 87
 Compressor clutch removal and installationHA-67
 Compressor mountingHA-66
 Compressor precautionHA-6
 Compressor special service toolHA-10
 Connecting rod.....EM-56, 133
 Connecting rod bearing clearanceEM-60, 137
 Connecting rod bushing clearanceEM-61, 138
 Connector inspectionGI-22
 Console box - See Instrument panelBT-21
 CONSULT for ABSBR-48
 CONSULT for engineEC-107, 779, 1447
 CONSULT-II general informationGI-39
 Control lever (M/T).....MT-16
 Control units (terminal arrangement)EL-353
 Control valve (A/T)AT-465
 Converter housing installationAT-535
 COOL/F - Wiring diagramEC-334, 535, 985, 1179, 1654, 1805
 Coolant mixture ratioMA-15
 Coolant replacement.....MA-17, 26
 Cooling circuit (engine)LC-10, 28
 Cooling fan.....LC-15, 33
 Cooling fan controlEC-532, 1176, 1802
 Cooling fan control systemLC-18, 36
 Cooling fan motorEC-548, 1192, 1819
 Cooling fan relayEC-547, 1191, 1818
 Cooling unit (A/C evaporator).....HA-73
 Coupling sleeve (M/T)MT-18

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

IDX

ALPHABETICAL INDEX

Crank angle sensor built into distributor -
See Camshaft position
sensorEC-363, 1014, 1683
Crankcase emission control system - See
positive crankcase
ventilation.....EC-65, 742, 1406
Crankcase ventilation system - See
Positive crankcase
ventilation.....EC-65, 742, 1406
Crankshaft.....EM-58, 135
Crankshaft position sensor
(OBD)EC-358, 560, 1009, 1678, 1826
Crankshaft position sensor (OBD) cog
chipping.....EC-560, 1826
Cruise control - See ASCDEL-173
Cylinder block.....EM-53, 130
Cylinder block boring.....EM-134
Cylinder head.....EM-31, 105
Cylinder head bolt tighteningEM-42, 121

D

Data link connector for Consult.EC-67, 107, 744,
779, 1408, 1447
Daytime light system.....EL-40
Daytime running light - See Daytime light
system.....EL-40
DEF - Wiring diagramEL-148
Detonation sensor - See Knock
sensorEC-354, 1005, 1674
Diagnosis sensor unitRS-18
Diagnostic trouble code (DTC) for OBD
system.....EC-22, 86, 701, 759, 1366, 1427
Diagnostic trouble code (DTC) inspection
priority chart.....EC-145, 817, 1484
Differential gear (FF A/T).....AT-515
Differential gear (FF M/T).....MT-20, 40
DimensionsGI-45
DistributorEC-47, 724, 1388
Distributor ignition (DI)
system.....EC-47, 724, 1388
D/LOCK - Wiring diagramEL-202
Dome light - See Interior lamp.....EL-64
Door mirrorBT-49
Door trim.....BT-27
Door, front.....BT-19
Door, rearBT-19, 20
Drive belt inspection.....MA-16, 25
Drive plate runout.....EM-61, 139
Drive shaft (front)AX-10
Dropping resistor (A/T).....AT-182, 342
DTC work supportEC-122, 794, 1462
DTRL - Wiring diagramEL-44

E

ECM input/output signalEC-156, 828, 1495
ECTS - Wiring diagram.....EC-198, 215, 872,
888, 1537, 1553
EGR temperature
sensorEC-565, 1244, 1831
EGR/TS - Wiring
diagram.....EC-568, 1247, 1834
EGRC1 - Wiring
diagram.....EC-373, 381, 575, 1024,
1032, 1254, 1694, 1702, 1841
Electric sun roofEL-167
Electrical diagnoses.....GI-25
Electrical ignition system.....EC-47, 724, 1388
Electrical unit.....EL-353
Electrical units location.....EL-325
Electronic ignition (EI)
system.....EC-47, 724, 1388
Engine compartmentBT-52
Engine control circuit
diagram.....EC-39, 718, 1381
Engine control component parts
location.....EC-34, 713, 1378
Engine control module
(ECM).....EC-474, 1128, 1796
Engine control system diagram and
chart.....EC-41, 720, 1383
Engine coolant temperature sensor
(ECTS).....EC-196, 213, 870,
886, 1535, 1551
Engine fail-safe systemEC-146, 818, 1485
Engine oil filter replacementMA-21, 30
Engine oil precautionsGI-7
Engine oil replacementMA-20, 29
Engine outer component parts.....EM-12, 84
Engine removalEM-49, 127
Engine room - See Engine
compartment.....BT-52
Engine serial number.....GI-44
EVAP canisterEC-50, 727, 1391
EVAP canister purge volume control solenoid
valve.....EC-403, 597, 1055,
1260, 1725, 1847
EVAP canister vent control
valveEC-409, 609, 629, 1061,
1272, 1292, 1731, 1859, 1879
EVAP control system (small leak)
diagnosisEC-52, 389, 428, 580, 728,
1040, 1080, 1258, 1393, 1710, 1750, 1845
EVAP control system pressure
sensorEC-416, 1068, 1738
EVAP control system purge flow monitoring
diagnosis.....EC-617, 1280, 1867
EVAP system close modeEC-52, 728, 1393
EVAP vapor lines inspection.....MA-23, 33

ALPHABETICAL INDEX

Evaporative emission (EVAP)
 system.....EC-49, 726, 1390
 Exhaust gas recirculation (EGR)
 valve.....EC-369, 573, 1020,
 1252, 1690, 1839
 Exhaust system.....FE-15
 Exhaust system inspection.....MA-35
 ExteriorBT-31

F

Fan switch.....HA-41
 F/FOG - Wiring diagram.....EL-54
 Final drive (FF A/T)AT-515
 Final drive (FF M/T).....MT-20, 40
 Finisher, interior - See Trim.....BT-25
 Finisher, trunk lid.....BT-30
 Floor trimBT-25
 Fluid temperature sensor (A/T)AT-125, 285
 FluidsMA-13
 Flywheel (clutch)CL-18
 Flywheel runout.....EM-61, 139
 Fog lamp, front.....EL-53
 Fog lamp, front, removal and
 installation.....BT-13
 Fork rod (M/T).....MT-19
 Forward clutchAT-490
 F/PUMP - Wiring
 diagram.....EC-675, 1339, 1927
 Freeze frame data.....EC-86, 759, 1427
 FRO2 - Wiring diagram.....EC-221, 243, 253,
 1196, 1201, 1218, 1226, 1559, 1578, 1586
 FRO2/H - Wiring
 diagram.....EC-261, 1230, 1592
 Front axle.....AX-2
 Front bumper.....BT-13
 Front combination lamp removal and
 installation.....BT-13
 Front disc brake.....BR-20
 Front door.....BT-19
 Front fog lamp.....EL-53
 Front fog lamp removal and installation.....BT-13
 Front heated oxygen sensor
 (HO2S)EC-218, 227, 233, 240, 251,
 1193, 1198, 1203, 1209, 1215, 1223, 1556,
 1563, 1569, 1575, 1584
 Front heated oxygen sensor (HO2S)
 heater.....EC-259, 1228, 1590
 Front passenger air bagRS-23
 Front seatBT-37
 Front seat belt.....RS-5
 Front suspensionSU-2
 Front washerEL-137
 Front wiperEL-137
 FUEL - Wiring diagramEC-308, 317, 963,
 970, 1632, 1639

Fuel cut control (at no load & high engine
 speed).....EC-49, 726, 1390
 Fuel filterEC-744
 Fuel gaugeEL-85
 Fuel injection
 system.....EC-306, 315, 961, 968, 1630, 1637
 Fuel injector.....EC-665, 1329, 1917
 Fuel line inspectionMA-19, 28
 Fuel precautionsGI-8
 Fuel pressure check.....EC-67, 744, 1408
 Fuel pressure regulatorEC-68, 1409
 Fuel pressure releaseEC-67, 744, 1408
 Fuel pumpEC-674, 1338, 1926
 Fuel pump relayEC-674, 1338, 1926
 Fuel system.....FE-5
 Fuel tank temperature
 sensorEC-324, 975, 1644
 Fuel tank vacuum relief
 valve.....EC-50, 727, 1391
 Fuse.....EL-19
 Fuse block.....EL-351
 Fusible linkEL-19

G

Garage jack and safety stand.....GI-47
 GaugesEL-85
 Gear components (M/T)MT-18
 Generator.....SC-17
 Generator - See AlternatorSC-17
 Generic scan tool (GST)EC-125, 796, 1464
 Grease.....MA-13
 Ground distributionEL-20

H

Harness connectorEL-5
 Harness connector inspectionGI-22
 Harness layoutEL-328
 Hazard warning lampEL-56
 HeadlampEL-35
 Headlamp removal and installation.....BT-13
 Headlining - See Roof trim.....BT-29
 Heated oxygen sensor (HO2S)
 (front)EC-218, 227, 233, 240, 251,
 1193, 1198, 1203, 1209, 1215, 1223, 1556,
 1563, 1569, 1575, 1584
 Heated oxygen sensor (HO2S) heater
 (front)EC-259, 1228, 1590
 Heated oxygen sensor (HO2S) heater
 (rear)EC-300, 921, 956, 1625
 Heated oxygen sensor
 (rear).....EC-265, 274, 283, 292, 891, 899,
 907, 915, 926, 934, 942, 950, 1595, 1603,
 1611, 1619
 HEATER - Wiring diagram.....HA-22

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
IDX

ALPHABETICAL INDEX

Heater mirrorEL-170
Heater system - Wiring diagram.....HA-22
Heater unit (heater core)HA-71
Height (Dimensions)GI-45
HFC134a (R134a) system identification.....HA-6
HFC134a (R134a) system
 introduction.....HA-14
HFC134a (R134a) system precaution.....HA-2
HFC134a (R134a) system service
 procedureHA-61
HFC134a (R134a) system service
 toolsHA-11
HFC134a system service equipment
 precaution.....HA-7
High clutch.....AT-485
H/LAMP - Wiring diagramEL-36
H/MIRROR - Wiring diagramEL-170
HoodBT-13
Horn.....EL-143
HORN - Wiring diagramEL-143
How to erase DTC for OBD
 system.....EC-98, 770, 1438
Hydraulic lash adjuster inspection.....EM-116

I

IACV-AAC valveEC-455, 1108, 1776
IATS - Wiring diagram.....EC-192, 866, 1531
Identification plate.....GI-44
Idle air control (IAC)
 system.....EC-455, 1108, 1776
Idle air control valve
 (IACV)EC-455, 1108, 1776
Idle mixture ratio.....EC-71, 747, 1412
Idle speed.....EC-71, 747, 1412
IGN/SG - Wiring
 diagramEC-550, 1234, 1821
Ignition coil.....EC-1825
Ignition control systemEC-549, 1233, 1820
Ignition timingEC-71, 747, 1412
Ignition wire inspectionEC-1673
ILL - Wiring diagram.....EL-62
IlluminationEL-61
INJECT - Wiring
 diagramEC-666, 1330, 1918
Injector removal and
 installation.....EC-68, 745, 1409
Input shaft (FF M/T)MT-18, 27
Instrument panel.....BT-21
INT/L - Wiring diagramEL-68
Intake air temperature
 sensorEC-190, 864, 1529
Intake door control linkage adjustmentHA-32
Intake door motorHA-29
Intake manifold.....EM-12, 84
InteriorBT-25

Interior lampEL-64

J

Jacking pointsGI-47
Joint connector (J/C)EL-354
Junction box (J/B)EL-351

K

Keyless entry system - See Multi-remote
 control system.....EL-229
Knock sensor (KS)EC-354, 355,
 1005, 1006, 1674, 1675
Knuckle spindle.....AX-5

L

Length (Dimensions).....GI-45
License lampEL-49
Lifting points.....GI-48
Line pressure solenoid valveAT-162, 322
Line pressure test (A/T).....AT-72
Liquid gasket application.....EM-4, 77
LOAD - Wiring diagram.....EC-689, 1353, 1942
Location of electrical units.....EL-325
Low and reverse brake.....AT-497
Lubricant (R134a) A/CHA-63
Lubricants.....MA-13
Lubrication circuit (engine).....LC-4, 22
Lubrication oil A/C.....HA-63
Lubrication-locks, hinges and hood
 latches.....MA-40
Luggage room lampEL-64

M

MAFS - Wiring diagram.....EC-180, 854, 1519
Magnet clutchHA-67
MAIN - Wiring diagram.....EC-170, 843, 1509
Main drive gear (M/T)MT-18
Mainshaft (M/T)MT-18, 32
Maintenance (engine)MA-16, 25
MAJOR OVERHALL.....AT-439
Malfunction indicator lamp
 (MIL).....EC-100, 772, 1440
Manual air conditioner - Wiring
 diagramHA-23
Manual transaxle numberGI-45
Manual transmission oil replacement.....MA-35
Mass air flow sensor
 (MAFS).....EC-176, 850, 1515
Master cylinder (clutch).....CL-8

ALPHABETICAL INDEX

MeterEL-85
 METER - Wiring diagramEL-93
 MIL & Data link connectors
 circuit.....EC-698, 1363, 1954
 MIL/DL - Wiring
 diagramEC-698, 1363, 1954
 MIRROR - Wiring diagramEL-169
 Mirror defoggerEL-170
 Mirror, doorBT-49
 MisfireEC-347, 998, 1667
 Model variation.....GI-42
 Molding - See ExteriorBT-31
 M/T major overhaul.....MT-17
 M/T removal and installationMT-12
 MULTI - Wiring diagramEL-234
 Multi-remote control systemEL-229
 Multiport fuel injection (MFI)
 system.....EC-45, 722, 1386
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system).....EL-305
 NATS - Wiring diagramEL-307
 Neutral position switchEC-659, 1325, 1912
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-6
 NVH troubleshooting (CL).....CL-4
 NVH troubleshooting (EM).....EM-10, 82
 NVH troubleshooting (M/T).....MT-6
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-15
 NVIS (Nissan vehicle immobilizer
 system)EL-305

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-17, 88
 Oil pressure (engine)LC-5, 22
 Oil pump (A/T)AT-461
 Oil pump (engine)LC-5, 23
 Oil pump regulator valve (engine)LC-7, 24
 Oil seal replacement (engine).....EM-29, 102
 On board diagnostic
 system.....EC-85, 758, 1426
 Operating cylinder (clutch)CL-11
 ORVR (On-board Refueling Vapor
 Recovery).....EC-55, 732, 1396
 Overdrive control switch.....AT-265, 422
 Overrun clutchAT-490
 Oversize piston.....EM-134

P

Park/Neutral position
 switchEC-659, 1325, 1912
 Park/neutral position switch
 (A/T)AT-115, 275
 Park/neutral position switch (M/T)MT-10
 Parking brake control.....BR-36
 Parking drum brakeBR-32
 Parking lampEL-49
 PCM inspection tableAT-268
 PCV (positive crankcase
 ventilation).....EC-65, 742, 1406
 PGC/V - Wiring diagramEC-405, 600, 1057,
 1263, 1727, 1850
 Pilot bushing replacement.....EM-138
 Piston assemblyEM-62, 139
 Piston pin inspectionEM-55, 132
 Piston ring inspection.....EM-55, 132
 Piston to bore clearanceEM-57, 134
 PNP/SW - Wiring
 diagramEC-661, 1327, 1914
 POWER - Wiring diagramEL-11
 Power door lockEL-198
 Power door mirrorEL-169
 Power steering fluid levelMA-39, ST-7
 Power steering gearST-15
 Power steering hydraulic pressure.....ST-9
 Power steering oil pressure
 switchEC-680, 1344, 1932
 Power steering oil pumpST-21, 24
 Power steering system bleedingST-7
 Power supply routing.....EL-9
 Power transistorEC-1825
 Power transistor & ignition
 coil.....EC-549, 1233, 1820
 Power windowEL-193
 PRE/SE - Wiring diagram ...EC-418, 1070, 1740
 Precautions (General).....GI-4
 Pressure plate - See Clutch cover.....CL-17
 Pressure test (A/T)AT-72
 PST/SW - Wiring
 diagramEC-681, 1345, 1933

R

Radiator.....LC-15, 33
 Radiator fan - See Cooling fan.....LC-18, 36
 Radio - See AudioEL-161
 Rear air spoiler.....BT-31
 Rear axle.....AX-21
 Rear axle (disc brake type)AX-23
 Rear axle (drum brake type).....AX-23
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-31

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ALPHABETICAL INDEX

Rear disc brake	BR-24	Shift solenoid valve A	
Rear door	BT-19, 20	(A/T).....	AT-140, 153, 300, 313
Rear drum brake.....	BR-32	Shift solenoid valve B (A/T)	AT-140, 300
Rear heated oxygen sensor		Shock absorber (front).....	SU-9
(HO2S).....	EC-265, 274, 283, 292,	Shock absorber (rear).....	SU-21
891, 899, 907, 915, 926, 934, 942, 950, 1595,		Side air bag	RS-24
1603, 1611, 1619		Side trim	BT-25
Rear heated oxygen sensor (HO2S)		Smart entrance control unit.....	EL-291
heater.....	EC-300, 921, 956, 1625	Spare tire size.....	GI-45
Rear seat.....	BT-39	Spark plug replacement.....	MA-22, 31
Rear seat belt.....	RS-7	Speedometer.....	EL-85
Rear suspension.....	SU-15	Spiral cable.....	RS-20
Rear window.....	BT-46	Spring (Wheelarch) height.....	SU-6
Rear window defogger	EL-145	SROOF - Wiring diagram.....	EL-168
Refrigerant pressure sensor.....	HA-49	SRS - See Supplemental Restraint	
Refrigerant connection precaution.....	HA-3	System	RS-13
Refrigerant general precaution.....	HA-3	SRS - Wiring diagram.....	RS-38
Refrigerant lines.....	HA-75	SRS Trouble diagnoses.....	RS-32
Refrigerant pressure		S/SIG - Wiring diagram.....	EC-671, 1335, 1923
sensor	EC-684, 1348, 1937	Stabilizer bar (front).....	SU-10
Refrigeration cycle.....	HA-14	Stall test (A/T).....	AT-68
Release bearing (clutch).....	CL-14	Standardized relay	EL-7
Removal and installation (A/T)	AT-436	START - Wiring diagram.....	SC-7
Resistor.....	EC-1825	Start signal	EC-670, 1334, 1922
Reverse clutch.....	AT-481	Starter	SC-10
Reverse idler shaft (M/T).....	MT-17	Starting system.....	SC-6
Reverse lamp switch (M/T) - See Back-up		Steering gear, linkage and transfer gear	
lamp switch (M/T).....	MT-10	inspection.....	MA-39
Reverse main gear (M/T)	MT-18	Steering linkage.....	ST-15
Road wheel size	GI-45	Steering switch.....	EL-34
Roof trim.....	BT-29	Steering wheel and column.....	ST-10
Room lamp - See Interior lamp.....	EL-64	Steering wheel play.....	ST-6
RRO2 - Wiring		Steering wheel turning force	ST-8
diagram.....	EC-267, 276, 285, 294,	Stop lamp	EL-51
893, 901, 909, 917, 928, 936, 944, 952, 1597,		STOP/L - Wiring diagram	EL-51
1605, 1613, 1621		Striking rod (M/T).....	MT-19
RRO2/H - Wiring		Strut (front).....	SU-9
diagram.....	EC-302, 923, 958, 1627	Strut (rear)	SU-20
		Sub-gear (M/T)	MT-18
		Sun roof, electric.....	EL-167
		Sunroof.....	BT-40
		Supplemental Restraint System	RS-13
		Supplemental restraint system - Wiring	
		diagram	RS-38
		S/VCSW - Wiring diagram.....	EC-525, 1155
		Swirl control valve control solenoid	
		valve.....	EC-489, 512, 1150, 1162
		Swirl control valve control vacuum check	
		switch	EC-525, 1155
		SWL/V - Wiring	
		diagram	EC-489, 512, 1150, 1162
		Symbols and abbreviations.....	GI-9
		Symptom matrix chart	EC-147, 819, 1486
		Synchronizer (M/T)	MT-18
		System readiness test (SRT)	
		code	EC-87, 760, 1428

S

SAE J1930 terminology list.....	GI-51
Seal - See Exterior.....	BT-31
Seat belt inspection	MA-40, RS-9
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal.....	RS-25
Seat belt, front	RS-5
Seat belt, rear.....	RS-7
Seat, front.....	BT-37
Seat, rear.....	BT-39
SHIFT - Wiring diagram	AT-426
Shift control components (M/T)	MT-19
Shift fork (M/T).....	MT-19
Shift lever.....	MT-16
Shift lock system	AT-425
Shift schedule	AT-540

ALPHABETICAL INDEX

T

Tachometer.....EL-85
 Tail lampEL-49
 TAIL/L - Wiring diagramEL-49
 TCM circuit diagramAT-17
 TCM inspection table.....AT-108
 Temperature control cable and linkage
 adjustment.....HA-35
 TFTS - Wiring diagram.....EC-326, 977, 1646
 THEFT - Wiring diagramEL-265
 Theft warning systemEL-259
 Thermal protectorHA-70
 ThermostatLC-13, 31
 Three way catalystEC-385, 1036, 1706
 Three way catalyst precautionsGI-6
 Throttle position sensor
 (TPS).....EC-201, 875, 1540
 Throttle position sensor
 adjustmentEC-131, 802, 1470
 Throttle position switchAT-198, 266, 358,
 423, EC-464, 1117, 1785
 Throwout bearing - See Clutch release
 bearing.....CL-14
 Tie-rodST-19
 Tie-rod ball jointsST-19
 Tightening torque of standard boltsGI-50
 Time control systemEL-298
 Timing chainEM-20, 93
 Tire rotationMA-37
 Tire sizeGI-45
 TLID - Wiring diagram.....EL-171
 Torque converter installationAT-437
 Tow truck towingGI-49
 TP/SW - Wiring diagram.....EC-466, 1119, 1787
 TPS - Wiring diagram.....EC-206, 880, 1545
 Transmission case (M/T)MT-17
 Tread-FR&RR (Dimensions)GI-45
 TrimBT-25
 Trouble diagnosesGI-35
 Trunk lid.....BT-16
 Trunk lid finisher.....BT-30
 Trunk lid opener - See Trunk lidBT-16
 Trunk lid opener, electric.....EL-171
 Trunk lid trimBT-30
 Trunk room lampEL-64
 Trunk room trim.....BT-30
 TURN - Wiring diagram.....EL-58
 Turn signal lamp.....EL-56
 Two trip detection logicEC-85, 758, 1426
 Two-pole lift.....GI-48

U

Under body.....BT-55

V

Vacuum cut valve bypass valveEC-641, 647,
 1304, 1310, 1891, 1897
 Vacuum hose (brake system).....BR-19
 Vacuum hose drawing (Engine
 control)EC-43, 1384
 Valve clearanceEM-45
 Valve guideEM-37, 112
 Valve lifter.....EM-40
 Valve seat.....EM-38, 114
 Valve spring.....EM-40, 116
 Vehicle identification numberGI-43
 Vehicle recovery (freeing a stuck
 vehicle)GI-49
 Vehicle speed sensor
 (VSS).....EC-451, 1104, 1772
 Vent mode switchHA-16
 VENT/V - Wiring diagram.....EC-411, 611, 632,
 1063, 1274, 1295, 1733, 1861, 1882
 Viscosity number (SAE)MA-14
 Viscous coupling (FF A/T)AT-515
 Viscous coupling (FF M/T).....MT-11
 VSS - Wiring diagram.....EC-453, 1106, 1774

W

WARN - Wiring diagram.....EL-107
 Warning chime.....EL-115
 Warning lampsEL-105
 Washer, front.....EL-137
 Water pumpLC-12, 30
 Water temperature gaugeEL-85
 Weatherstrip - See Exterior.....BT-31
 Wheel alignment (front)SU-6
 Wheel alignment (rear)SU-17
 Wheel balance.....MA-37
 Wheel bearing (front)AX-4
 Wheel bearing (rear).....AX-22
 Wheel hub (front)AX-5
 Wheel hub (rear).....AX-23
 Wheel sensors (ABS)BR-60, 79
 Wheel sizeGI-45
 Wheelarch height.....SU-6
 Wheelbase (Dimensions).....GI-45
 Wide open & closed throttle position
 switchEC-201, 875, 1540
 Width (Dimensions).....GI-45
 Window, rearBT-46
 Windshield.....BT-46
 Windshield washer - See Front
 washerEL-137
 Windshield wiper - See Front wiper.....EL-137
 WIPER - Wiring diagram.....EL-139
 Wiper and washerEL-137
 Wiper, front.....EL-137

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Wiring Diagram (Cell code) listEL-349
Wiring diagramsGI-11
Withdrawal lever (clutch).....CL-14
Wrist pin - See Piston pin
inspection.....EM-55, 132

X
