

SECTION **RSU**
 REAR SUSPENSION

A
 B
 C
 D

RSU

CONTENTS

SERVICE INFORMATION	2	Wheel Alignment Inspection	5	F
PRECAUTIONS	2	Component	7	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	SHOCK ABSORBER	8	G
PREPARATION	3	Removal and Installation	8	
Commercial Service Tool	3	COIL SPRING	9	H
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	4	Removal and Installation	9	
NVH Troubleshooting Chart	4	REAR SUSPENSION BEAM	11	I
REAR SUSPENSION ASSEMBLY	5	Removal and Installation	11	
On-Vehicle Inspection and Service	5	SERVICE DATA AND SPECIFICATIONS (SDS)	12	J
		Wheel Alignment (Unladen*)	12	
		Wheelarch Height (Unladen*)	12	K
				L
				M
				N
				O
				P

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000002927193

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.


PREPARATION

< SERVICE INFORMATION >

PREPARATION

Commercial Service Tool

INFOID:000000001851254

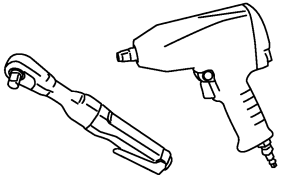Tool name	Description
Power tool  PBIC0190E	Removing wheel nuts

A

B

C

D

RSU

F

G

H

I

J

K

L

M

N

O

P

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SERVICE INFORMATION >

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000001851255

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		RSU-7	RSU-8	RSU-8	RSU-8	RSU-9	RSU-7	RSU-5	RAX-3	WT-4	WT-4	BR-4	PS-6
Possible cause and SUSPECTED PARTS		Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting deterioration	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	REAR AXLE	TIRES	ROAD WHEEL	BRAKES	STEERING
Symptom	Noise	x	x	x	x	x	x		x	x	x	x	x
	Shake	x	x	x	x		x		x	x	x	x	x
	Vibration	x	x	x	x	x			x	x			x
	Shimmy	x	x	x	x			x	x	x	x	x	x
	Shudder	x	x	x					x	x	x	x	x
	Poor quality ride or handling	x	x	x	x	x		x	x	x	x		

x: Applicable

REAR SUSPENSION ASSEMBLY

< SERVICE INFORMATION >

REAR SUSPENSION ASSEMBLY

On-Vehicle Inspection and Service

INFOID:000000001851256

Make sure the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are within specifications.

SHOCK ABSORBER INSPECTION

Check shock absorber for oil leakage, damage and replace it if necessary.

Wheel Alignment Inspection

INFOID:000000001851257

DESCRIPTION

Measure wheel alignment under unladen conditions.

NOTE:

"Unladen conditions" means that fuel, engine coolant, and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

PRELIMINARY

Check the following:

1. Tires for improper air pressure and wear.
2. Road wheels for runout. Refer to [WT-5](#).
3. Wheel bearing axial end play. Refer to [RAX-4, "On-Vehicle Inspection and Service"](#).
4. Shock absorber operation.
5. Each mounting part of suspension for looseness and deformation.
6. Rear suspension beam for cracks, deformation, and other damage.
7. Vehicle height (posture).

GENERAL INFORMATION AND RECOMMENDATIONS

1. A Four-Wheel Thrust Alignment should be performed.
 - This type of alignment is recommended for any NISSAN vehicle.
 - The four-wheel "thrust" process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
 - The alignment machine itself should be capable of accepting any NISSAN vehicle.
 - The alignment machine should be checked to ensure that it is level.
2. Make sure the alignment machine is properly calibrated.
 - Your alignment machine should be regularly calibrated in order to give correct information.
 - Check with the manufacturer of your specific alignment machine for their recommended Service/Calibration Schedule.

THE ALIGNMENT PROCESS

IMPORTANT: Use only the alignment specifications listed in this Service Manual. Refer to [RSU-12, "Wheel Alignment \(Unladen*\)"](#).

1. When displaying the alignment settings, many alignment machines use "indicators": (Green/red, plus or minus, Go/No Go). **Do NOT use these indicators.**
 - The alignment specifications programmed into your alignment machine that operate these indicators may not be correct.
 - This may result in an ERROR.
2. Some newer alignment machines are equipped with an optional "Rolling Compensation" method to "compensate" the sensors (alignment targets or head units). **Do NOT use this "Rolling Compensation" method.**
 - Use the "Jacking Compensation" method. After installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.
 - See Instructions in the alignment machine you are using for more information.

CAMBER INSPECTION


REAR SUSPENSION ASSEMBLY

< SERVICE INFORMATION >

- Measure camber of both right and left wheels with a suitable alignment gauge.

Camber : Refer to [RSU-12, "Wheel Alignment \(Unladen*\)"](#).

- If it is out of the specification value, inspect and replace any damaged or worn rear suspension parts.

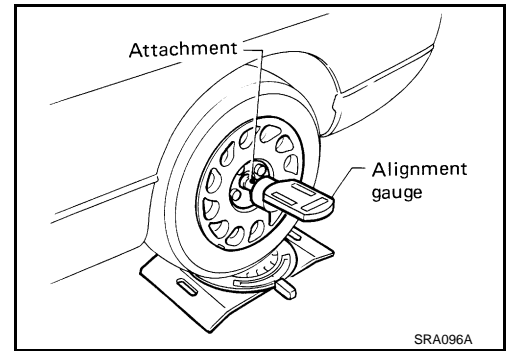


TOE-IN INSPECTION

Measure toe-in using following procedure. If it is out of the specification, inspect and replace any damaged or worn rear suspension parts.

WARNING:


- **Always perform the following procedure on a flat surface.**
- **Make sure that no person is in front of vehicle before pushing it.**

1. Bounce the rear of vehicle up and down to stabilize the vehicle height (posture).
2. Push vehicle straight ahead about 5 m (16 ft).
3. Put a mark on base line of the tread (rear side) of both tires at the same height of hub center. These are measuring points.

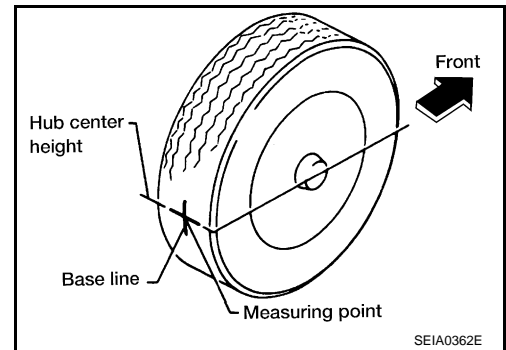

4. Measure distance "A" (rear side).
5. Push vehicle slowly ahead to rotate wheels 180 degrees (1/2 turn). If wheels have rotated more than 180 degrees (1/2 turn), try the above procedure again from the beginning. Never push vehicle backward.
6. Measure distance "B" (front side).

Total toe-in : Refer to [RSU-12, "Wheel Alignment \(Unladen*\)"](#) .

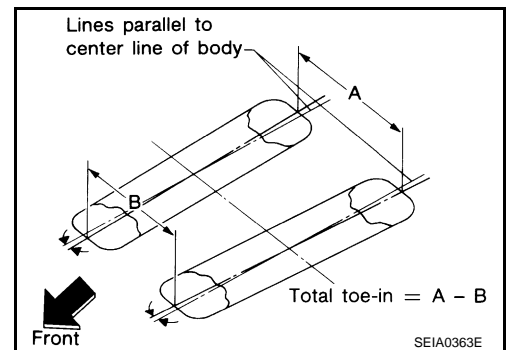


REAR SUSPENSION ASSEMBLY

< SERVICE INFORMATION >

Component

INFOID:000000001851258

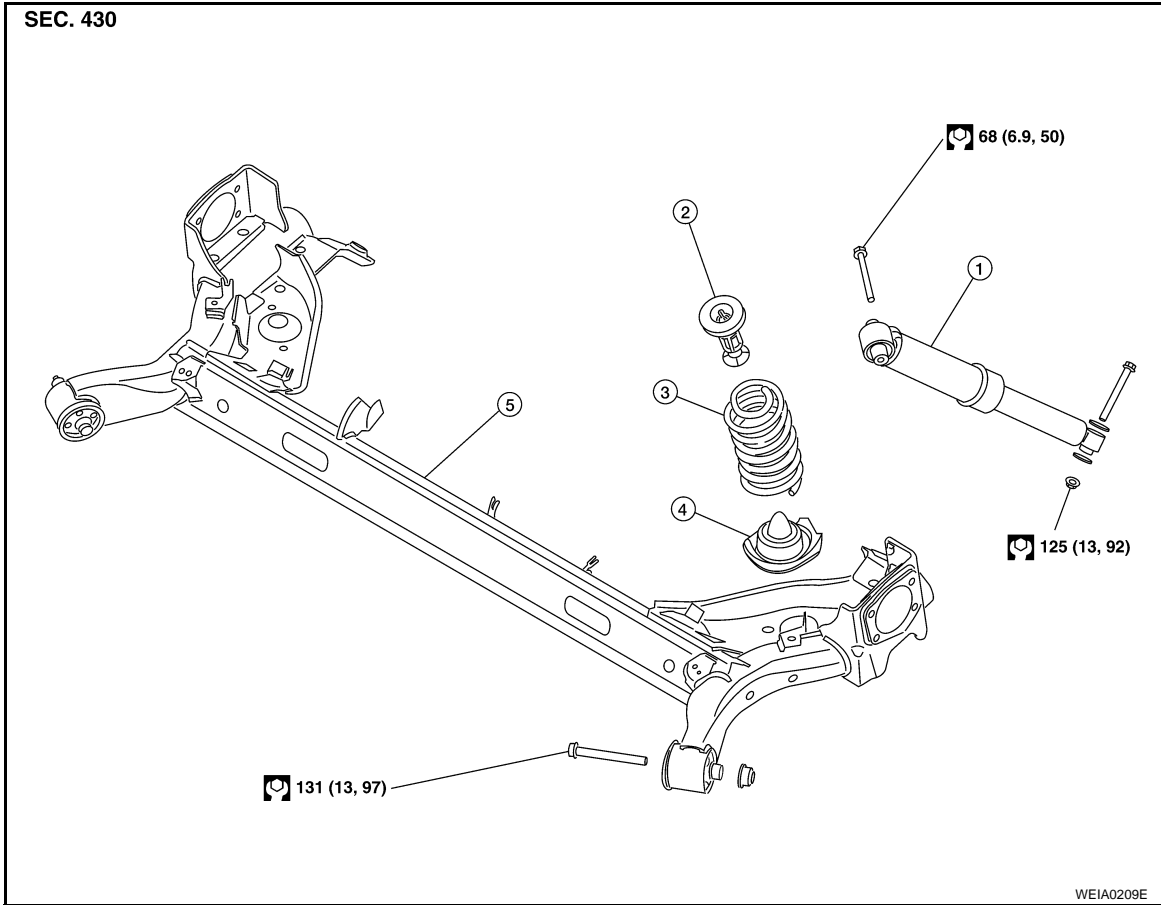

- 1. Shock absorber
- 2. Bound bumper
- 3. Coil spring
- 4. Rear spring lower rubber seat
- 5. Rear suspension beam

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

RSU

SHOCK ABSORBER

< SERVICE INFORMATION >


SHOCK ABSORBER

Removal and Installation


INFOID:000000001851259

REMOVAL

1. Set jack under rear suspension beam.
2. Remove upper shock absorber bolt (A).

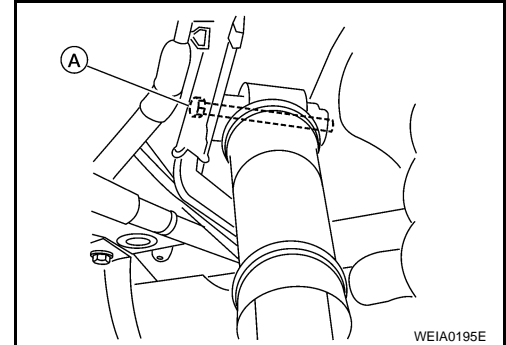

3. Remove shock absorber lower bolt (A).
4. Remove the shock absorber from vehicle.

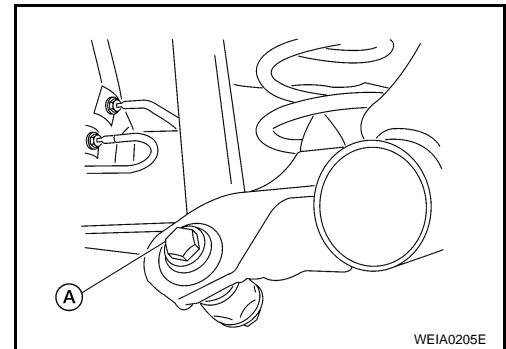

INSPECTION AFTER REMOVAL

Shock Absorber

Check the following:

- Shock absorber for deformation, cracks or damage, and replace if necessary.
- Piston rod for damage, uneven wear or distortion, and replace if necessary.

INSTALLATION

Installation is in the reverse order of removal. For tightening specifications, refer to [RSU-7, "Component"](#).

COIL SPRING

< SERVICE INFORMATION >


COIL SPRING

Removal and Installation

INFOID:000000001851260

REMOVAL

1. Set jack under rear suspension beam.
2. Remove both shock absorber lower bolts (A).
3. Gradually lower the jack, and then remove coil spring, bound bumper and rear spring rubber seat.

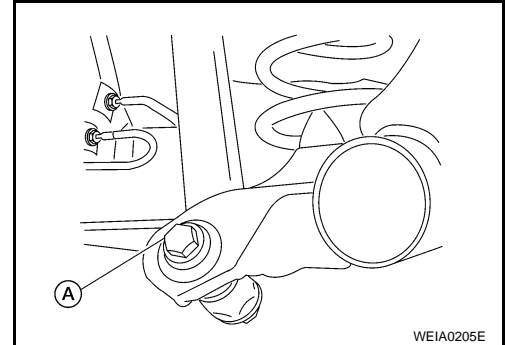


INSPECTION AFTER REMOVAL

Check coil spring and spring rubber seat for deformation, cracks, and damage, and replace it if a malfunction is detected.

INSTALLATION

Installation is in the reverse order of removal. For tightening specifications, refer to [RSU-7. "Component"](#).

- When installing rear spring rubber seat, be sure that the flat areas (A) are aligned.

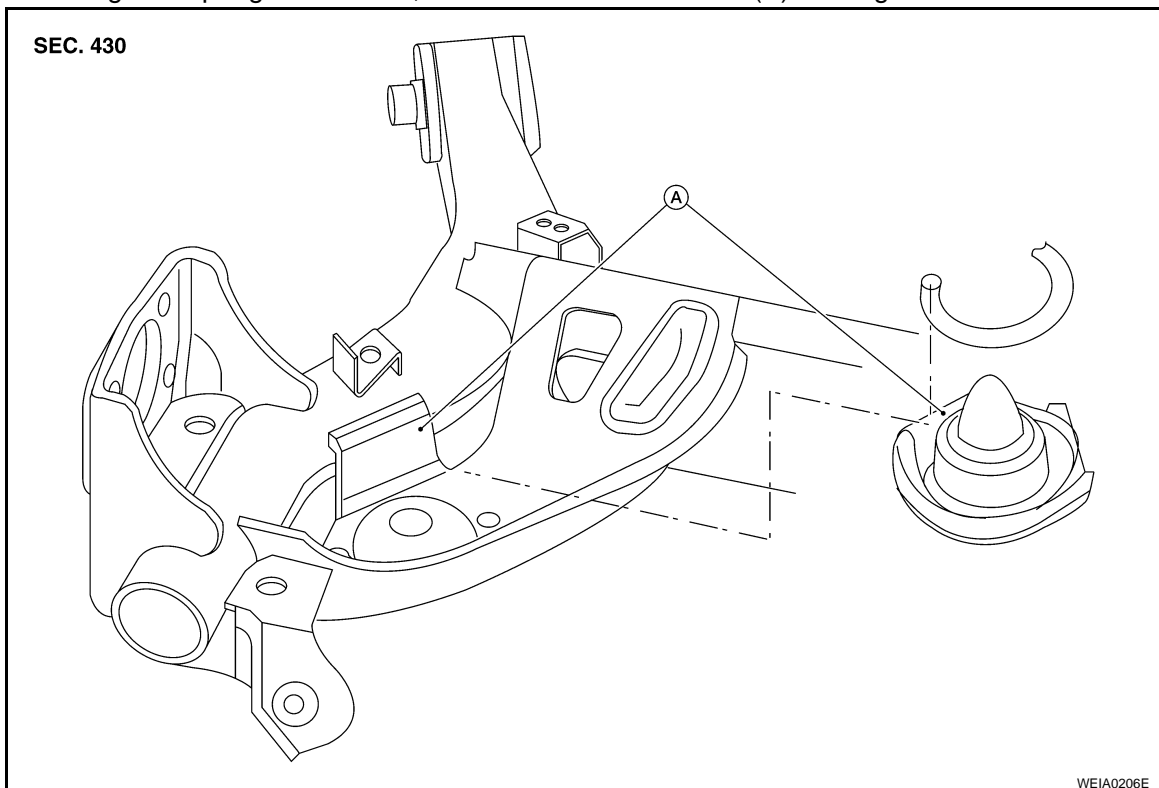


A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P

COIL SPRING

< SERVICE INFORMATION >

- When installing rear spring, be sure that the gap is less than 5mm.

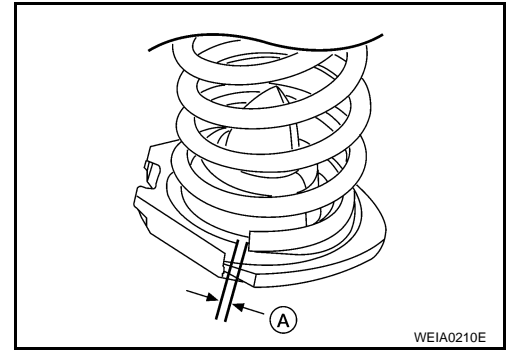

REAR SUSPENSION BEAM

< SERVICE INFORMATION >


REAR SUSPENSION BEAM

Removal and Installation


INFOID:000000001851261

REMOVAL

1. Remove rear tires from vehicle using power tool.
2. Remove rear drum and brake assembly. Refer to [BR-34, "Removal and Installation of Drum Brake Assembly"](#).
3. Separate parking brake rear cable from rear drum brake and rear suspension beam. Refer to [PB-4](#).
4. Remove wheel sensor and wheel sensor harness from wheel hub and bearing assembly and rear suspension beam, if equipped. Refer to [BRC-31](#).
5. Remove rear brake tube and brake hose from the wheel cylinder. Refer to [BR-11, "Rear Brake Tube and Hose"](#).
6. Remove wheel hub and bearing assembly and back plate. Refer to [RAX-4](#).
7. Set jack under rear suspension beam.
8. Remove both shock absorber lower bolts (A). Refer to [RSU-8, "Removal and Installation"](#).

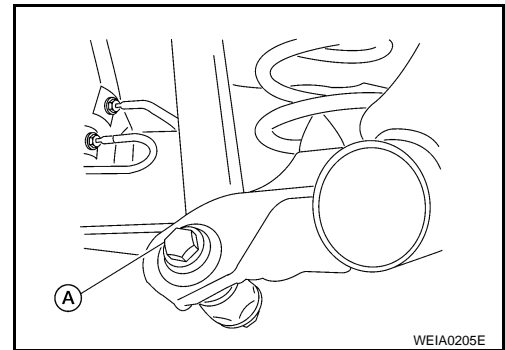

9. Remove coil springs (left/right). Refer to [RSU-9, "Removal and Installation"](#).
10. Remove brake line retaining clip and disconnect the brake line from the rear suspension beam bracket.
11. Remove center exhaust pipe assembly and insulator. Refer to [EX-3, "Removal and Installation"](#).
12. Remove rear suspension beam bolt and nut. Refer to [RSU-7, "Component"](#).
13. Gradually lower the jack to remove rear suspension beam from vehicle.

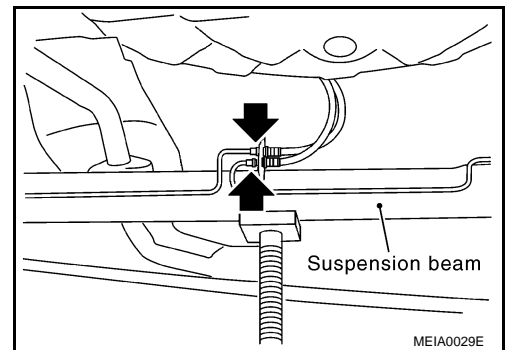


INSPECTION AFTER REMOVAL

Check components for deformation, cracks, and other damage, and replace if necessary.

INSTALLATION

Installation is in the reverse order of removal. For tightening torque, refer to [RSU-7, "Component"](#).

- Perform final tightening of rear suspension beam (A) under unladen conditions with tires on level ground.
- Refill with new brake fluid and bleed air. Refer to [BR-8, "Bleeding Brake System"](#).
- Check the following after finishing work.
 - Parking brake operation (stroke): Refer to [PB-4, "On-Vehicle Service"](#).
 - Wheel sensor harness for proper connection: Refer to [BRC-31](#)

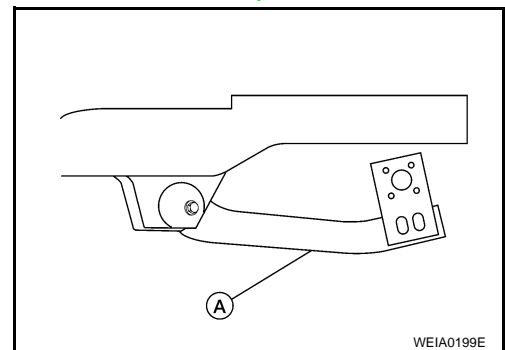

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Alignment (Unladen*)


INFOID:000000001851262

Model		2.0, 2.0 S, 2.0 SL	SE-R	SPEC-V
Camber Degree minute (Decimal degree)	Minimum	- 2° 00' (- 2.00°)	- 2° 00' (- 2.00°)	- 2° 00' (- 2.00°)
	Nominal	- 1° 30' (- 1.50°)	- 1° 30' (- 1.50°)	- 1° 30' (- 1.50°)
	Maximum	- 1° 00' (- 1.00°)	- 1° 00' (- 1.00°)	- 1° 00' (- 1.00°)
Total toe-in Distance (A - B)	Minimum	- 3.0 mm (- 0.118 in)	- 2.0 mm (- 0.079 in)	- 1.0 mm (- 0.039 in)
	Nominal	1.0 mm (0.039 in)	2.0 mm (0.079 in)	3.0 mm (0.118 in)
	Maximum	5.0 mm (0.197 in)	4.0 mm (0.157 in)	7.0 mm (0.276 in)

*: Fuel, engine coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

Wheelarch Height (Unladen*)

INFOID:000000001851263

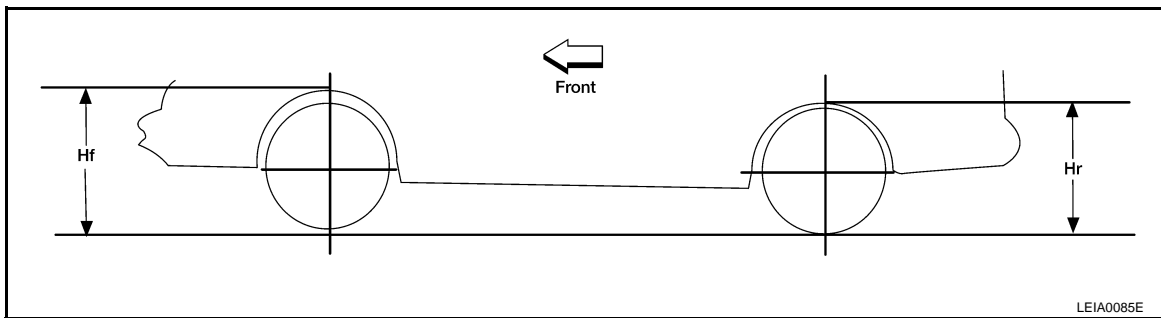

Engine	MR20DE		QR25DE	
Model	2.0	2.0 S, 2.0 SL	SE-R	SPEC-V
Tire Size	P205/60HR15	P205/55HR16	P225/45VR17	P225/45WR17
Front (Hf) mm (in)	691 (27.20)	694 (27.32)	690 (27.17)	679 (26.73)
Rear (Hr) mm (in)	693 (27.28)	696 (27.40)	690 (27.17)	677 (26.65)

*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.